
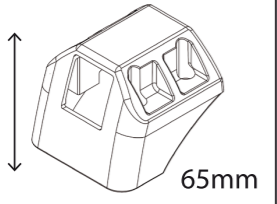


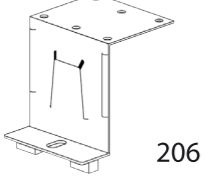



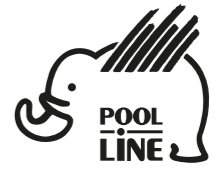


N		Q
1		6
2		6
3		1

N	BO0055	Q
7	 DIN6923 M6	24
8	 DIN912 M6x20	24
9	 DIN125 Ø6	24


N	BO0006 x3	Q
10	 DIN912 M6x16	6
11	 DIN9021 Ø6	6

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti






POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042





121891
Rv: 06/2015

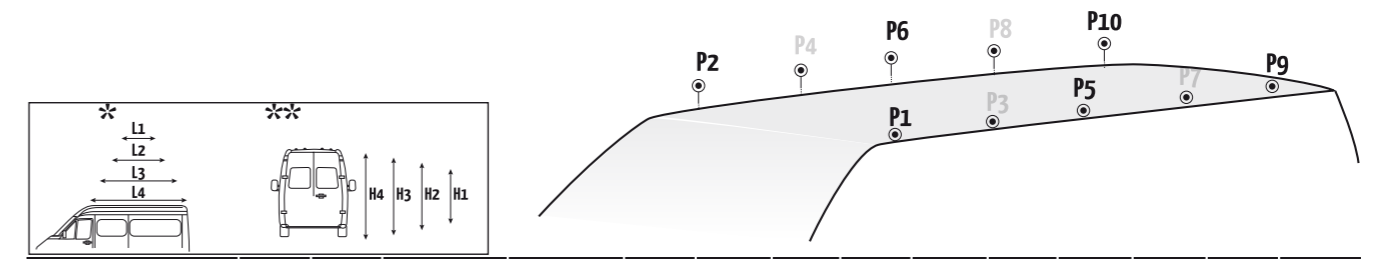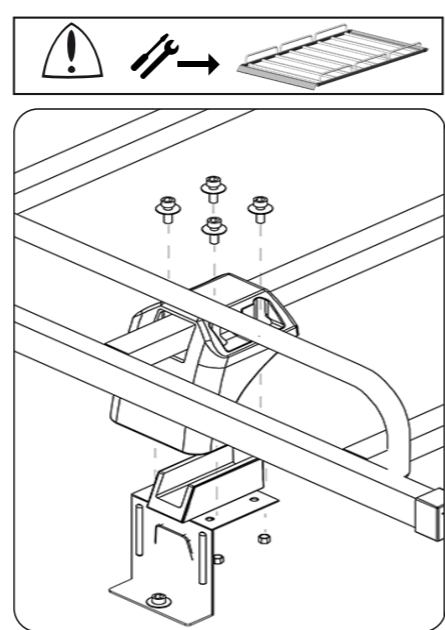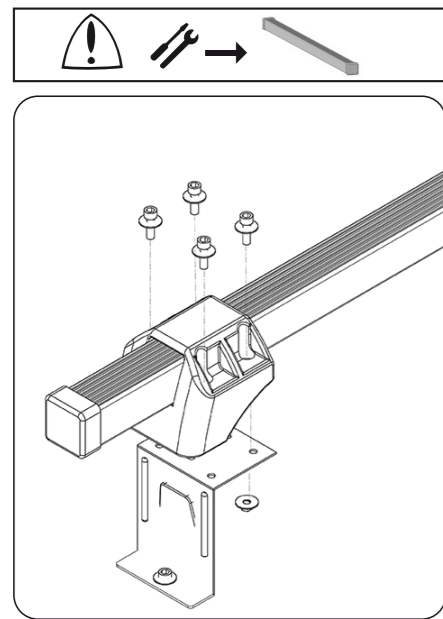

	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10
CITROËN Jumpy I	L1	H1	95 - 06	B00006	206	206			206	206			206	206
FIAT Scudo I	L1	H1	95 - 06	B00006	206	206			206	206			206	206
PEUGEOT Expert I	L1	H1	95 - 06	B00006	206	206			206	206			206	206



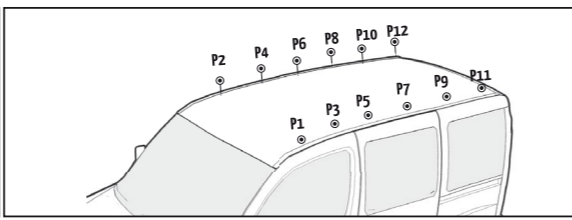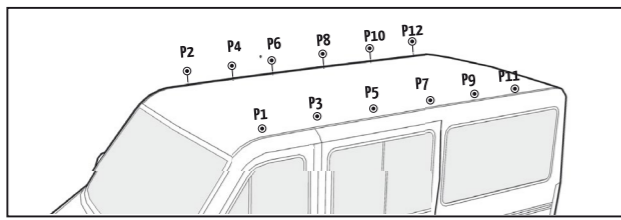

P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
xxx	xxx			xxx	xxx					xxx	xxx
xxx											
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx

Pag. 1

🕒	🕒	P1	P1
0X	B0000XX		
0X	B0000XX		
	B0000X		

Pag. 1

C

5 Nm

D

5 Nm