

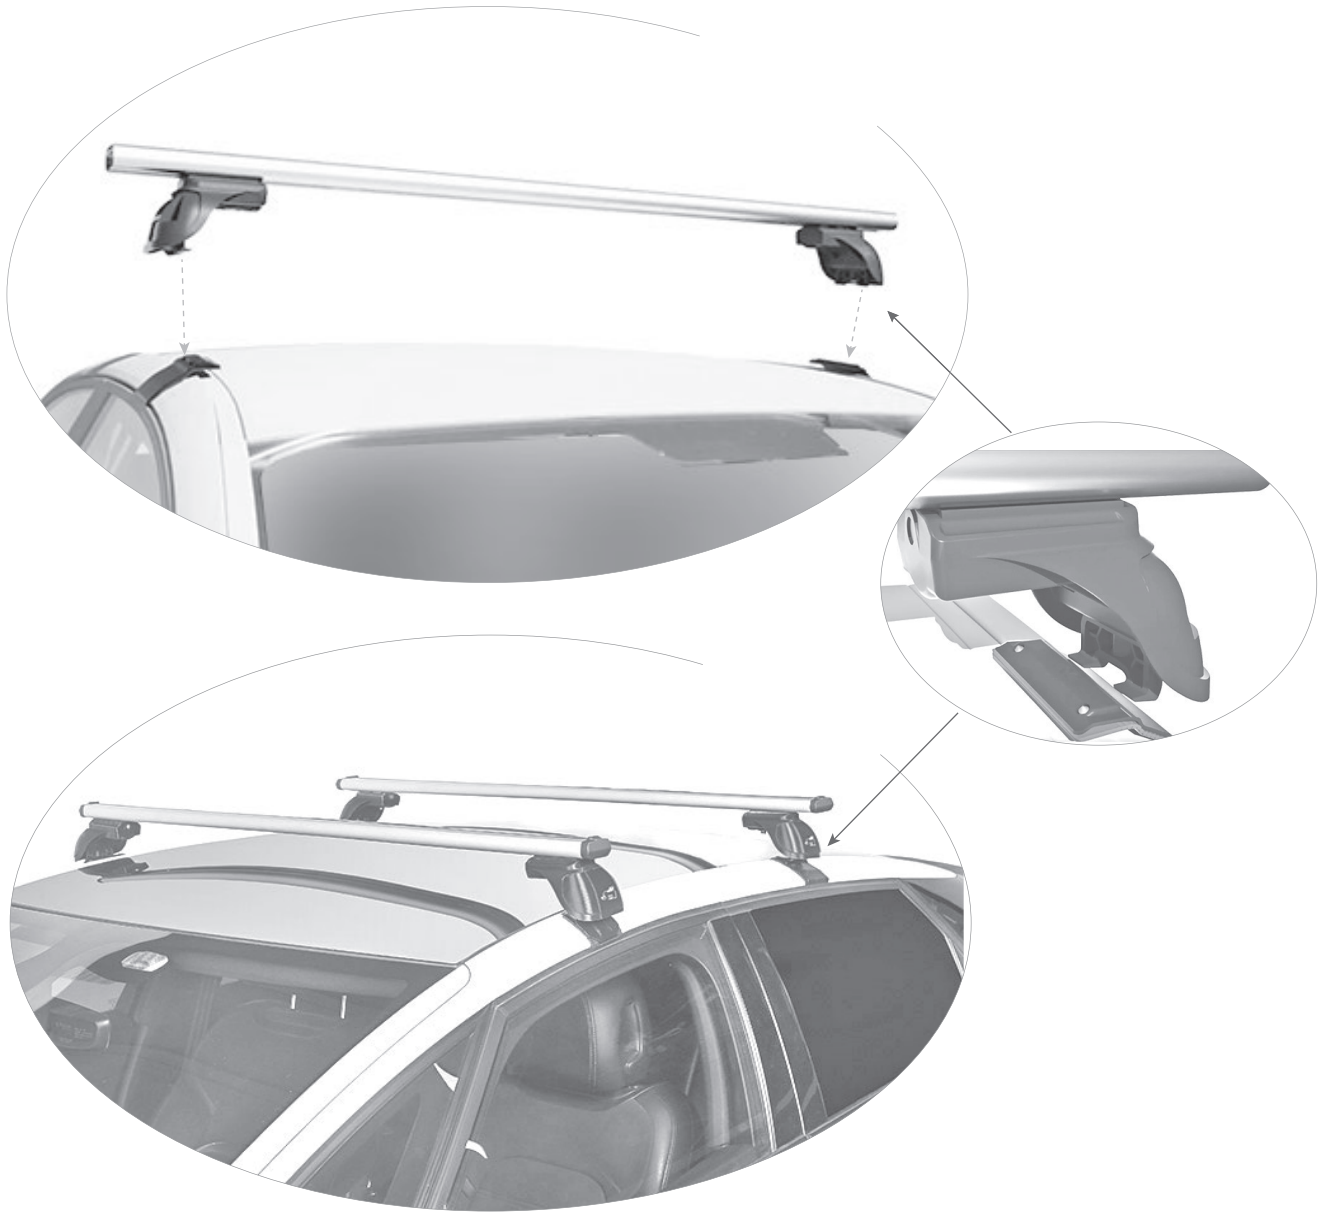


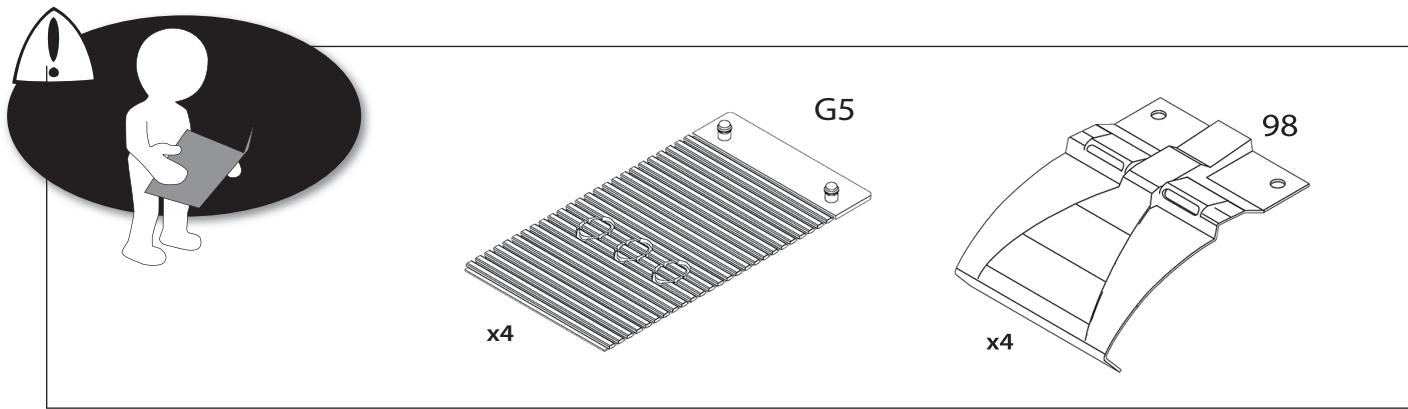


- | | | |
|-----------|--------------------------|------------------|
| E | Instrucciones de montaje | Kit de fijación |
| C | Instruccions de muntatge | Kit de fixació |
| GB | Assembly instructions | Fixation Kit |
| F | Instruction de montage | Kit fixation |
| D | Montageanleitung | Stützfuß-Kit |
| PT | Instruções de montagem | Kit fixação |
| I | Istruzioni di montaggio | Kit di fissaggio |
| PL | Instrukcja montażu | Element mocujący |
| CZ | Montážní návod | Fixační kit |
| HU | Szerelési Utasítás | Rögzítő készlet |
| RO | Instrucțiuni de montaj | Kit de fixare |
| HR | Detaljne upute | Kit za montažu |
| TU | Öncelikli montaj | Montaj kiti |

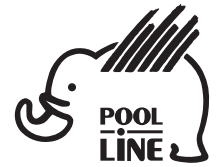



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085

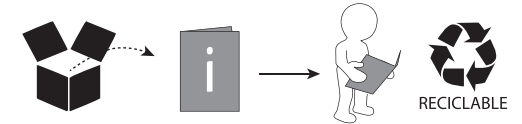


110030

Review 3/2020

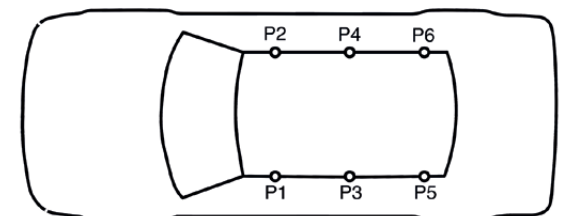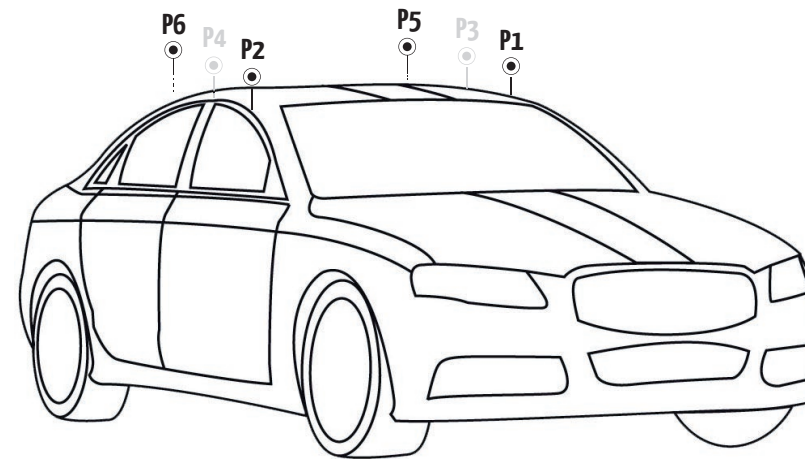

Limpeza pre-instalação
Pre-installation cleaning

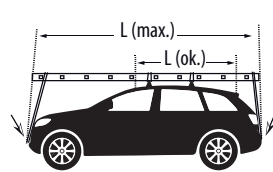


Revisar par de apriete
Check torque


			P1	P2	P5	P6
ALFA ROMEO						
Stelvio	2017->	5	98	98	98	98
CHEVROLET						
Evanda	02 - 06	4	98	98	98	98
DAEWU						
Evanda	02 - 04	4	98	98	98	98



1

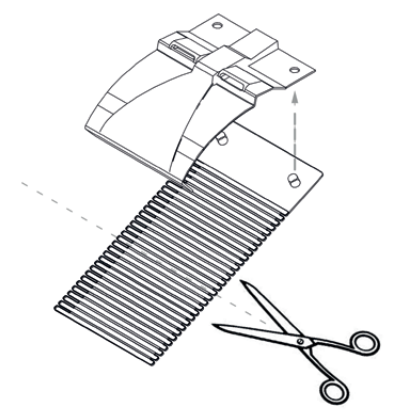

2

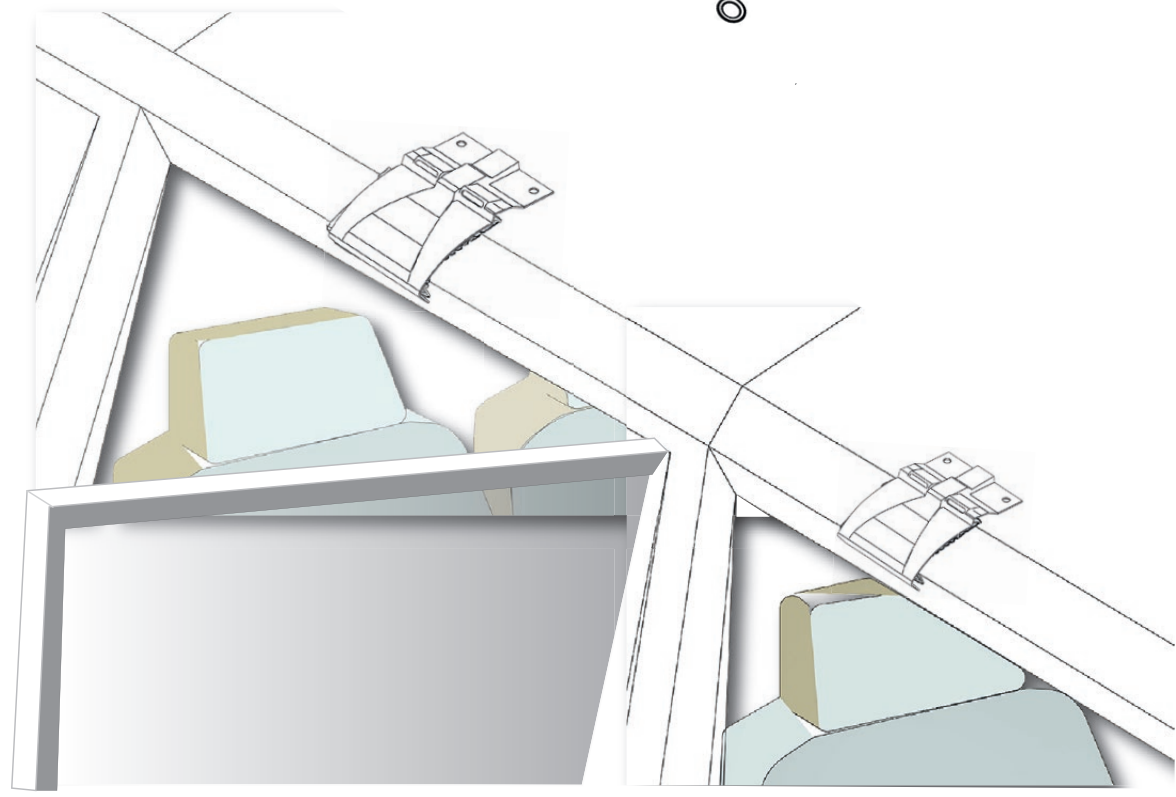


3




Alfa Romero Stelvio

Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone

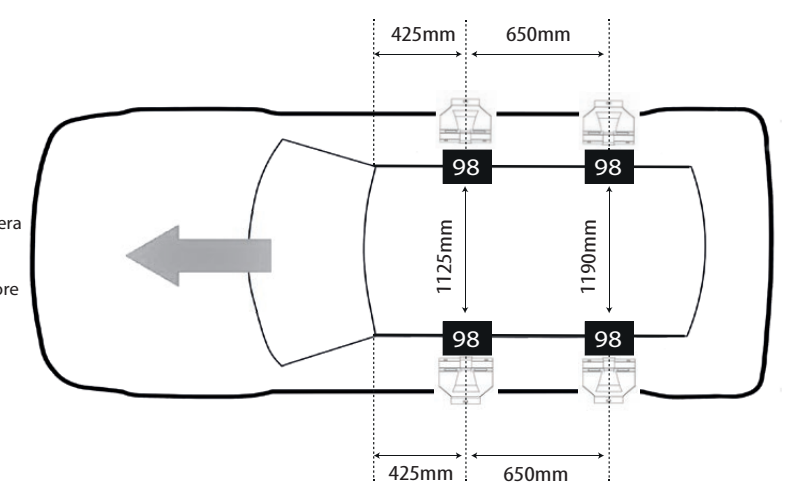

Chevrolet Evanda

Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone

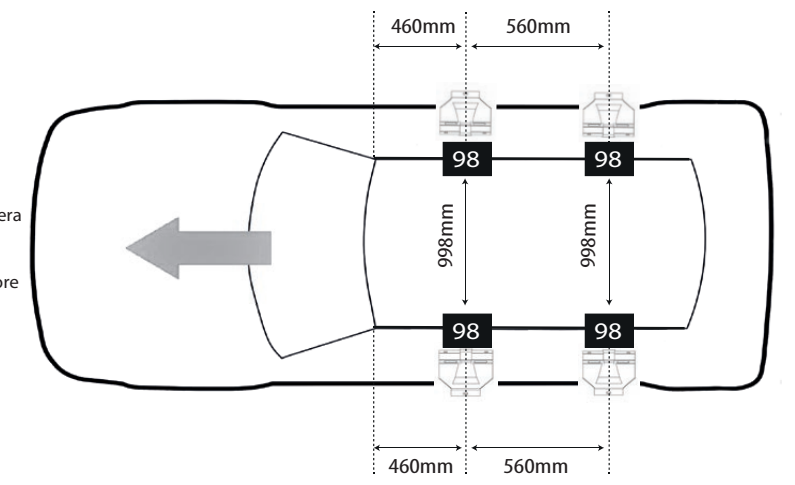

Daewo Evanda

Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone

