

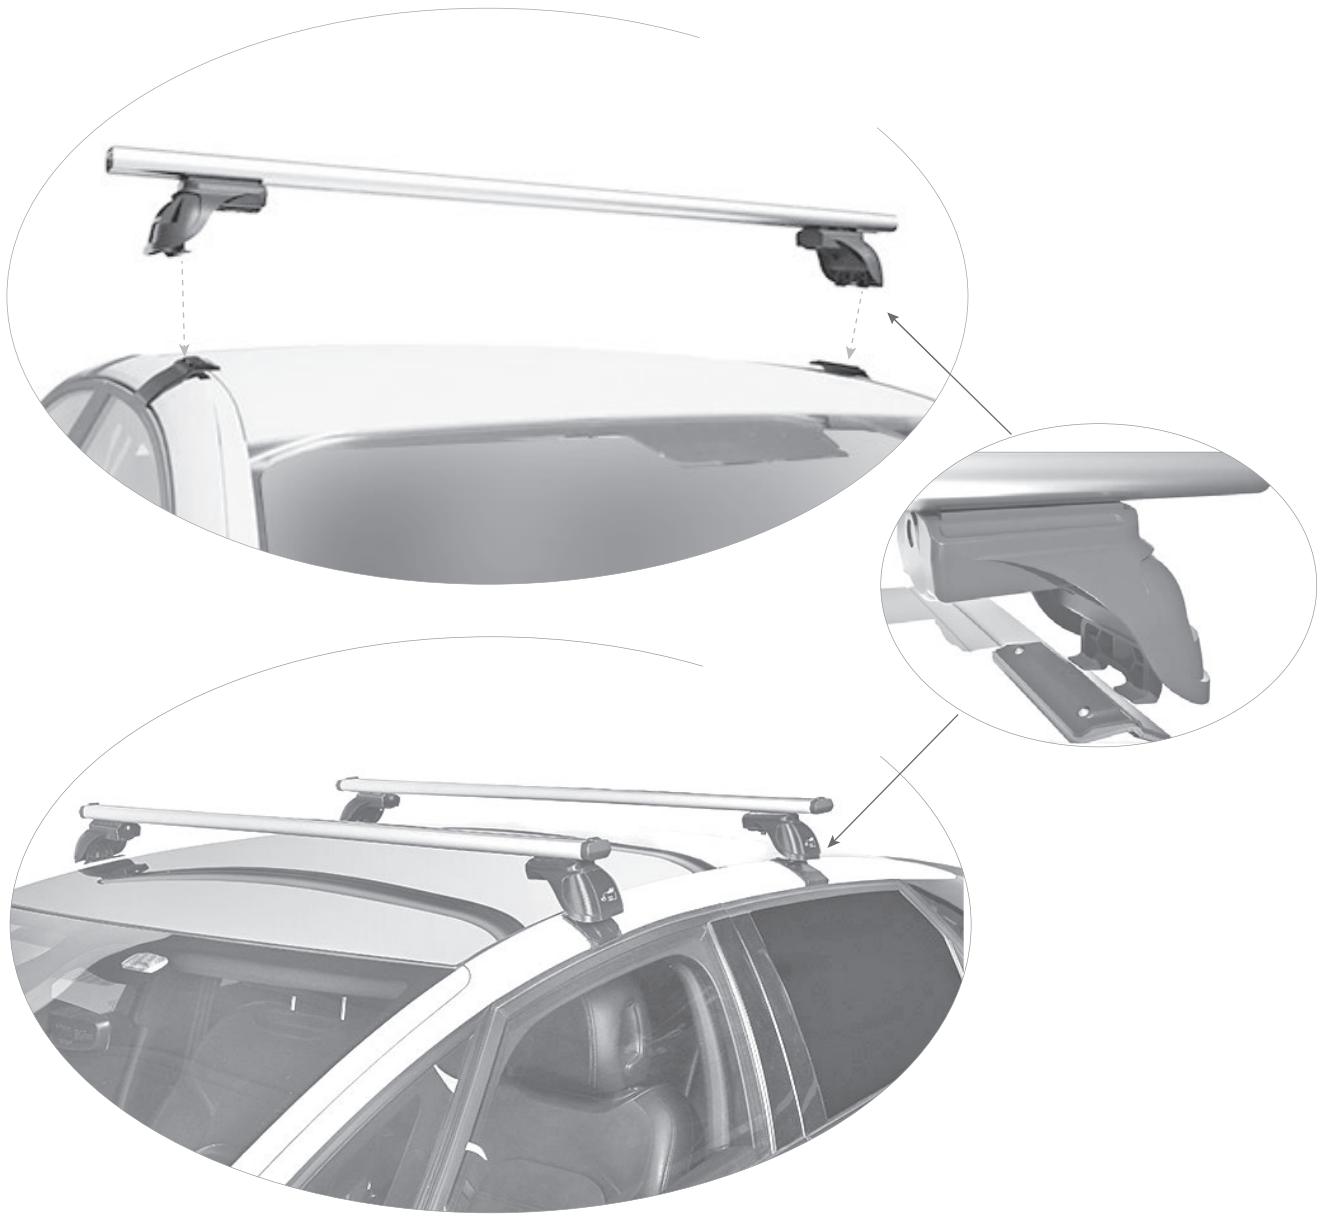
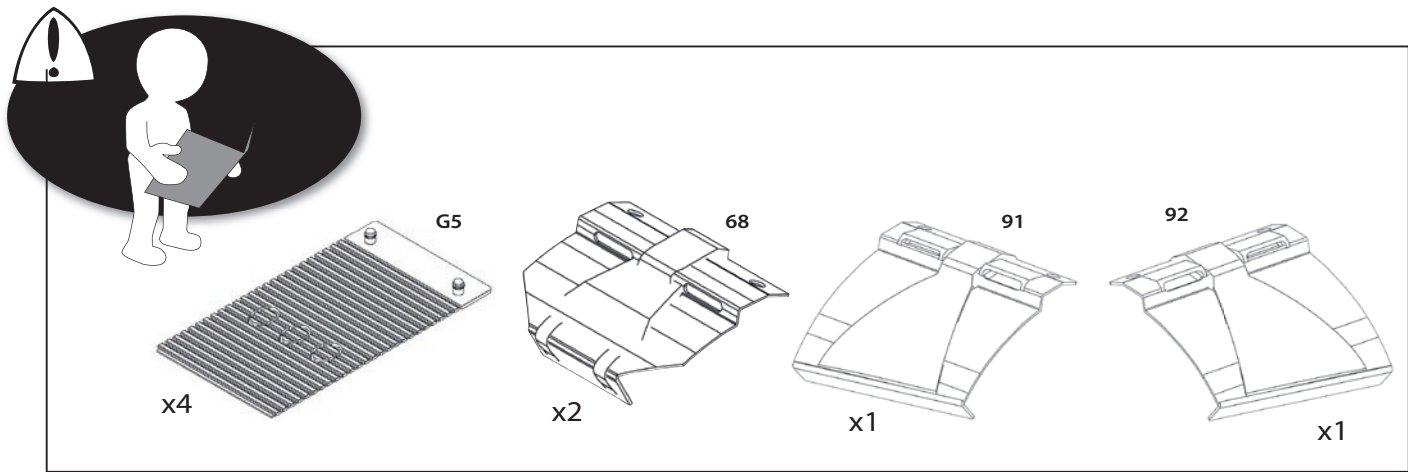


- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikli montaj Montaj kiti

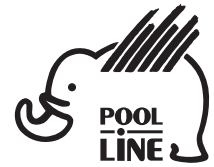


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9**I26R-03.1085

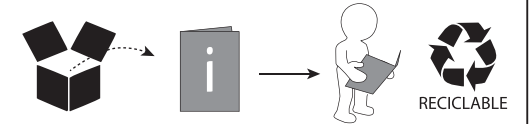

110060


Review 6/2020

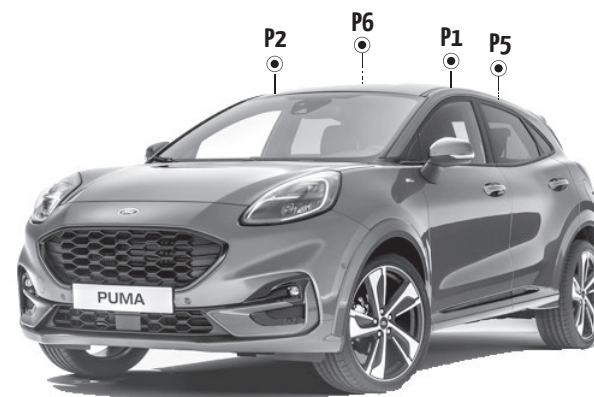


			P1	P2	P5	P6
DFSK						
Fengon F5	2020->	5	68	68	91	92
FORD						
Puma II	2020->	5	68	68	91	92
TOYOTA						
Urban Cruiser	10 - 14	5	68	68	91	92




1

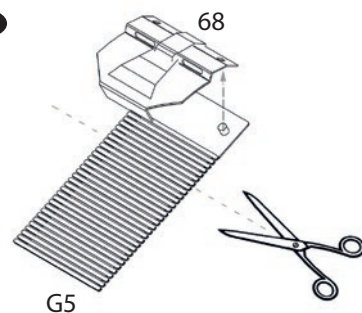


2

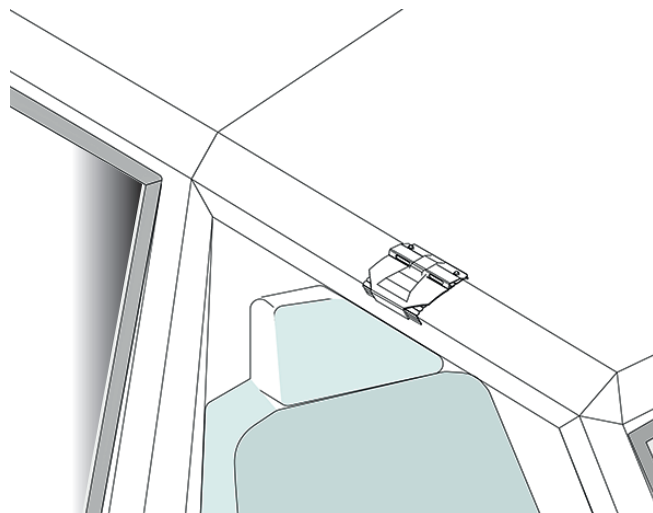

1

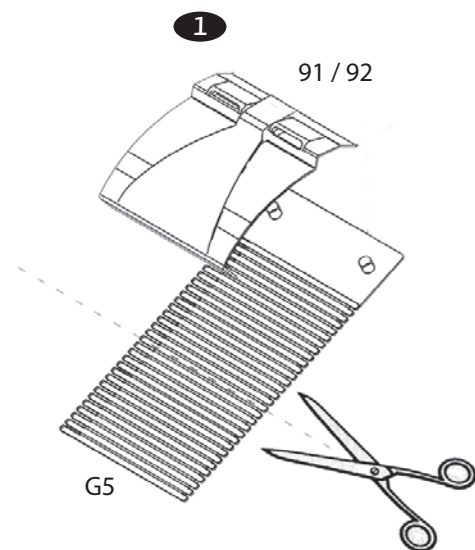


2

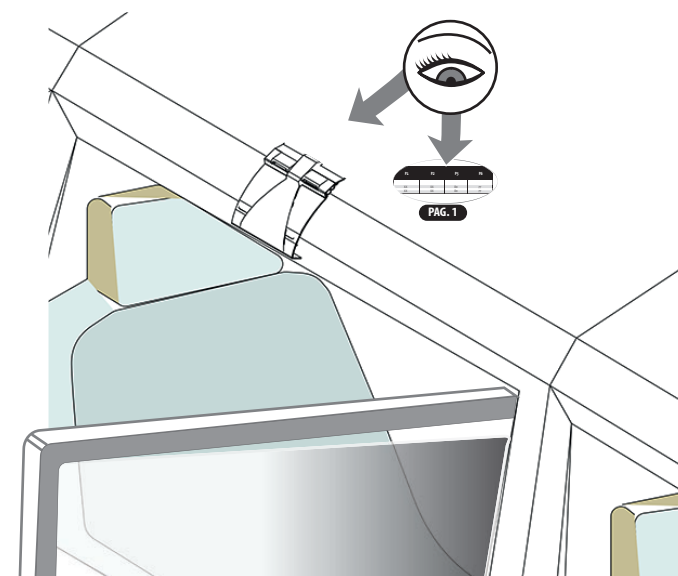

Dfsk Fengon F5




Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone

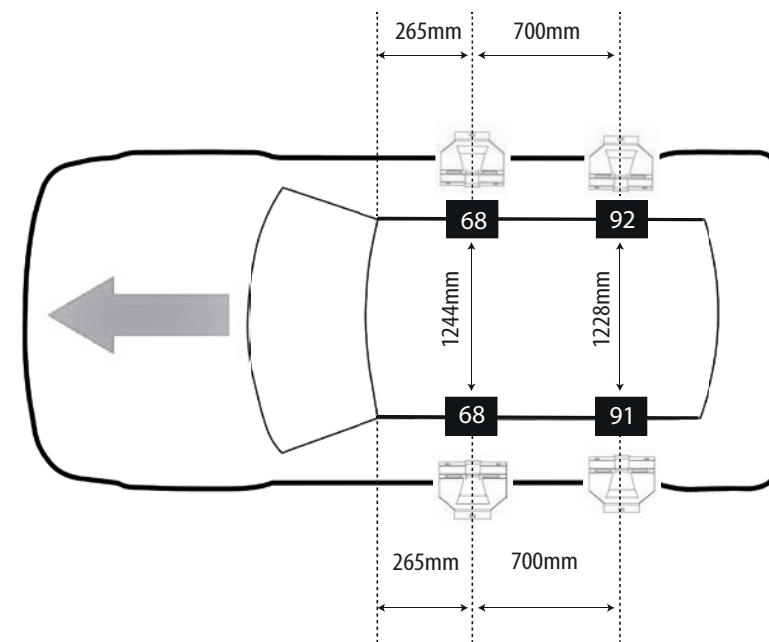

Ford Puma II



Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone

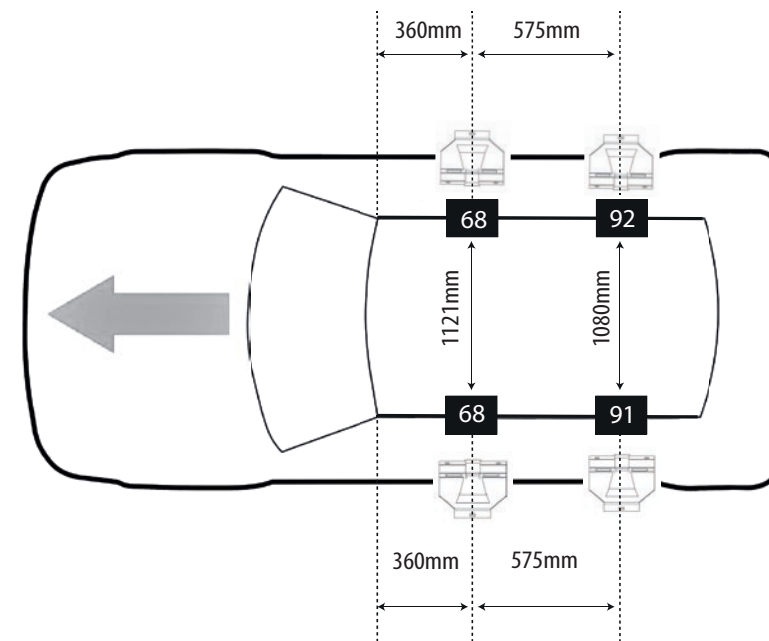

Toyota Urban Cruiser



Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone

