


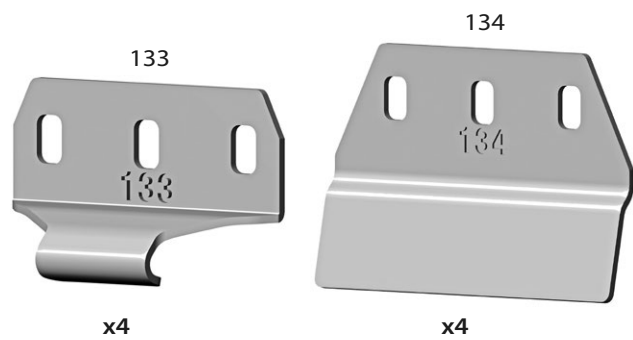
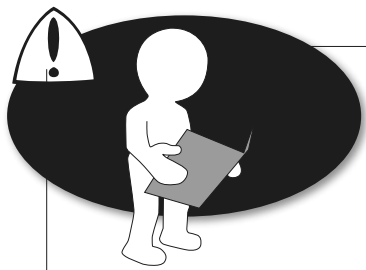


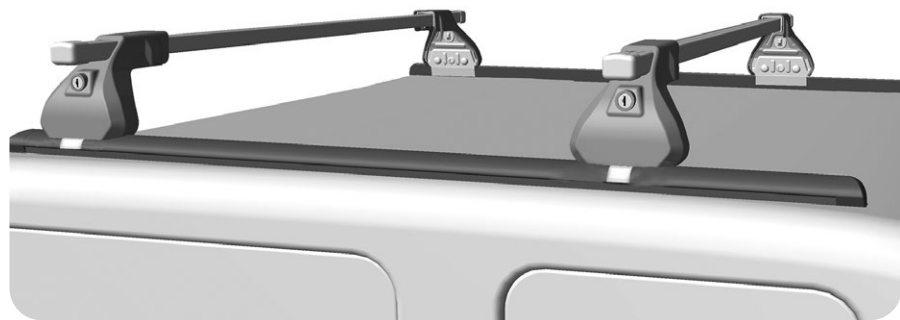


EVO

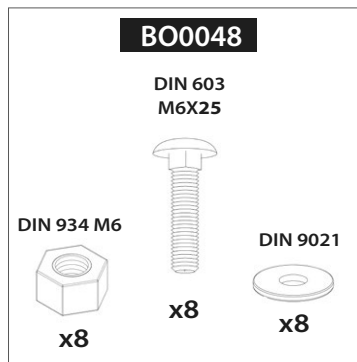

NEO

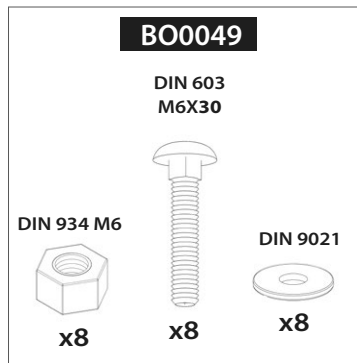


- | | | |
|----|--------------------------|------------------|
| E | Instrucciones de montaje | Kit de fijación |
| C | Instruccions de muntatge | Kit de fixació |
| GB | Assembly instructions | Fixation Kit |
| F | Instruction de montage | Kit fixation |
| D | Montageanleitung | Stützfuß-Kit |
| PT | Instruções de montagem | Kit fixação |
| I | Istruzioni di montaggio | Kit di fissaggio |
| PL | Instrukcja montażu | Element mocujący |
| CZ | Montážní návod | Fixační kit |
| HU | Szerelési Utasítás | Rögzítő készlet |
| RO | Instrucțiuni de montaj | Kit de fixare |
| HR | Detaljne upute | Kit za montažu |
| TU | Öncelikli montaj | Montaj kiti |

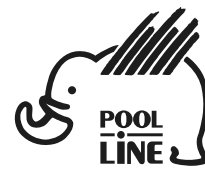

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: E9 26R-03.1085

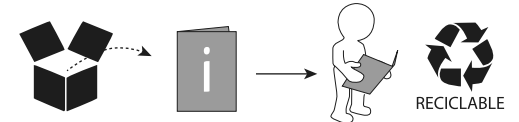

110808


Review 8/2016



Limpieza pre-instalación



Pre-installation cleaning


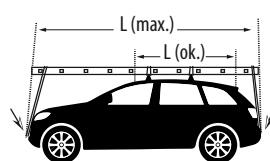


Revisar par de apriete



Check torque

			EVO	NEO	P1	P2	P5	P6
BMW								
X3 (F25)	10 -	5	B00048	B00049	133 + 134	133 + 134	133 + 134	133 + 134
X5 (F15)	13 -	5	B00048	B00049	133 + 134	133 + 134	133 + 134	133 + 134

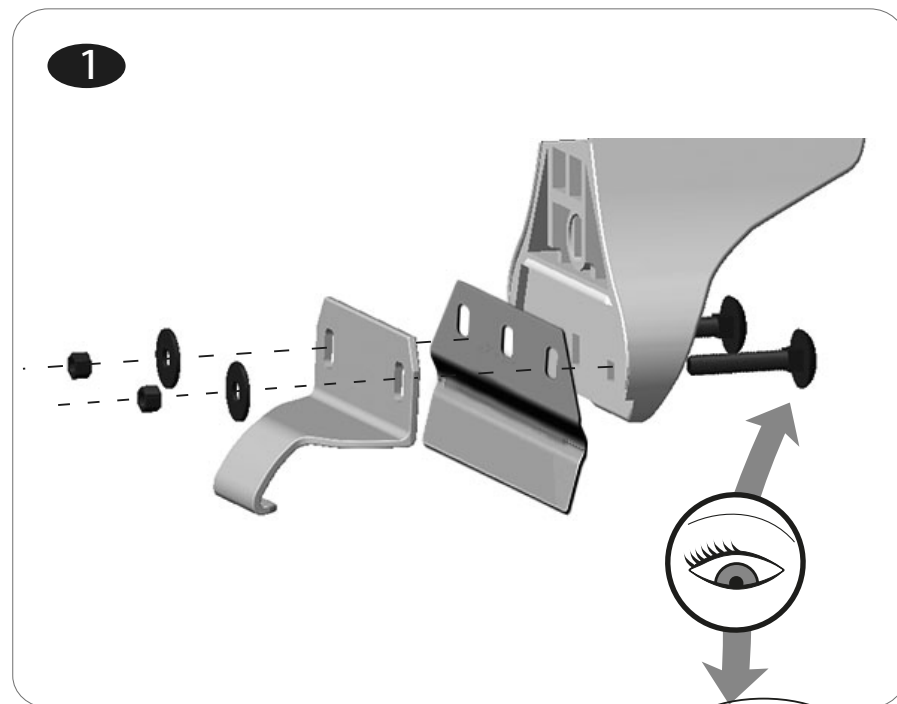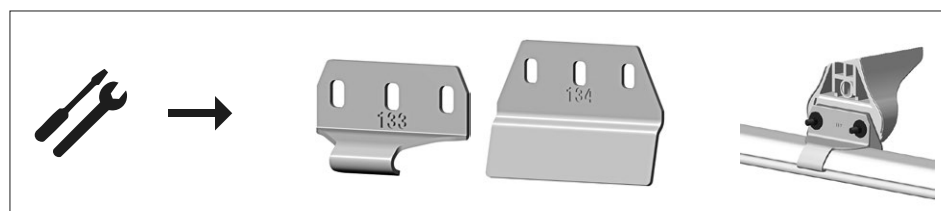

EVO	NEO
800048 - 800053	800048 - 800053

