

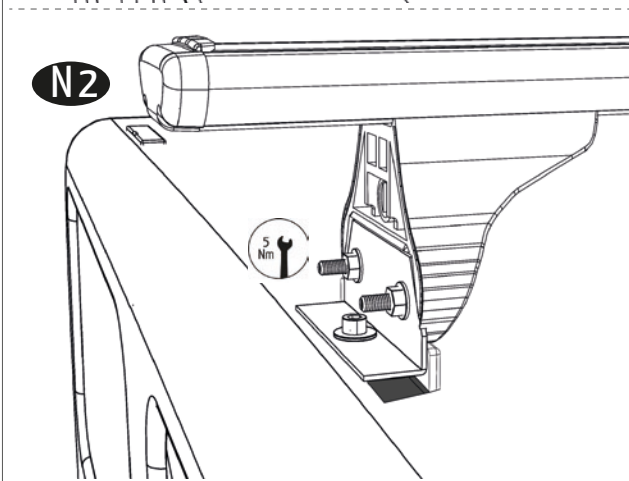
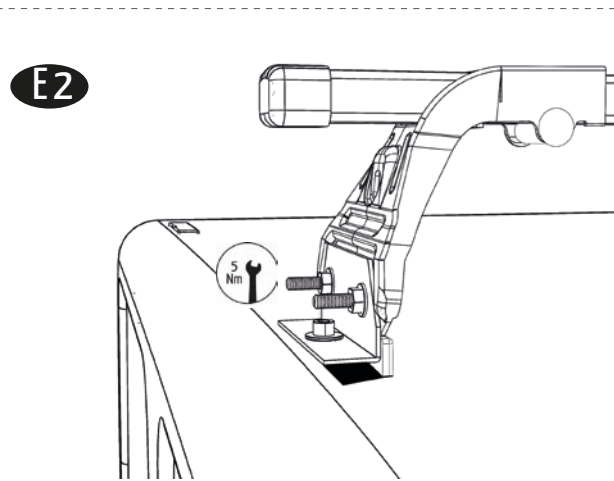
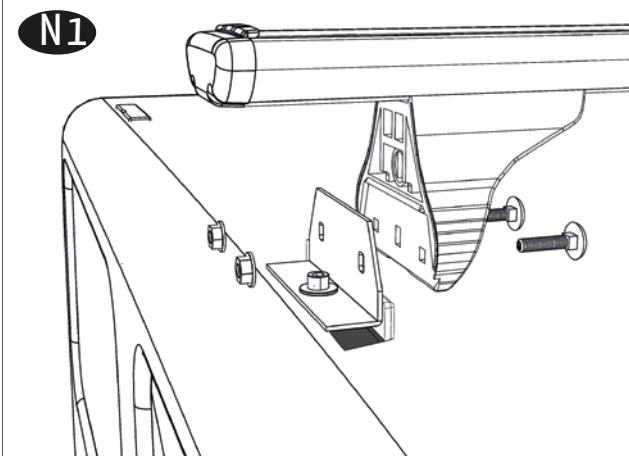



BO0048

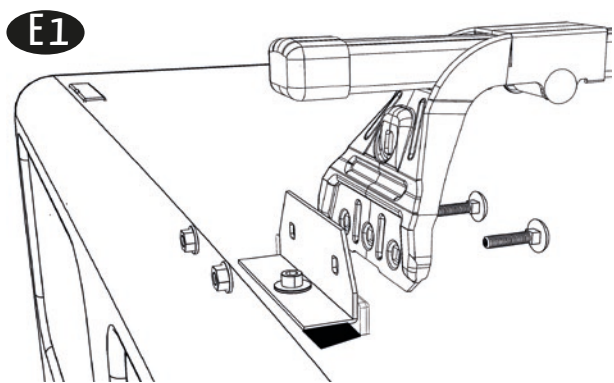

Limpieza pre-instalación

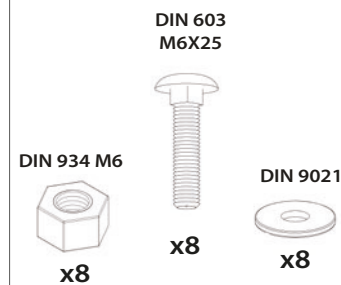

Pre-installation cleaning

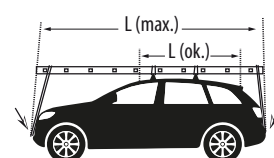

Revisar par de apriete



Check torque

E Instrucciones de montaje

Kit de fijación

C Instruccions de muntatge

Kit de fixació

GB Assembly instructions

Fixation Kit

F Instruction de montage

Kit fixation

D Montageanleitung

Stützfuß-Kit

PT Instruções de montagem

Kit fixação

I Istruzioni di montaggio

Kit di fissaggio

PL Instrukcja montażu

Element mocujący

CZ Montážní návod

Fixační kit

HU Szerelési Utasítás

Rögzítő készlet

RO Instrucțiuni de montaj


Kit de fixare

HR Detaljne upute

Kit za montažu

TU Öncelikli montaj

Montaj kiti

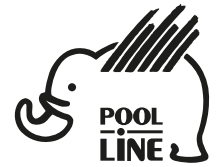

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net



Nº HOMOLOGACIÓN: E9 26R-03.1085




RECICLABLE

110451

Review 7/2016

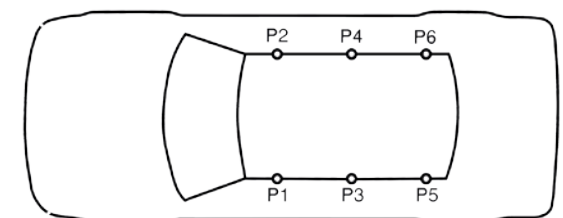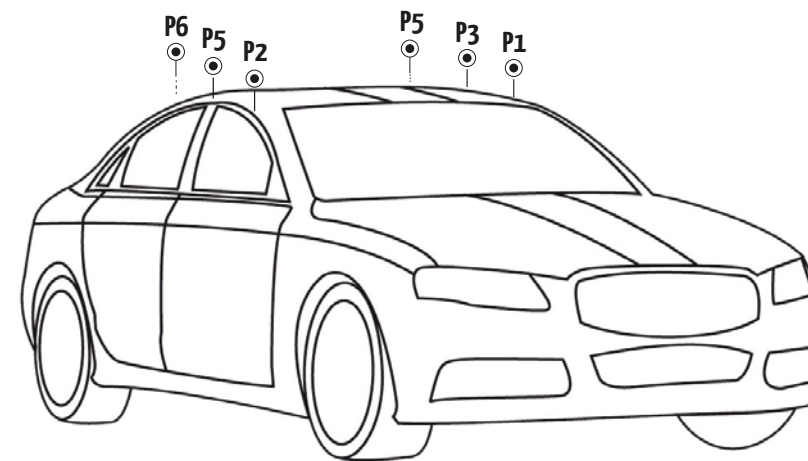

				P1	P2	P3	P4	P5	P6
CITROËN									
NEMO	08 -		B00018			S13	S13	S13	S13
FIAT									
FIORINO III	08 -		B00018			S13	S13	S13	S13
FORD									
FOCUS C-MAX	03 - 10	5	B00043	S13	S13			S13	S13
FOCUS II	04 - 10	3	B00043	S13	S13			S13	S13
FOCUS II SEDAN	04 - 10	5	B00043	S13	S13			S13	S13
FOCUS WAGON II	04 - 10	5	B00043	S13	S13			S13	S13
S-MAX	06 -	5	B00043	S13	S13			S13	S13
PEUGEOT									
BIPPER	08 -		B00018			S13	S13	S13	S13
RENAULT									
VELSATIS	02 - 09	5	B00018	S13	S13			S13	S13

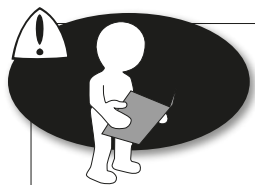

1

2

A  →
RENAULT

3

4

POSICIÓN OPCIONAL
OPTIONAL POSITION

B  →
FORD

3

4

5

6


5 Nm

5 Nm

localizar / Descubrir
locate / Discover

POSICIÓN OPCIONAL
OPTIONAL POSITION

180°

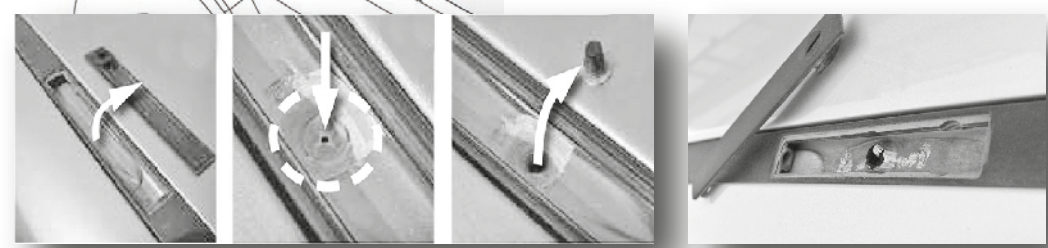

C  →
CITROËN
FIAT
PEUGEOT

3

180°

POSICIÓN OPCIONAL
OPTIONAL POSITION


MONTAJE ZONA TRASERA
MOUNTING REAR ZONE



4

5

5 Nm

5 Nm