
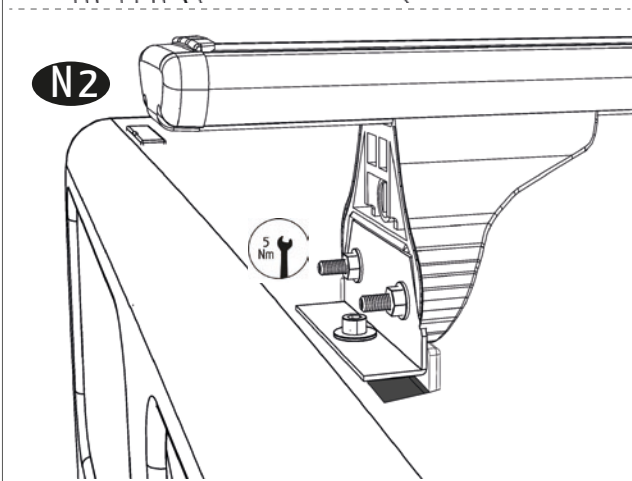
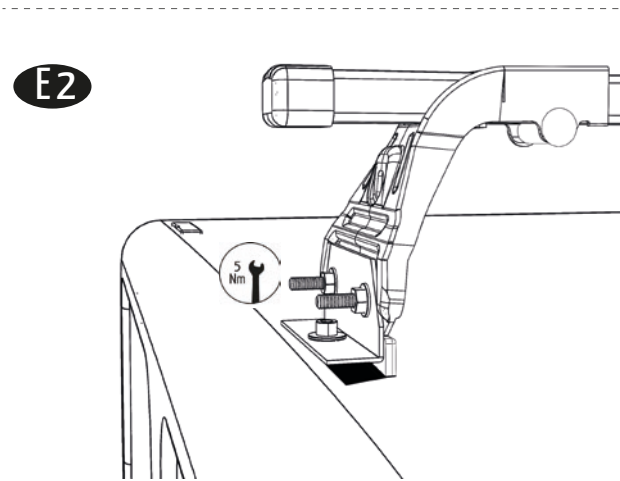
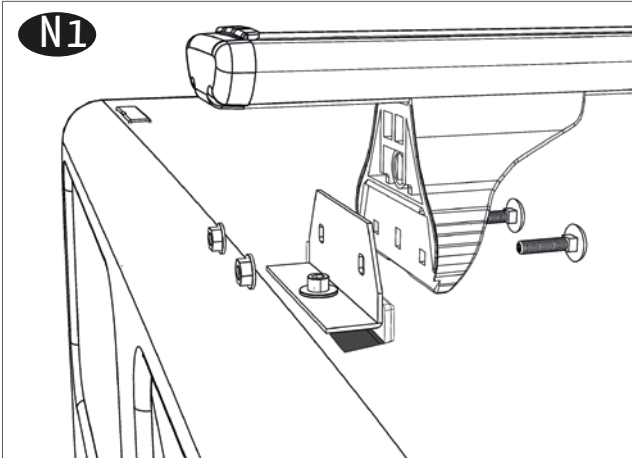
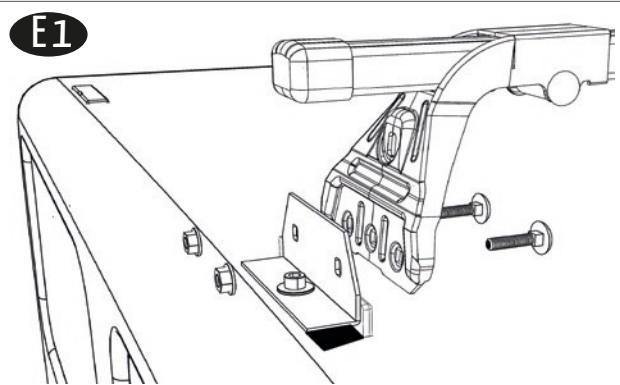
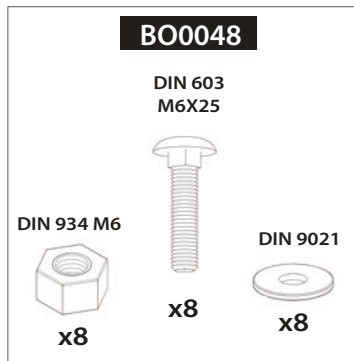
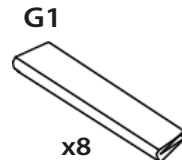
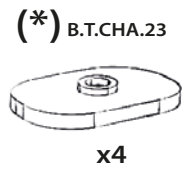
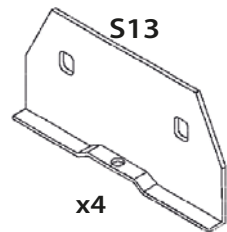
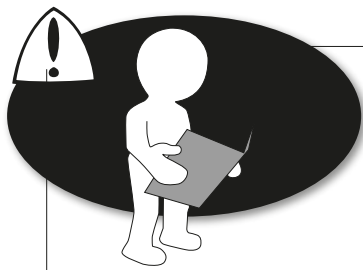



- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

- Kit de fijación
- Kit de fixació
- Fixation Kit
- Kit fixation
- Stützfuß-Kit
- Kit fixação
- Kit di fissaggio
- Element mocujący
- Fixační kit
- Rögzítő készlet
- Kit de fixare
- Kit za montažu
- Montaj kiti

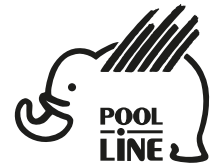



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: E9 26R-03.1085





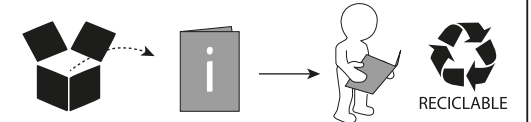


110413







Review 7/2016

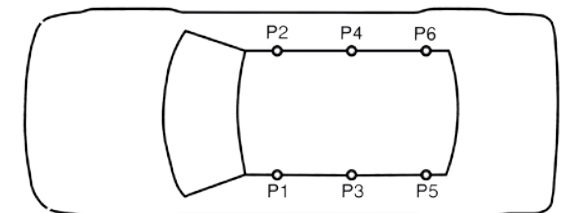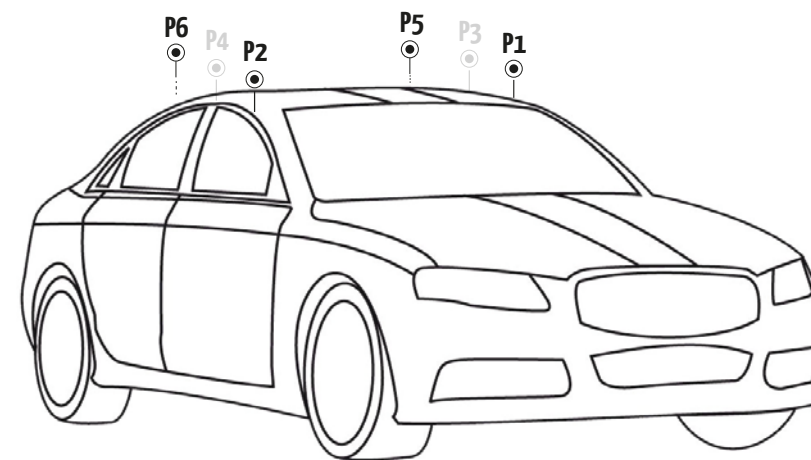

				P1	P2	P5	P6
HYUNDAI							
TERRACAN	01 - 06	5	B00021	S13	S13	S13	S13
JEEP							
GRAND CHEROKEE IV WK2	11 -	5	B00017	S13	S13	S13	S13
OPEL							
COMBO C	01 - 11	4/5	B00017+B00019	S13 + (*)	S13 + (*)	S13 + (*)	S13+ (*)
SEAT							
INCA (fijación con tornillo)	95 - 97		B00017	S13	S13	S13	S13
VOLKSWAGEN							
CADDY II (anclaje tornillo)	95 - 97		B00017+B00019	S13	S13	S13	S13

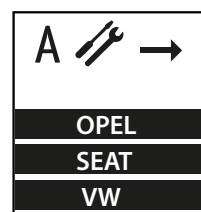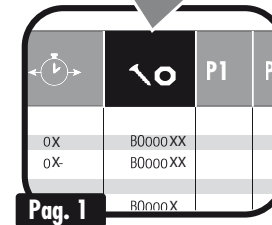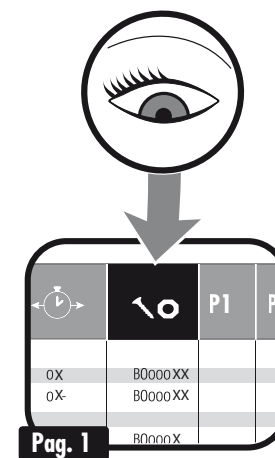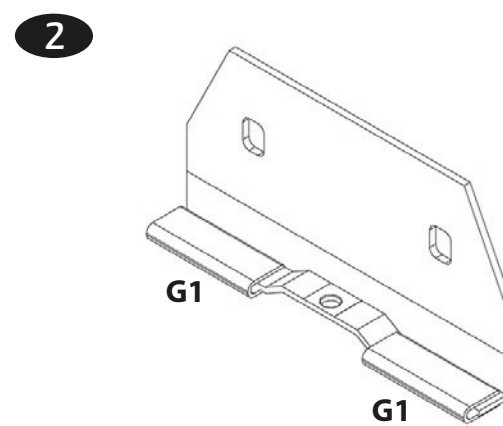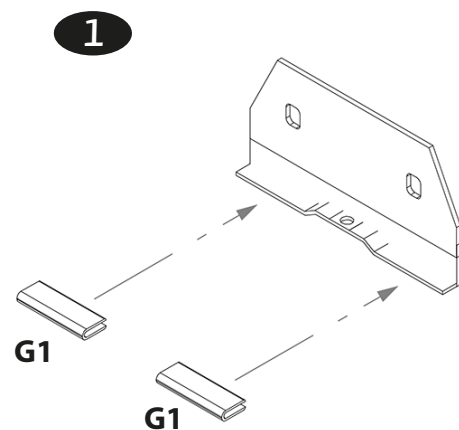

OPEL
SEAT
VW

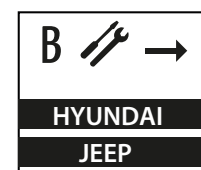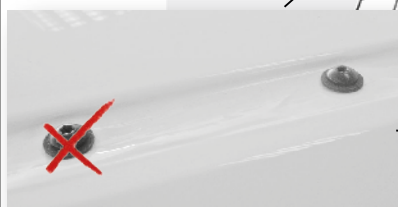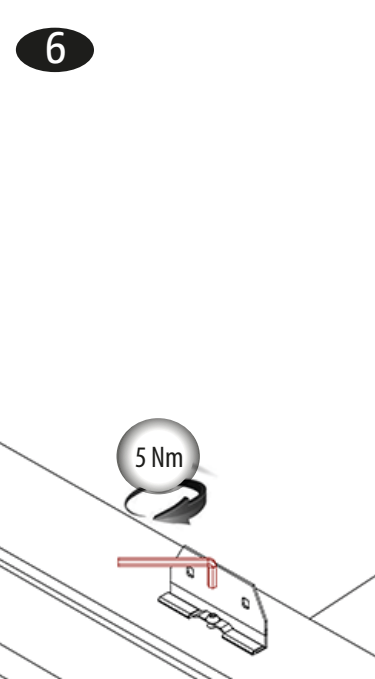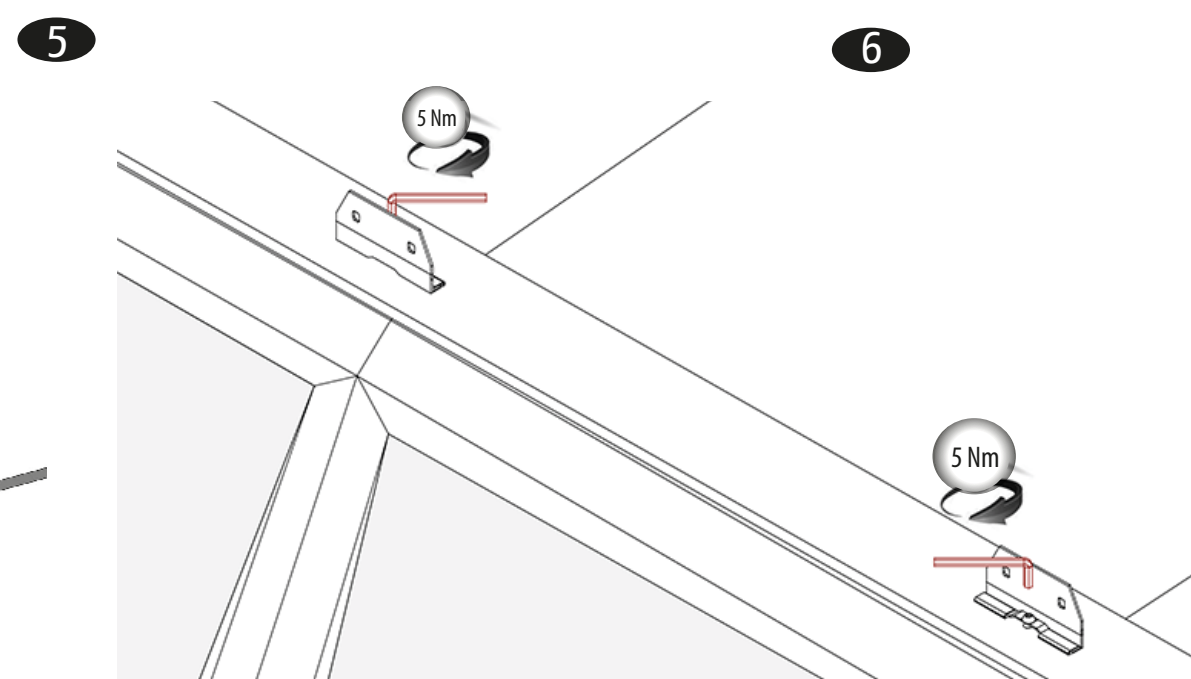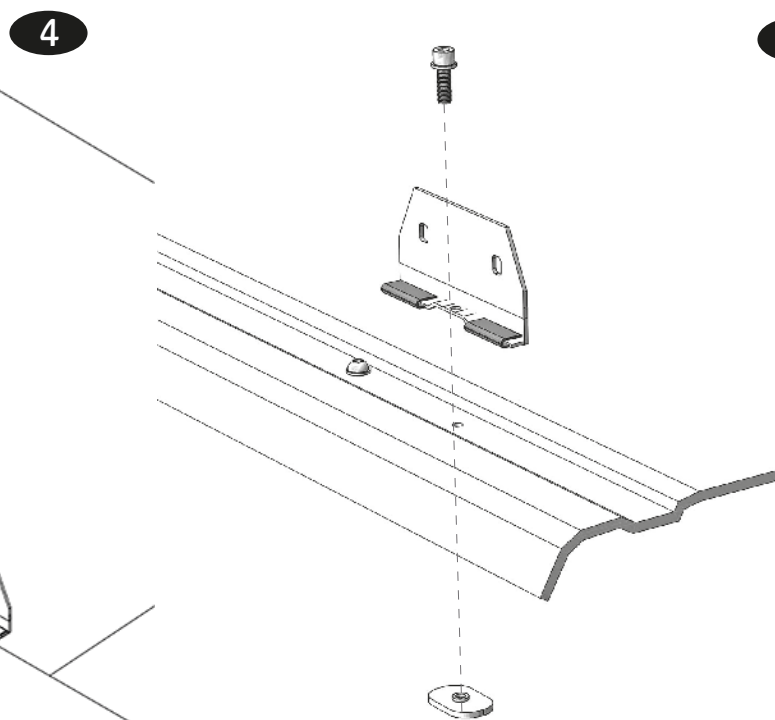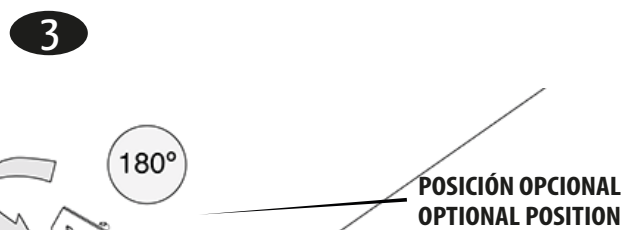

HYUNDAI
JEEP

