

S60

x4

S61 Anti-giro

x4

B.T.603.6X35

x4

BO0019

DIN 125 Ø6

x4

BO0021

DIN 985 M6

x4

BO0048

DIN 603 M6X25


x8

DIN 934 M6


x8

DIN 9021 Ø6

x8

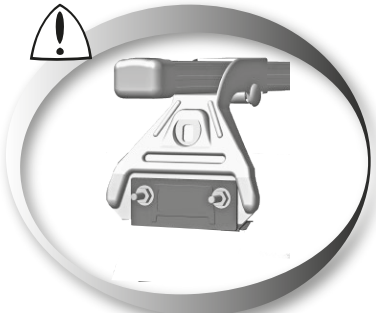

EVO-FIX

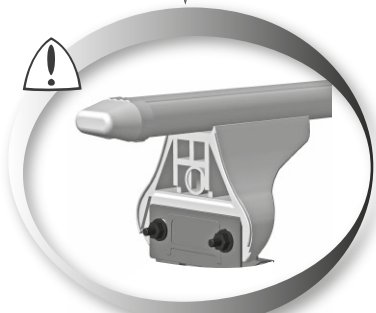

NEO-FIX

- E

Instrucciones de montaje
- C

Instruccions de muntatge
- GB

Assembly instrucctions
- F

Instruction de montage
- D

Montageanleitung
- PT

Instruções de montagem
- I

Istruzioni di montaggio
- PL

Instrukcja montażu
- CZ


Montážní návod
- HU

Szerelési Utasítás
- RO

Instructiuni de montaj
- HR


Detaljne upute
- TU

Öncelikle montaj
- Kit de fijación
- Kit de fixació
- Fixation Kit
- Kit fixation
- Stützfuß-Kit
- Kit fixação
- Kit di fissaggio
- Element mocujący
- Fixační kit
- Rögzítő készlet
- Kit de fixare
- Kit za montažu
- Montaj kiti

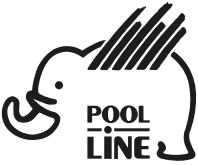

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085

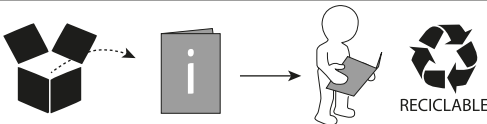


110462

Review 5/2025



Limpieza pre-instalación

Pre-installation cleaning

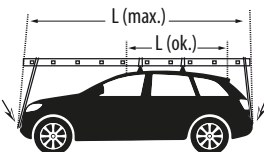


Revisar par de apriete

Check torque


				P1	P2	P5	P6
MERCEDES							
Clase A W176	12 - 18	5	B00019 + B00021 + B.T.603.6X35	S60 + S61	S60 + S61	S60 + S61	S60 + S61
Clase A W177	2018->	5	B00019 + B00021 + B.T.603.6X35	S60 + S61	S60 + S61	S60 + S61	S60 + S61
Clase B W246	11 - 18	5	B00019 + B00021 + B.T.603.6X35	S60 + S61	S60 + S61	S60 + S61	S60 + S61
Clase B W247	2019->	5	B00019 + B00021 + B.T.603.6X35	S60 + S61	S60 + S61	S60 + S61	S60 + S61
Clase CLA C177 Coupé	13 - 19	2	B00019 + B00021 + B.T.603.6X35	S60 + S61	S60 + S61	S60 + S61	S60 + S61
Clase CLA X177 Shooting Brake	15 - 19	5	B00019 + B00021 + B.T.603.6X35	S60 + S61	S60 + S61	S60 + S61	S60 + S61
Clase GLC C292 Coupé	2015->	2	B00019 + B00021 + B.T.603.6X35	S60 + S61	S60 + S61	S60 + S61	S60 + S61




1

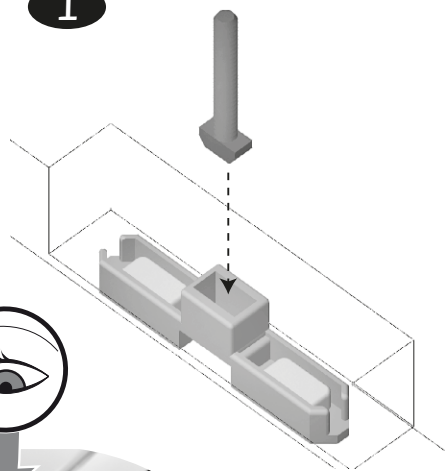




2

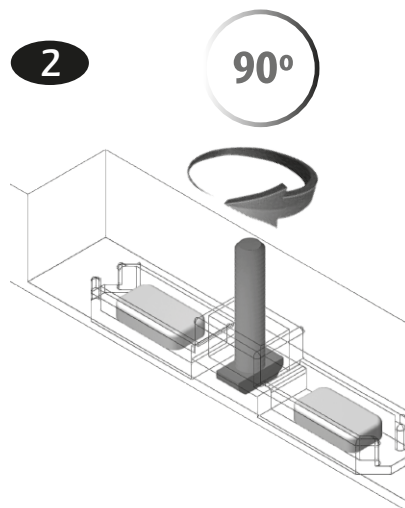


3

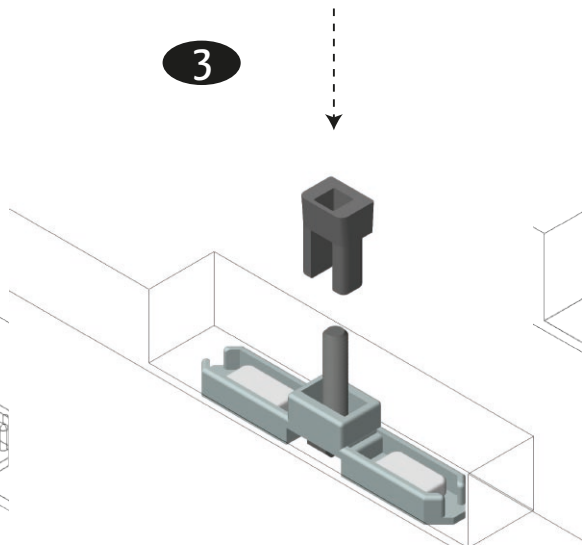


4

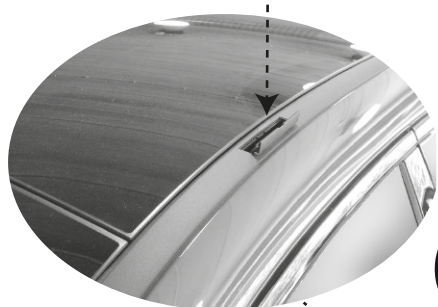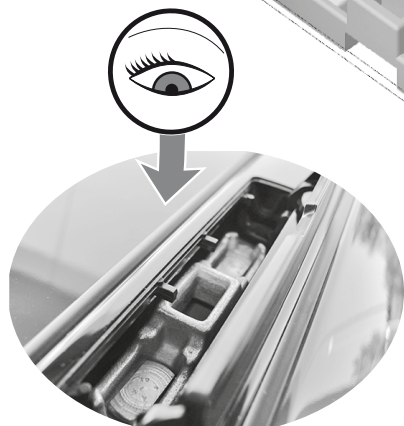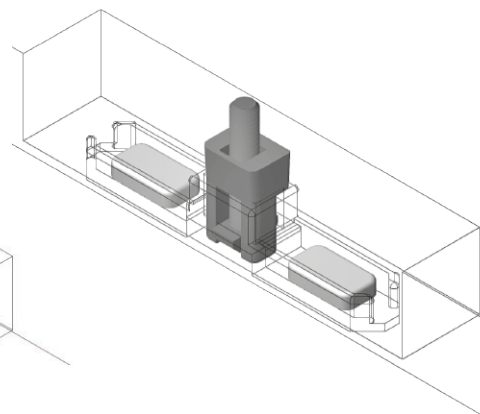


5

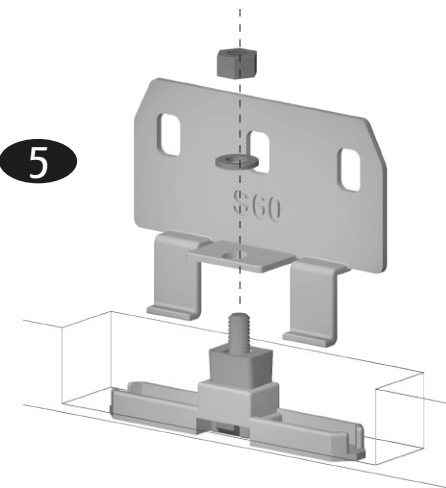

6

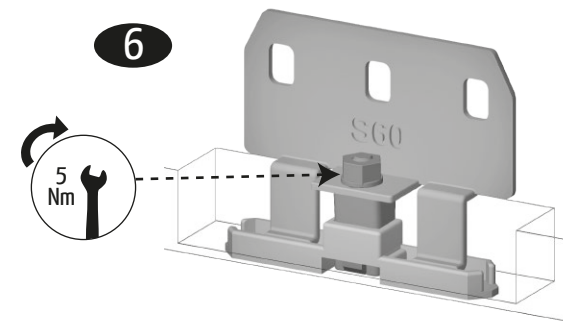

7

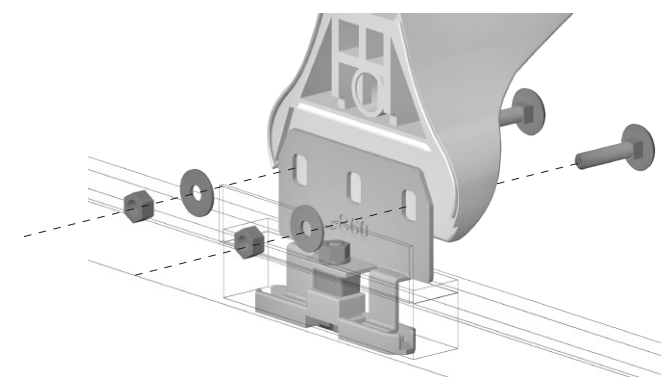

8

