


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

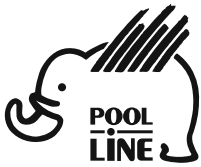

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net



200



KG.
MAX.


Nº HOMOLOGACIÓN: **E9** 26R-03.1042




RECICLABLE

123513

Rv: 05/2019

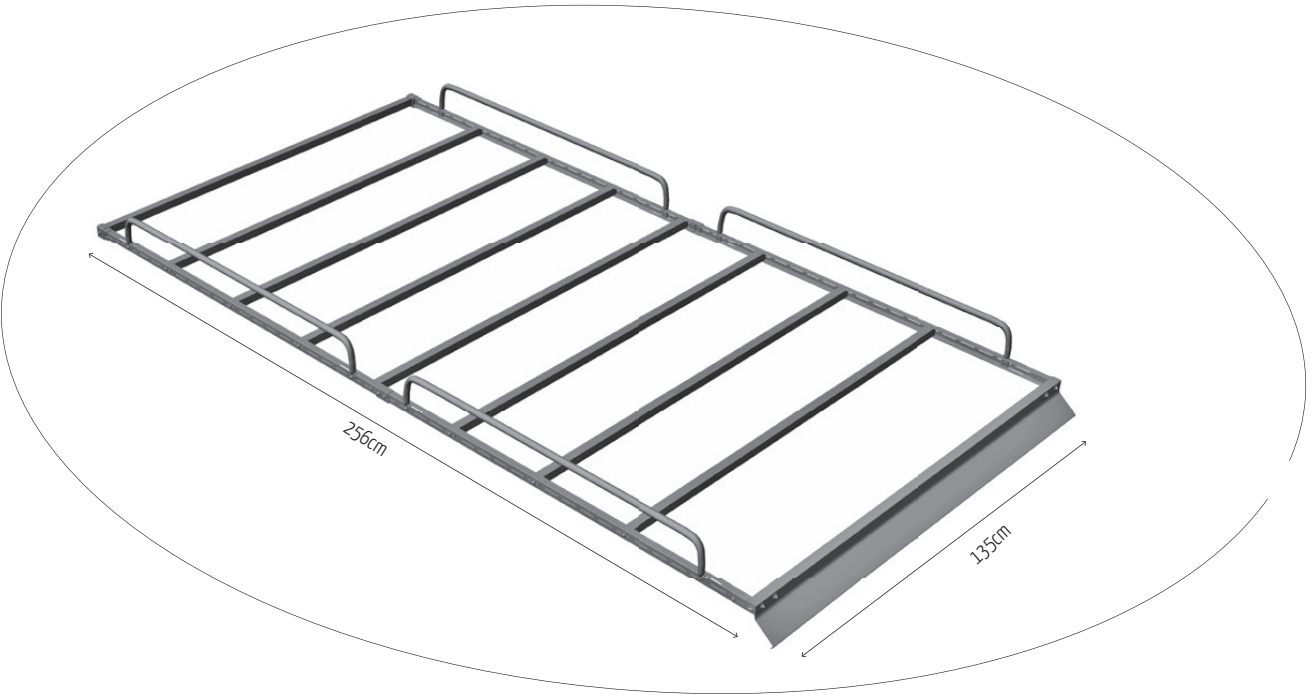

Limpieza pre-instalación
Pre-installation cleaning


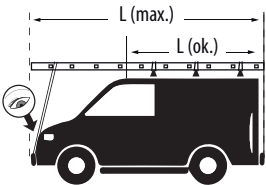


Revisar par de apriete
Check torque



N		Q
1	 S-1350	1
2	 L-1300	4
3	 B-1022	4
4	 T-1335	8
5		16
6		2
7		2
8		8


N		Q
11		1
12	 CHA-M8	12
13	 ISO 7380 M8x40	16
14	 ISO 7380 M8x16	20
15	 DIN 125 Ø 8	36

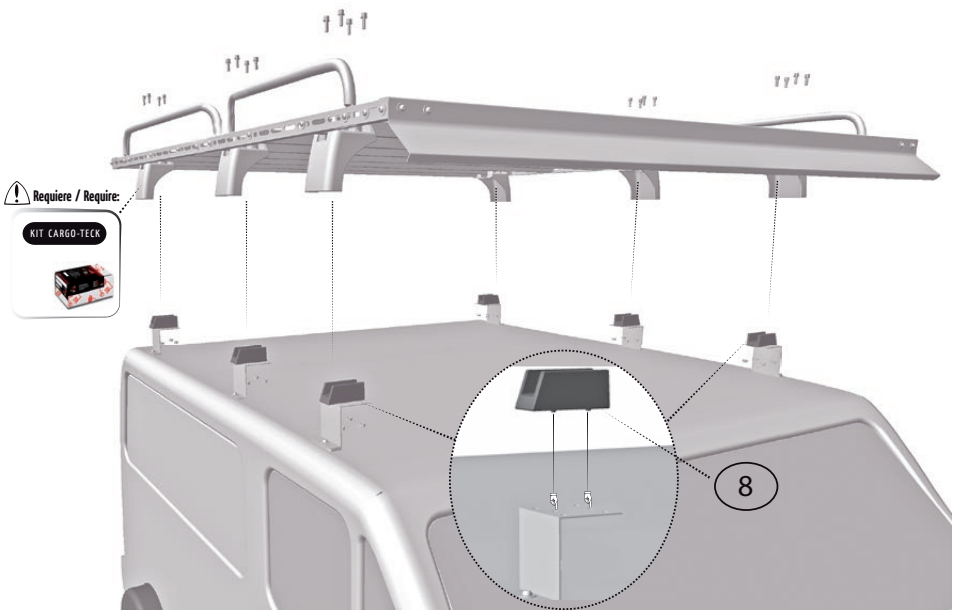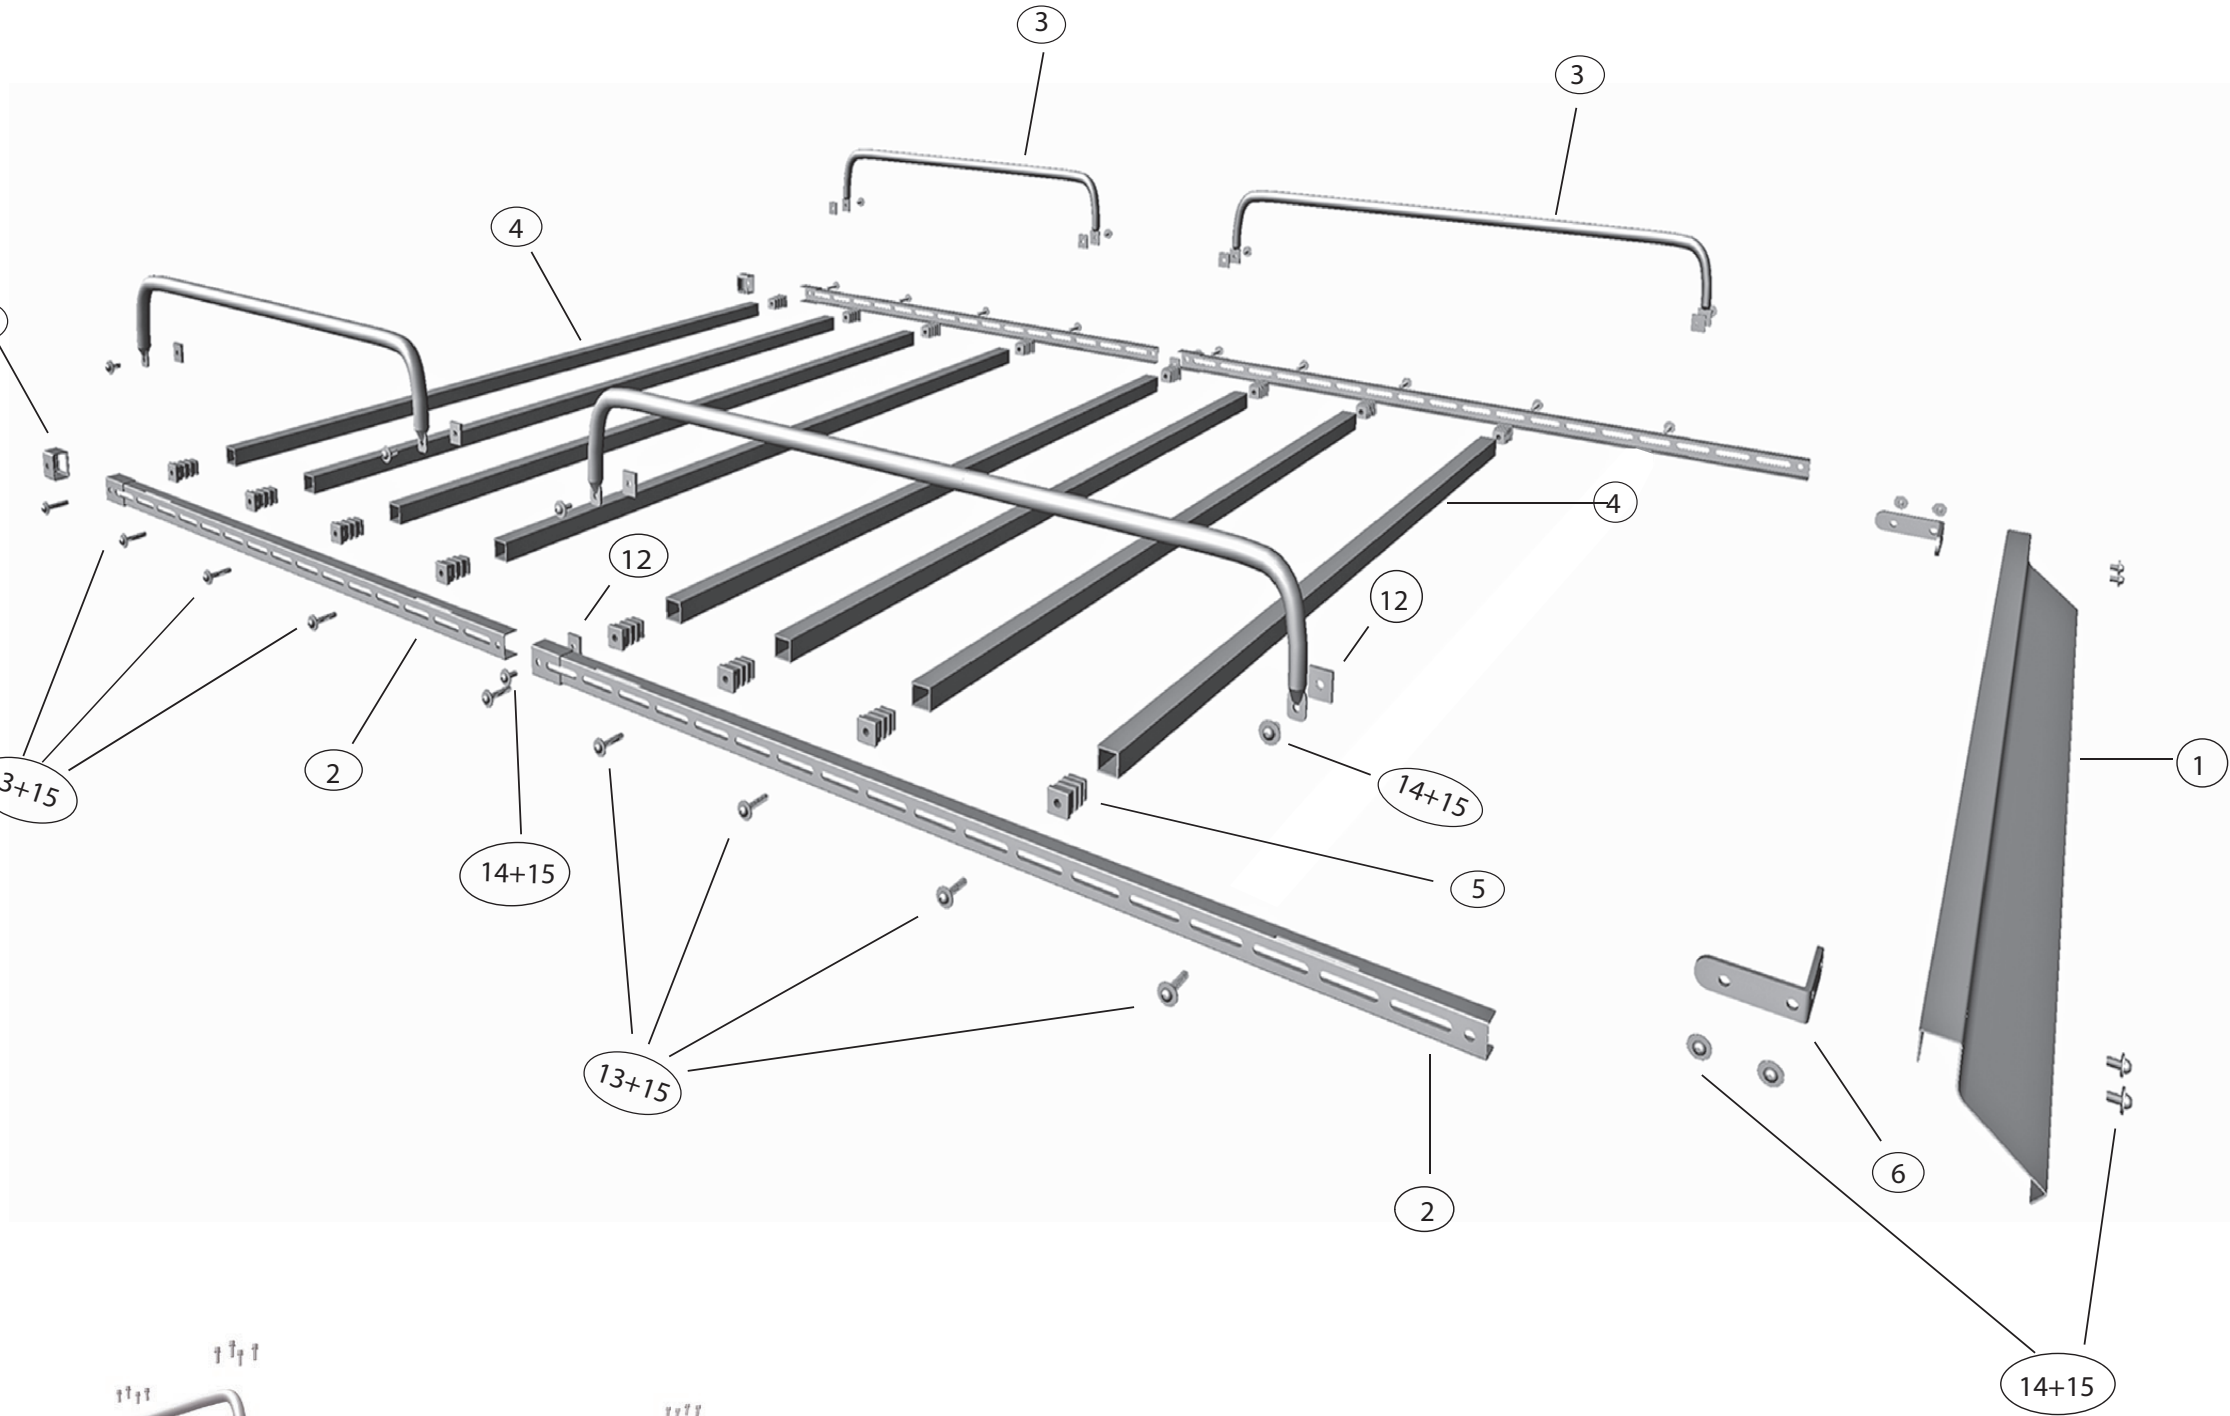



CITROËN BERLINGO II L2H1 08-18

PEUGEOT PARTNER II L2H1 08-18

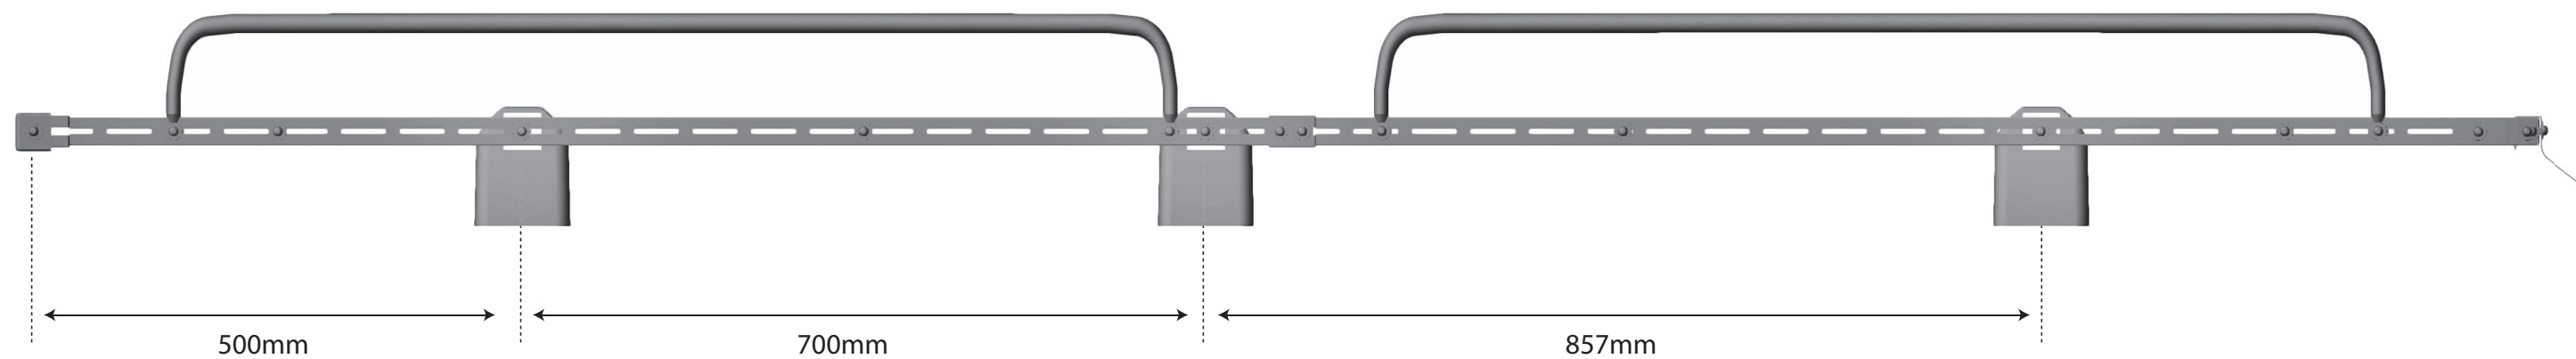


CITROËN JUMPY II L2H1 (07-15)

PEUGEOT EXPERT II L2H1 (07-15)

FIAT SCUDO II L2H1 (07-15)

TOYOTA PROACE II L2H1 (07-15)

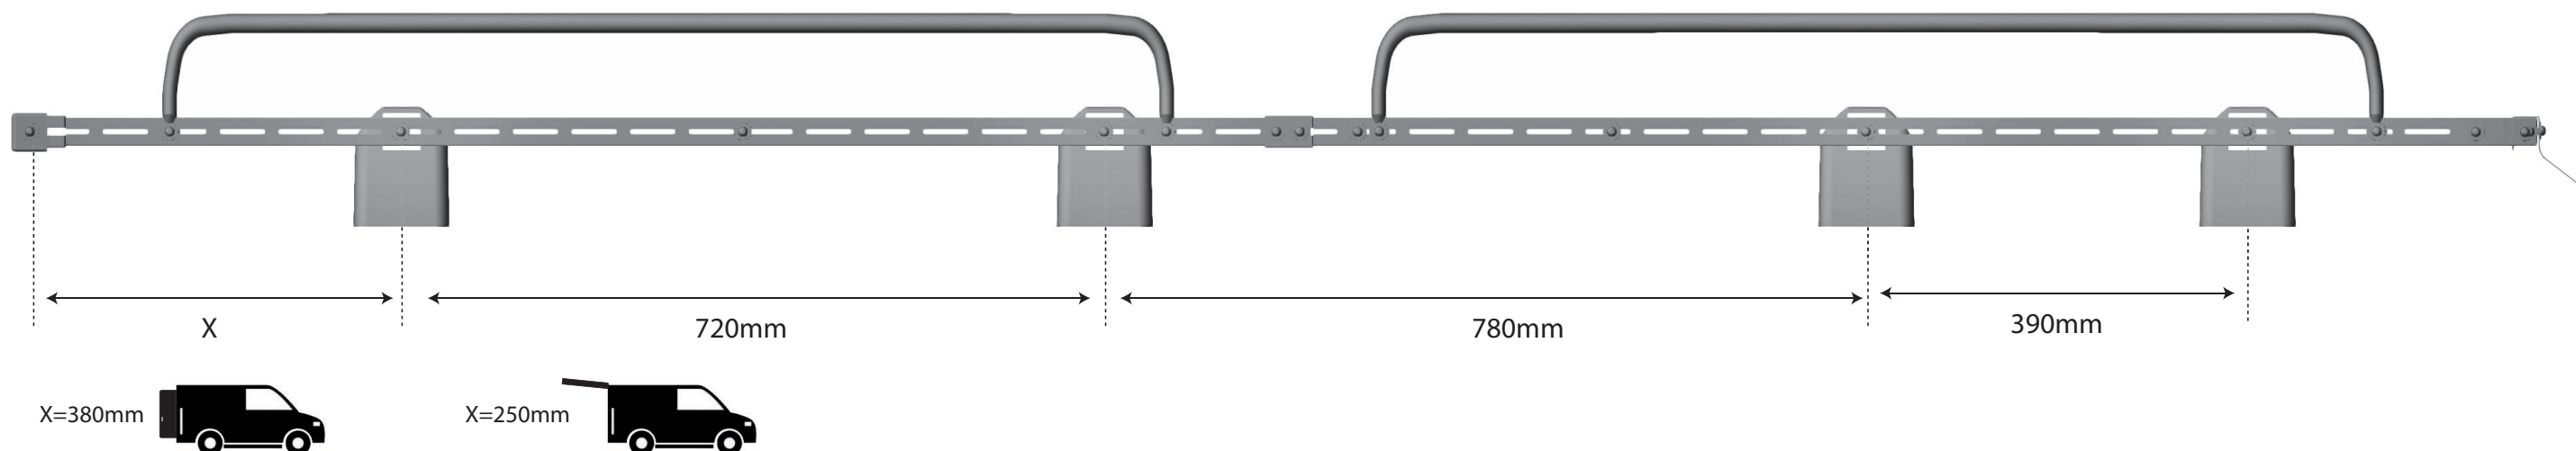





NISSAN PRIMASTAR L2-H2 (02-14)

OPEL VIVARO A L2-H2 (02-14)

RENAULT TRAFIC II L2-H2 (02-14)

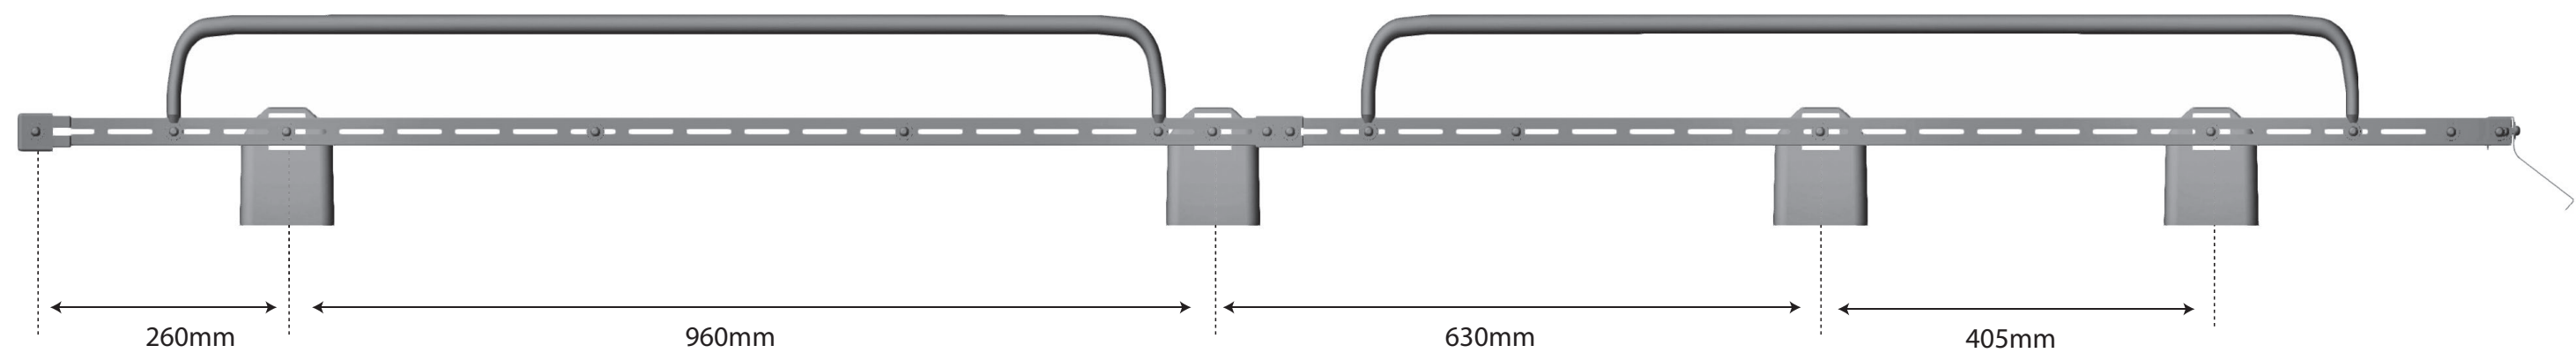

OPEL MIDI I/II (80-01)

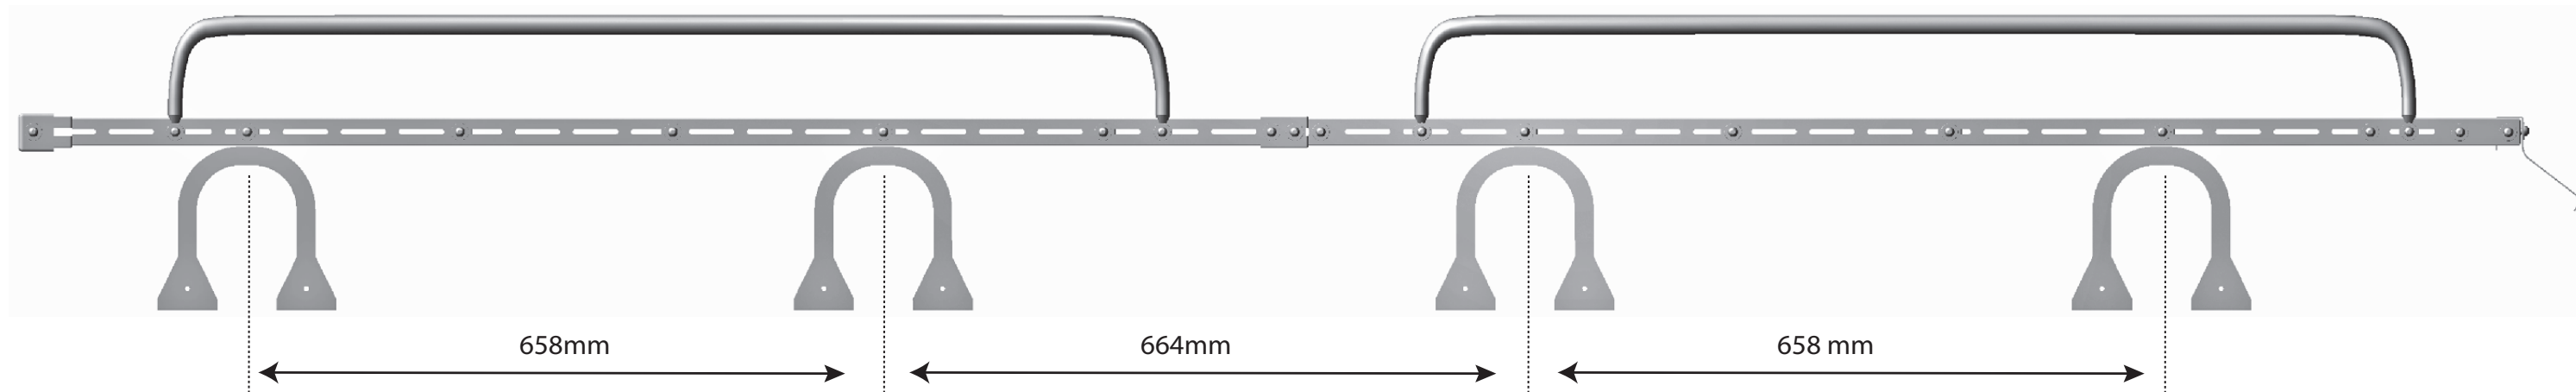





CITROËN BERLINGO III (XL) L2 (2018)


OPEL COMBO E (XL) L2 (2018)

PEUGEOT PARTNER III (XL) L2 (2018)

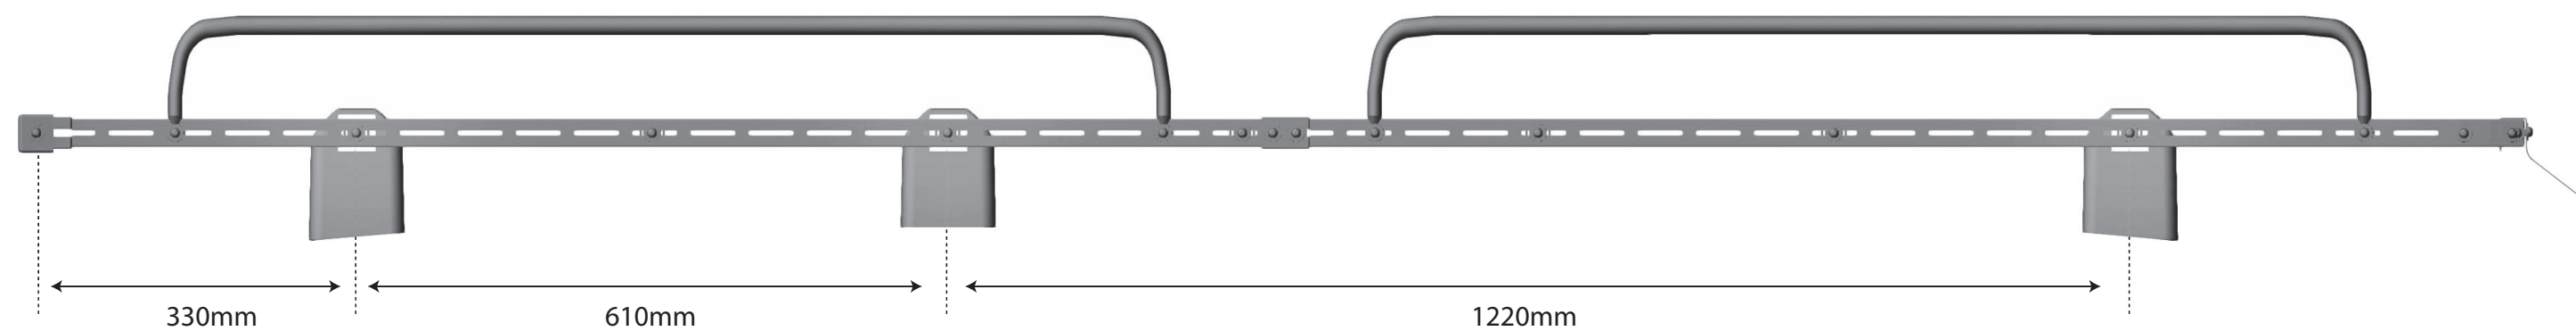


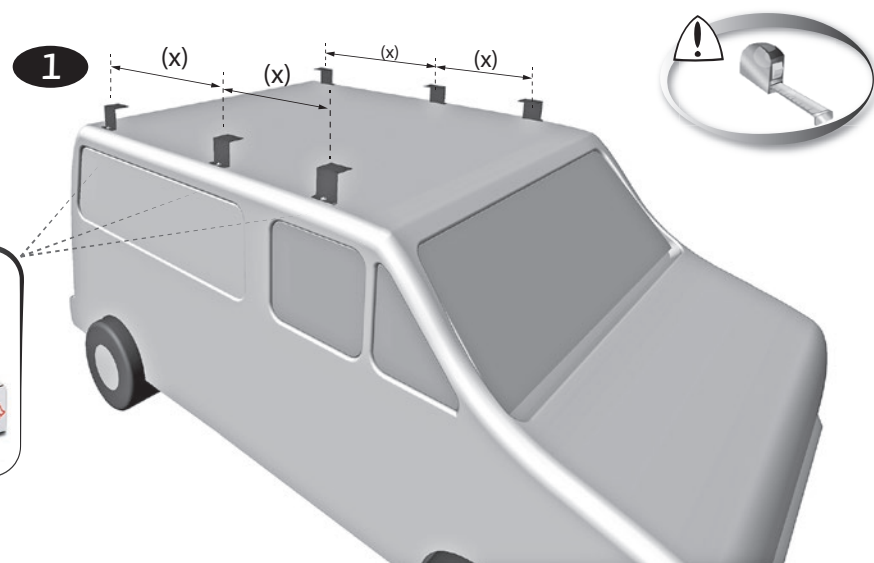


2

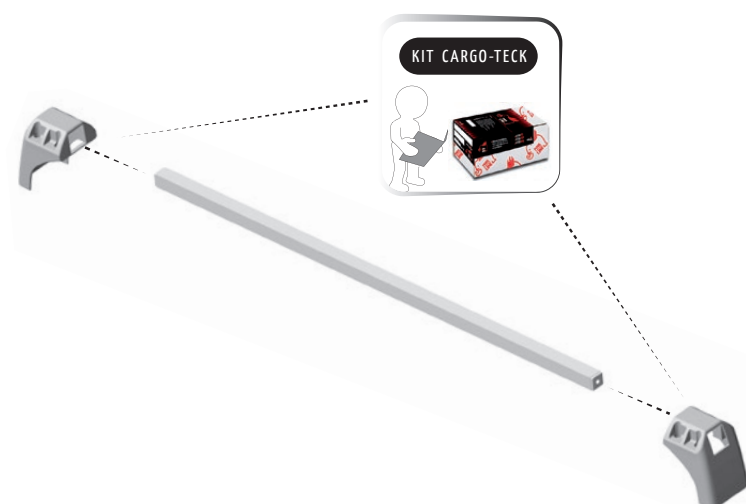


3

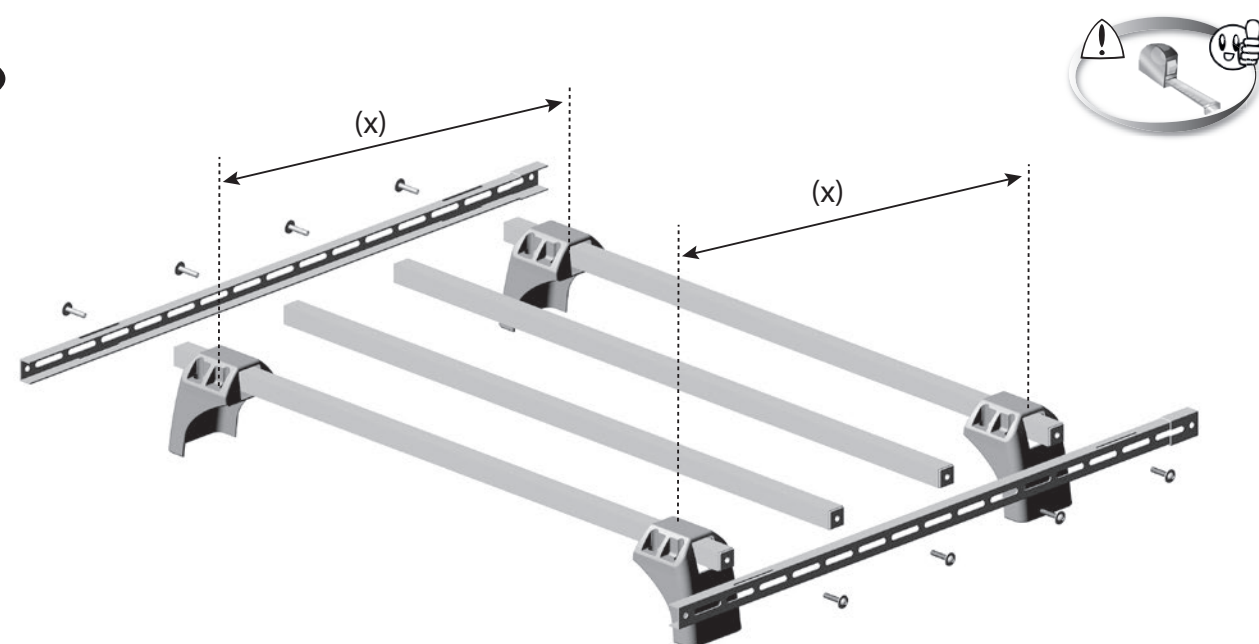


4

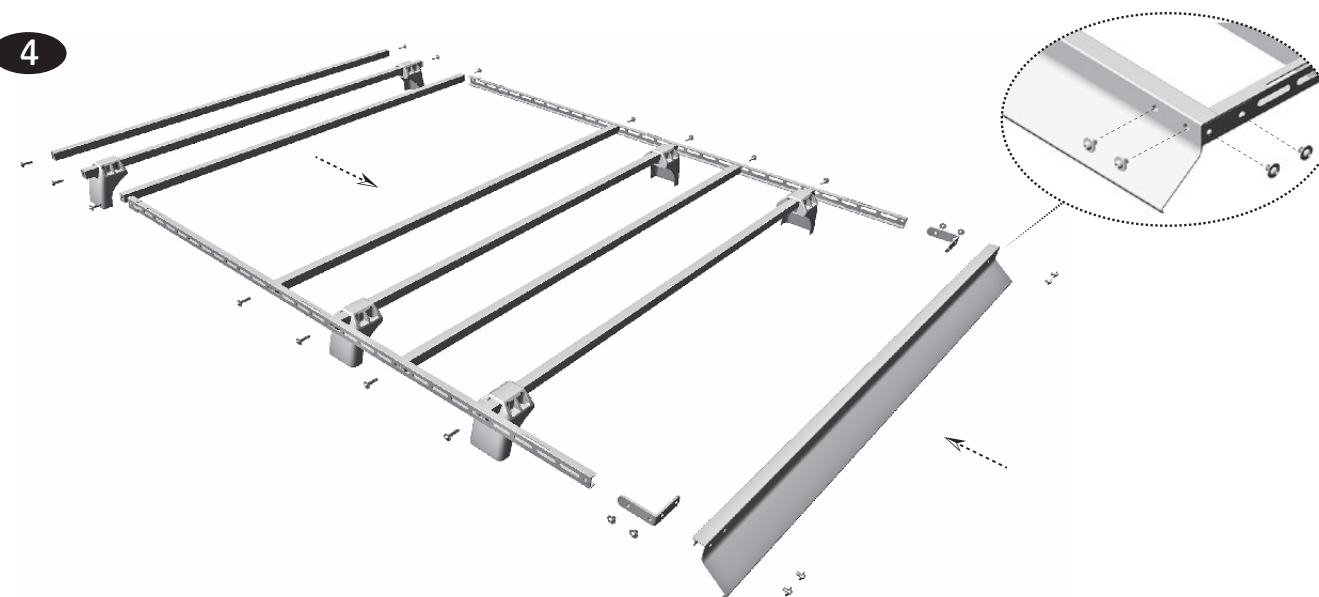


5

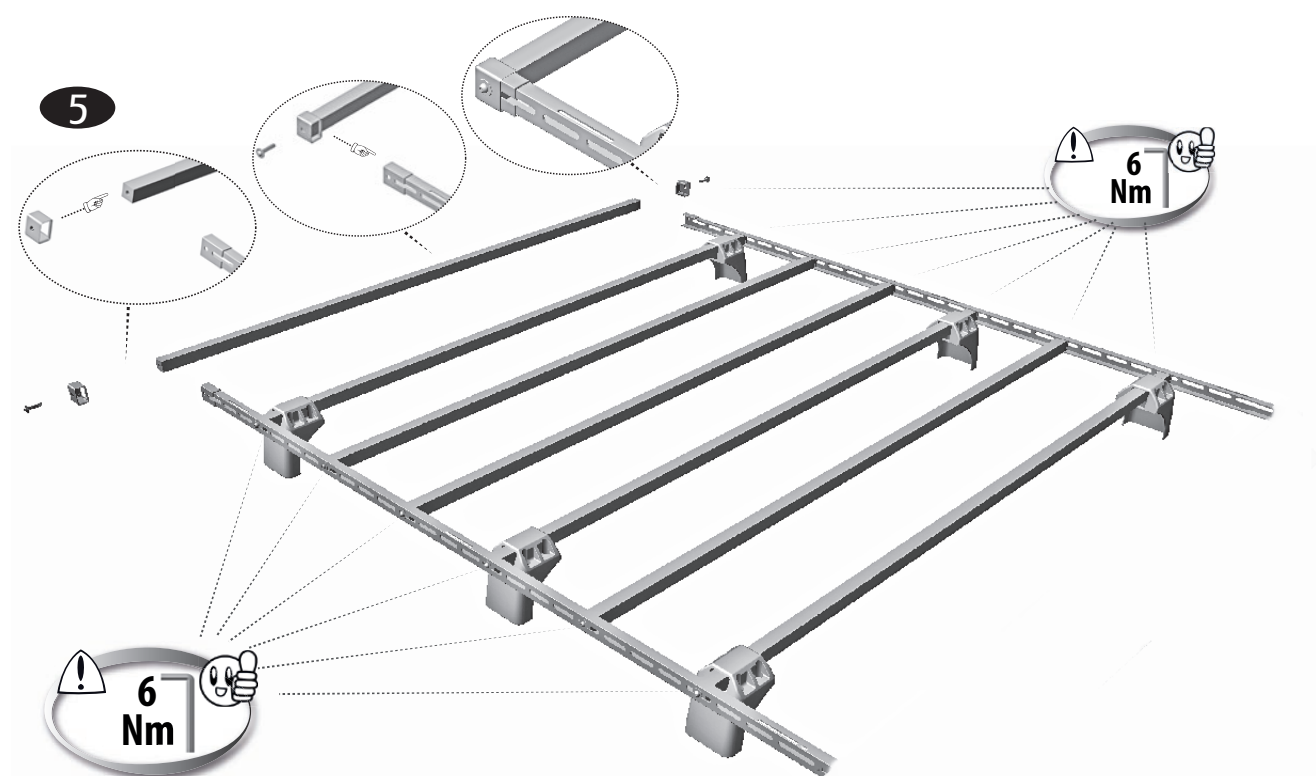

6

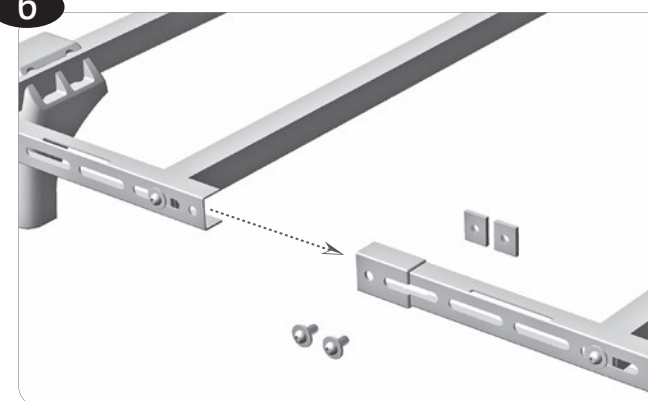


7

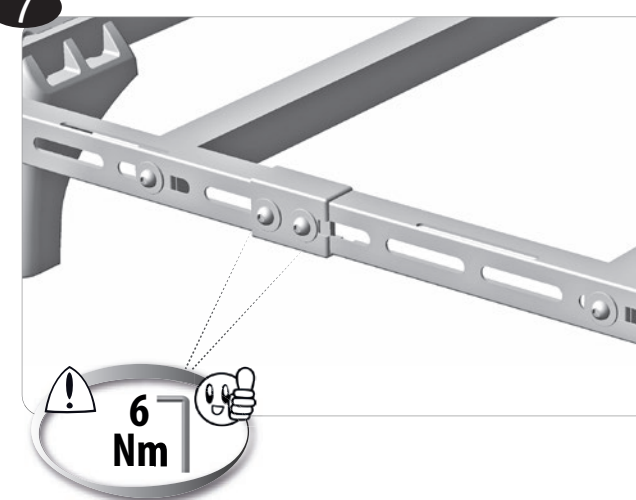




8


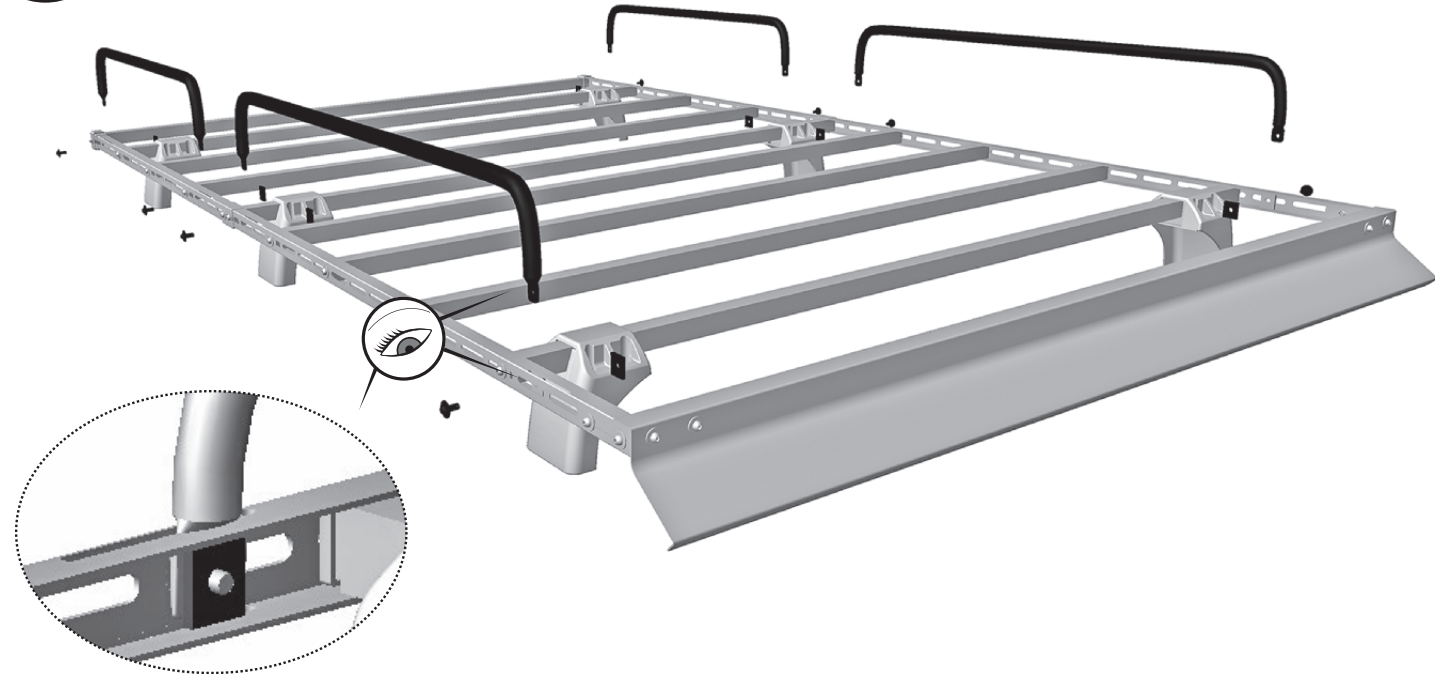


9

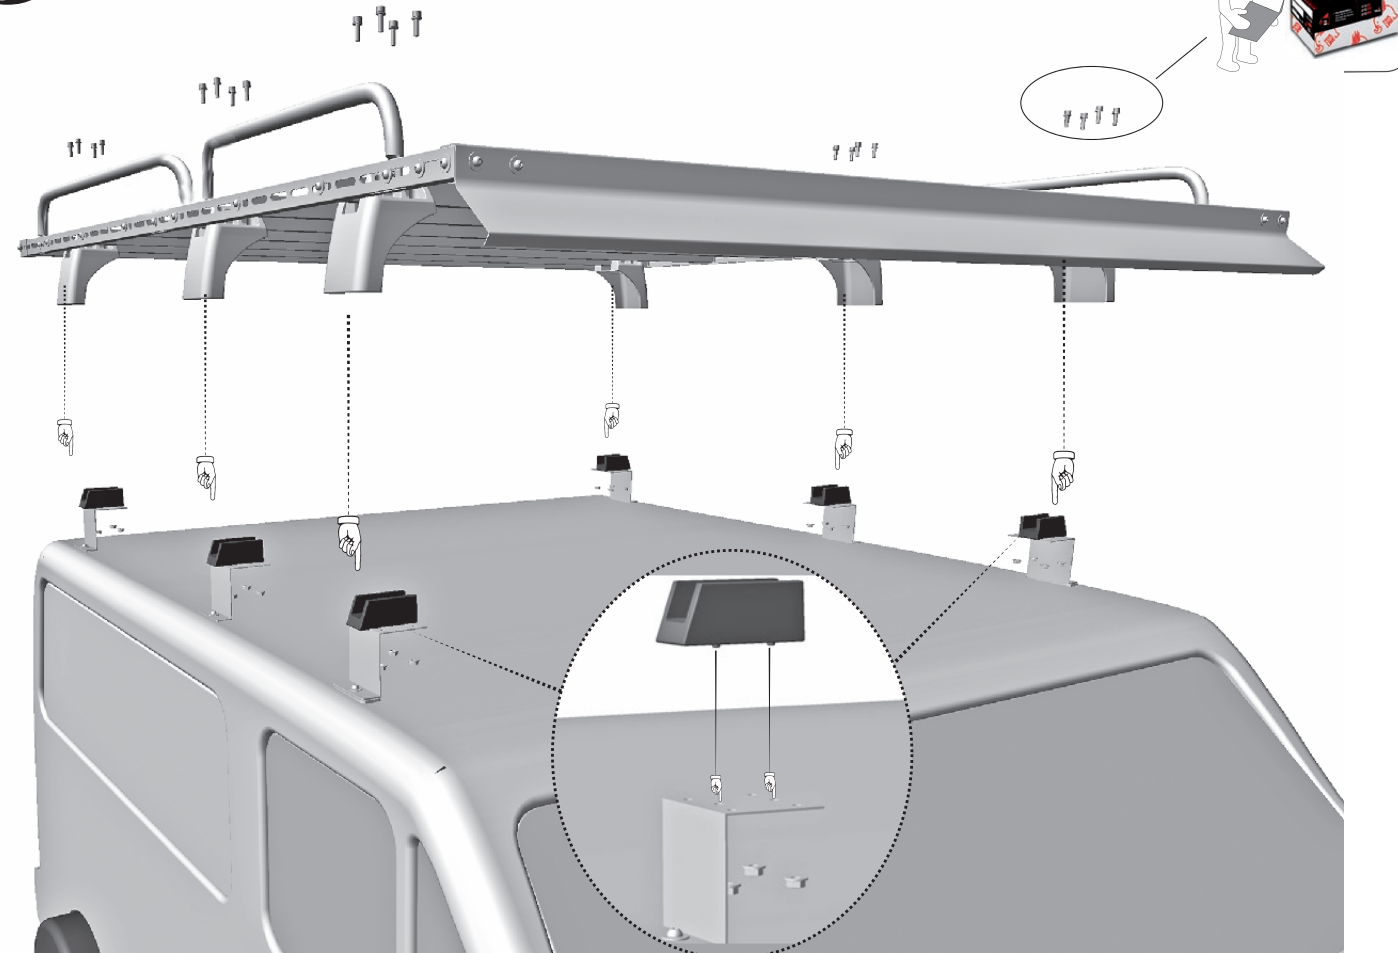


KIT CARGO-TECK


10










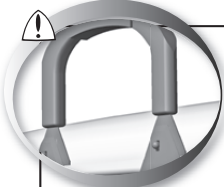
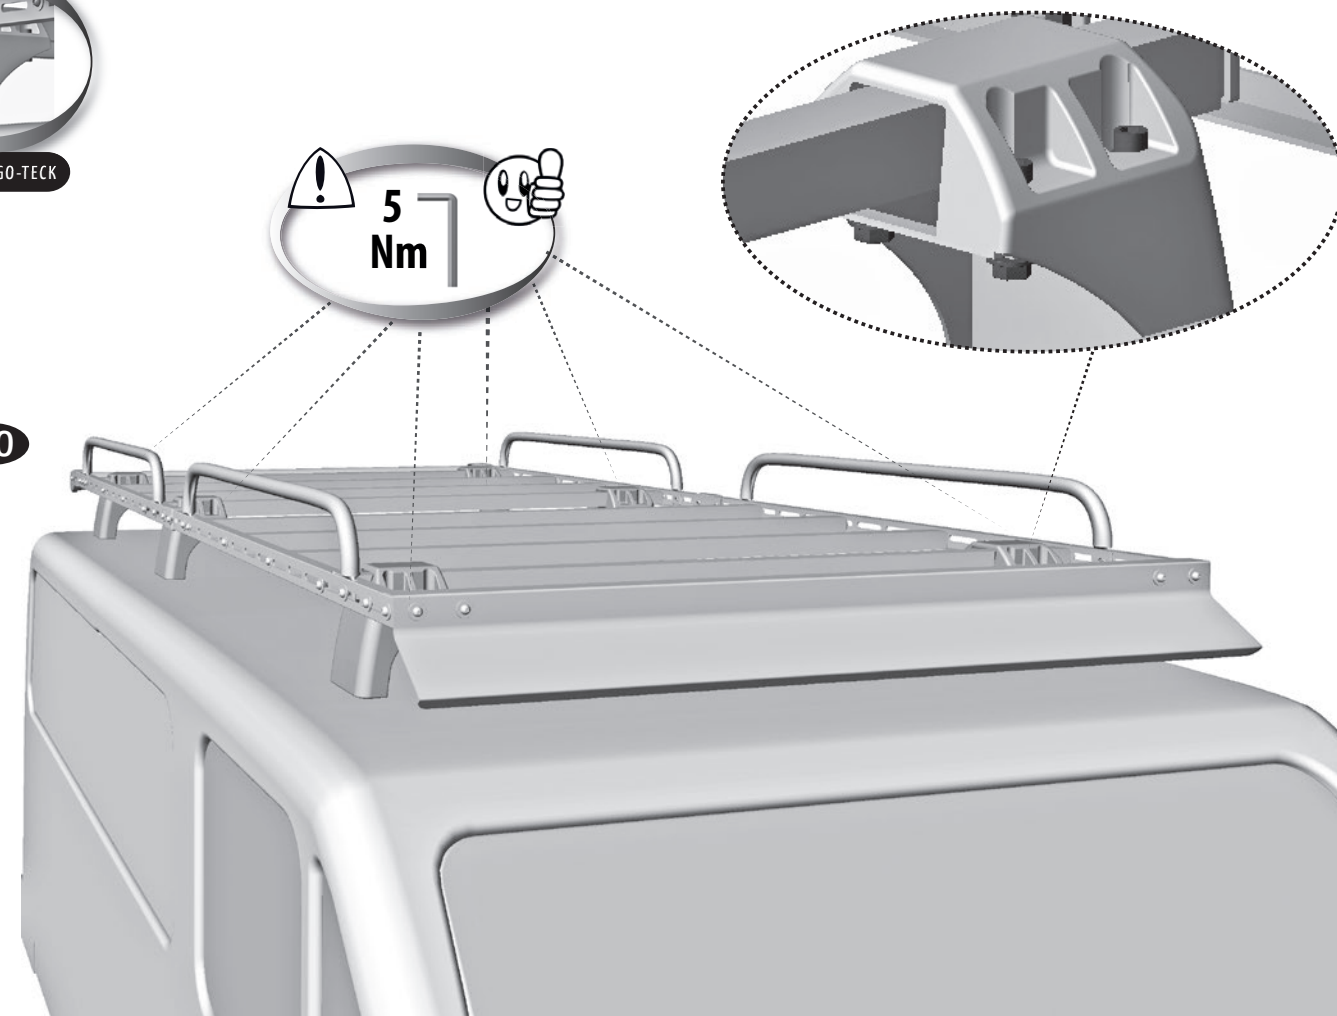



KIT CARGO-TECK FEET


10 bis

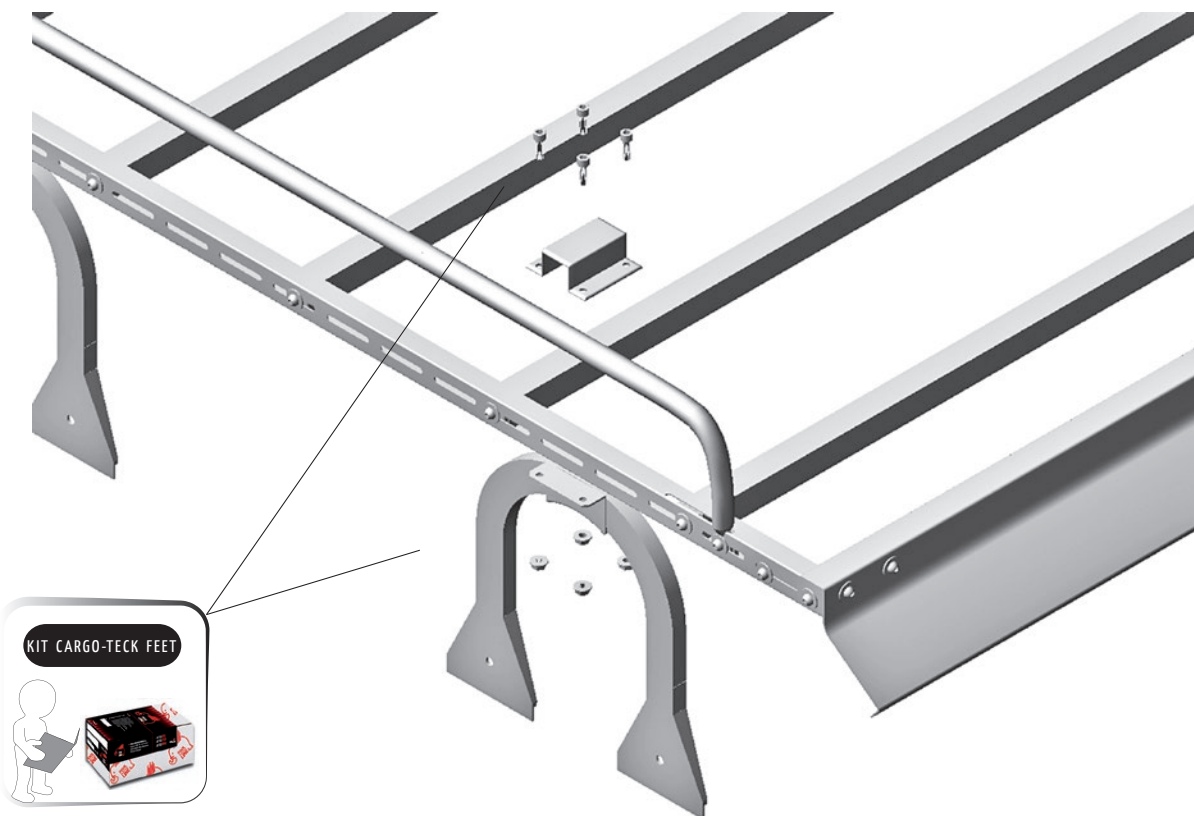

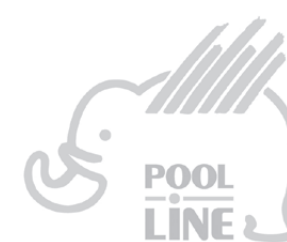

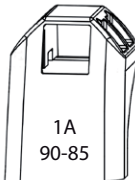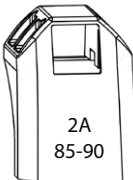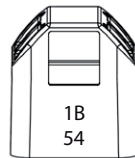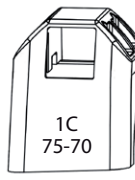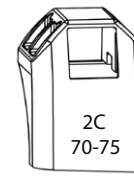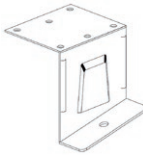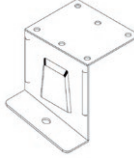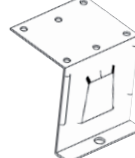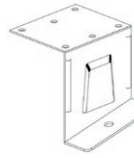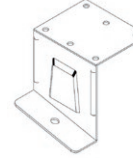N			Q			Q			Q
1	 1A 90-85	 2A 85-90	1+1	 1B 54	2	 1C 75-70	 2C 70-75	1+1	
2	 221	 222	1+1	 224	2	 225	 226	1+1	
3	 G4							6	
4								1	

N	BO0061	Q
8	 DIN912 M6x20	24
9	 DIN125	24

N	BO0010 x 3	Q
10	 ISO 7380 M8x20	6
11	 Din125 Ø8	6

- E

Instrucciones de montaje

C

Instruccions de muntatge

GB

Assembly instrucctions

F

Instruction de montage

D

Montageanleitung

PT

Instruções de montagem

I

Istruzioni di montaggio

PL

Instrukcja montażu

CZ

Montážní návod

HU

Szerelési Utasítás

RO

Instrucțiuni de montaj

HR

Detaljne upute

TU

Öncelikle montaj
- Kit de fijación

Kit de fixació

Fixation Kit

Kit fixation

Stützfuß-Kit

Kit fixação

Kit di fissaggio

Element mocujac


Fixační kit

Rögzítő készlet

Kit de fixare

Kit za montažu

Montaj kiti

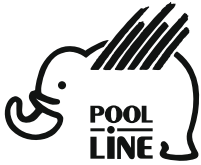

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN:

E9

26R-03.1043











RECICLABLE

121021
Rv: 2/2023

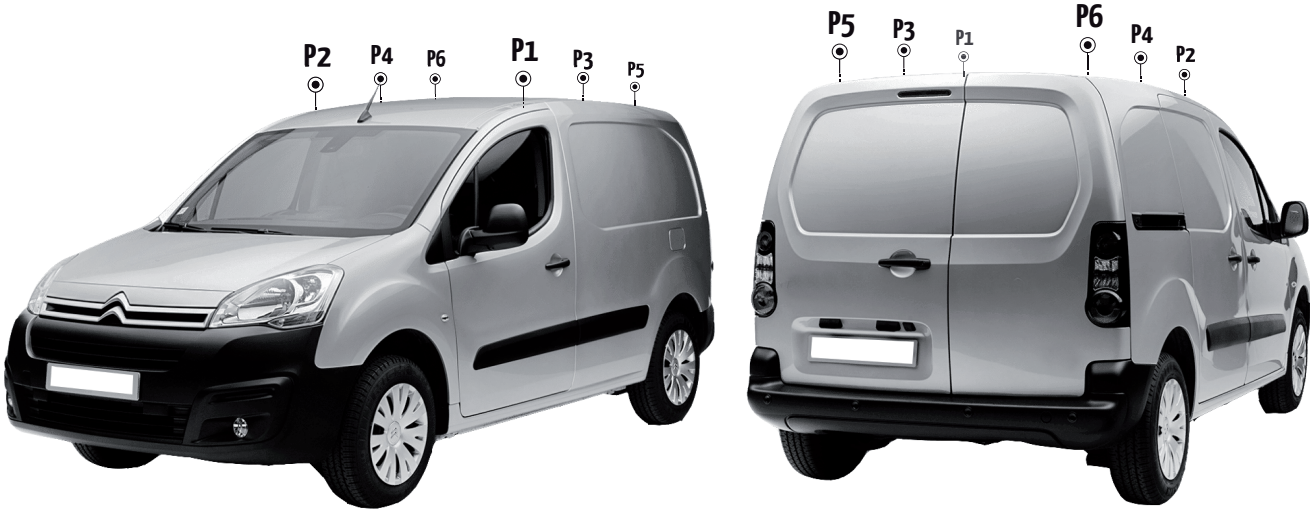

					P1	P2		P3	P4		P5	P6
CITROËN												
BERLINGO II	L1	H1	08-18	BO0010	221+1A	222+2A		224+1B	224+1B		226+1C	225+2C
BERLINGO II	L2	H1	08-18	BO0010	221+1A	222+2A		224+1B	224+1B		226+1C	225+2C
PEUGEOT												
PARTNER II	L1	H1	08-18	BO0010	221+1A	222+2A		224+1B	224+1B		226+1C	225+2C
PARTNER II	L2	H1	08-18	BO0010	221+1A	222+2A		224+1B	224+1B		226+1C	225+2C

