


- E** Instrucciones de montaje
- C** Instruccions de muntatge
- GB** Assembly instructions
- F** Instruction de montage
- D** Montageanleitung
- PT** Instruções de montagem
- I** Istruzioni di montaggio
- PL** Instrukcja montazu
- CZ** Montážní návod
- HU** Szerelési Utasítás
- RO** Instrucțiuni de montaj
- HR** Detaljne upute
- TU** Öncelikle montaj

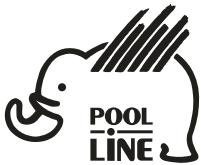

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net


**200 KG**
MAX.

Nº HOMOLOGACIÓN: **E9** 26R-03.1042



RECICLABLE

123413




Rv: 10/2024

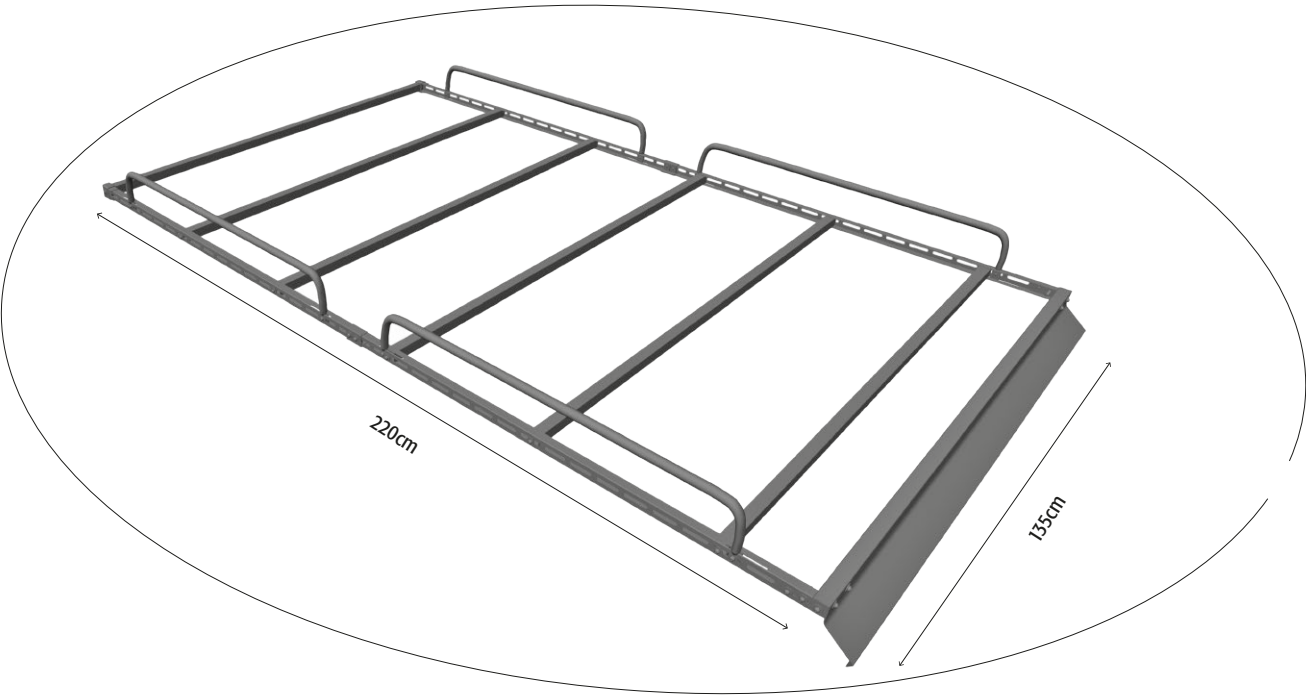


Limpeza pre-instalação
Pre-installation cleaning

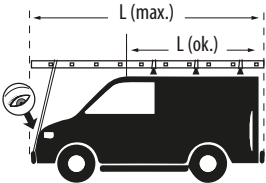


Revisar par de apriete
Check torque

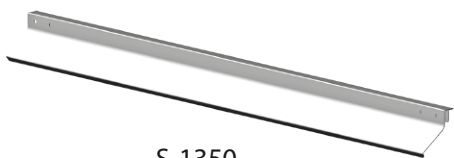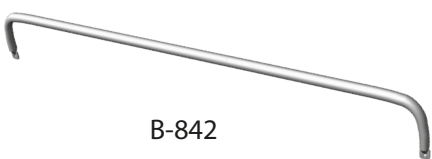N		Q
20	 S-1350	1
21		2
22	 L-1120	4
23	 B-842	4
24	 T-1335	6
25		12
26		2
27		8
28	 CHA-M8	12
29	 ISO 7380 M8x30	10
30	 ISO 7380 M8x16	20
31	 DIN 125 Ø 8	32
32	 ISO 7380 M8x 40	2

N		Q
32		1

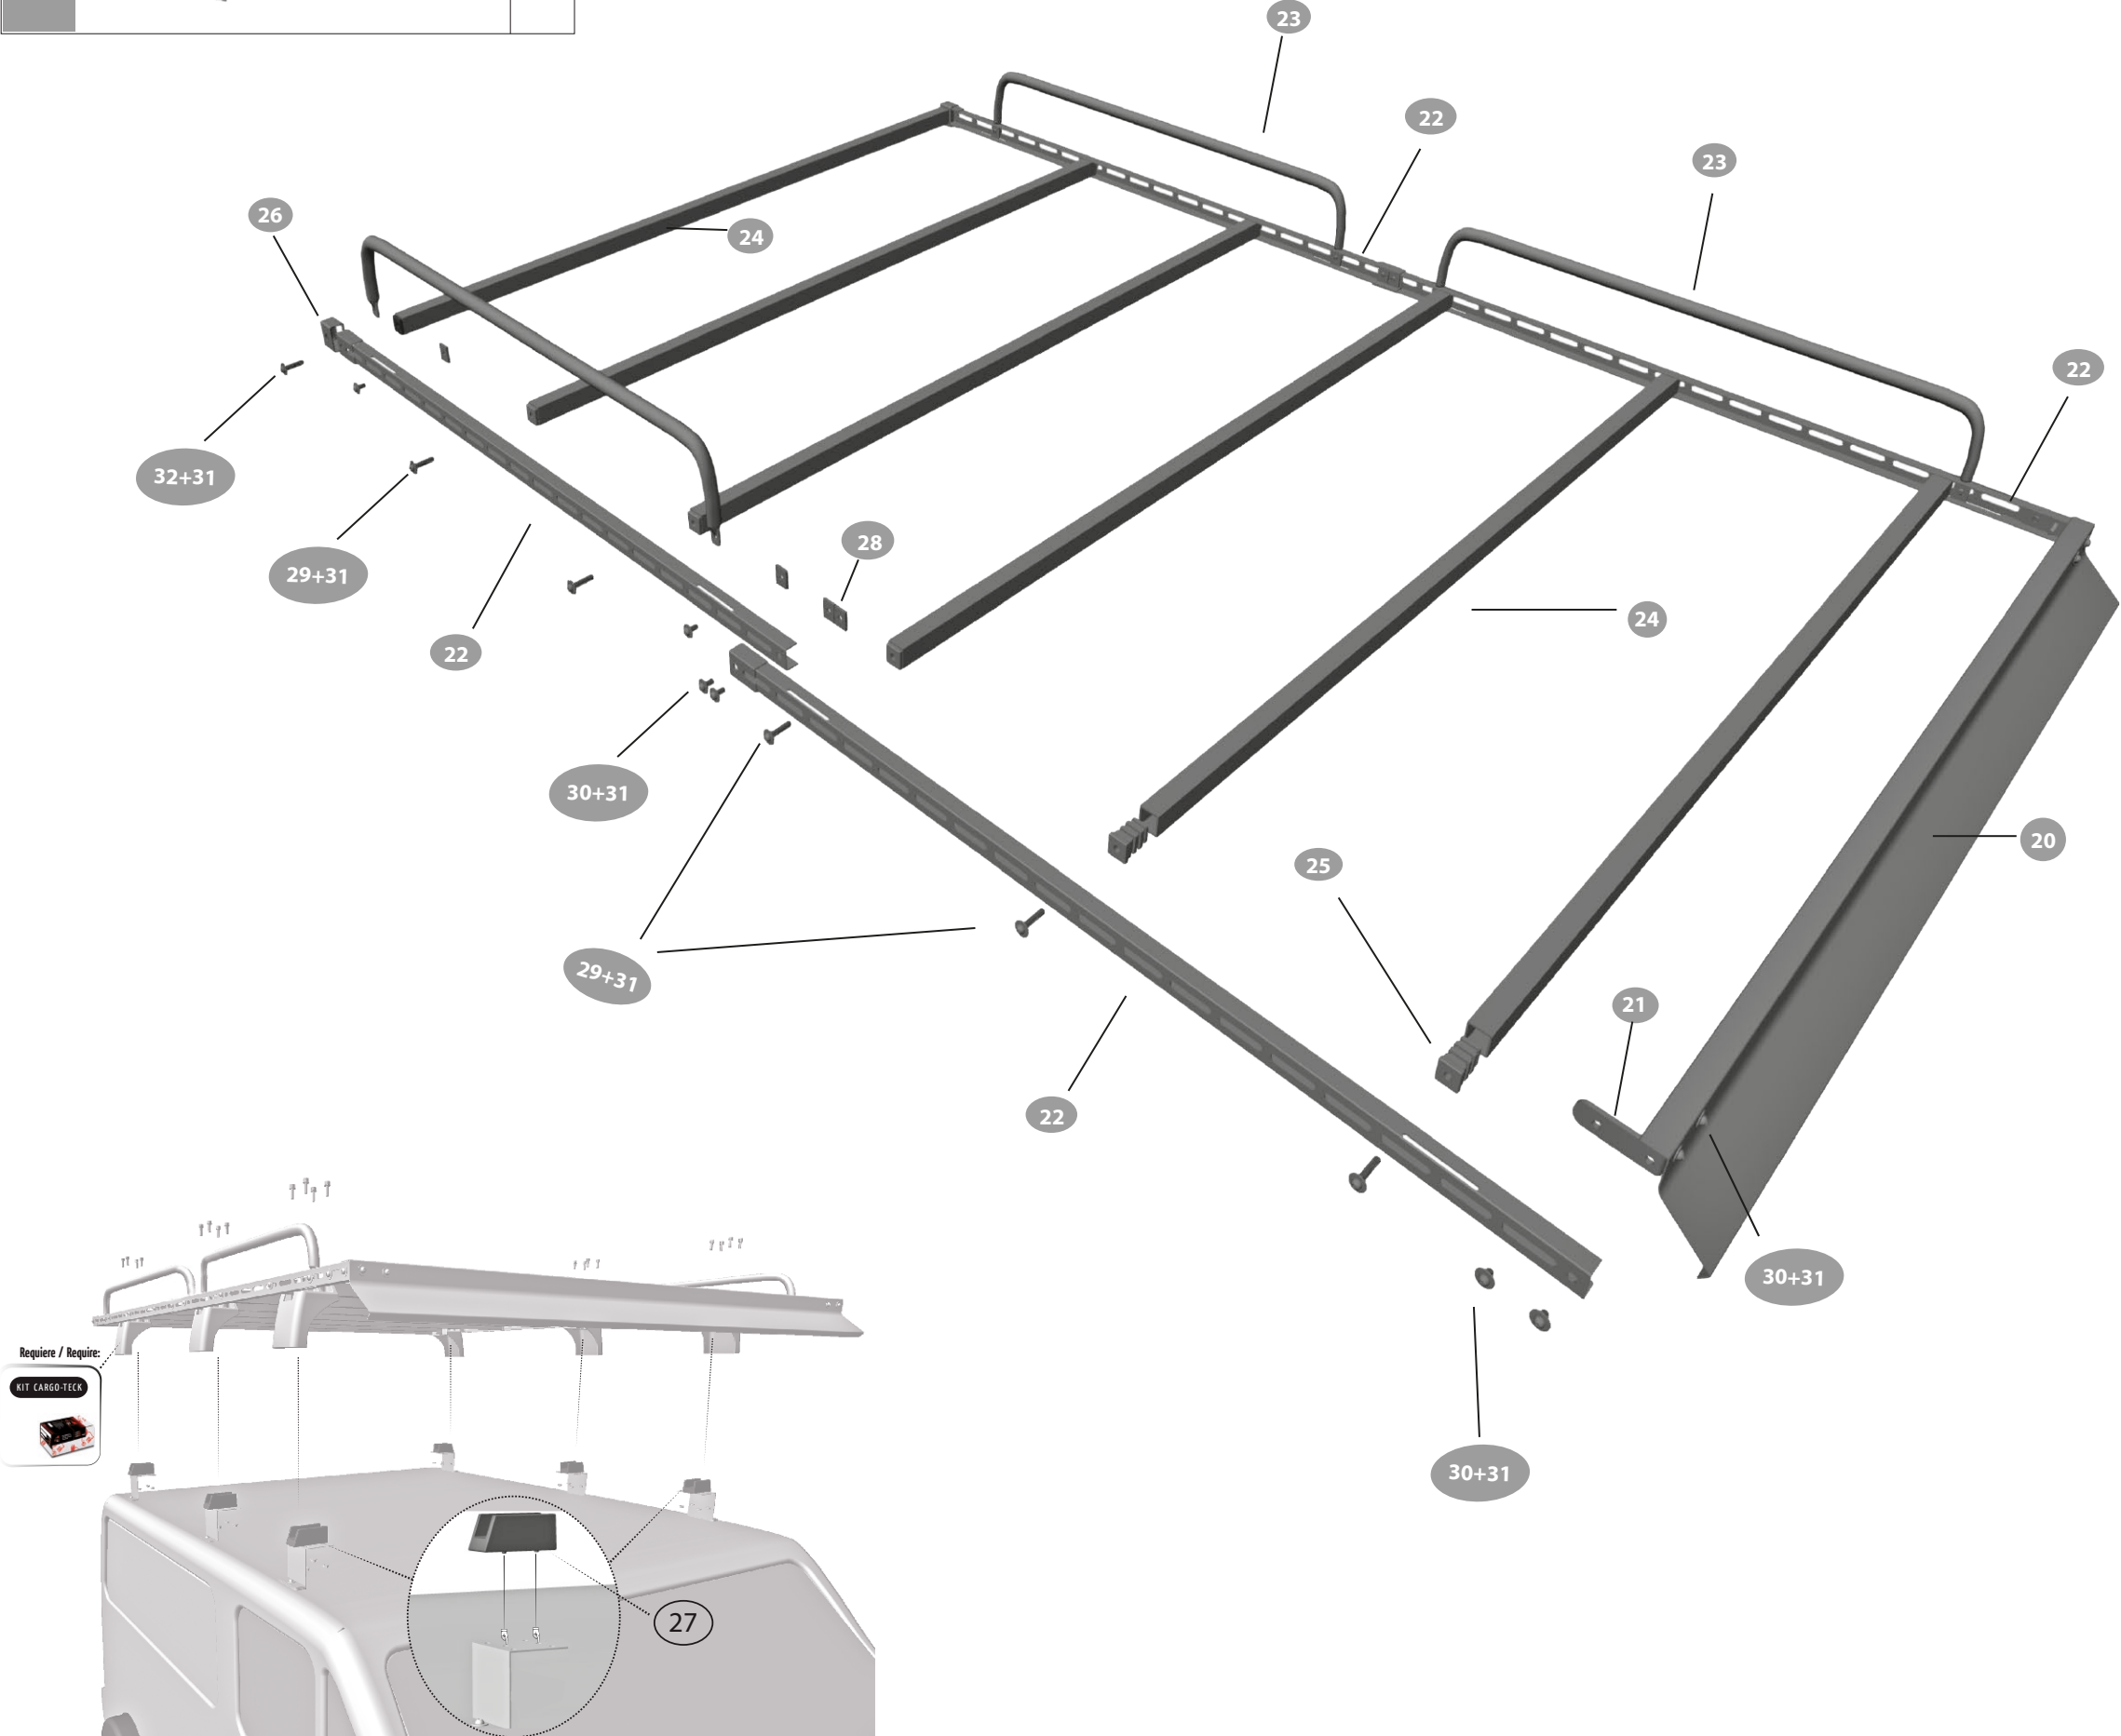


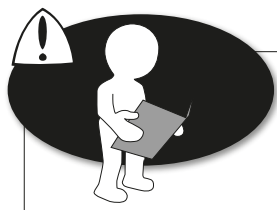


Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone




• CITROËN BERLINGO II L1 H1 (08-18)
• PEUGEOT PARTNER II L1 H1 (08-18)

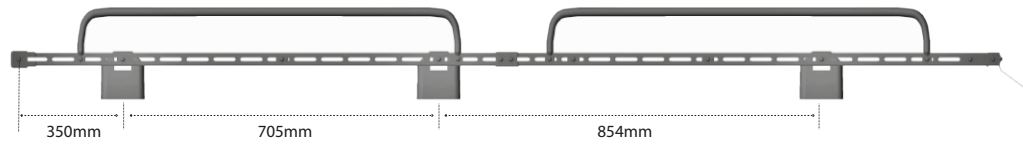


• CITROËN BERLINGO III (M) L1 H1 (2018->)
• FIAT DOBLÓ III / K9 (M) L1 H1 (2022->)
• OPEL COMBO E (M) L1 H1 (2018->)
• PEUGEOT PARTNER III (M) L1 H1 (2018->)
• TOYOTA PROACE CITY L1 H1 (2018->)

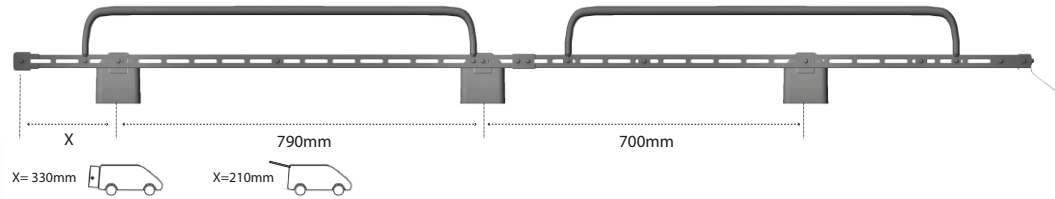


• CITROËN JUMPY II L1 H1 (07-13)
• FIAT SCUDO II L1 H1 (07-13)
• PEUGEOT EXPERT II L1 H1 (07-13)
• TOYOTA PROACE II L1 H1 (2013->)

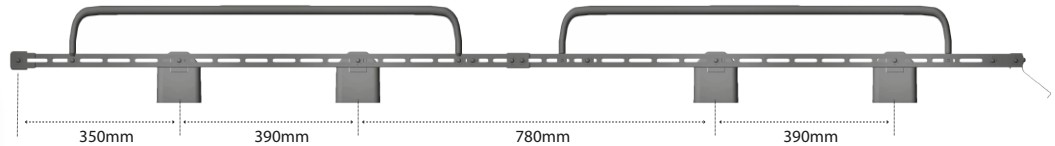


• NISSAN NV 200 (2009->)

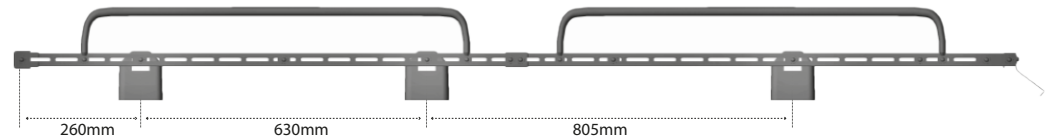


• FIAT DOBLÓ I L2 H1 (2007-2009)

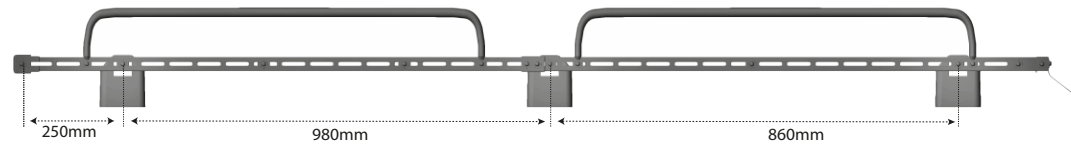


• FIAT DOBLÓ II L2 H1 (2010->)
• OPEL COMBO D L2 H1 (12-18)

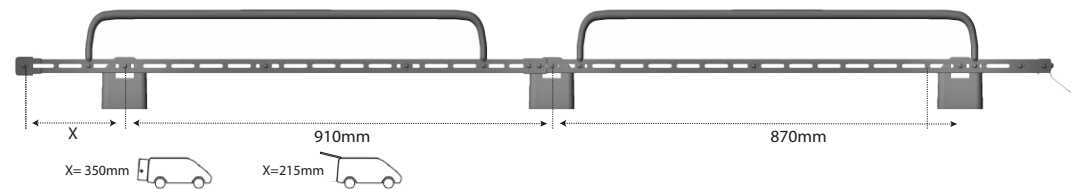

• TOYOTA LAND CRUISER J80 (90-97)

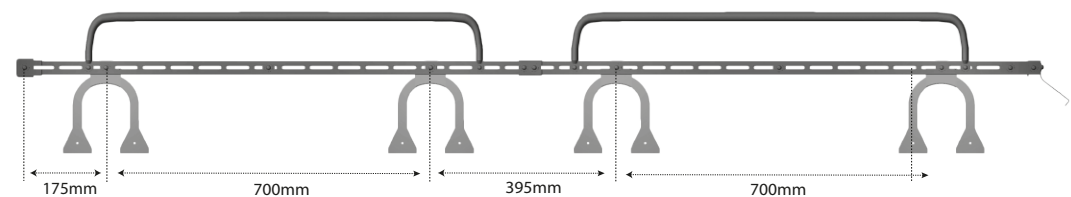


• VOLKSWAGEN ID. BUZZ L1-H1 (2022->)

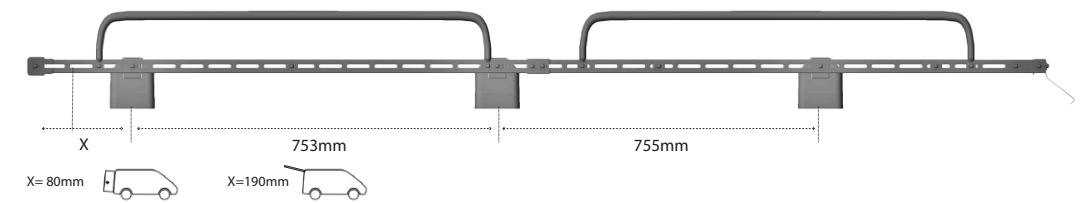


Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone


1

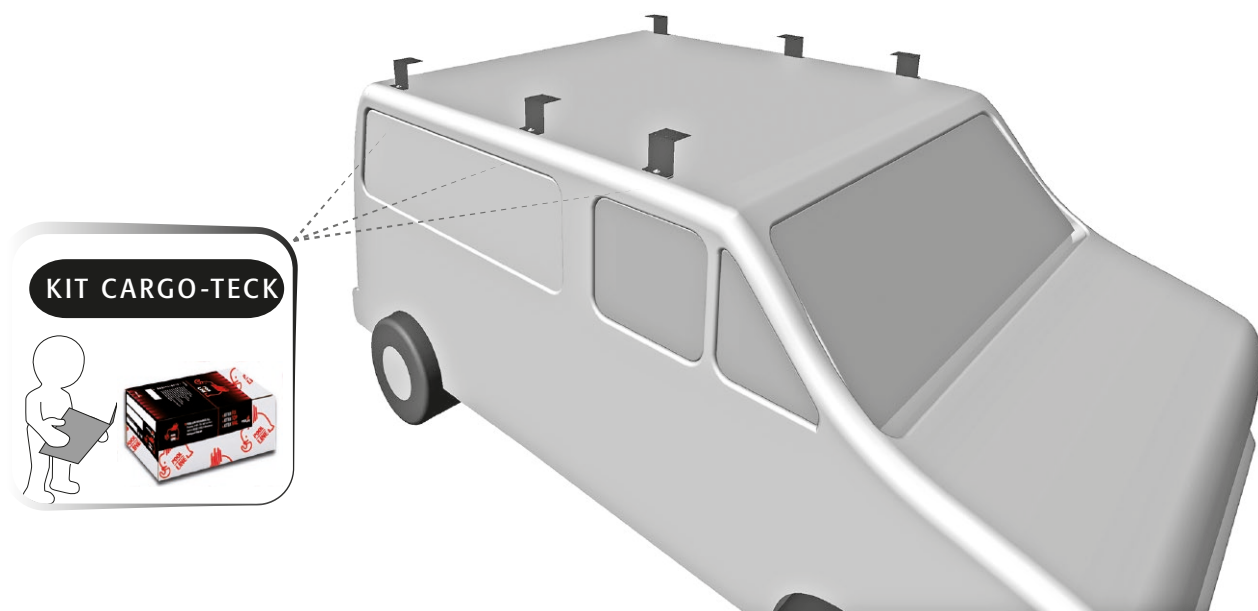


2


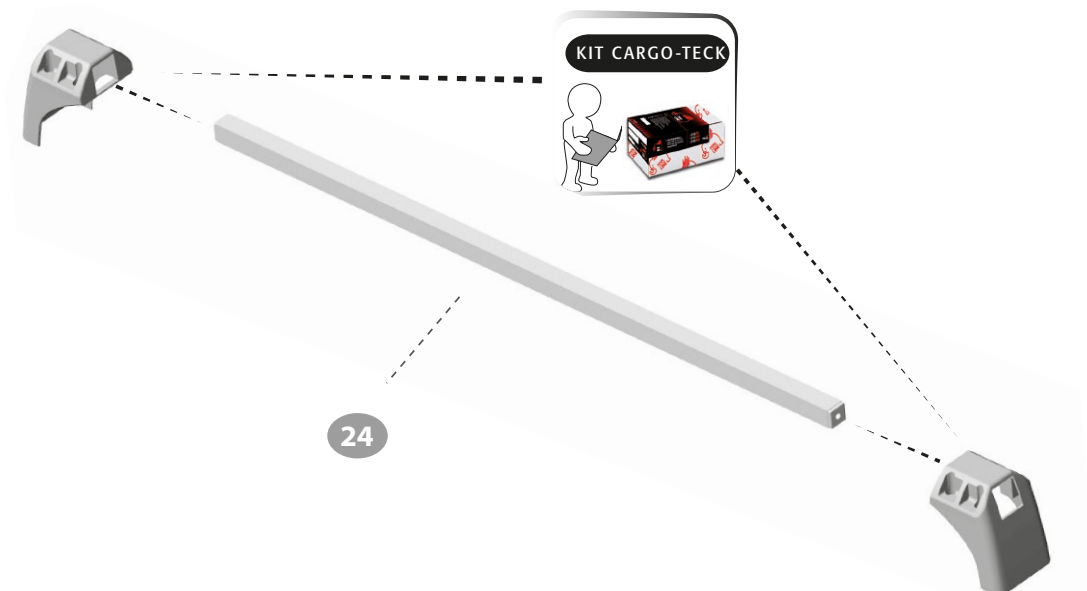


3

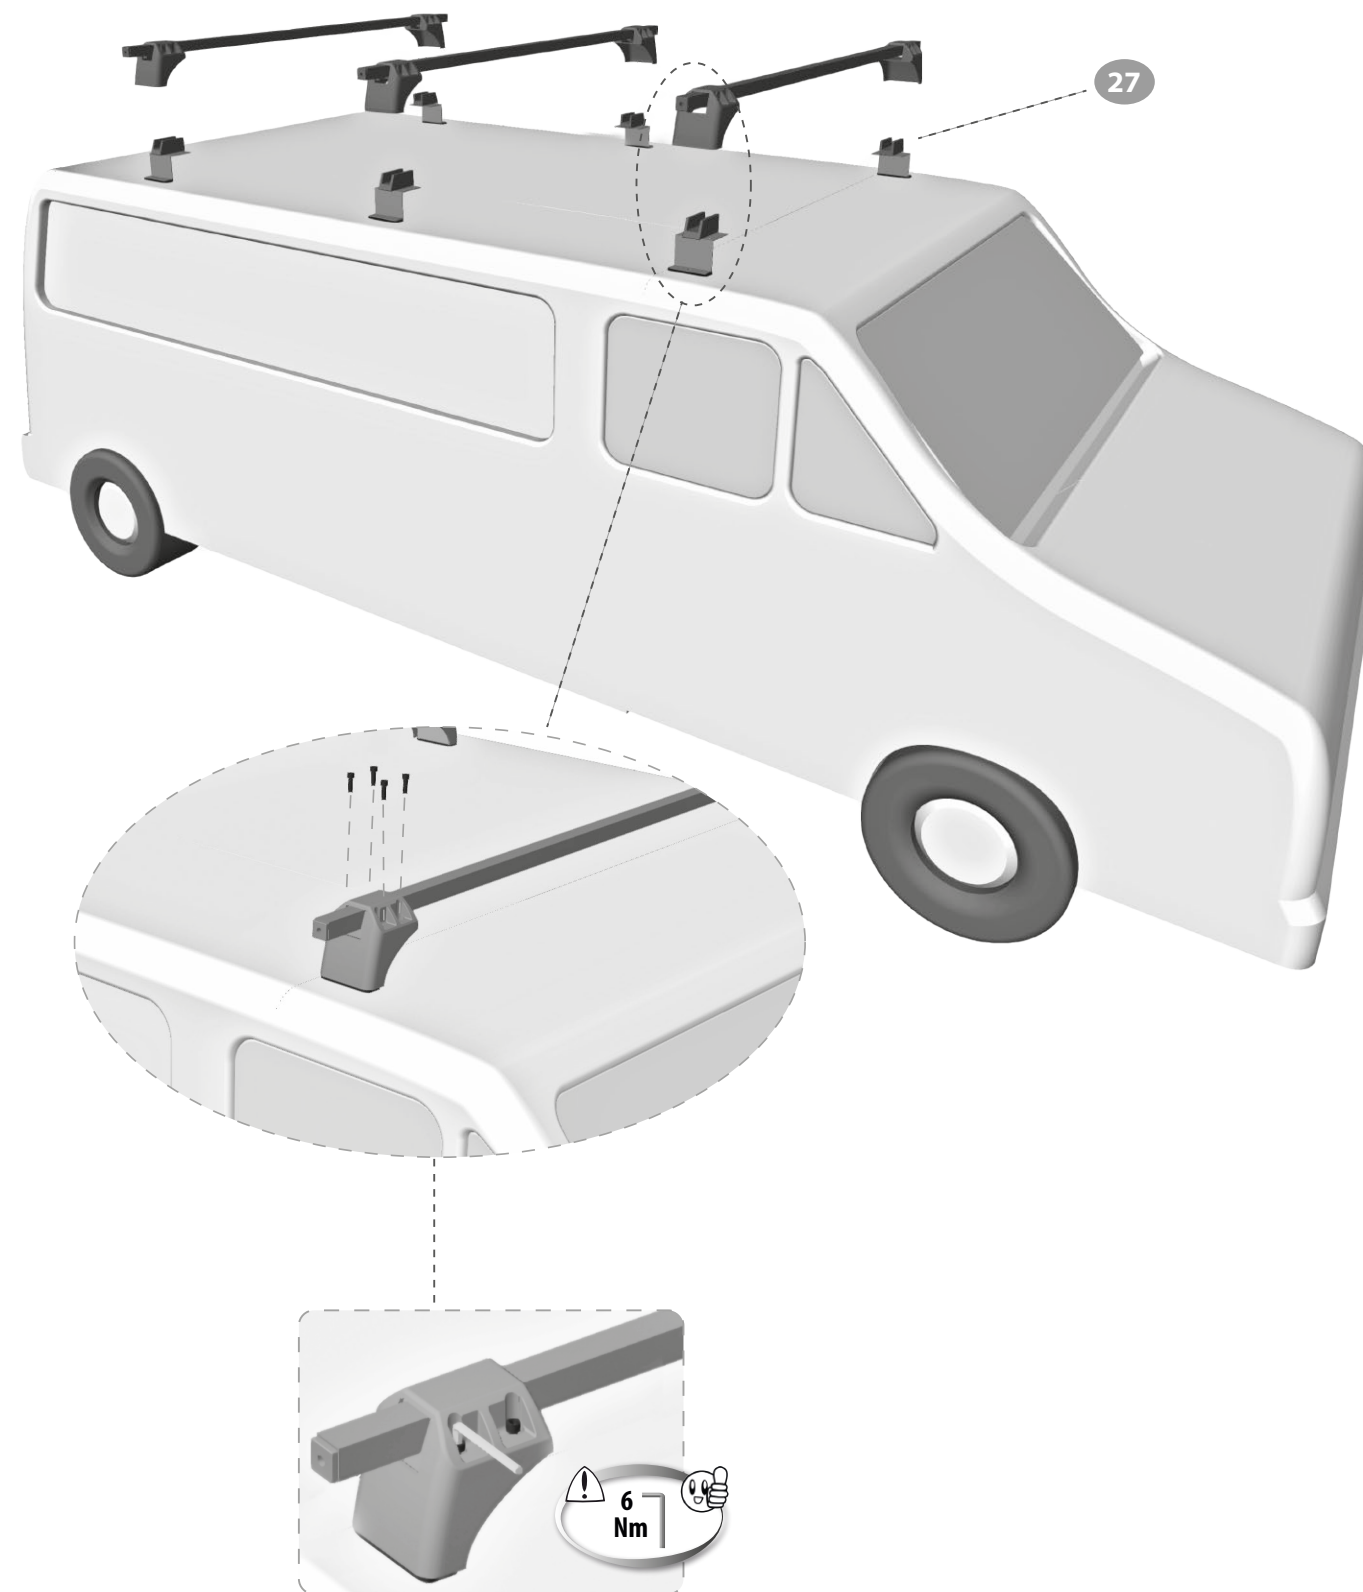


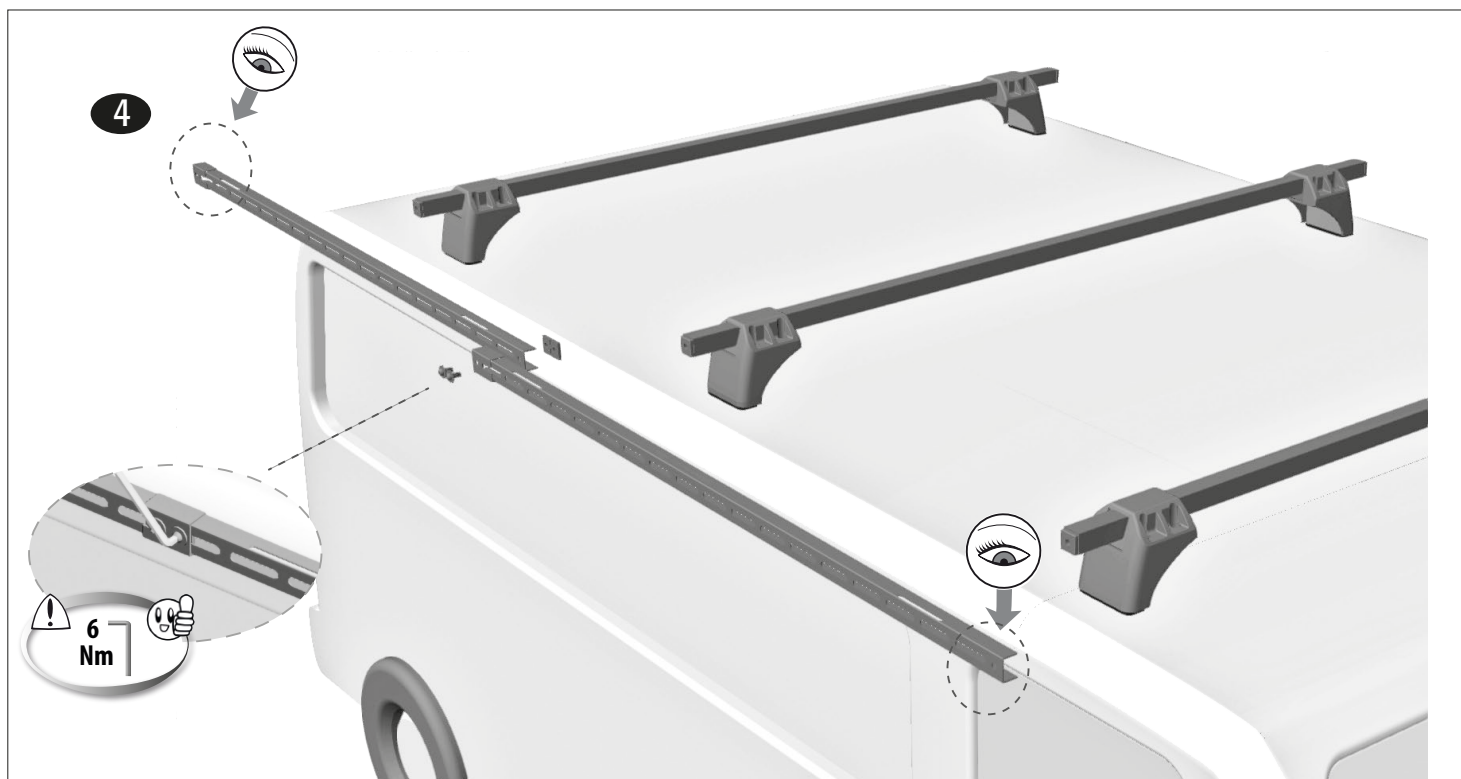


5

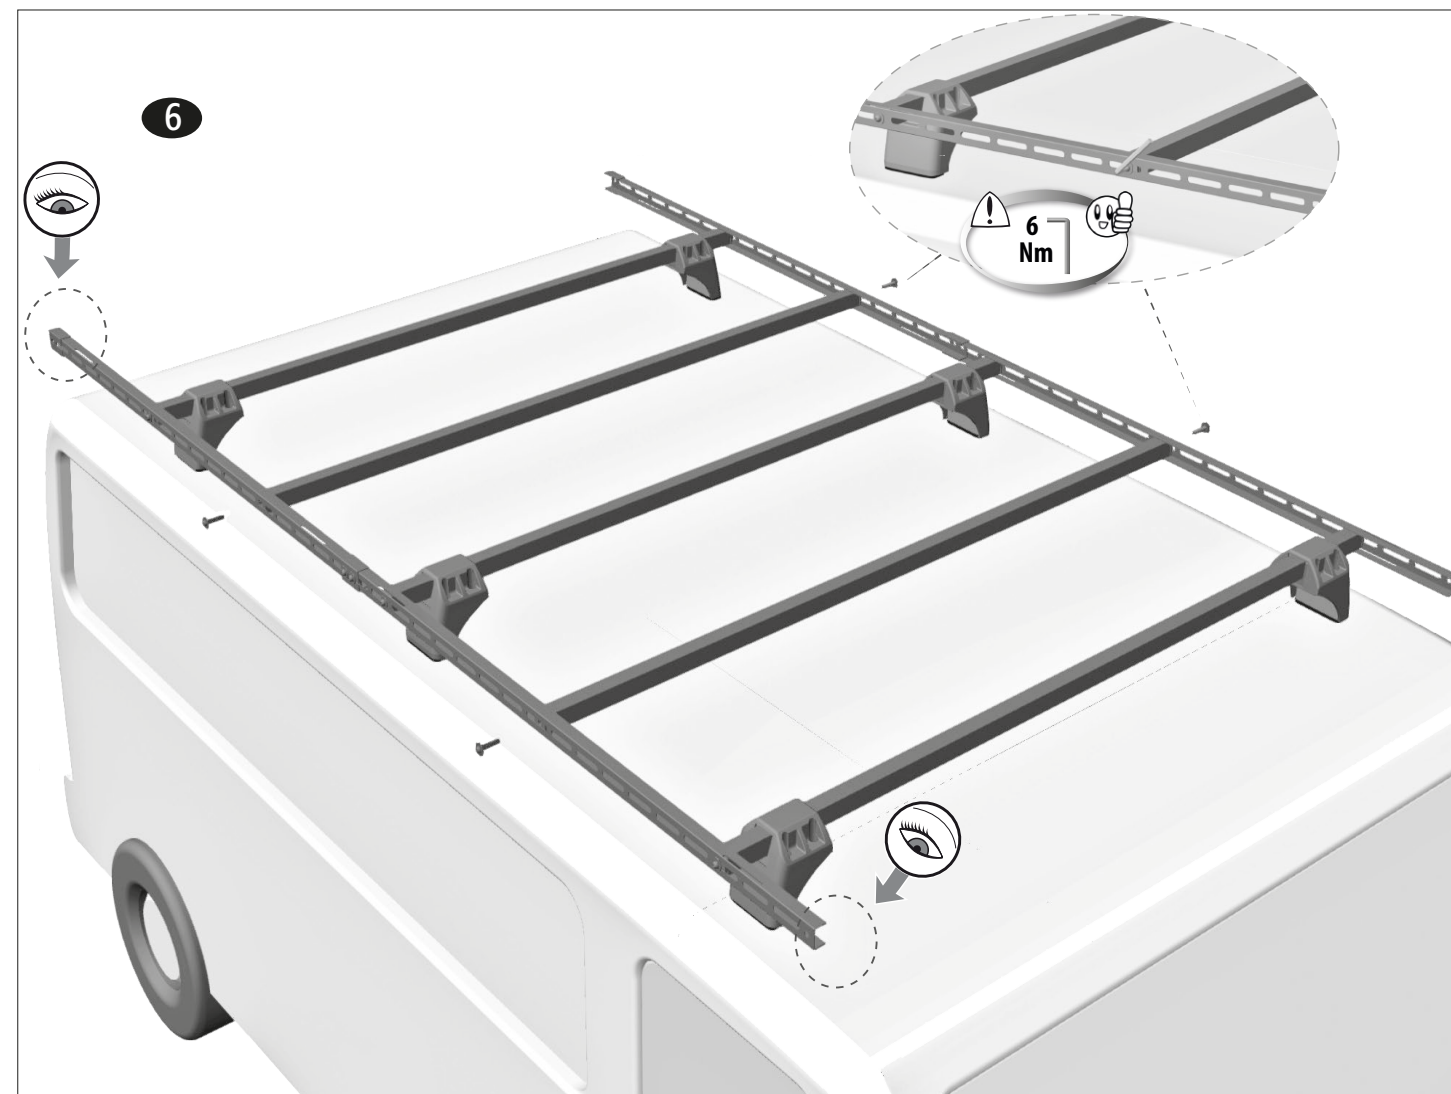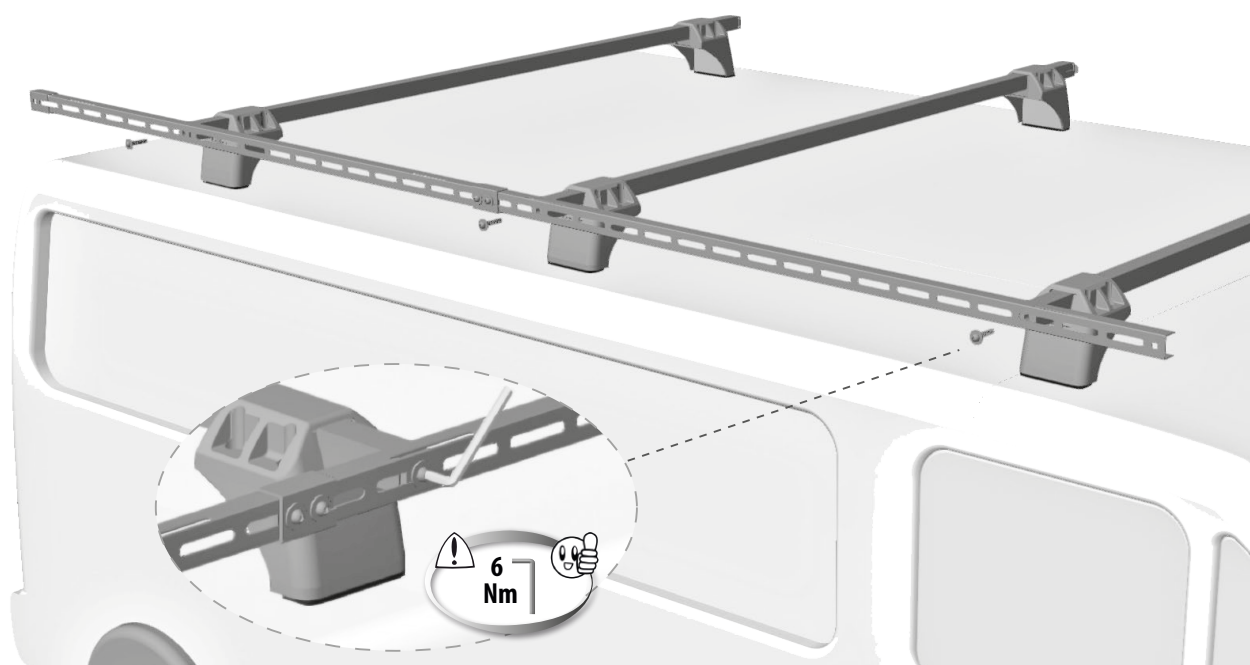



7









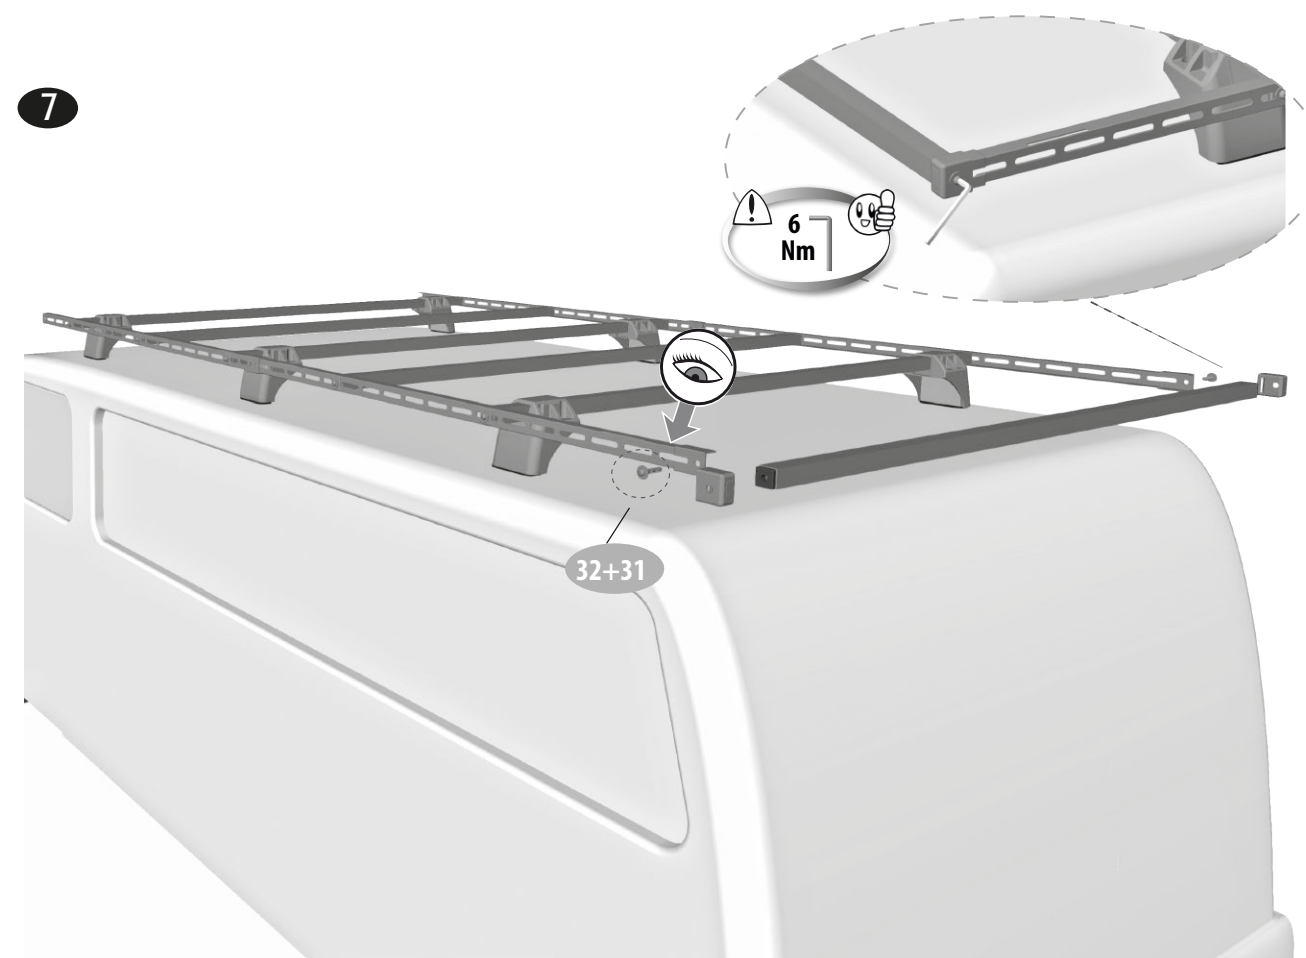



8

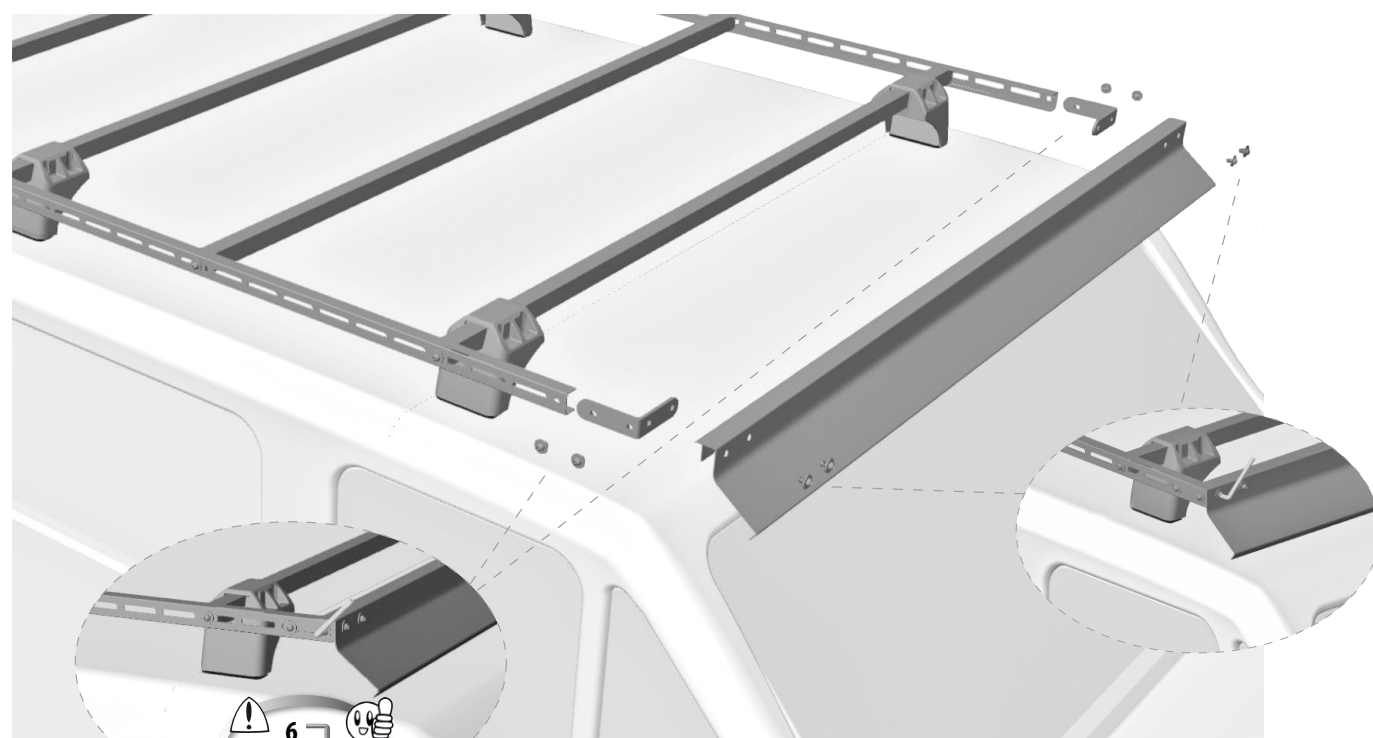

9

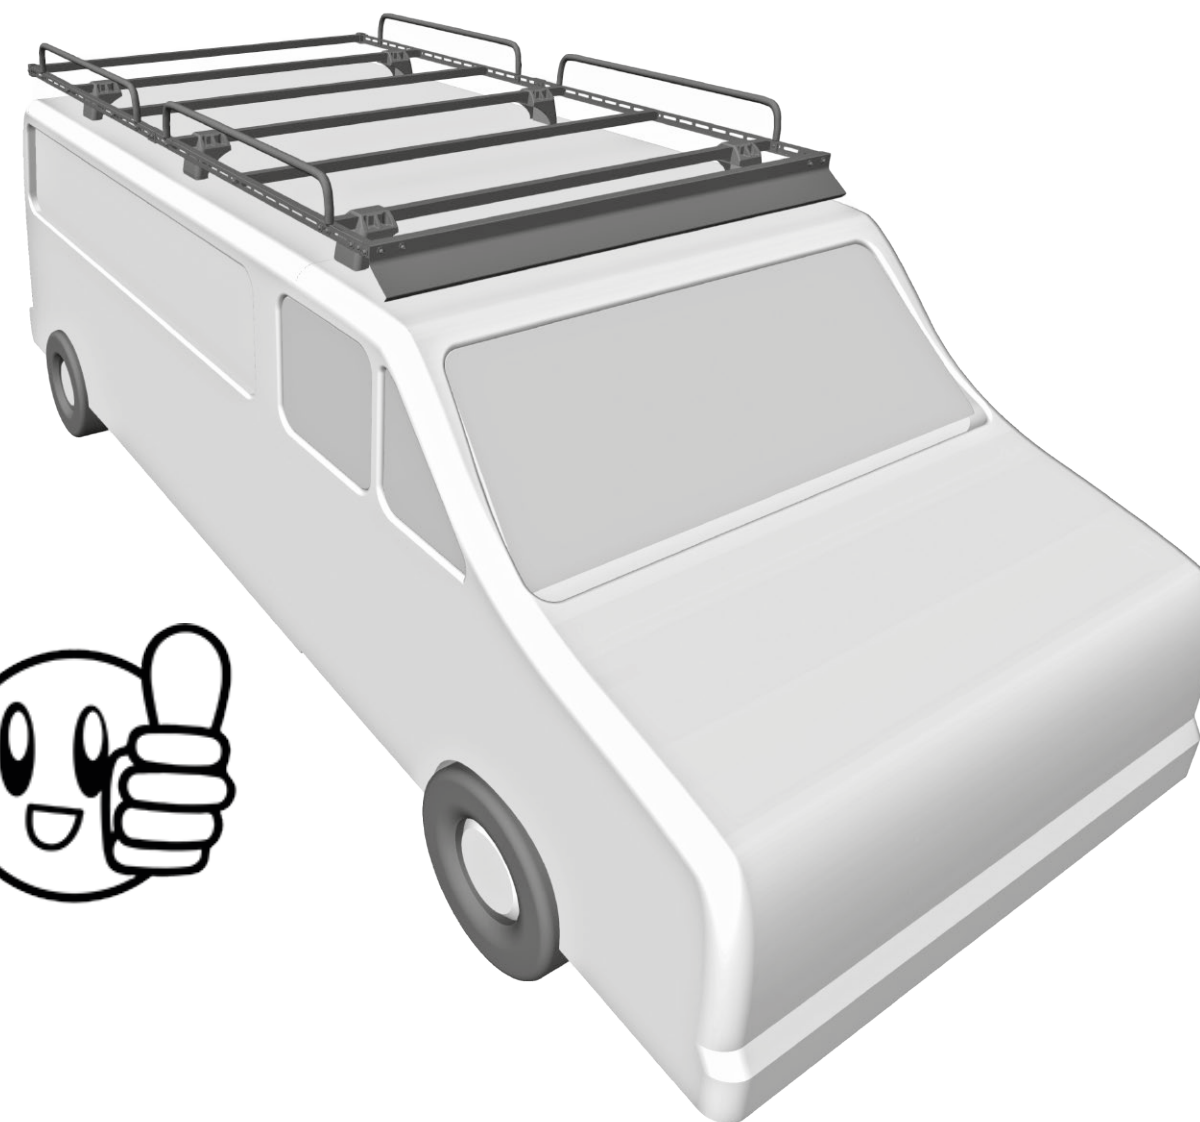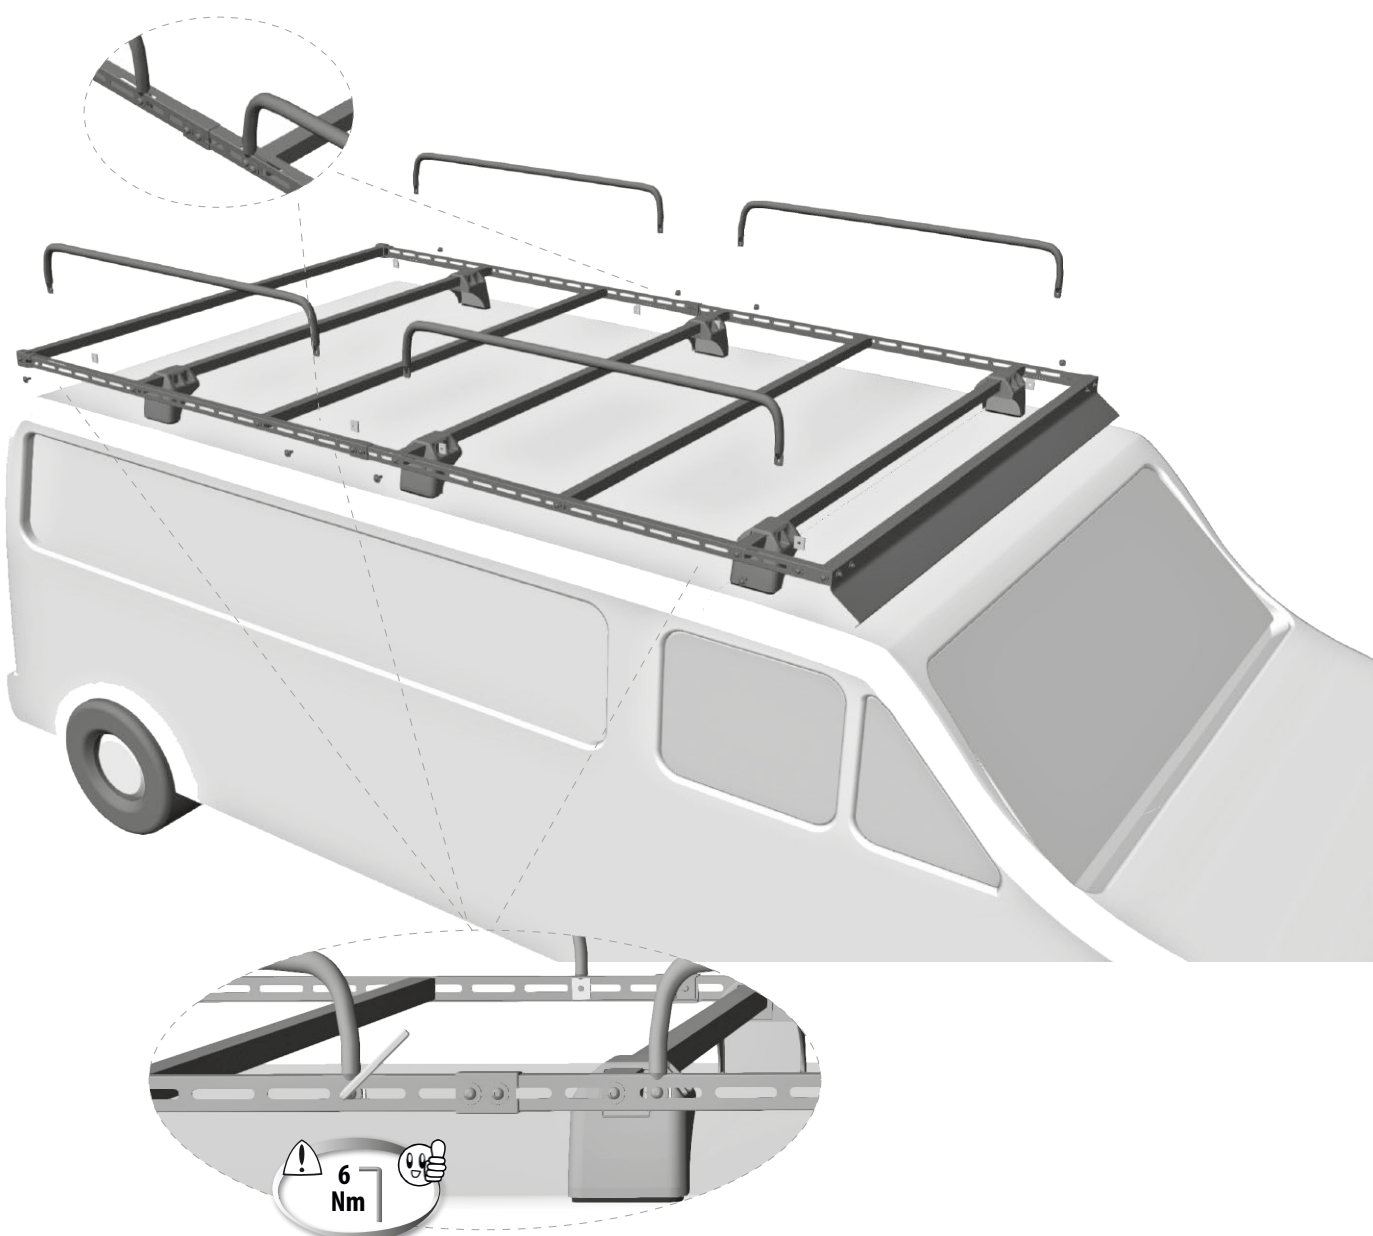

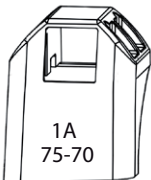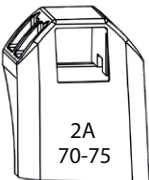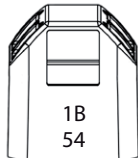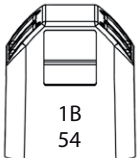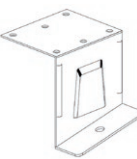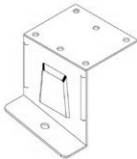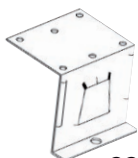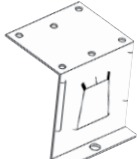N			Q			Q			Q
1			1+1		2		2		
2			1+1		2		2		
3							6		
4							1		

N	BO0061	Q
8	 DIN912 M6x20	24
9	 DIN125	24

N	BO0010 x 3	Q
10	 ISO 7380 M8x20	6
11	 Din125 Ø8	6

- E

Instrucciones de montaje

Kit de fijación
- C

Instruccions de muntatge

Kit de fixació
- GB

Assembly instrucctions

Fixation Kit
- F

Instruction de montage

Kit fixation
- D

Montageanleitung

Stützfuß-Kit
- PT

Instruções de montagem

Kit fixação
- I

Istruzioni di montaggio

Kit di fissaggio
- PL

Instrukcja montażu

Element mocujący
- CZ

Montážní návod

Fixační kit
- HU

Szerelési Utasítás

Rögzítő készlet
- RO

Instrucțiuni de montaj


Kit de fixare
- HR

Detaljne upute

Kit za montažu
- TU


Öncelikli montaj

Montaj kiti

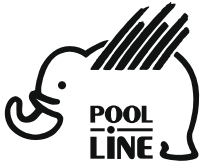


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net


Nº HOMOLOGACIÓN: **E9** 26R-03.1043

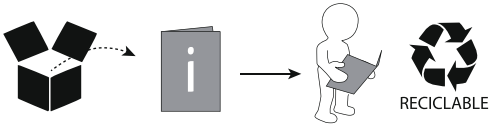

121081


Rv: 2/2023

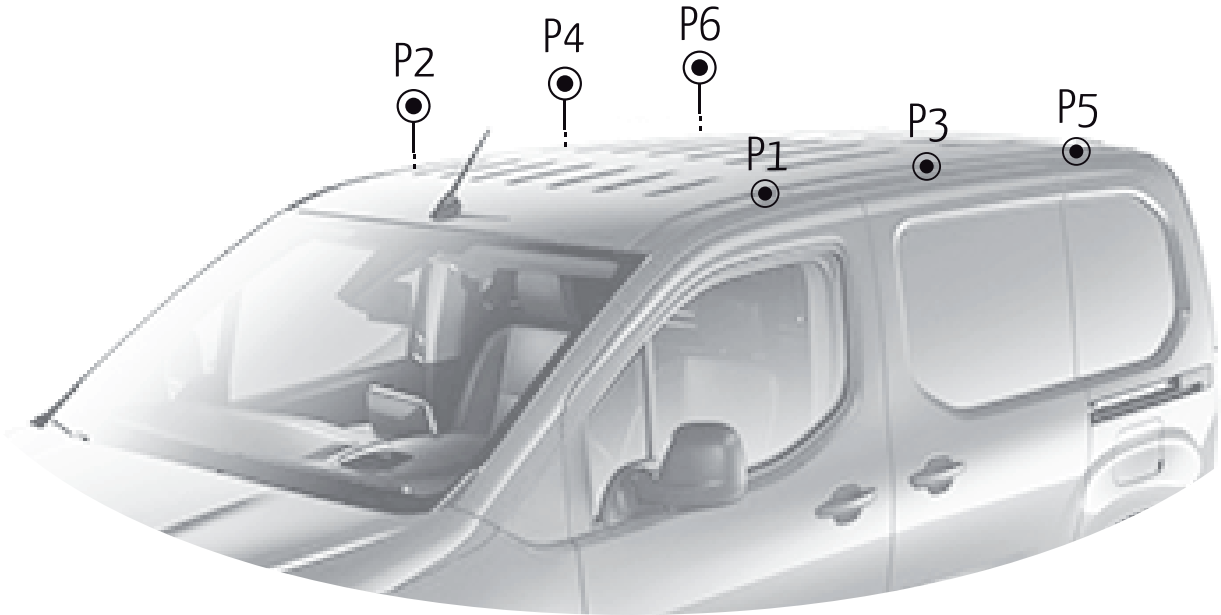


					P1	P2		P3	P4		P5	P6
CITROËN												
BERLINGO III (M)	L1	H1	2018->	B00010	225+1A	226+2A		224+1B	224+1B		220+1B	220+1B
FIAT												
DOBLÓ III/K9 (M)	L1	H1	2022->	B00010	225+1A	226+2A		224+1B	224+1B		220+1B	220+1B
OPEL												
COMBO E (M)	L1	H1	2018->	B00010	225+1A	226+2A		224+1B	224+1B		220+1B	220+1B
PEUGEOT												
PARTNER III (M)	L1	H1	2018->	B00010	225+1A	226+2A		224+1B	224+1B		220+1B	220+1B
TOYOTA												
PROACE CITY (M)	L1	H1	2019->	B00010	225+1A	226+2A		224+1B	224+1B		220+1B	220+1B




Limpieza pre-instalación
Pre-installation cleaning

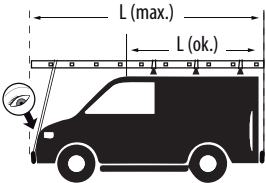

Revisar par de apriete
Check torque



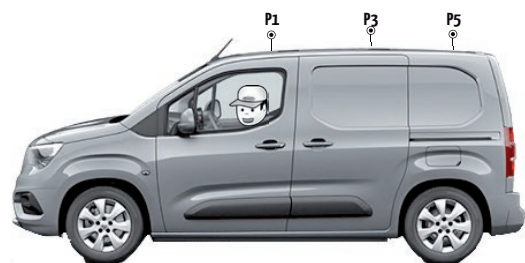


TALLA M (L1)

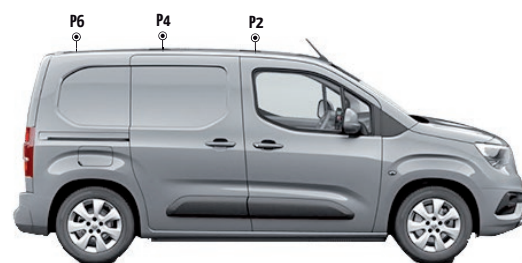

P1	P2	P3	P4	P5	P6
225+1A	226+2A	224+1B	224+1B	220+1B	220+1B
225+1A	226+2A	224+1B	224+1B	220+1B	220+1B
225+1A	226+2A	224+1B	224+1B	220+1B	220+1B

Pag. 1

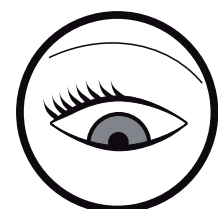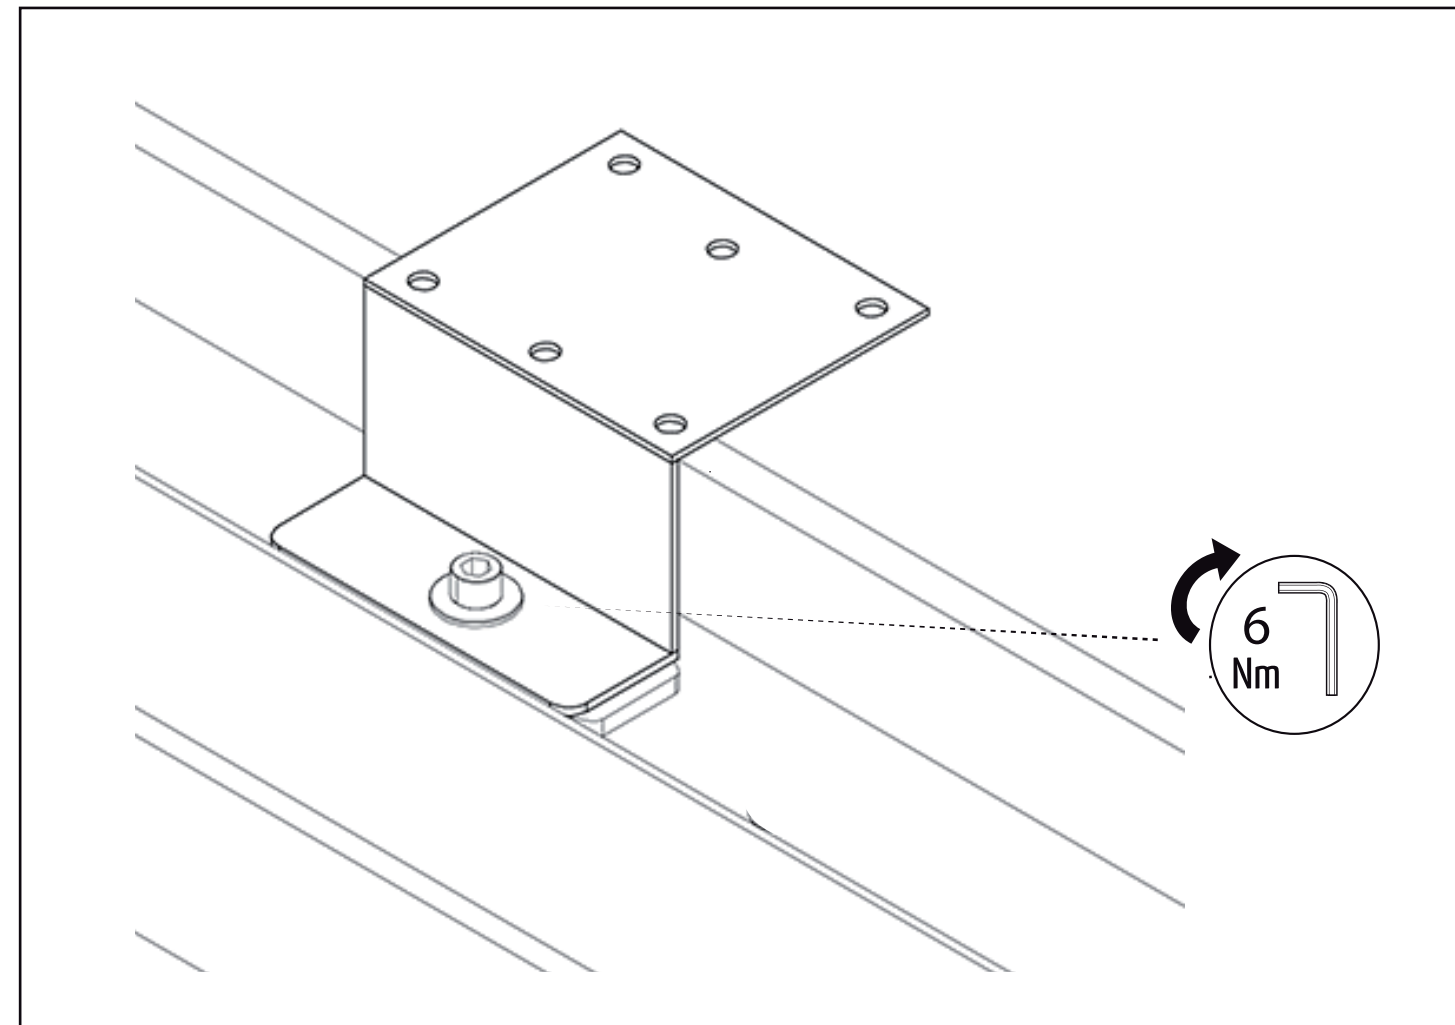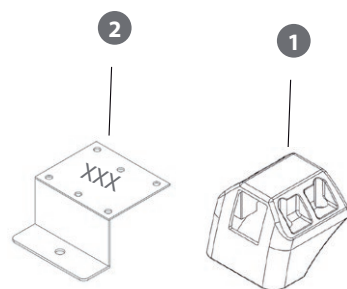

←→	↻	P1	P2
OX	B000010		
OX-	B000010		
	B0000Y		

Pag. 1

