


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

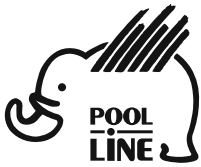

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net



200




Nº HOMOLOGACIÓN: **E9**I26R-03.1042




123513

Rv: 05/2019

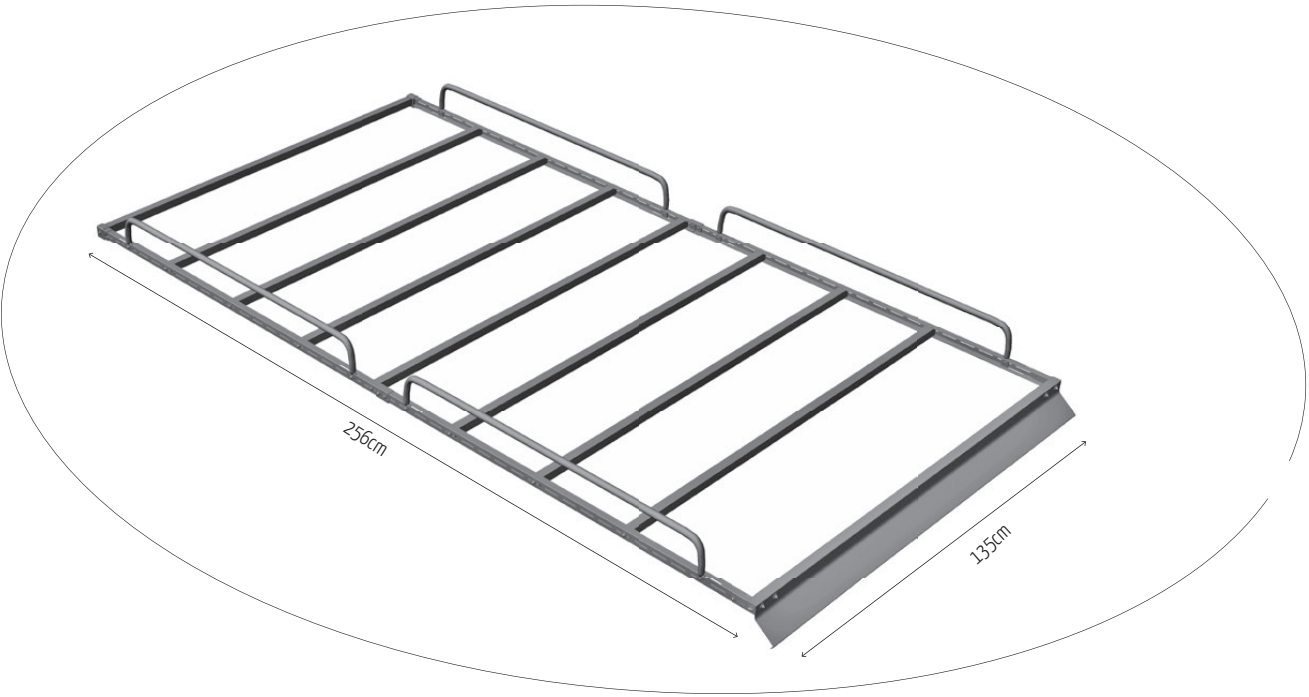




Limpieza pre-instalación
Pre-installation cleaning

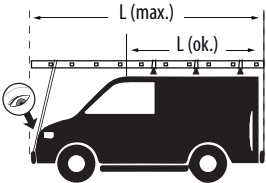

Revisar par de apriete
Check torque

N		Q
1	 S-1350	1
2	 L-1300	4
3	 B-1022	4
4	 T-1335	8
5		16
6		2
7		2
8		8


N		Q
11		1
12	 CHA-M8	12
13	 ISO 7380 M8x40	16
14	 ISO 7380 M8x16	20
15	 DIN 125 Ø 8	36

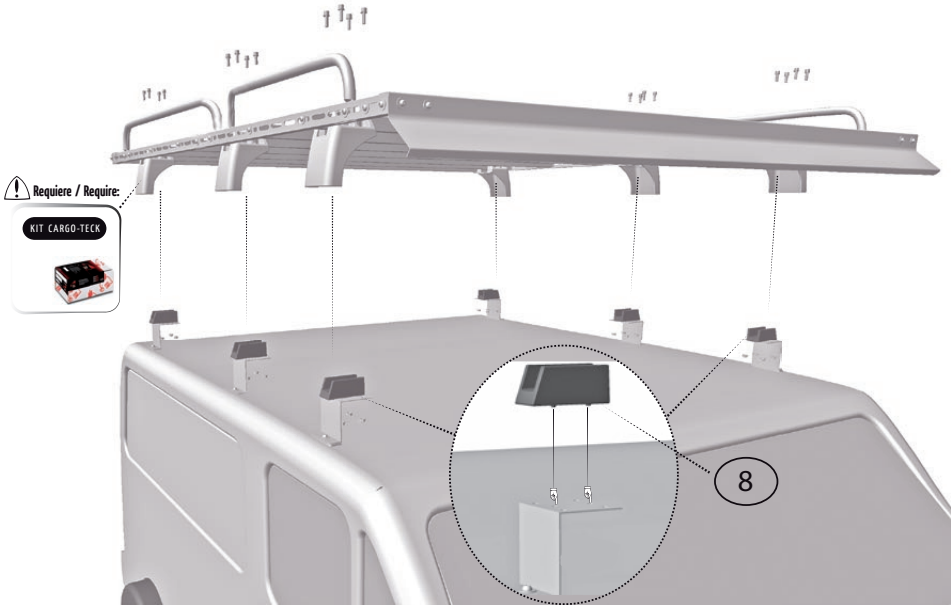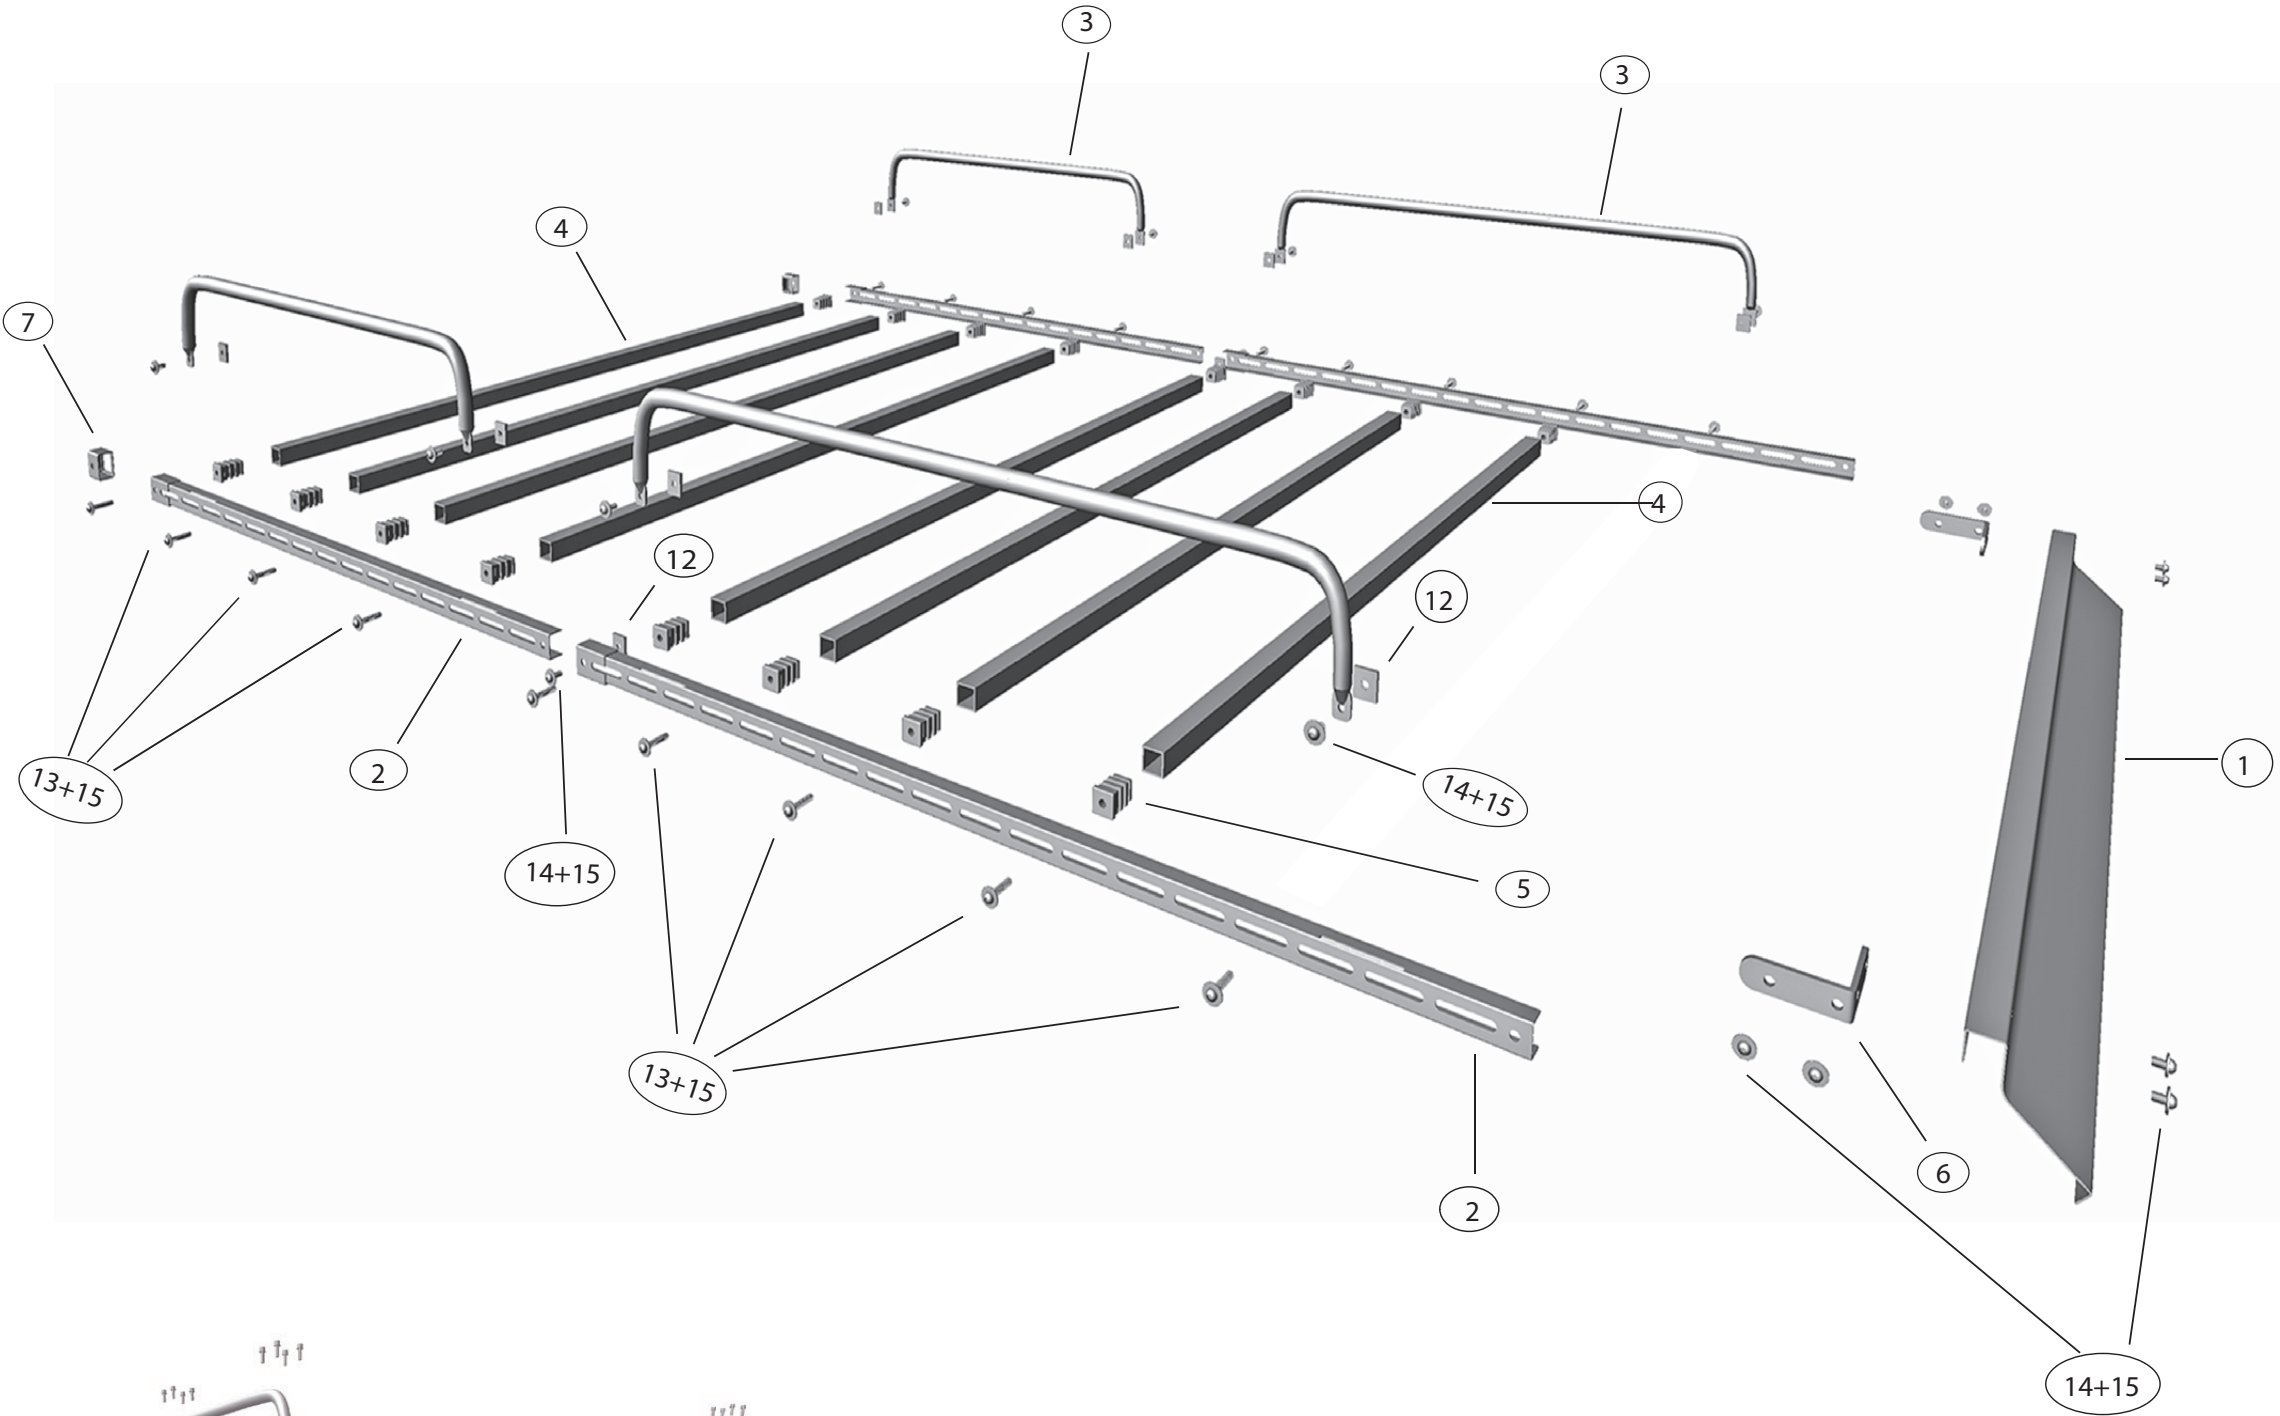



CITROËN BERLINGO II L2H1 08-18

PEUGEOT PARTNER II L2H1 08-18

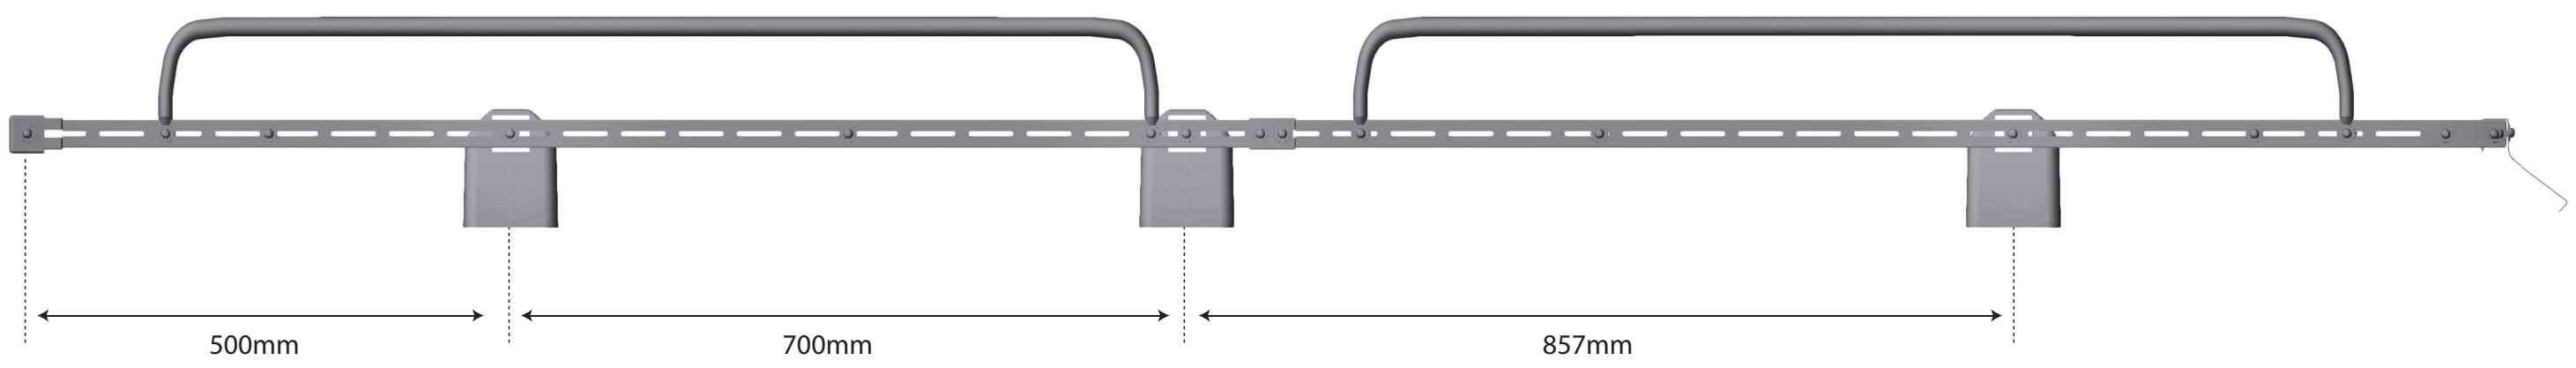


CITROËN JUMPY II L2H1 (07-15)

PEUGEOT EXPERT II L2H1 (07-15)

FIAT SCUDO II L2H1 (07-15)

TOYOTA PROACE II L2H1 (07-15)

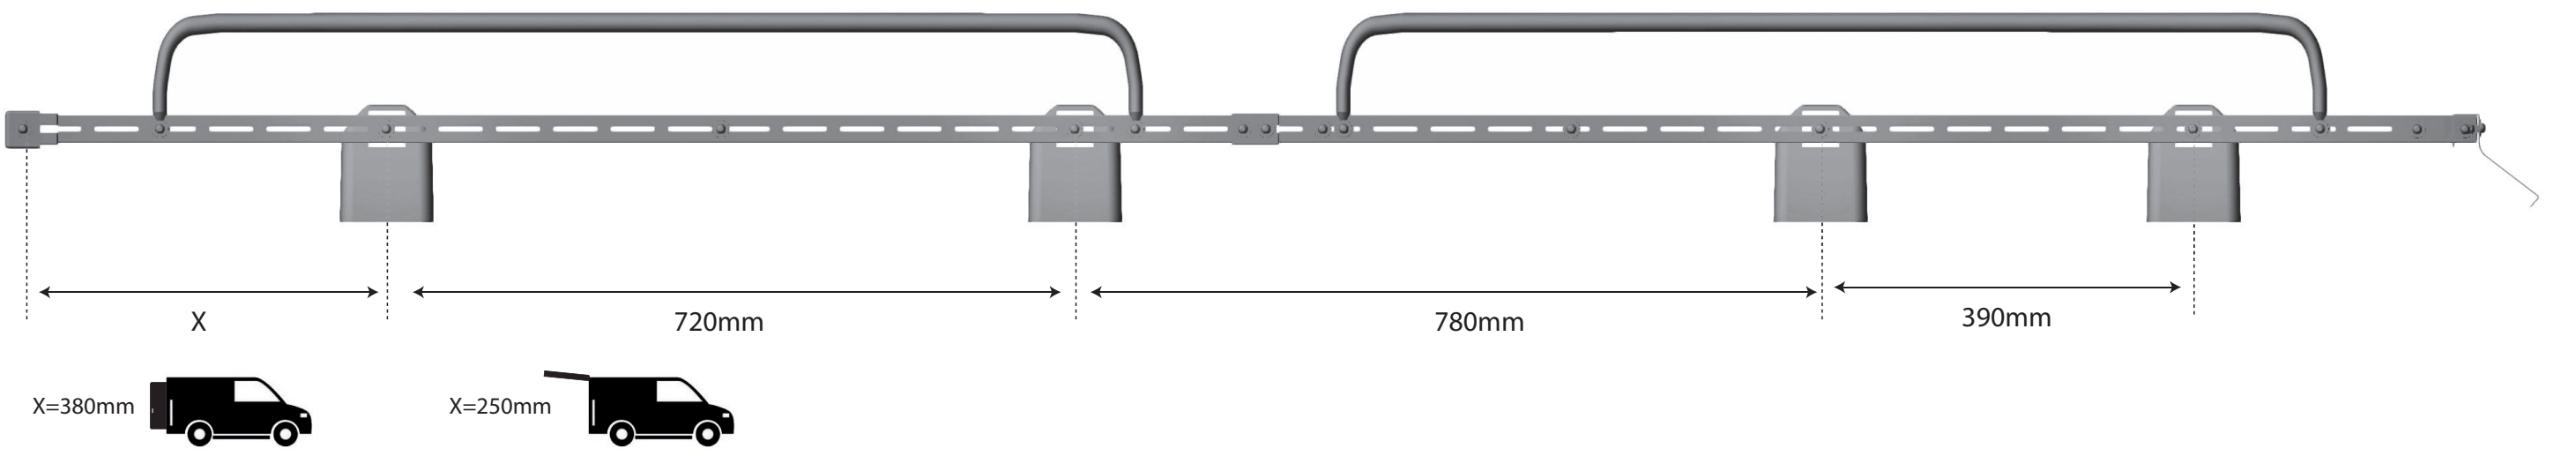





NISSAN PRIMASTAR L2-H2 (02-14)

OPEL VIVARO A L2-H2 (02-14)

RENAULT TRAFIC II L2-H2 (02-14)

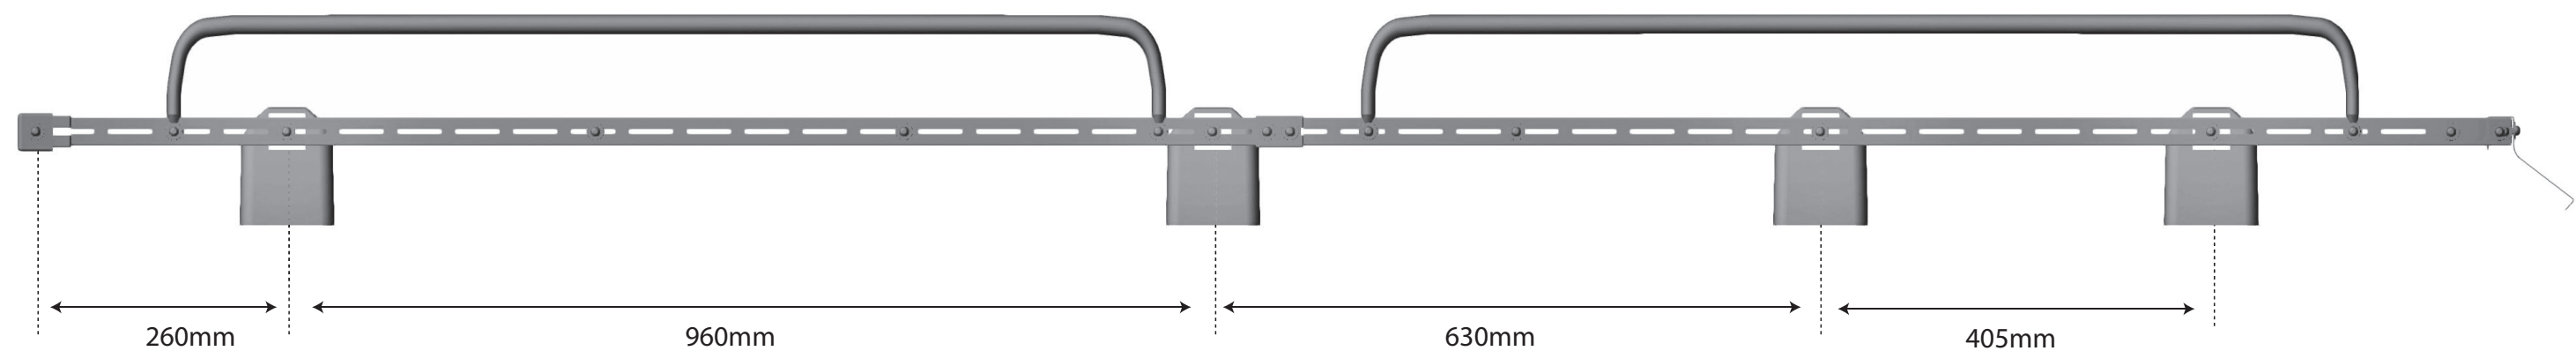

OPEL MIDI I/II (80-01)

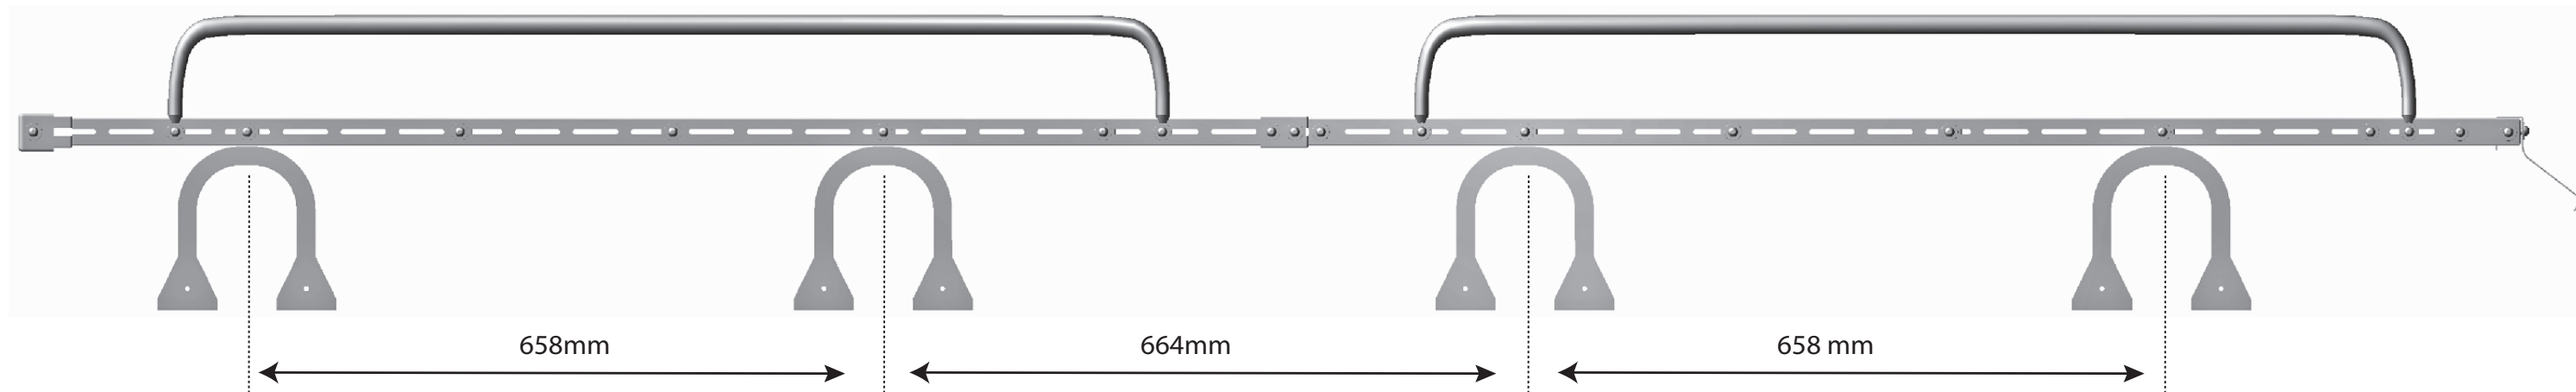





CITROËN BERLINGO III (XL) L2 (2018)


OPEL COMBO E (XL) L2 (2018)

PEUGEOT PARTNER III (XL) L2 (2018)

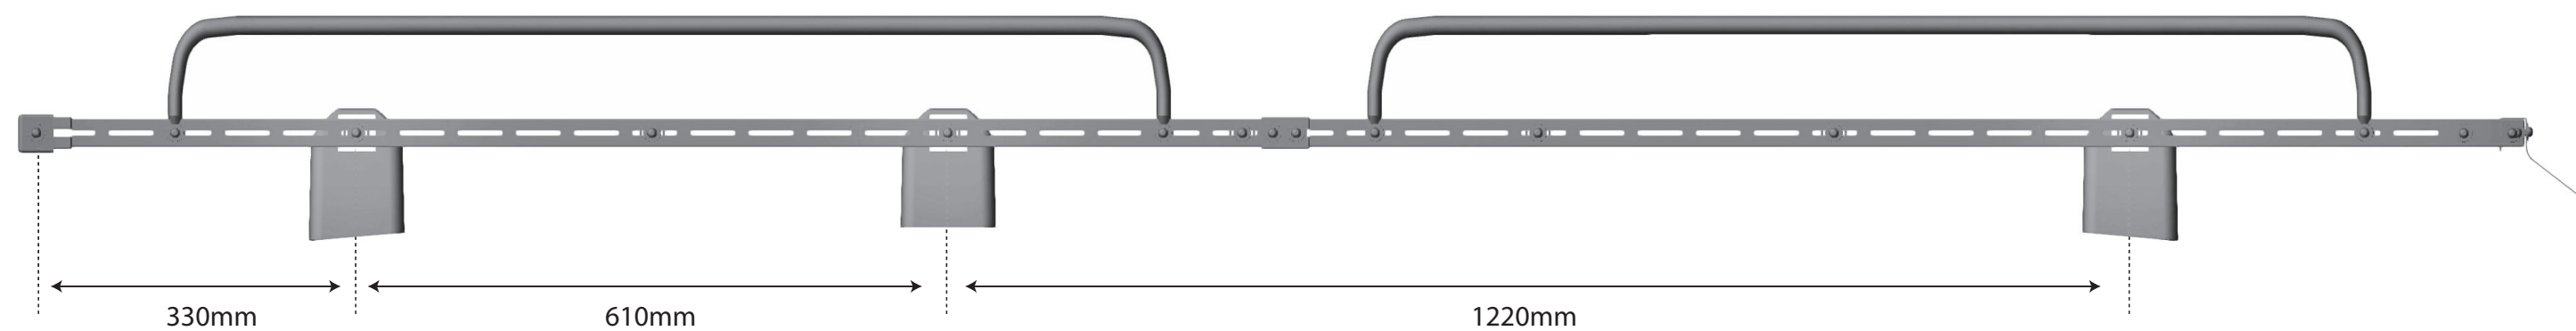


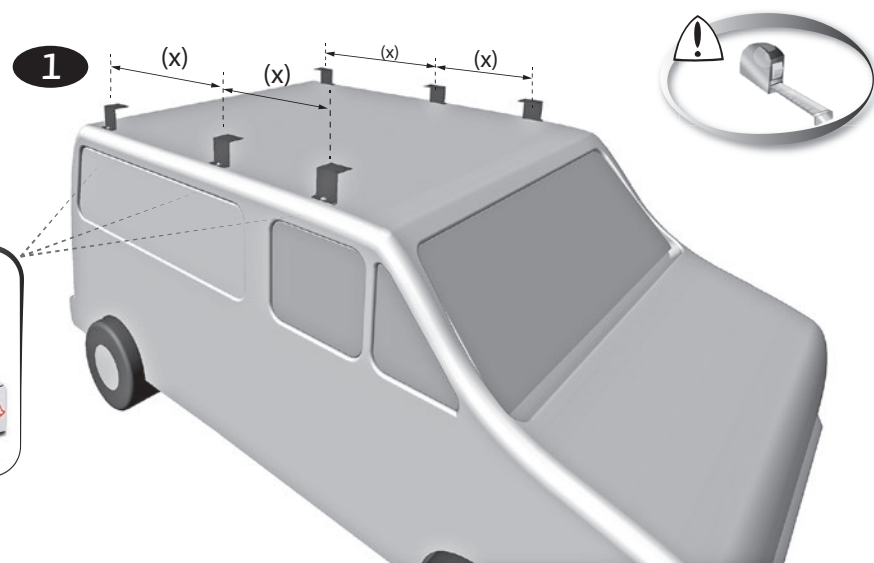


2

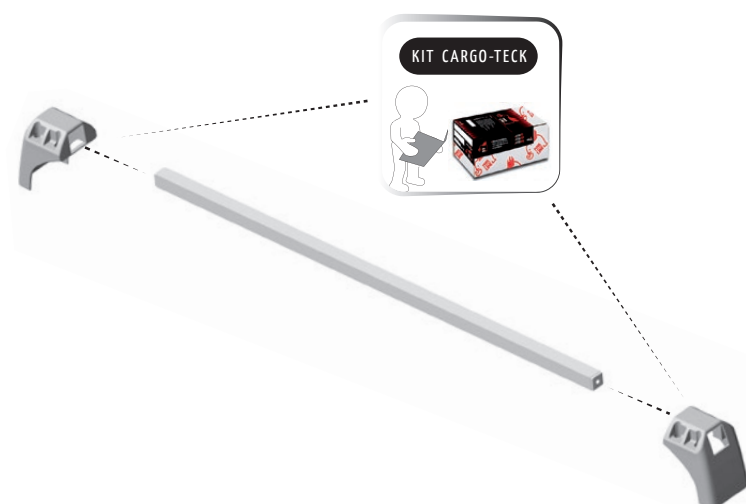


3

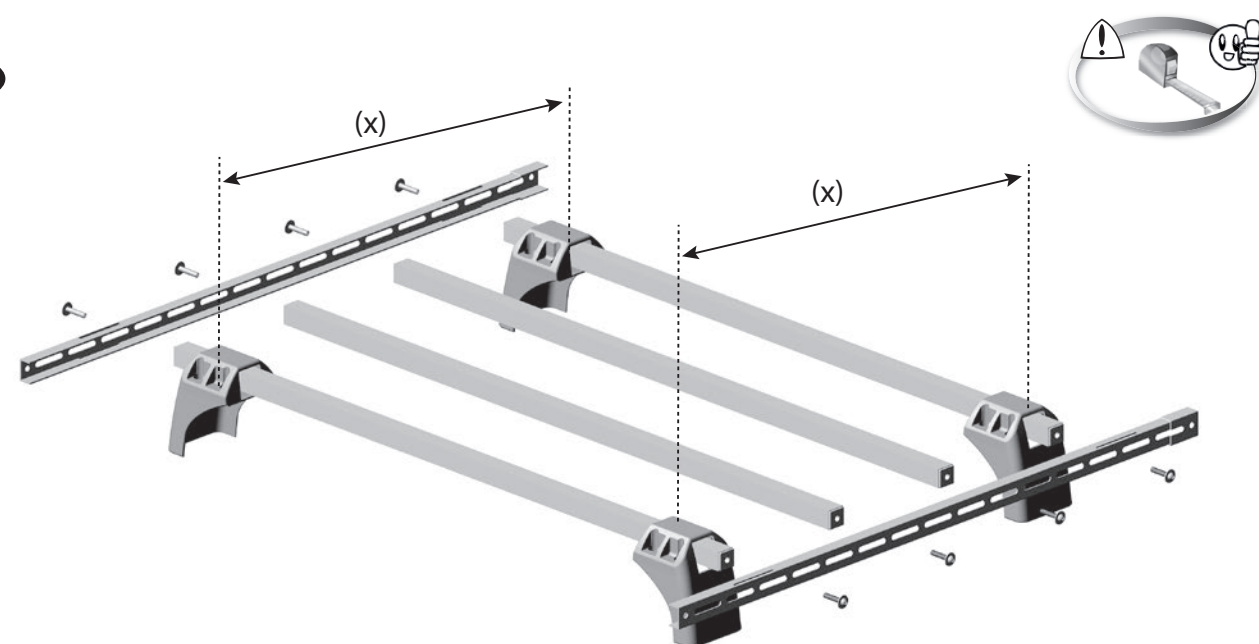


4

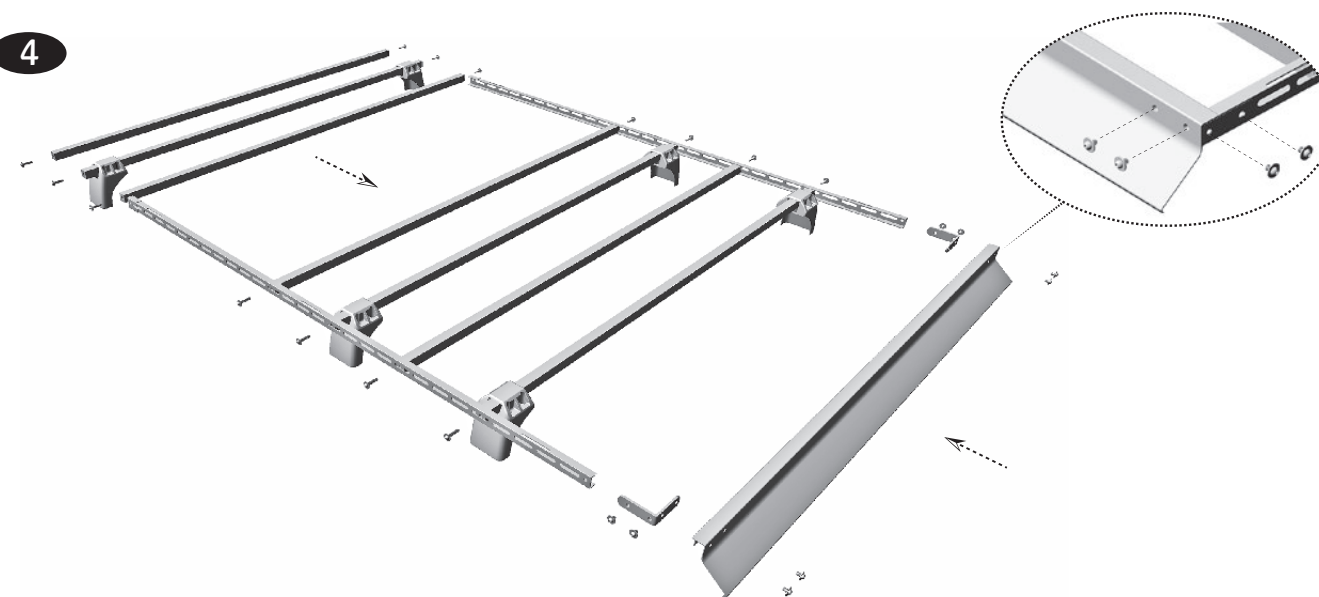


5

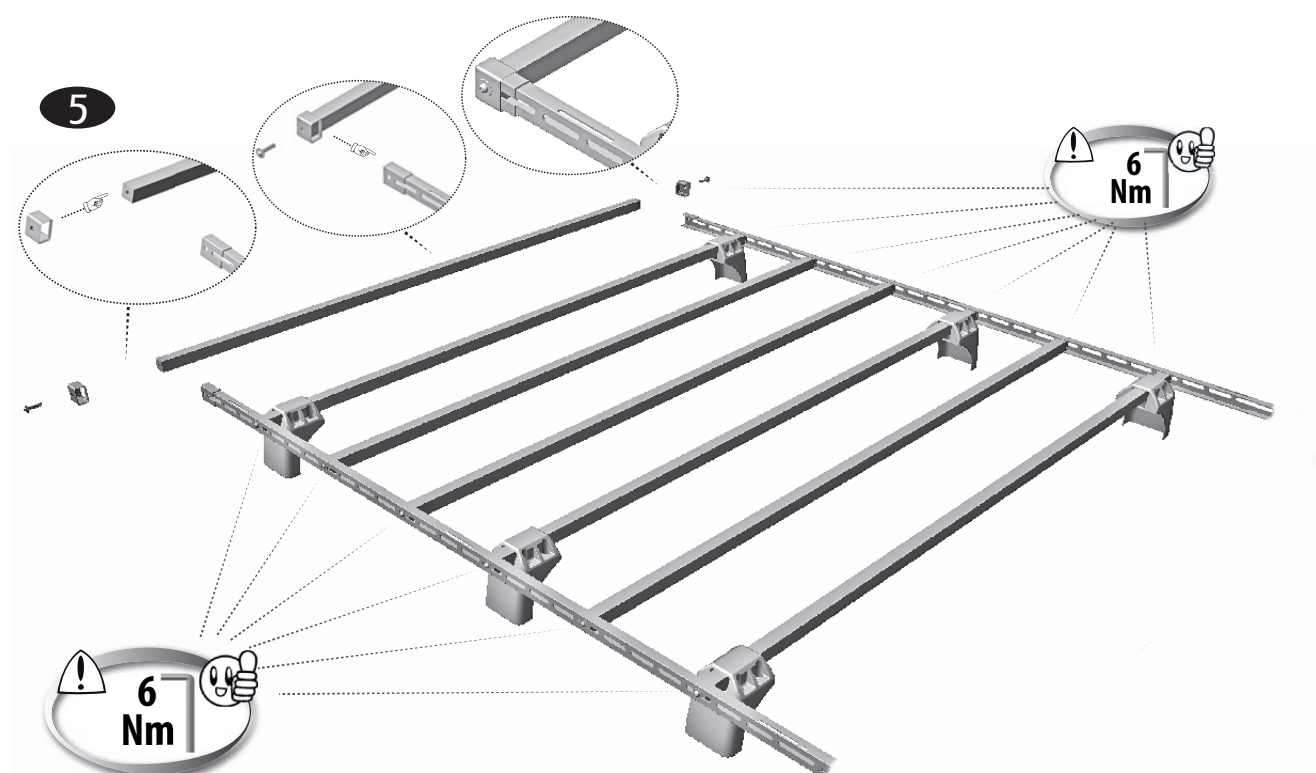


6

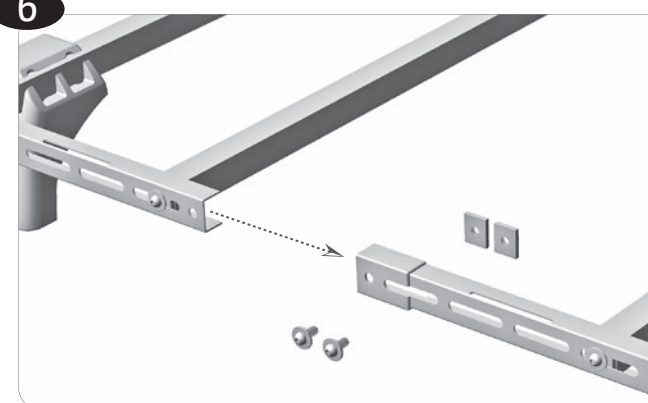


7

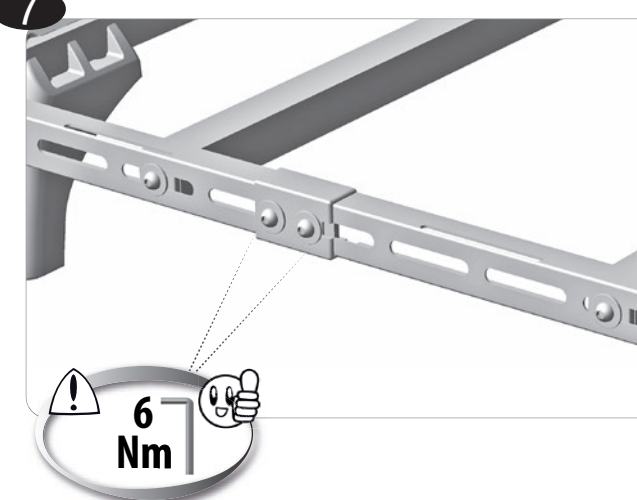


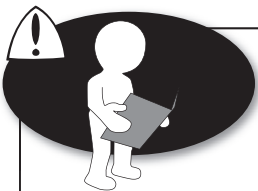

8


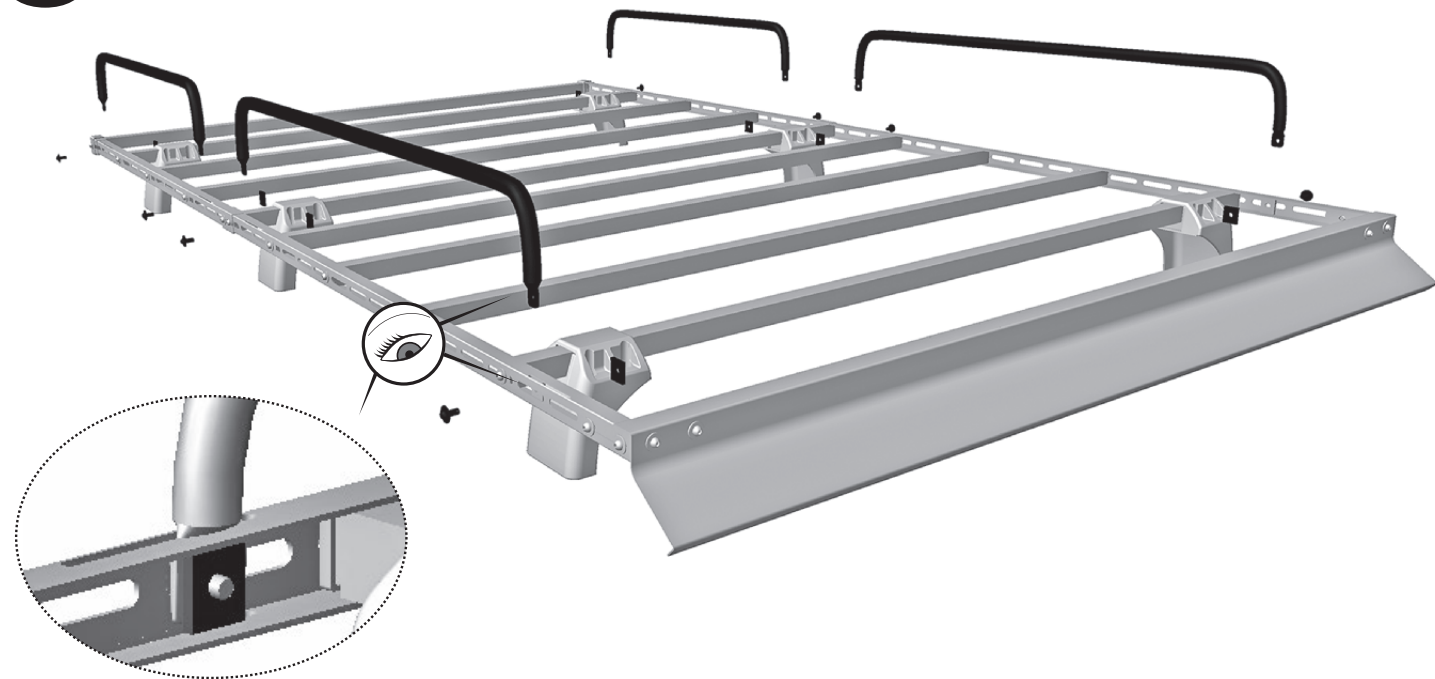


9

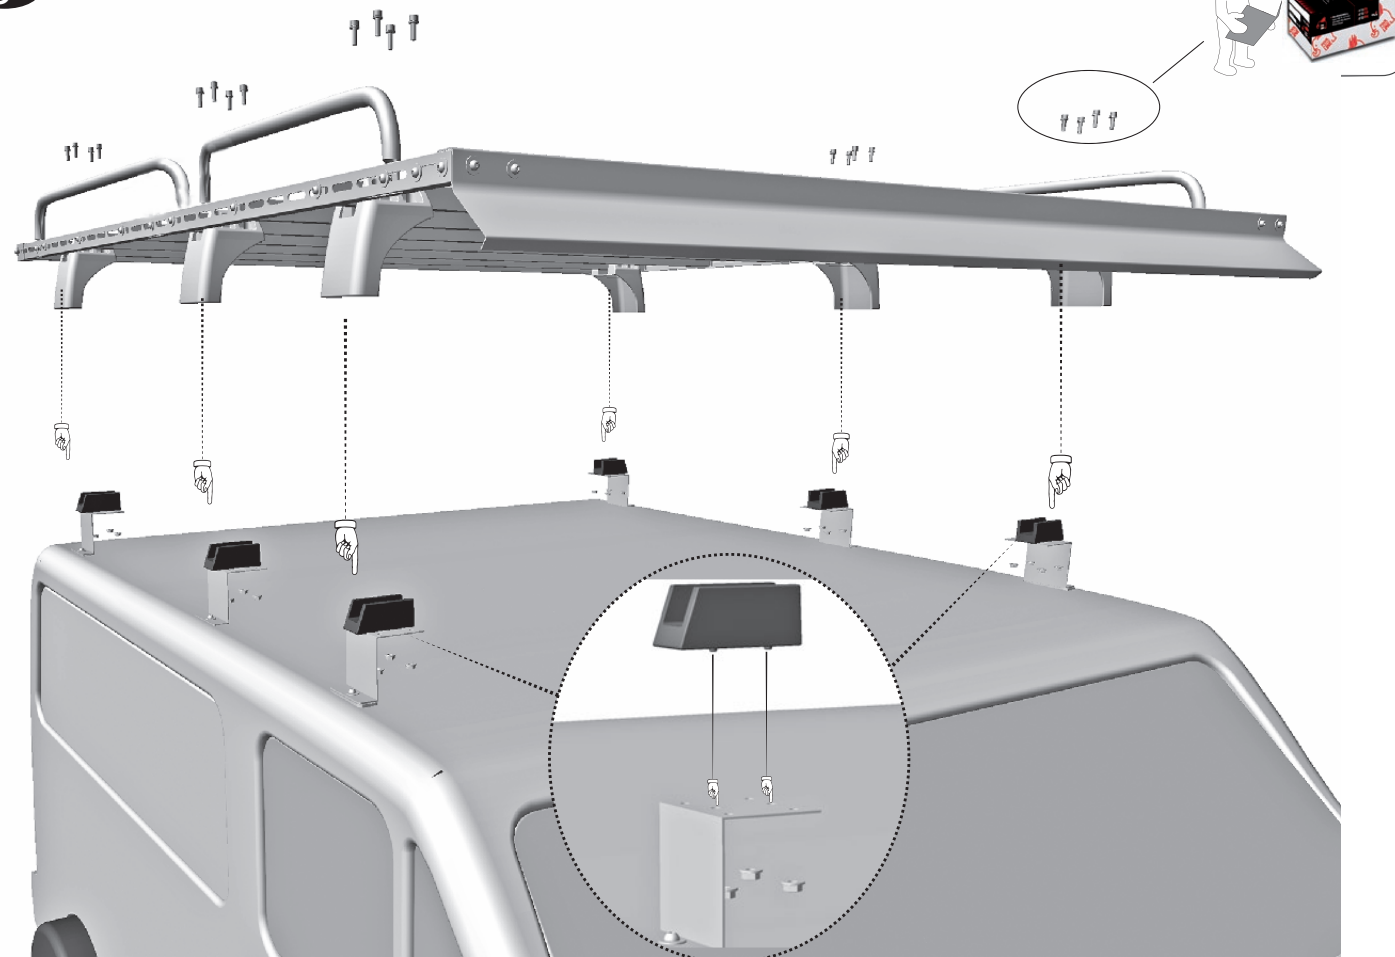


KIT CARGO-TECK


10





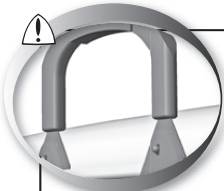
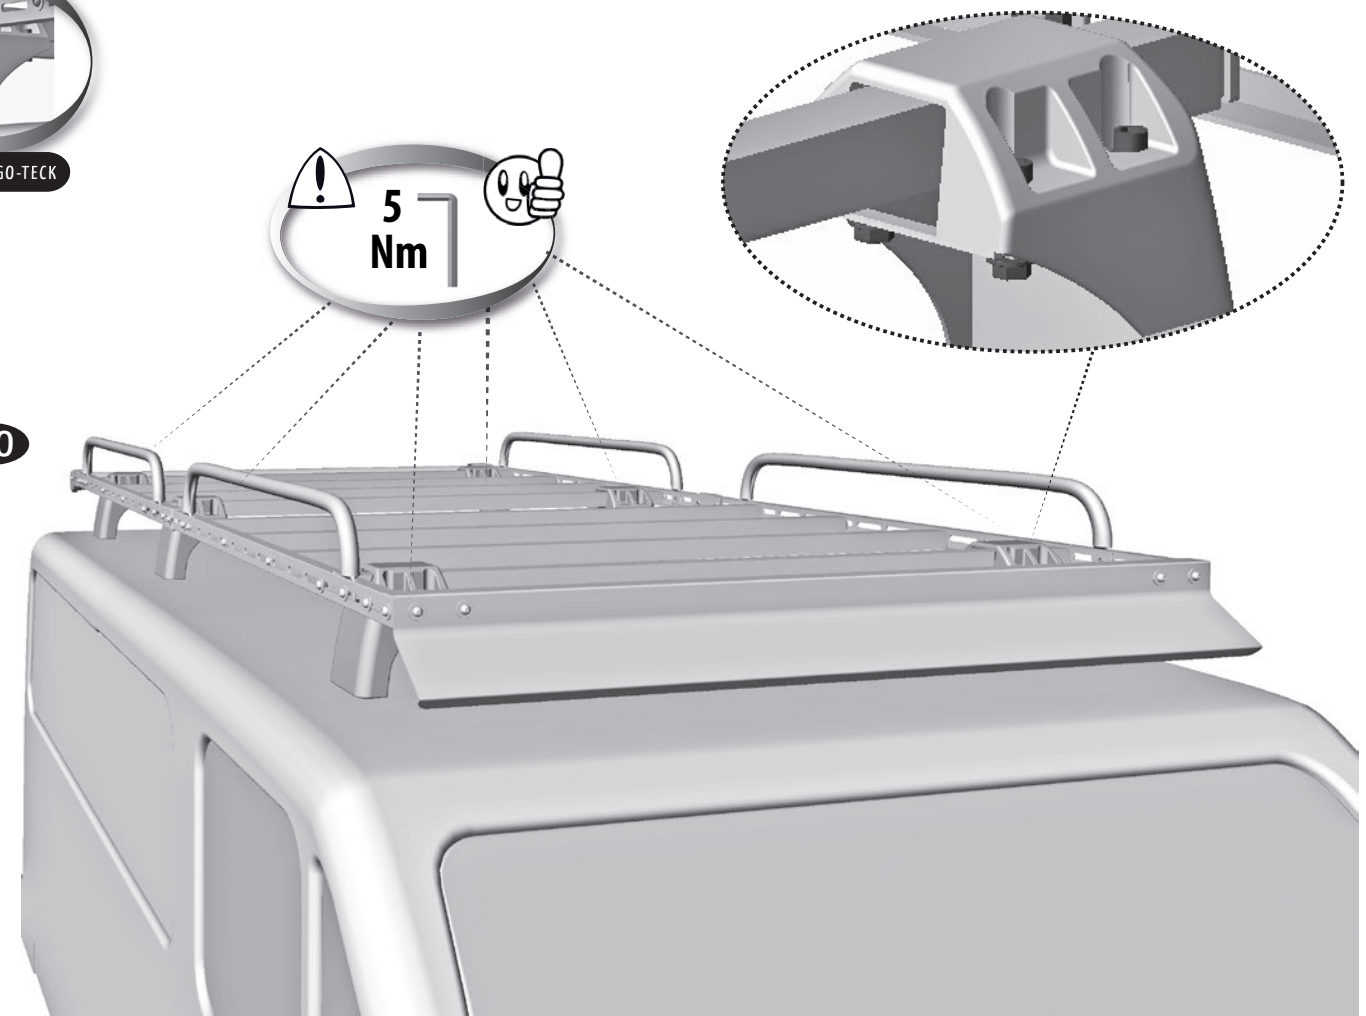



KIT CARGO-TECK FEET

10 bis

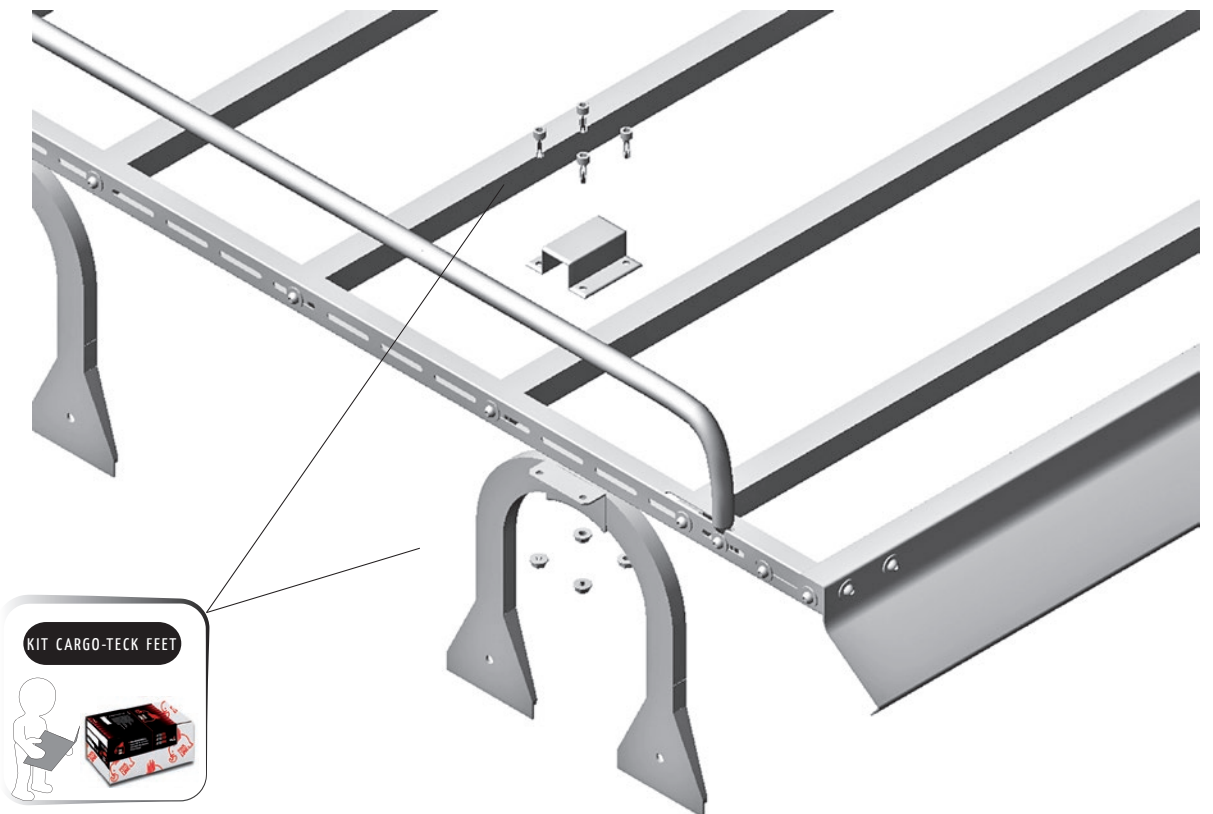

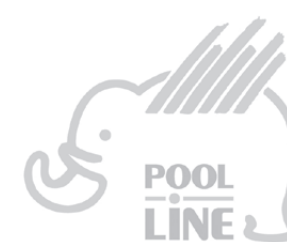

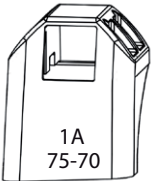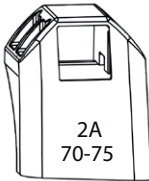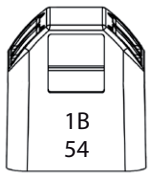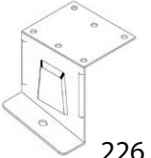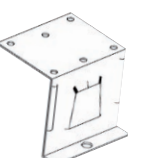N			Q			Q
1	 1A 75-70	 2A 70-75	2+2	 1B 54		2
2	 225	 226	2+2	 210		2
3	 G4					6
4						1


N	BO0061	Q
8	 DIN912 M6x20	24
9	 DIN125	24

N	BO0010 x 3	Q
10	 ISO 7380 M8x20	6
11	 Din125 Ø8	6

- E
C
GB
F
D
PT
I
PL
CZ
HU
RO
HR
TU

Instrucciones de montaje
Instruccions de muntatge
Assembly instrucctions
Instruction de montage
Montageanleitung
Instruções de montagem
Istruzioni di montaggio
Instrukcja montażu
Montážní návod
Szerelési Utasítás
Instruțiuni de montaj
Detaljne upute
Öncelikle montaj

Kit de fijación
Kit de fixació
Fixation Kit
Kit fixation
Stützfuß-Kit
Kit fixação
Kit di fissaggio
Element mocujący
Fixační kit
Rögzítő készlet
Kit de fixare
Kit za montažu
Montaj kiti

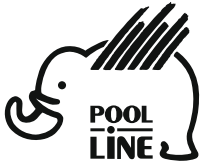

POOL-LINE ACCESORIOS, S.L.
 C. Esqueis, 19. P. I. Can Barri
 08415- Bigues i Riells. Barcelona (España)
 www.pool-line.net

Nº HOMOLOGACIÓN:


E9
 I26R-03.1043









121082

Rv: 2/2023

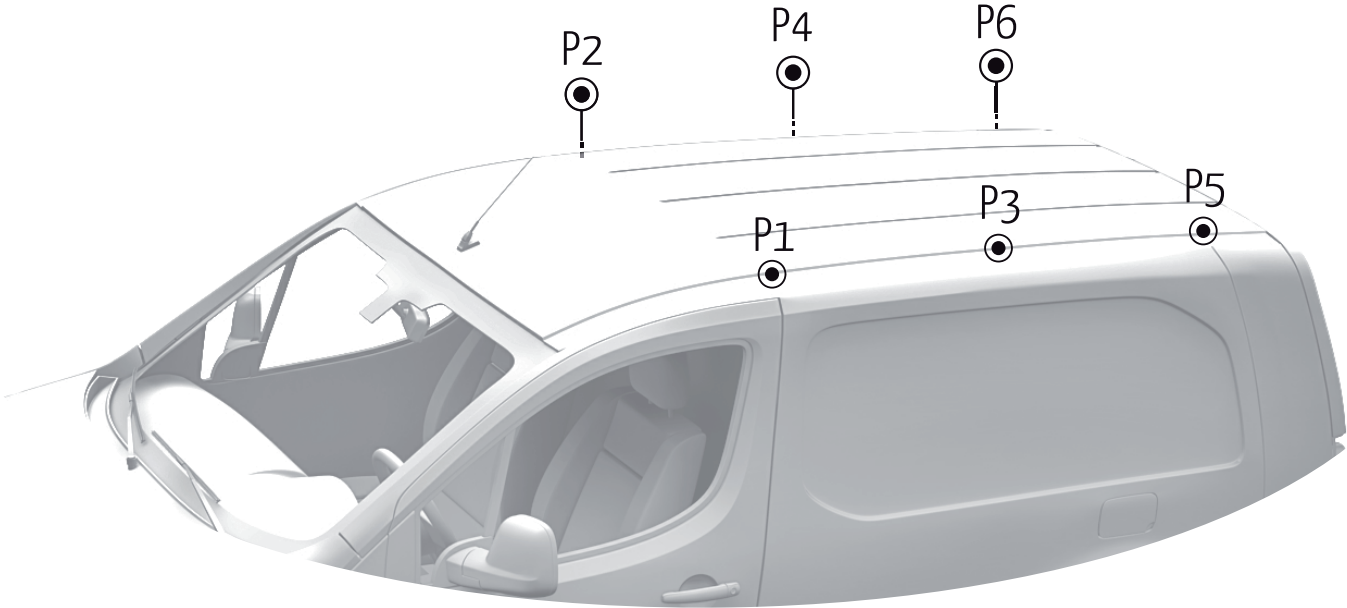

						P1	P2		P3	P4		P5	P6
CITROËN													
BERLINGO III (XL)	L2	H1	2018->	B00010	225+1A	226+2A		210+1B	210+1B			226+2A	225+1A
FIAT													
DOBLÓ III / KA (XL)	L2	H1	2022->	B00010	225+1A	226+2A		210+1B	210+1B			226+2A	225+1A
OPEL													
COMBO E (XL)	L2	H1	2018->	B00010	225+1A	226+2A		210+1B	210+1B			226+2A	225+1A
PEUGEOT													
PARTNER III (XL)	L2	H1	2018->	B00010	225+1A	226+2A		210+1B	210+1B			226+2A	225+1A
TOYOTA													
PROACE CITY (XL)	L2	H1	2019->	B00010	225+1A	226+2A		210+1B	210+1B			226+2A	225+1A

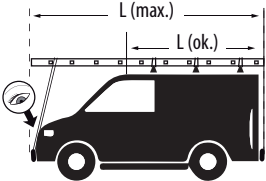


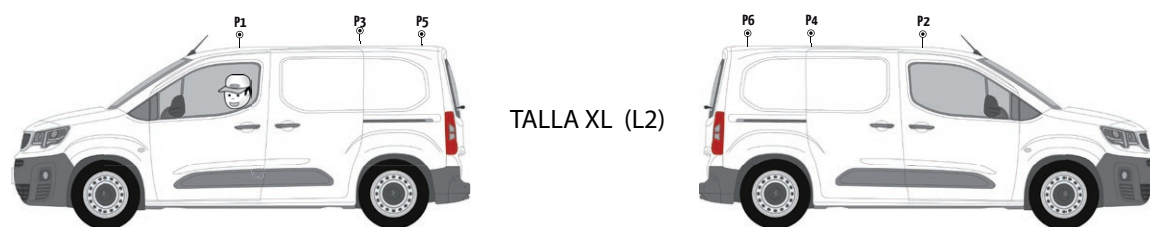


TALLA XL (L2)




P1	P2		P3	P4		P5	P6
225+1A	226+2A		210+1B	210+1B		226+2A	225+1A
225+1A	226+2A		210+1B	210+1B		226+2A	225+1A
225+1A	226+2A		210+1B	210+1B		226+2A	225+1A

Pag. 1


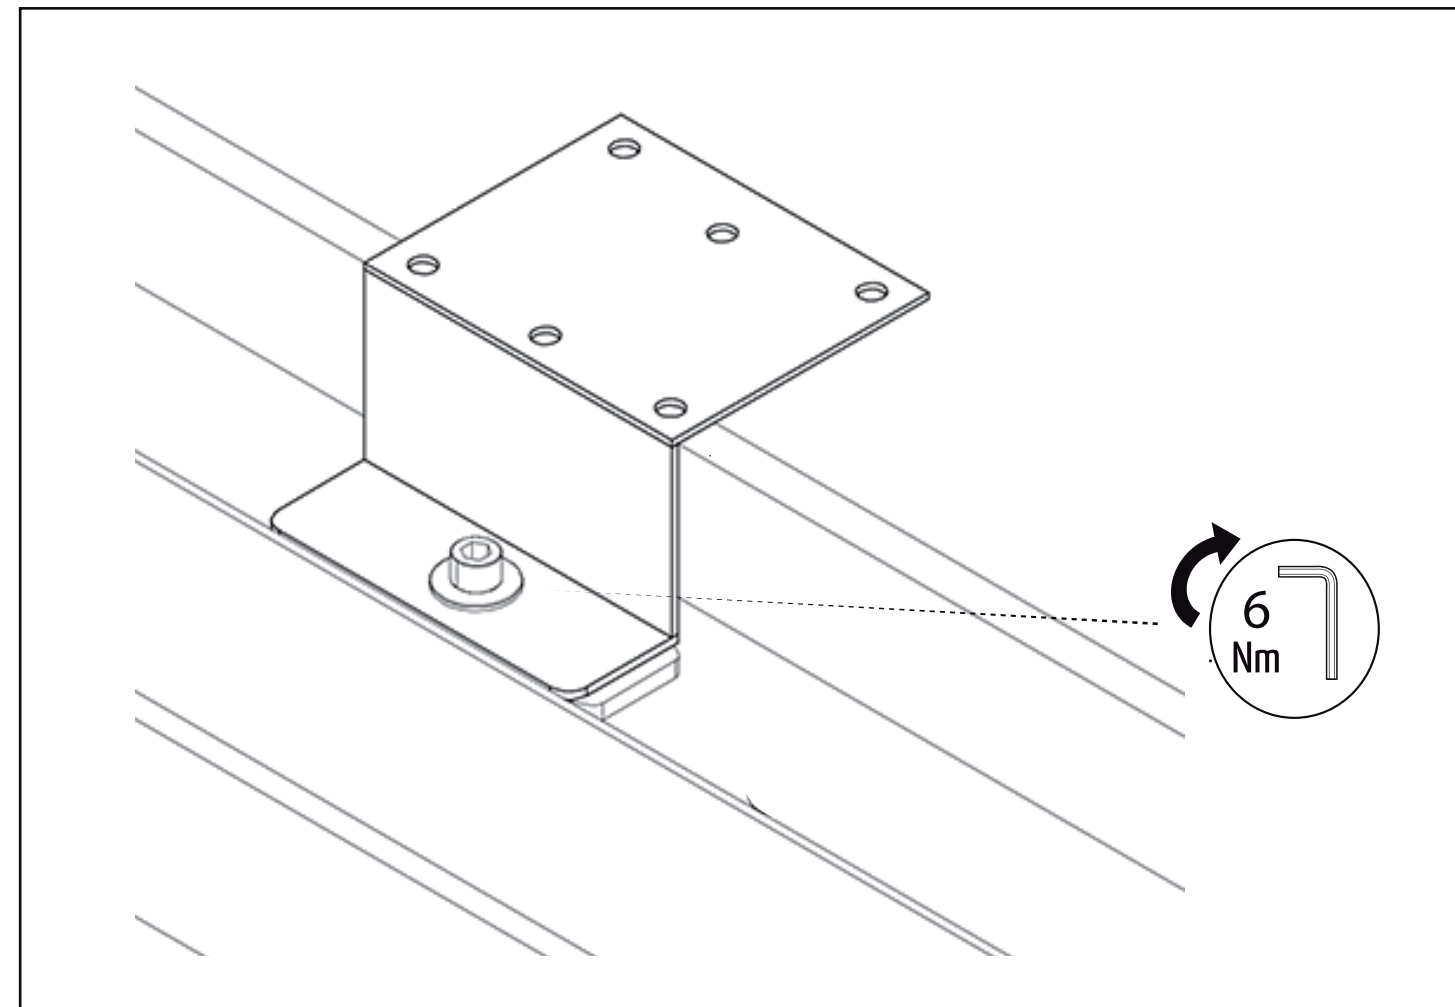
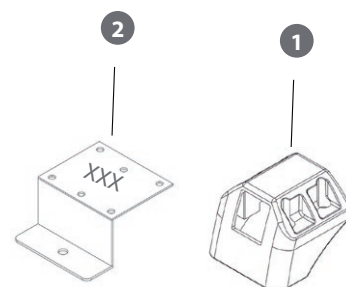


6
Nm

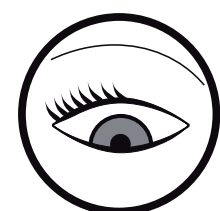

	10	P1	P2
OX	B000010		
OX-	B000010		
	B0000Y		

Pag. 1

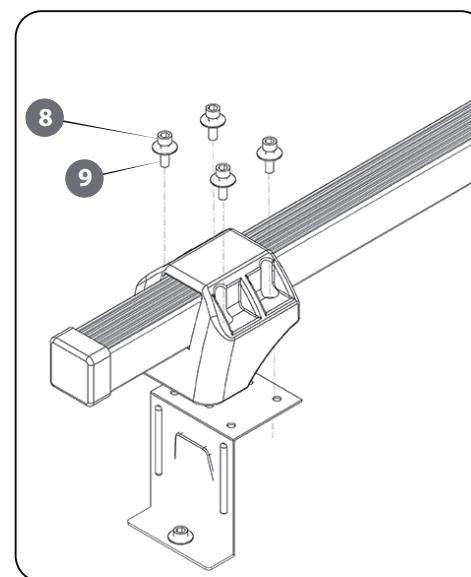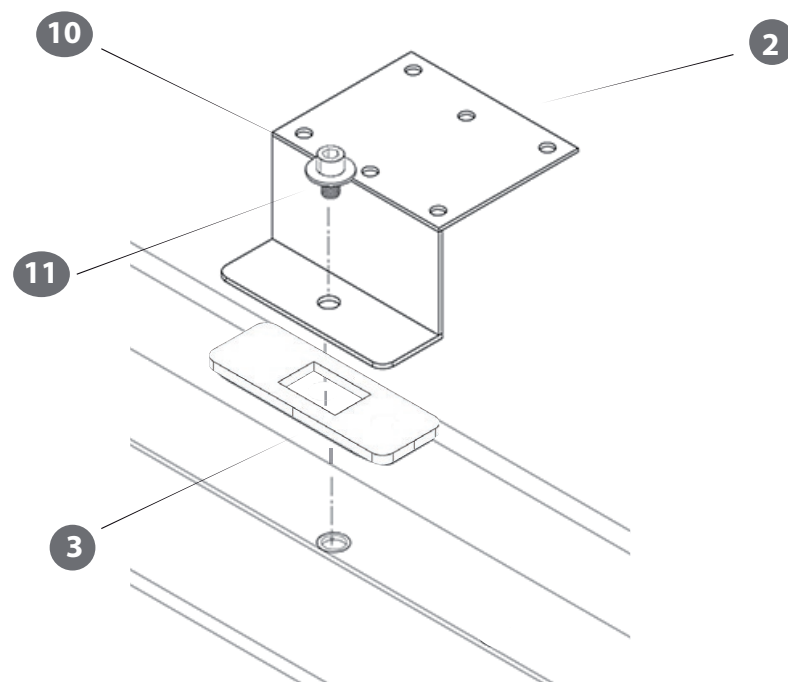

5
Nm

