




- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

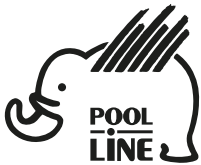

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net





200 KG.
MAX.






Nº HOMOLOGACIÓN: E9 26R-03.1042




123816

Rv: 06/2024

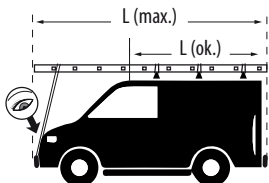
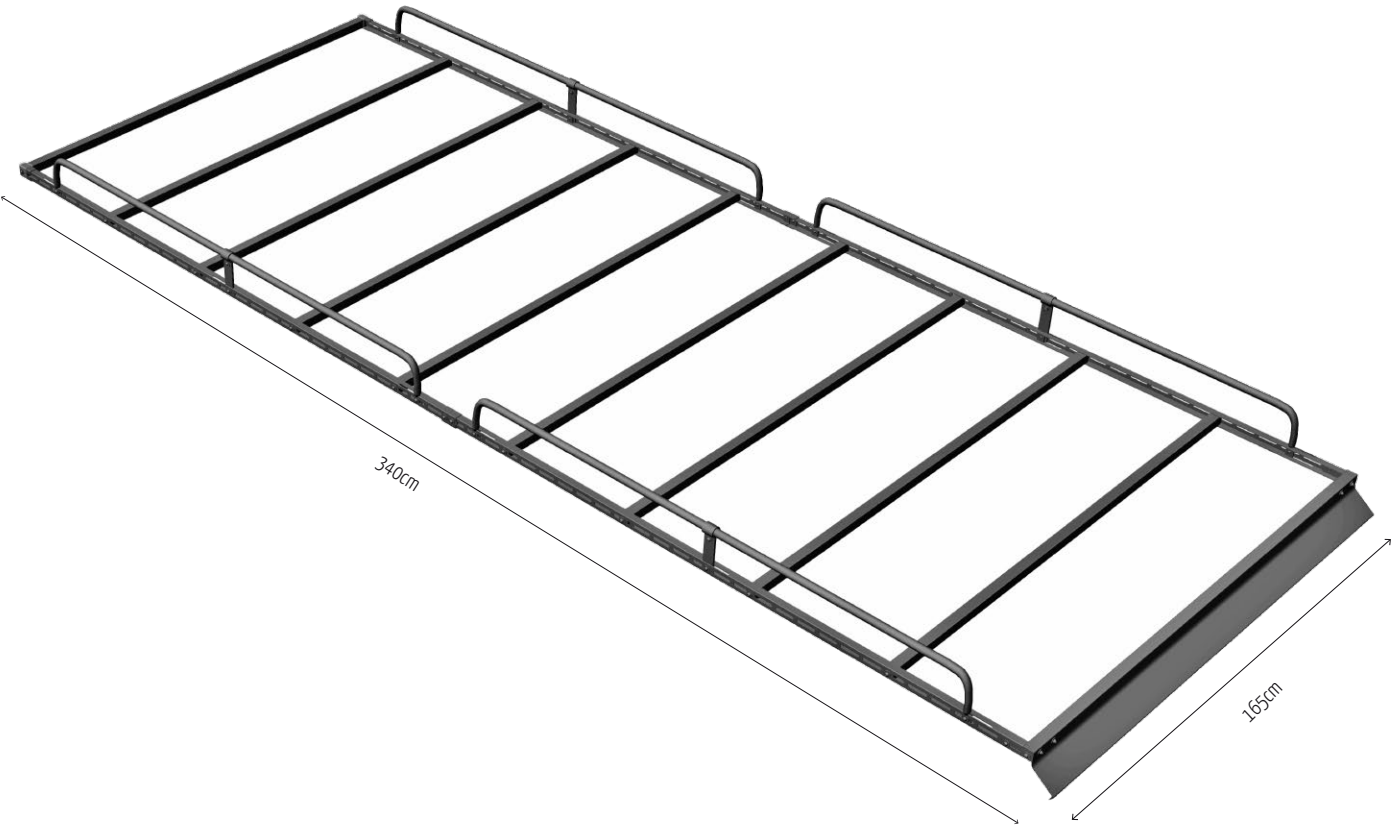


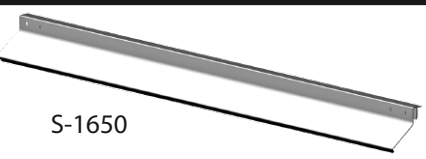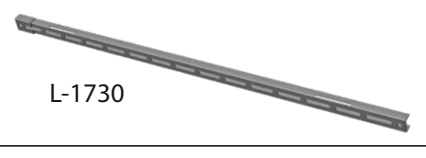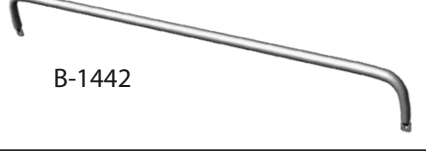N		Q
1	 S-1650	1
2	 L-1730	4
3	 B-1442	4
4	 T-1635	9
7		18
8		2
9		2
10		10
11		1
12	 CHA-M8	16
13	 ISO 7380 M8x30	18
14	 ISO 7380 M8x16	24
15	 DIN 125 Ø 8	42
16		8
17	 DIN 603 M6x12	4
18	 DIN 6923 M6	4


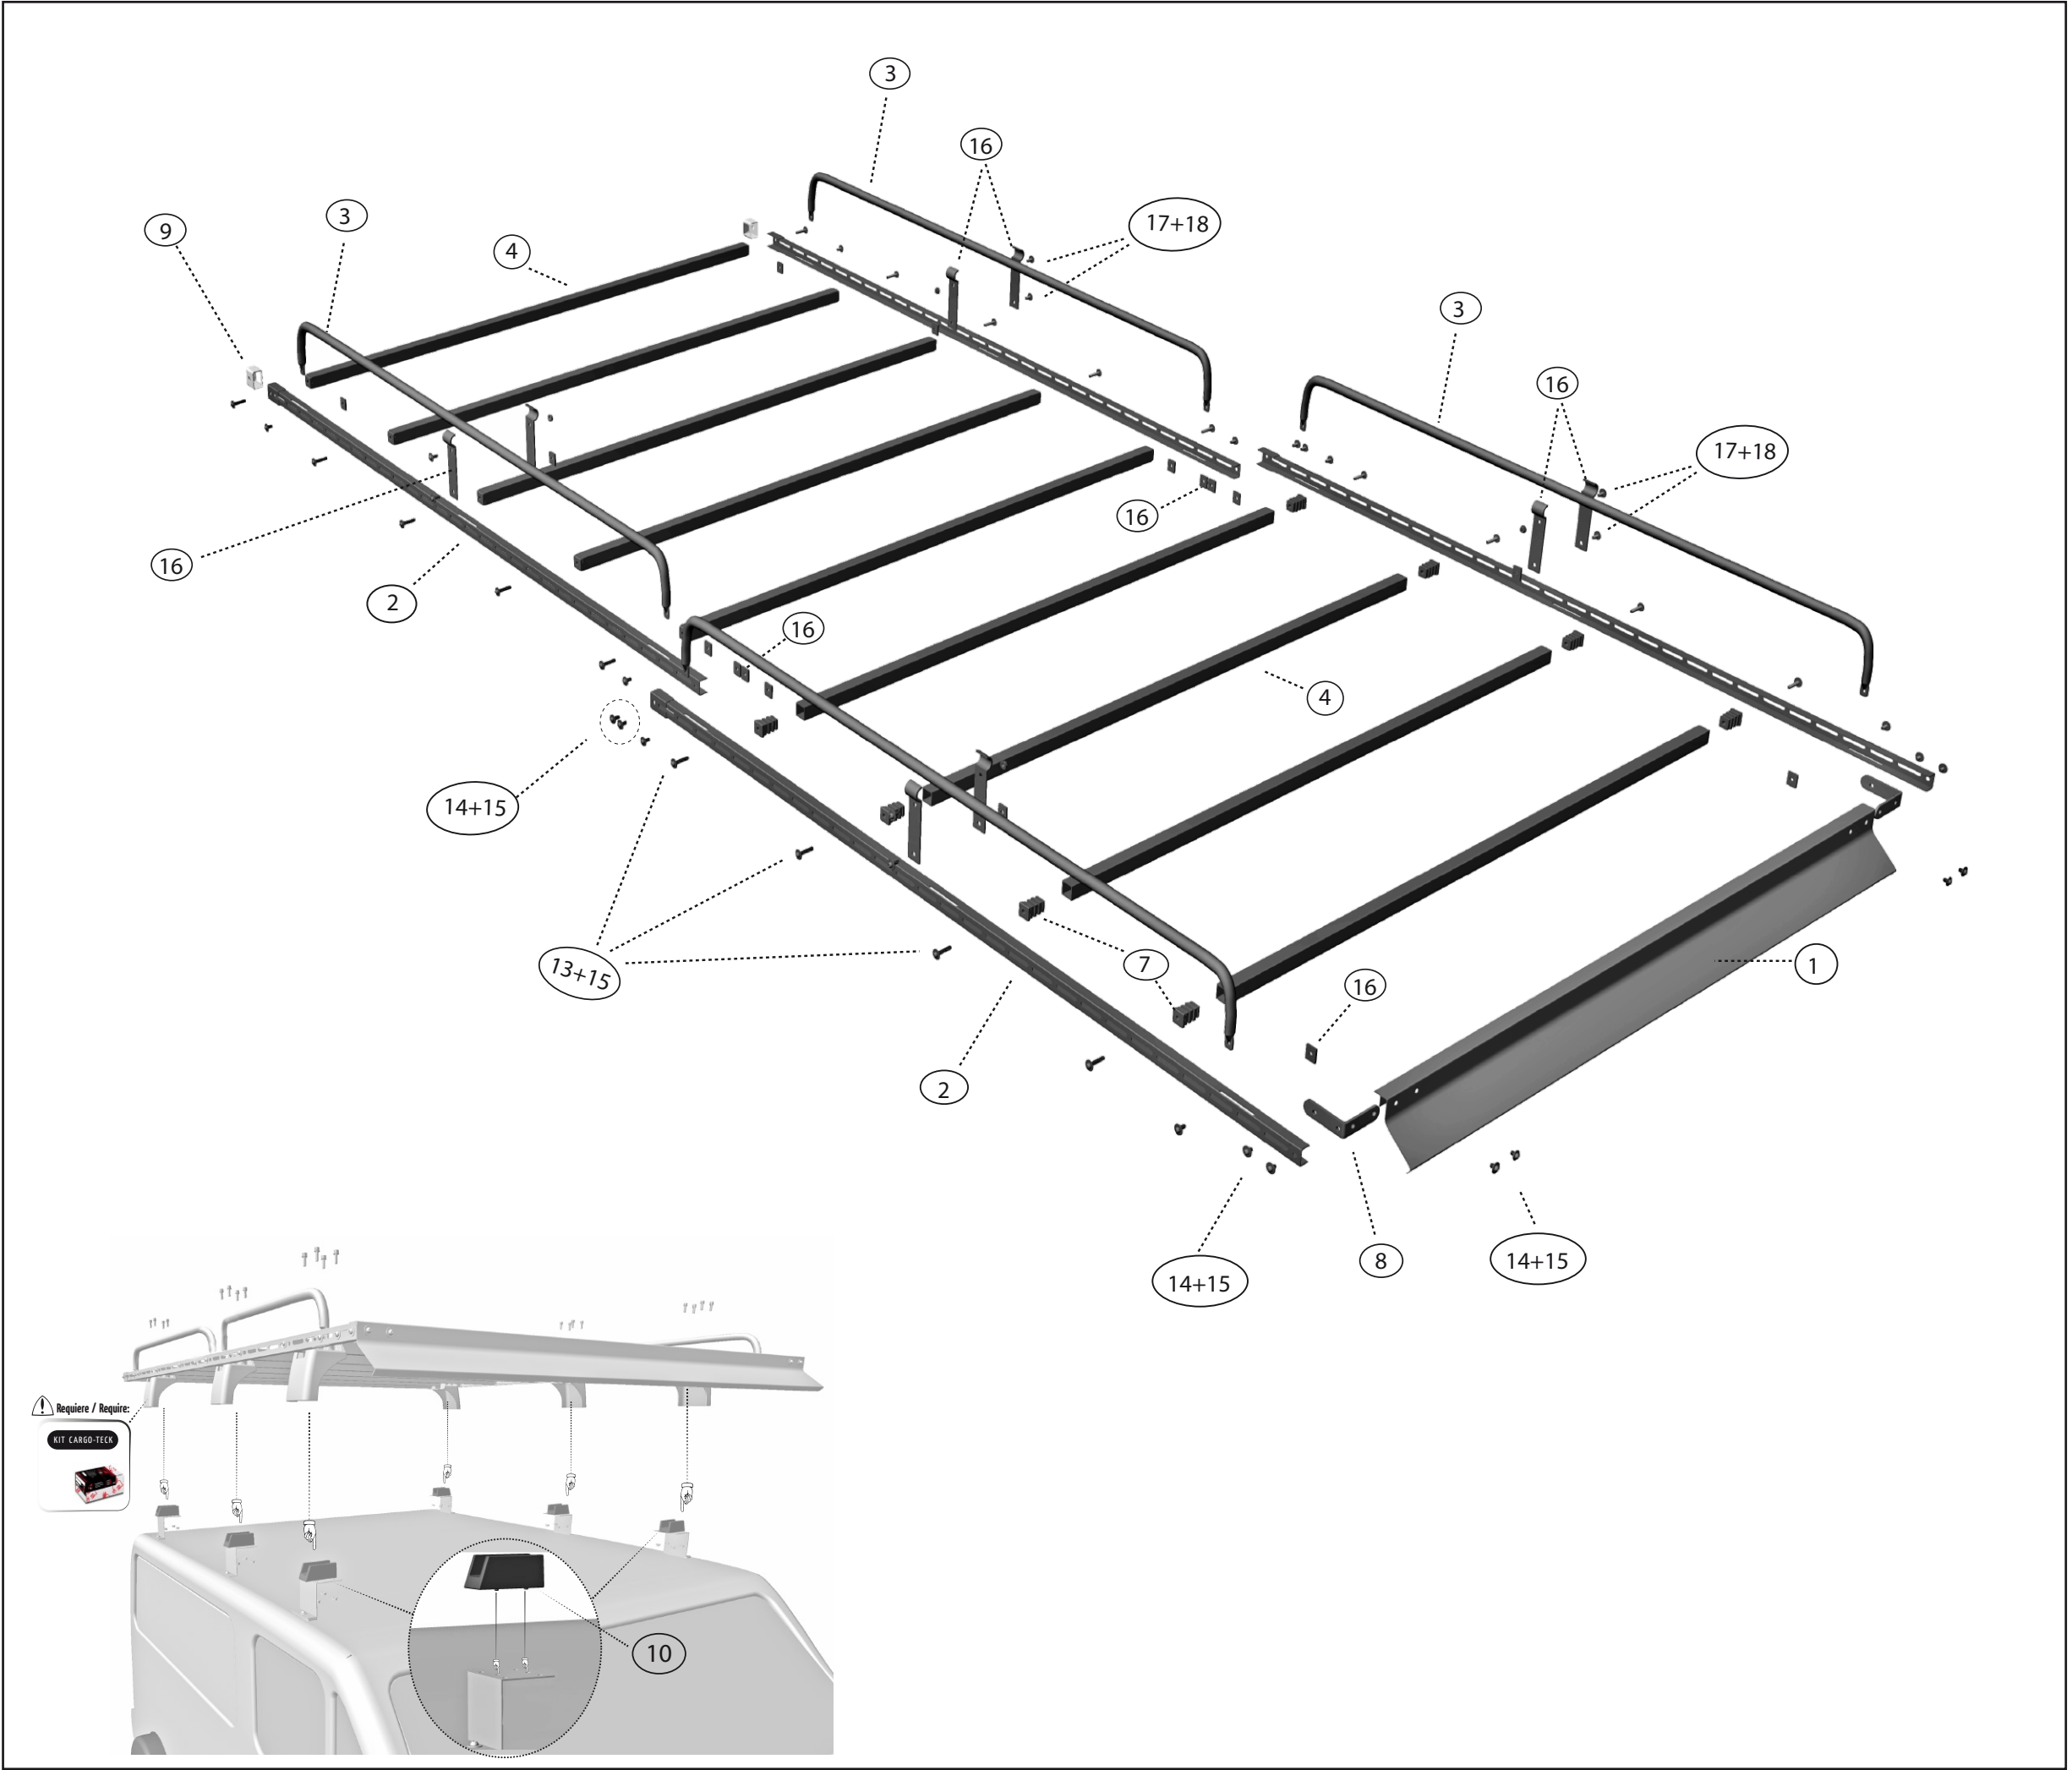




• IVECO DAILY VI (9m) 3520 - H1 (2014->)

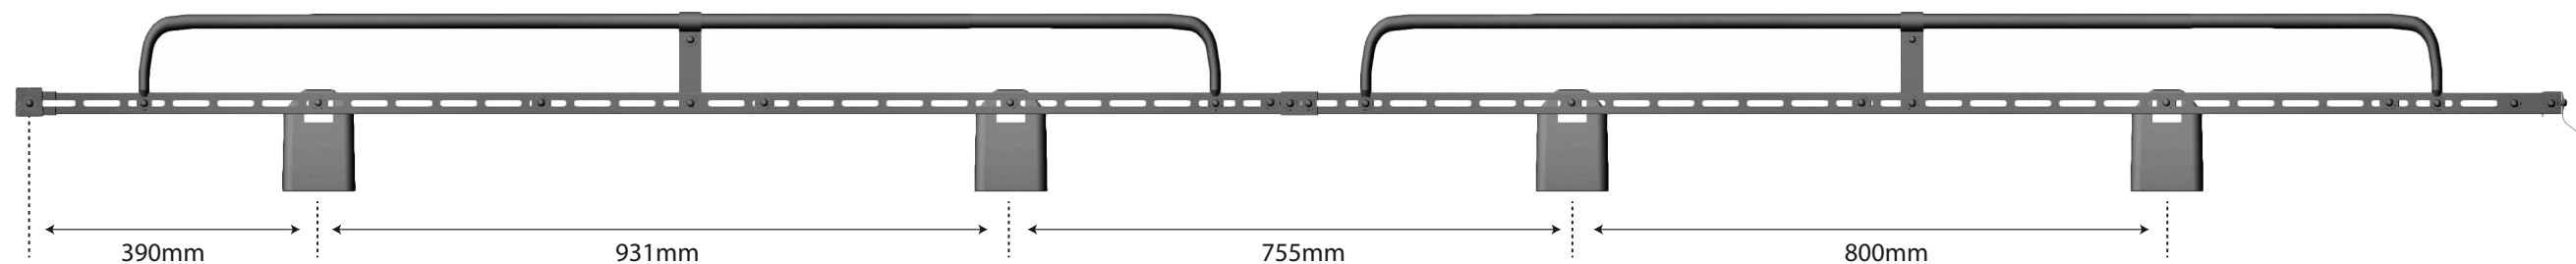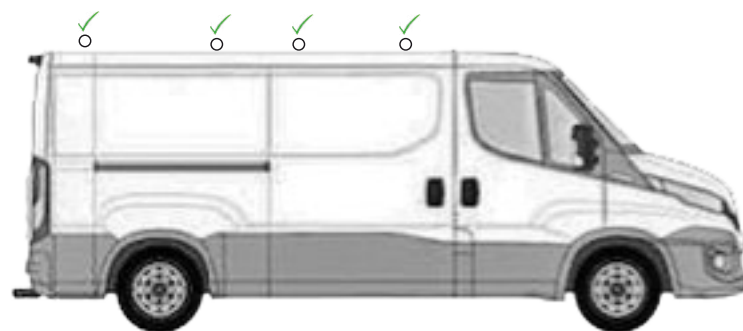


• CITROËN JUMPER L2 H1 (2006->)
• FIAT DUCATO L2 H1 (2006->)
• OPEL MOVANO C L2 H1 (2021->)
• PEUGEOT BOXER L2 H1 (2006->)

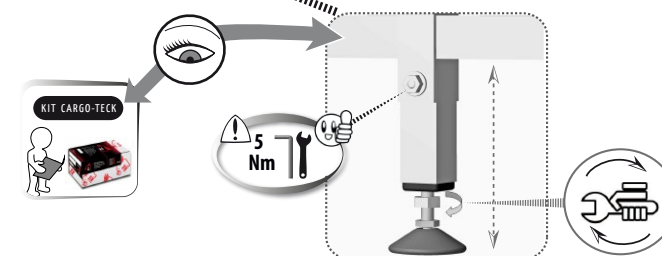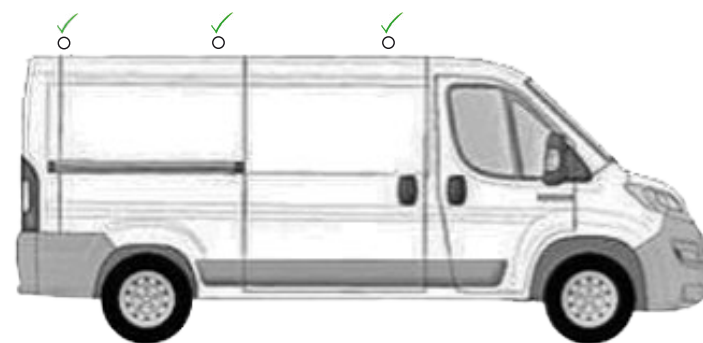






- NISSAN NV300 L2H1 (2016->)
- FIAT TALENTO II L2H1 (2016->)
- OPEL VIVARO B L2 H1 (2014->)
- RENAULT TRAFIC III L2 H1 (2014->)

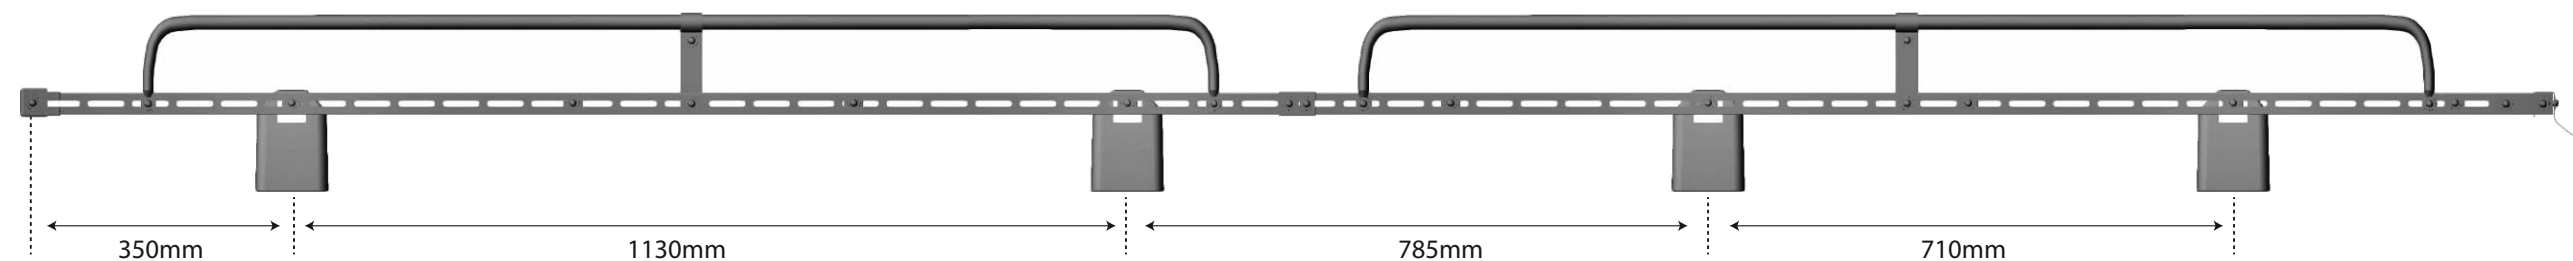

- NISSAN PRIMASTAR L2 H1 (02 - 14)
- OPEL VIVARO A L2 H1 (02 - 14)
- RENAULT TRAFIC II L2 H1 (02 - 14)

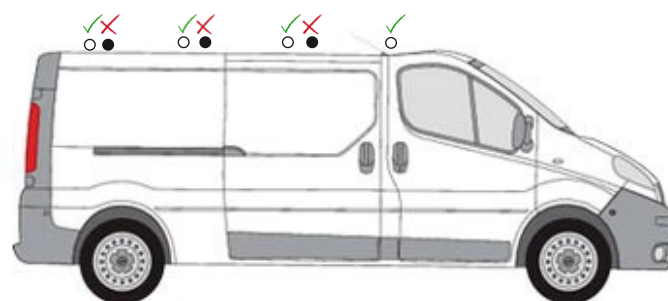


- NISSAN INTERSTAR L3 H2/H3 (1997 - 2010)
- OPEL MOVANO A L3 H2/H3 (1997 - 2010)
- RENAULT TRAFIC II L3 H2/H3 (1997 - 2010)

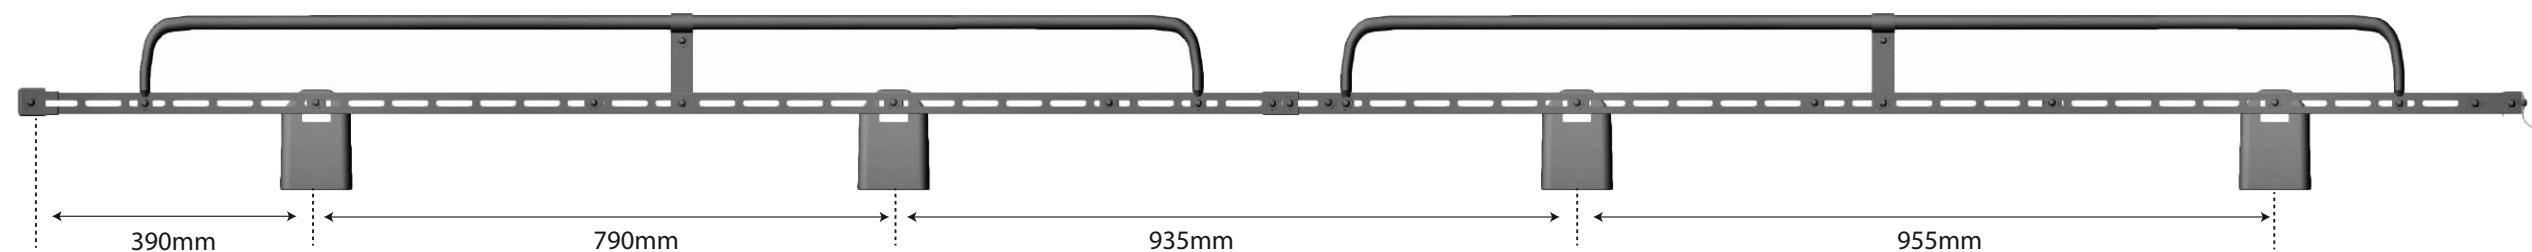
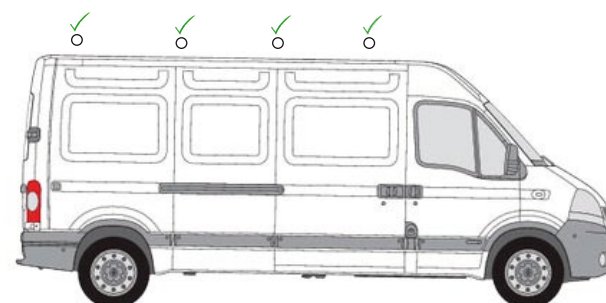





- MERCEDES SPRINTER II L2 W906 / W907
- VOLKSWAGEN CRAFTER L2 / L3 (2006->)

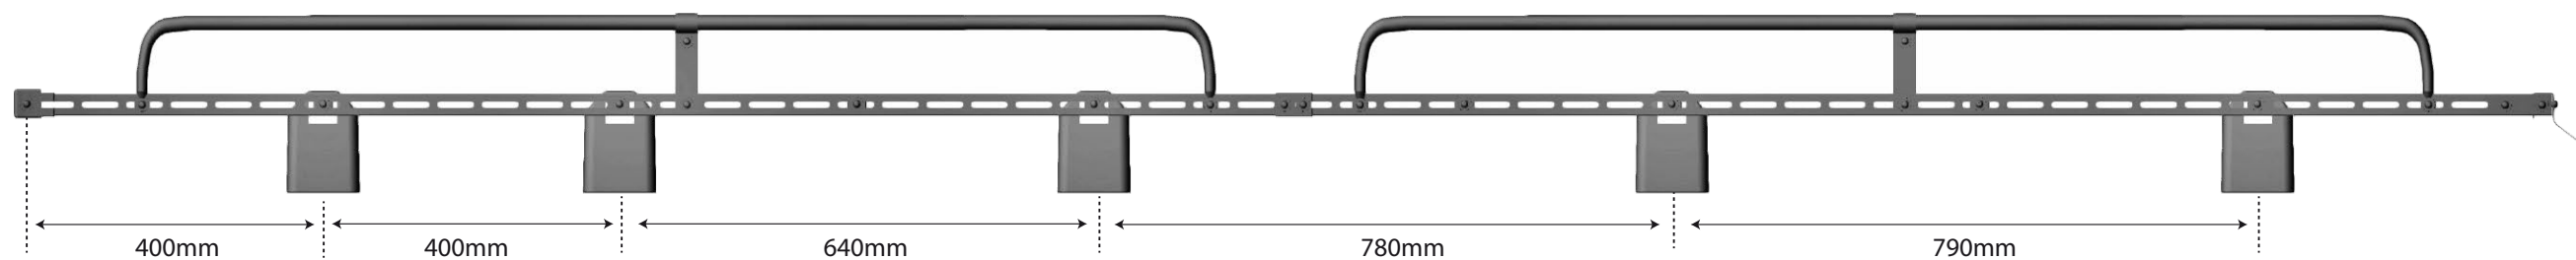


- FIAT DUCATO I L2-H2 (81-94)
- NISSAN TRADE L2-H2 (87-01)
- TOYOTA HIACE L2-H1 (JP-h200) (2013->)

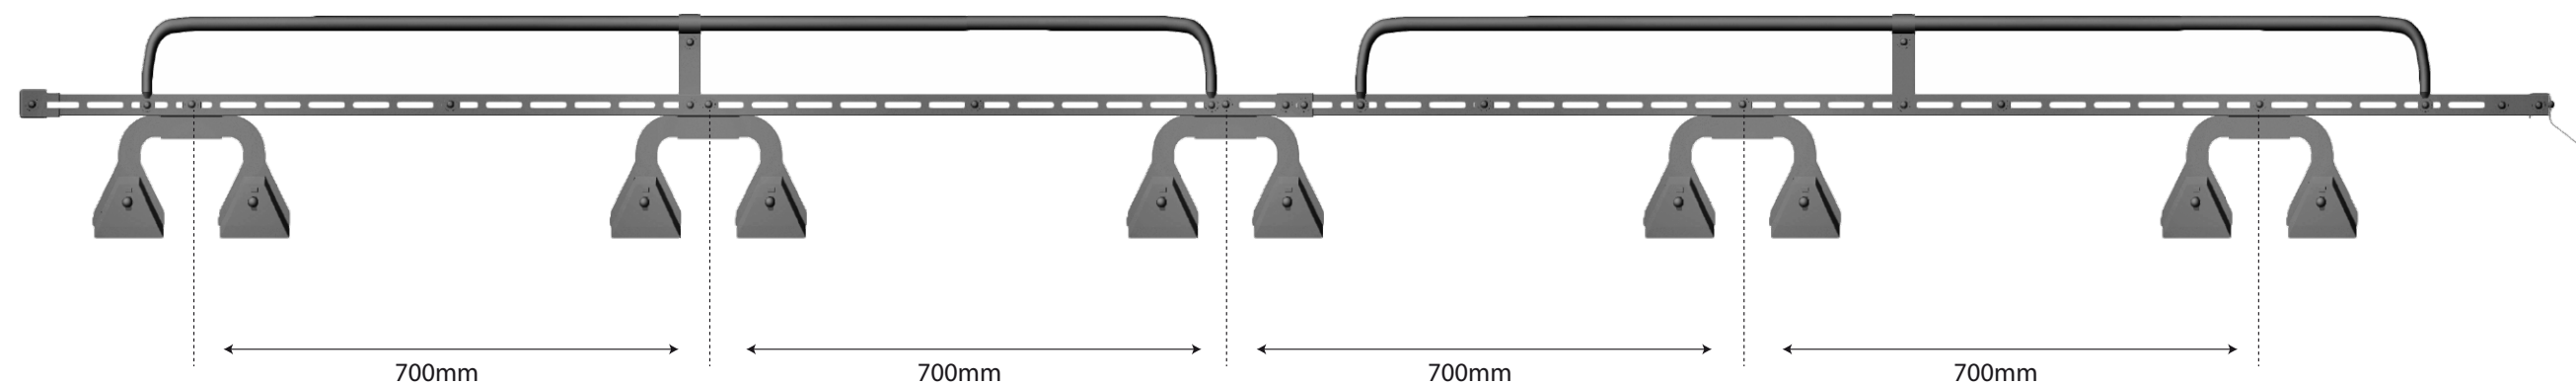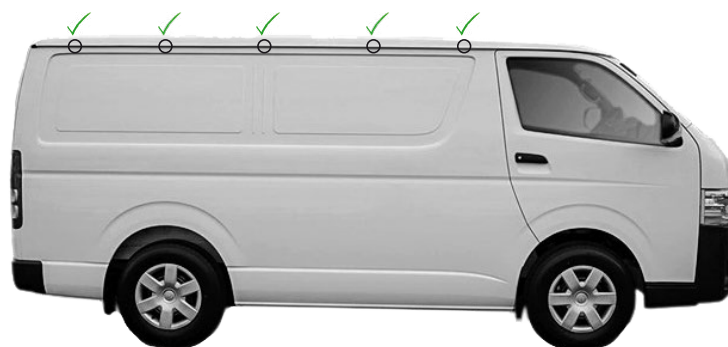


1

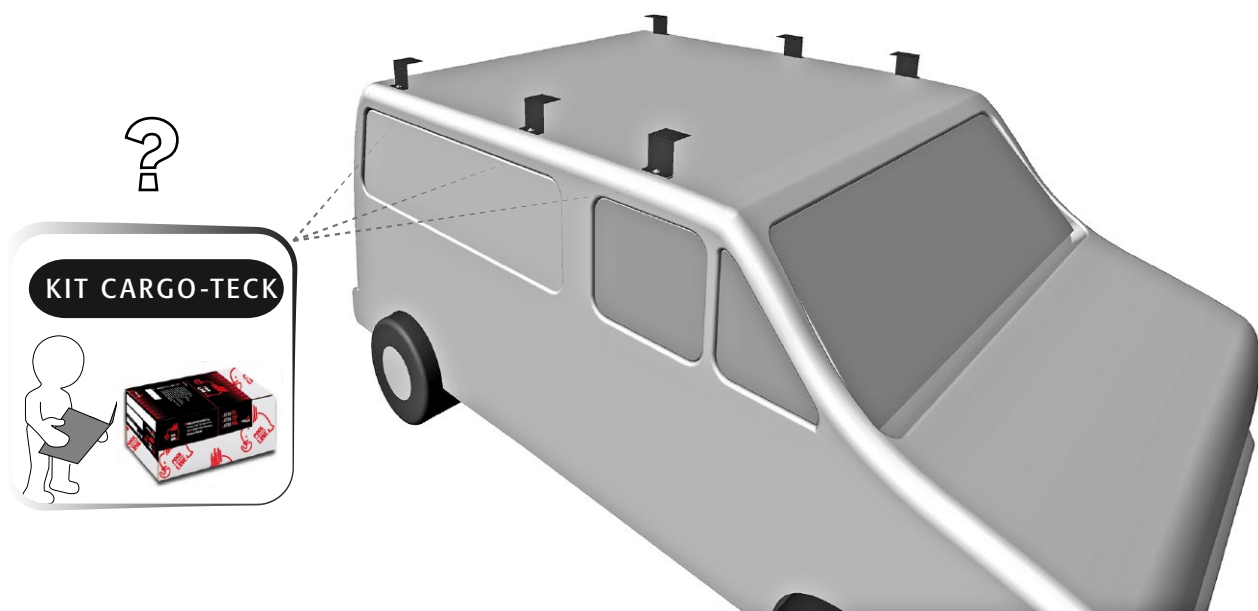

2

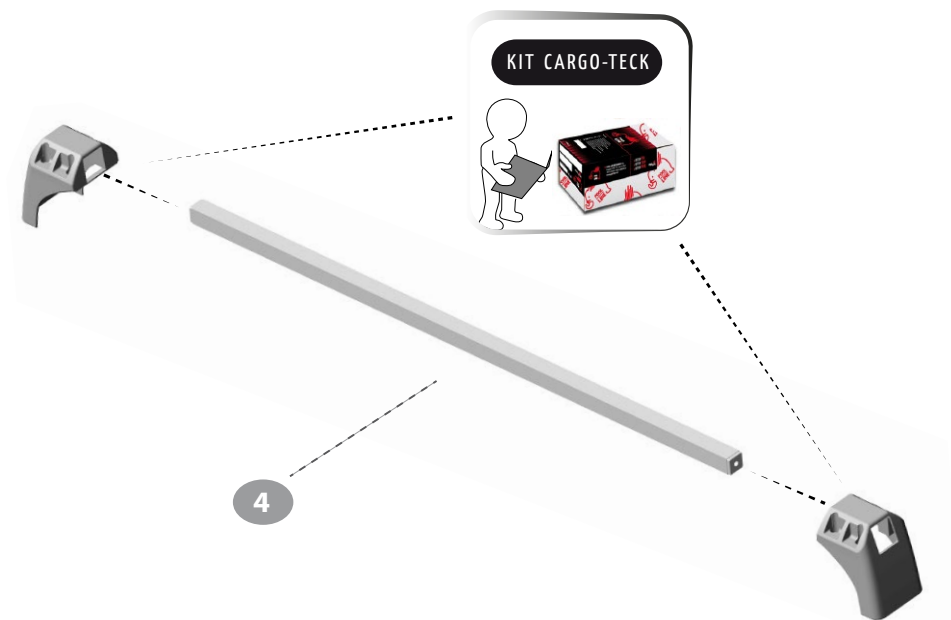


3

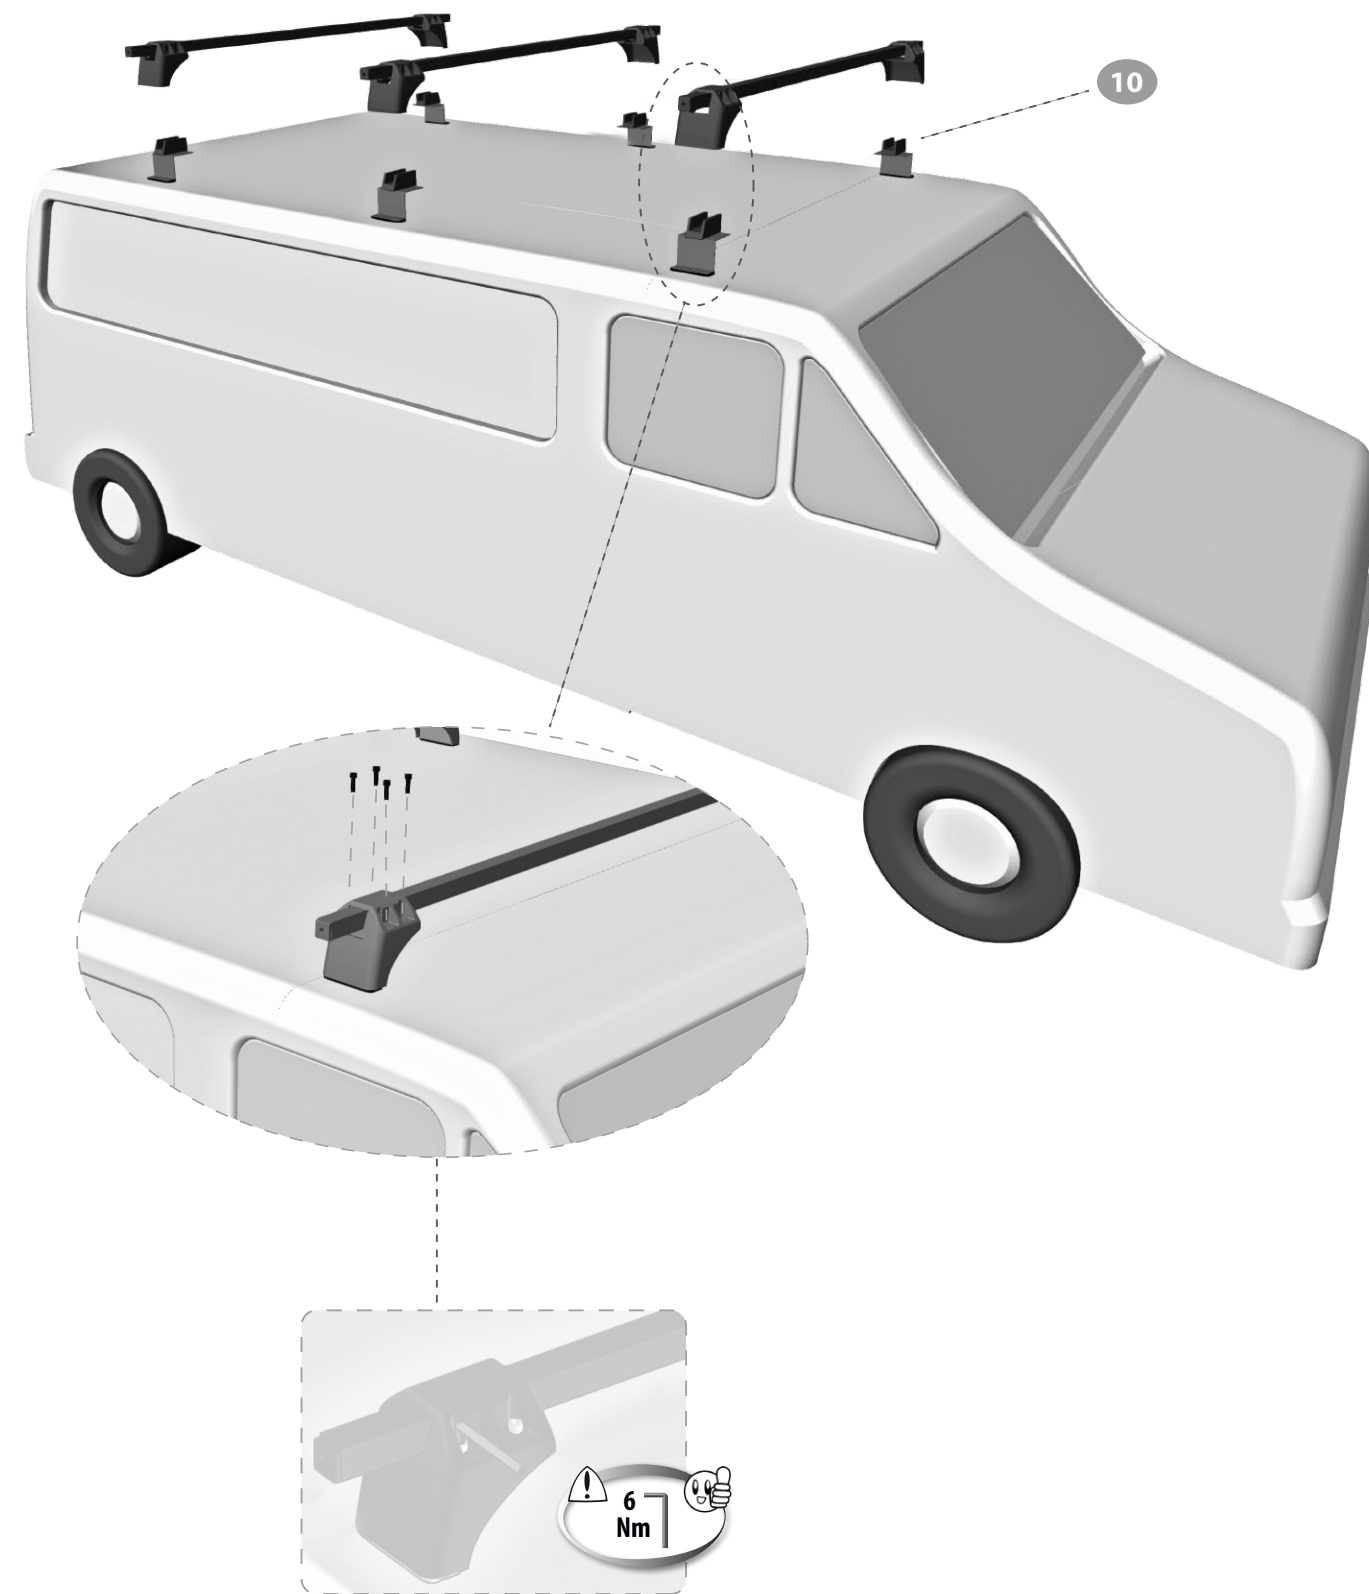





5

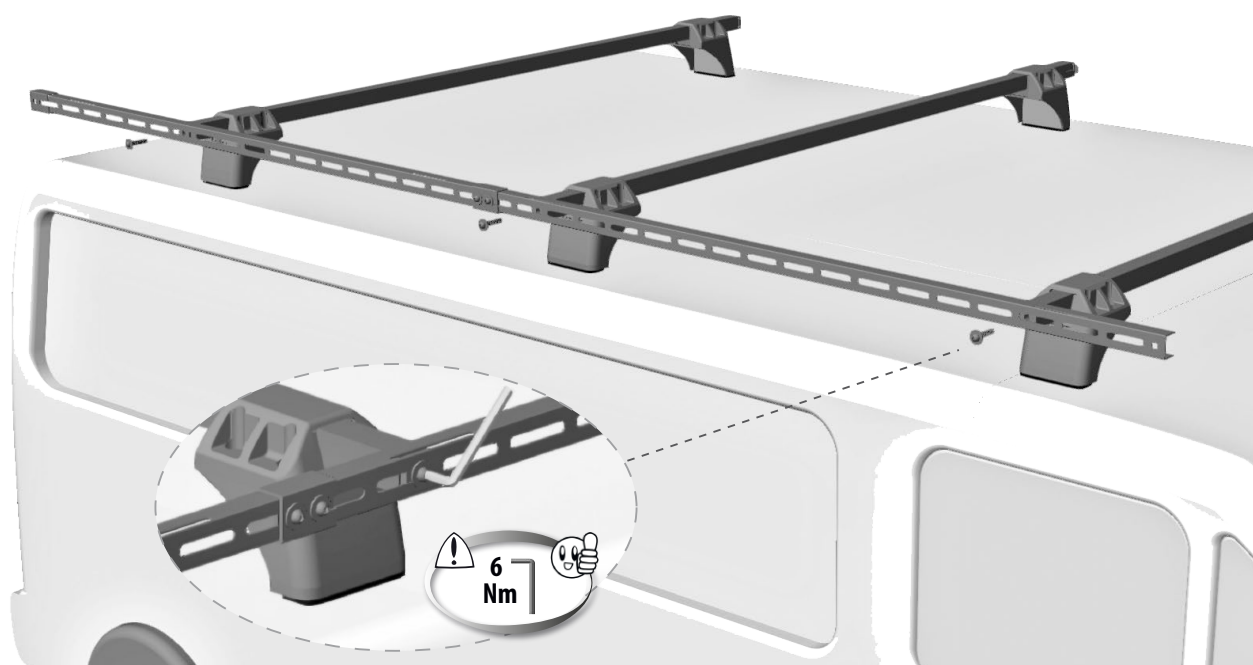


6

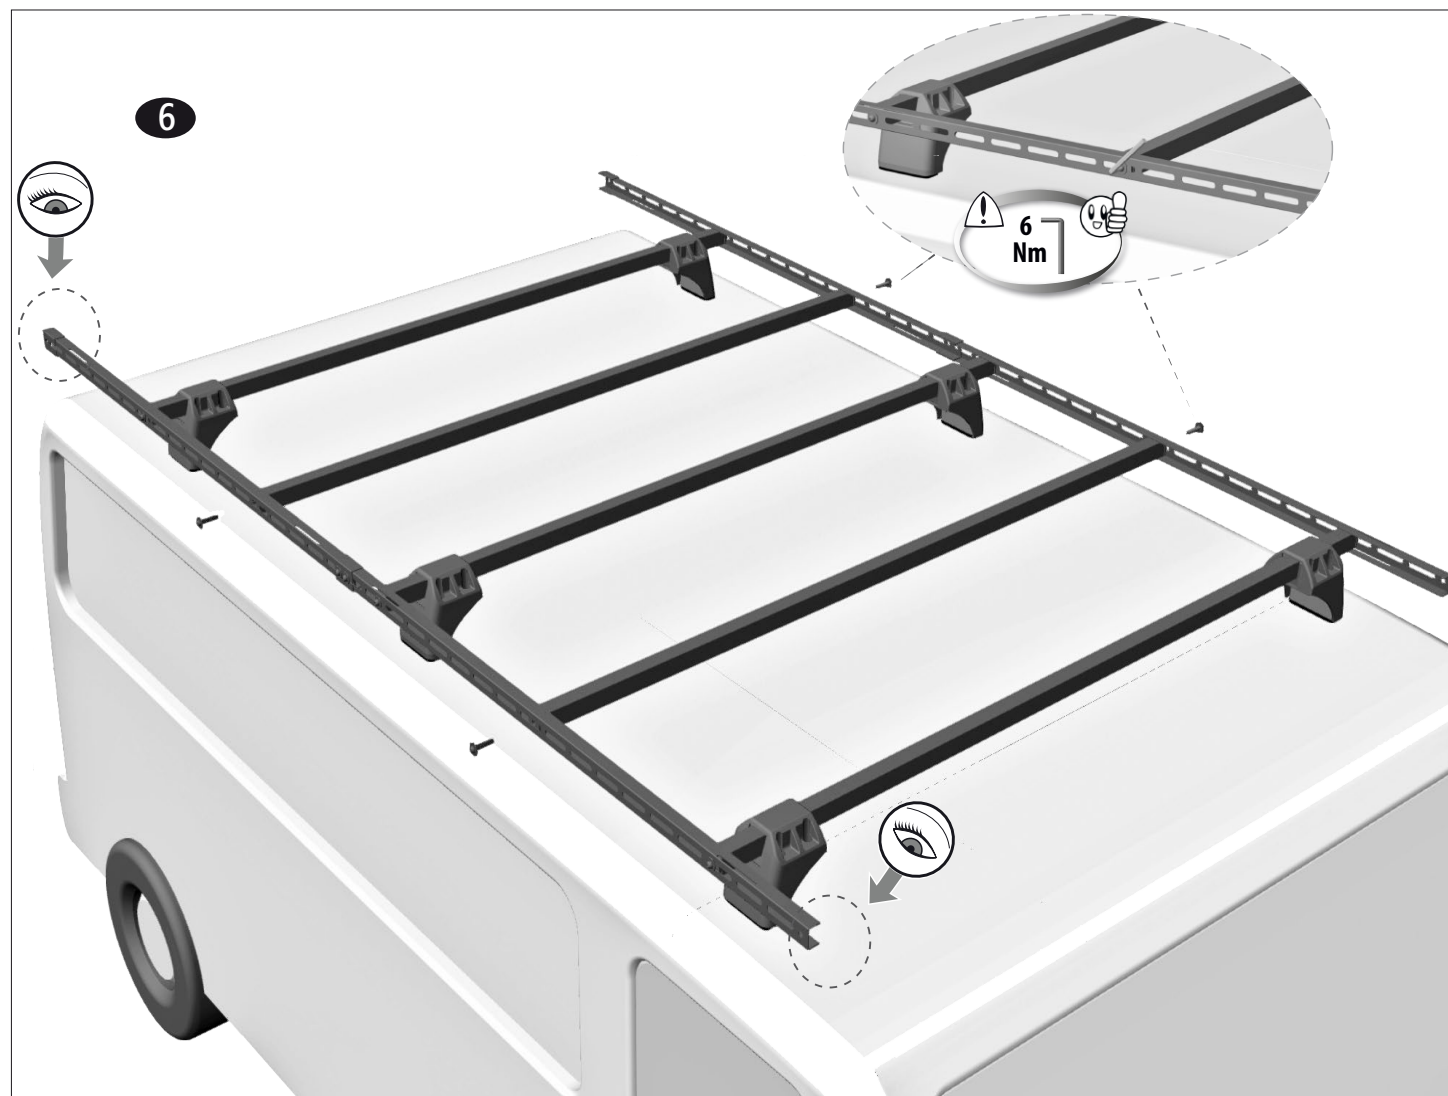



7



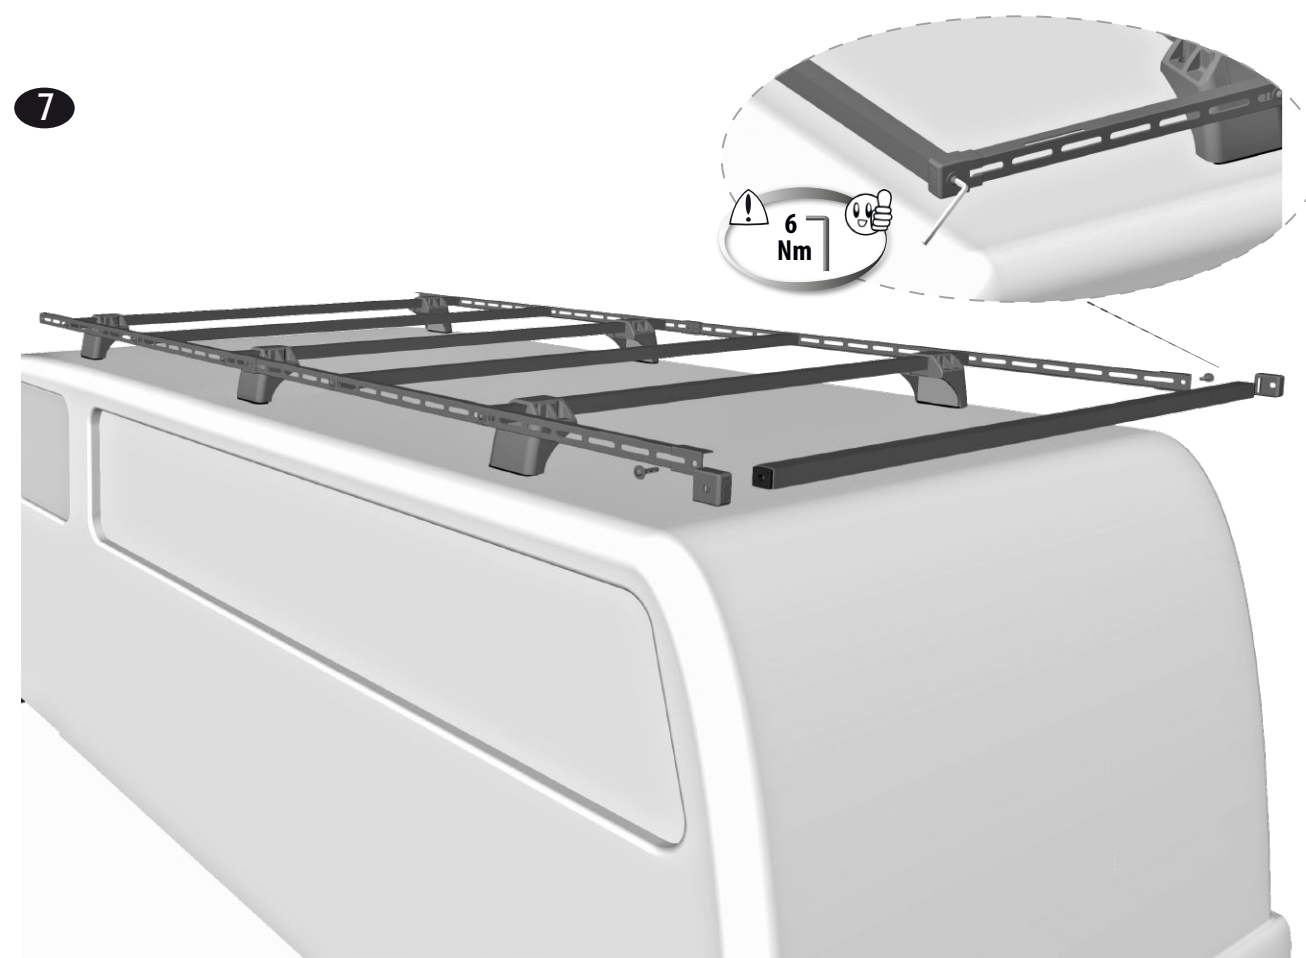


8

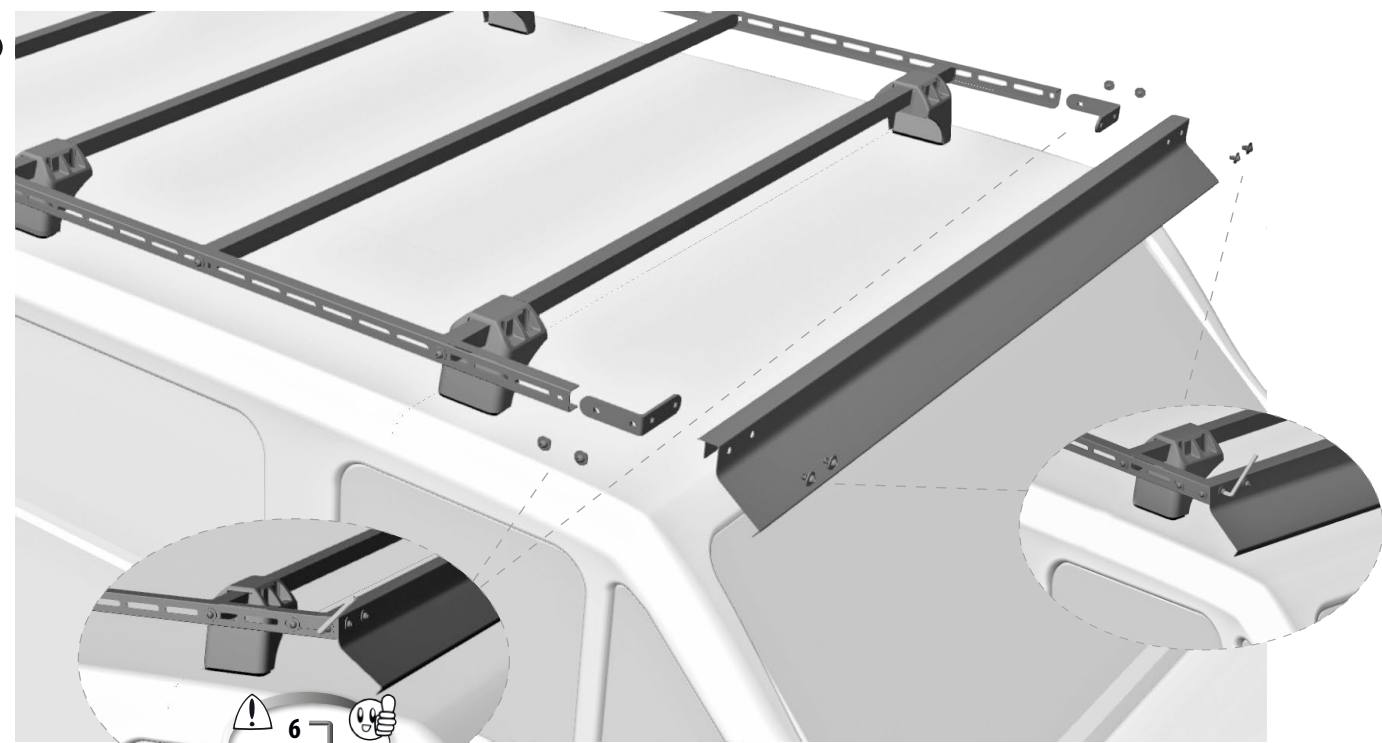



9

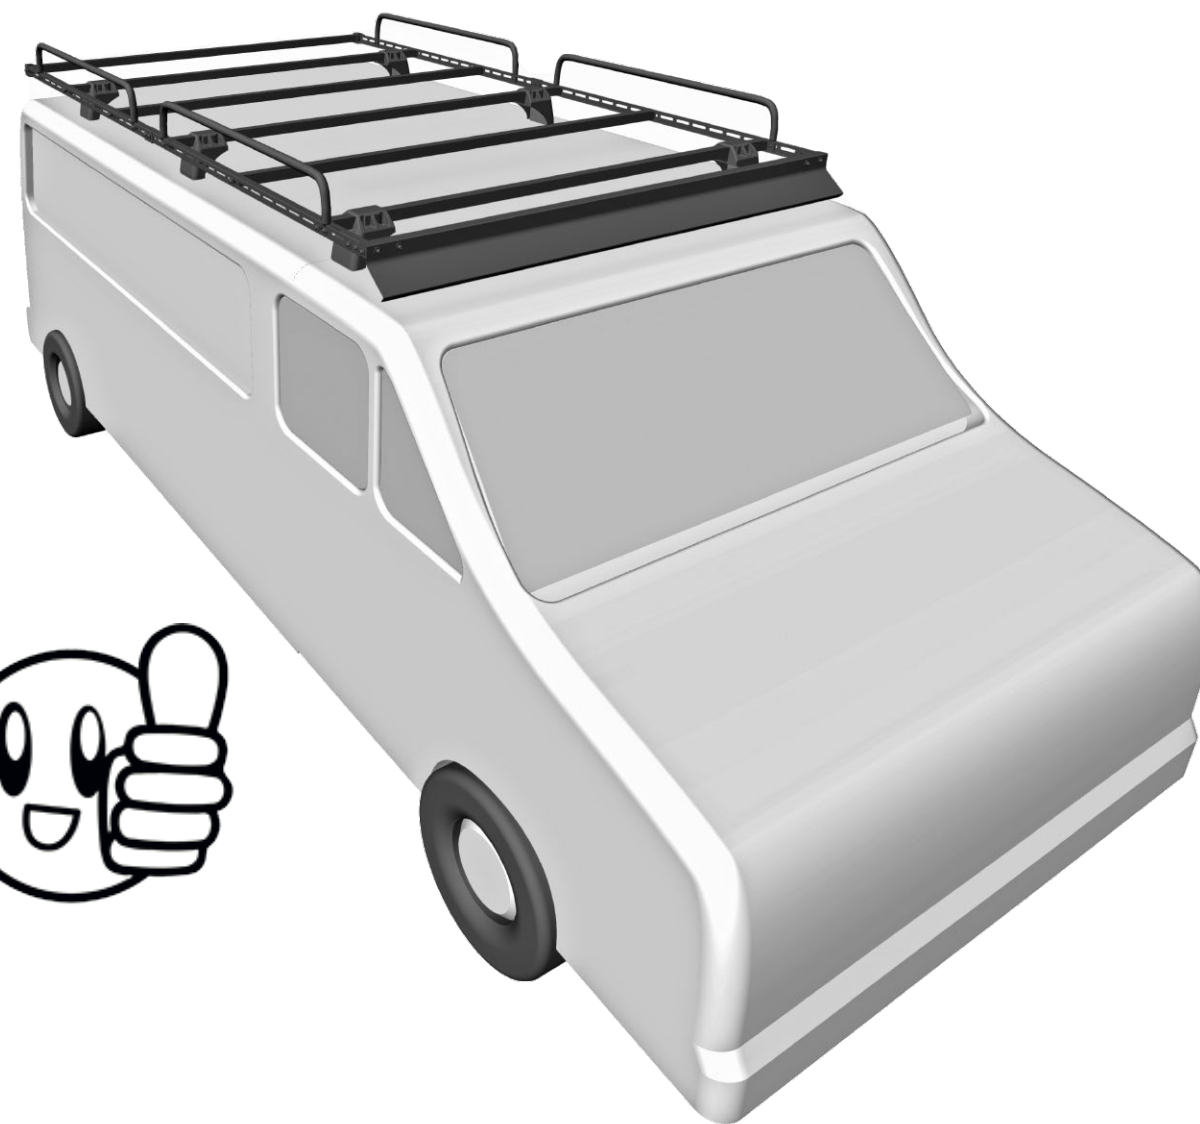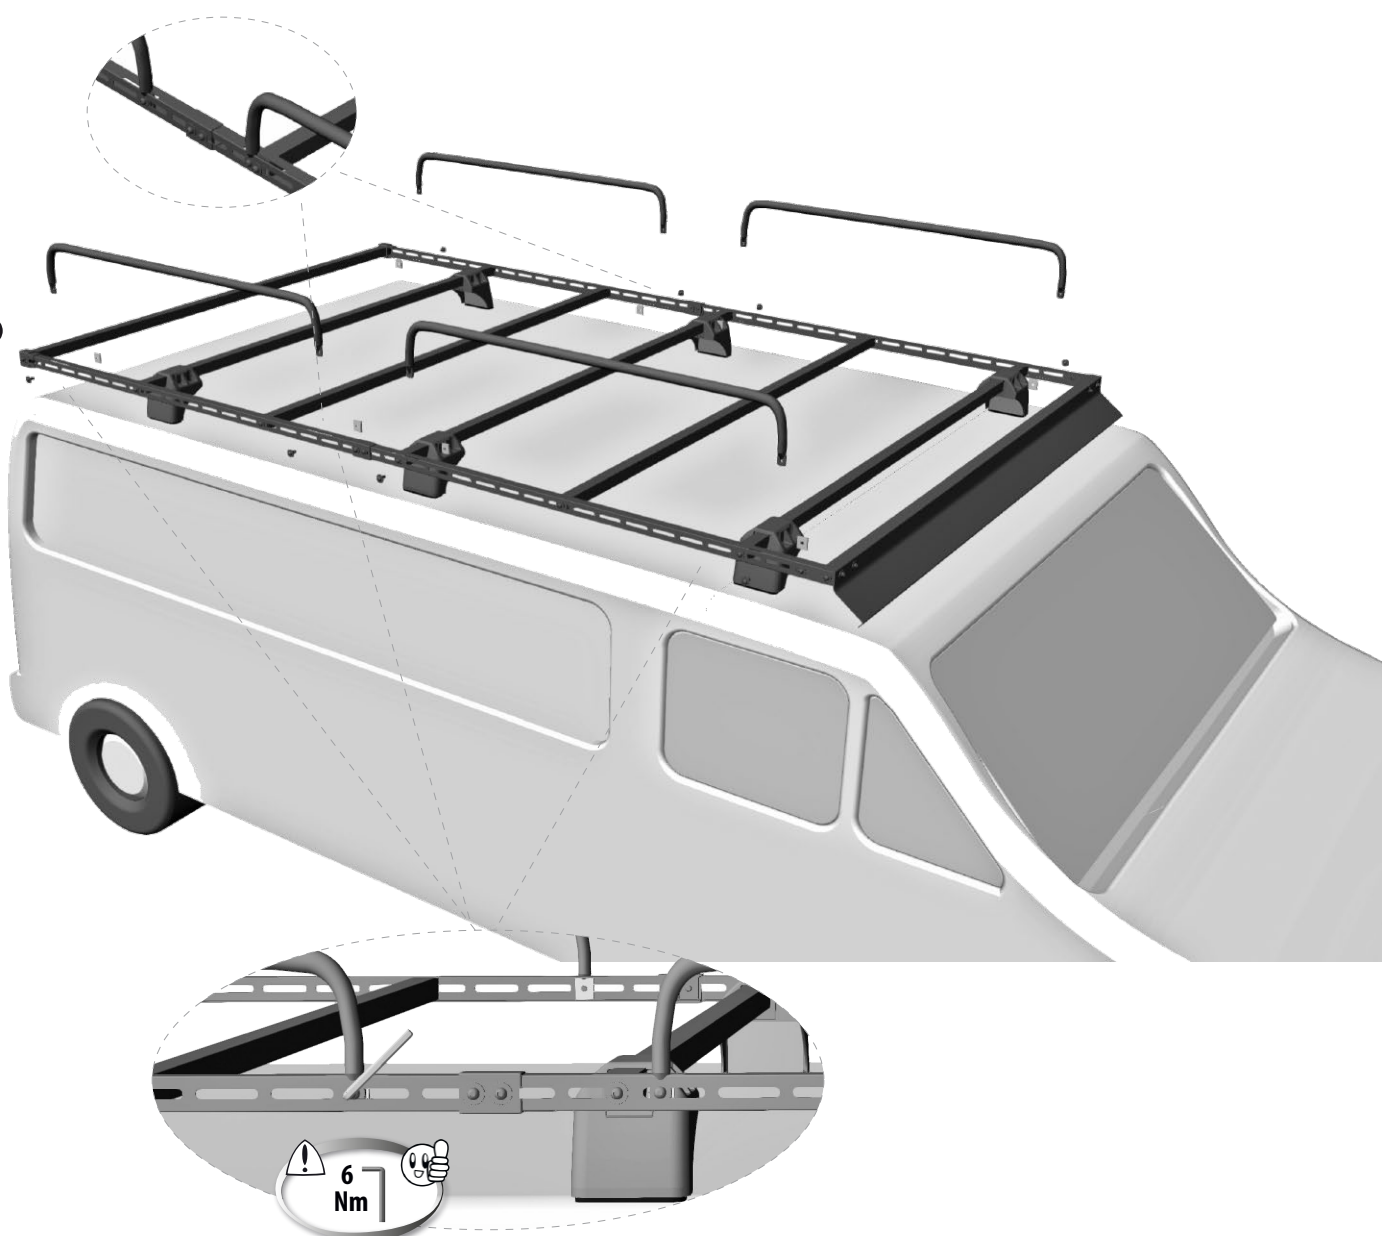

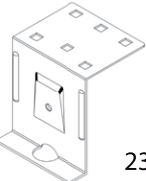N		Q
1	 95R236	6
2	 236	6
3	 G	6
4	 CHAP.20	6
5	 G12	6
6		1


N	BO0061	Q
8	 DIN912 M6x20	24
9	 DIN125 Ø6	24

N	BO0014x4	Q
10	 DIN912 M6x30	6
11	 DIN9021 Ø6	6

N		Q
12	 VENT9	2
13		1


N		Q
14		6

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instrucctions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montaży Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikli montaj Montaj kiti

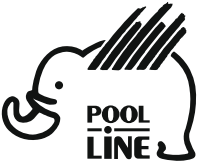


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9**I26R-03.1043

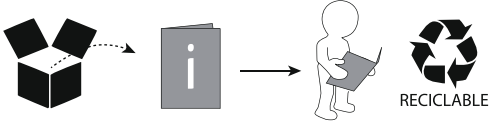

121988

Rv: 06/2023

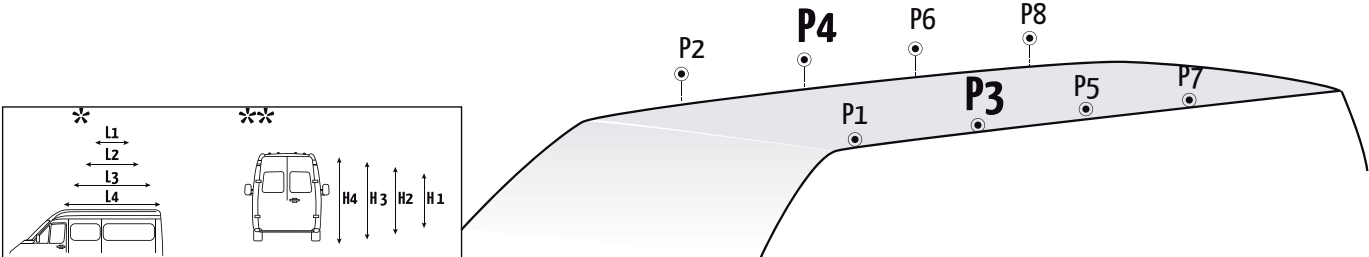

	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8
CITROËN												
Jumper II	L2	H1	94-06	B00014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G
Jumper III	L2	H1	06-14	B00014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G
Jumper III	L2	H2	06-14	B00014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G
Jumper III.2	L2	H1	14-	B00014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G
Jumper III.2	L2	H2	14-	B00014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G
FIAT												
Ducato II	L2	H1	94-06	B00014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G
Ducato III	L2	H1	06-14	B00014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G
Ducato III	L2	H2	06-14	B00014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G
Ducato III.2	L2	H1	14-	B00014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G
Ducato III.2	L2	H2	14-	B00014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G
OPEL												
Movano C	L2	H1	21-	B00014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G
Movano C	L2	H2	21-	B00014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G
PEUGEOT												
Boxer II	L2	H1	94-06	B00014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G
Boxer III	L2	H1	06-14	B00014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G
Boxer III	L2	H2	06-14	B00014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G
Boxer III.2	L2	H1	14-	B00014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G
Boxer III.2	L2	H2	14-	B00014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G

