

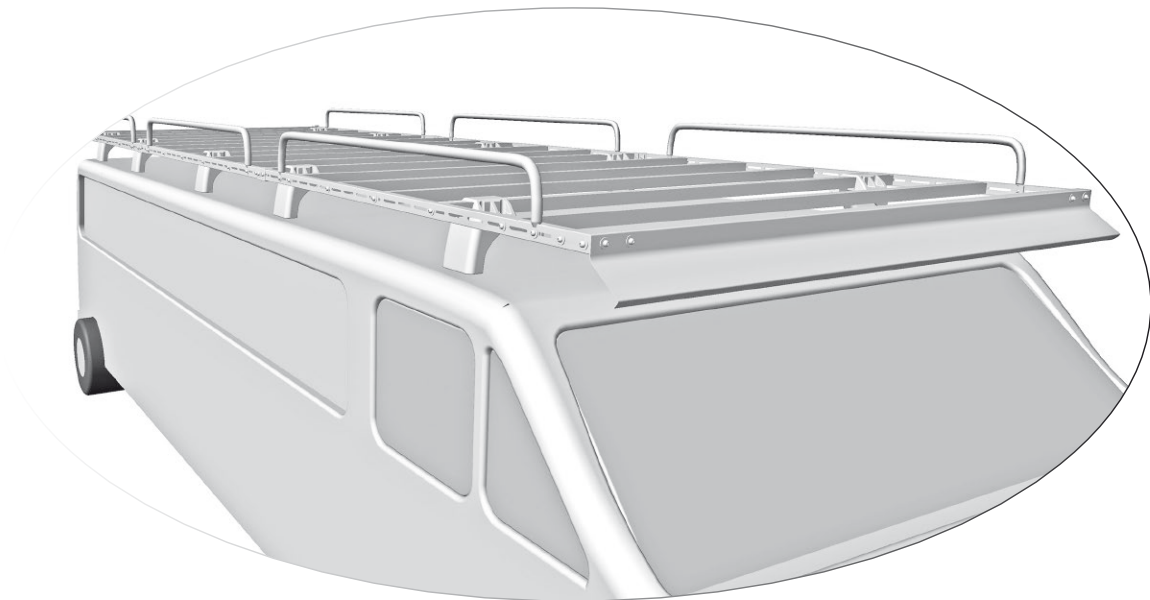


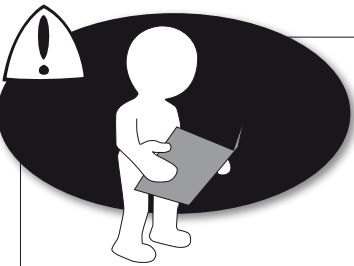


- E** Instrucciones de montaje
- C** Instruccions de muntatge
- GB** Assembly instructions
- F** Instruction de montage
- D** Montageanleitung
- PT** Instruções de montagem
- I** Istruzioni di montaggio
- PL** Instrukcja montażu
- CZ** Montážní návod
- HU** Szerelési Utasítás
- RO** Instrucțiuni de montaj
- HR** Detaljne upute
- TU** Öncelikli montaj

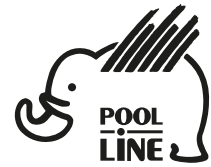


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042

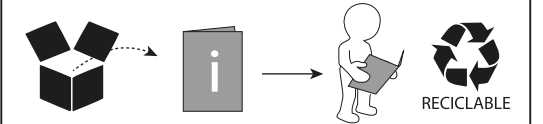


123916


Rv: 07/2025

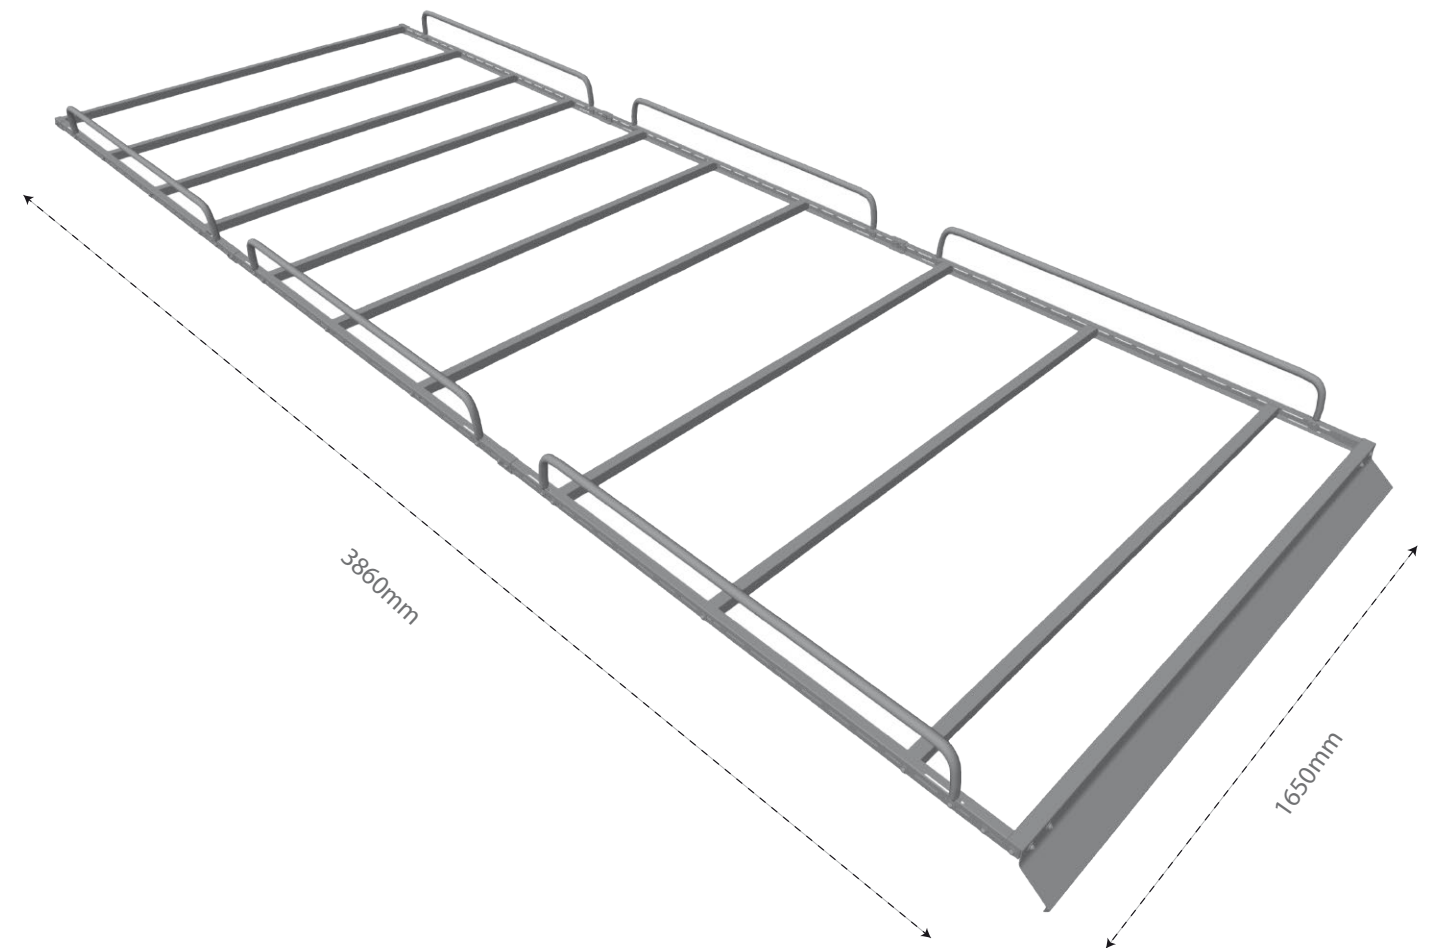


Limpieza pre-instalación
Pre-installation cleaning

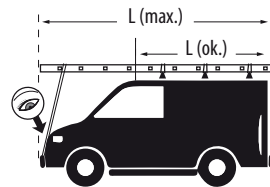


Revisar par de apriete
Check torque


N		Q
21	 S-1650	1
22	 L-1300	6
23	 B-1022	6
24	 T-1635	10
25		20
26		2
27		2
28		8
30	 CHA-M8	20
31	 ISO 7380 M8x40	20
32	 ISO 7380 M8x16	28
33	 DIN 125 Ø 8	48

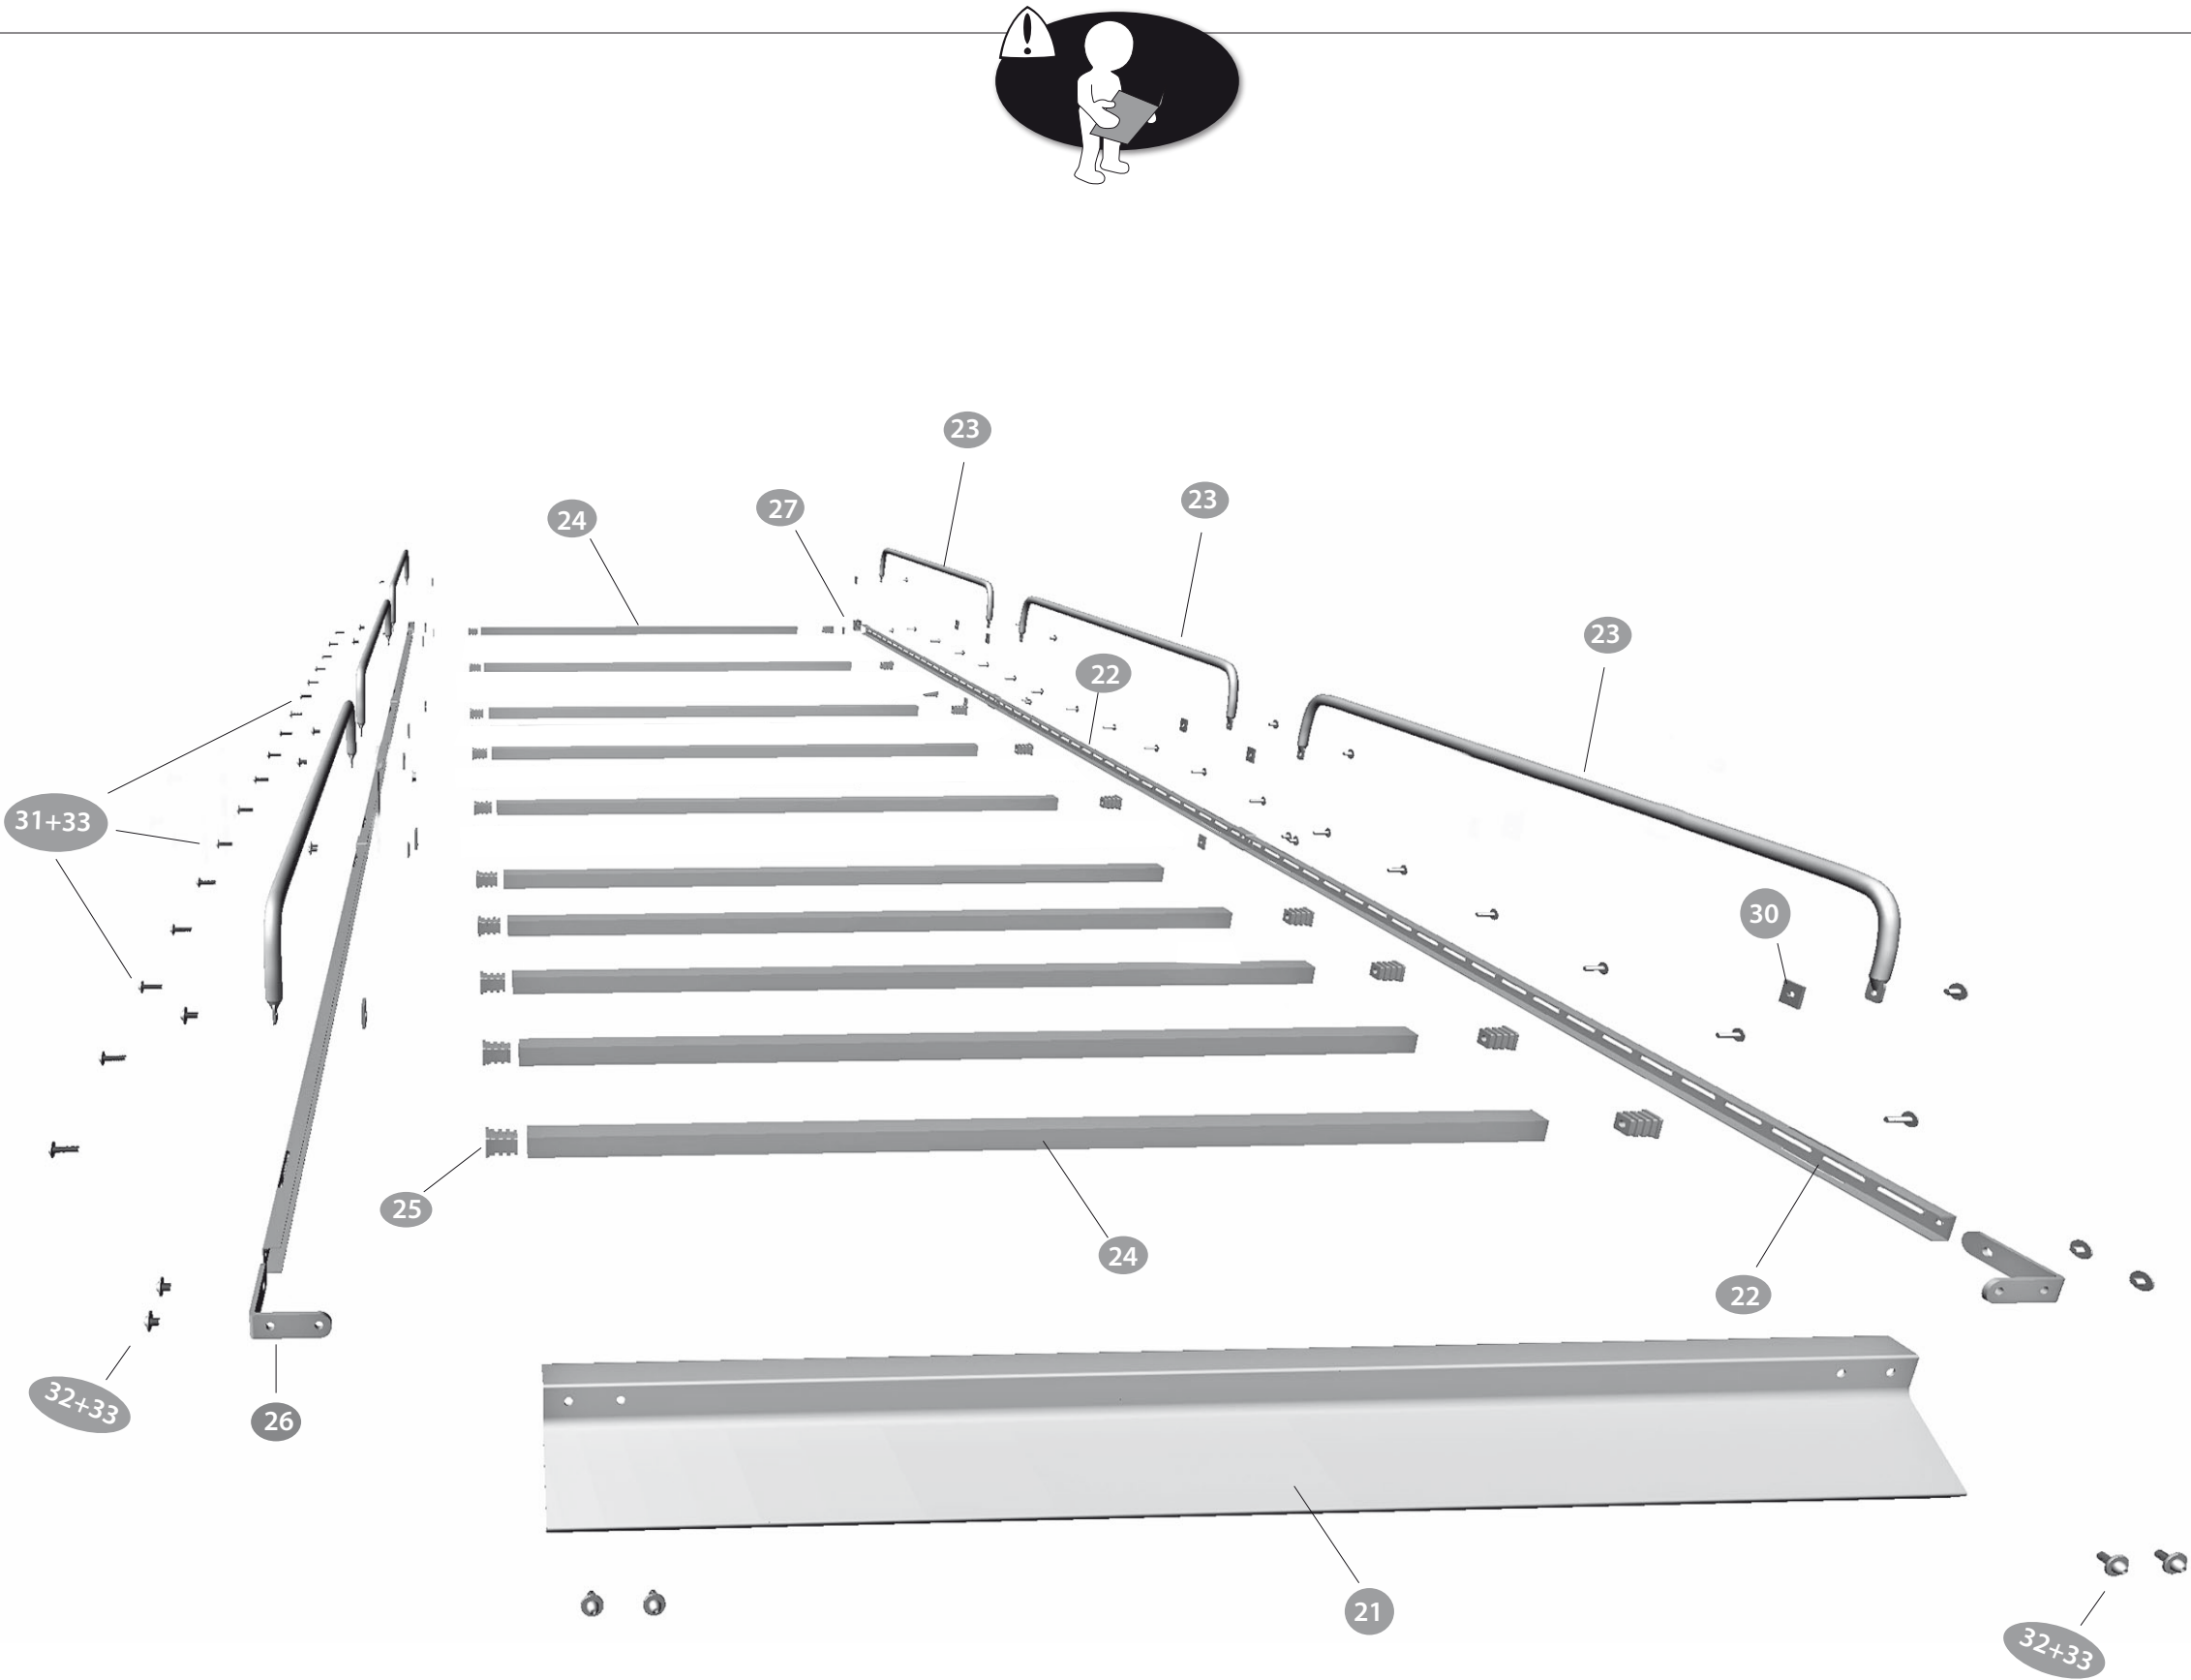


- CITROËN JUMPER L3 - H2
- FIAT DUCATO L3 - H2
- PEUGEOT BOXER L3 - H2
- OPEL MOVANO C L3 - H2

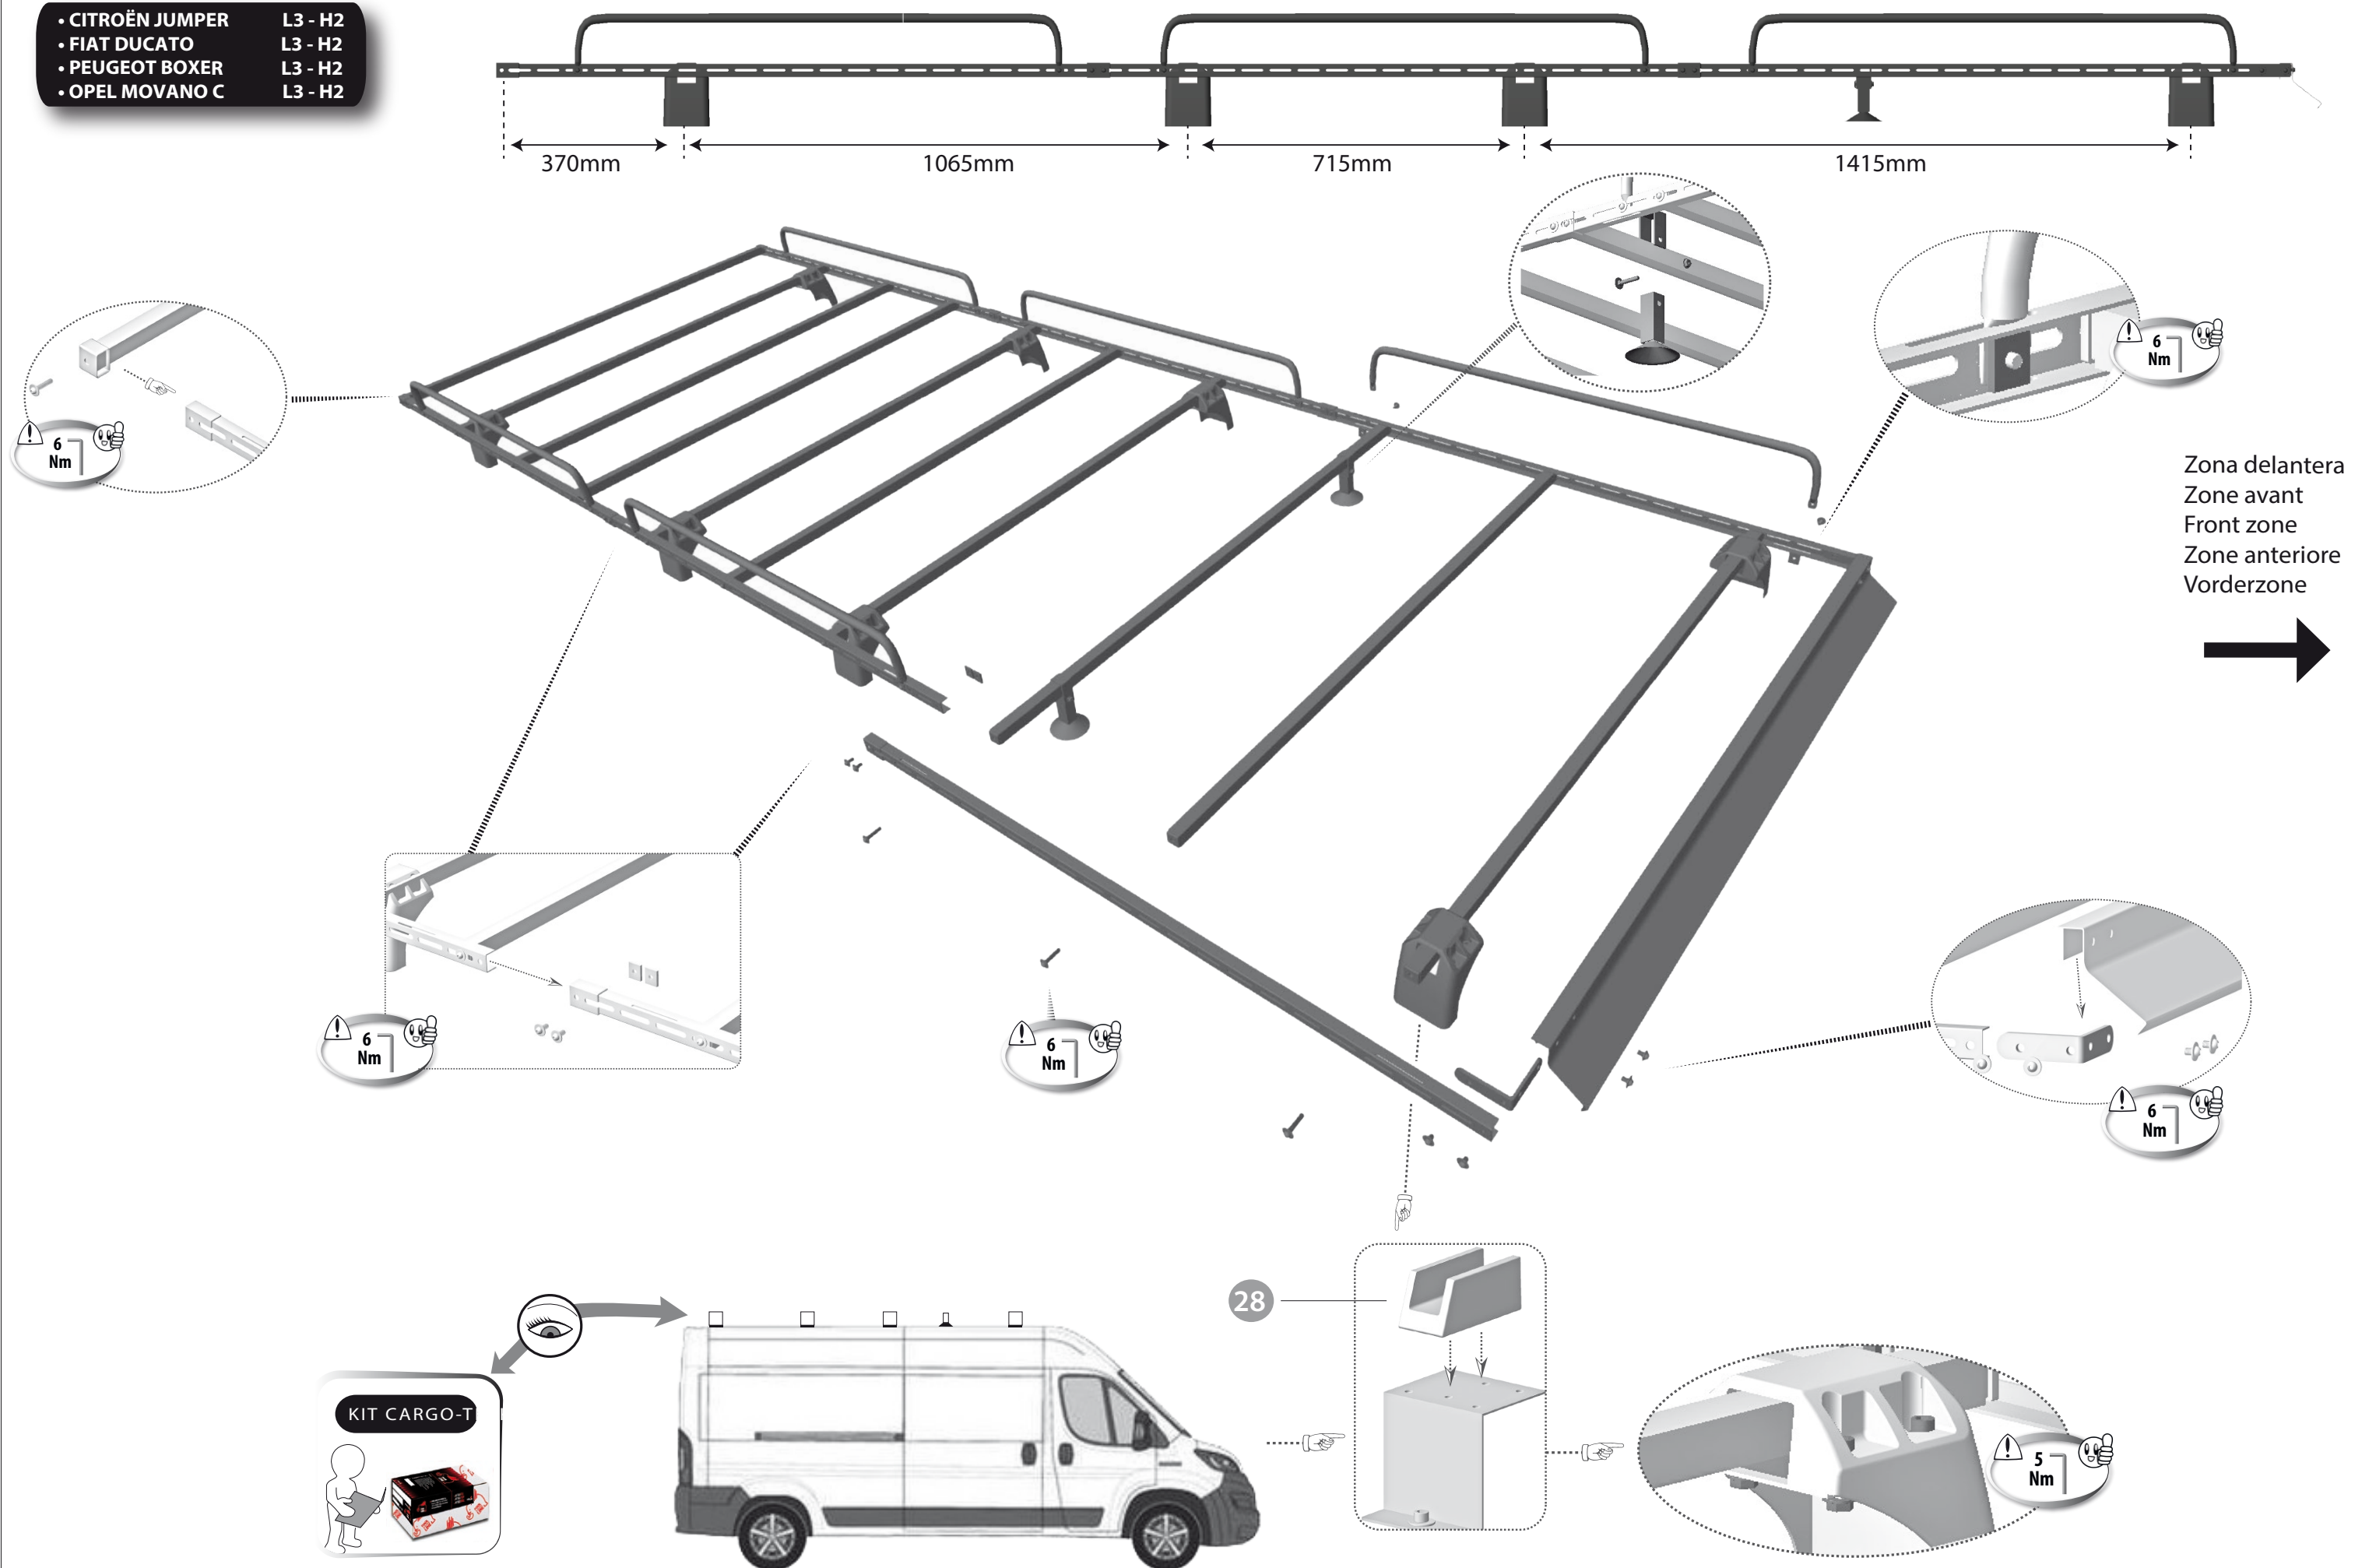


- CITROËN JUMPER L3 - H3
- FIAT DUCATO L3 - H3
- PEUGEOT BOXER L3 - H3
- OPEL MOVANO C L3 - H3

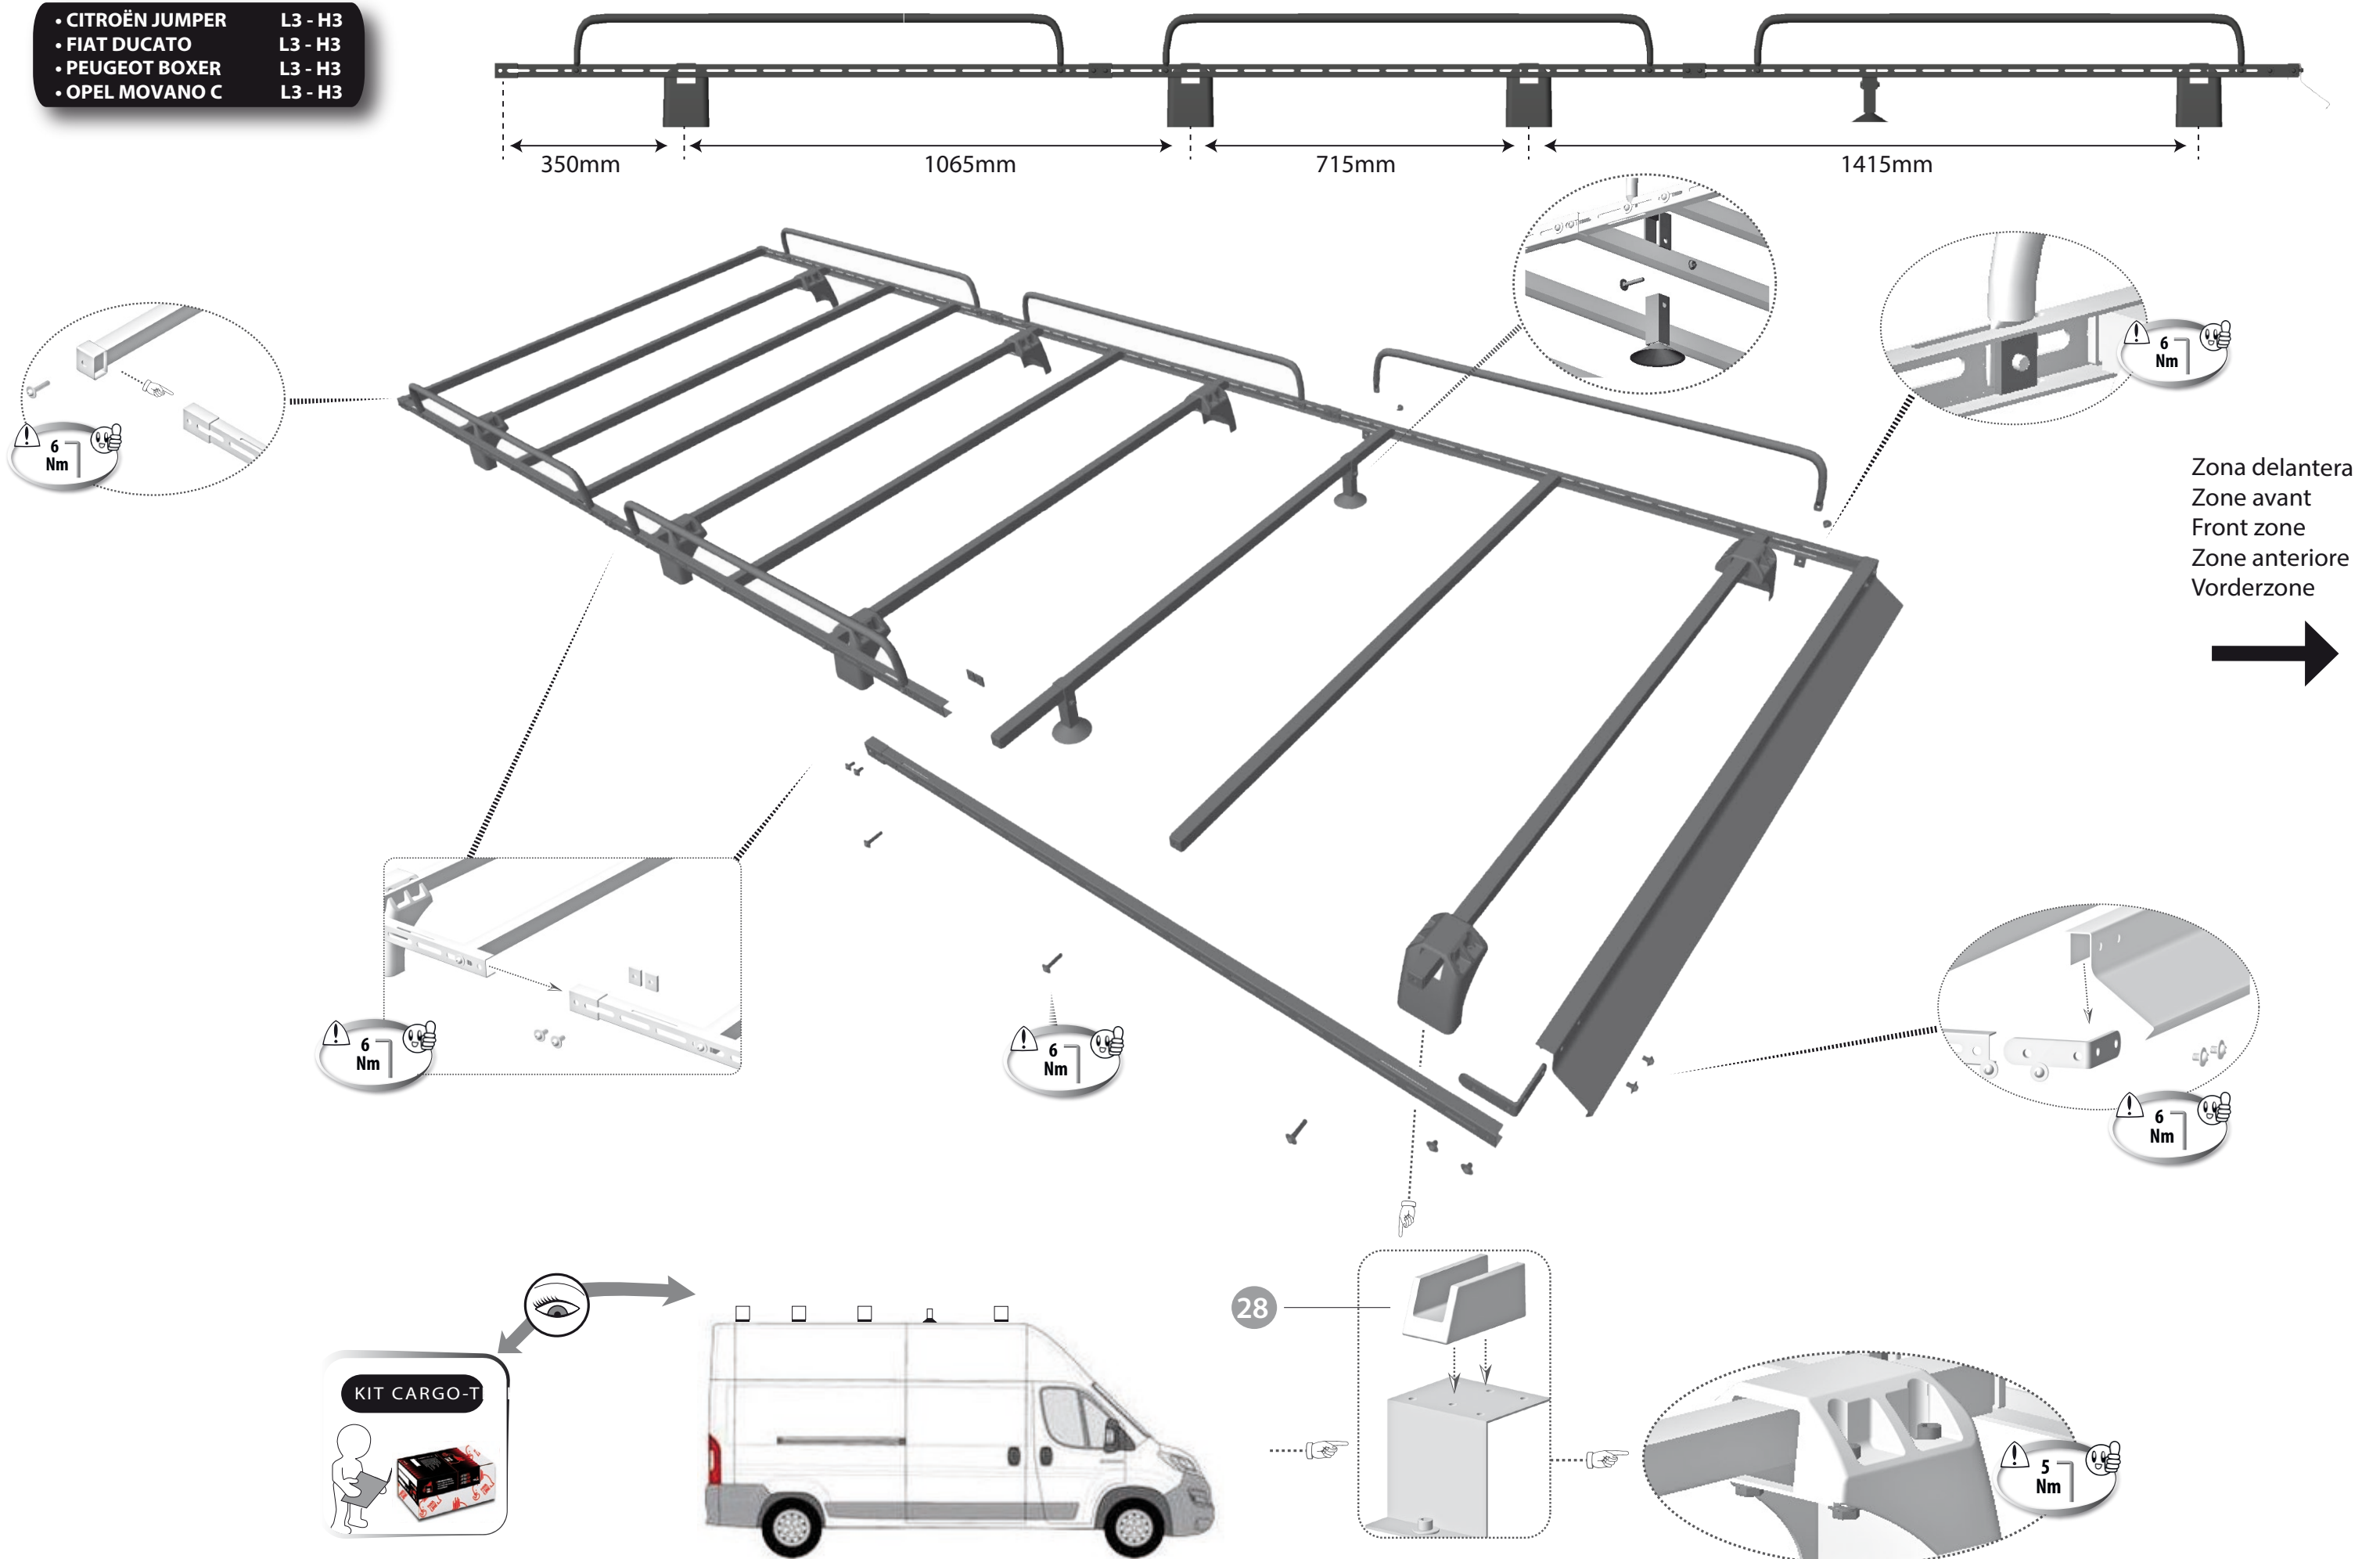


1




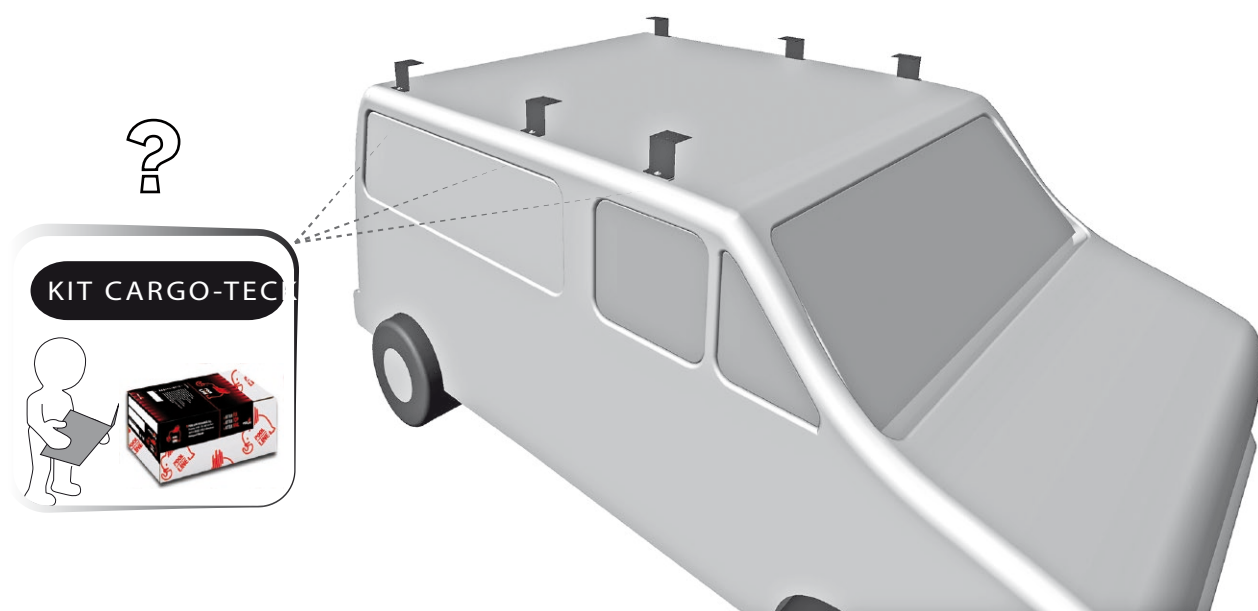


2

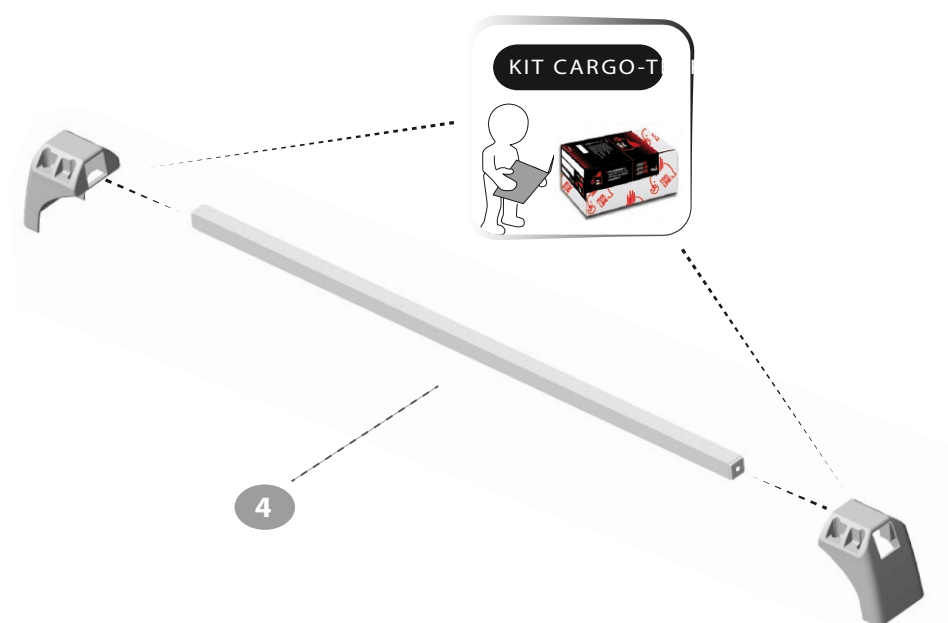


3


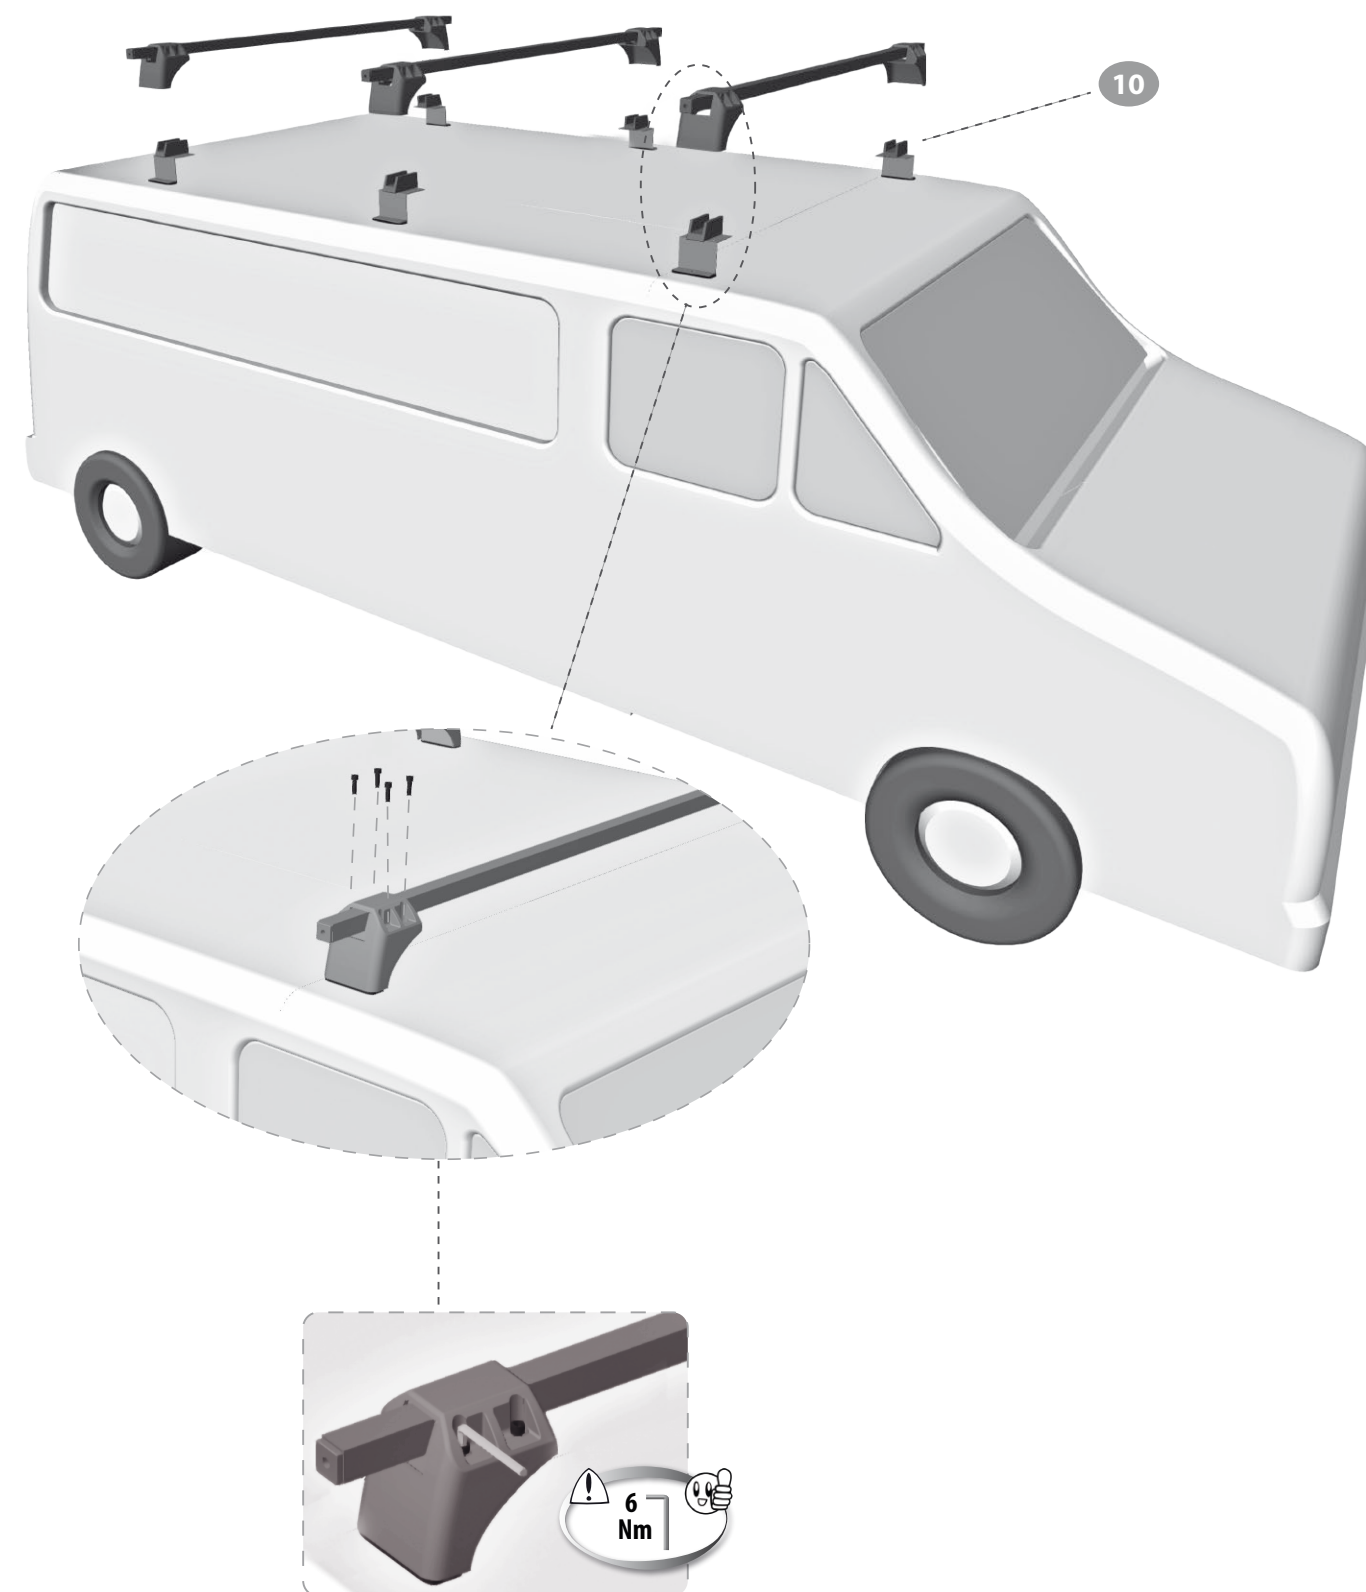


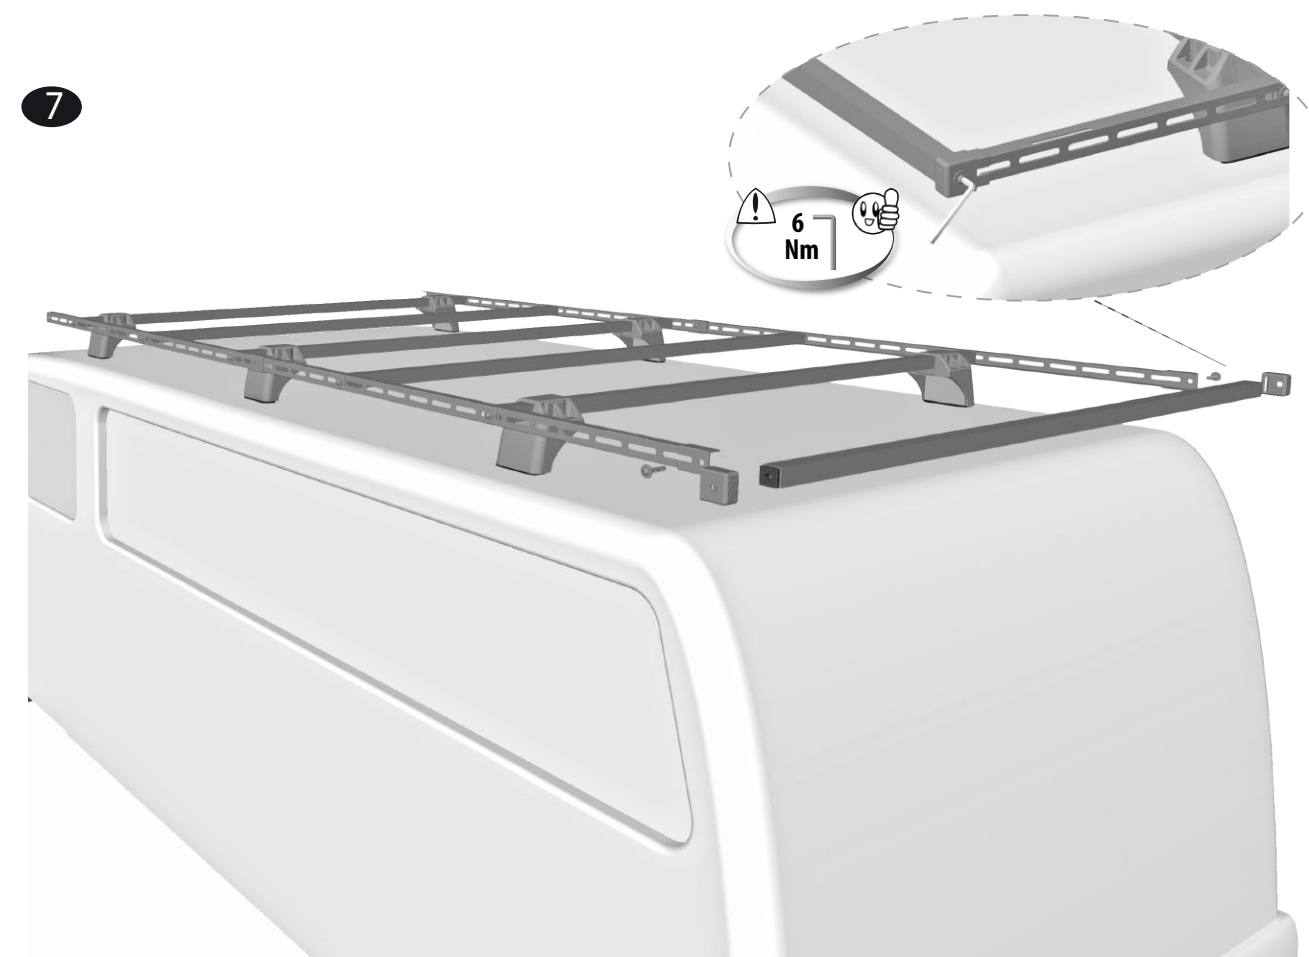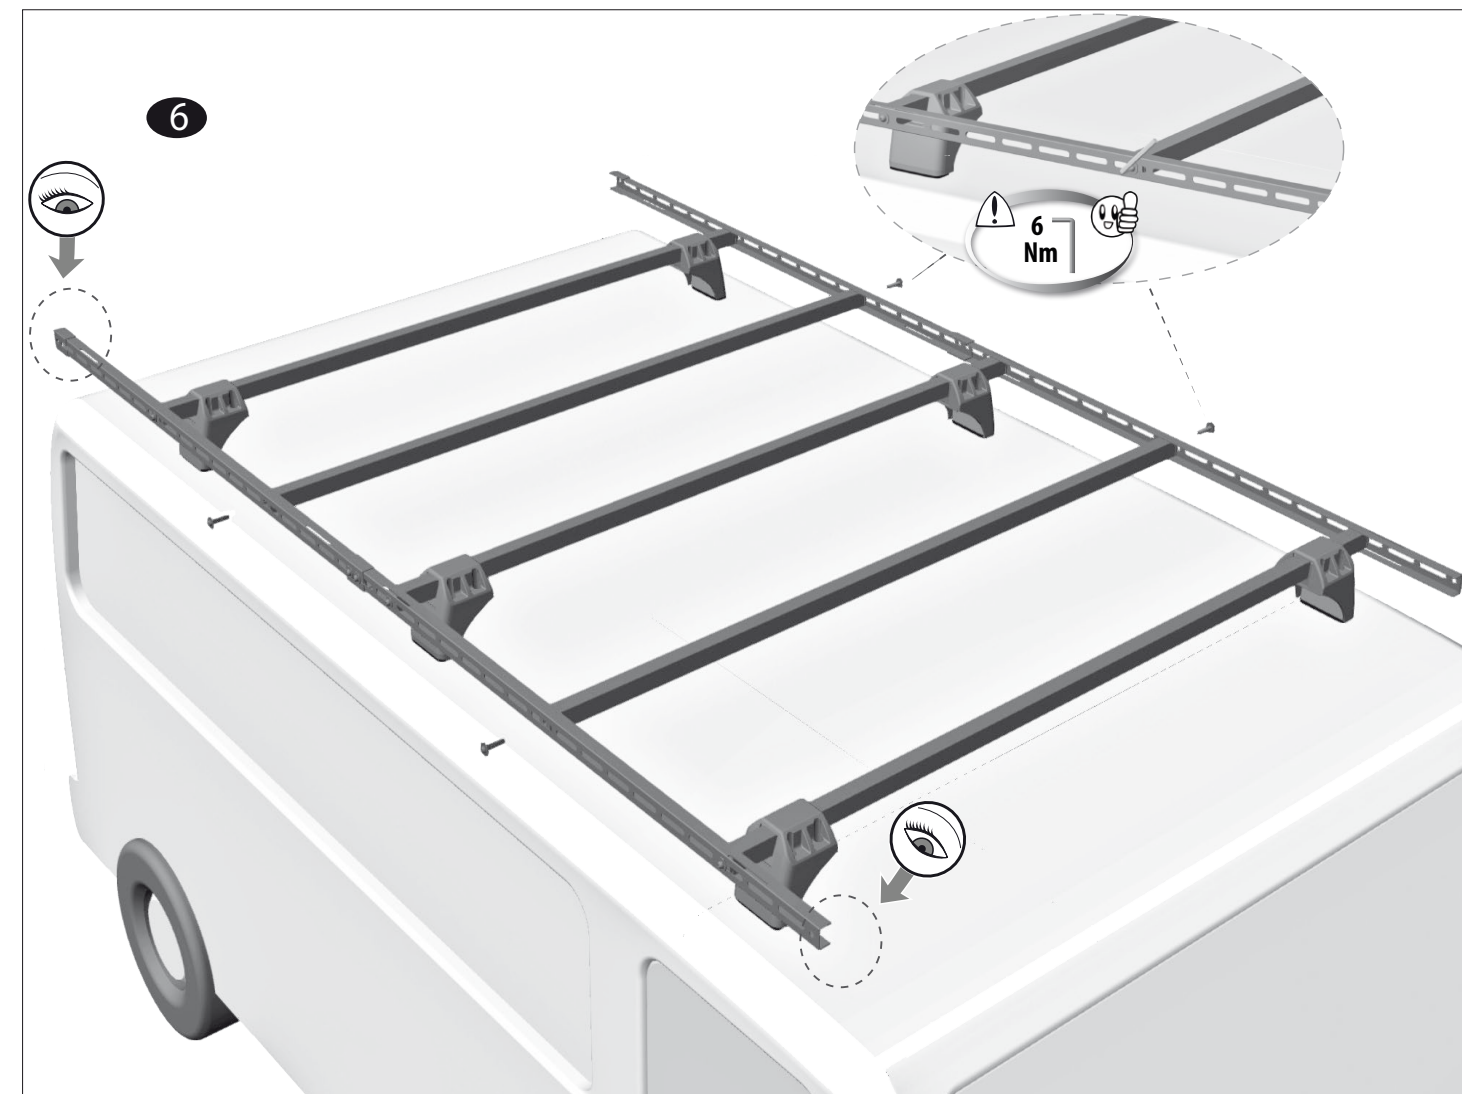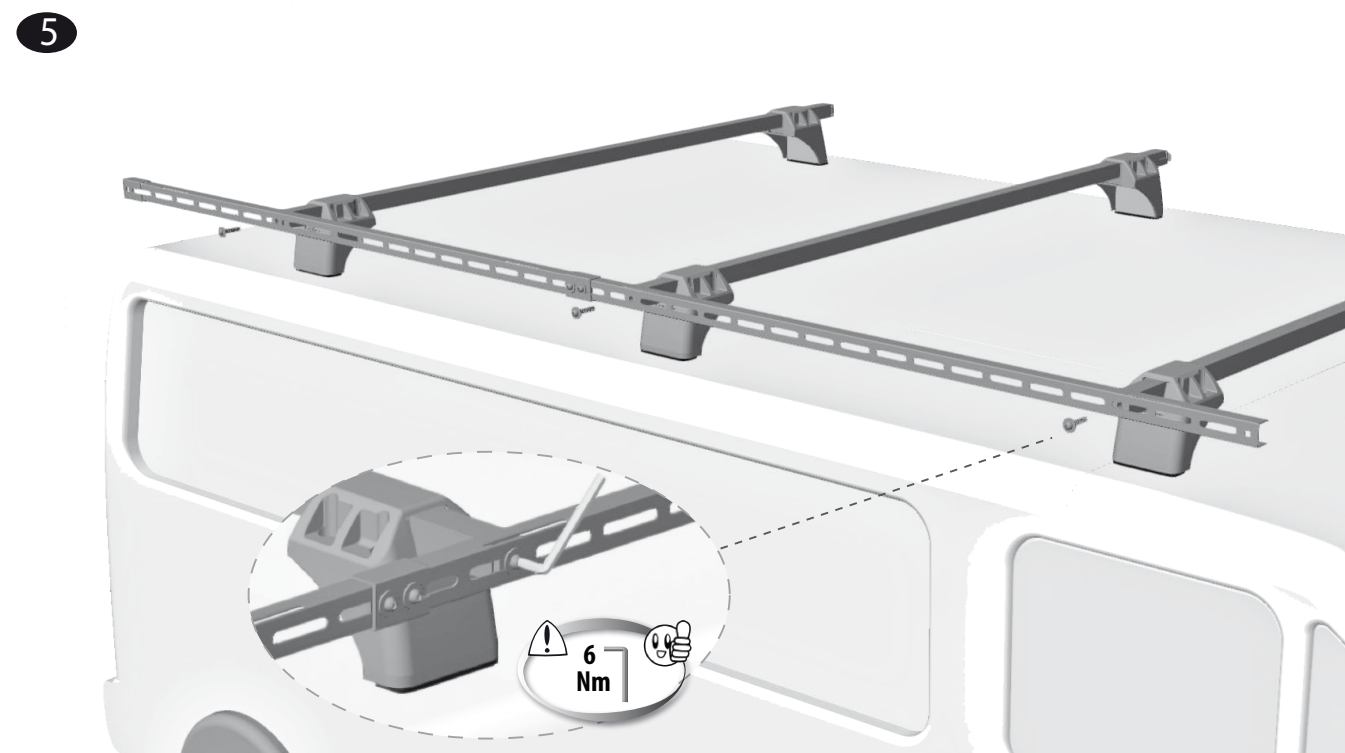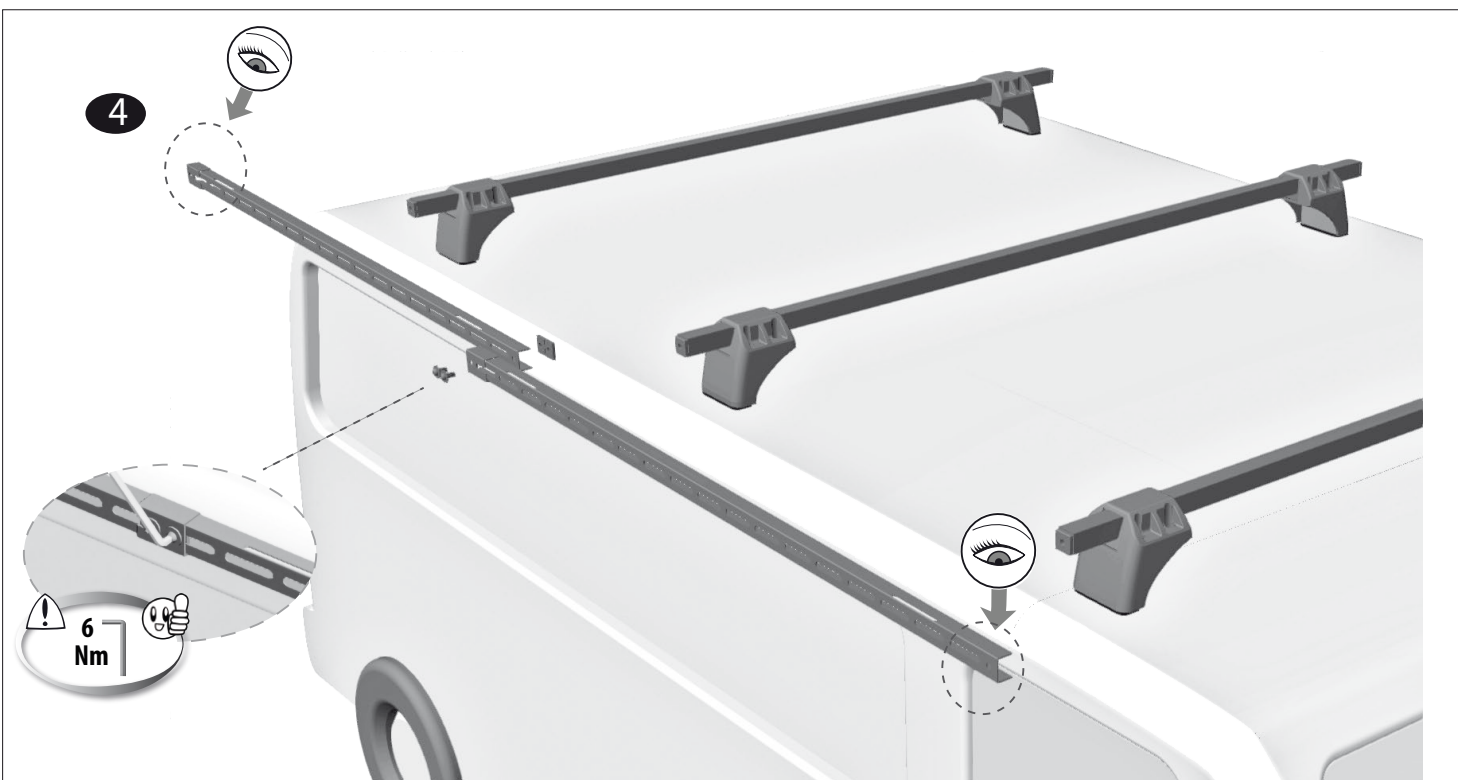





8

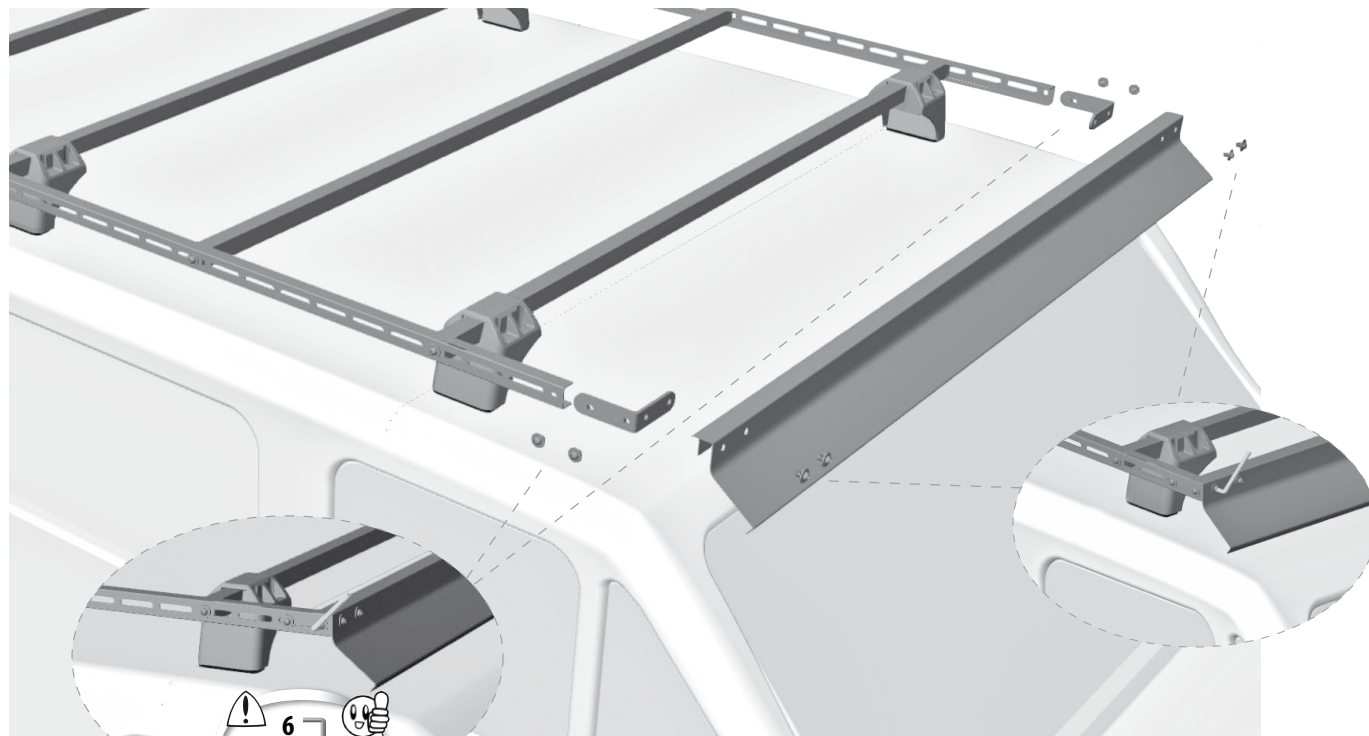


9

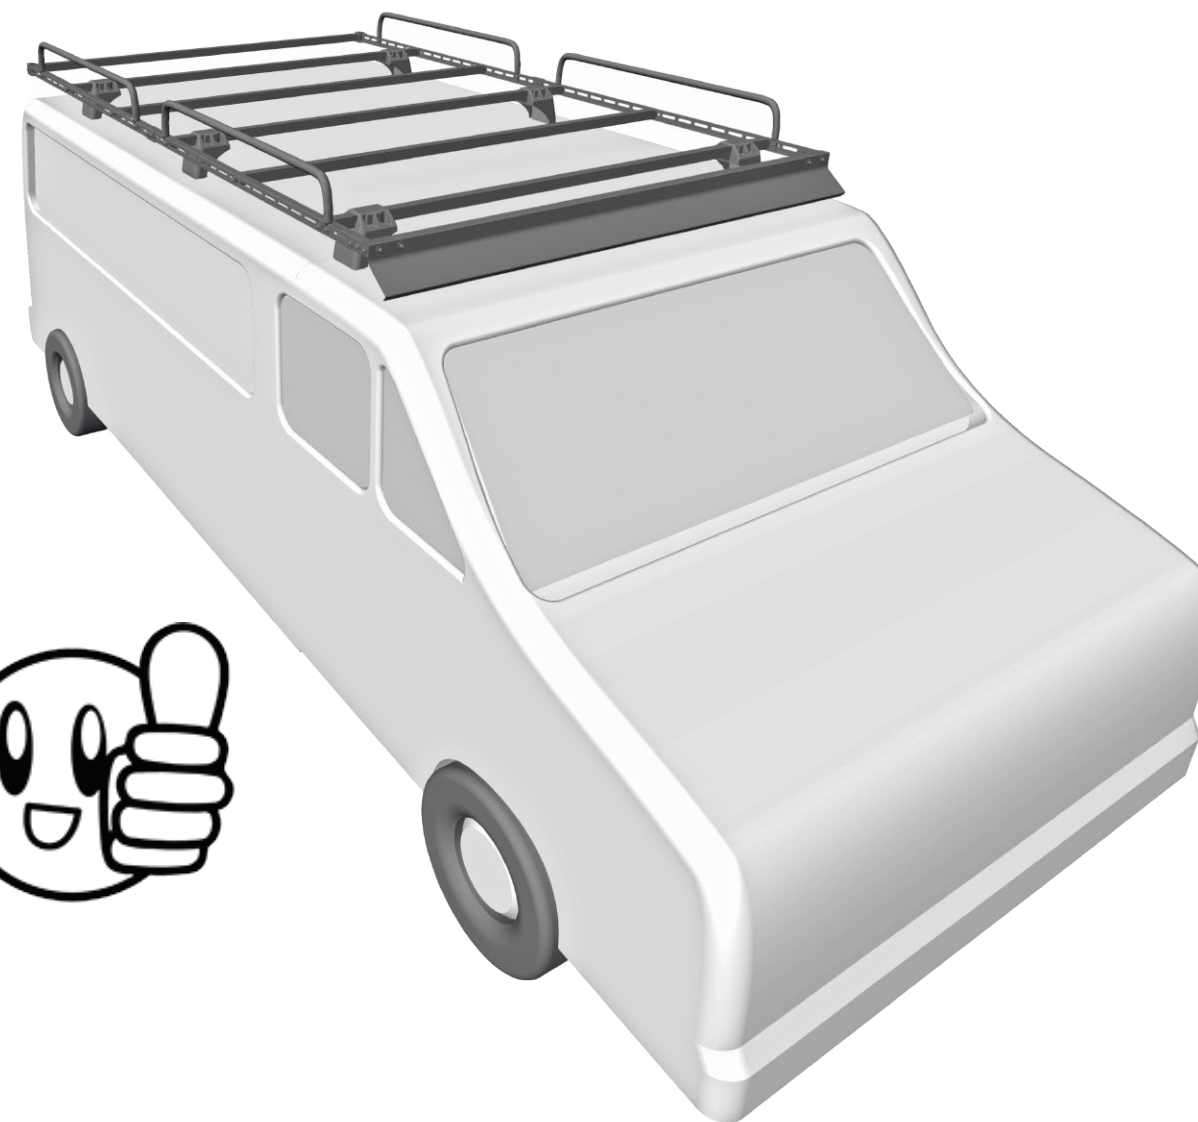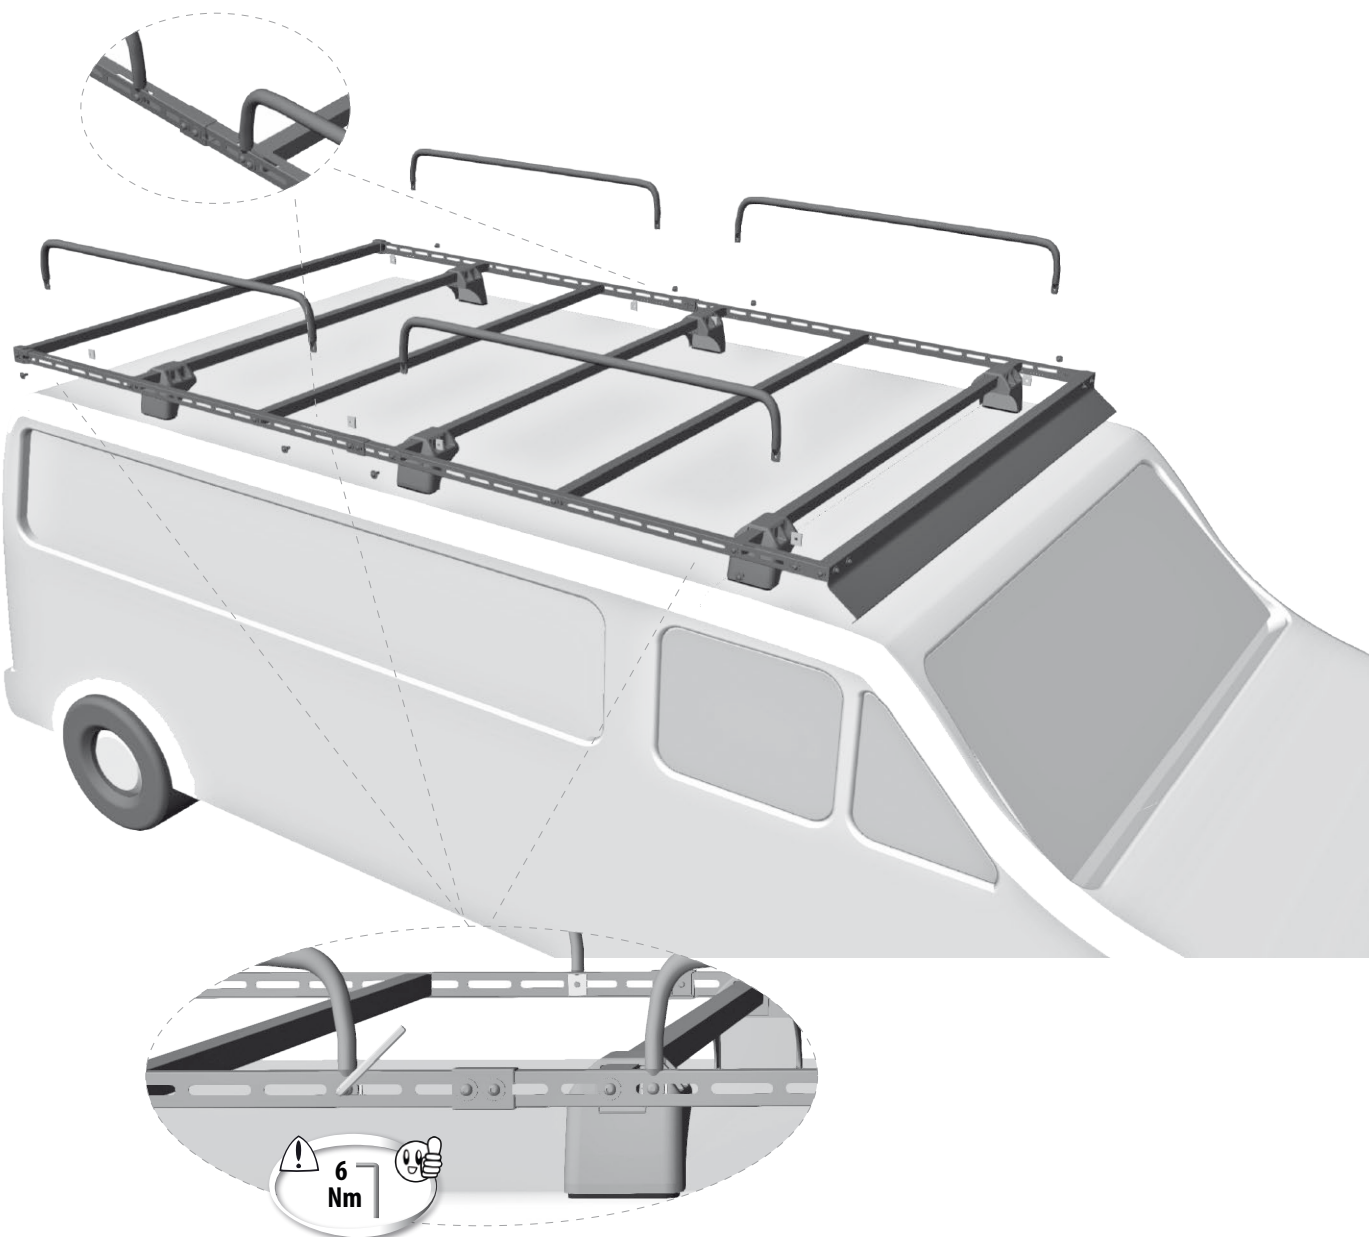


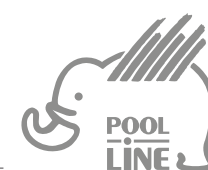

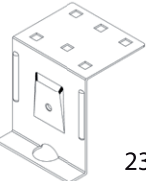N		Q
1	 95R236	8
2	 236	8
3	 G	8
4	 CHAP.20	8
5	 G12	8
6		1


N	BO0060x2	Q
8	 DIN912 M6x20	32
9	 DIN125 Ø6	32

N	BO0014x4	Q
10	 DIN912 M6x30	8
11	 DIN9021 Ø6	8

N		Q
12	 VENT9	2
13		1

N		Q
14		8

E	Instrucciones de montaje	Kit de fijación
C	Instruccions de muntatge	Kit de fixació
GB	Assembly instrucctions	Fixation Kit
F	Instruction de montage	Kit fixation
D	Montageanleitung	Stützfuß-Kit
PT	Instruções de montagem	Kit fixação
I	Istruzioni di montaggio	Kit di fissaggio
PL	Instrukcja montaży	Element mocujący
CZ	Montážní návod	Fixační kit
HU	Szerelési Utasítás	Rögzítő készlet
RO	Instrucțiuni de montaj	Kit de fixare
HR	Detaljne upute	Kit za montažu
TU	Öncelikli montaj	Montaj kiti

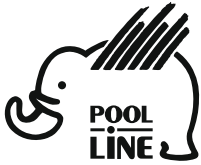

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN:

E9

26R-03.1043






RECLICLABLE

121986


Rv: 08/2022



Limpieza pre-instalación





Pre-installation cleaning

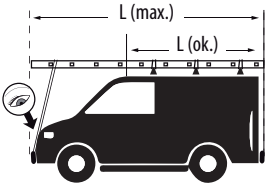

Revisar par de apriete



Check torque

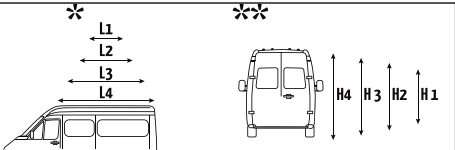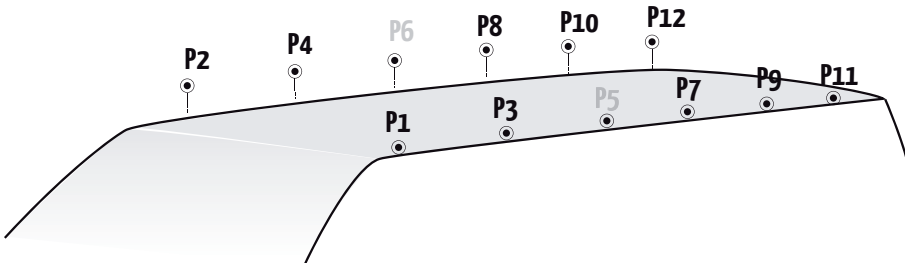	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
CITROËN																
Jumper II / III	L3	H2	06-	B00014	236+G	236+G	VENT9	VENT9			236+G	236+G	236+G	236+G	236+G	236+G
Jumper II / III	L3	H3	06-	B00014	236+G	236+G	VENT9	VENT9			236+G	236+G	236+G	236+G	236+G	236+G
FIAT																
Ducato III	L3	H2	06-	B00014	236+G	236+G	VENT9	VENT9			236+G	236+G	236+G	236+G	236+G	236+G
Ducato III	L3	H3	06-	B00014	236+G	236+G	VENT9	VENT9			236+G	236+G	236+G	236+G	236+G	236+G
OPEL																
Movano C	L3	H2	21-	B00014	236+G	236+G	VENT9	VENT9			236+G	236+G	236+G	236+G	236+G	236+G
Movano C	L3	H3	21-	B00014	236+G	236+G	VENT9	VENT9			236+G	236+G	236+G	236+G	236+G	236+G
PEUGEOT																
Boxer II / III	L3	H2	06-	B00014	236+G	236+G	VENT9	VENT9			236+G	236+G	236+G	236+G	236+G	236+G
Boxer II / III	L3	H3	06-	B00014	236+G	236+G	VENT9	VENT9			236+G	236+G	236+G	236+G	236+G	236+G

