

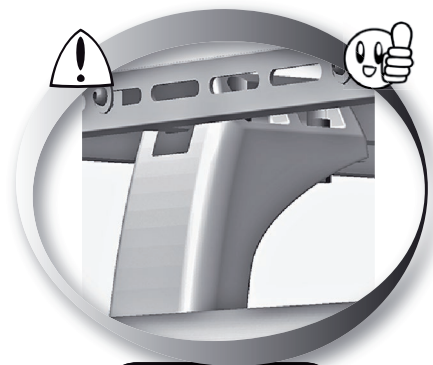


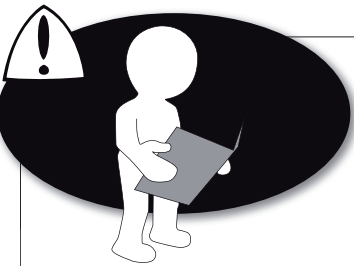


KIT CARGO-TECK

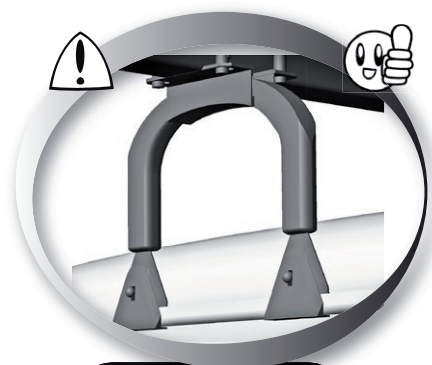

KIT CARGO-TECK FEET

- E** Instrucciones de montaje
- C** Instruccions de muntatge
- GB** Assembly instructions
- F** Instruction de montage
- D** Montageanleitung
- PT** Instruções de montagem
- I** Istruzioni di montaggio
- PL** Instrukcja montażu
- CZ** Montážní návod
- HU** Szerelési Utasítás
- RO** Instrucțiuni de montaj
- HR** Detaljne upute
- TU** Öncelikli montaj

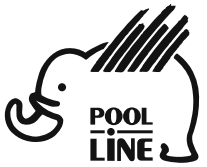

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net



200







Nº HOMOLOGACIÓN: **E9** 26R-03.1042













123952

Rv: 06/2023

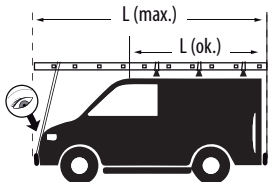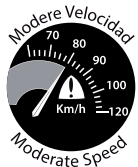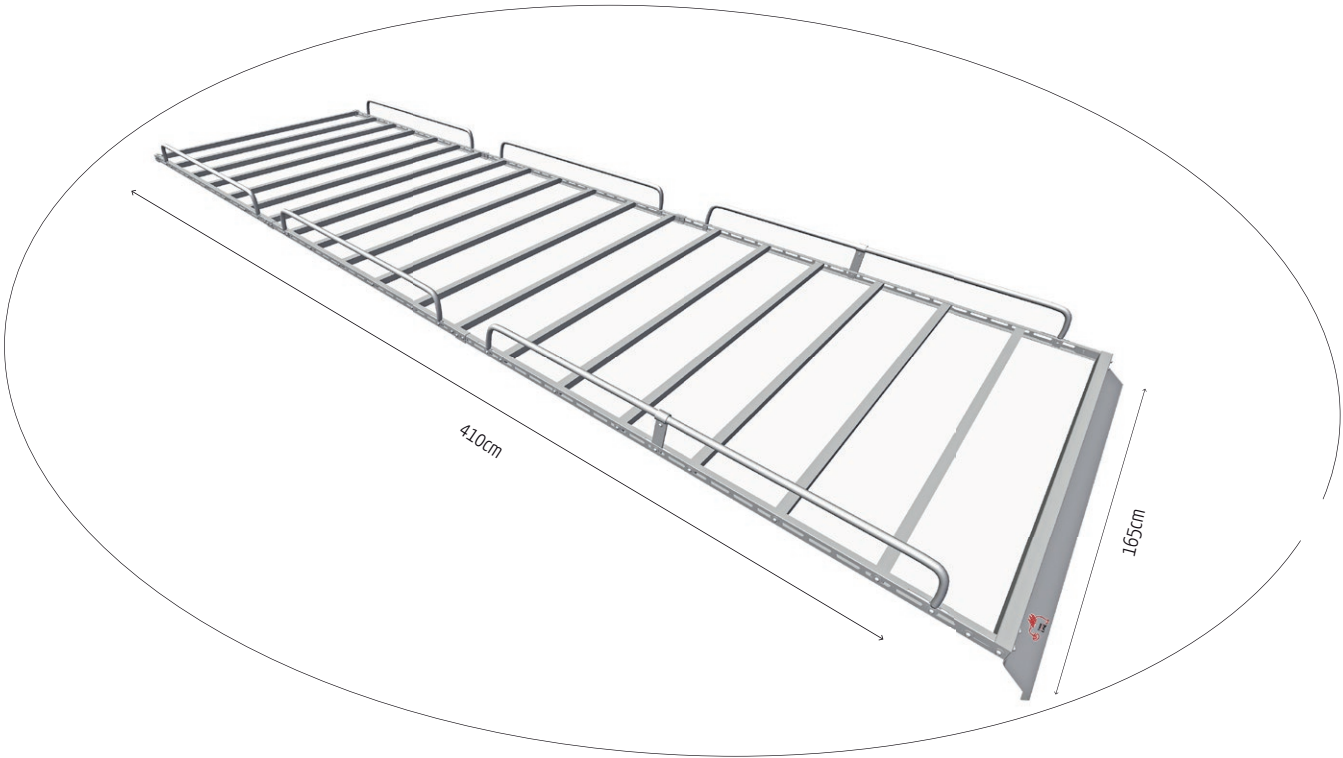


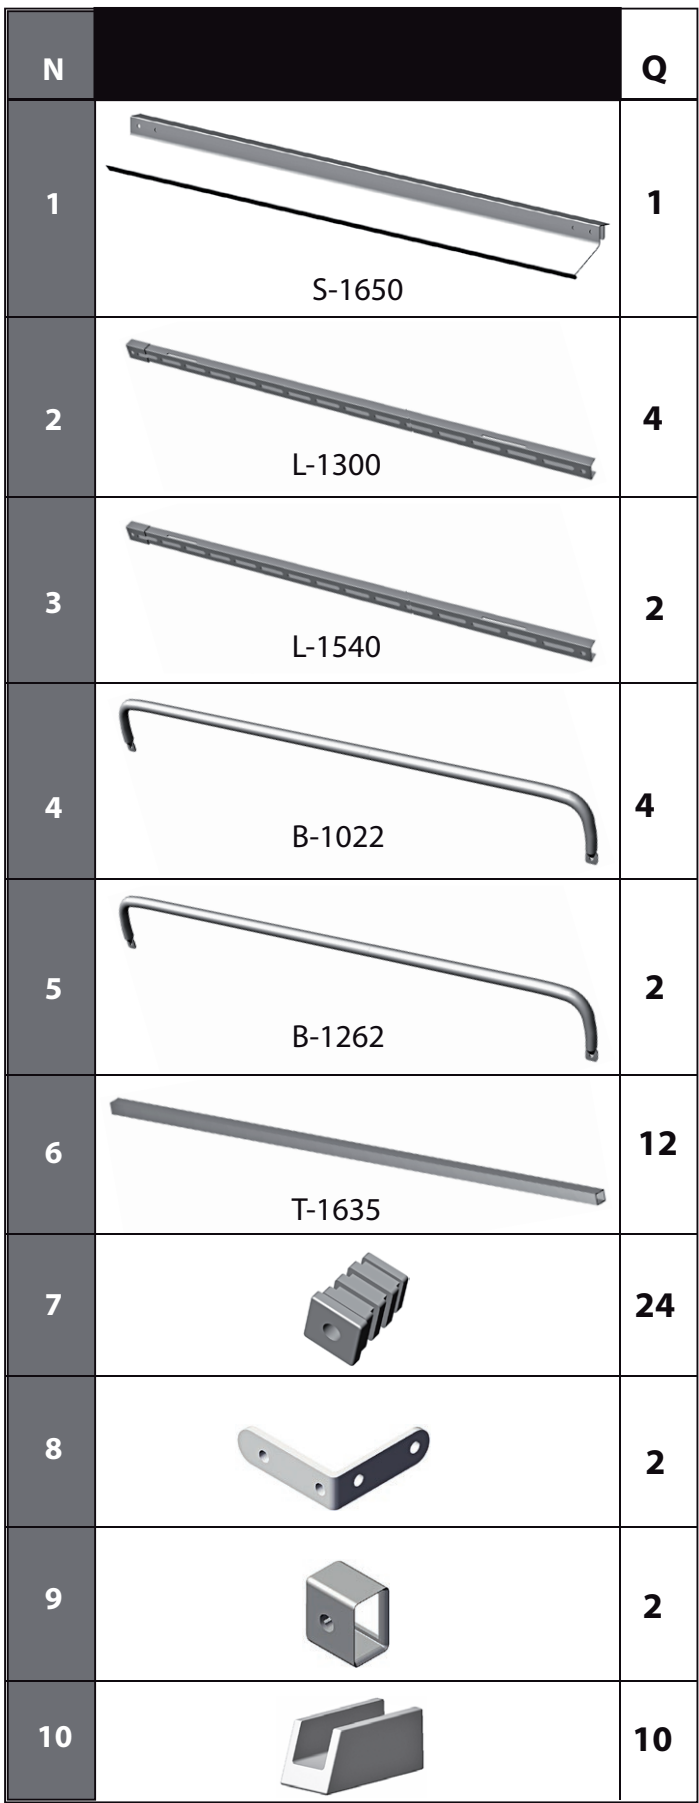
[illegible]

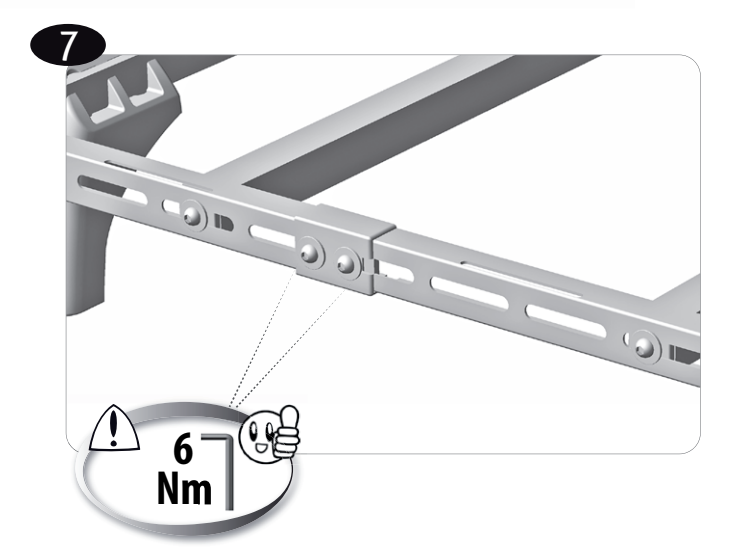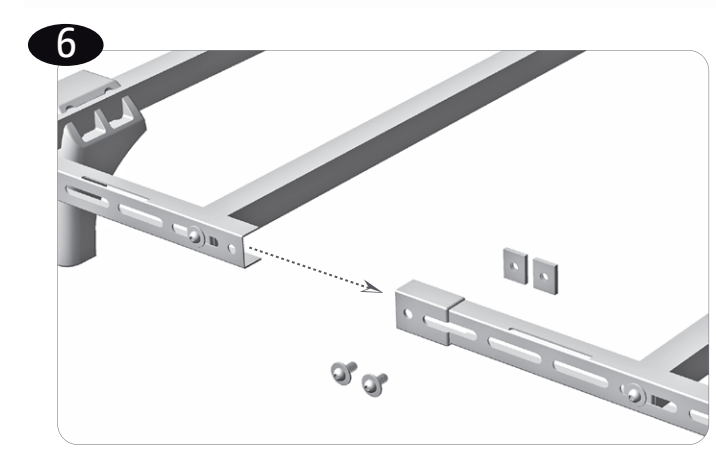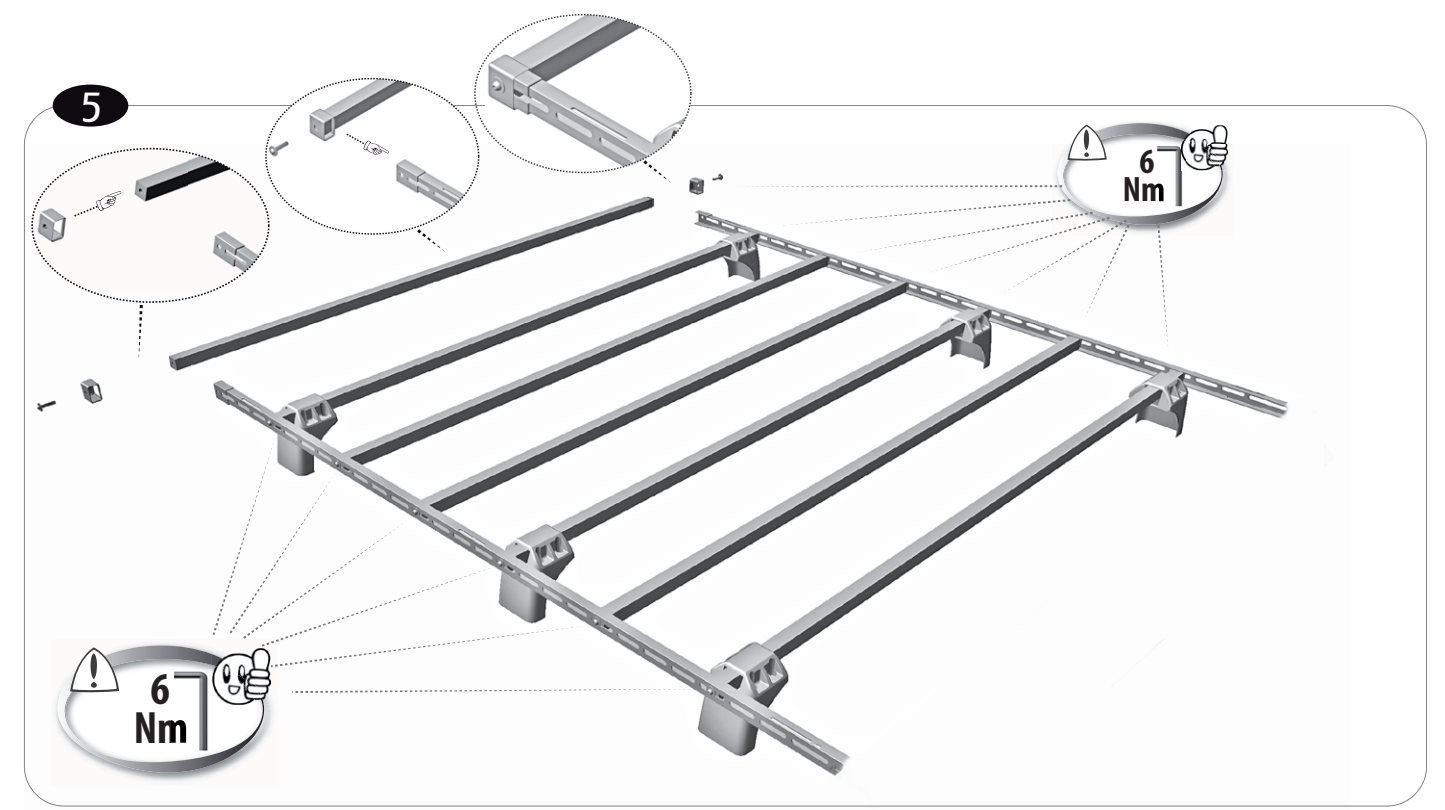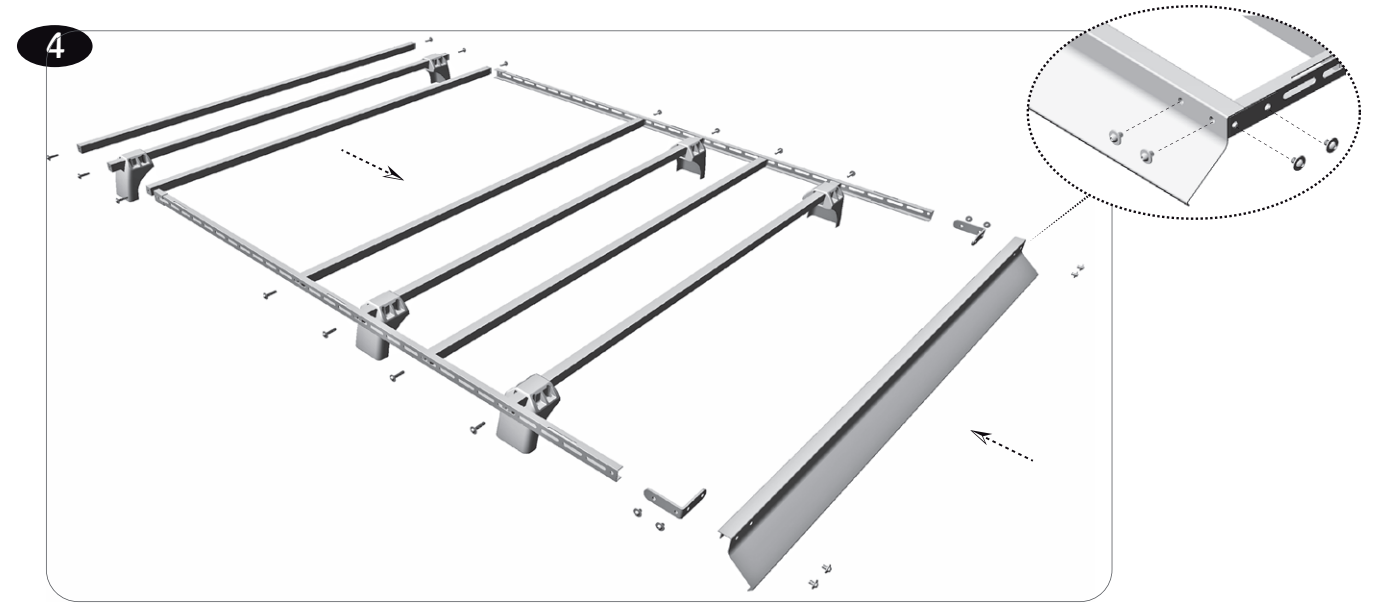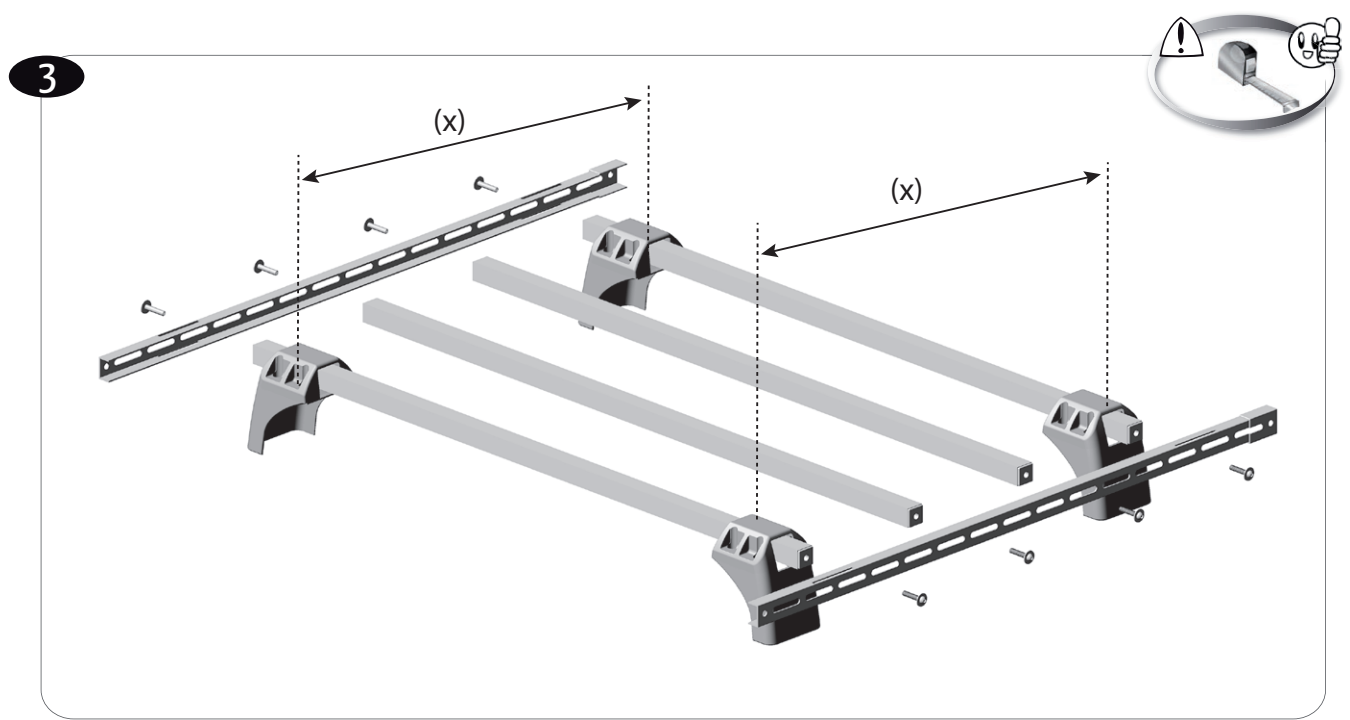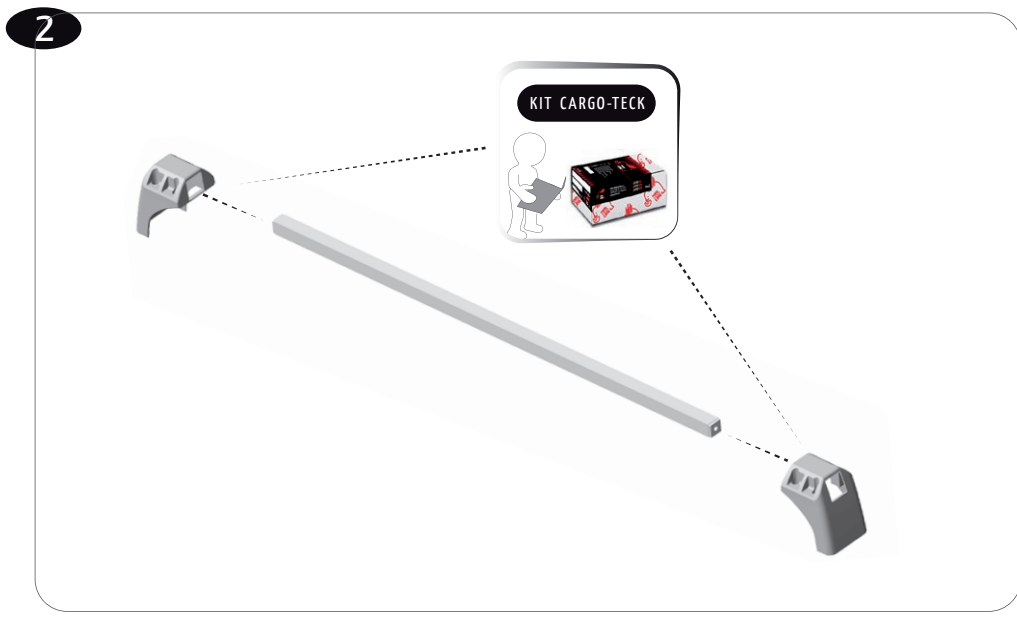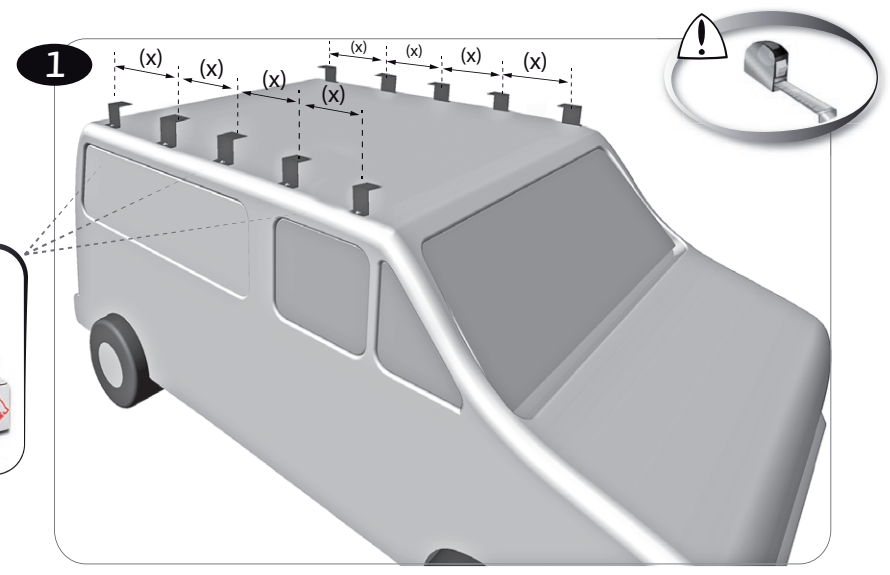

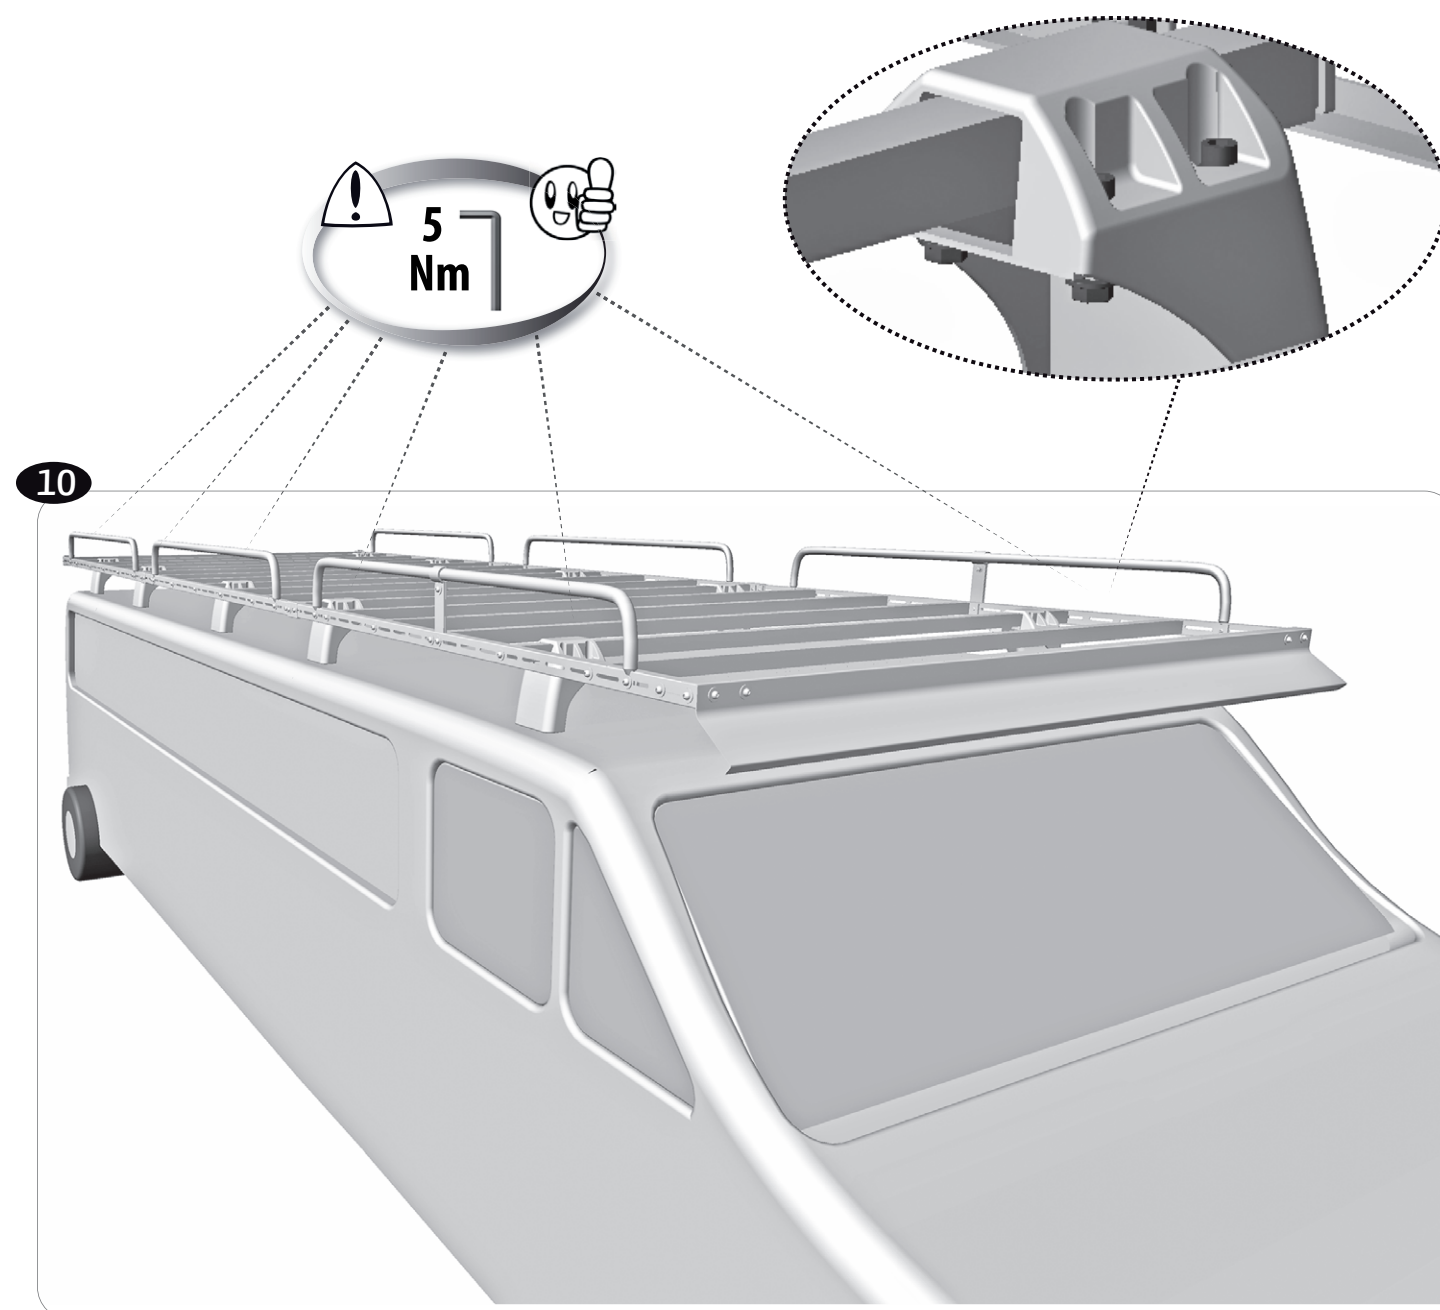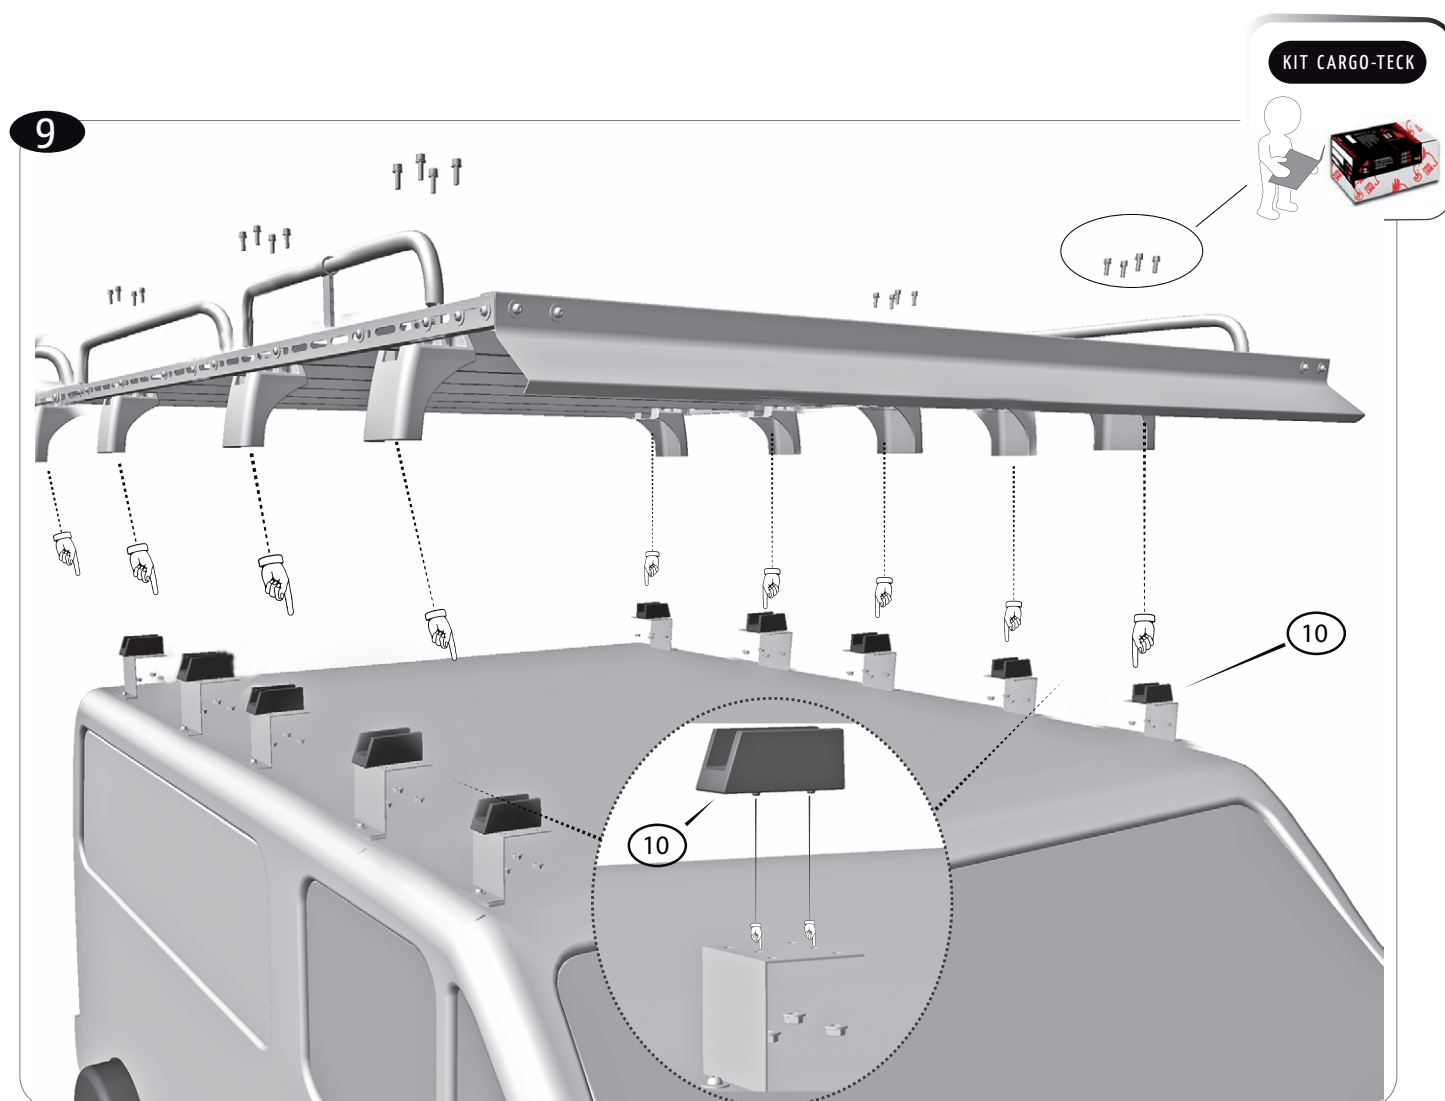
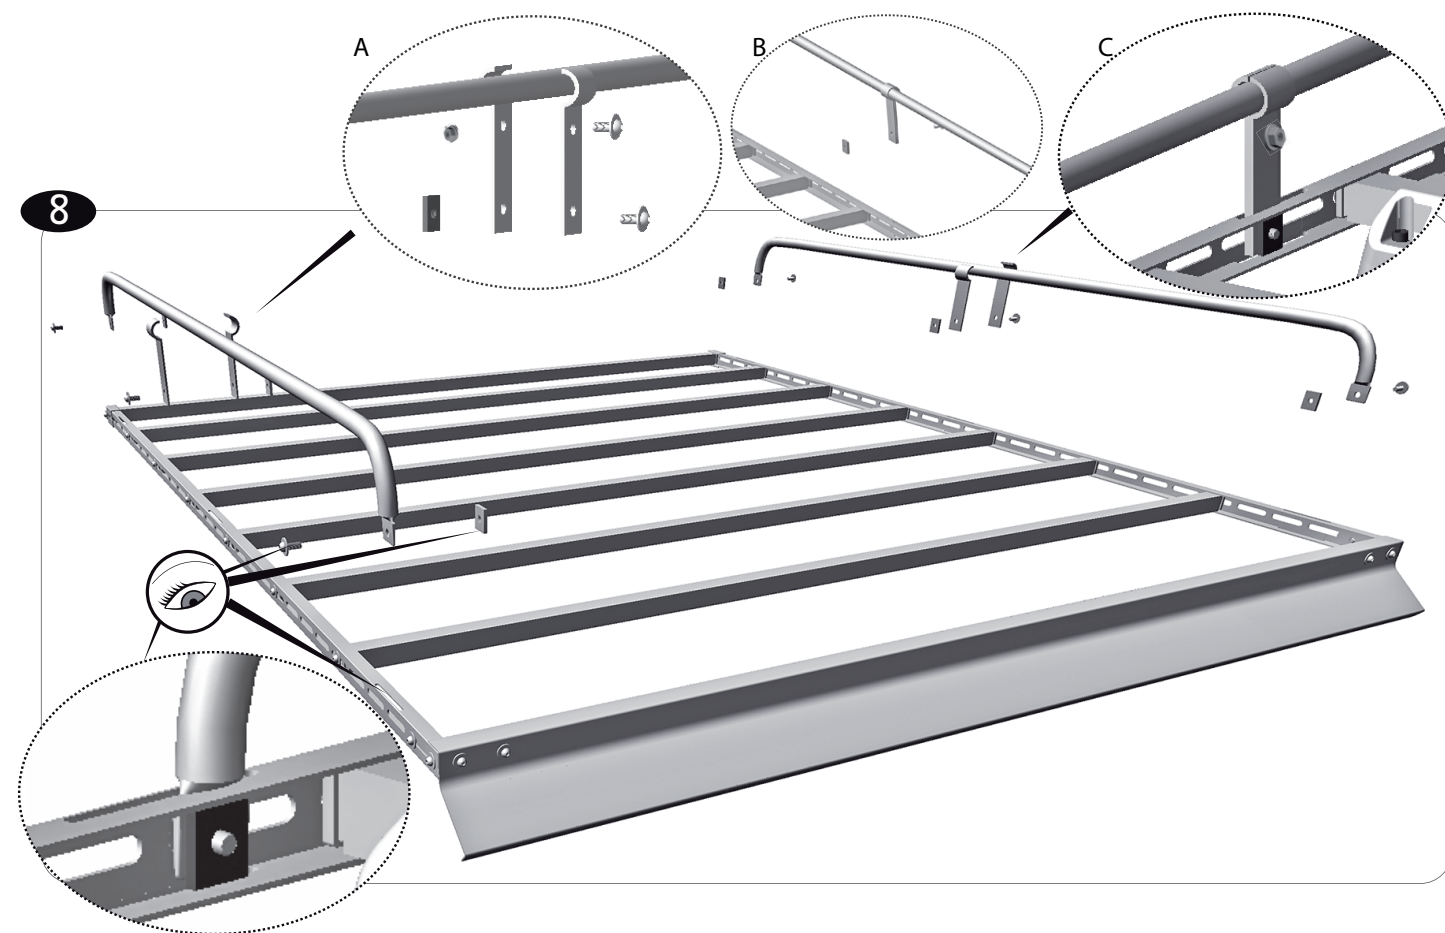




- CITROËN JUMPER II / III L4 / H2 (06->)
- FIAT DUCATO II / III L4 / H2 (06->)
- OPEL MOVANO C L4 / H2 (21->)
- PEUGEOT BOXER II / III L4 / H2 (06->)

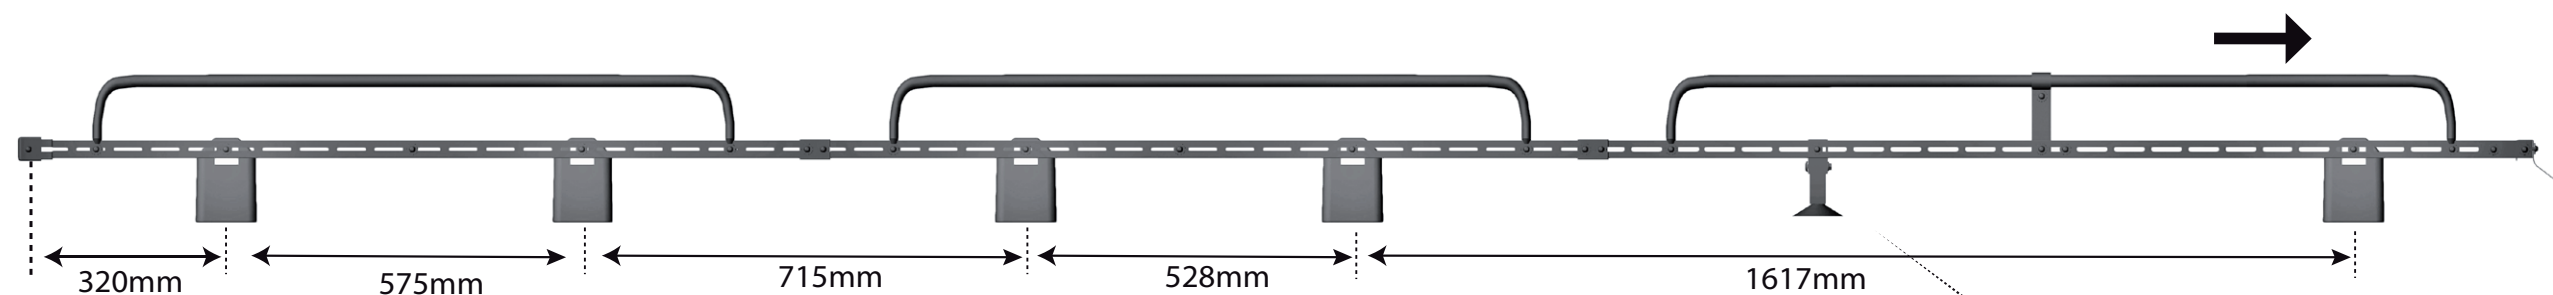
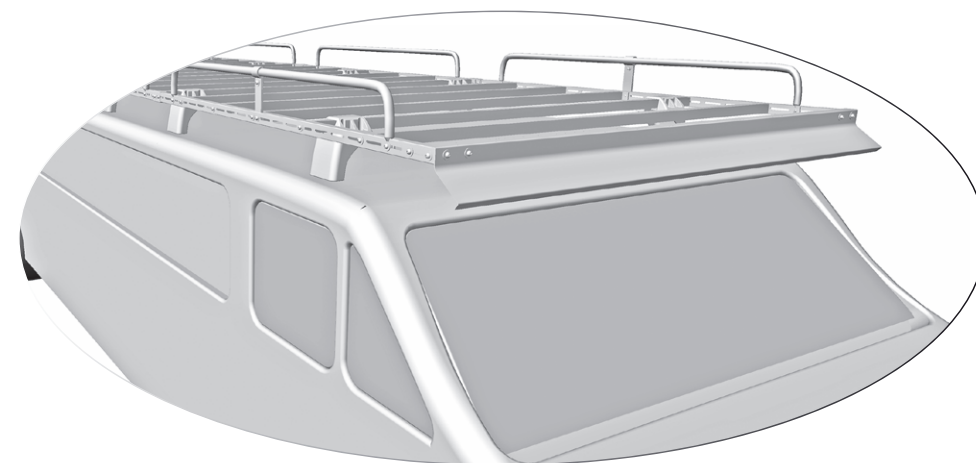






- CITROËN JUMPER II / III L4 / H3 (06->)
- FIAT DUCATO II / III L4 / H3 (06->)
- OPEL MOVANO C L4 / H3 (21->)
- PEUGEOT BOXER II / III L4 / H3 (06->)

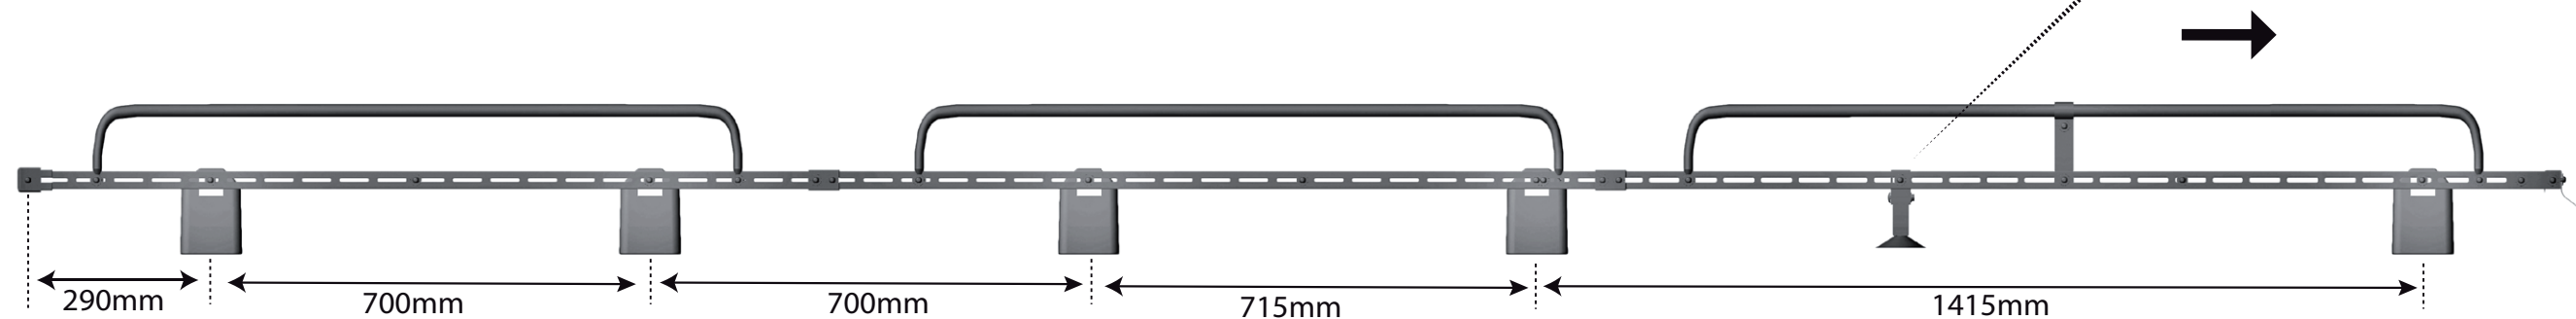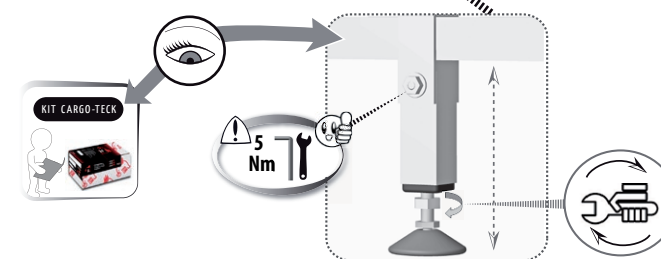




MERCEDES SPRINTER W906 L3 (06->)

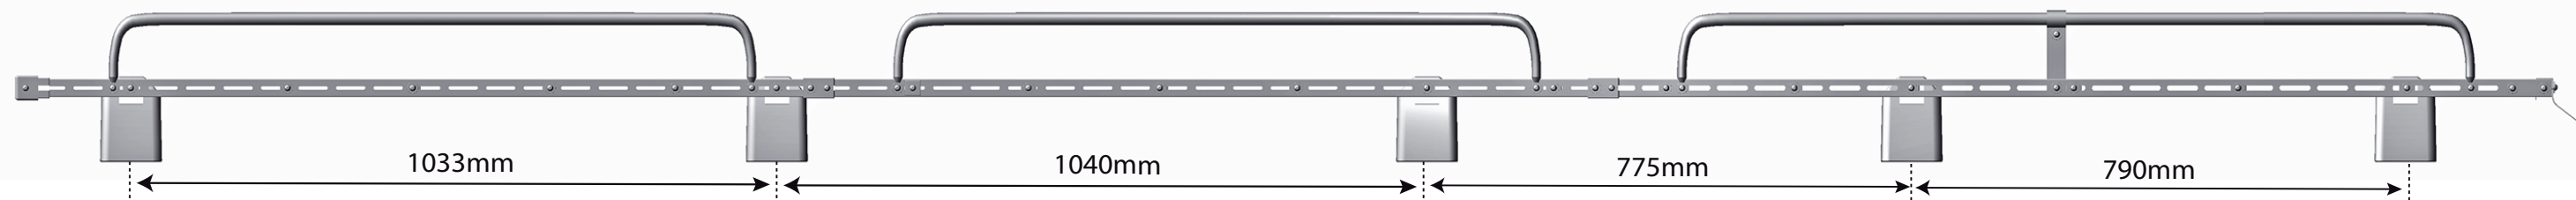
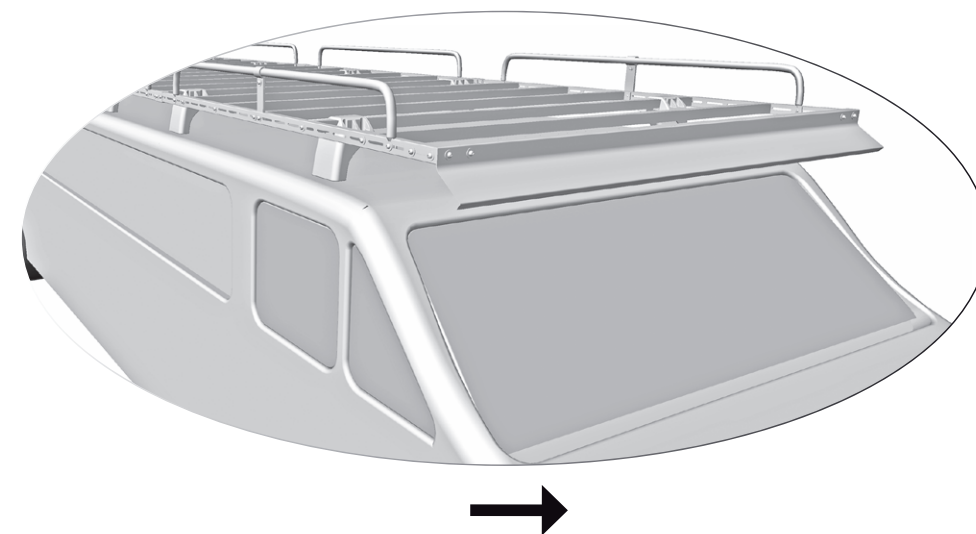


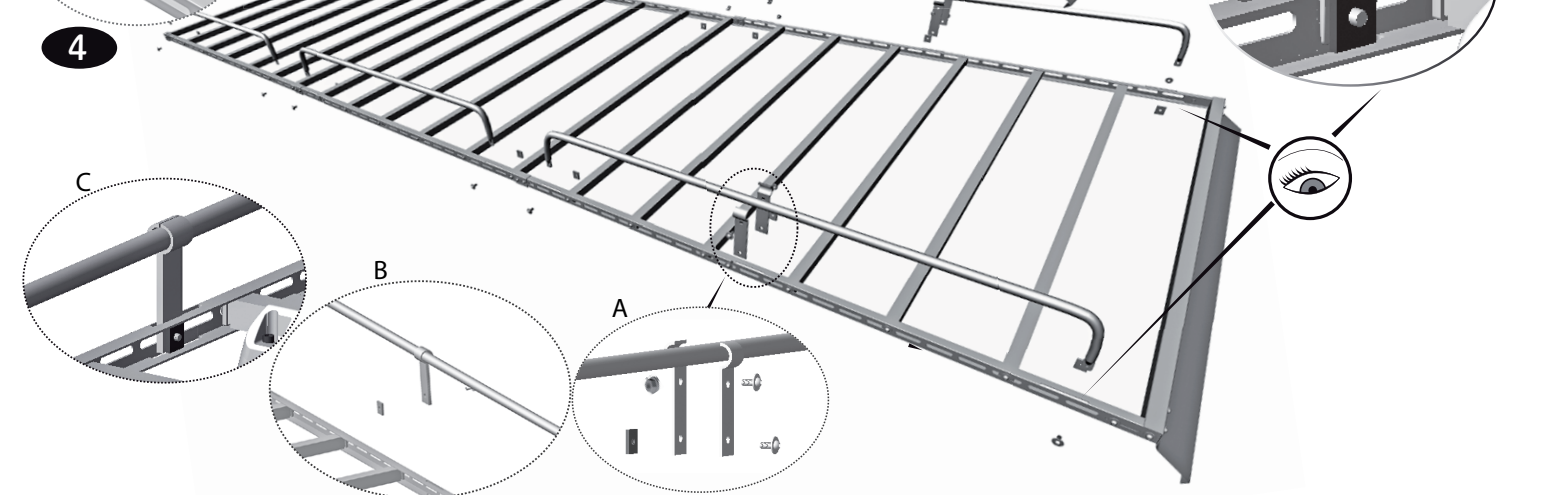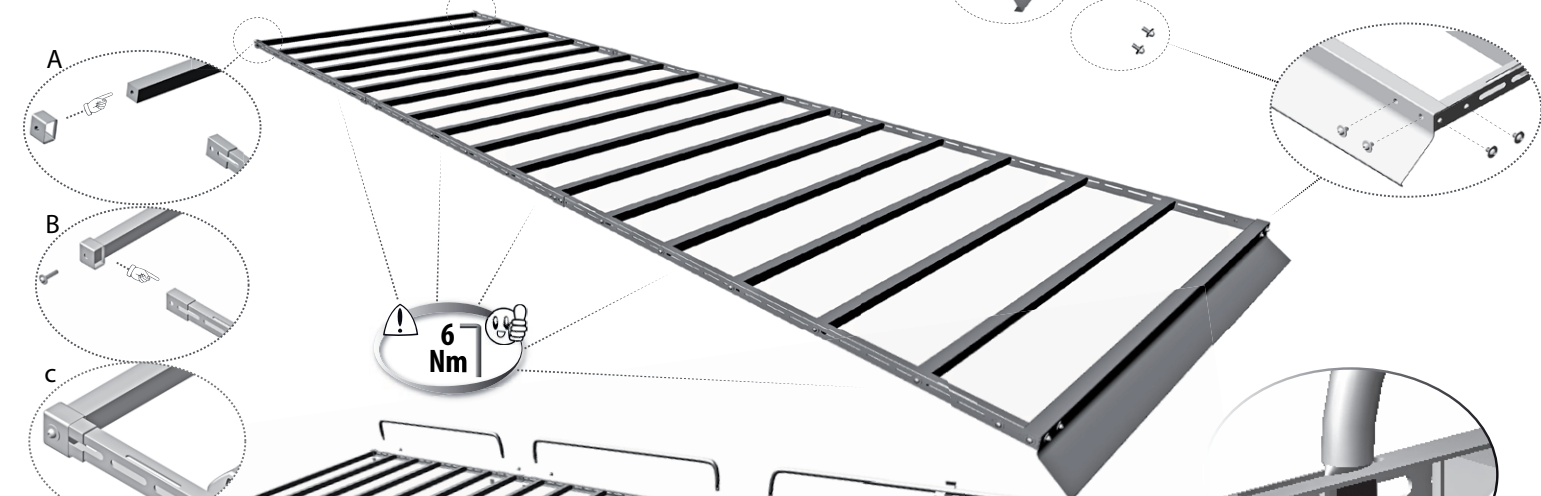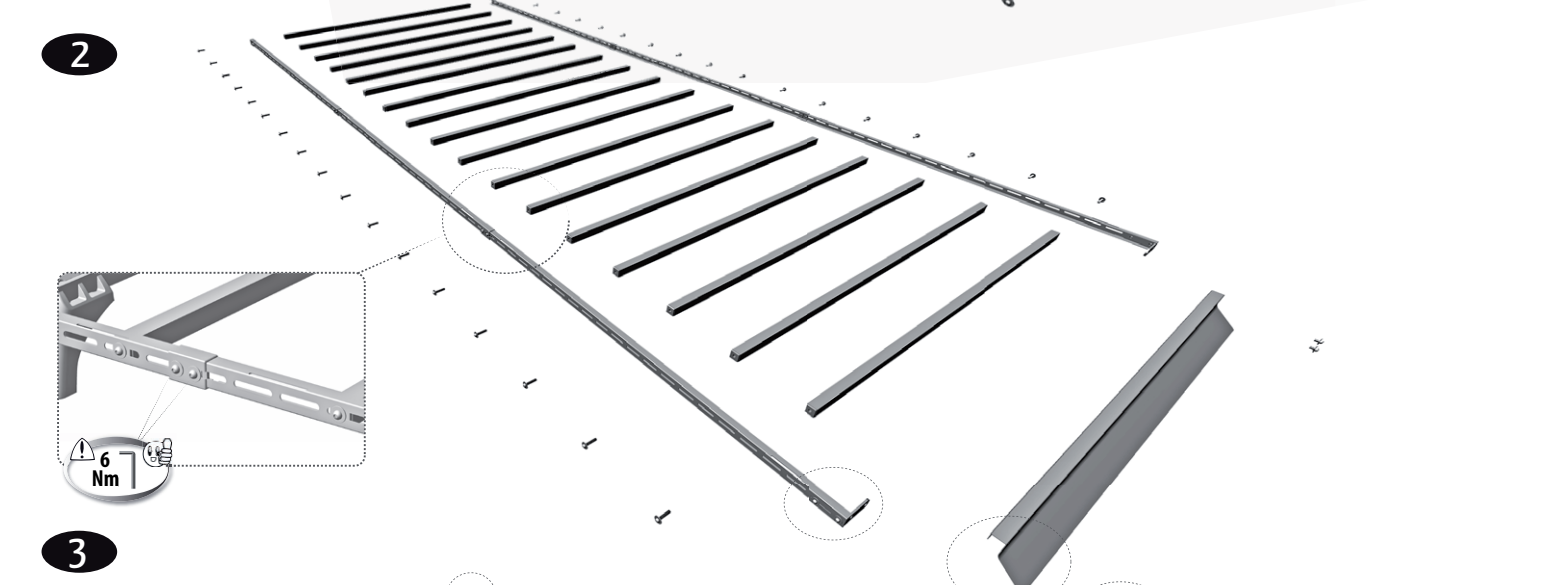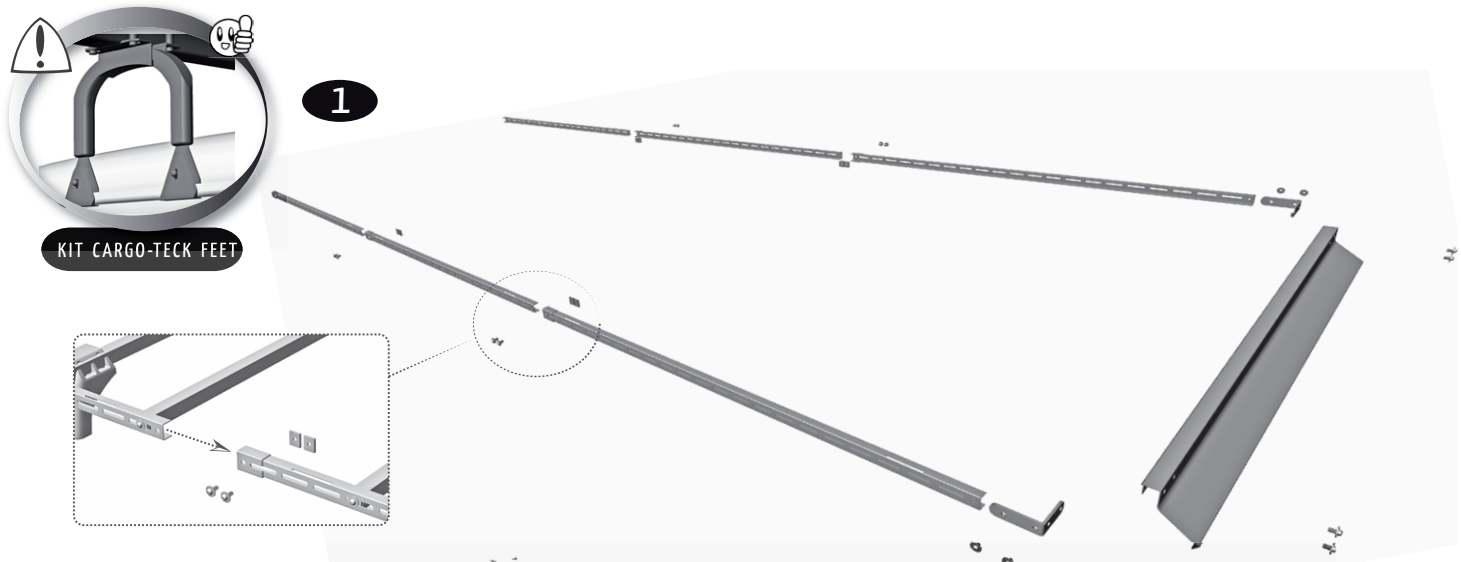

5

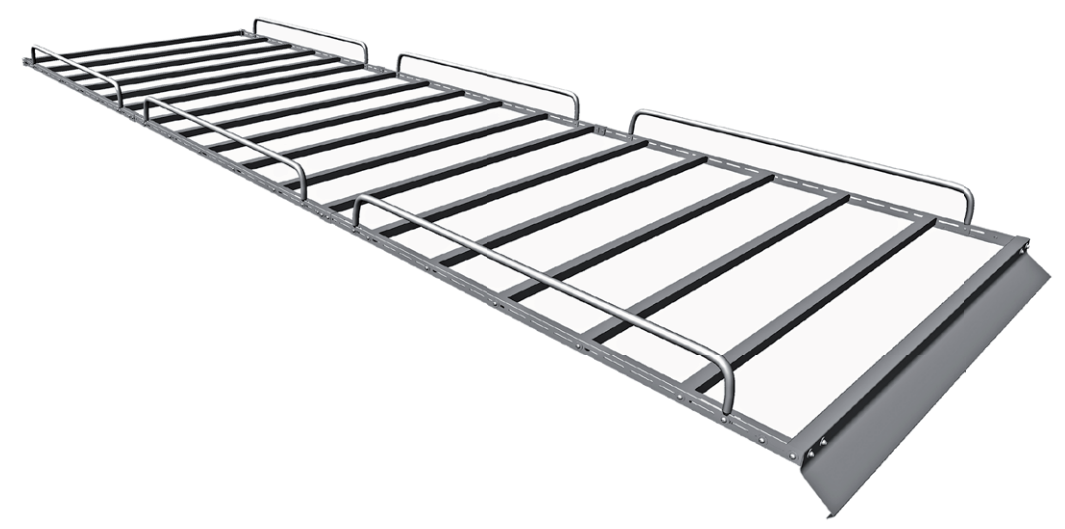






6

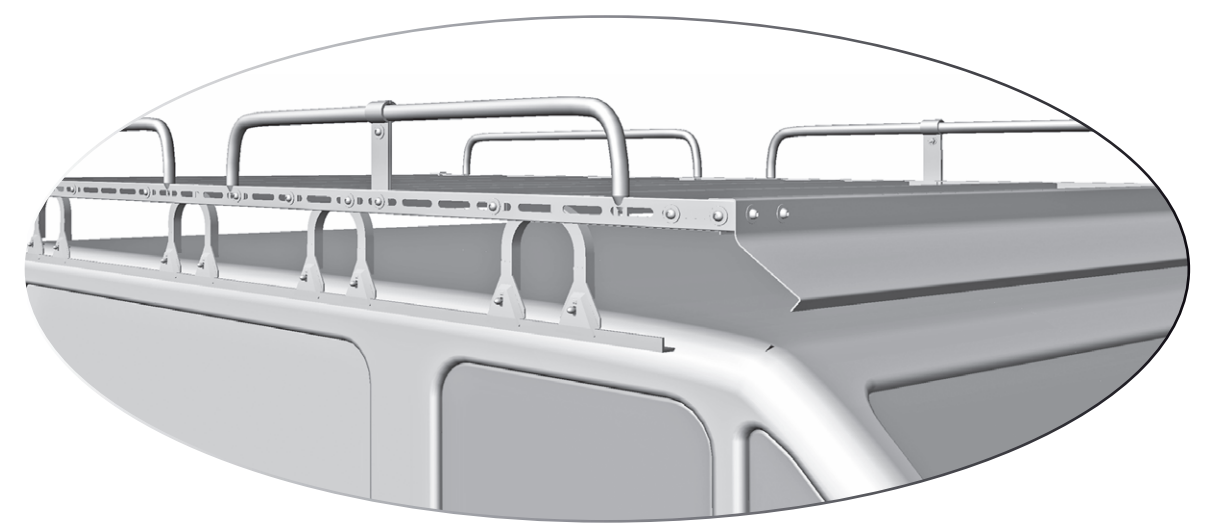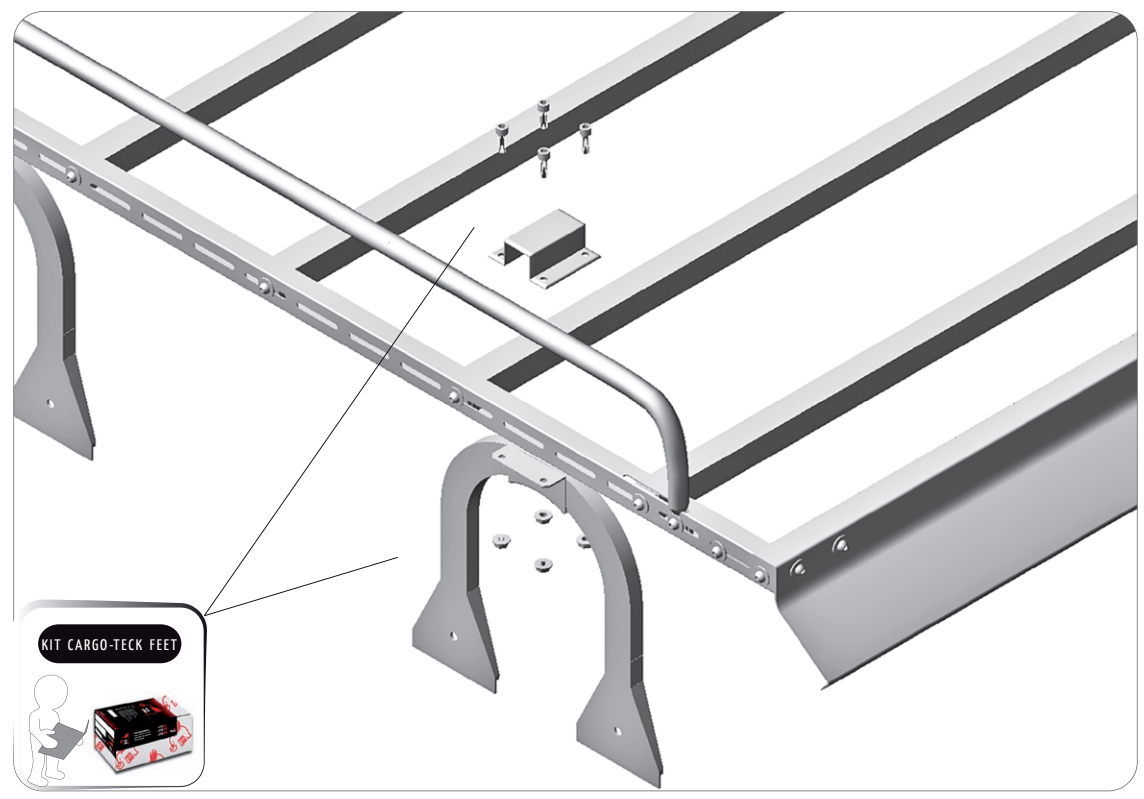






MERCEDES SPRINTER W901/909 L3 (95-06)

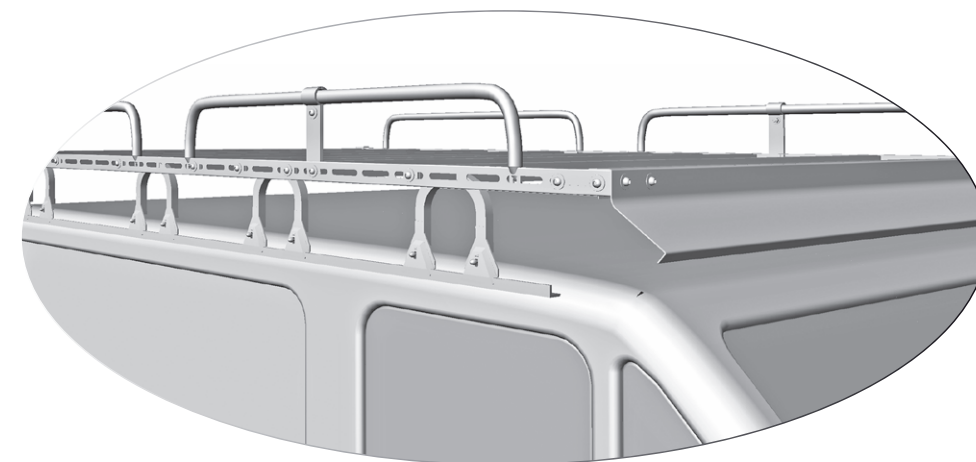

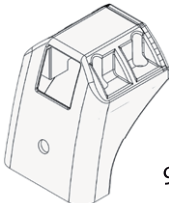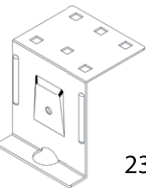N		Q
1	 95R236	10
2	 236	10
3	 G	10
4	 CHAP.20	10
5	 G12	10
6		1

N	BO0060 + BO0061	Q
8	 DIN912 M6x20	40
9	 DIN125 Ø6	40

N	BO0014x5	Q
10	 DIN912 M6x30	10
11	 DIN9021 Ø6	10

N		Q
12	 VENT9	2
13		1

N		Q
14		10

- E

Instrucciones de montaje

Kit de fijación
- C

Instruccions de muntatge

Kit de fixació
- GB

Assembly instrucctions

Fixation Kit
- F

Instruction de montage

Kit fixation
- D

Montageanleitung

Stützfuß-Kit
- PT

Instruções de montagem

Kit fixação
- I

Istruzioni di montaggio

Kit di fissaggio
- PL

Instrukcja montaży

Element mocujący
- CZ

Montážní návod

Fixační kit
- HU

Szerelési Utasítás

Rögzítő készlet
- RO

Instrucțiuni de montaj


Kit de fixare
- HR

Detaljne upute

Kit za montažu
- TU


Öncelikli montaj

Montaj kiti

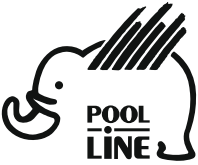

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1043

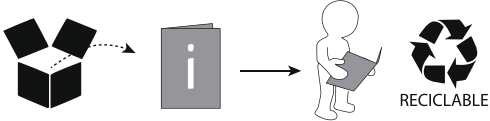


121987

Rv: 08/2022



Limpieza pre-instalación
Pre-installation cleaning

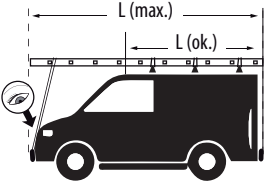

Revisar par de apriete
Check torque

	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12			
CITROËN																			
Jumper II / III	L4	H2	06-	BO0014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G
Jumper II / III	L4	H3	06-	BO0014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G
FIAT																			
Ducato III	L4	H2	06-	BO0014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G
Ducato III	L4	H3	06-	BO0014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G
OPEL																			
Movano C	L4	H2	21-	BO0014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G
Movano C	L4	H3	21-	BO0014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G
PEUGEOT																			
Boxer II / III	L4	H2	06-	BO0014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G
Boxer II / III	L4	H3	06-	BO0014	236+G	236+G	VENT9	VENT9	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G	236+G

