

- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net





200 KG.
MAX.

Nº HOMOLOGACIÓN: E9 26R-03.1042




123312

Rv: 10/2024

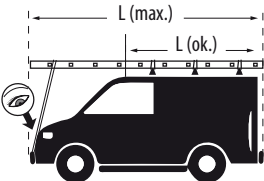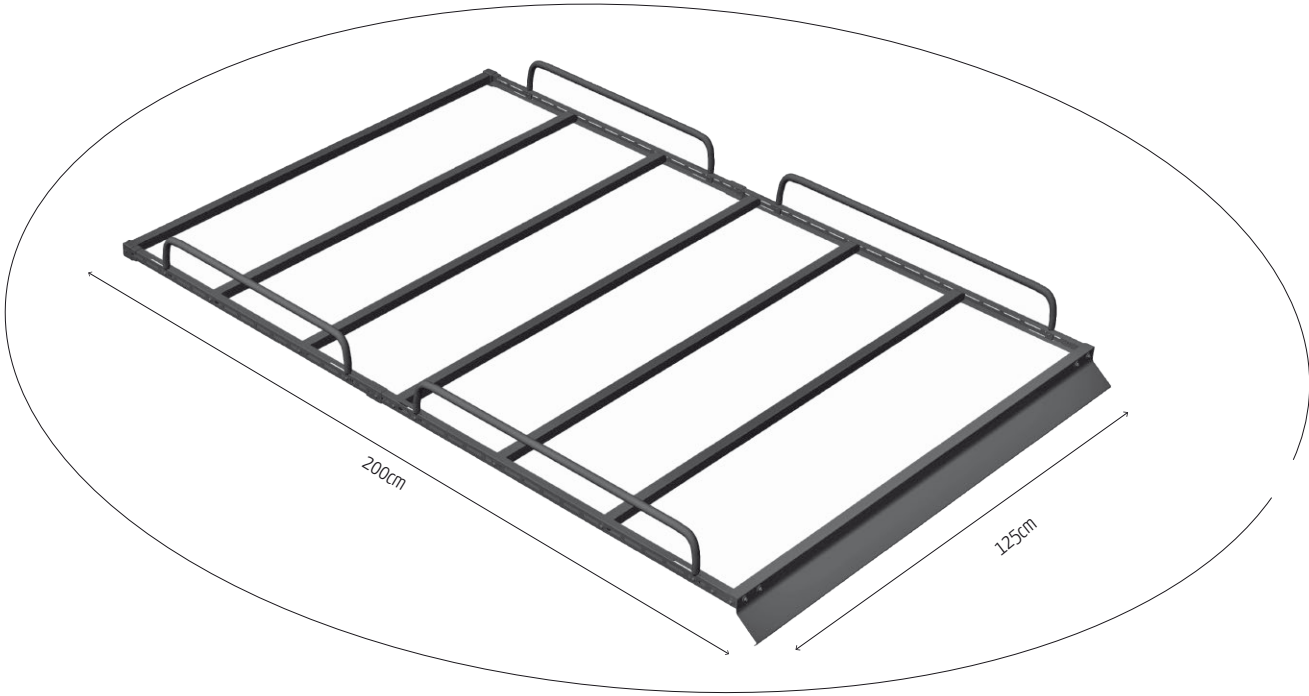


N		Q
1	 S-1250	1
2	 L-1120	2
3	 B-842	2
4	 L-943	2
5	 B-662	2
6	 T-1235	6
7		2
8		12
9		2
10		8
12		1
13	 CHA-M8	12
14	 ISO 7380 M8x30	10
15	 ISO 7380 M8x16	20
16	 DIN 125 Ø 8	32
17	 ISO 7380 M8x40	2

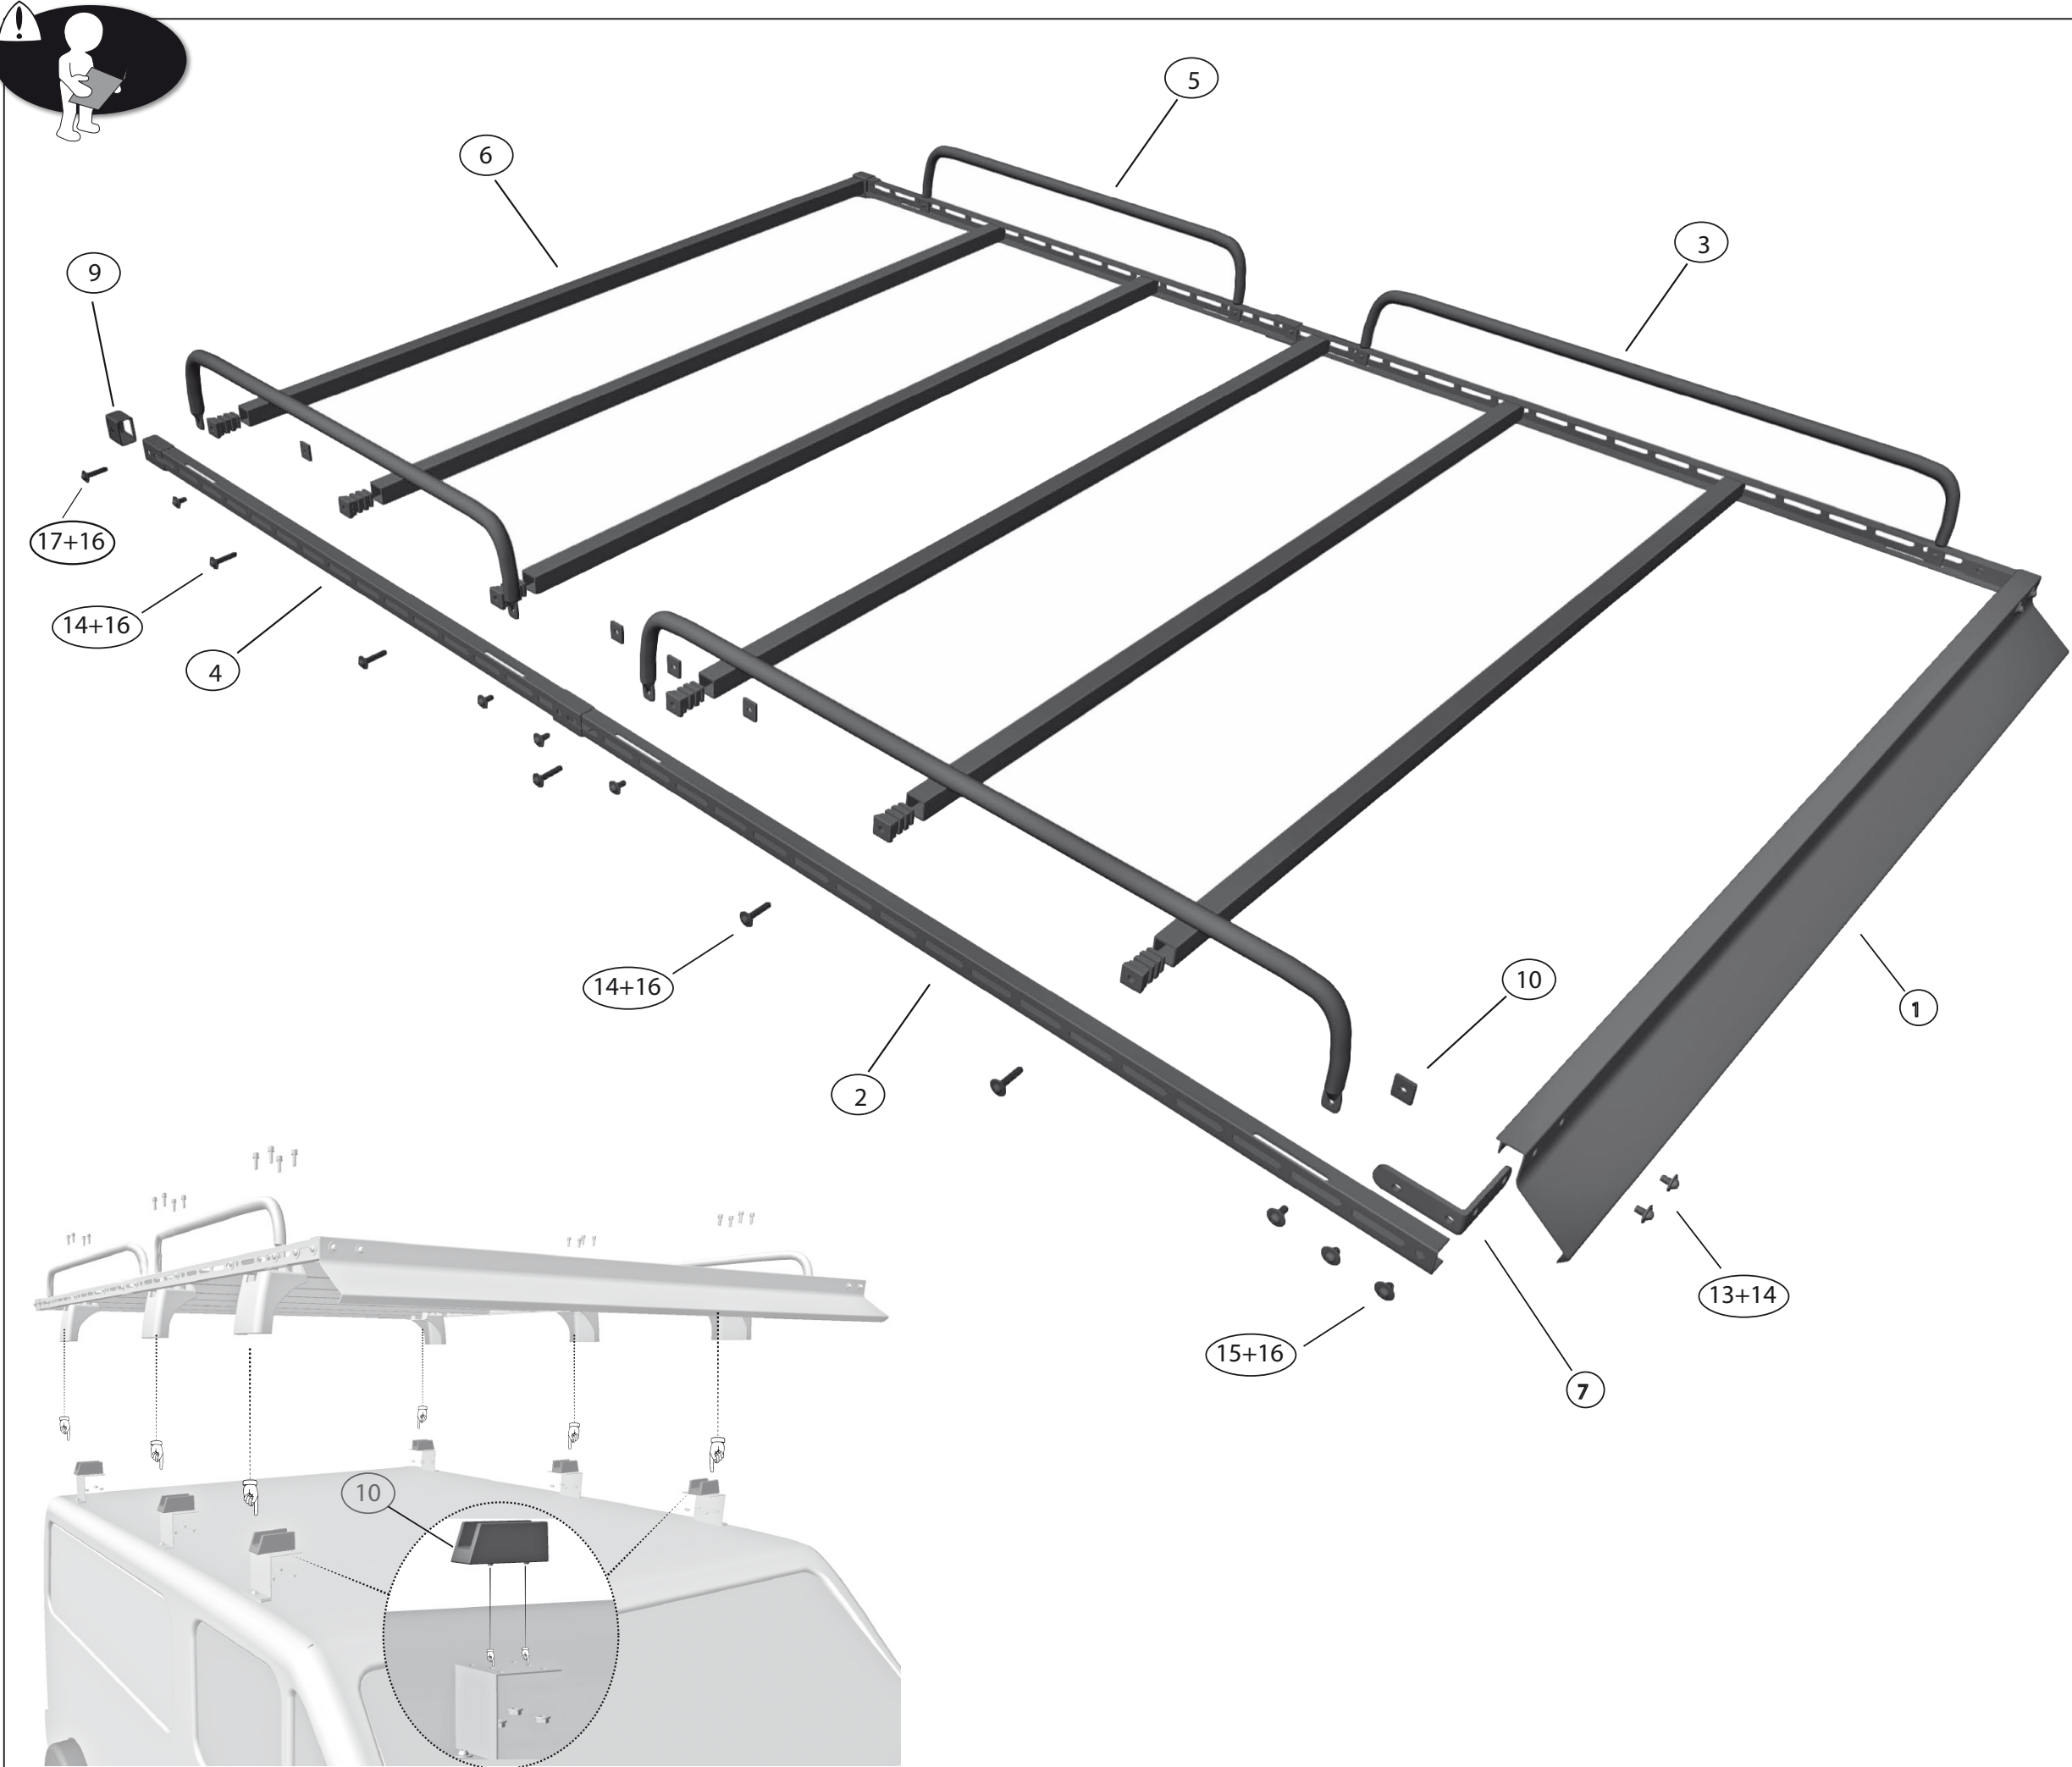




CITROËN BERLINGO I / PEUGEOT PARTENR I

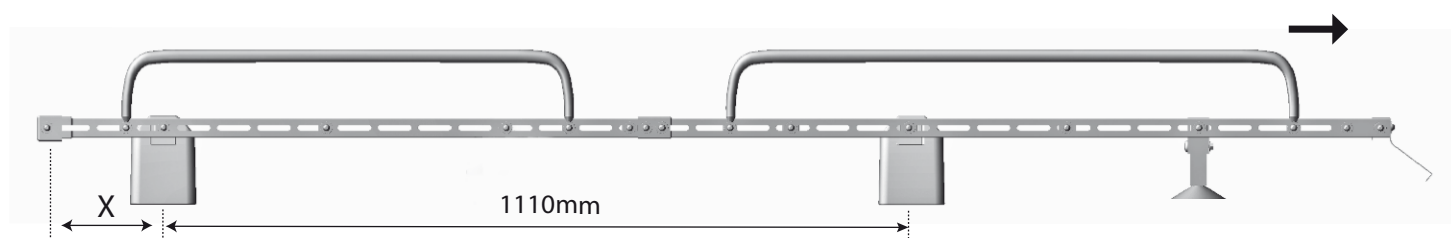


200mm = X

CITROËN JUMPY I / FIAT SCUDO I / PEUGEOT EXPERT I

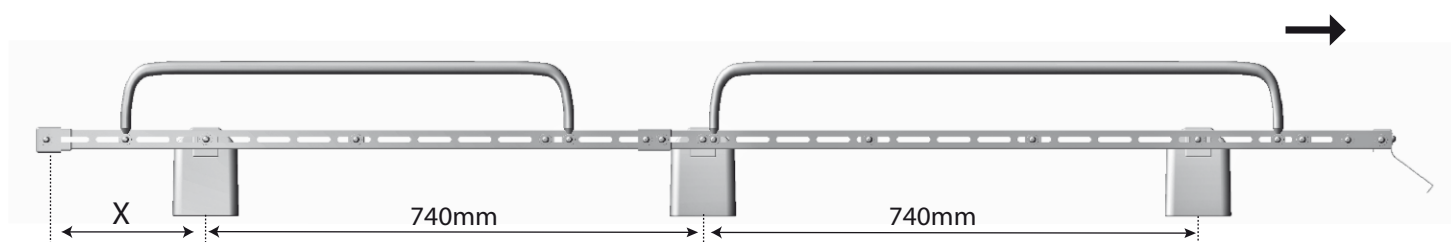


210mm = X

DACIA DOKKER VAN

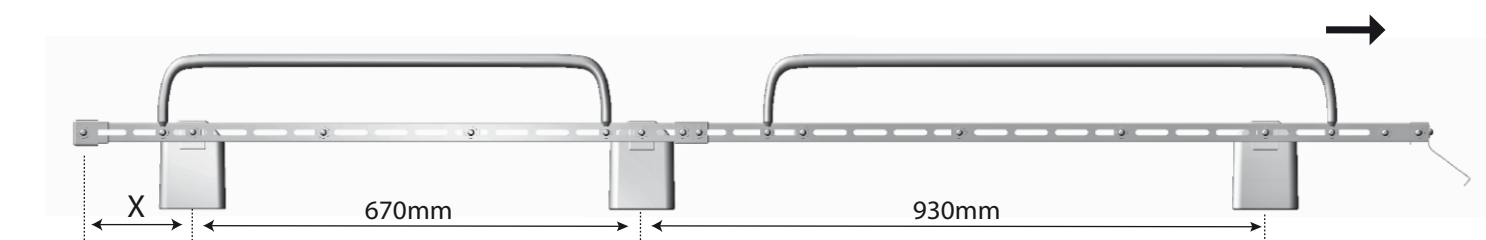


100mm = X 70mm = X

FORD TOURNEO CONNECT I L1 / FORD TRANSIT CONNEC I T L1

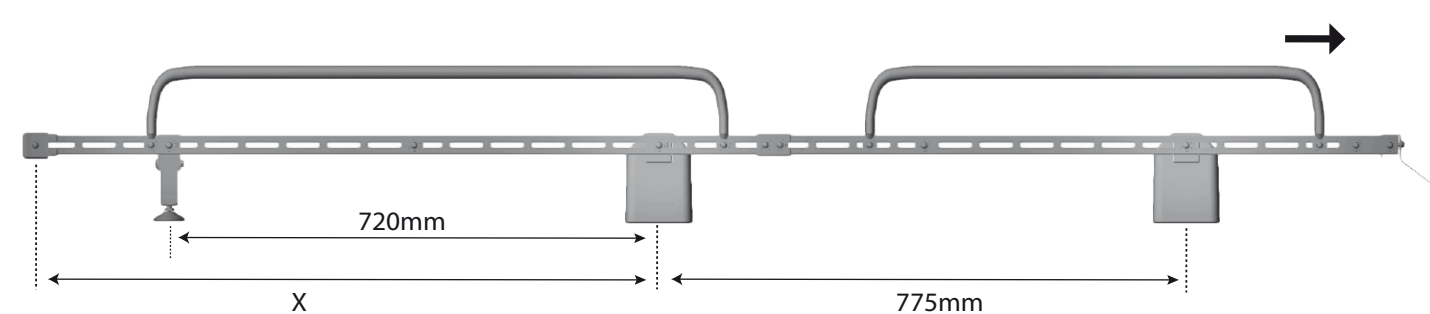


900mm = X

FORD TOURNEO CONNECT I L2 / FORD TRANSIT CONNEC I T L2

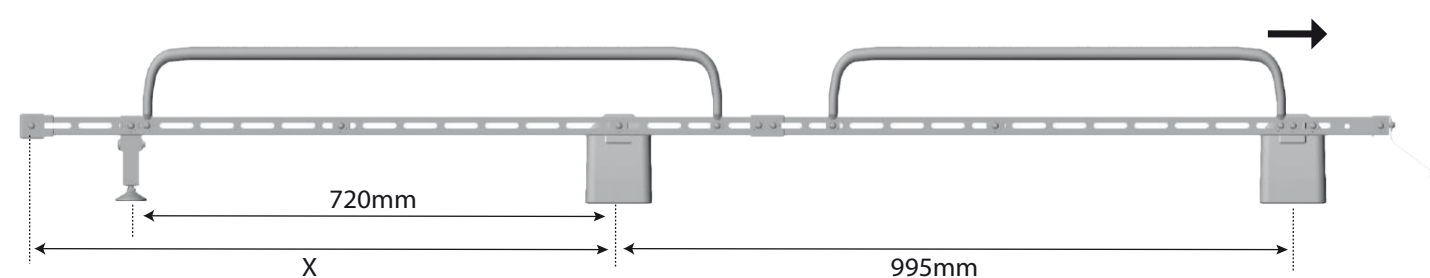

800mm = X


FORD TRANSIT CONNECT VAN II (2013->)

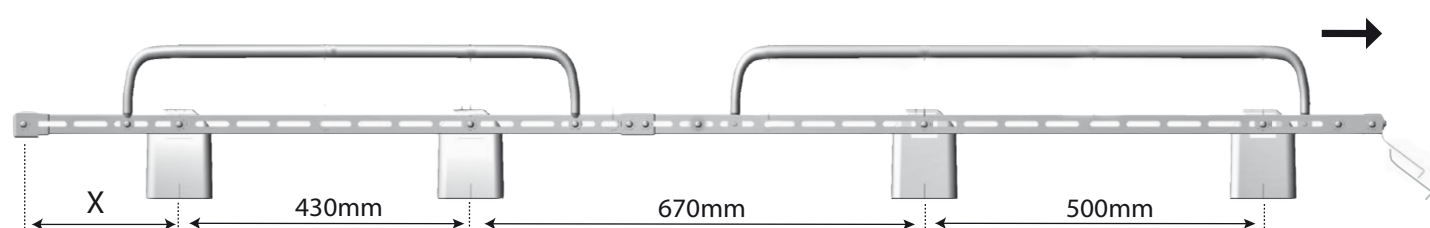

300mm = X




FORD COURIER II (2013->)

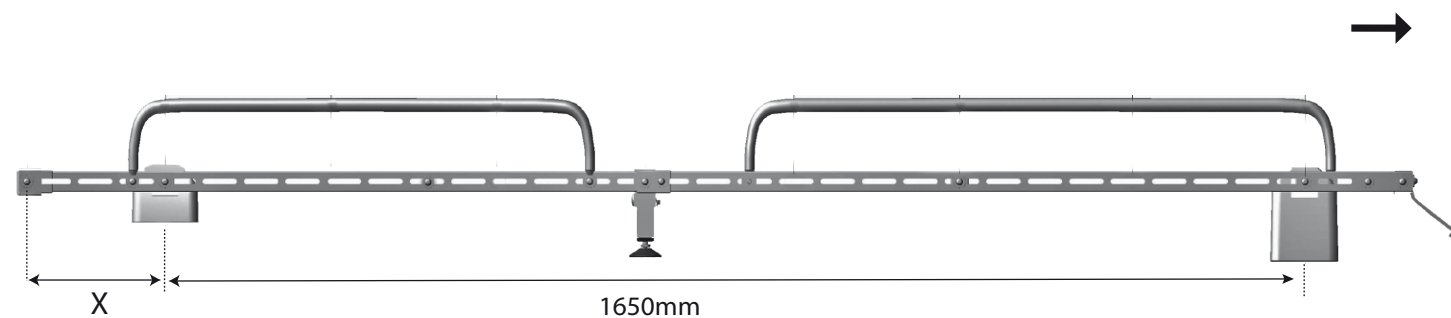


200mm = X

RENAULT EXPRESS (2021->)

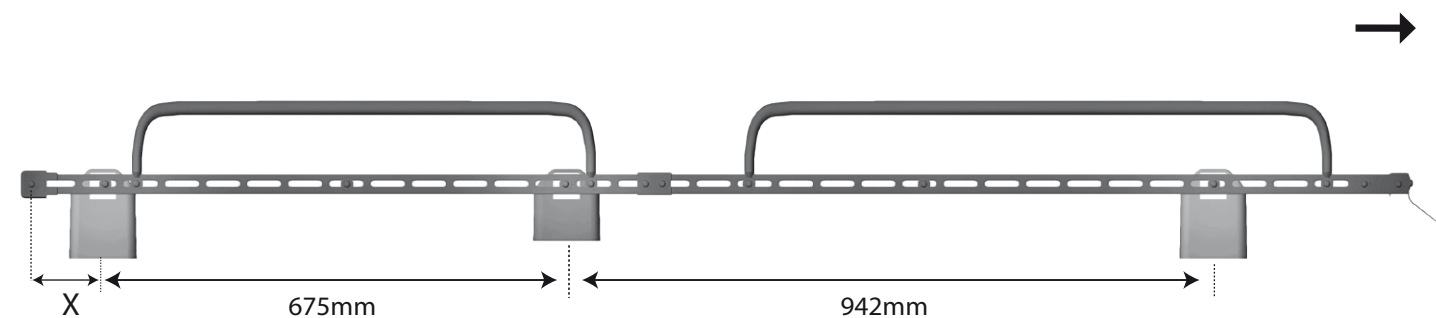


100mm = X

MERCEDES CITAN W415 L2 / NISSAN NV250 L1 / RENAULT KANGOO II L2

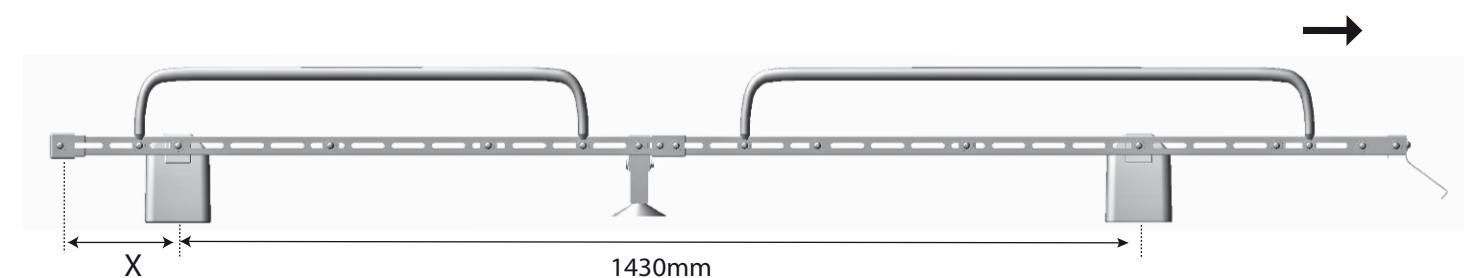


100mm = X

MERCEDES CITAN 420 L1 (2021->) / RENAULT KANGOO III (2021->)

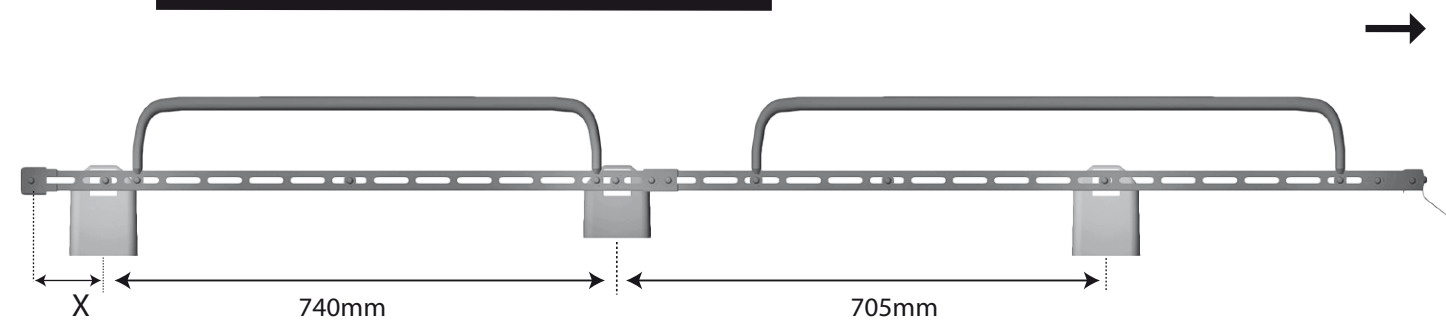


100mm = X

VOLKSWAGEN CADDY IV L1

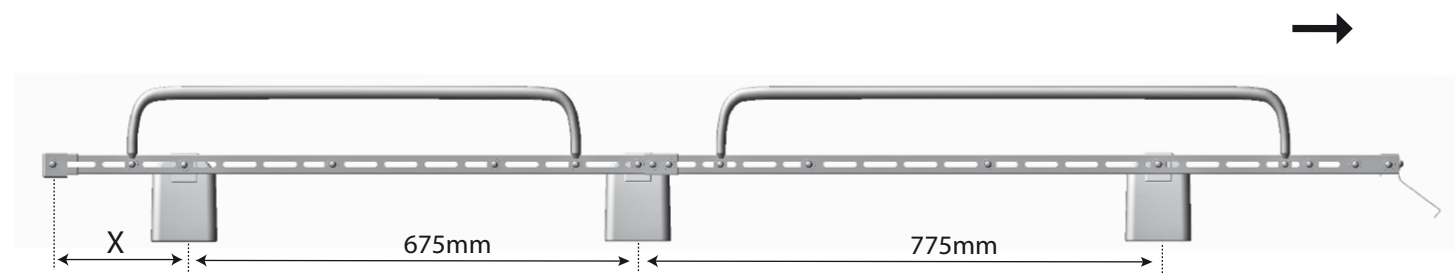


300mm = X



1




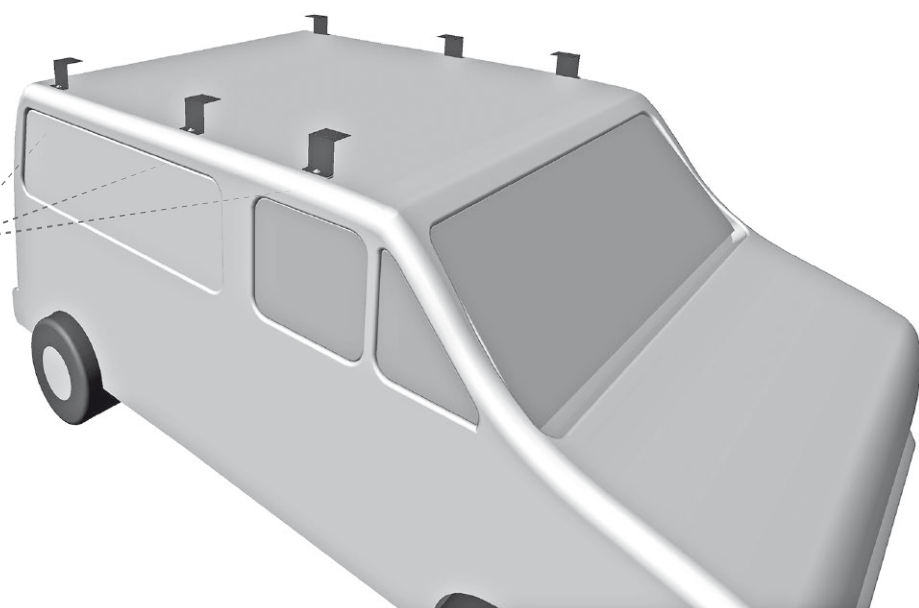


2

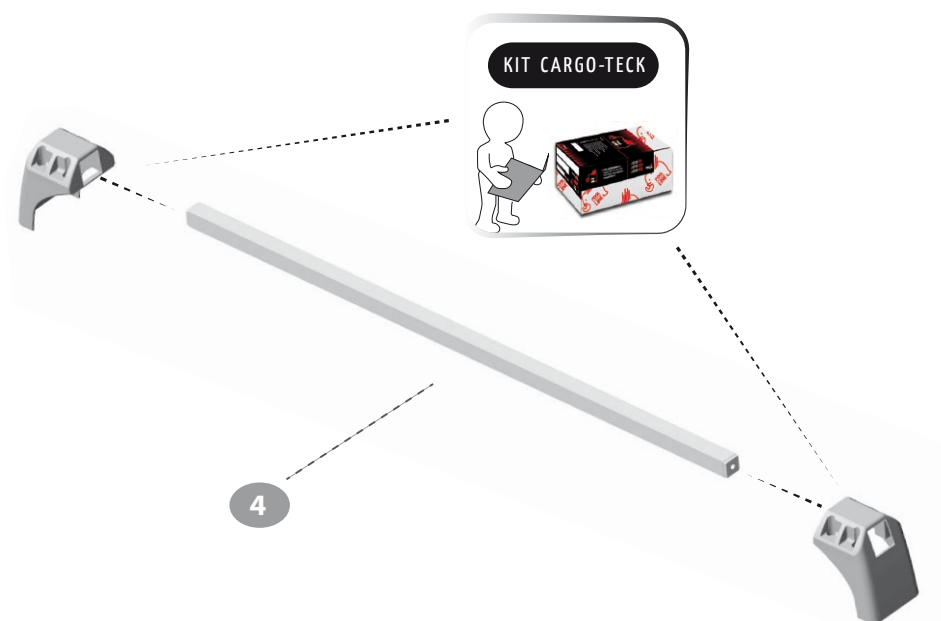


3

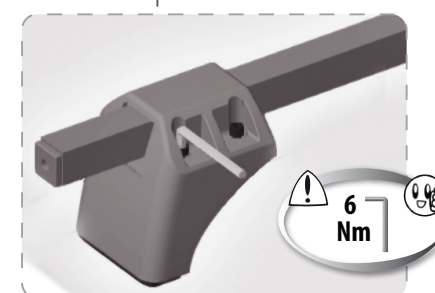
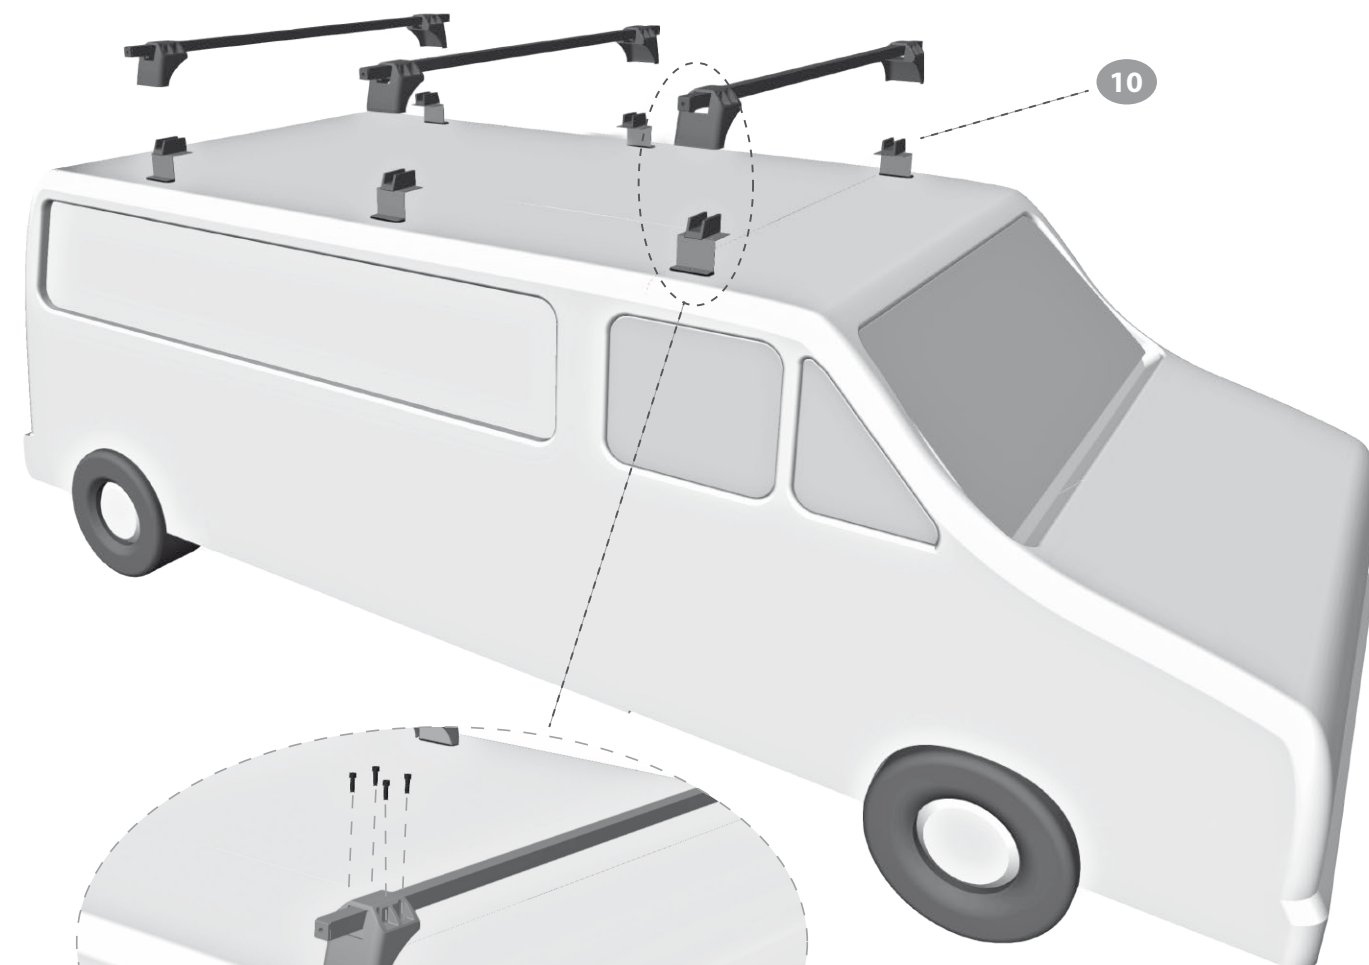


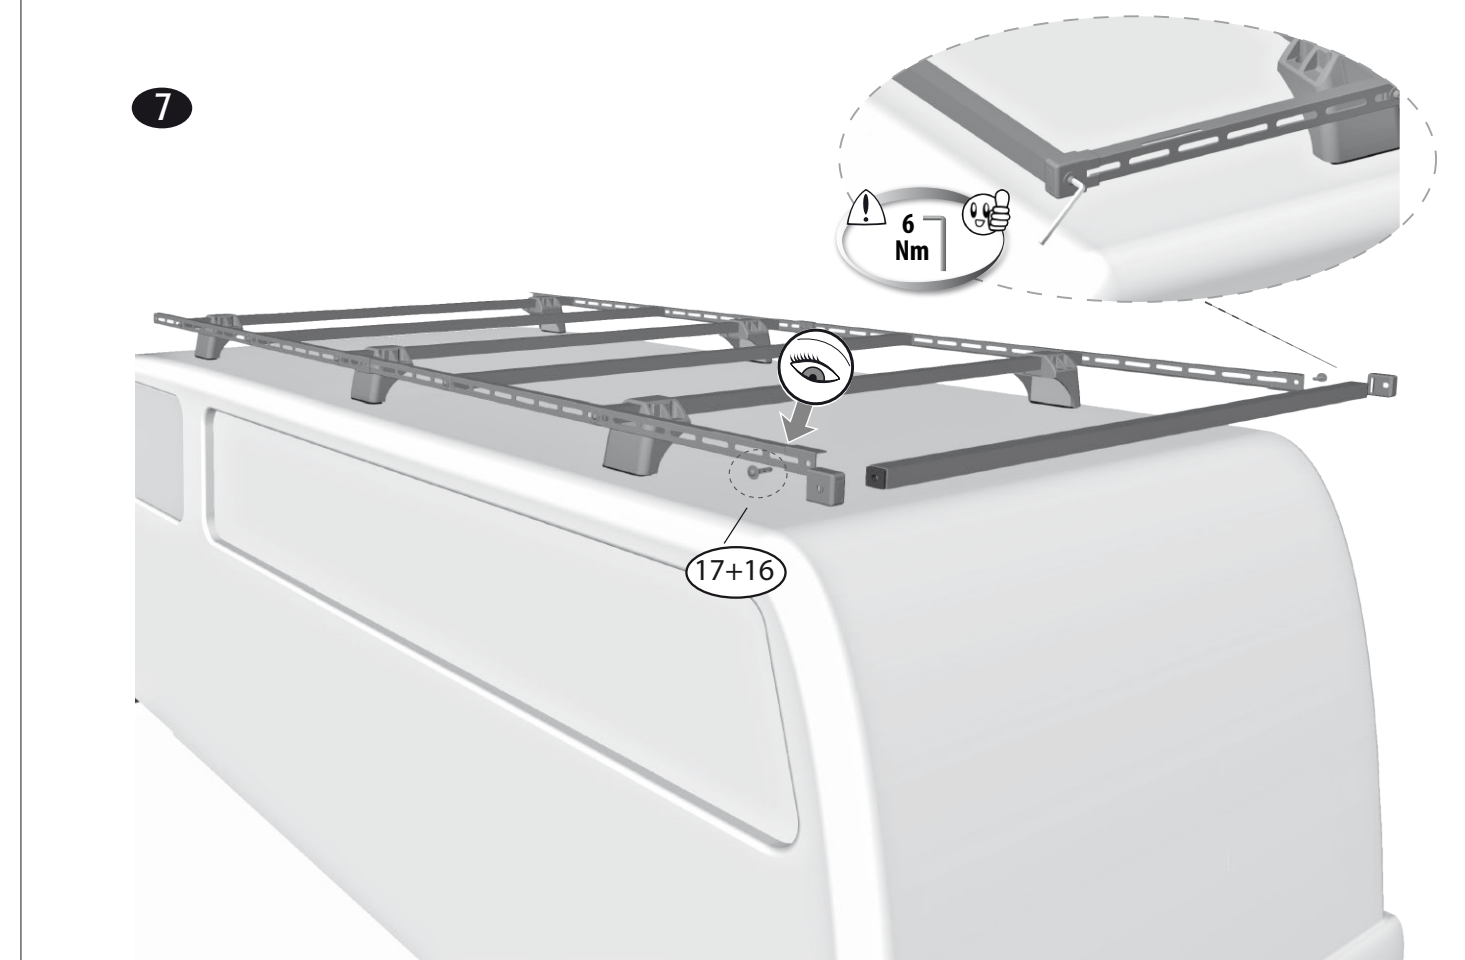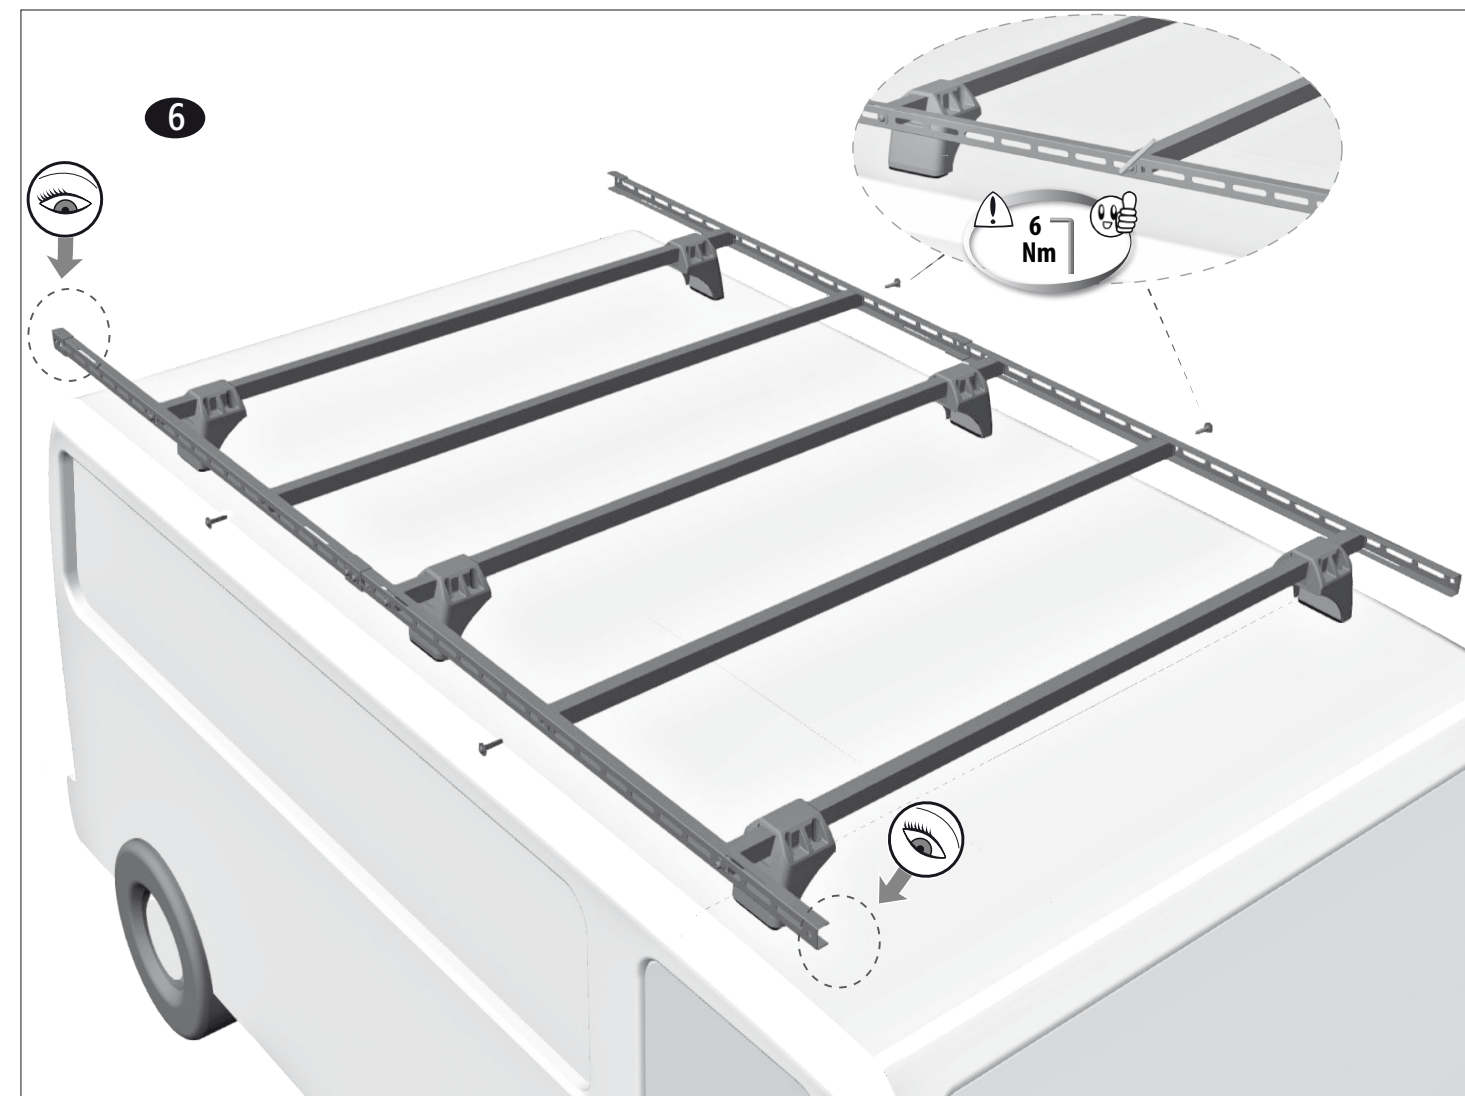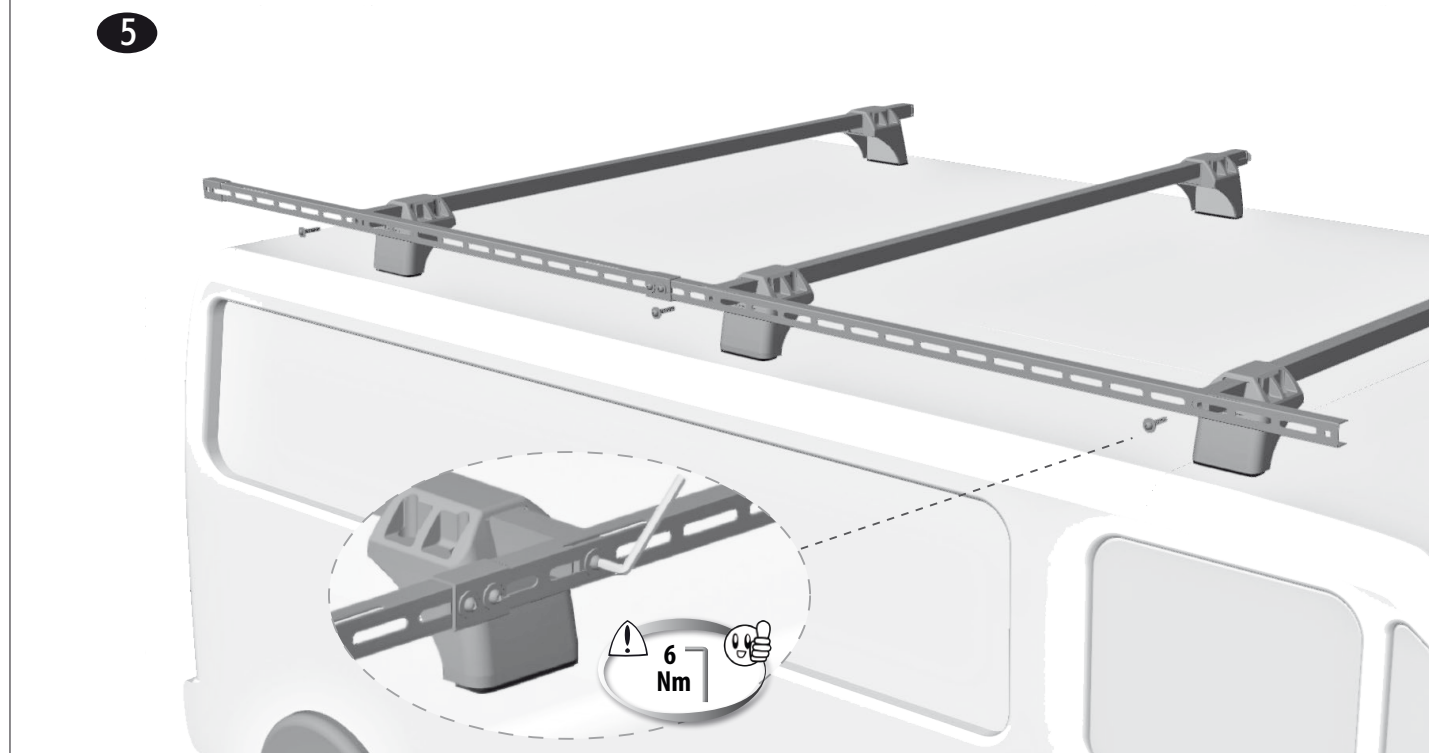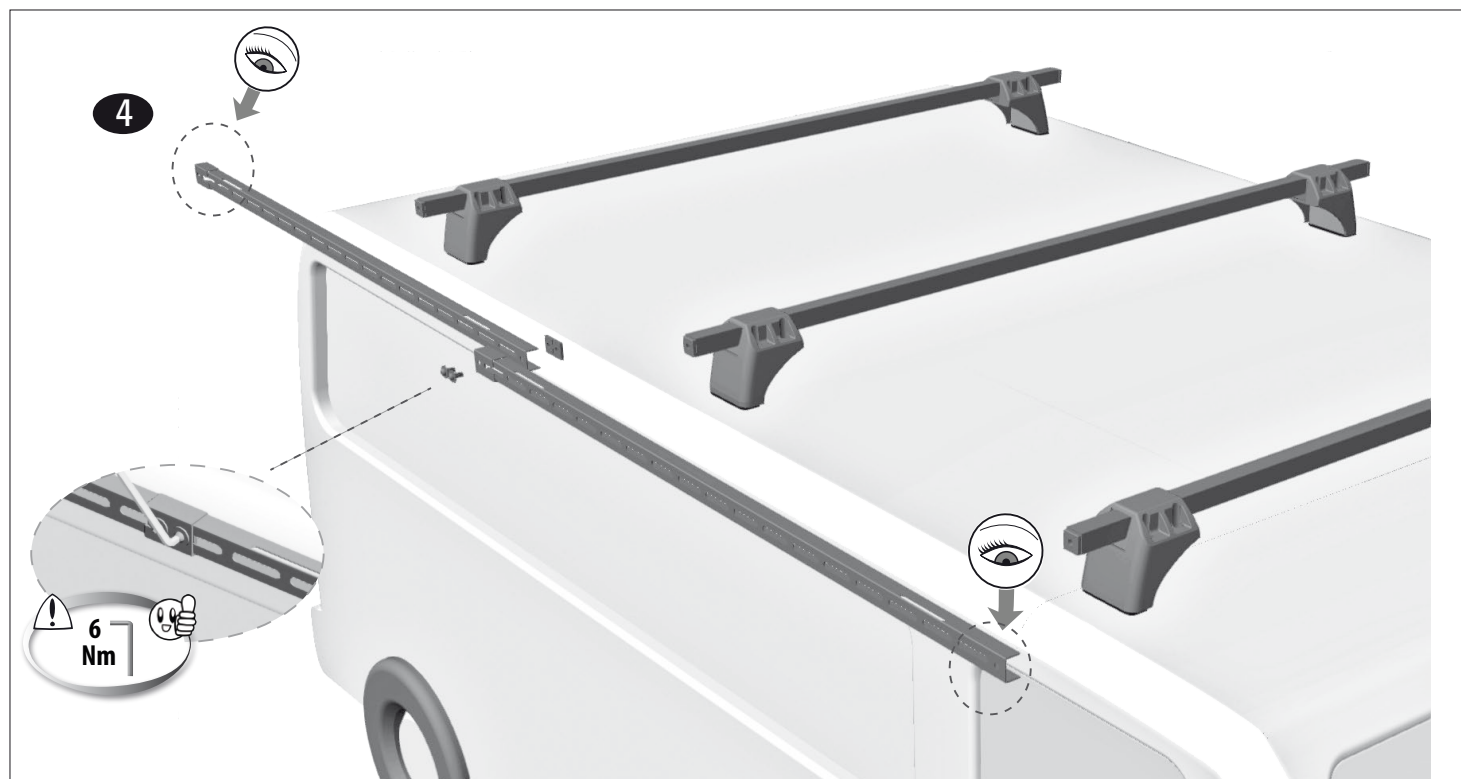




8

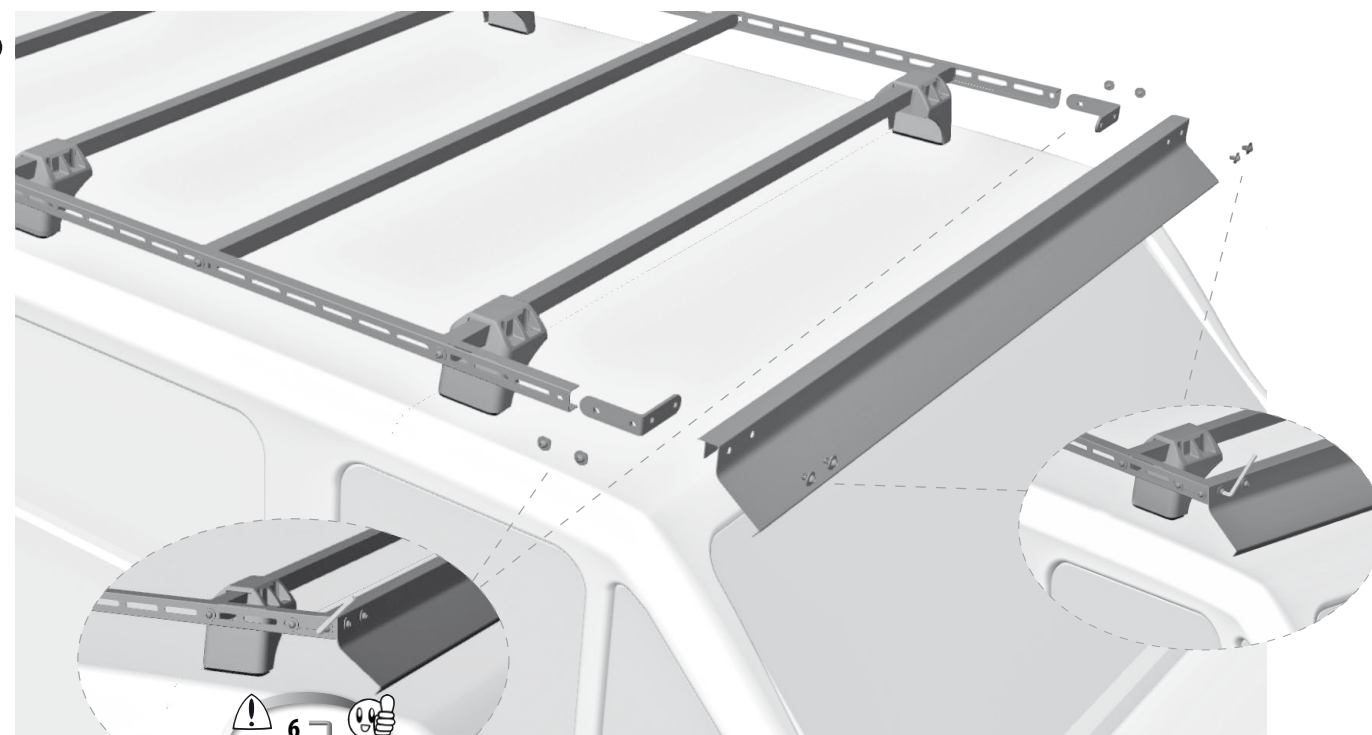


9

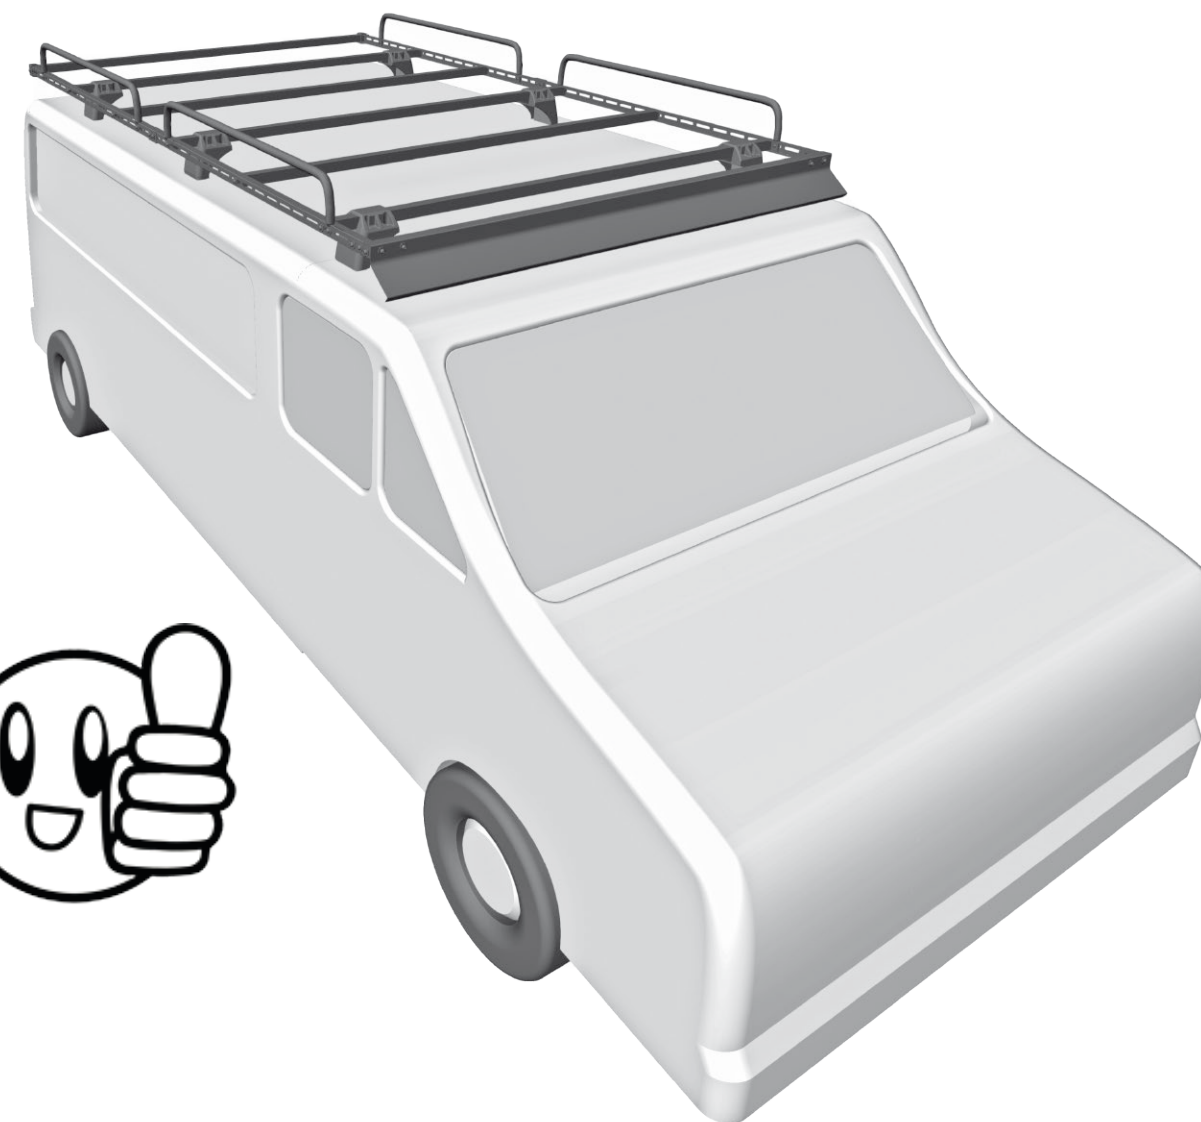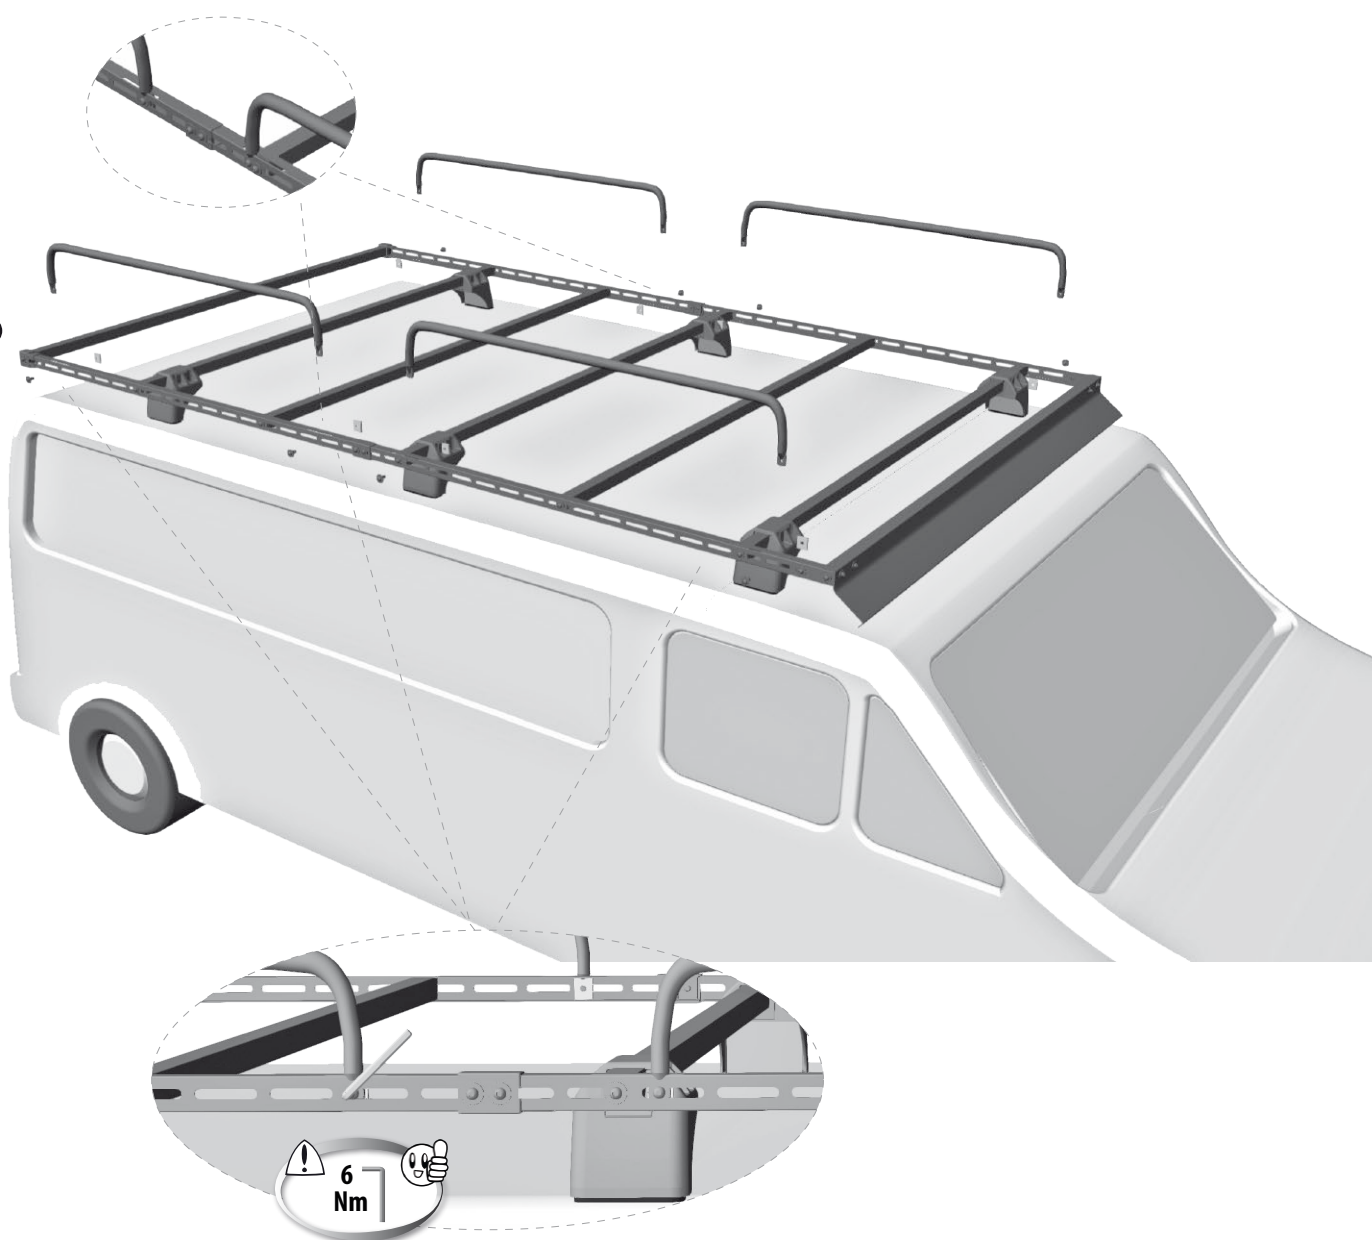

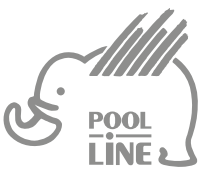

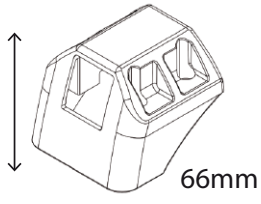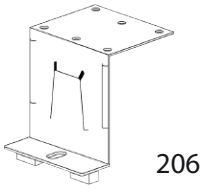N		Q
1	 66mm	6
2	 206	6
3		1

N	BO0061	Q
8	 DIN912 M6x20	24
9	 DIN125	24
N	BO0006 x3	Q
10	 DIN912 M6x16	6
11	 DIN9021 Ø6	6

- E

Instrucciones de montaje

Kit de fijación
- C

Instruccions de muntatge

Kit de fixació
- GB

Assembly instrucctions

Fixation Kit
- F

Instruction de montage

Kit fixation
- D

Montageanleitung

Stützfuß-Kit
- PT

Instruções de montagem

Kit fixação
- I

Istruzioni di montaggio

Kit di fissaggio
- PL

Instrukcja montażu

Element mocujacy
- CZ

Montážní návod

Fixační kit
- HU

Szerelési Utasítás

Rögzítő készlet
- RO

Instrucțiuni de montaj


Kit de fixare
- HR

Detaljne upute

Kit za montažu
- TU


Öncelikle montaj

Montaj kiti

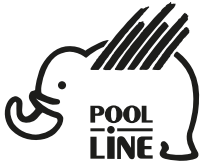


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042

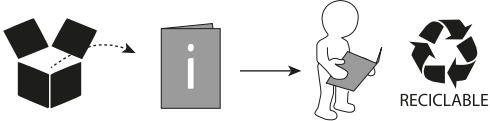




121891

Rv: 08/2025

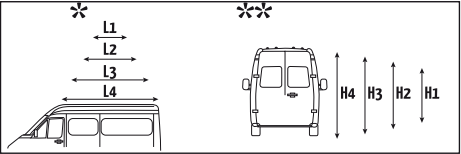

	L *	H **			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10
CITROËN Jumpy I	L1	H1	95 - 06	B00006	206	206			206	206			206	206
FIAT Scudo I	L1	H1	95 - 06	B00006	206	206			206	206			206	206
PEUGEOT Expert I	L1	H1	95 - 06	B00006	206	206			206	206			206	206

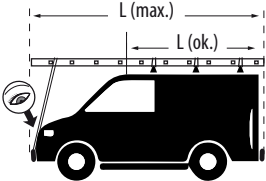


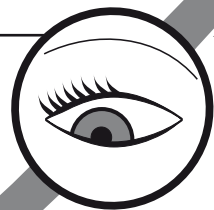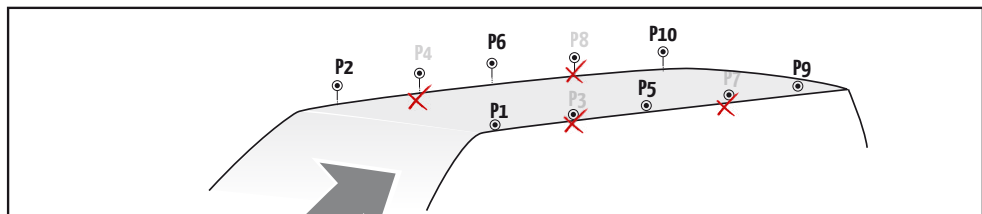



P1	P2	P3	P4	P5	P6	P7	P8	P9	P10
206	206	×	×	206	206	×	×	206	206
206	206	×	×	206	206	×	×	206	206
206	206	×	×	206	206	×	×	206	206

Pag. 1

2

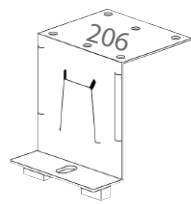


1

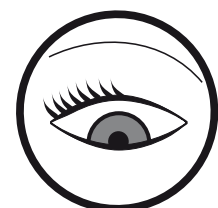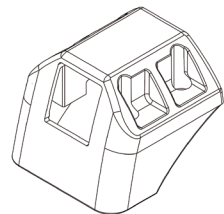



↻	10	P1	P
0X	B0000XX		
0X-	B0000XX		
	B0000X		

Pag. 1



2

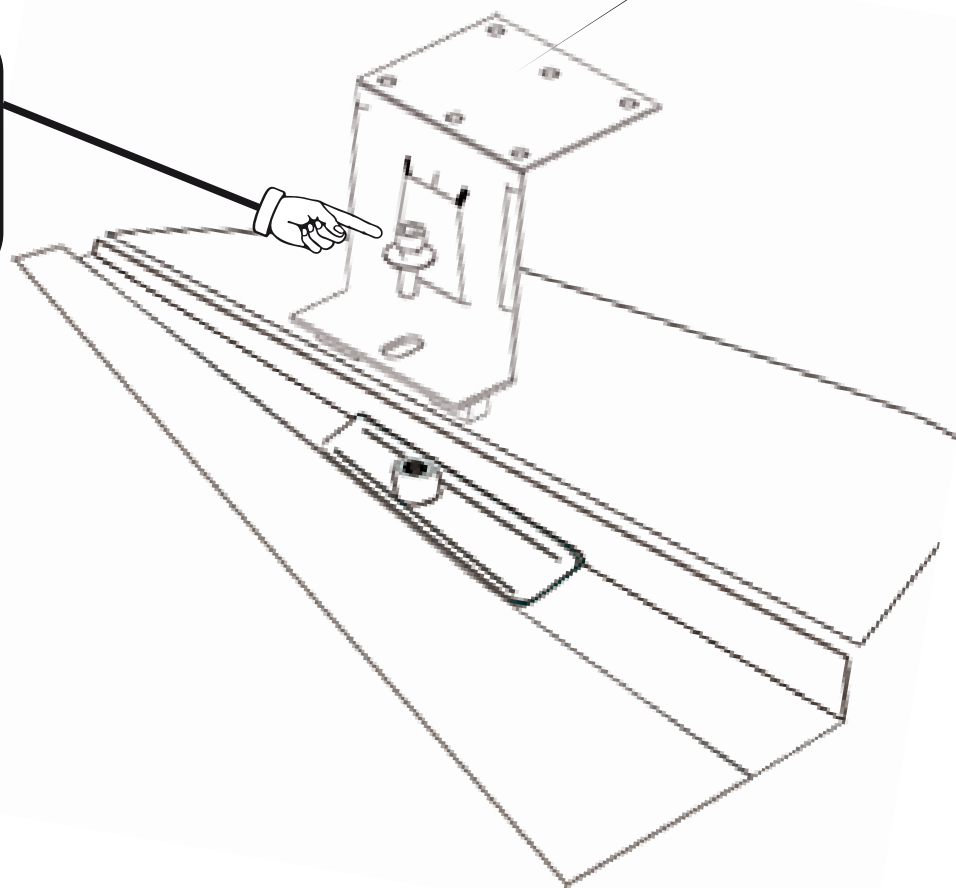


C

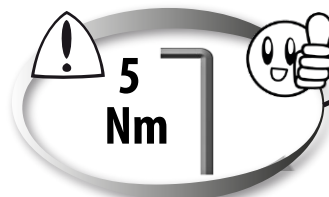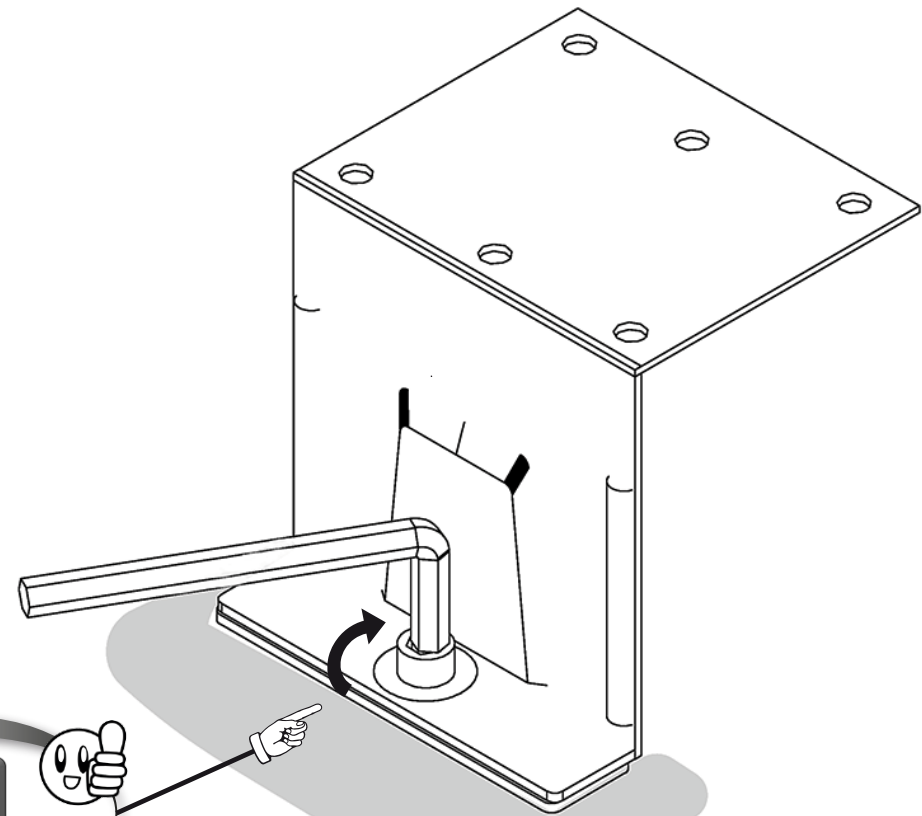

D

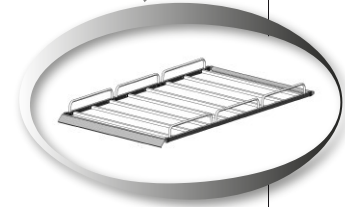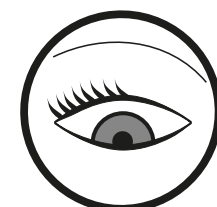

2

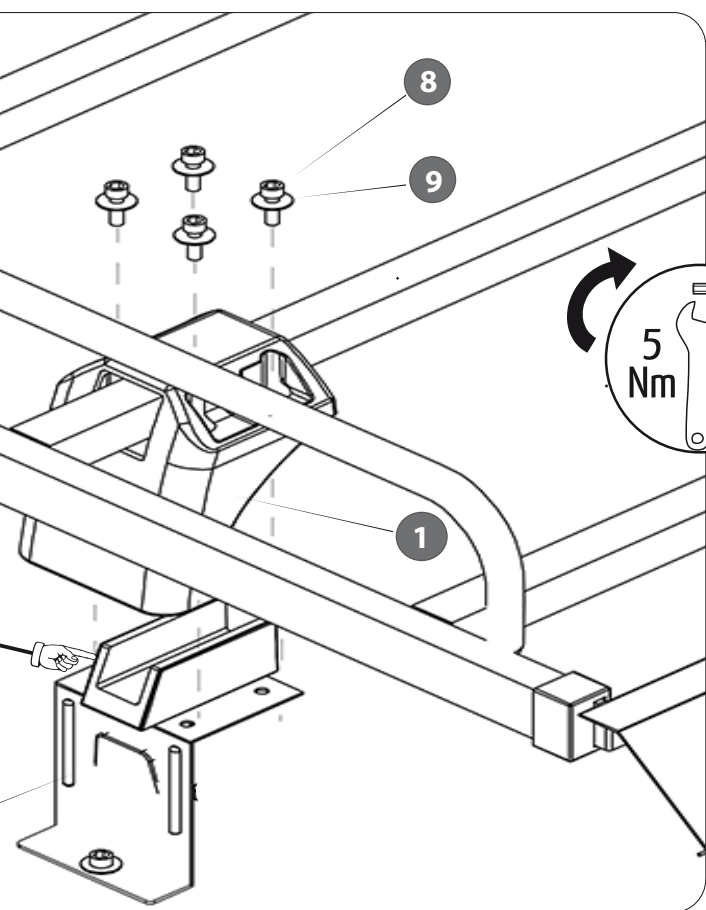

8

9

