


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montazu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

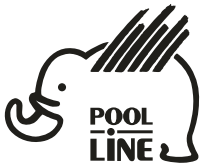

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net


**200 KG**
MAX.

Nº HOMOLOGACIÓN: **E9** 26R-03.1042



RECICLABLE

123413




Rv: 10/2024

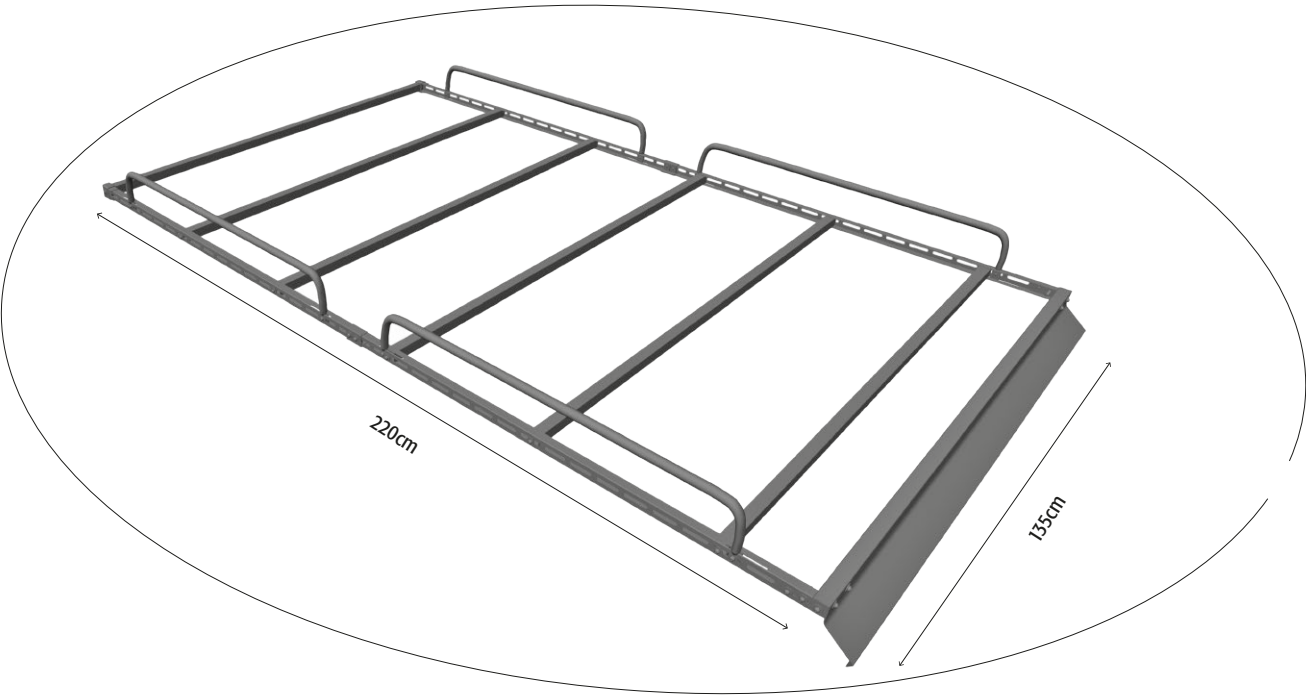


Limpieza pre-instalación
Pre-installation cleaning

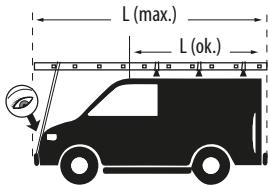

Revisar par de apriete
Check torque

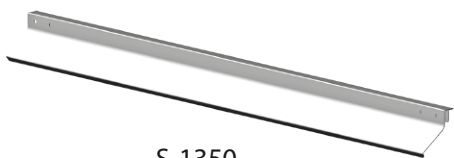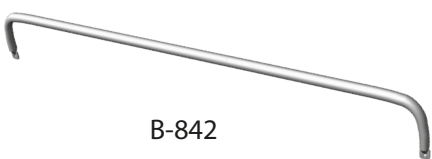N		Q
20	 S-1350	1
21		2
22	 L-1120	4
23	 B-842	4
24	 T-1335	6
25		12
26		2
27		8
28	 CHA-M8	12
29	 ISO 7380 M8x30	10
30	 ISO 7380 M8x16	20
31	 DIN 125 Ø 8	32
32	 ISO 7380 M8x 40	2

N		Q
32		1

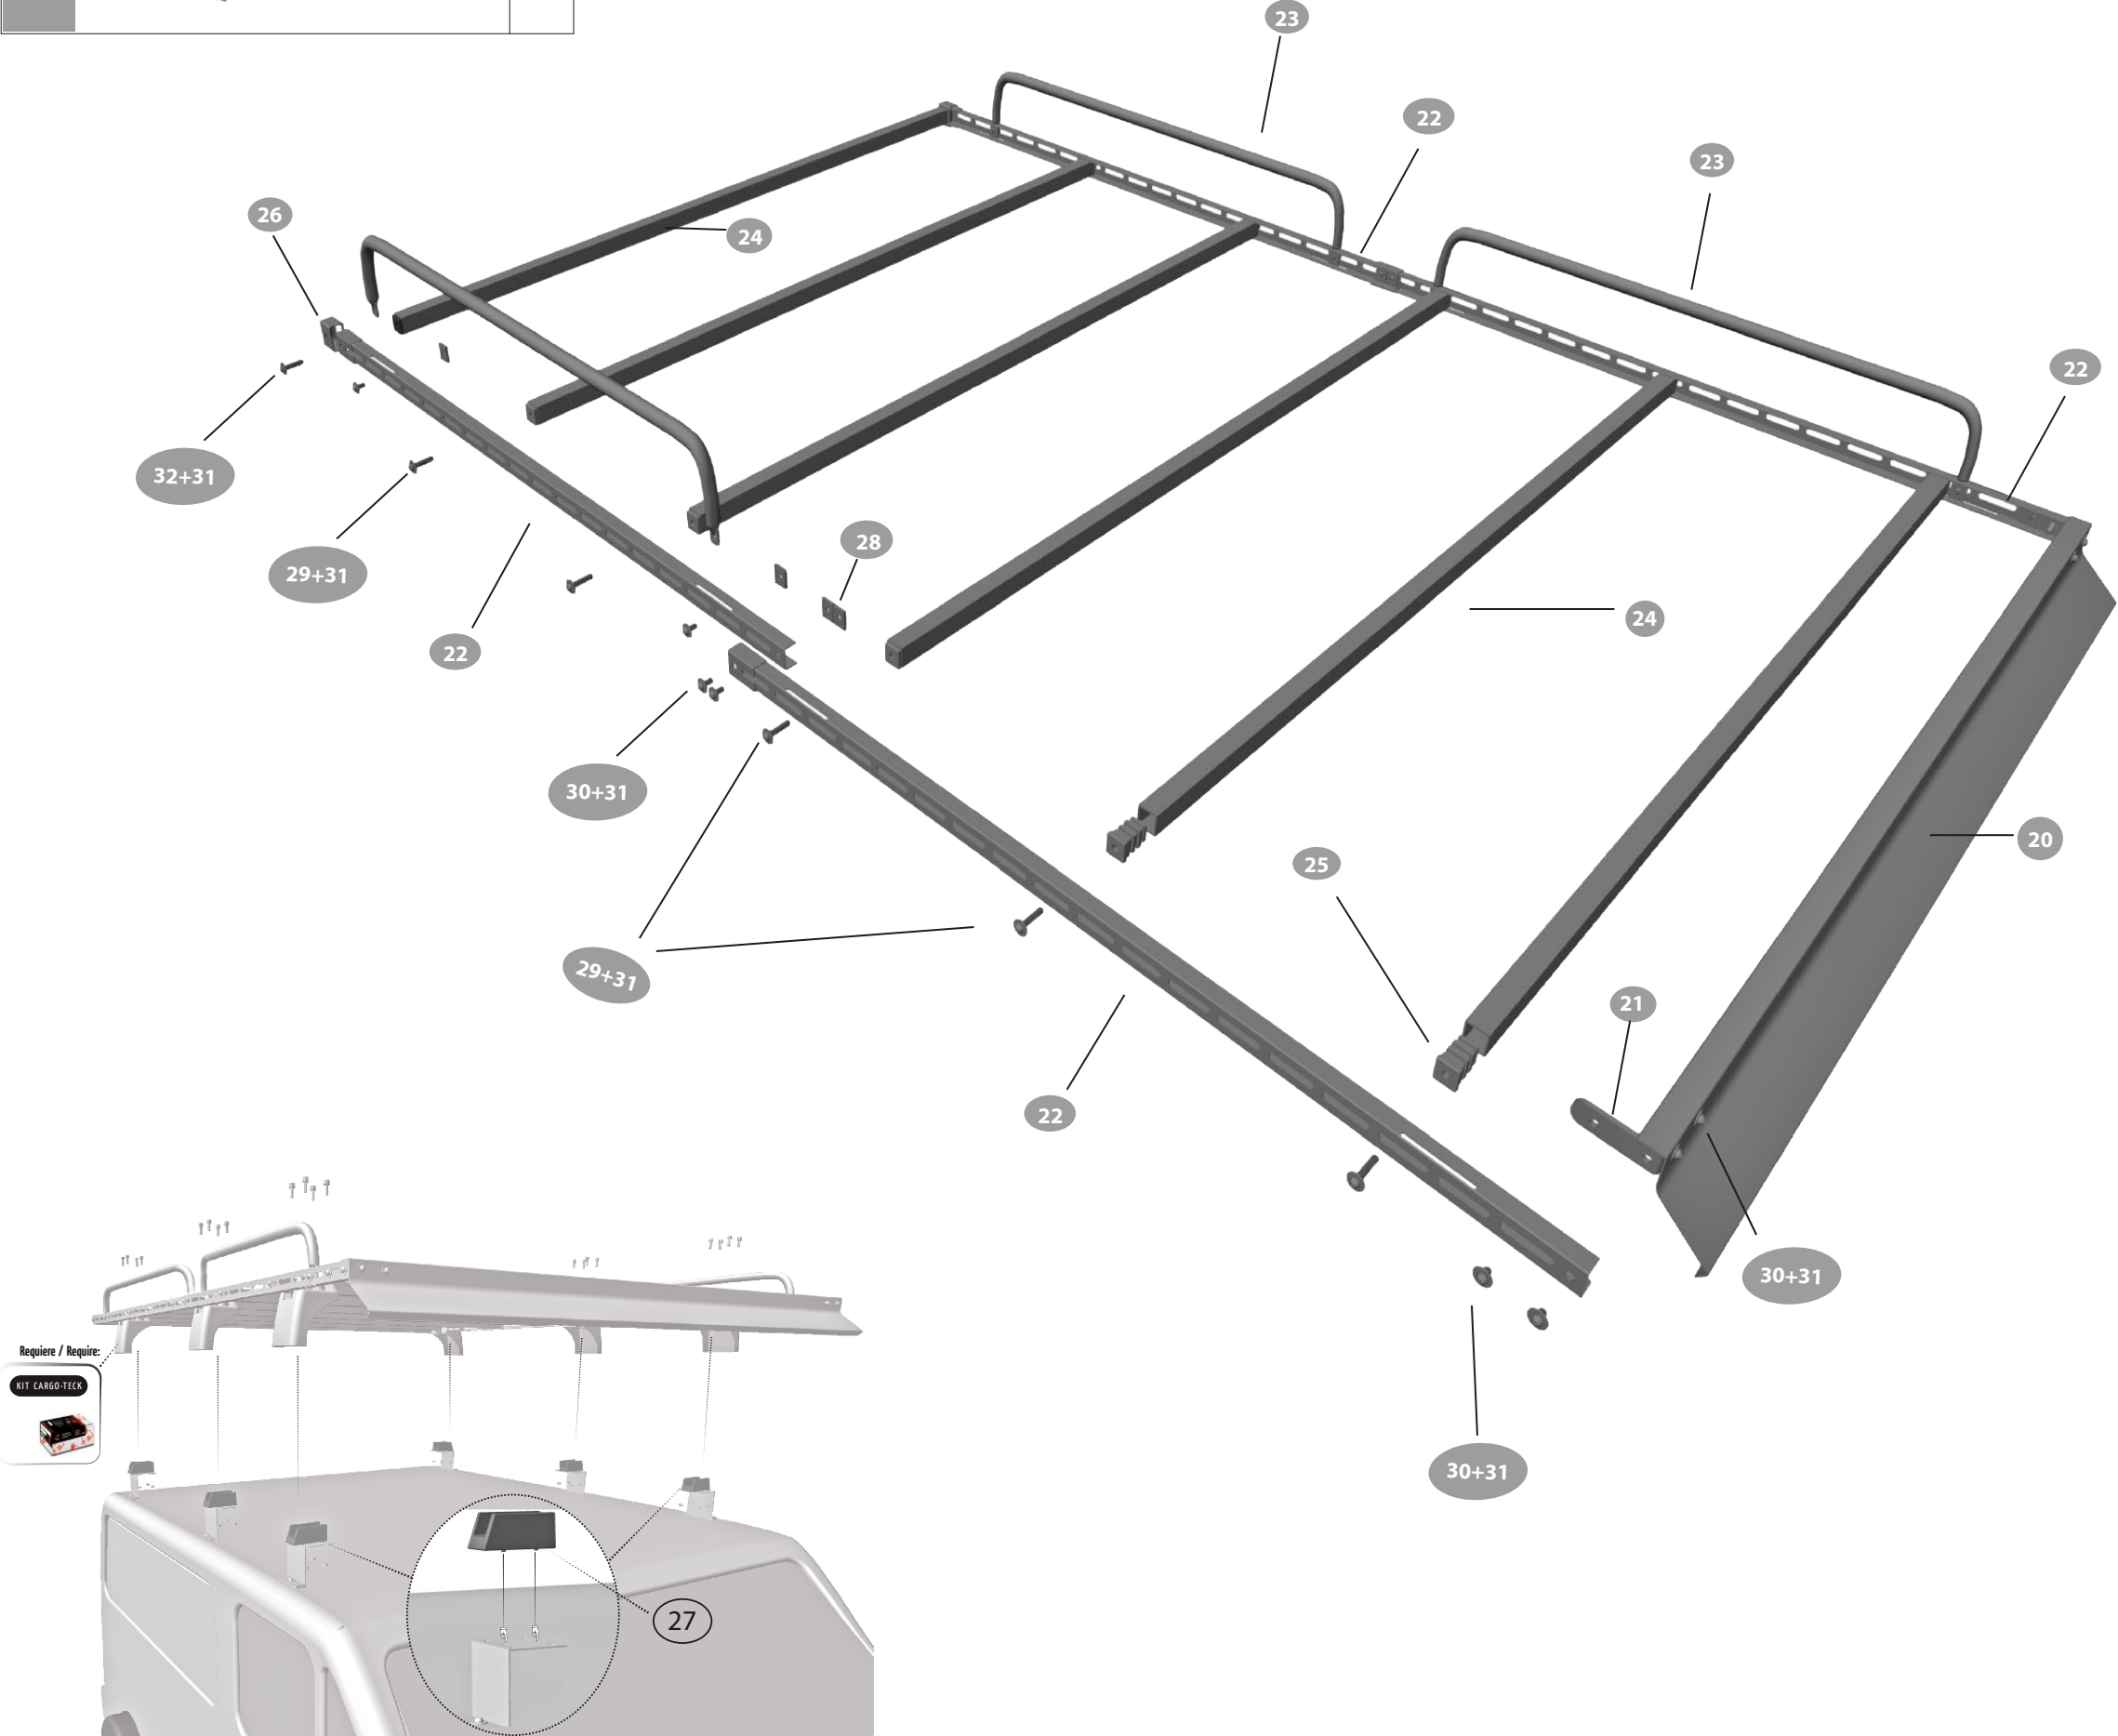





Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone




• CITROËN BERLINGO II L1 H1 (08-18)
• PEUGEOT PARTNER II L1 H1 (08-18)

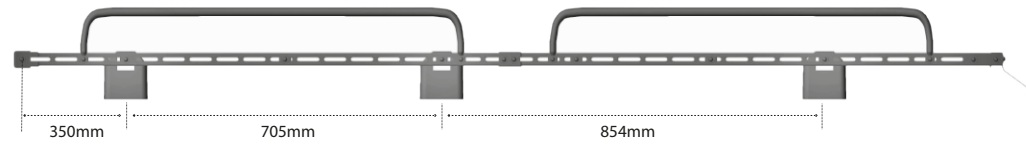


• CITROËN BERLINGO III (M) L1 H1 (2018->)
• FIAT DOBLÓ III / K9 (M) L1 H1 (2022->)
• OPEL COMBO E (M) L1 H1 (2018->)
• PEUGEOT PARTNER III (M) L1 H1 (2018->)
• TOYOTA PROACE CITY L1 H1 (2018->)

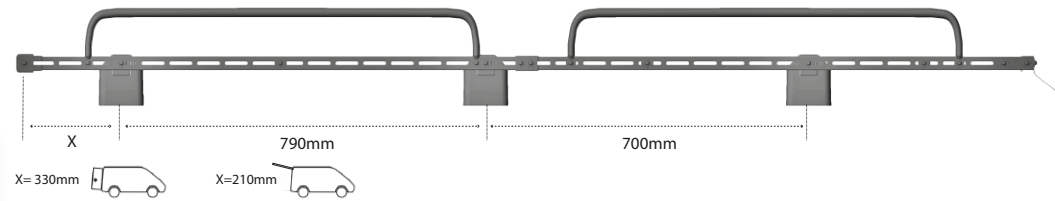


• CITROËN JUMPY II L1 H1 (07-13)
• FIAT SCUDO II L1 H1 (07-13)
• PEUGEOT EXPERT II L1 H1 (07-13)
• TOYOTA PROACE II L1 H1 (2013->)

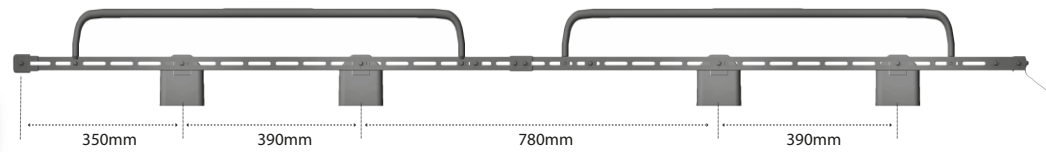


• NISSAN NV 200 (2009->)

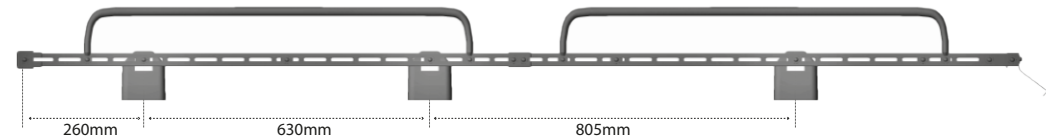


• FIAT DOBLÓ I L2 H1 (2007-2009)

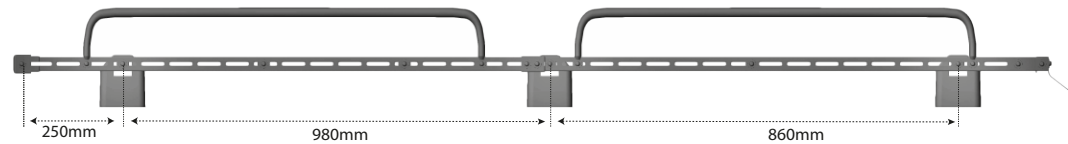


• FIAT DOBLÓ II L2 H1 (2010->)
• OPEL COMBO D L2 H1 (12-18)

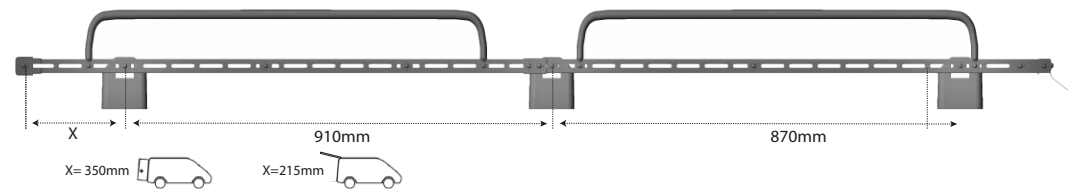

• TOYOTA LAND CRUISER J80 (90-97)

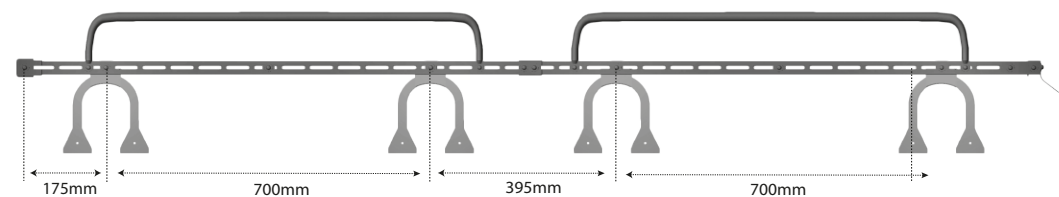


• VOLKSWAGEN ID. BUZZ L1-H1 (2022->)

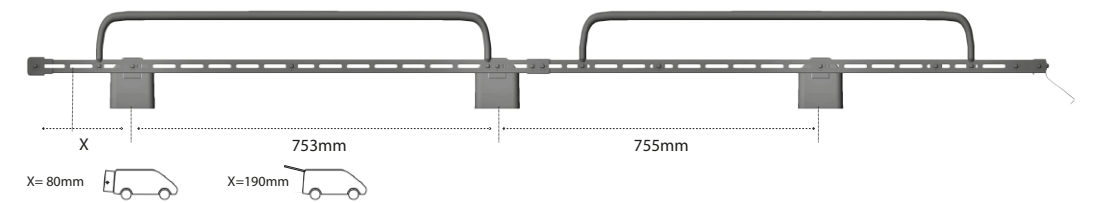


Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone



1




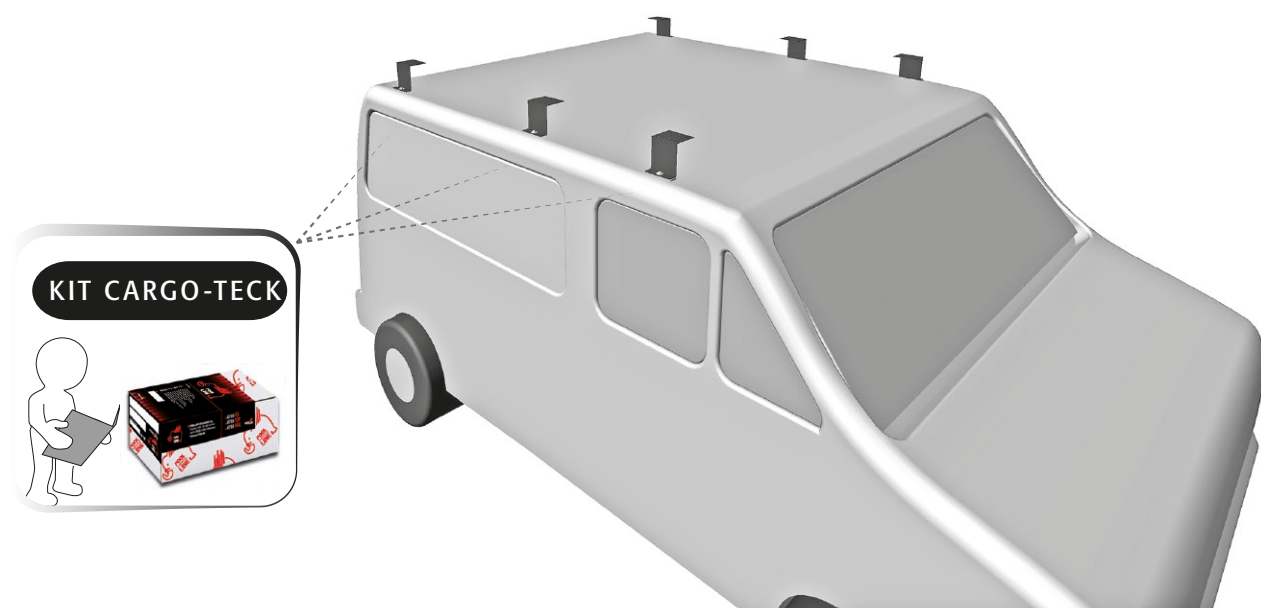


2

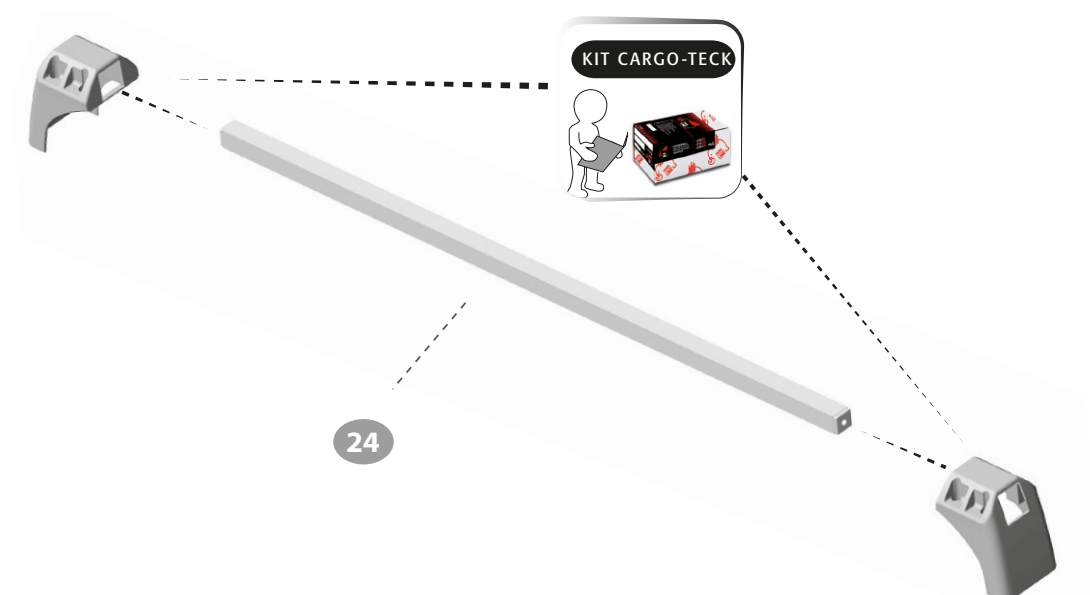


3

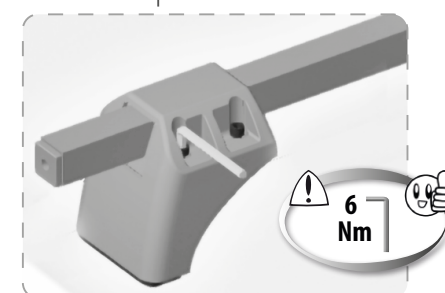
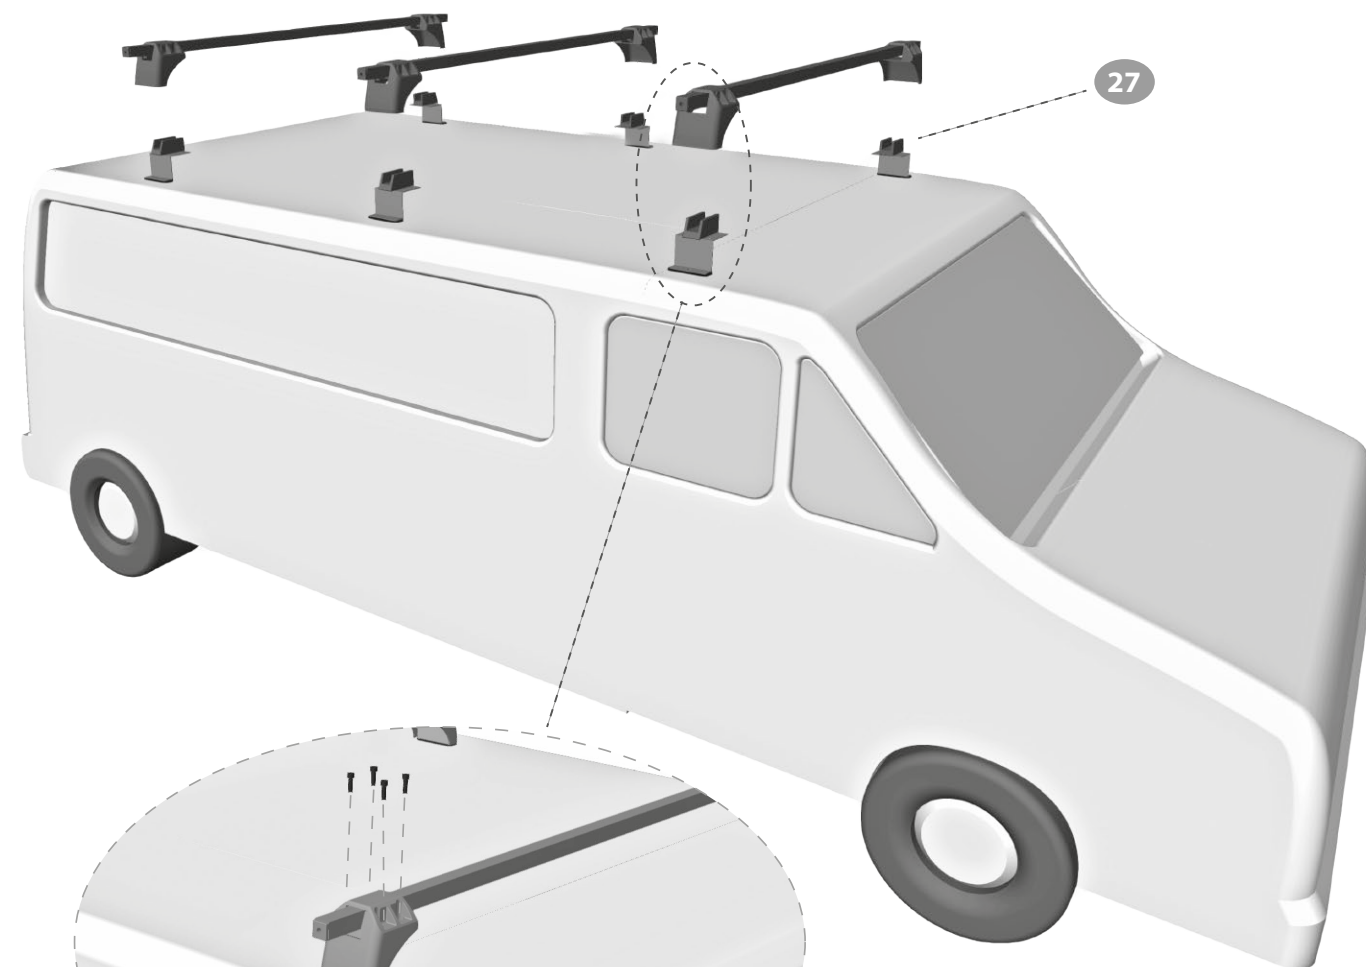








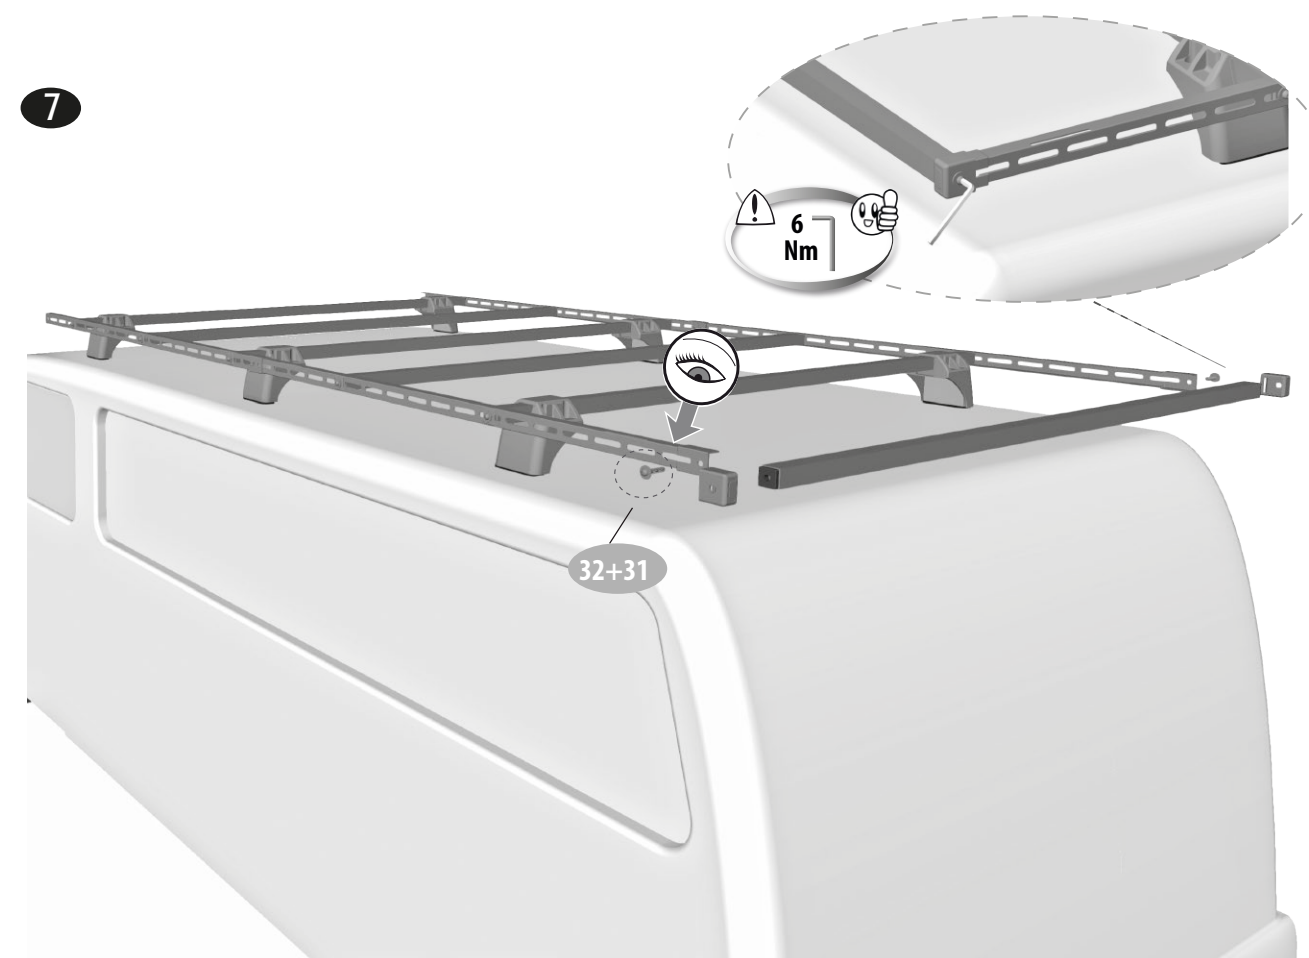
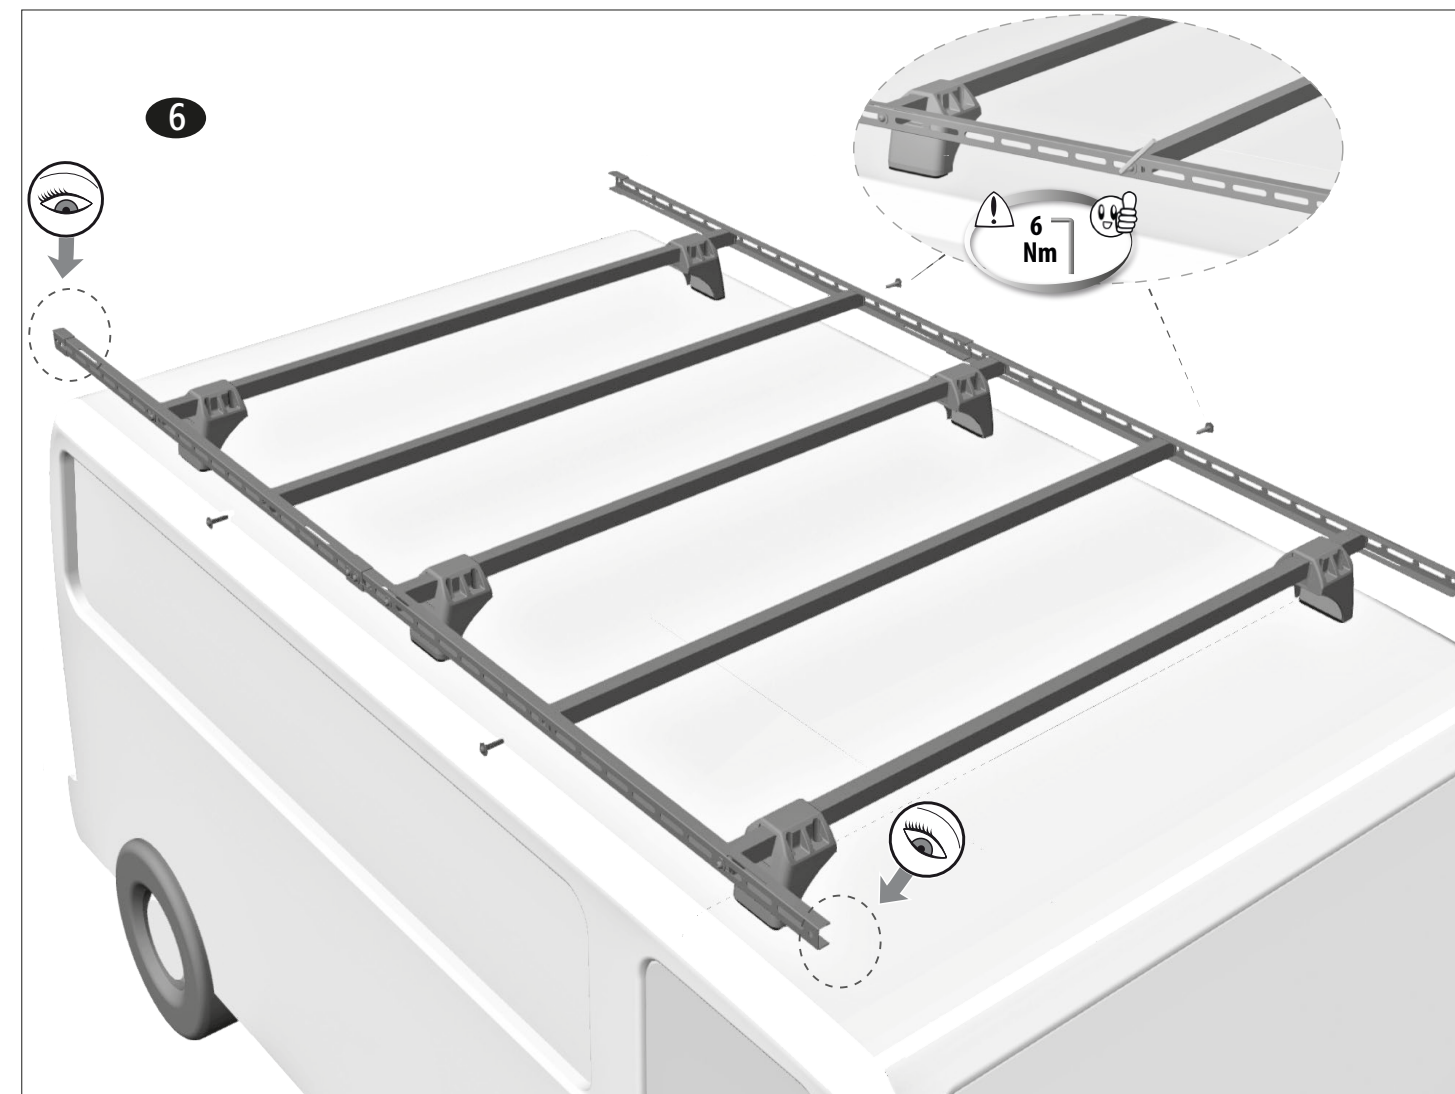
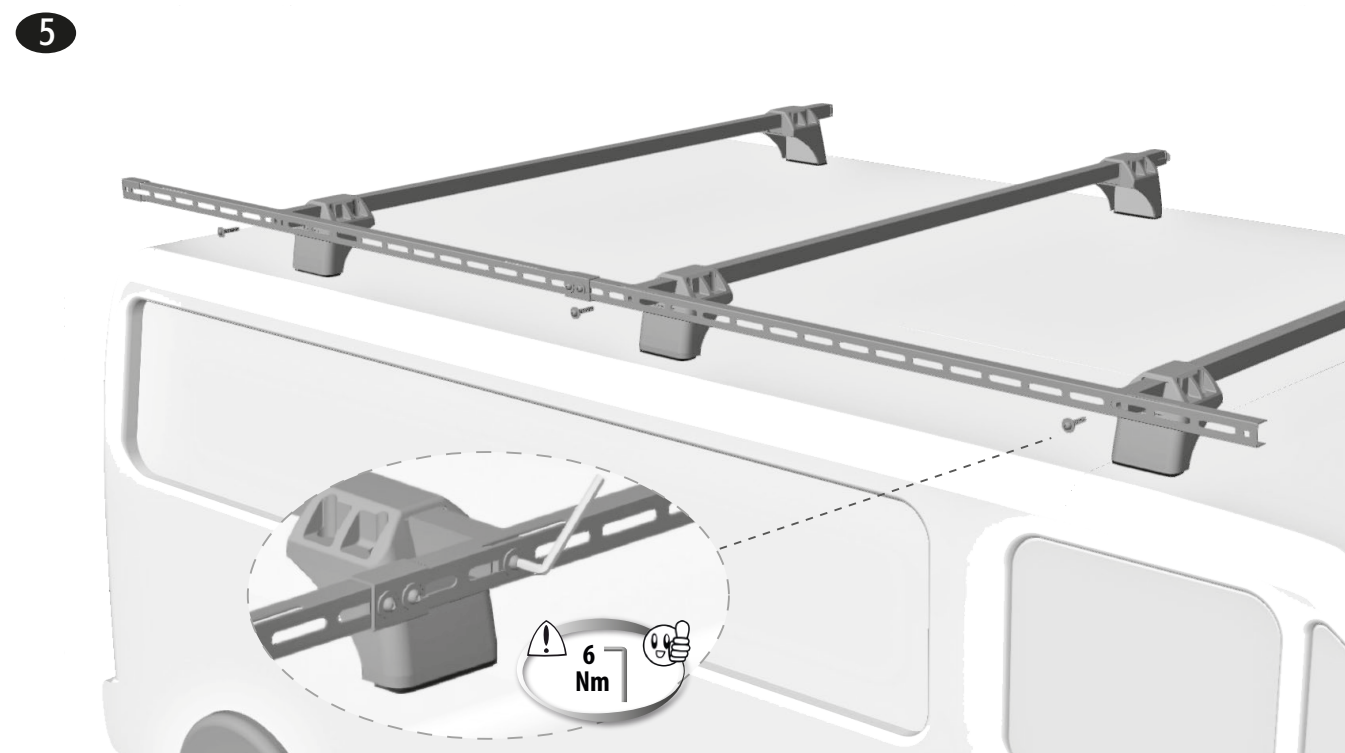
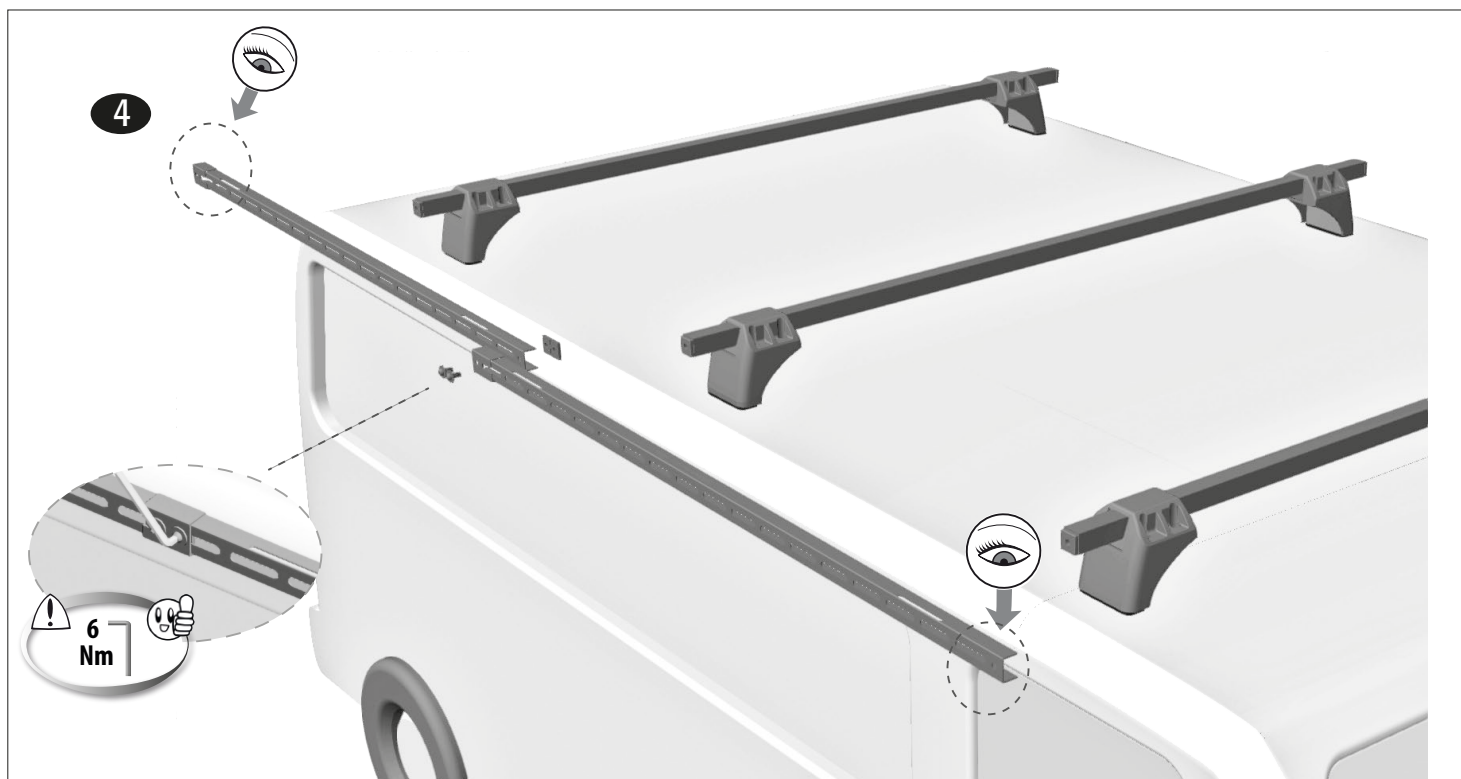



8

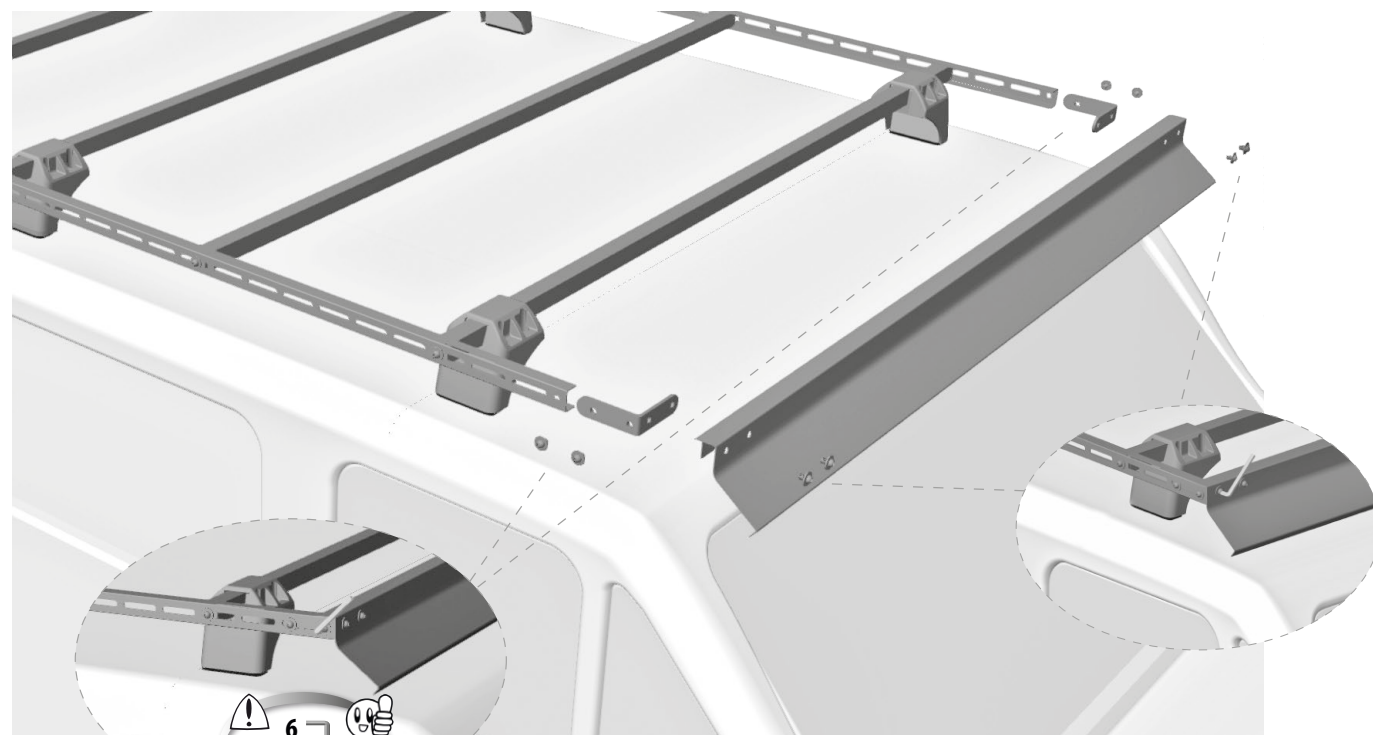




9

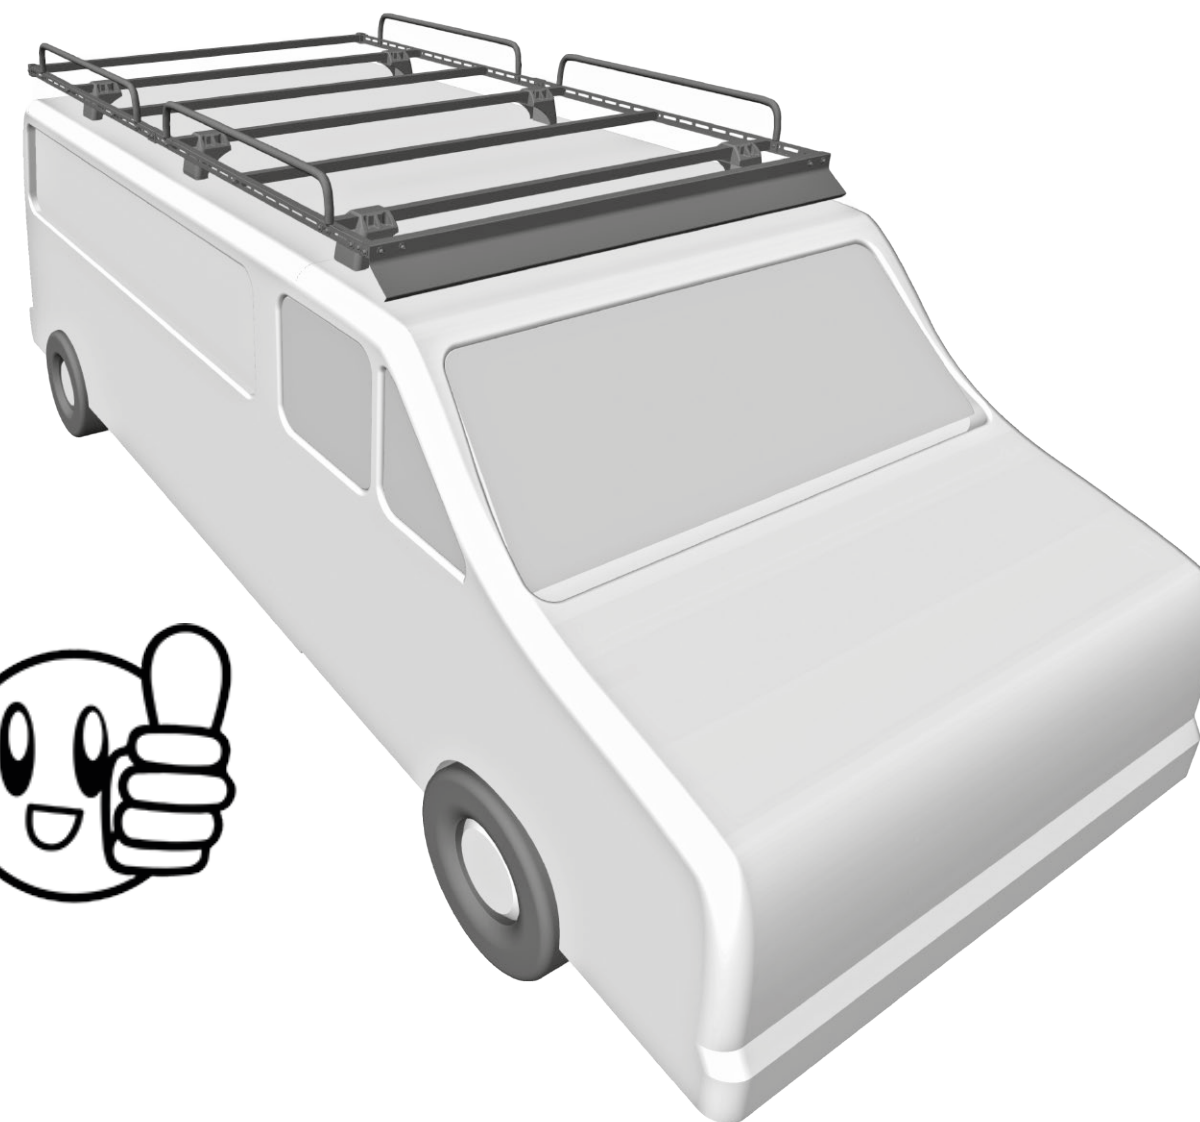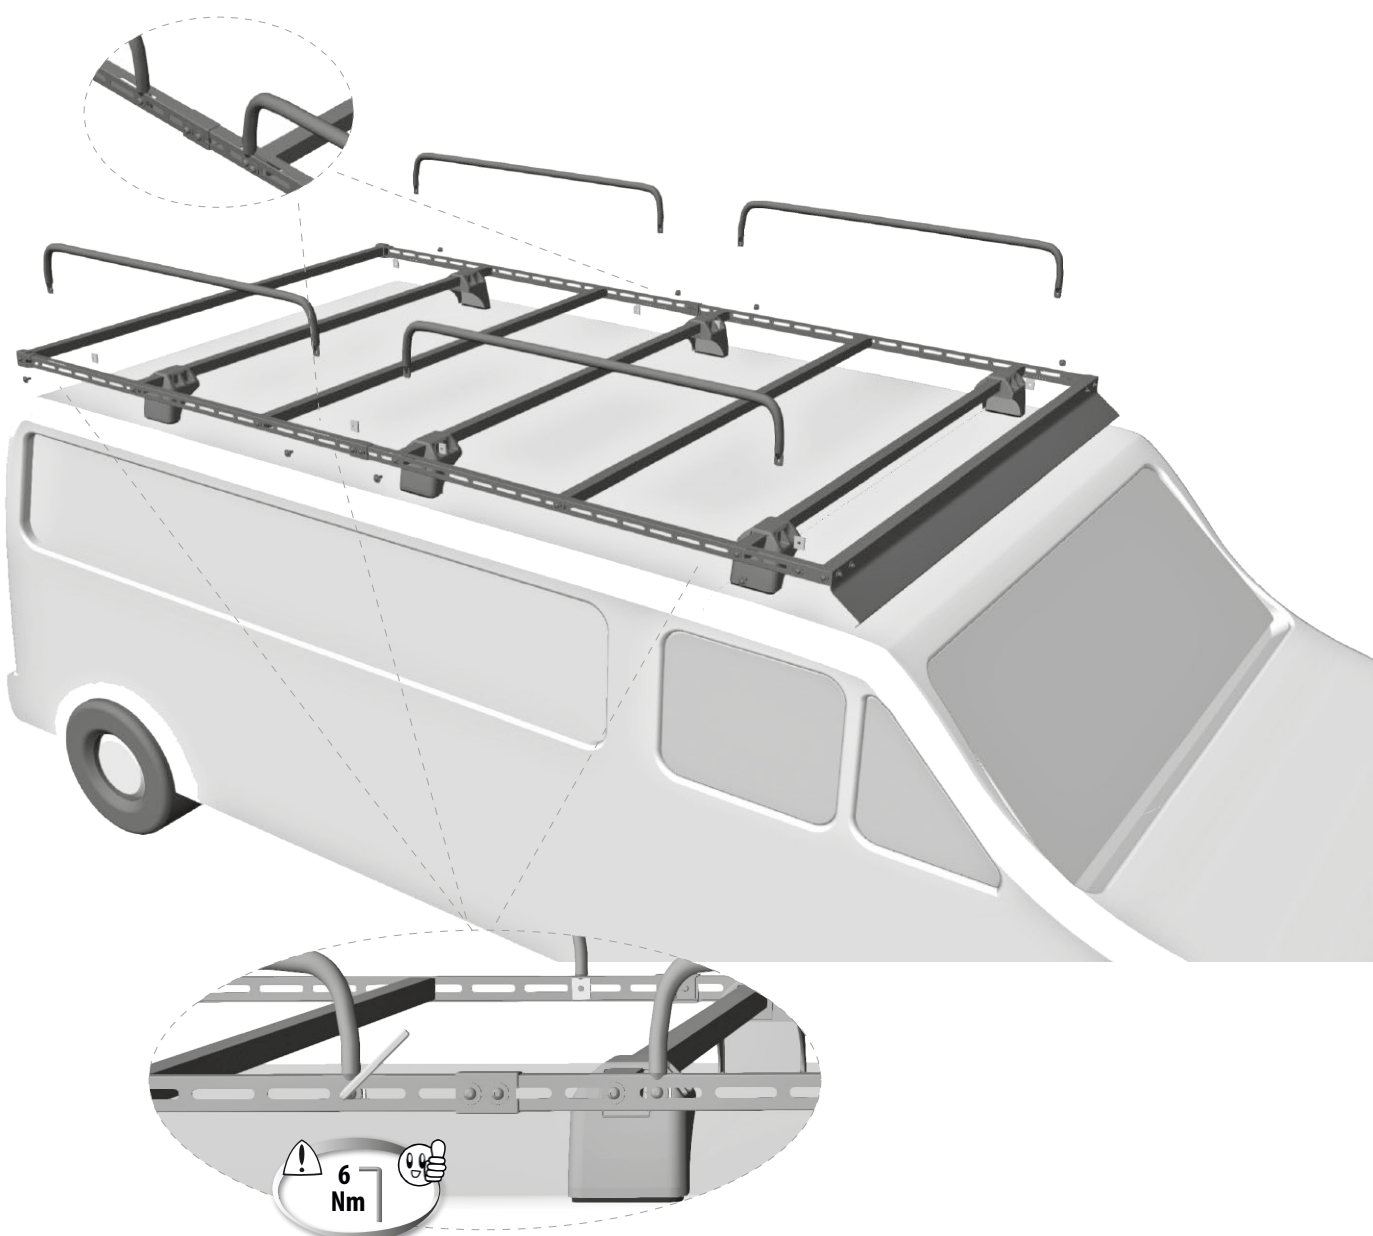

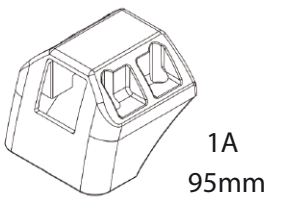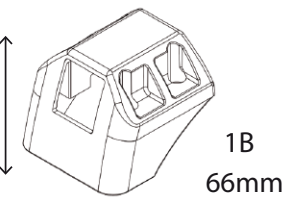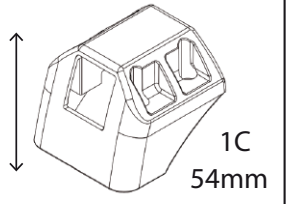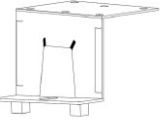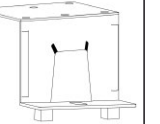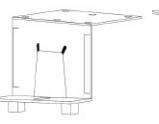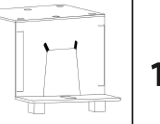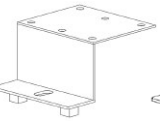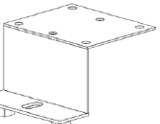
N		Q		Q		Q
1	 1A 95mm	2	 1B 66mm	2	 1C 54mm	4
2	 219  218	1+1	 217  216	1+1	 215  214	2+2
3						8
4						1

N	BO0060 x2	Q
8	 DIN912 M6x20	32
9	 DIN125 Ø6	32

N	BO0006 x4	Q
10	 DIN912 M6x16	8
11	 DIN9021 Ø6	8

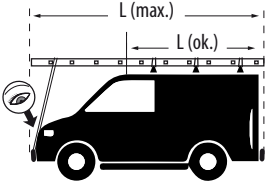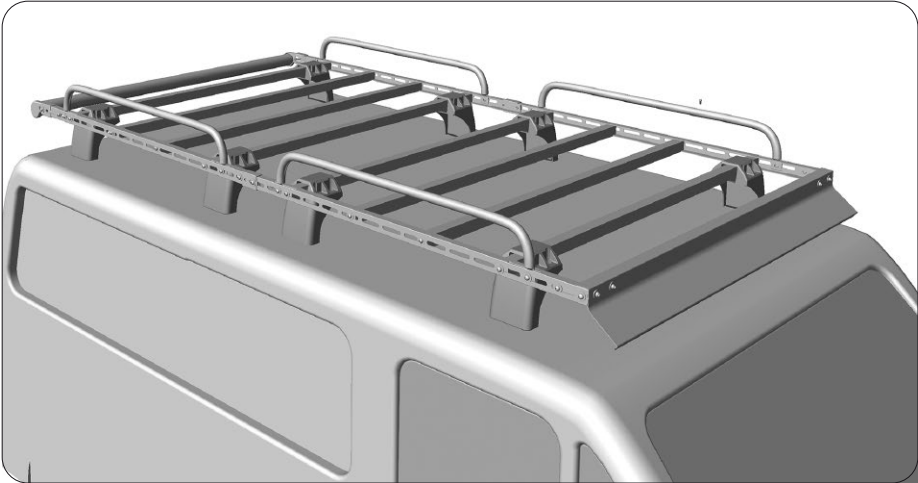


- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instrucctions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

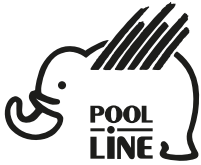

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net



Nº HOMOLOGACIÓN: **E9** 26R-03.1042



121941

Rv: 08/2025

	L *	H **			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
CITROËN																
JUMPY II	L1	H1	07-15	800006	219+1A	218+1A	217+1B	216+1B			215+1C	215+1C	214+1C	214+1C		
JUMPY II	L2	H1	07-15	800006	219+1A	218+1A	217+1B	216+1B			214+1C	214+1C			215+1C	215+1C
FIAT																
SCUDO II	L1	H1	07-15	800006	219+1A	218+1A	217+1B	216+1B			215+1C	215+1C	214+1C	214+1C		
SCUDO II	L2	H1	07-15	800006	219+1A	218+1A	217+1B	216+1B			214+1C	214+1C			215+1C	215+1C
PEUGEOT																
EXPERT II	L1	H1	07-15	800006	219+1A	218+1A	217+1B	216+1B			215+1C	215+1C	214+1C	214+1C		
EXPERT II	L2	H1	07-15	800006	219+1A	218+1A	217+1B	216+1B			214+1C	214+1C			215+1C	215+1C
TOYOTA																
PROACE I	L1	H1	13-15	800006	219+1A	218+1A	217+1B	216+1B			215+1C	215+1C	214+1C	214+1C		
PROACE I	L2	H1	13-15	800006	219+1A	218+1A	217+1B	216+1B			214+1C	214+1C			215+1C	215+1C

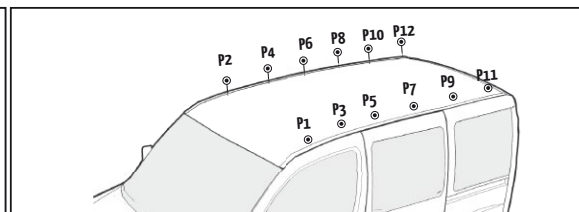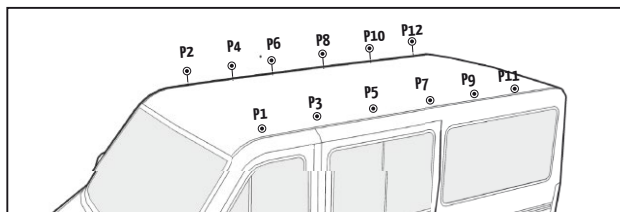

Eye icon

P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx

Pag. 1

2

1

A

Eye icon

10	P1	P
0X	B0000XX	
0X-	B0000XX	
	B0000X	

Pag. 1

2

3

B

2

3

5 Nm

C

8

9

1

2

5 Nm