


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

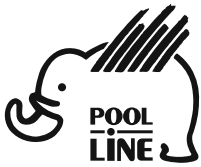

POOL-LINE ACCESORIOS, S.L.  
C. Esqueis, 19. P. I. Can Barri  
08415- Bigues i Riells. Barcelona (España)  
[www.pool-line.net](http://www.pool-line.net)




**200** **KG.**  
**MAX.**

Nº HOMOLOGACIÓN: **E9** 26R-03.1042




**123513**

Rv: 05/2019

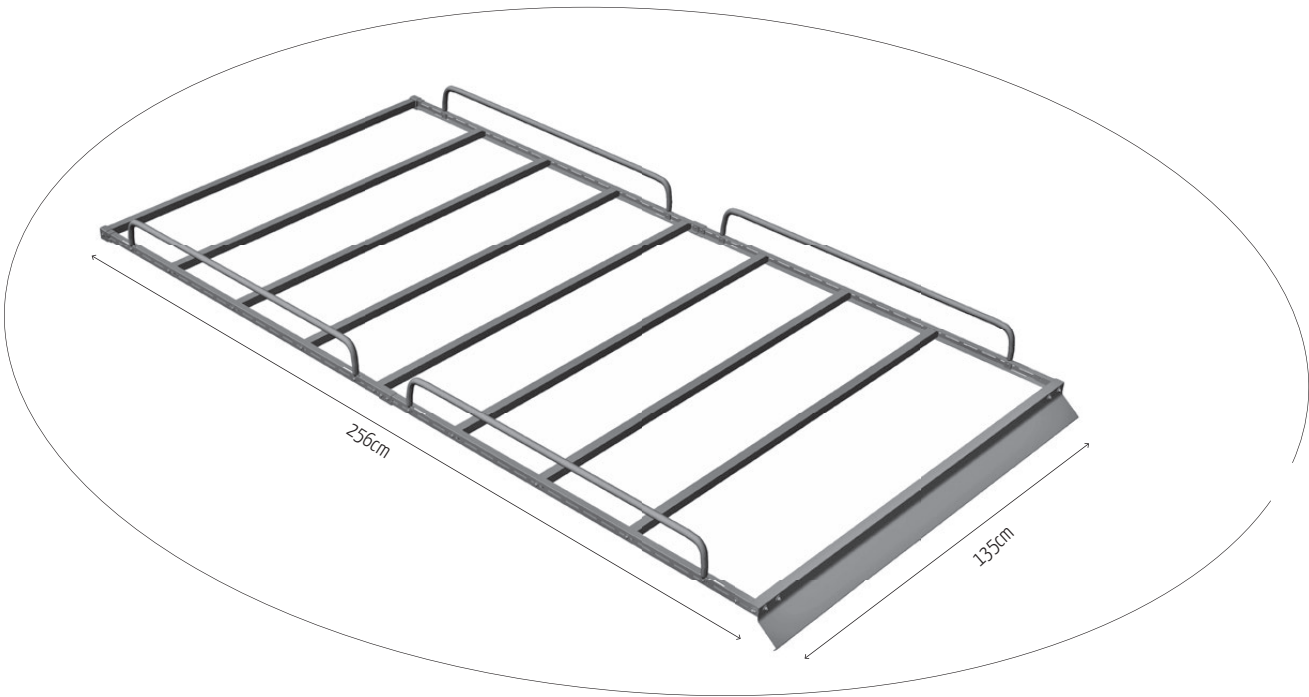

Limpeza pre-instalação  
Pre-installation cleaning


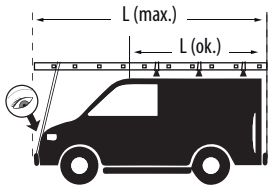


Revisar par de apriete  
Check torque



| N |                                                                                             | Q  |
|---|---------------------------------------------------------------------------------------------|----|
| 1 | <br>S-1350 | 1  |
| 2 | <br>L-1300 | 4  |
| 3 | <br>B-1022 | 4  |
| 4 | <br>T-1335 | 8  |
| 5 |            | 16 |
| 6 |           | 2  |
| 7 |          | 2  |
| 8 |          | 8  |


| N  |                                                                                                       | Q  |
|----|-------------------------------------------------------------------------------------------------------|----|
| 11 |                    | 1  |
| 12 | <br>CHA-M8         | 12 |
| 13 | <br>ISO 7380 M8x40 | 16 |
| 14 | <br>ISO 7380 M8x16 | 20 |
| 15 | <br>DIN 125 Ø 8    | 36 |

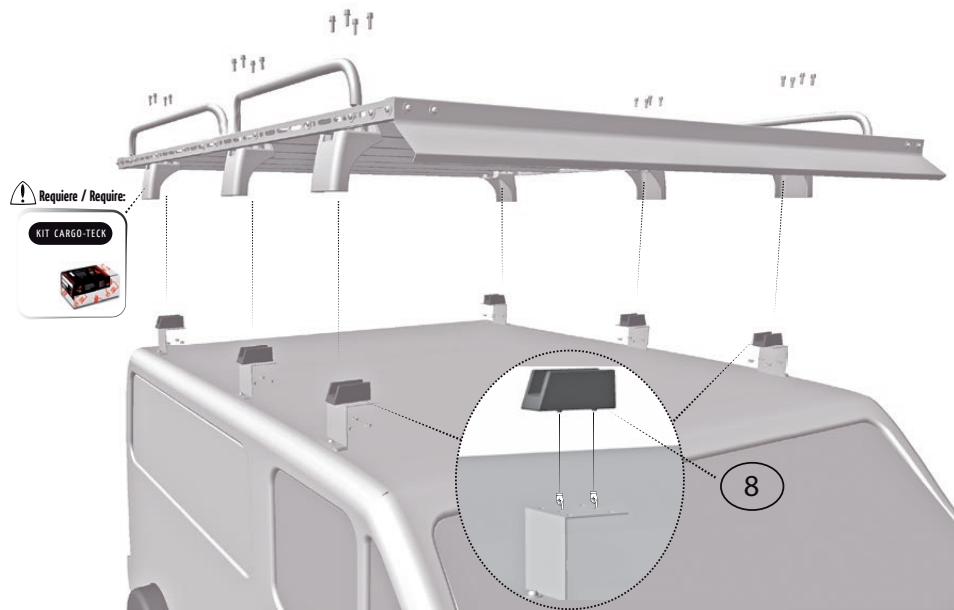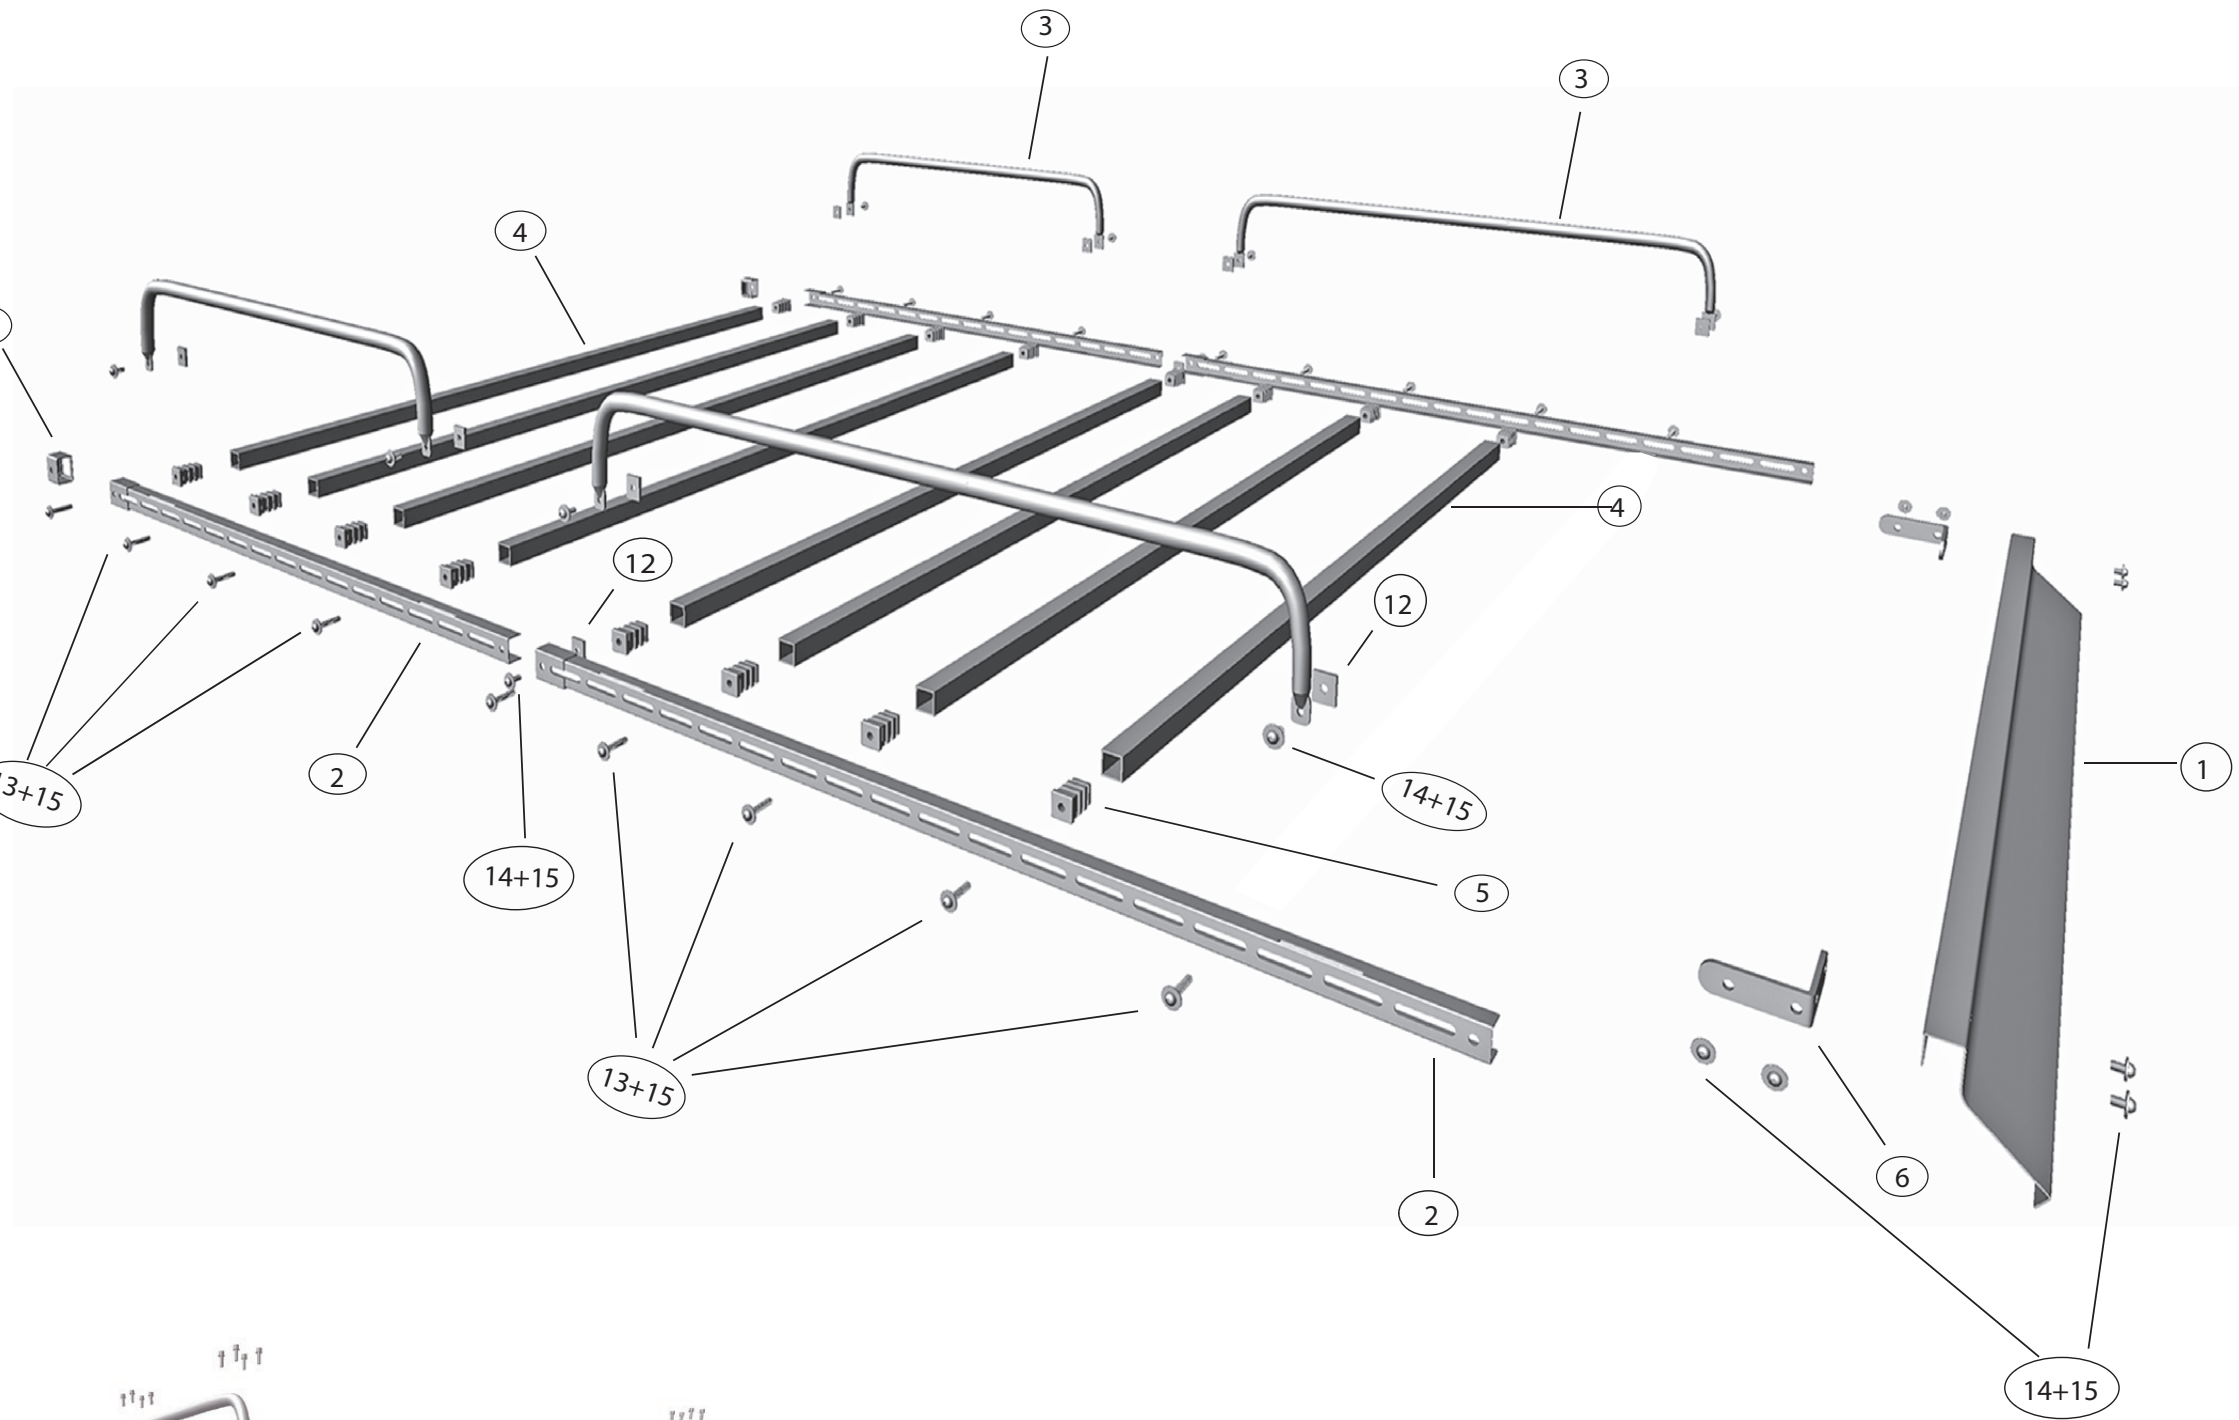



**CITROËN BERLINGO II L2H1 08-18**

**PEUGEOT PARTNER II L2H1 08-18**

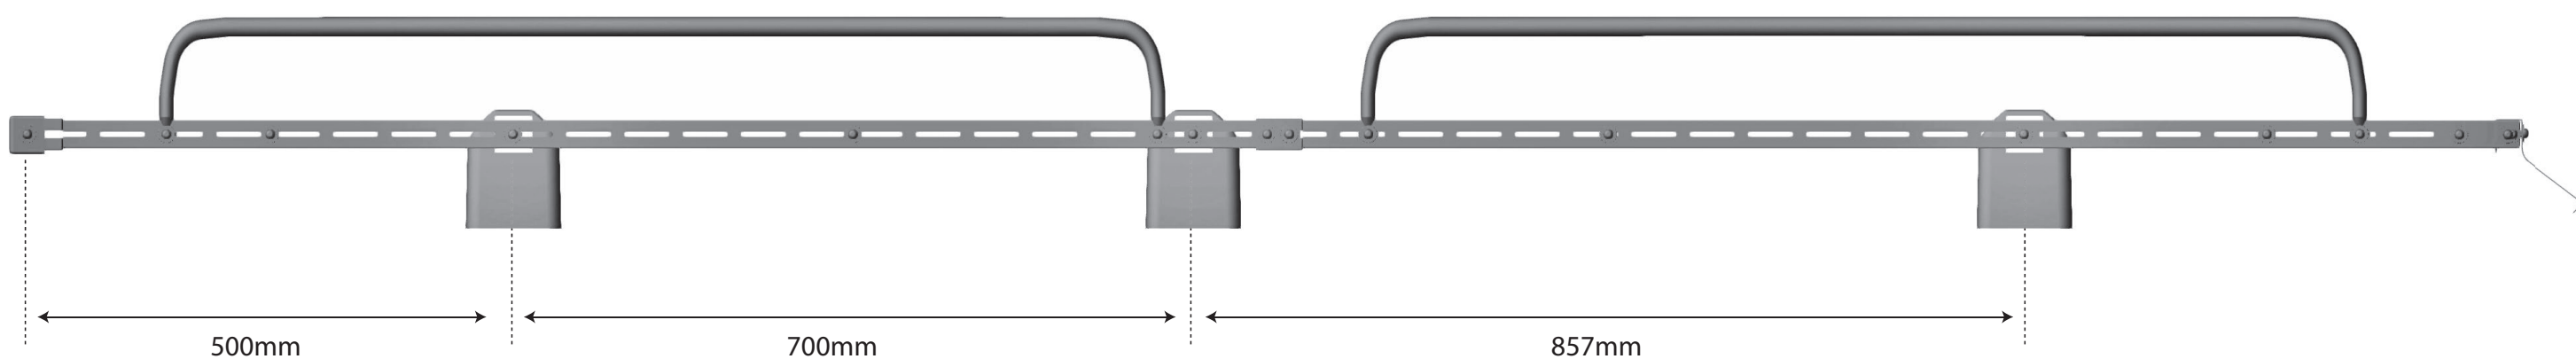


**CITROËN JUMPY II L2H1 (07-15)**

**PEUGEOT EXPERT II L2H1 (07-15)**

**FIAT SCUDO II L2H1 (07-15)**

**TOYOTA PROACE II L2H1 (07-15)**

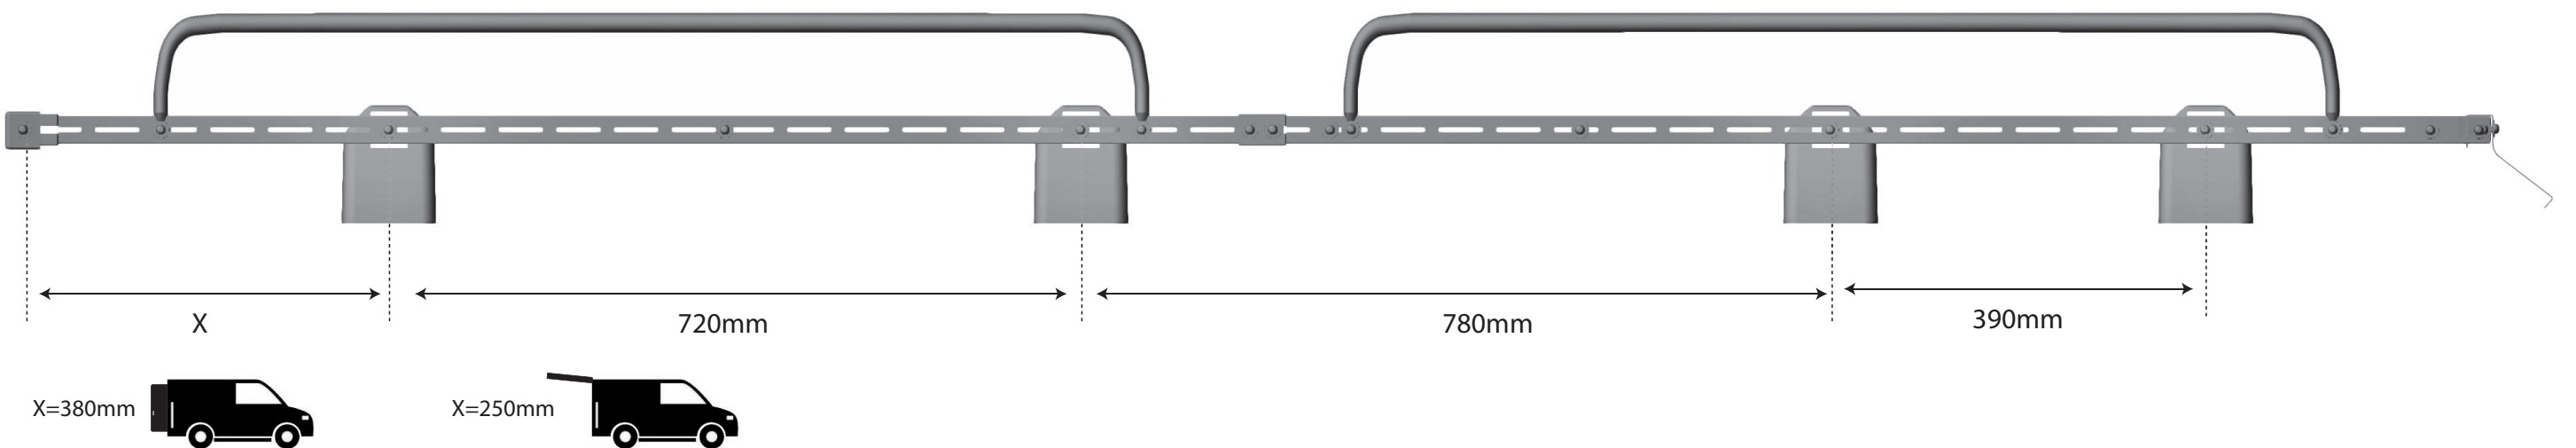





NISSAN PRIMASTAR L2-H2 (02-14)

OPEL VIVARO A L2-H2 (02-14)

RENAULT TRAFIC II L2-H2 (02-14)

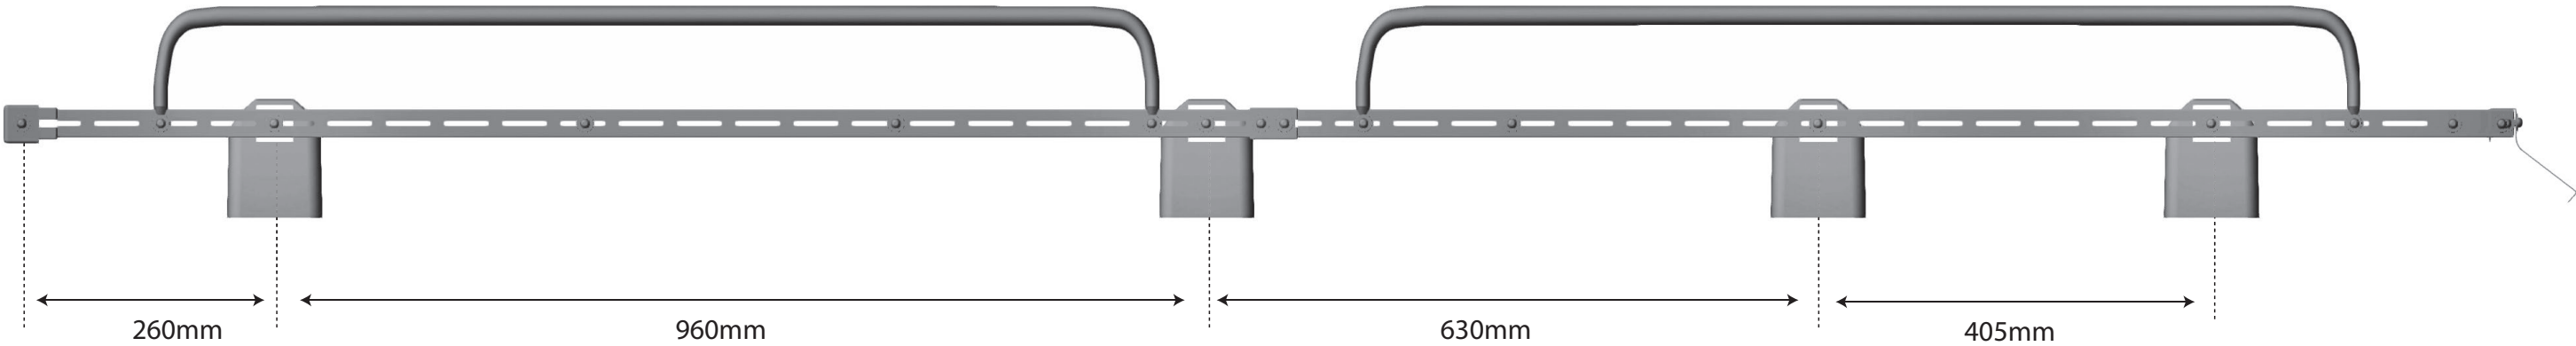

OPEL MIDI I/II (80-01)

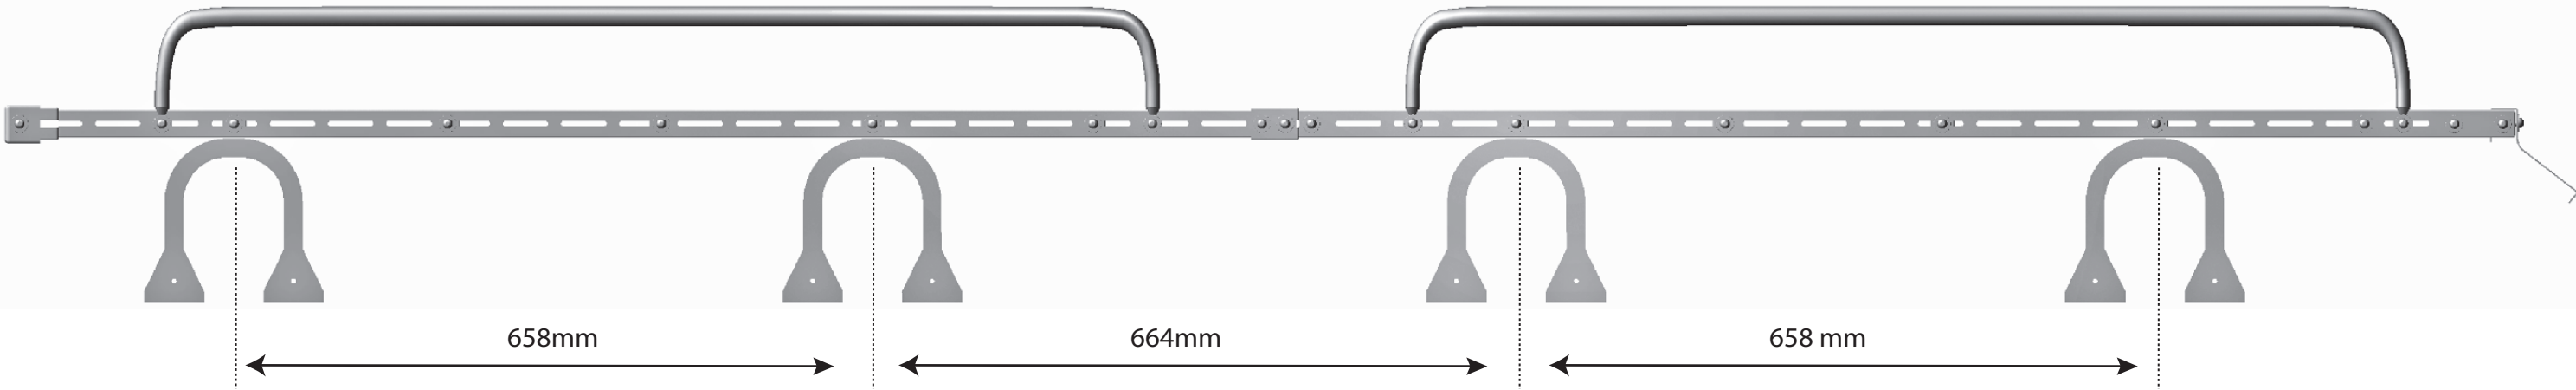





**CITROËN BERLINGO III (XL) L2 (2018)**

**OPEL COMBO E (XL) L2 (2018)**

**PEUGEOT PARTNER III (XL) L2 (2018)**

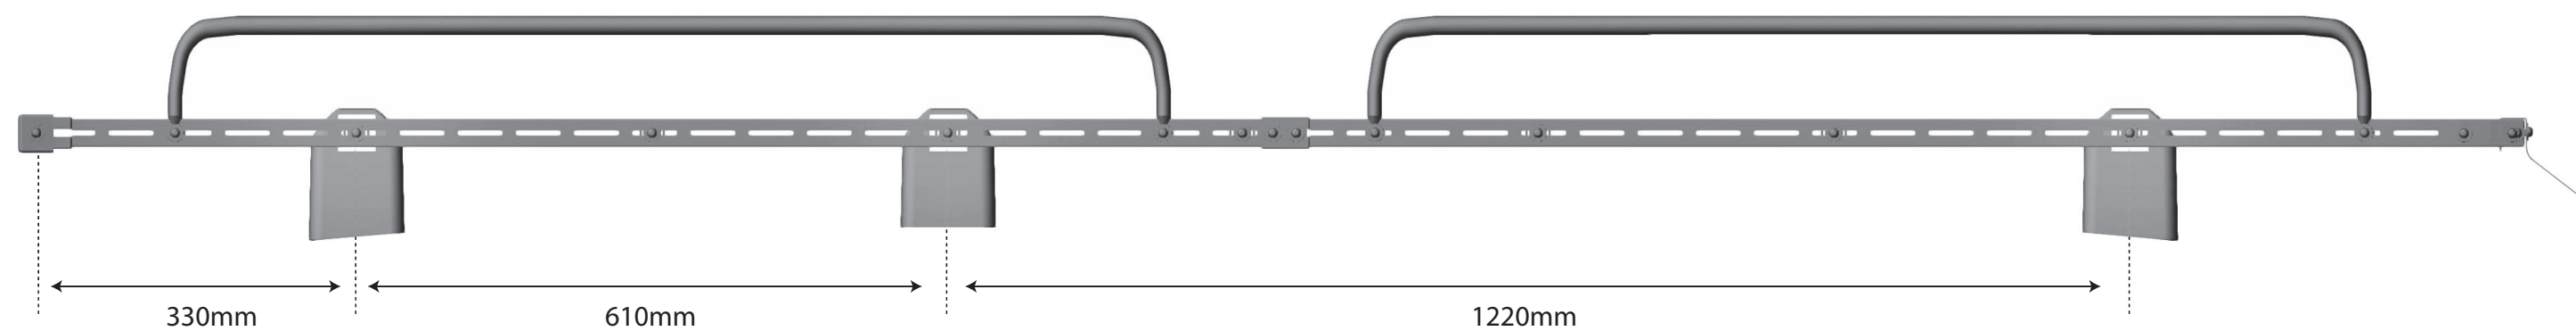


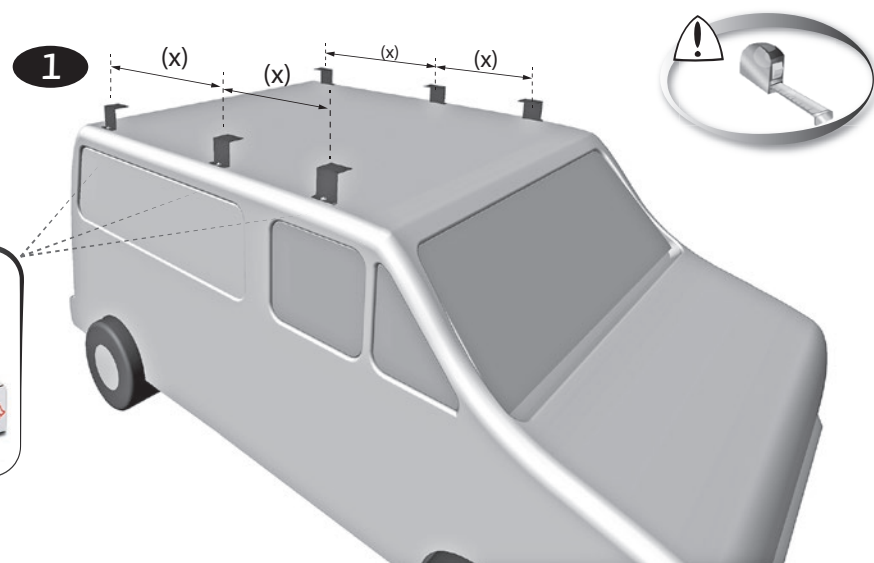


2




3

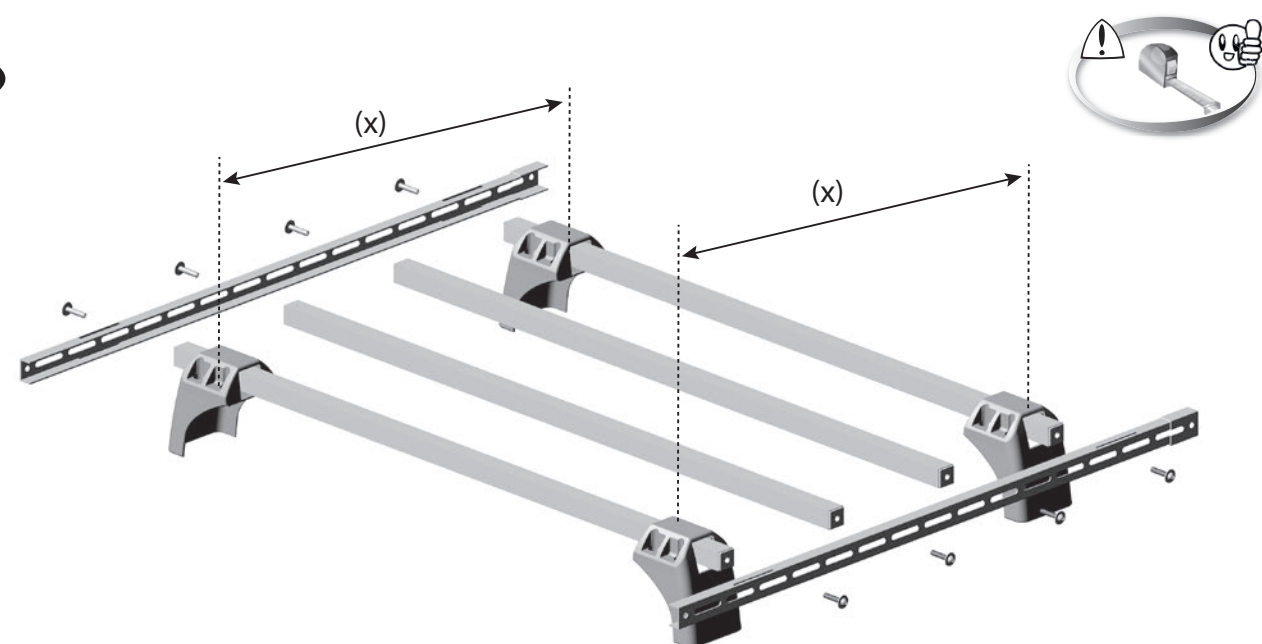


4

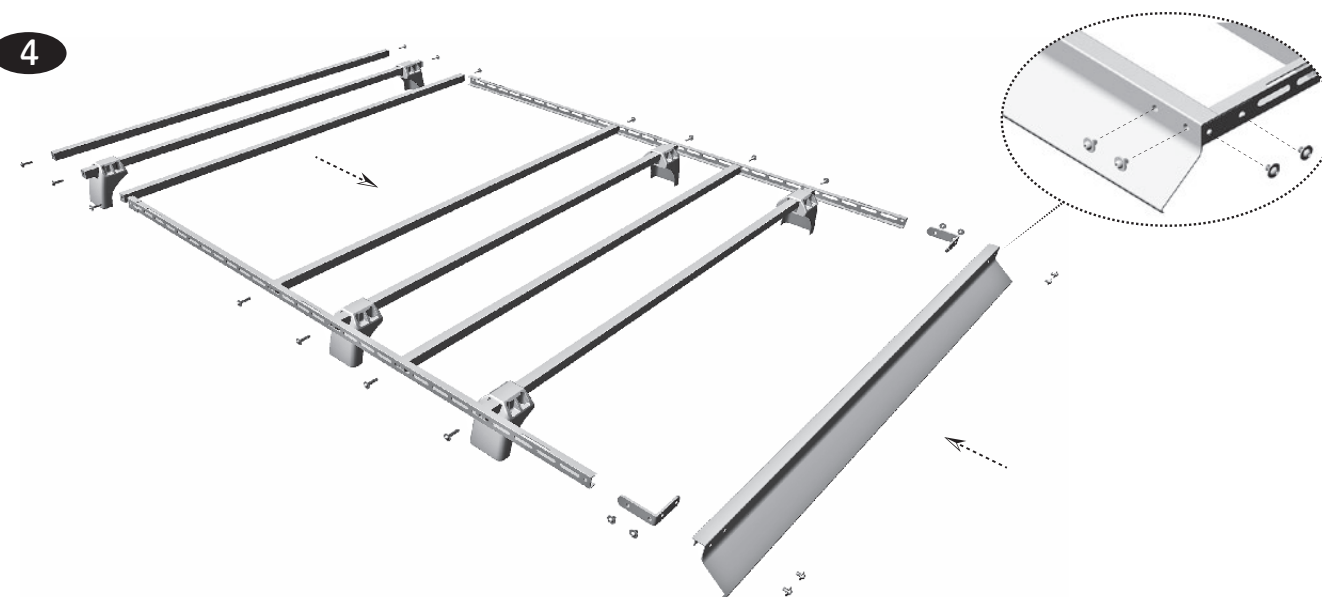


5

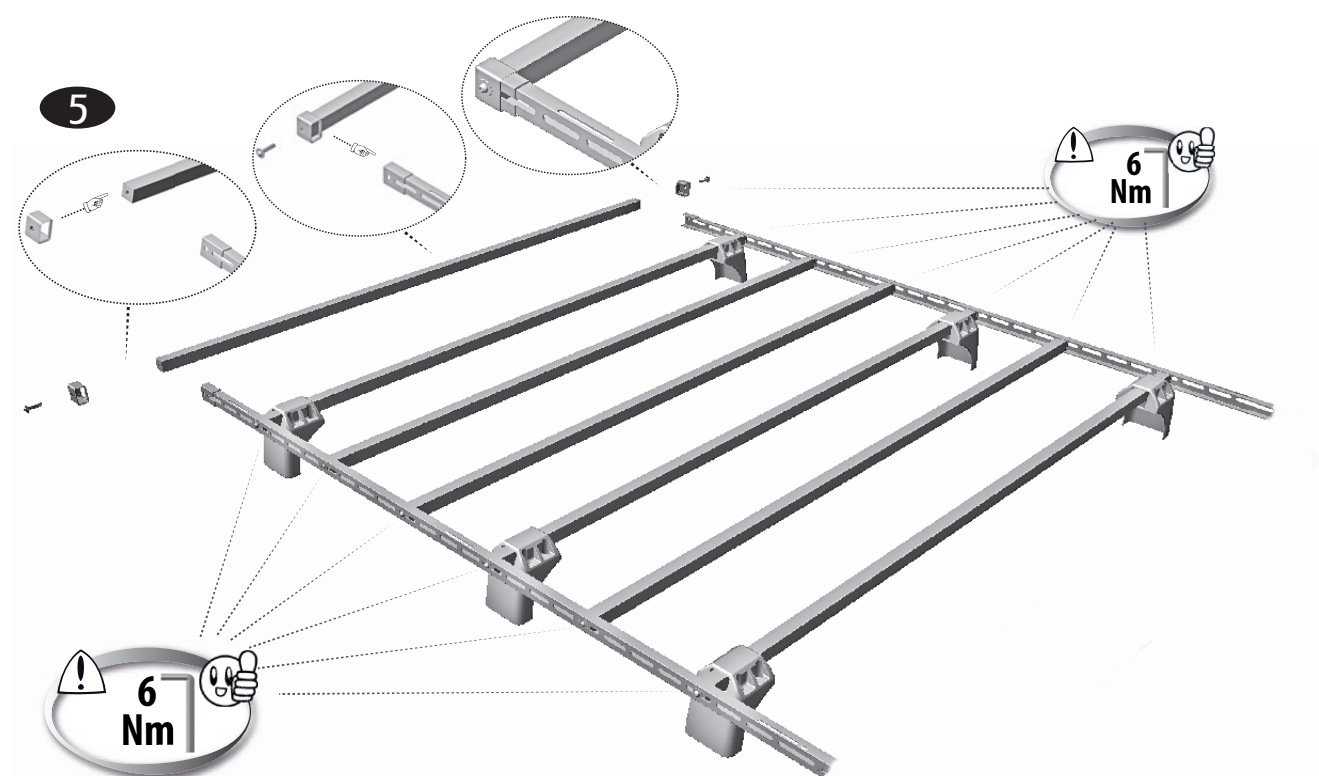

6

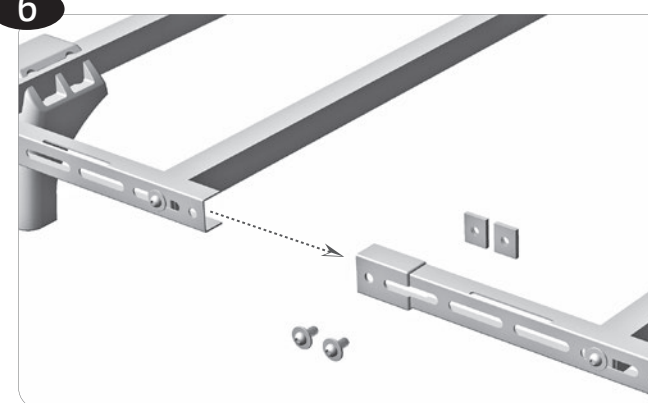


7

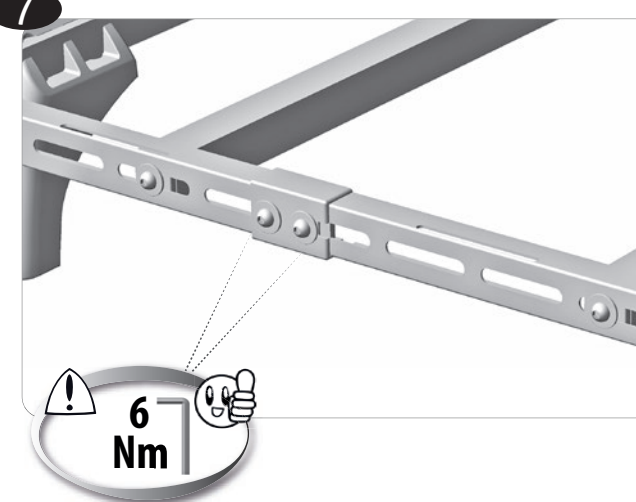




8


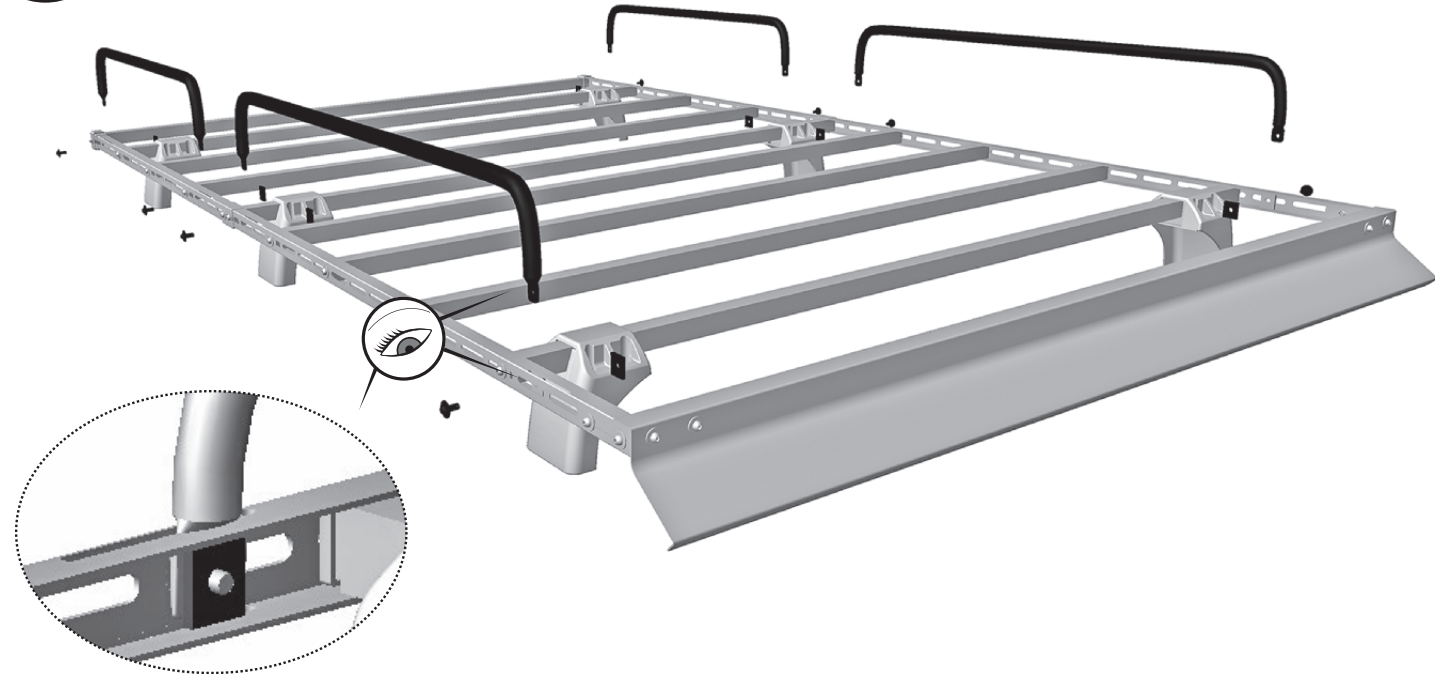


9

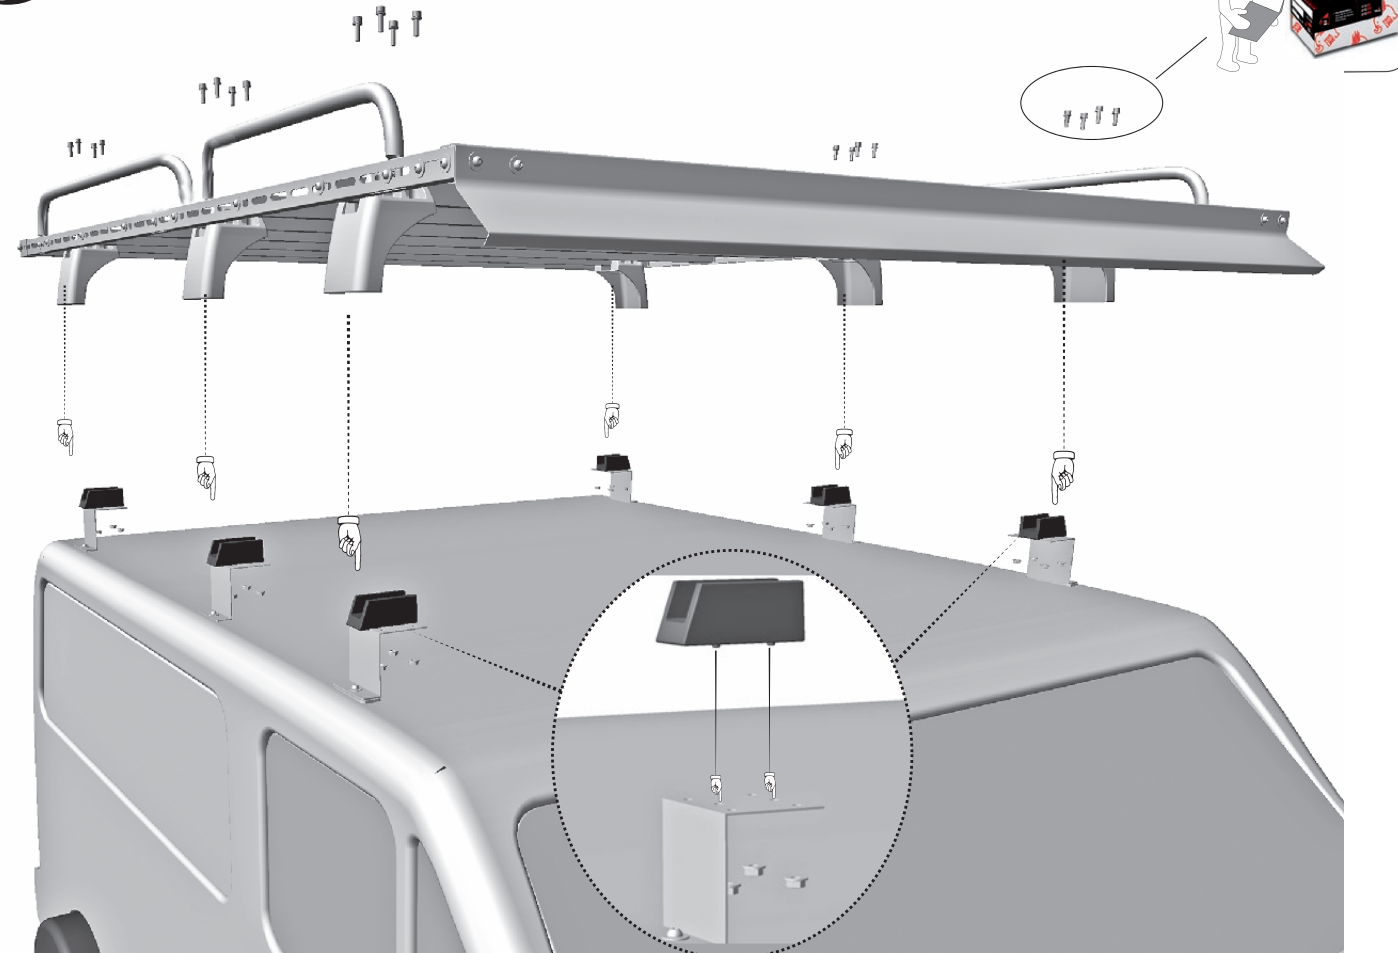


KIT CARGO-TECK


10







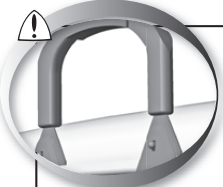
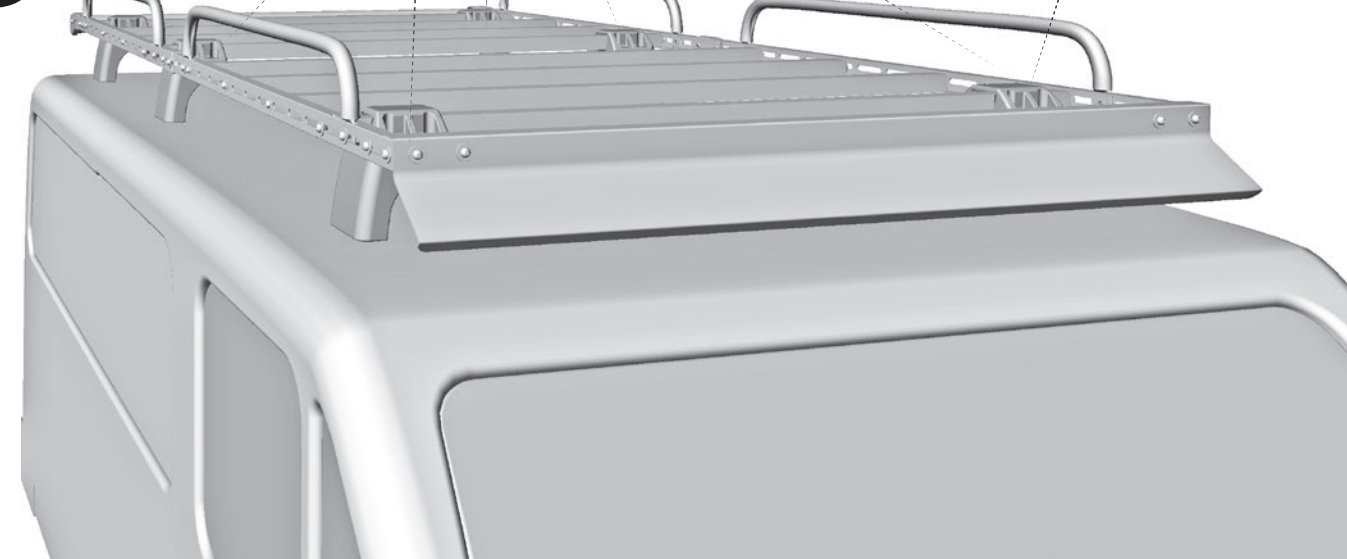



KIT CARGO-TECK FEET


10 bis


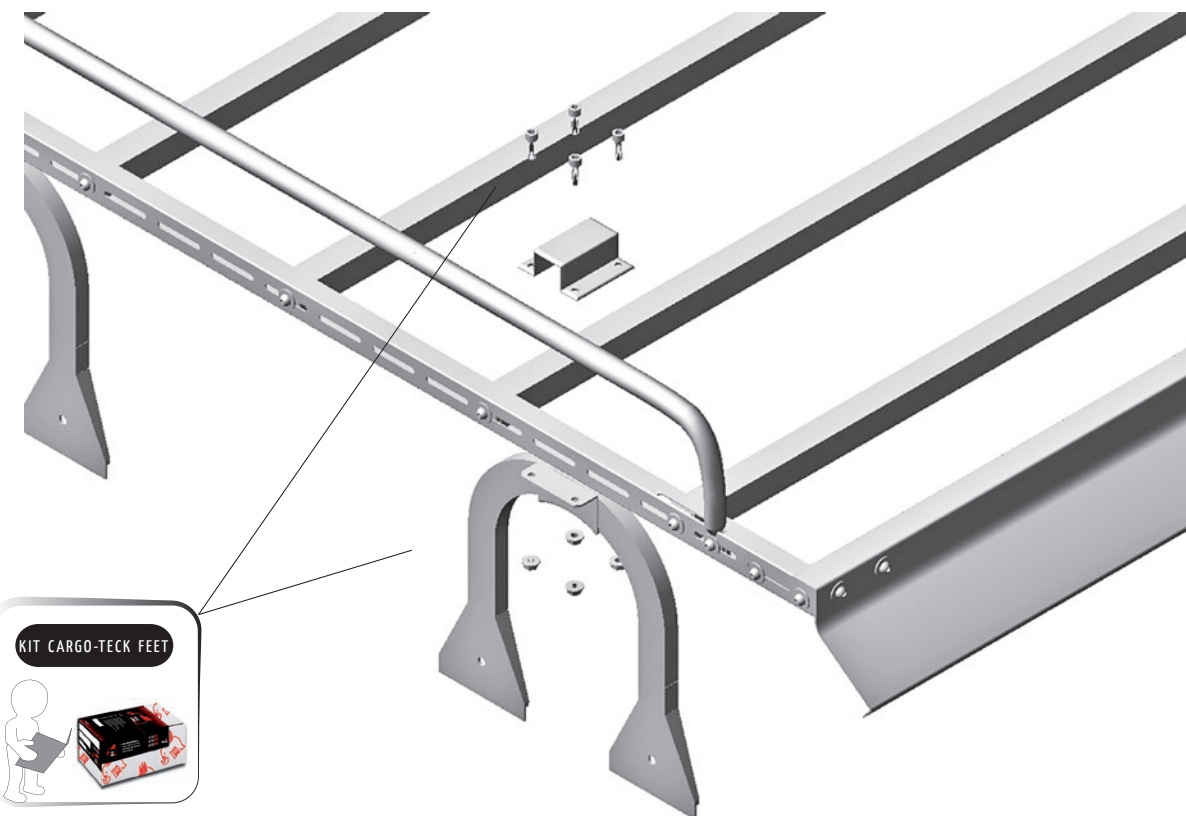


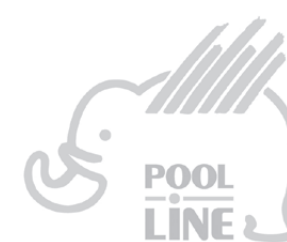

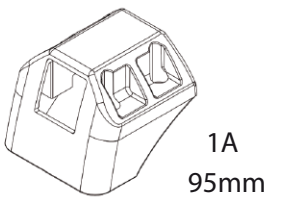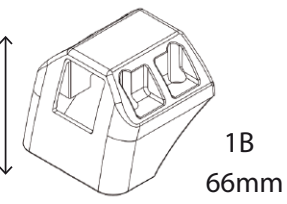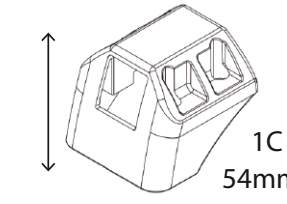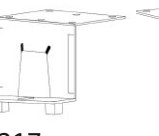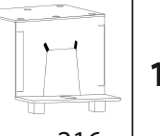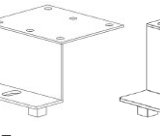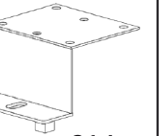
| N |                                                                                                                                                                                | Q   |                                                                                                                                                                                | Q   |                                                                                                                                                                                    | Q   |
|---|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|
| 1 |  1A<br>95mm                                                                                   | 2   |  1B<br>66mm                                                                                   | 2   |  1C<br>54mm                                                                                     | 4   |
| 2 |  219<br> 218 | 1+1 |  217<br> 216 | 1+1 |  215<br> 214 | 2+2 |
| 3 |                                                                                               |     |                                                                                                                                                                                |     |                                                                                                                                                                                    | 8   |
| 4 |                                                                                               |     |                                                                                                                                                                                |     |                                                                                                                                                                                    | 1   |

| N | BO0060 x2                                                                                         | Q  |
|---|---------------------------------------------------------------------------------------------------|----|
| 8 |  DIN912<br>M6x20 | 32 |
| 9 |  DIN125<br>Ø6  | 32 |

| N  | BO0006 x4                                                                                           | Q |
|----|-----------------------------------------------------------------------------------------------------|---|
| 10 |  DIN912<br>M6x16 | 8 |
| 11 |  DIN9021 Ø6    | 8 |

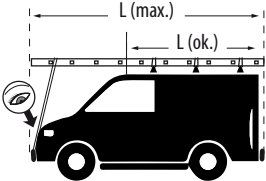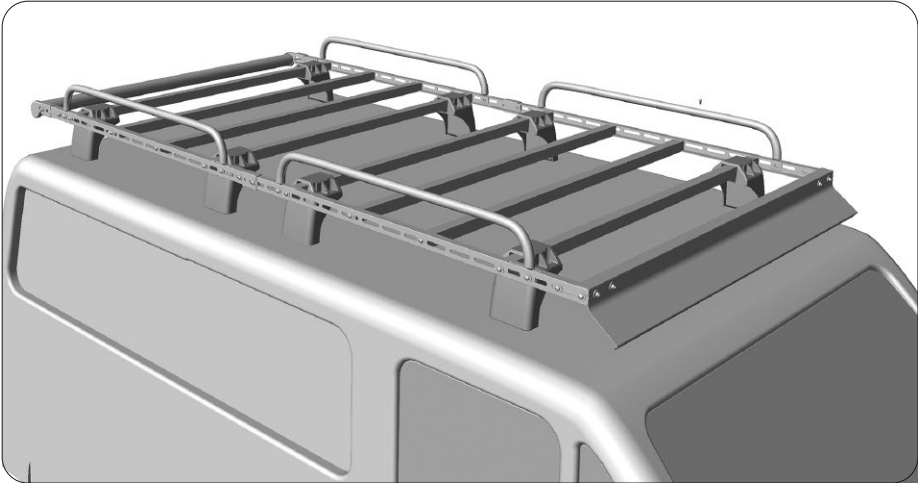


- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instrucctions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

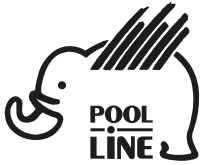


POOL-LINE ACCESORIOS, S.L.  
C. Esqueis, 19. P. I. Can Barri  
08415- Bigues i Riells. Barcelona (España)  
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042






121941

Rv: 08/2025

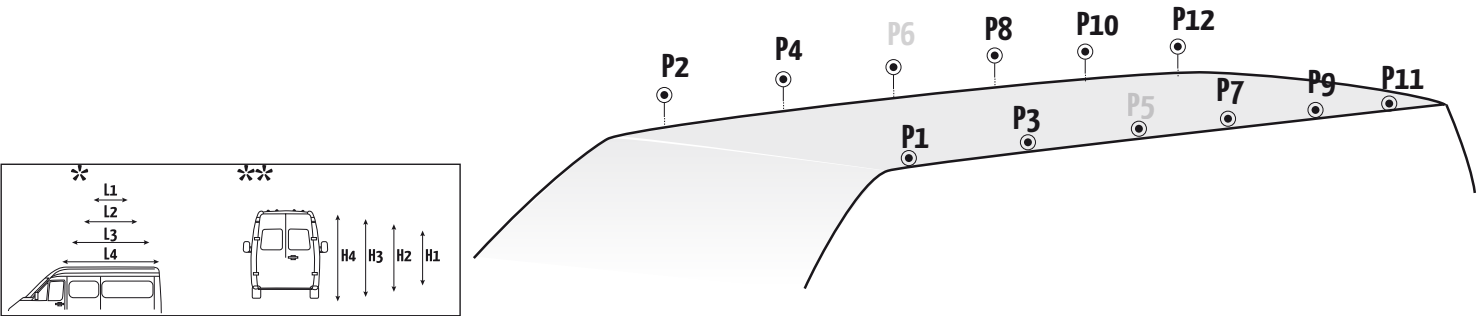

|                | L* | H** |       |        | P1     | P2     | P3     | P4     | P5 | P6 | P7     | P8     | P9     | P10    | P11    | P12    |
|----------------|----|-----|-------|--------|--------|--------|--------|--------|----|----|--------|--------|--------|--------|--------|--------|
| <b>CITROËN</b> |    |     |       |        |        |        |        |        |    |    |        |        |        |        |        |        |
| JUMPY II       | L1 | H1  | 07-15 | 800006 | 219+1A | 218+1A | 217+1B | 216+1B |    |    | 215+1C | 215+1C | 214+1C | 214+1C |        |        |
| JUMPY II       | L2 | H1  | 07-15 | 800006 | 219+1A | 218+1A | 217+1B | 216+1B |    |    | 214+1C | 214+1C |        |        | 215+1C | 215+1C |
| <b>FIAT</b>    |    |     |       |        |        |        |        |        |    |    |        |        |        |        |        |        |
| SCUDO II       | L1 | H1  | 07-15 | 800006 | 219+1A | 218+1A | 217+1B | 216+1B |    |    | 215+1C | 215+1C | 214+1C | 214+1C |        |        |
| SCUDO II       | L2 | H1  | 07-15 | 800006 | 219+1A | 218+1A | 217+1B | 216+1B |    |    | 214+1C | 214+1C |        |        | 215+1C | 215+1C |
| <b>PEUGEOT</b> |    |     |       |        |        |        |        |        |    |    |        |        |        |        |        |        |
| EXPERT II      | L1 | H1  | 07-15 | 800006 | 219+1A | 218+1A | 217+1B | 216+1B |    |    | 215+1C | 215+1C | 214+1C | 214+1C |        |        |
| EXPERT II      | L2 | H1  | 07-15 | 800006 | 219+1A | 218+1A | 217+1B | 216+1B |    |    | 214+1C | 214+1C |        |        | 215+1C | 215+1C |
| <b>TOYOTA</b>  |    |     |       |        |        |        |        |        |    |    |        |        |        |        |        |        |
| PROACE I       | L1 | H1  | 13-15 | 800006 | 219+1A | 218+1A | 217+1B | 216+1B |    |    | 215+1C | 215+1C | 214+1C | 214+1C |        |        |
| PROACE I       | L2 | H1  | 13-15 | 800006 | 219+1A | 218+1A | 217+1B | 216+1B |    |    | 214+1C | 214+1C |        |        | 215+1C | 215+1C |

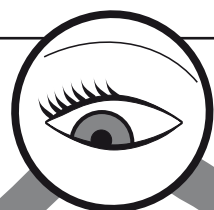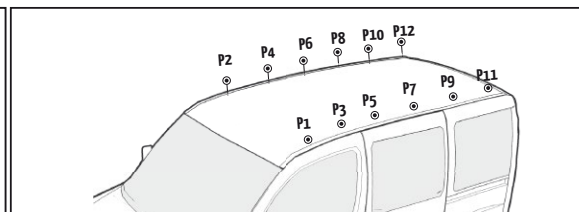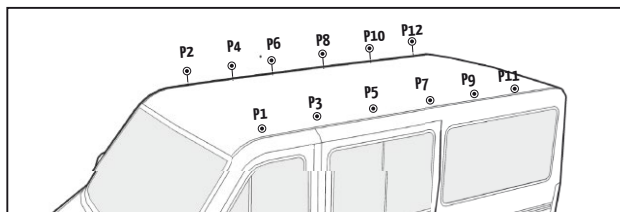

| P1  | P2  | P3 | P4 | P5  | P6  | P7 | P8 | P9 | P10 | P11 | P12 |
|-----|-----|----|----|-----|-----|----|----|----|-----|-----|-----|
| xxx | xxx |    |    | xxx | xxx |    |    |    |     | xxx | xxx |
| xxx | xxx |    |    | xxx | xxx |    |    |    |     | xxx | xxx |
| xxx | xxx |    |    | xxx | xxx |    |    |    |     | xxx | xxx |
| xxx | xxx |    |    | xxx | xxx |    |    |    |     | xxx | xxx |
| xxx | xxx |    |    | xxx | xxx |    |    |    |     | xxx | xxx |
| xxx | xxx |    |    | xxx | xxx |    |    |    |     | xxx | xxx |
| xxx | xxx |    |    | xxx | xxx |    |    |    |     | xxx | xxx |
| xxx | xxx |    |    | xxx | xxx |    |    |    |     | xxx | xxx |
| xxx | xxx |    |    | xxx | xxx |    |    |    |     | xxx | xxx |

Pag. 1

2

1

