


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

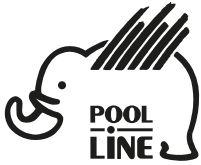

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net




200 KG.
MAX.

Nº HOMOLOGACIÓN: E9 26R-03.1042




123414

Rv: 10/2024

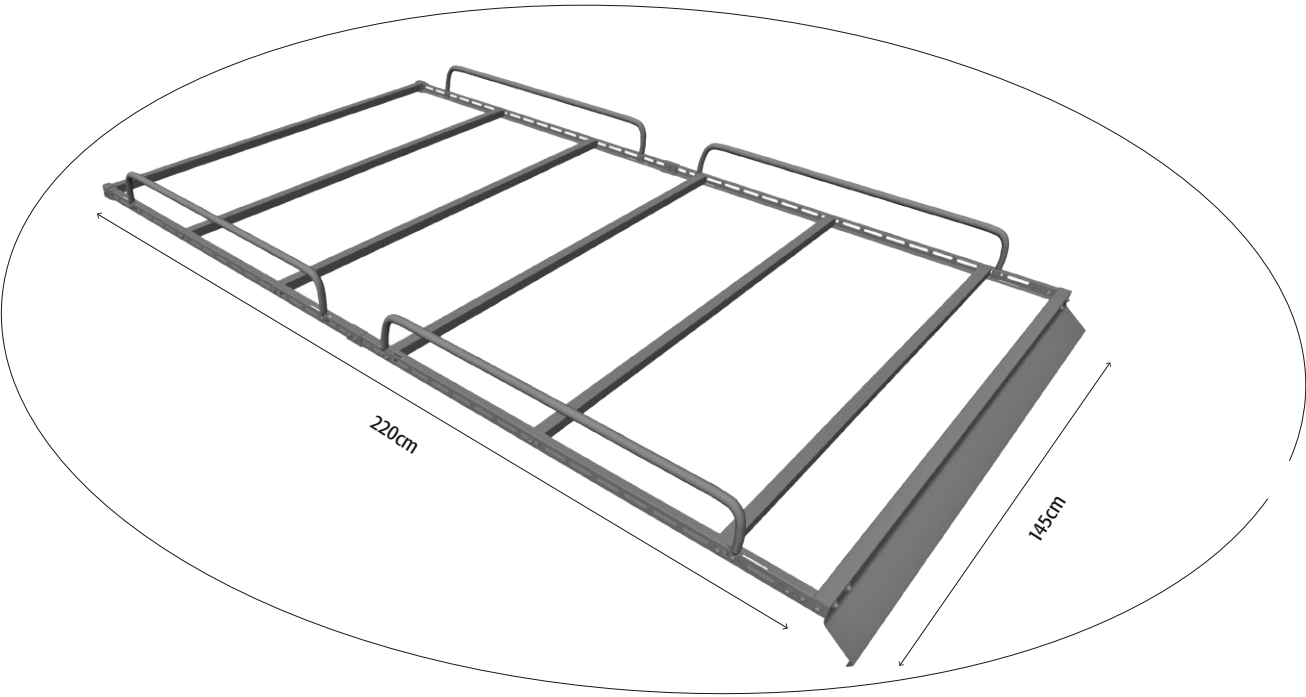


Limpieza pre-instalación
Pre-installation cleaning

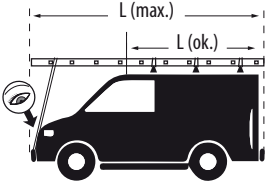


Revisar par de apriete
Check torque

N		Q
20	 S-1450	1
21		2
22	 L-1120	4
23	 B-842	4
24	 T-1435	6
25		12
26		2
27		8
28	 CHA-M8	12
29	 ISO 7380 M8x30	10
30	 ISO 7380 M8x16	20
31	 DIN 125 Ø 8	32
32	 ISO 7380 M8x 40	2


N		Q
32		1

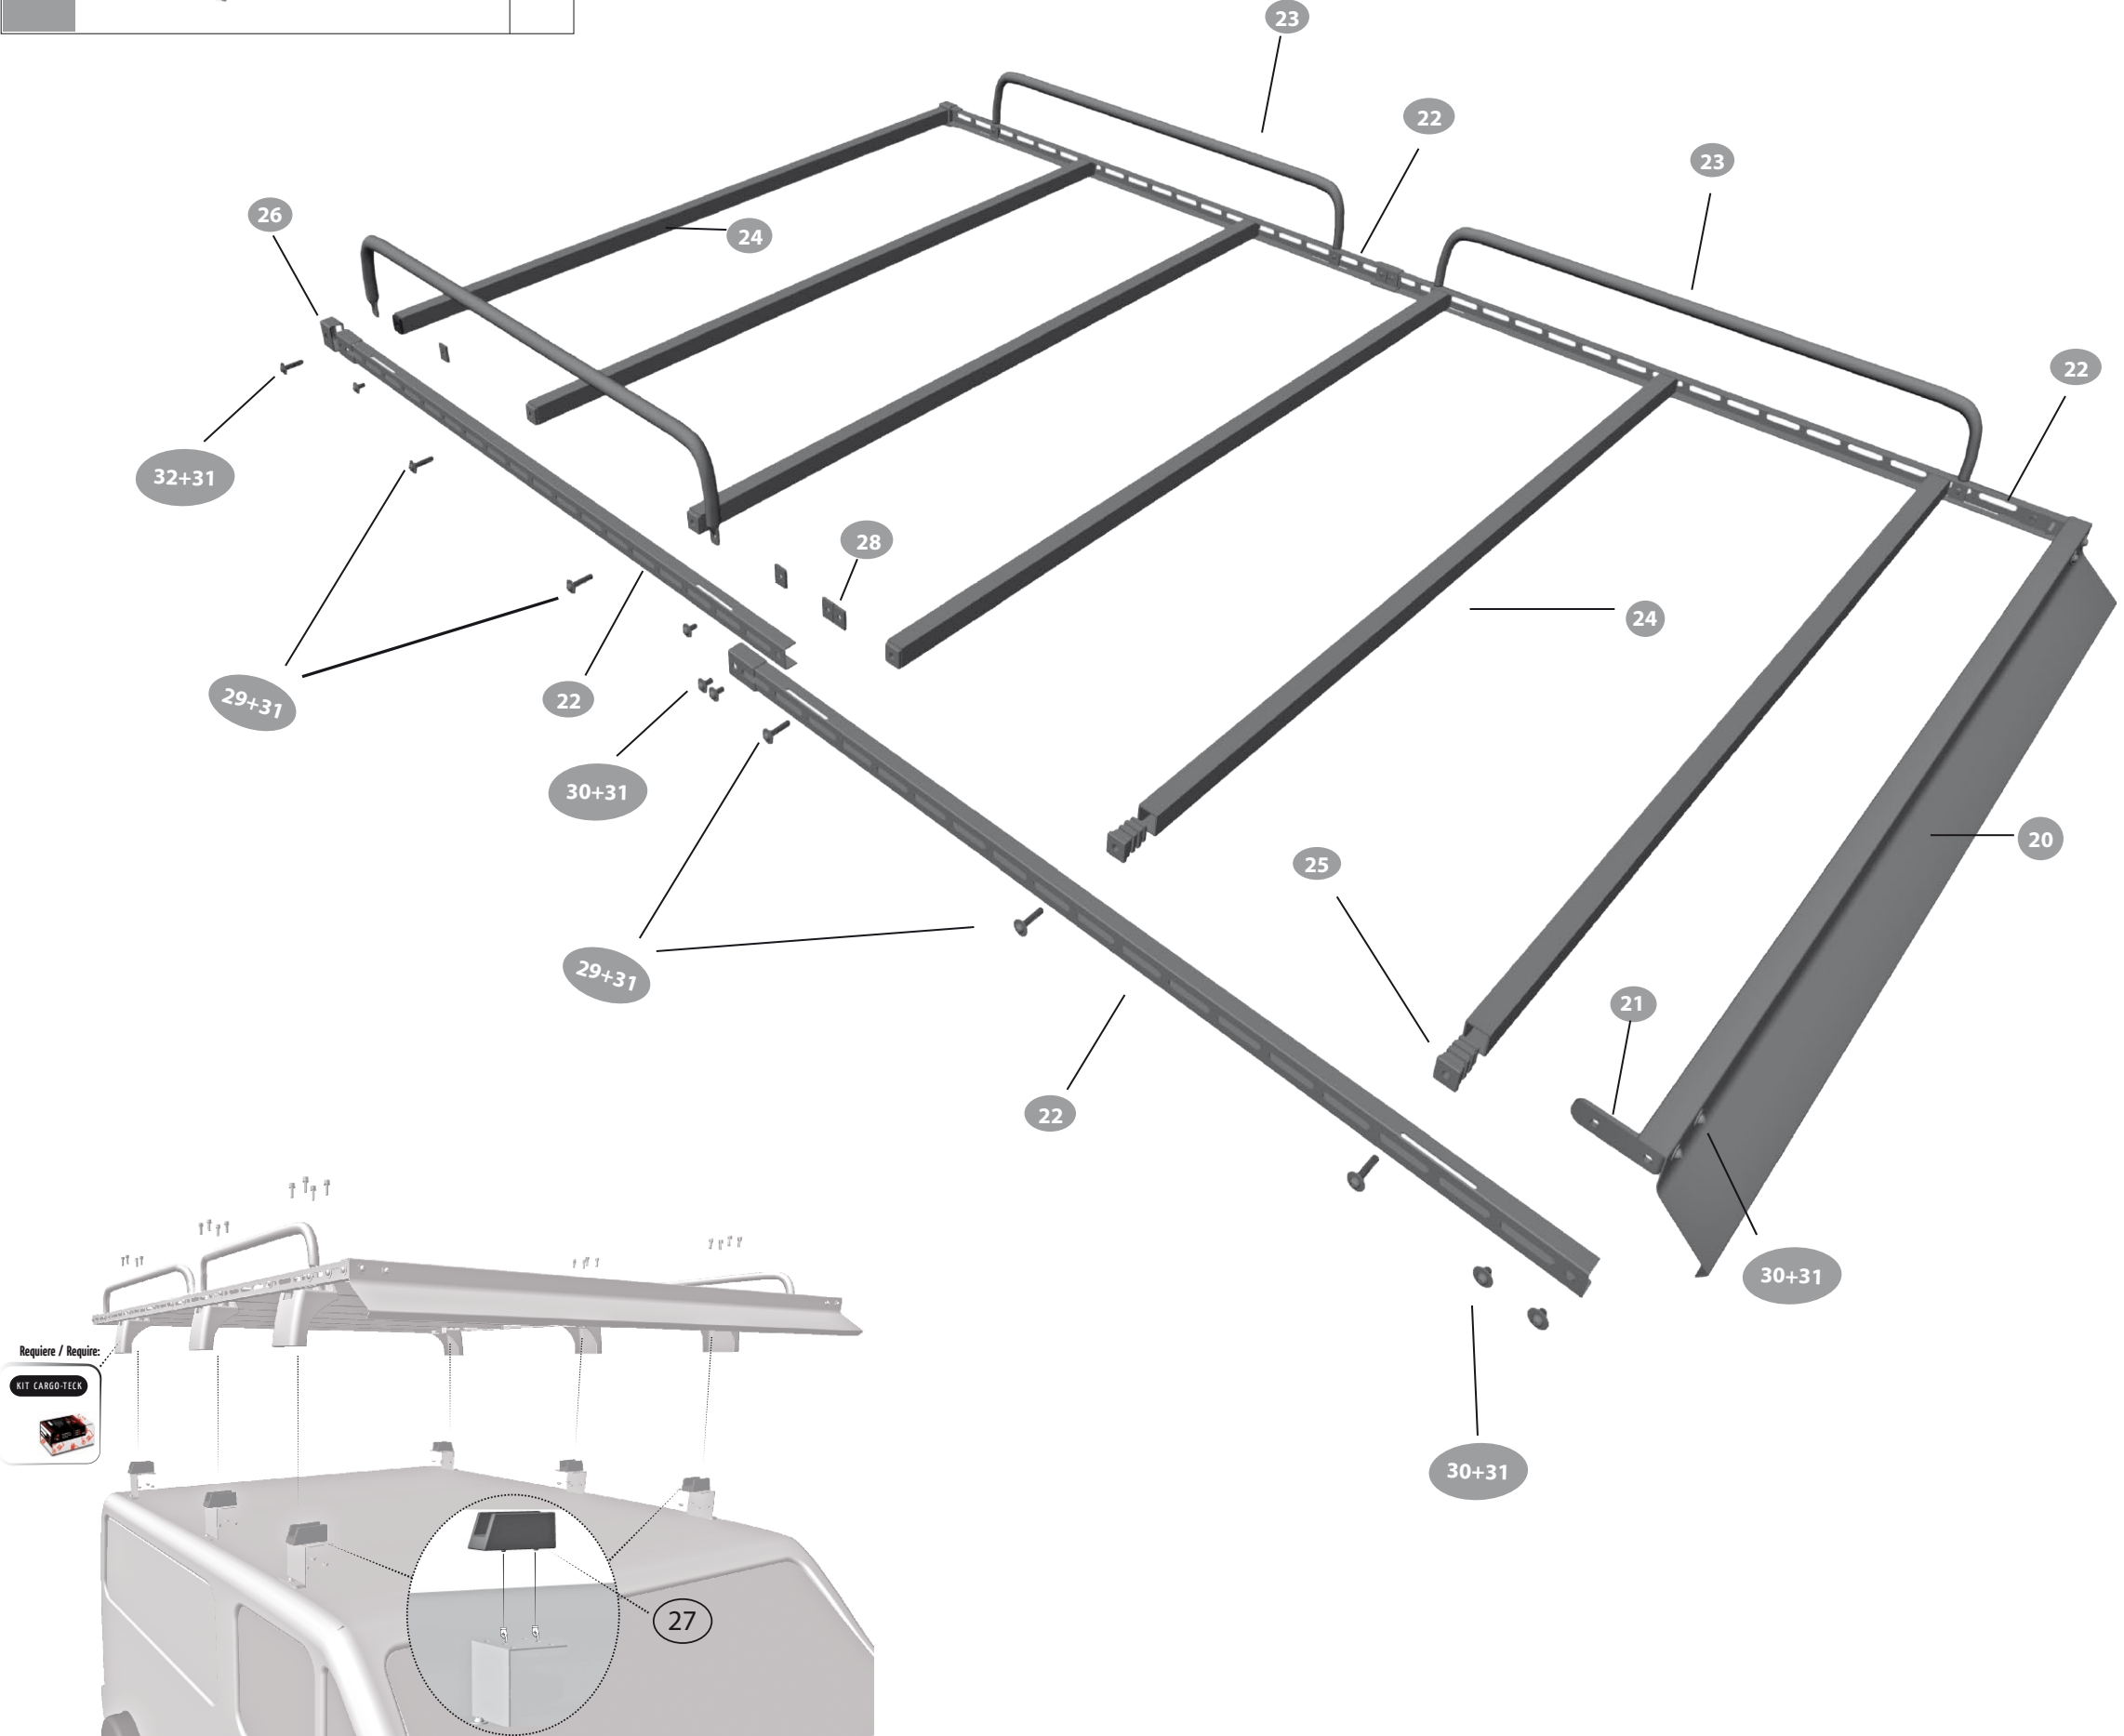




Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone


- CITROËN JUMPY III L2 -H1 (2016->)
- FIAT SCUDO III L2 -H1 (2022->)
- OPEL VIVARO C L2 -H1 (2019->)
- PEUGEOT EXPERT III L2 -H1 (2016->)
- TOYOTA PROACE II L2 -H1 (2016->)

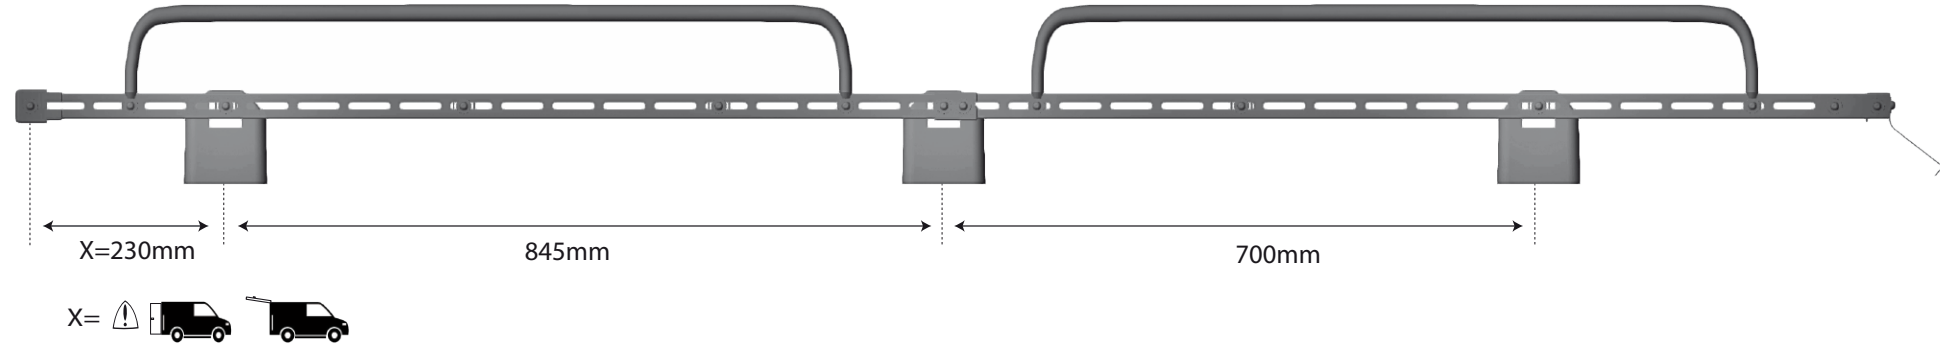


- NISSAN PATROL (TECHO BAJO) L2 -H1 (2016->)
- NISSAN PATROL GR (Y60) L2 -H1 (88-96)
- NISSAN PATROL GR (Y61) L2 -H1 (97-10)
- TOYOTA LAND CRUISER (J80) L2 -H1 (90-96)
- TOYOTA LAND CRUISER (J90) L2 -H1 (96-02)

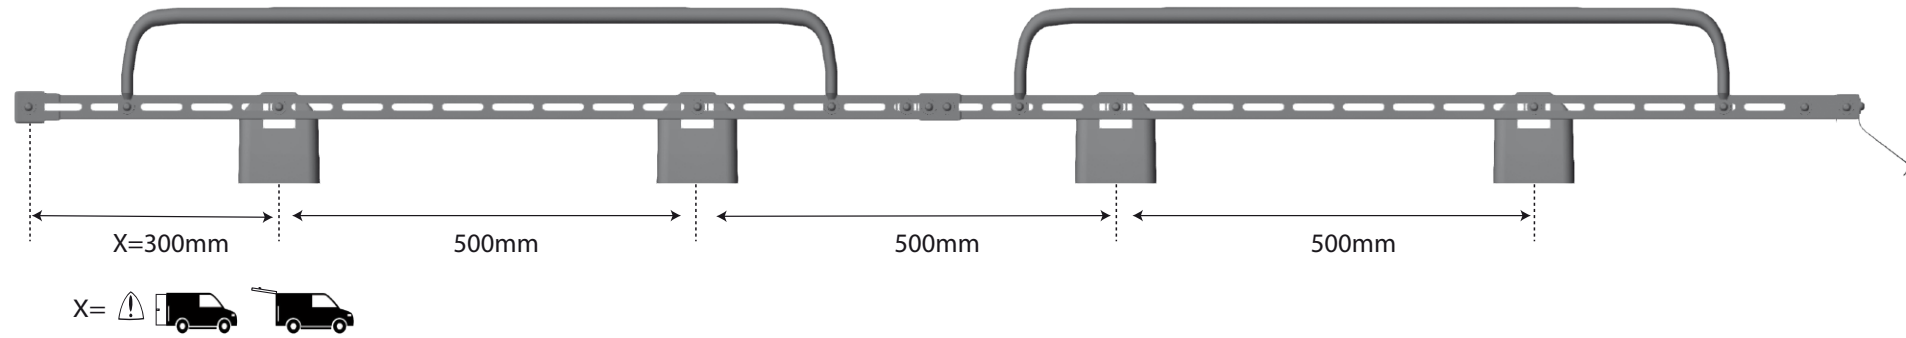


- GALLOPER EXCEED L2 -H1 (91-03)
- MITSUBISHI MONTERO L2 -H1 (82-90)
- MERCEDES G L2 -H1 (2007->)
- ISUZU TROOPER L2 -H1 (81-92)

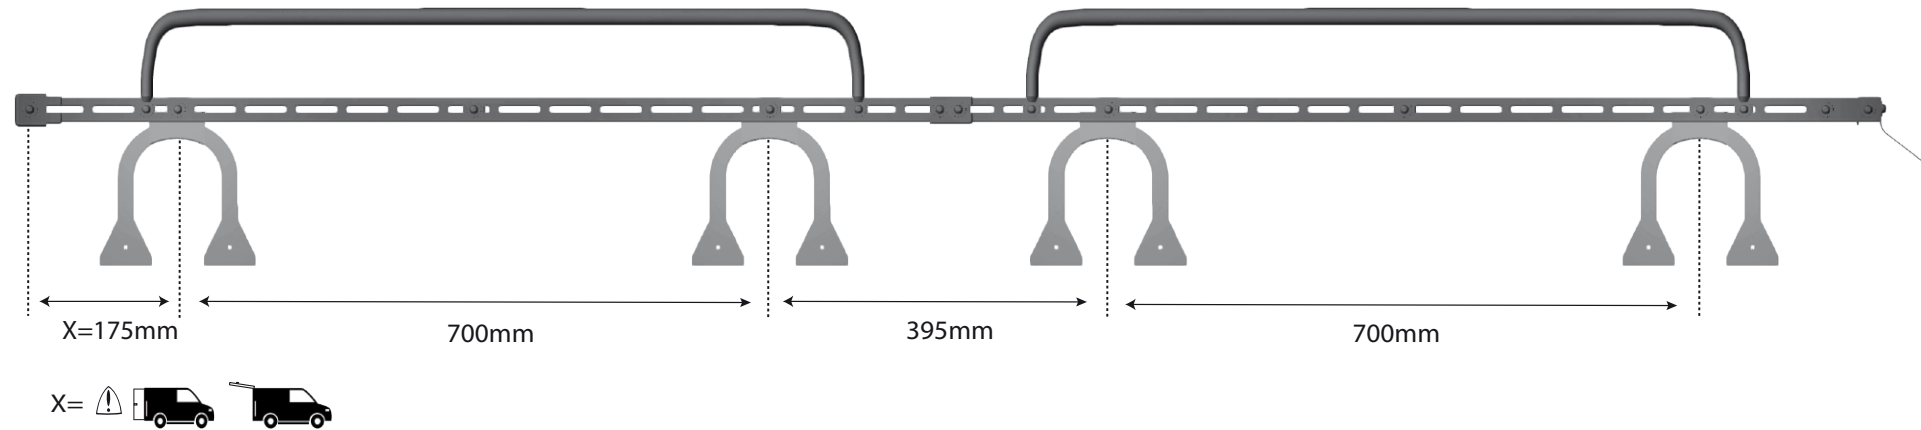


1

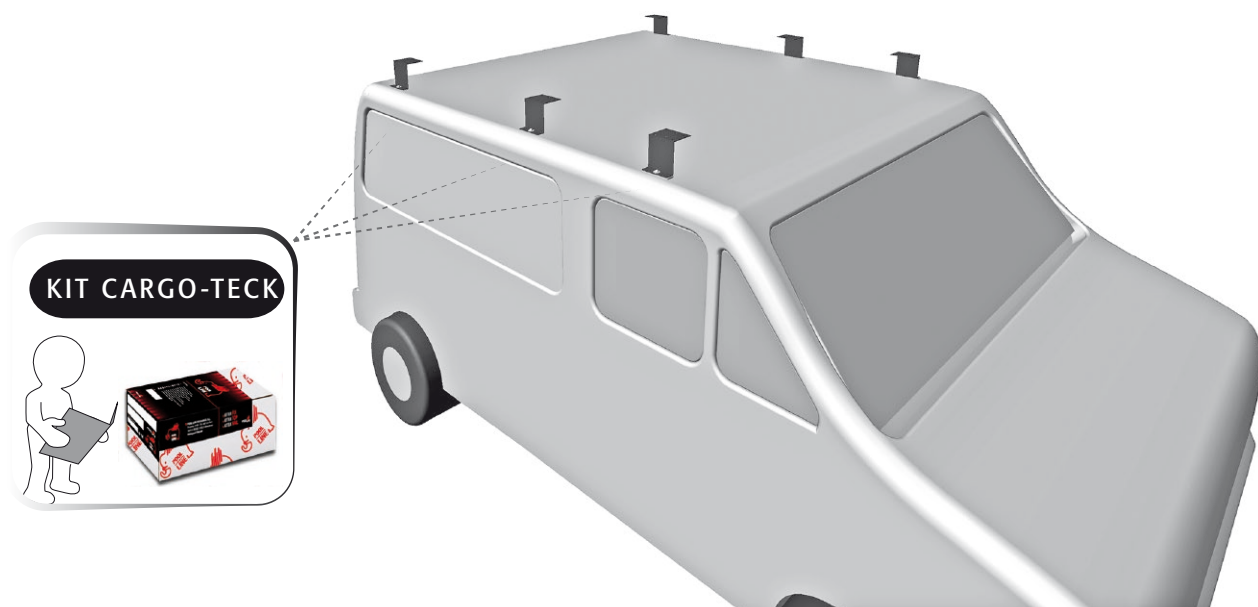


2


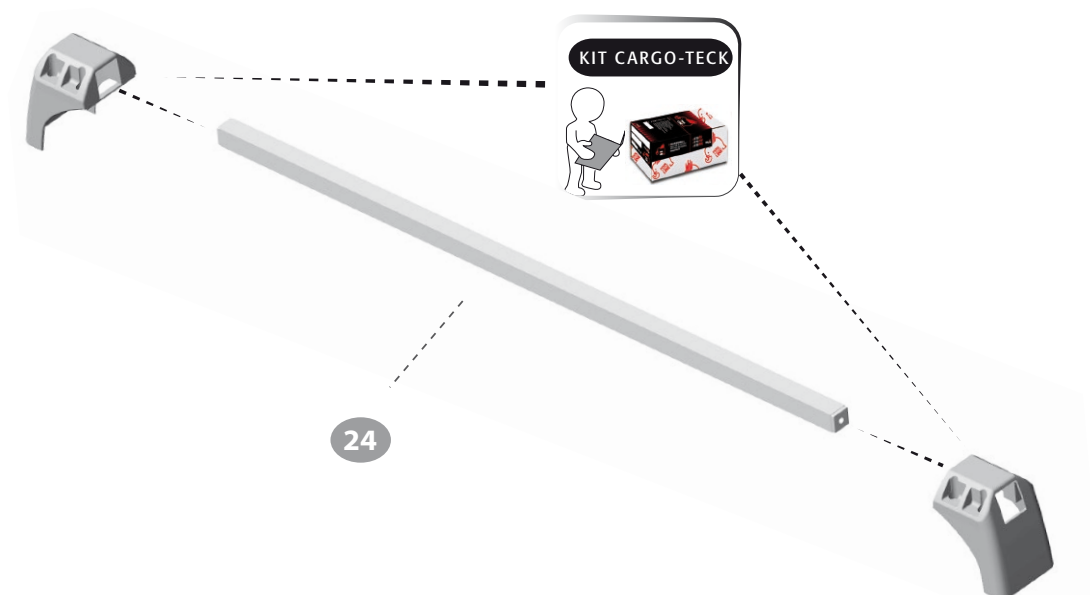


3

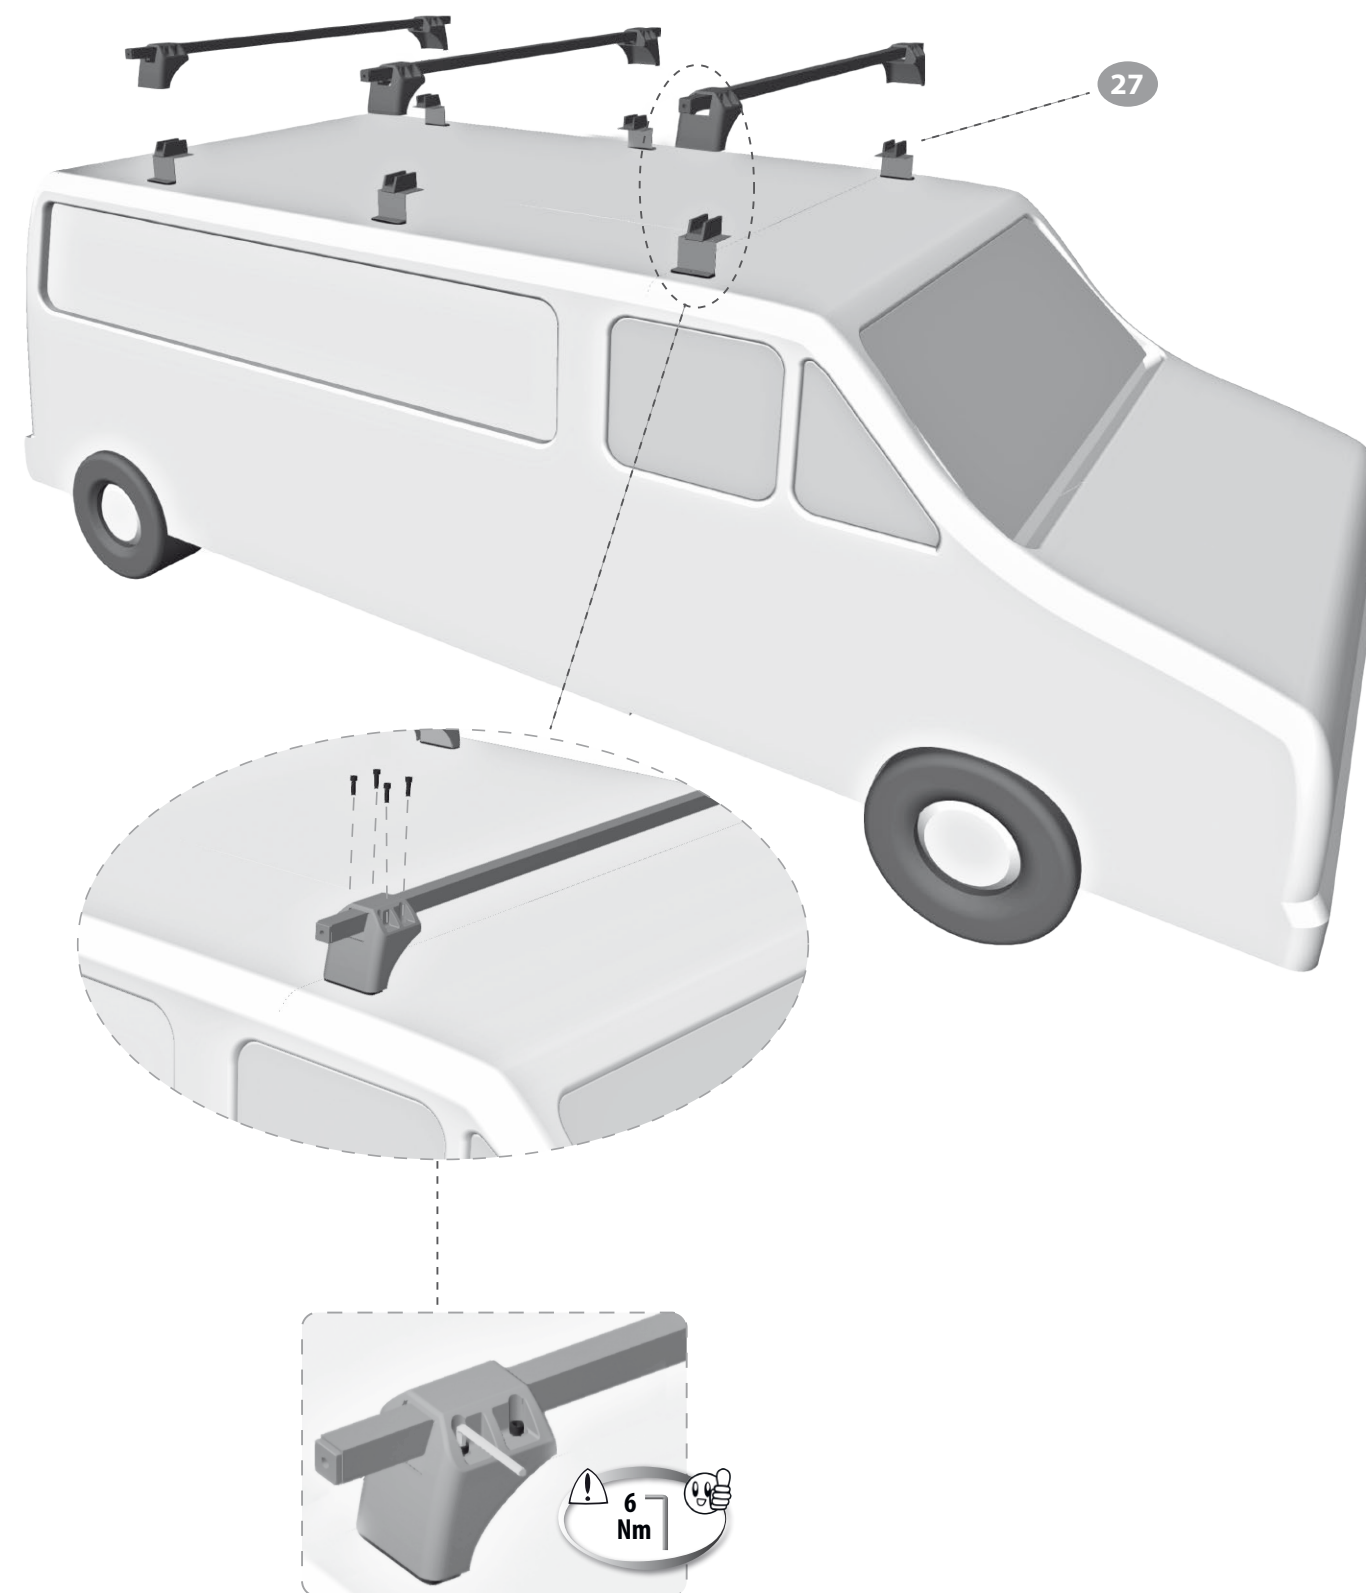


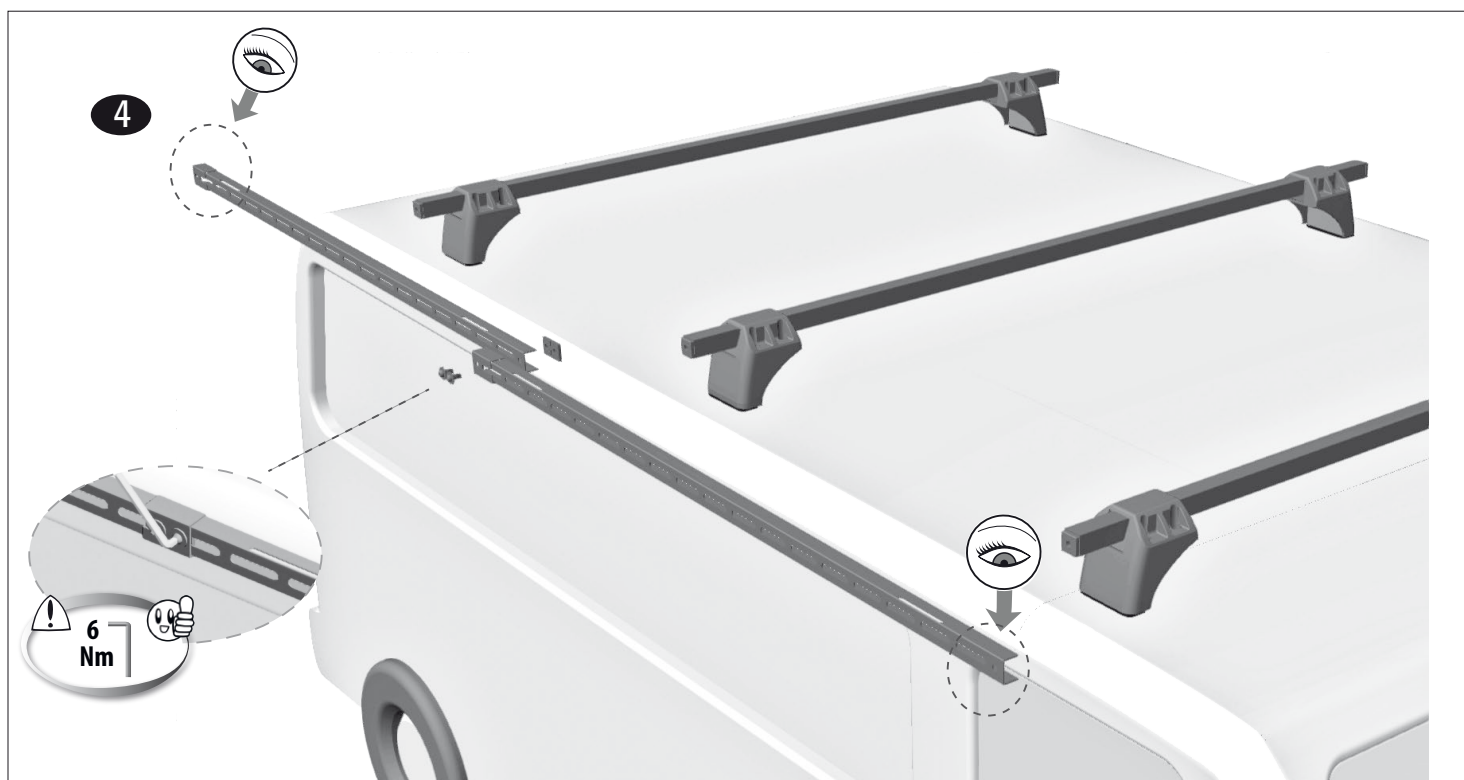


5

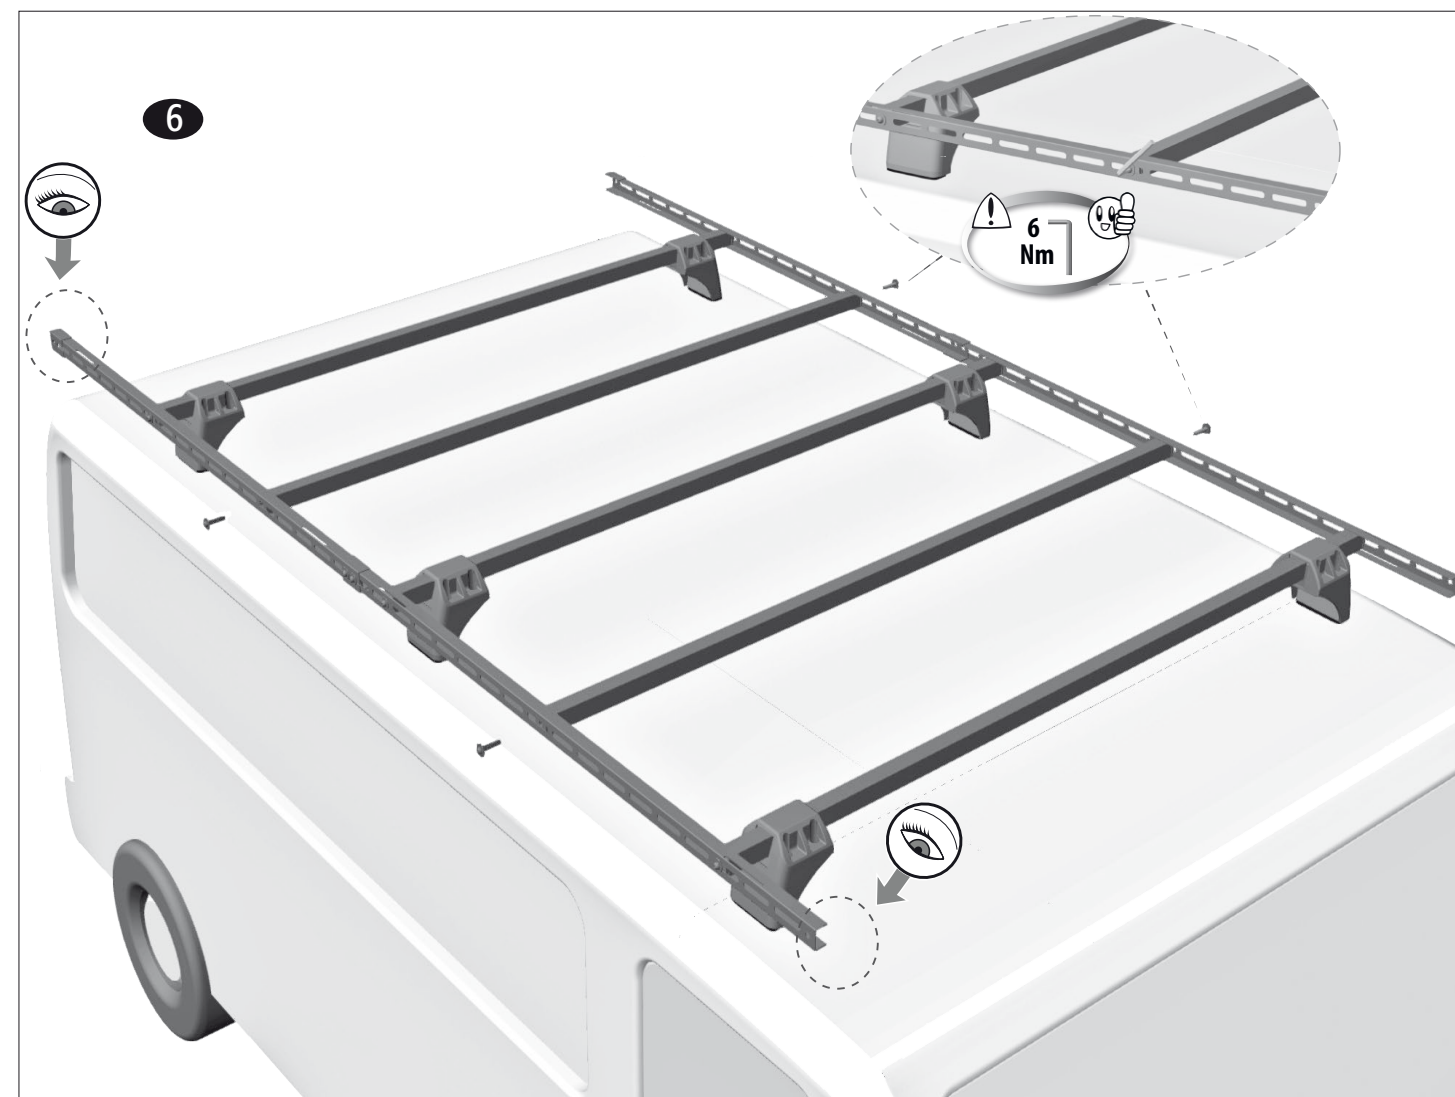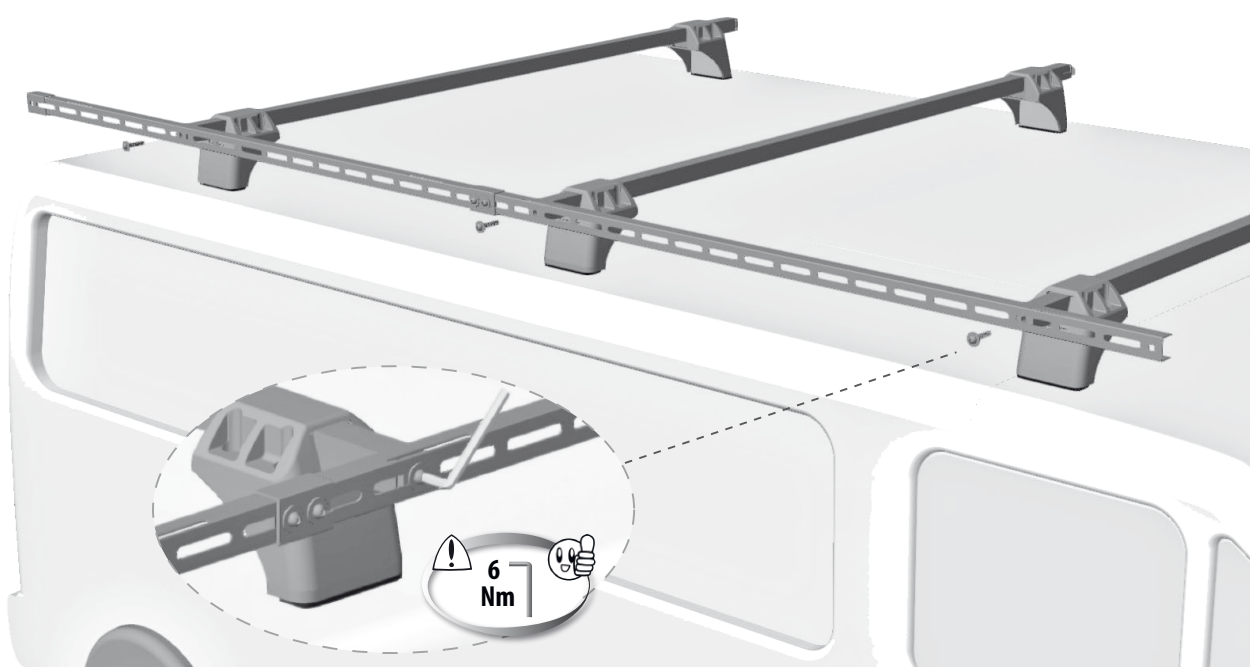



7



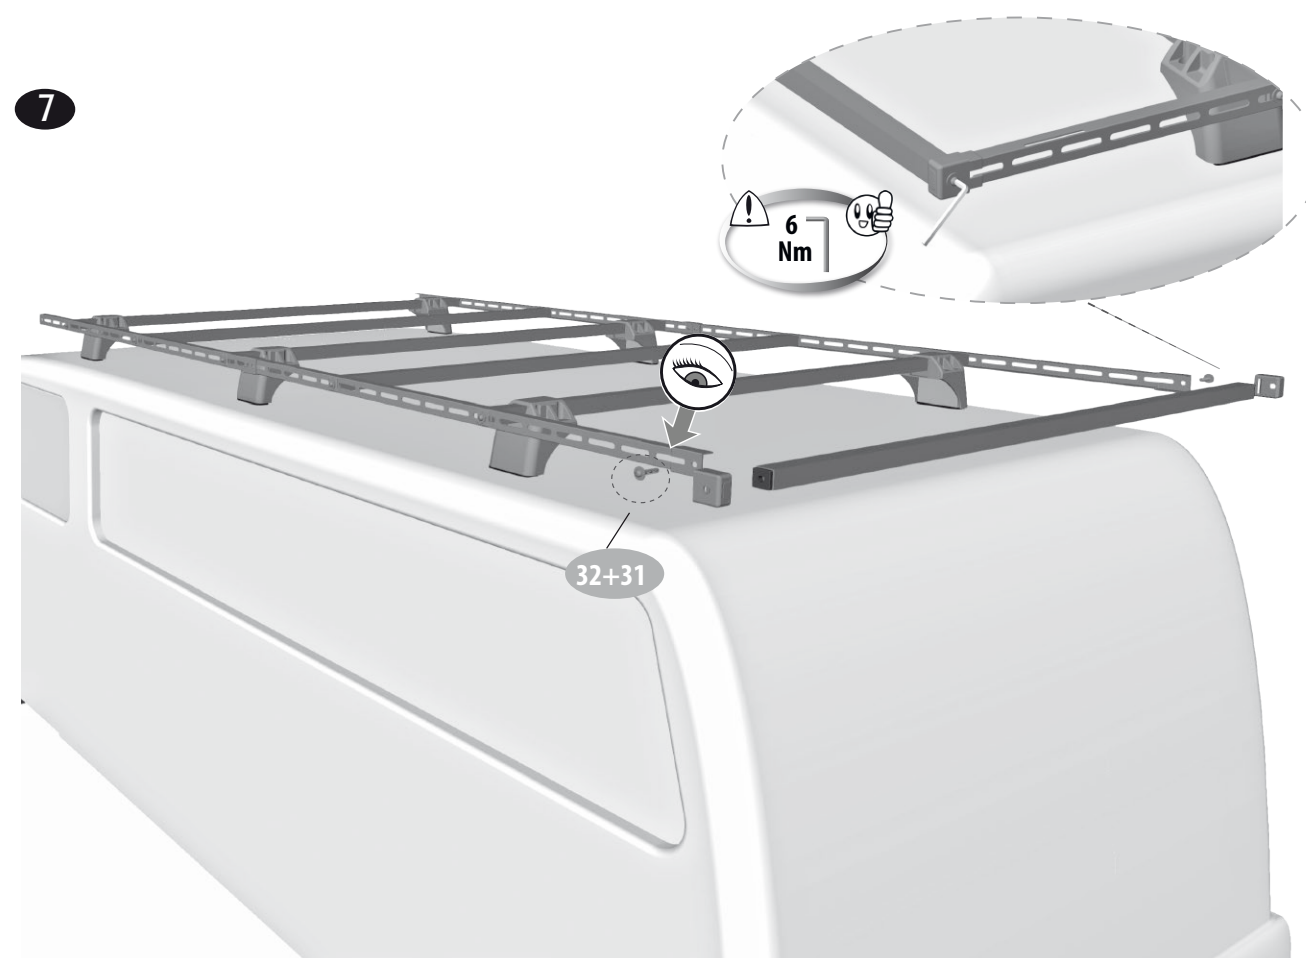


8

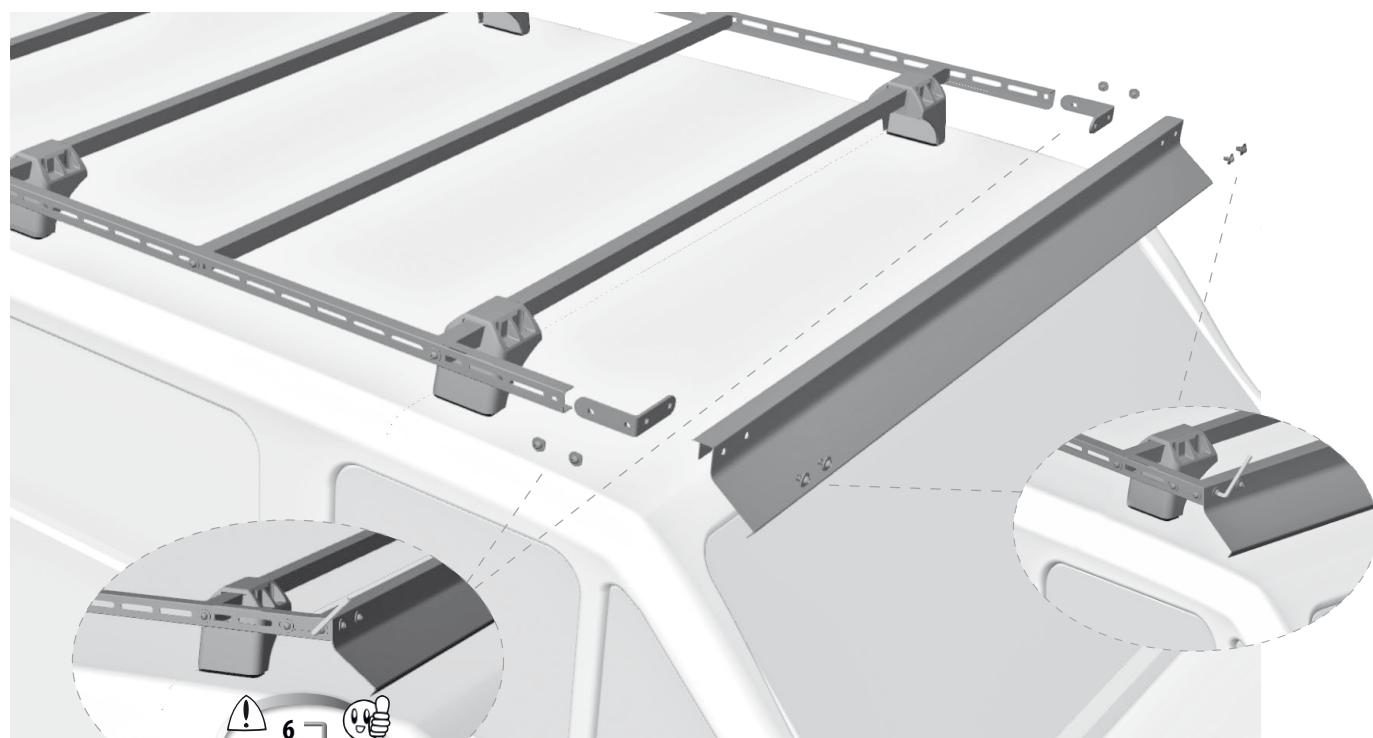


9

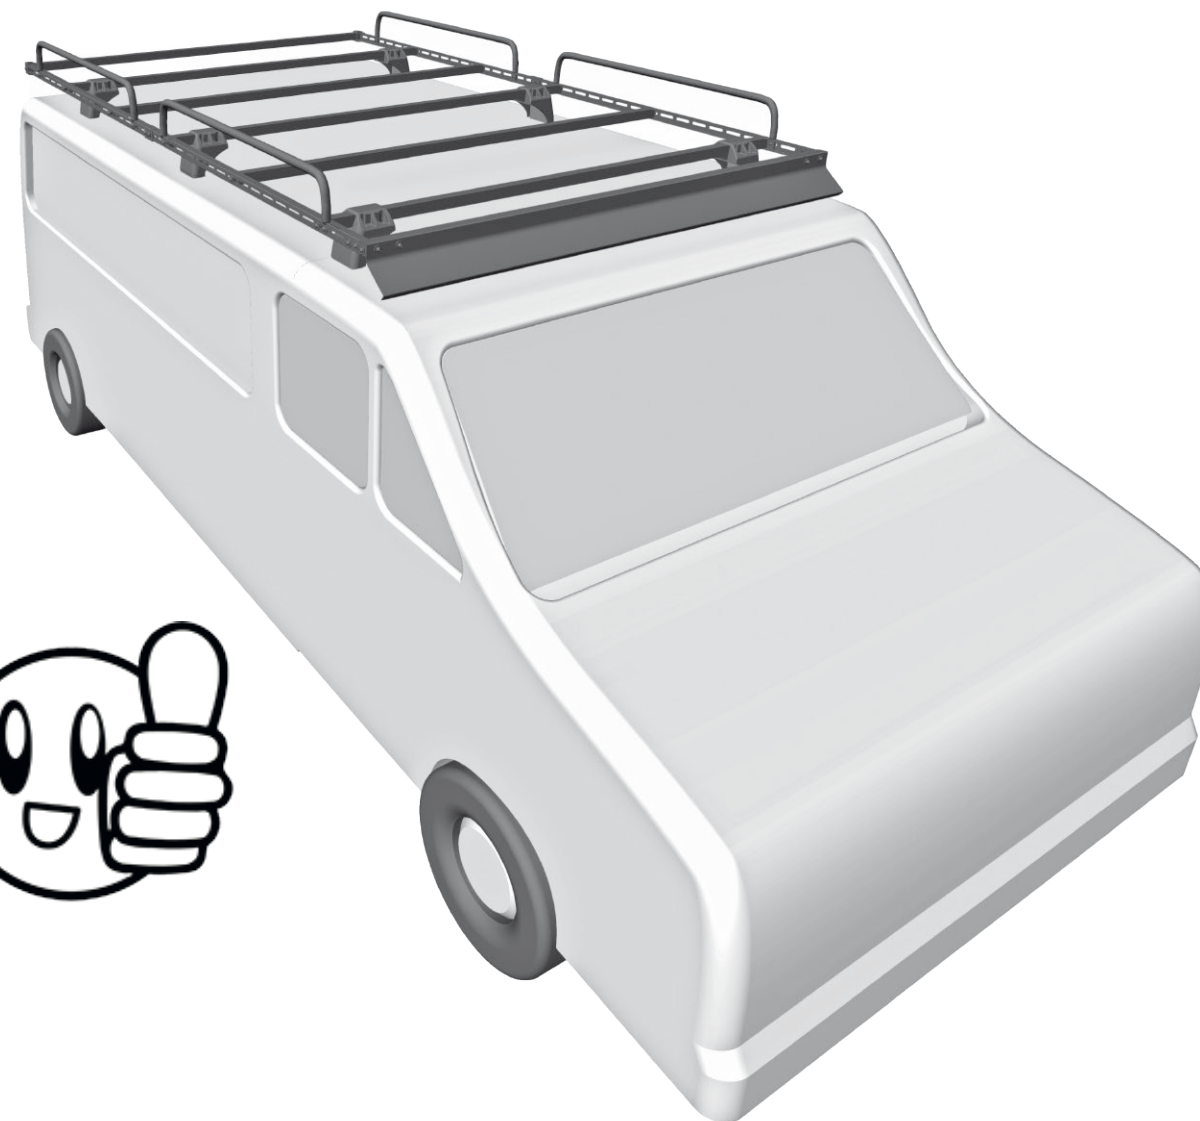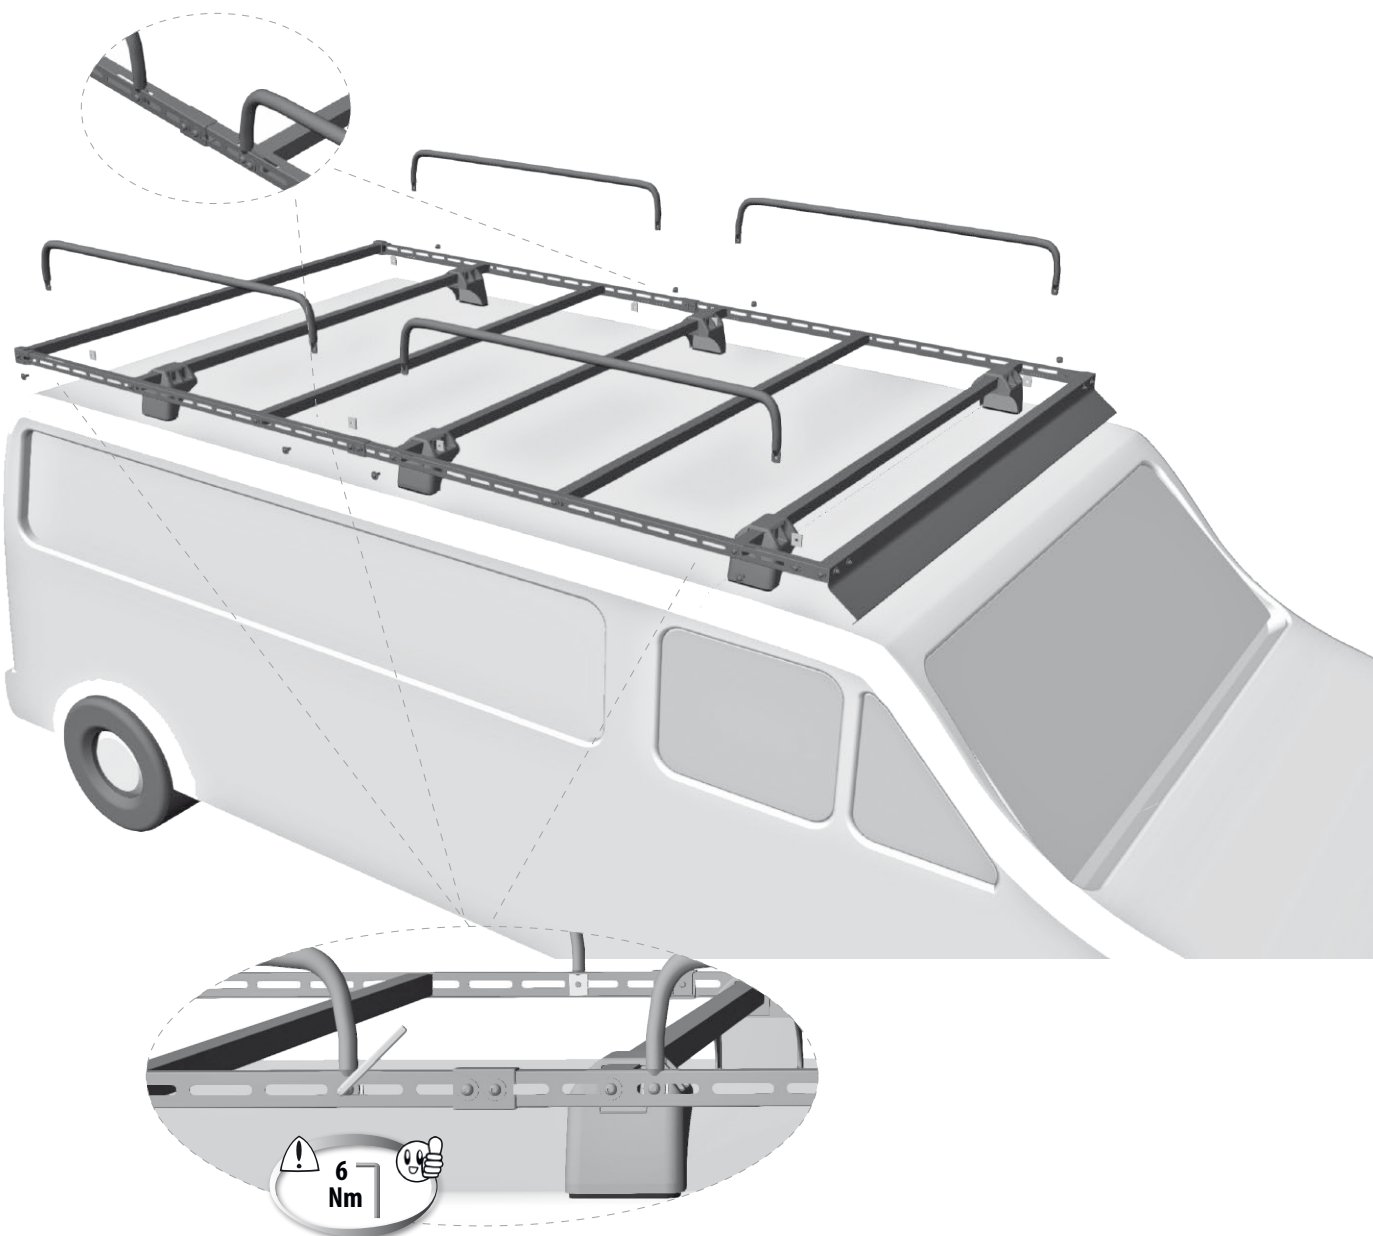

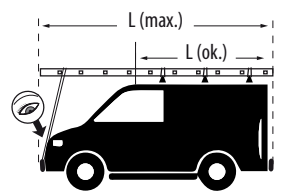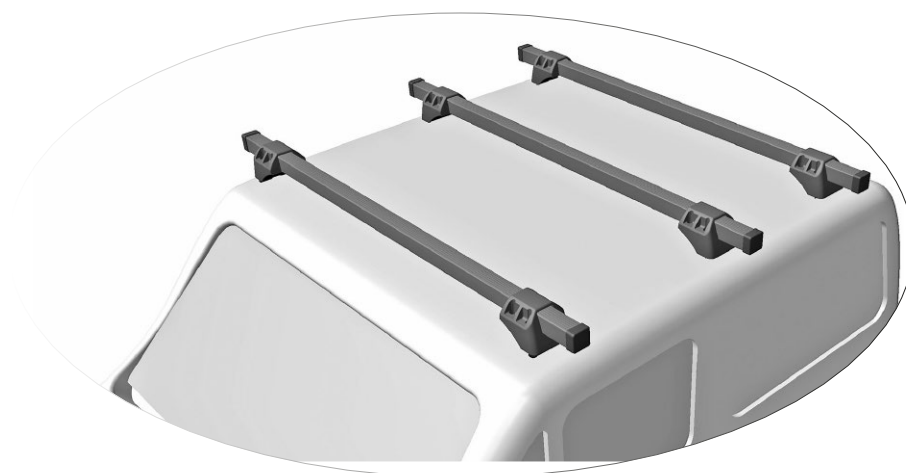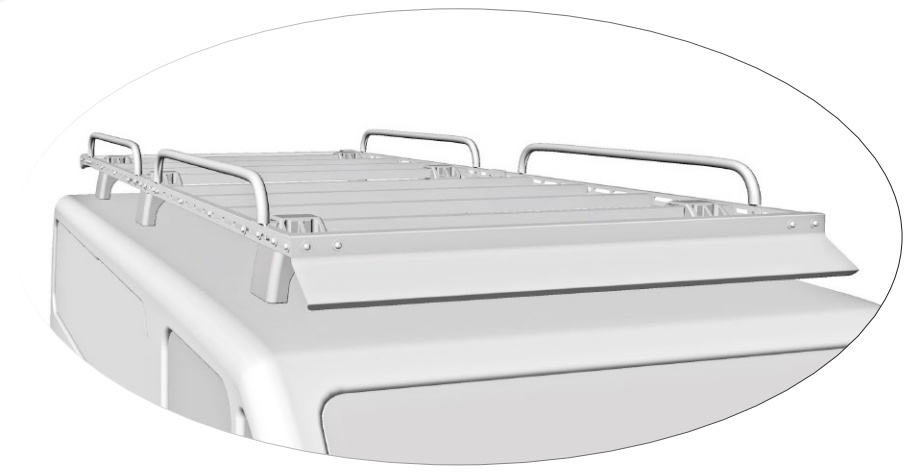

E	Instrucciones de montaje	Kit de fijación
C	Instruccions de muntatge	Kit de fixació
GB	Assembly instructions	Fixation Kit
F	Instruction de montage	Kit fixation
D	Montageanleitung	Stützfuß-Kit
PT	Instruções de montagem	Kit fixação
I	Istruzioni di montaggio	Kit di fissaggio
PL	Instrukcja montażu	Element mocujący
CZ	Montážní návod	Fixační kit
HU	Szerelési Utasítás	Rögzítő készlet
RO	Instrucțiuni de montaj	Kit de fixare
HR	Detaljne upute	Kit za montažu
TU	Öncelikli montaj	Montaj kiti

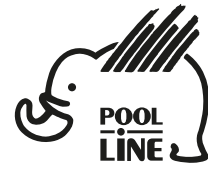

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net







Nº HOMOLOGACIÓN: **E9** 26R-03.1043

RECICLABLE

121011
Rv: 03/2024




- CITROËN JUMPY III
 - OPEL VIVARO C
 - PEUGEOT EXPERT III
 - TOYOTA PROACE II
- L2 H1 (2016->)
 - L2 H1 (2019->)
 - L2 H1 (2016->)
 - L2 H1 (2016->)

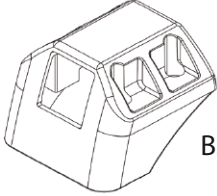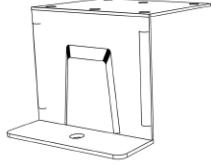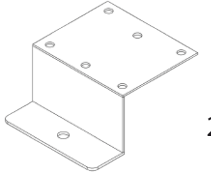N		Q
1	 B.I.TAP66	6
2	 220	4
3	 224	2
4		6
5		6
6		1
	BO00061	
10	 DIN912 M6x20	24
11	 DIN125 Ø6	24
	BO0005 x3	
12	 DIN912 M6x20	6
13	 DIN9021 Ø6	6



A

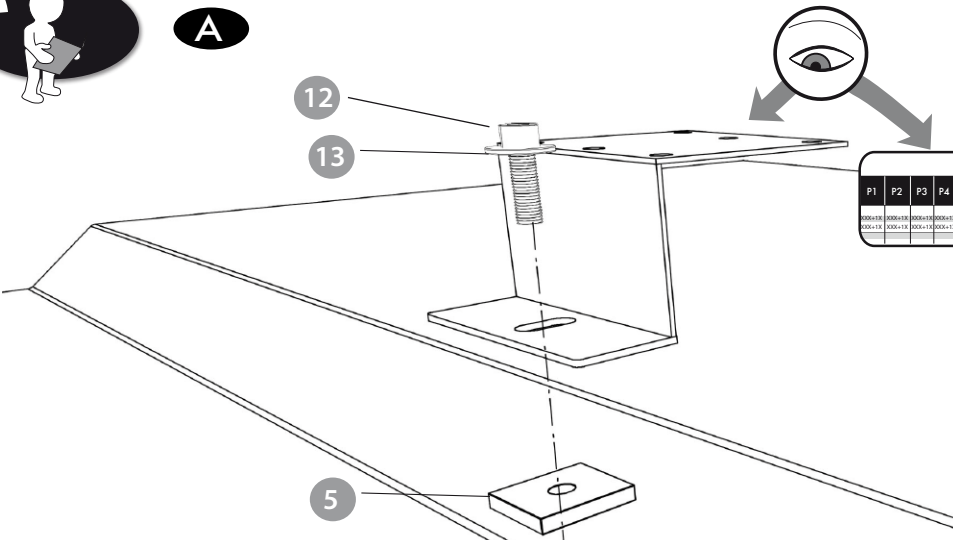

12

13

5

P1

P2


P3

P4

P5

P6

B

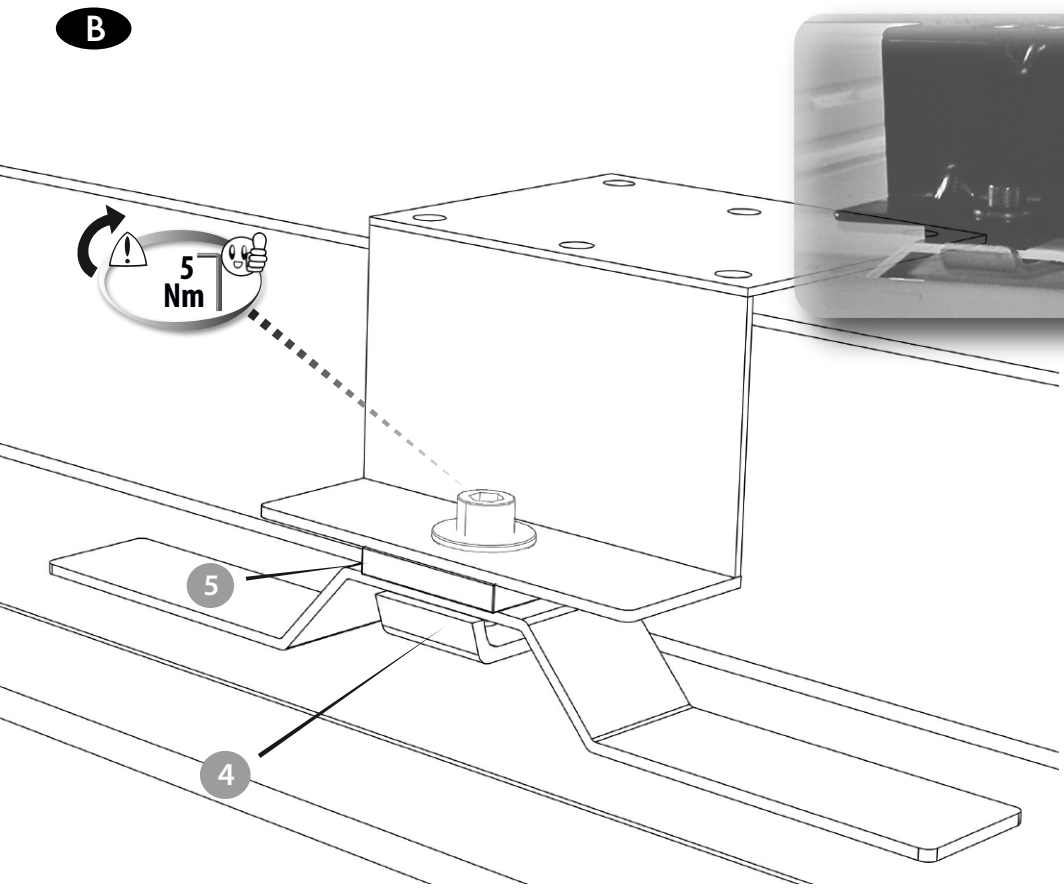


5

4

5 Nm




C1

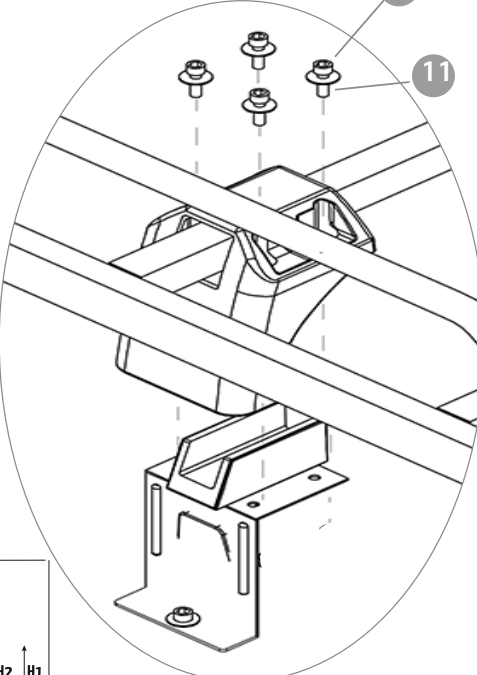

10

11

C2

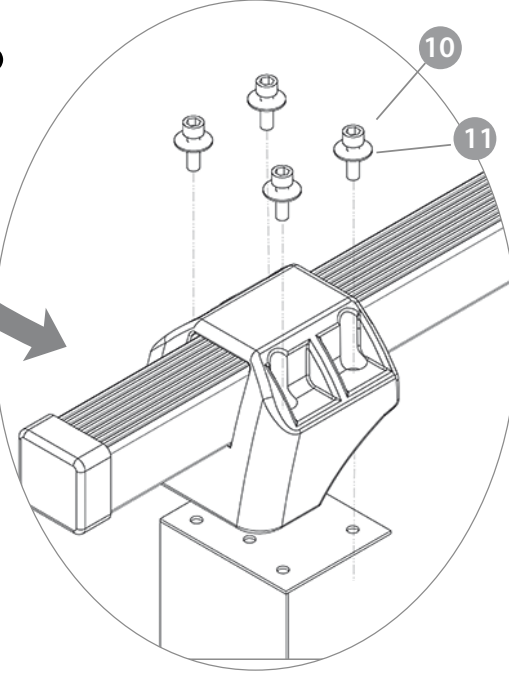

10

11

PAG. 3

*

L1

L2

L3

L4


**

H4


H3

H2

H1

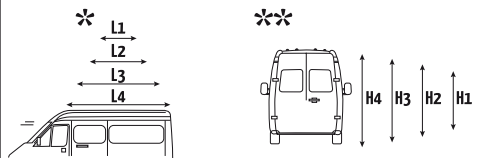

	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10
CITROËN														
Jumpy III (M)	L2	H1	2016->	B00005	220	220			224	224			220	220
OPEL														
Vivaro C (M)	L2	H1	2019->	B00005	220	220			224	224			220	220
PEUGEOT														
Expert III (M)	L2	H1	2016->	B00005	220	220			224	224			220	220
TOYOTA														
Proace II (M)	L2	H1	2016->	B00005	220	220			224	224			220	220

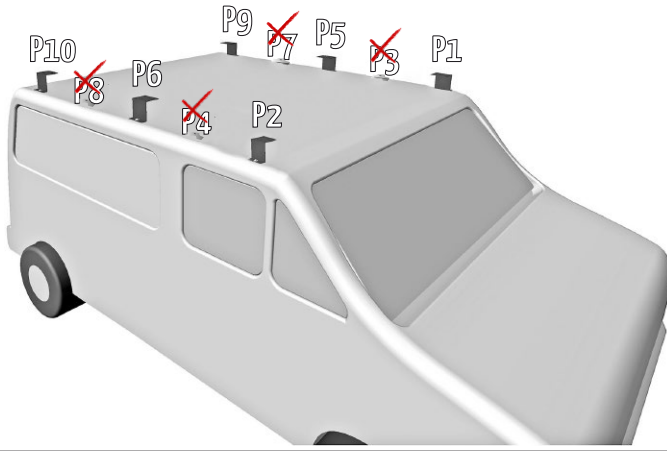

P10

P8

P6

P4

P2

P9

P7

P5

P3

P1