




- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

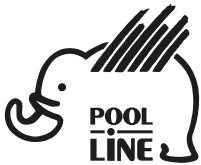

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net





200 KG.
MAX.

Nº HOMOLOGACIÓN: E9 26R-03.1042





123814

Rv: 05/2024

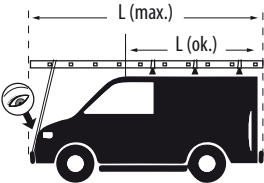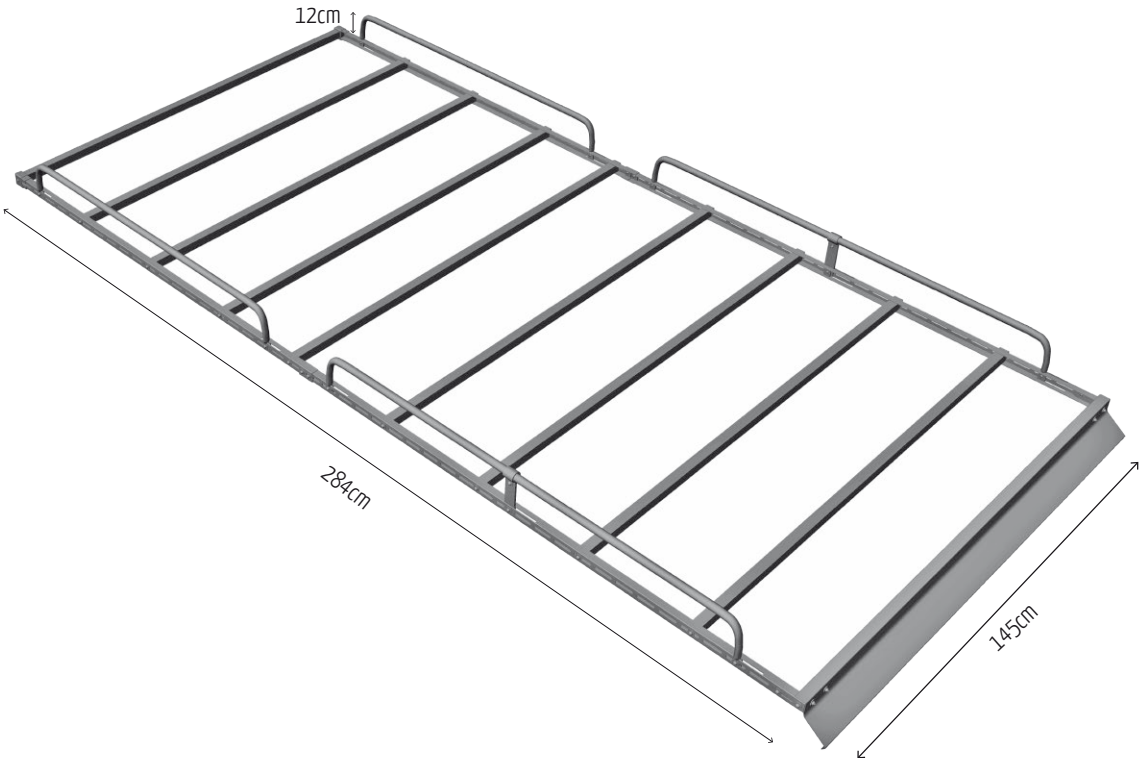


N		Q
1	 S-1450	1
2	 L-1540	2
3	 L-1300	2
4	 T-1435	9
5	 B-1262	2
6	 B-1022	2
7	 CHA-M8	18
8	 	2
9	 	2
10	 	8
12	 	1
13	 CHA-M8	14
14	 ISO 7380 M8x30	18
15	 ISO 7380 M8x16	22
16	 DIN 125 Ø 8	38
17	 	4
19	 DIN 603 M6x12	2
20	 DIN 6923 M6	2

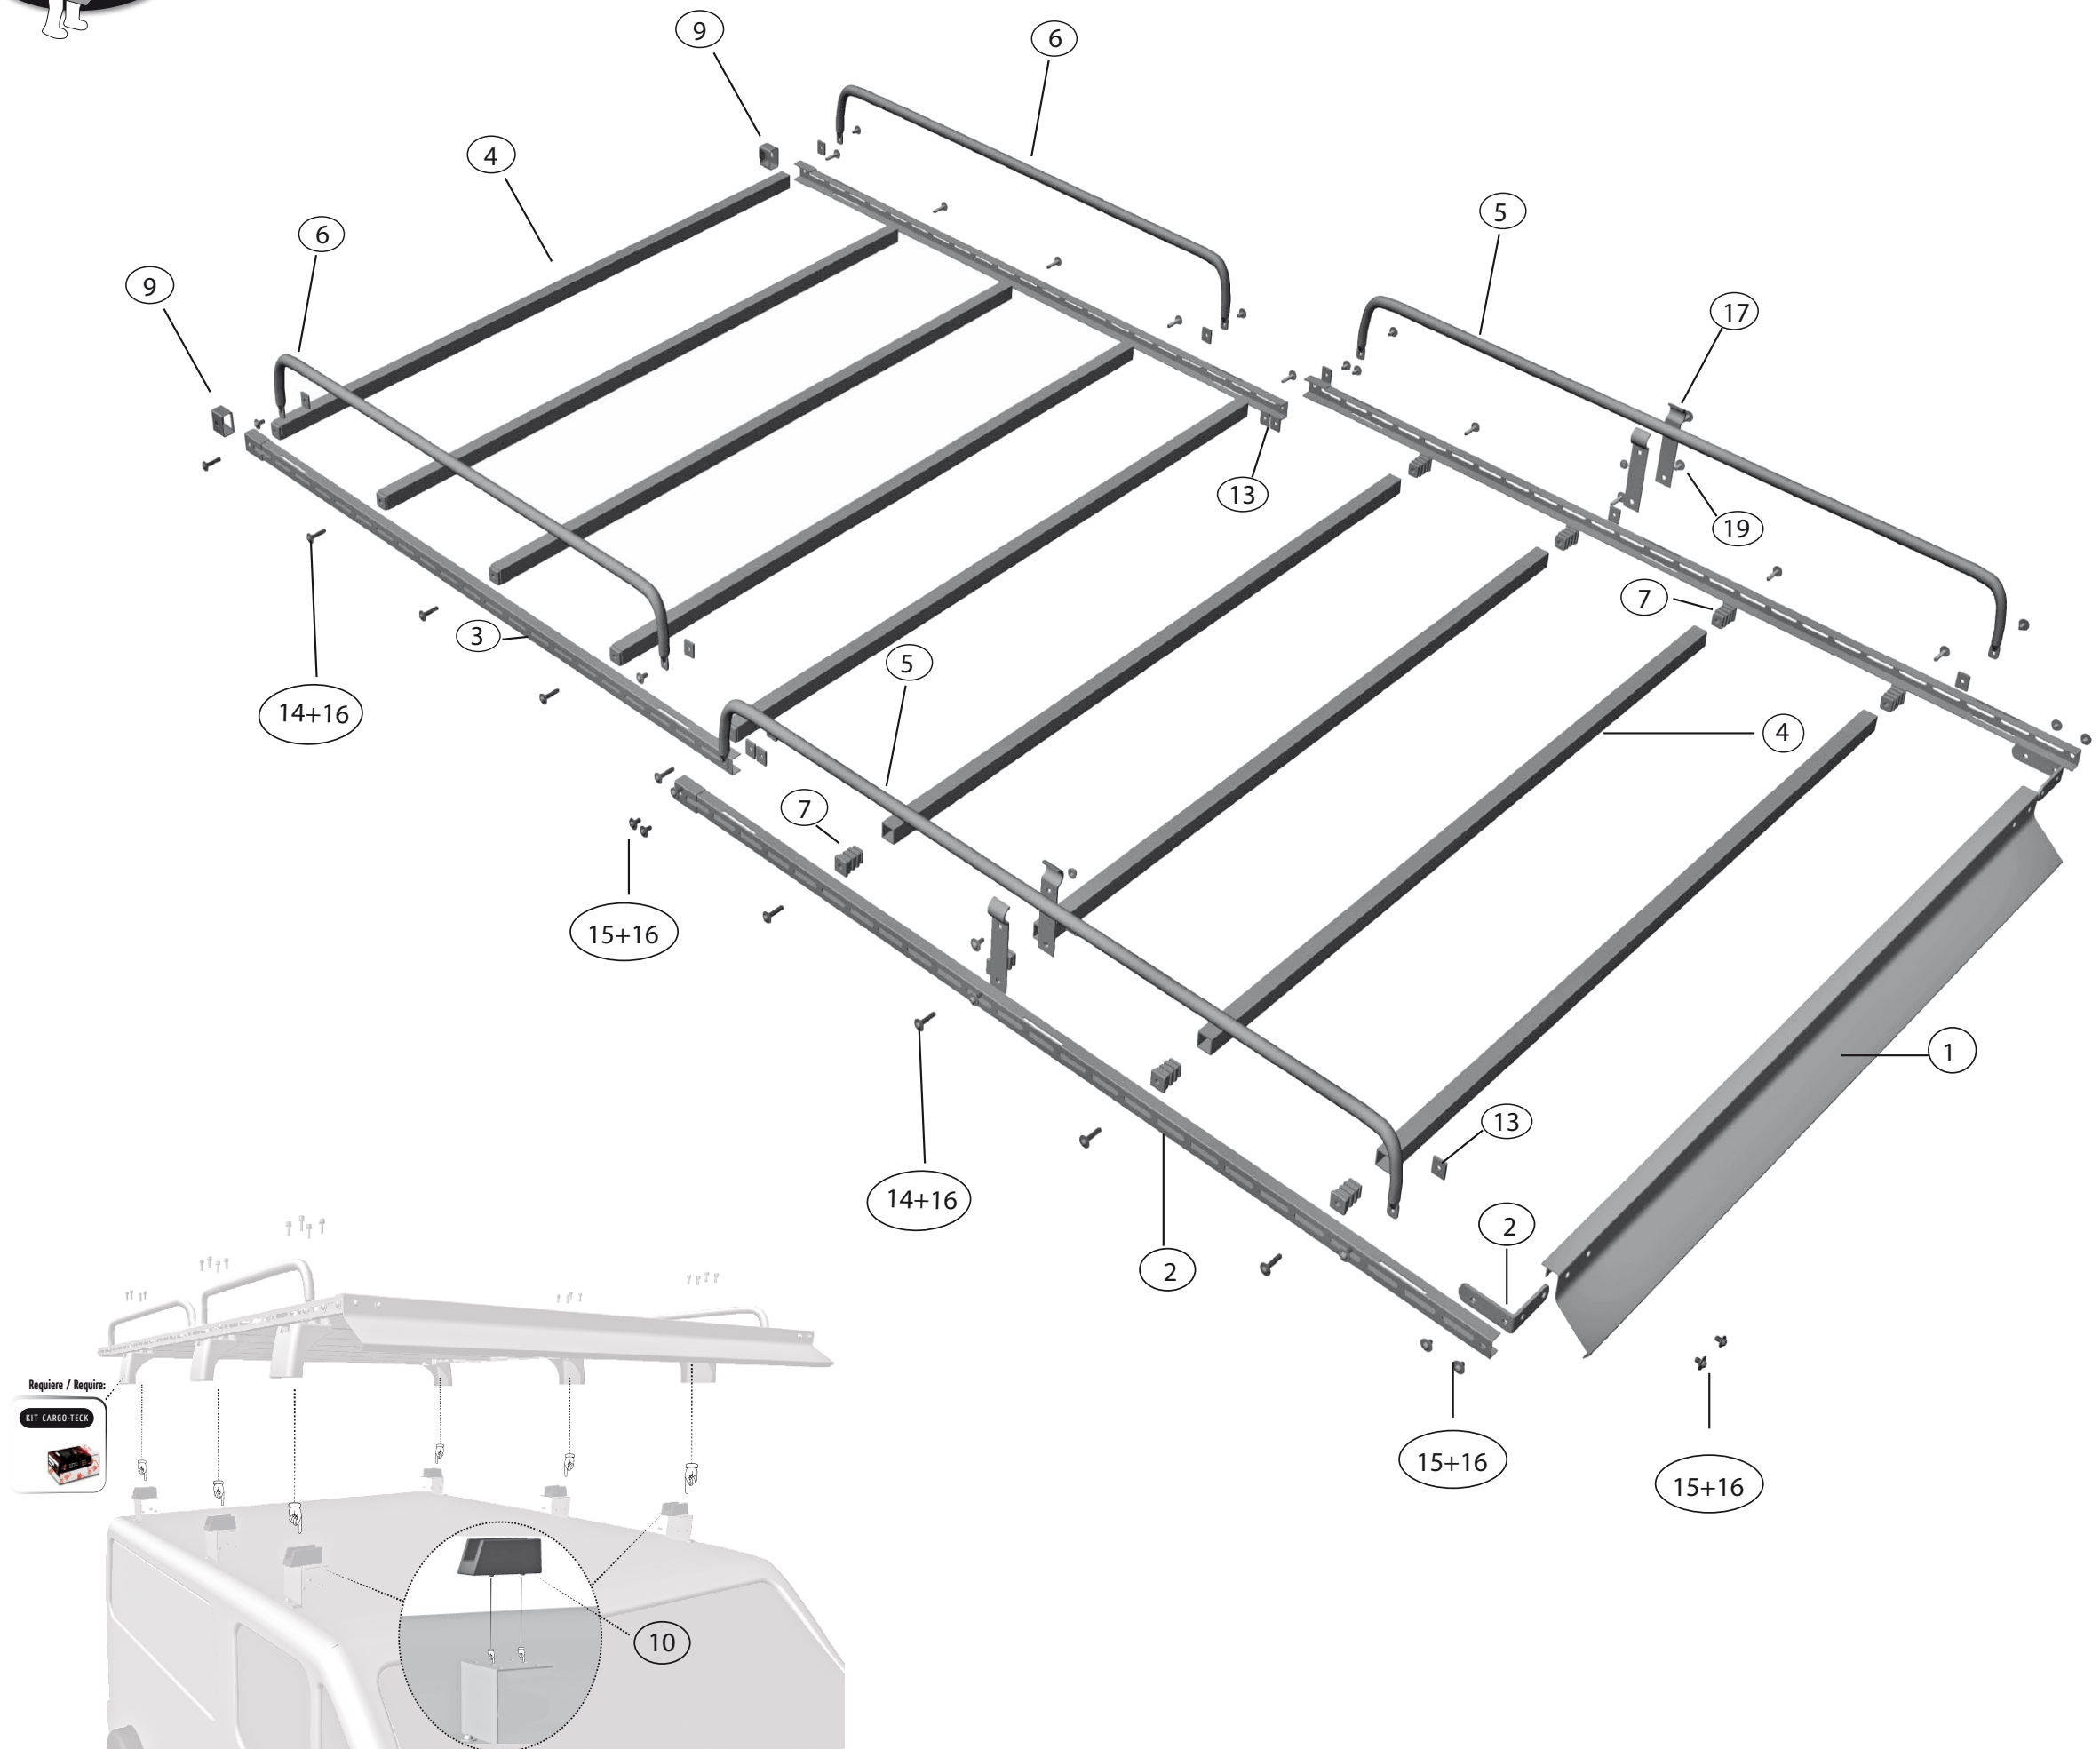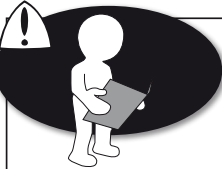




• FORD CUSTOM L1H1 (2013->)

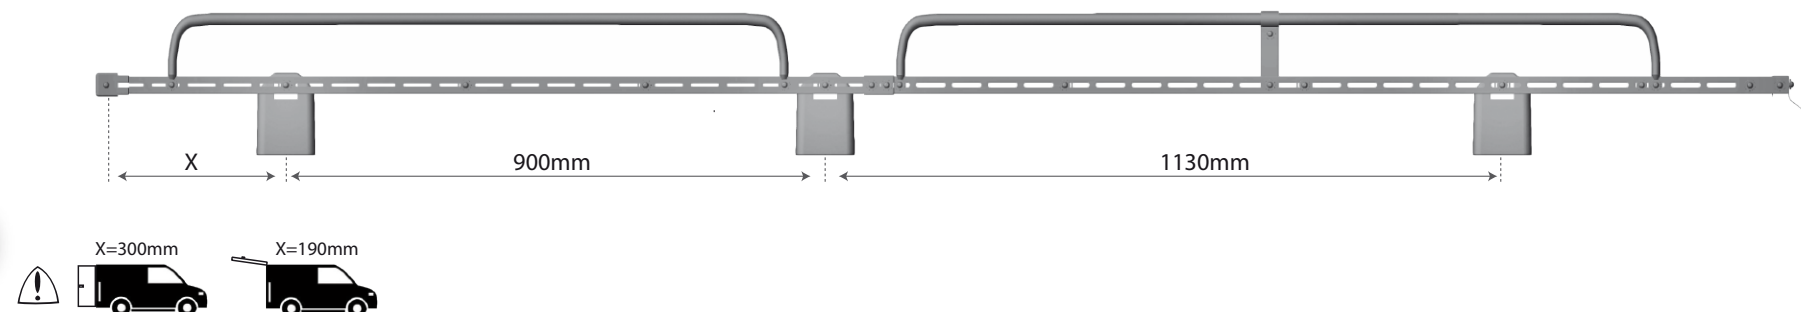

• IVECO DAILY L2H2 (2000-2014)




• CITROËN JUMPY III L3 (XL) 2016 ->
• FIAT SCUDO L3 (XL) 2022->
• OPEL VIVARO C L3 (XL) 2019->
• PEUGEOT EXPERT III L3 (XL) 2016 ->
• TOYOTA PROACE II (XL) 2016 ->

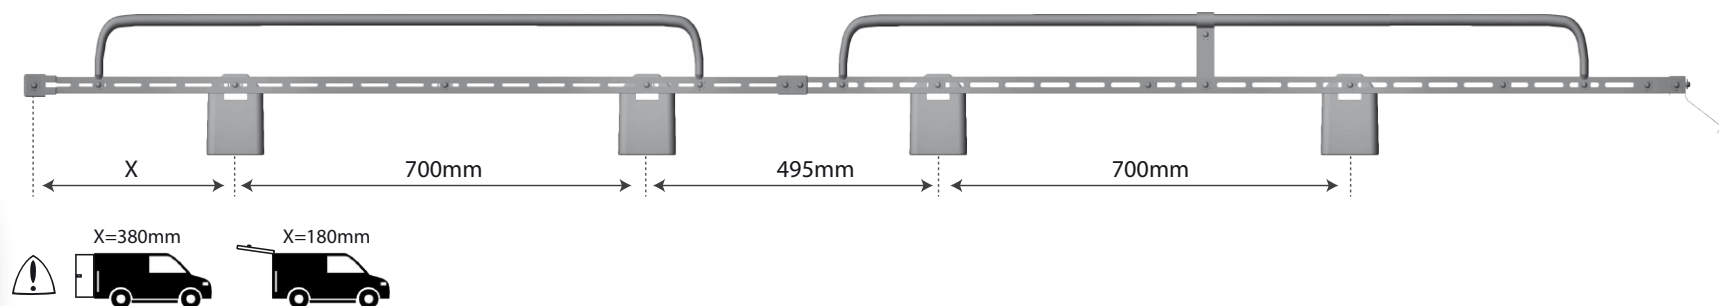


Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone




• MERCEDES VITO W639 L1H1 (2003-2014)
• MERCEDES VITO W447 L1H1 (2014->)

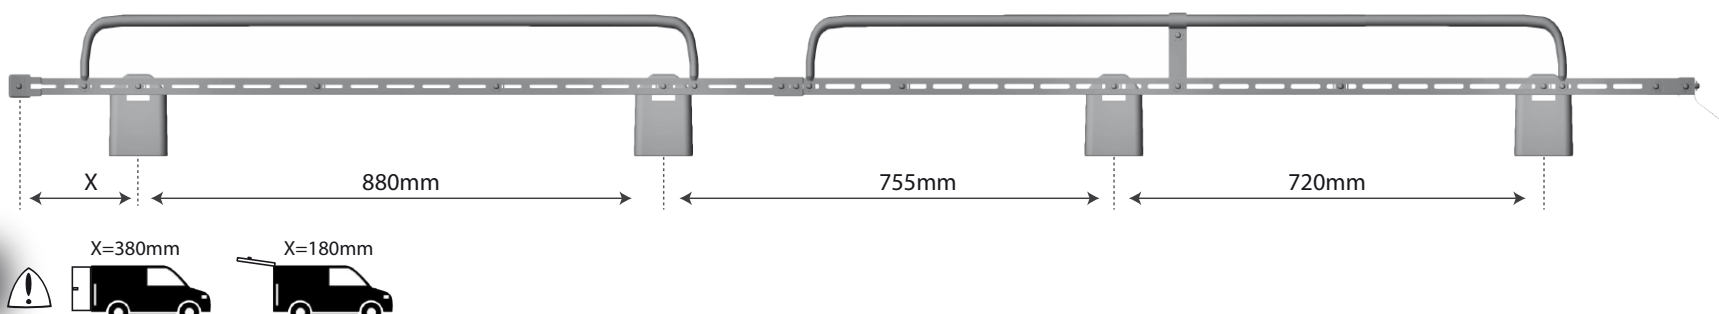


• VOLKSWAGEN T5 L1H1 (2003 - 2014)
• VOLKSWAGEN T6 L1H1 (2015->)

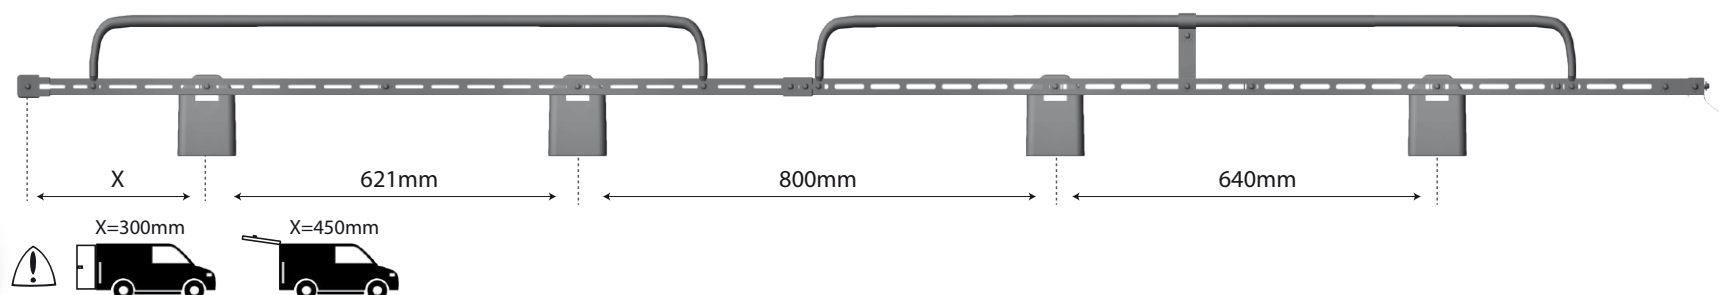


1

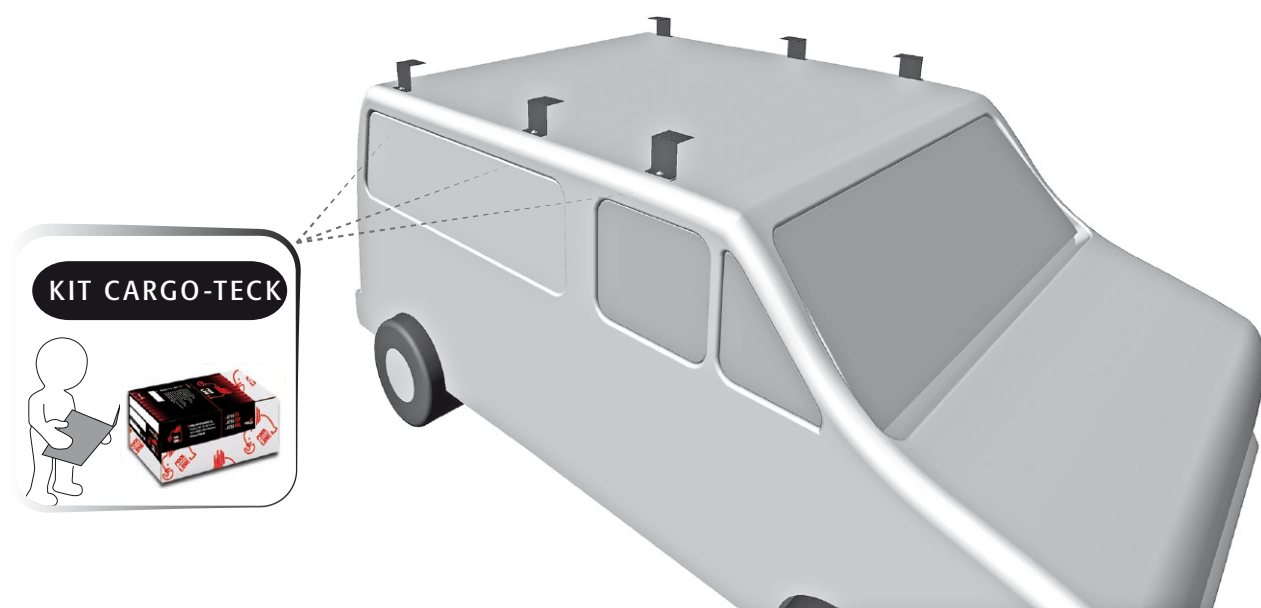


2


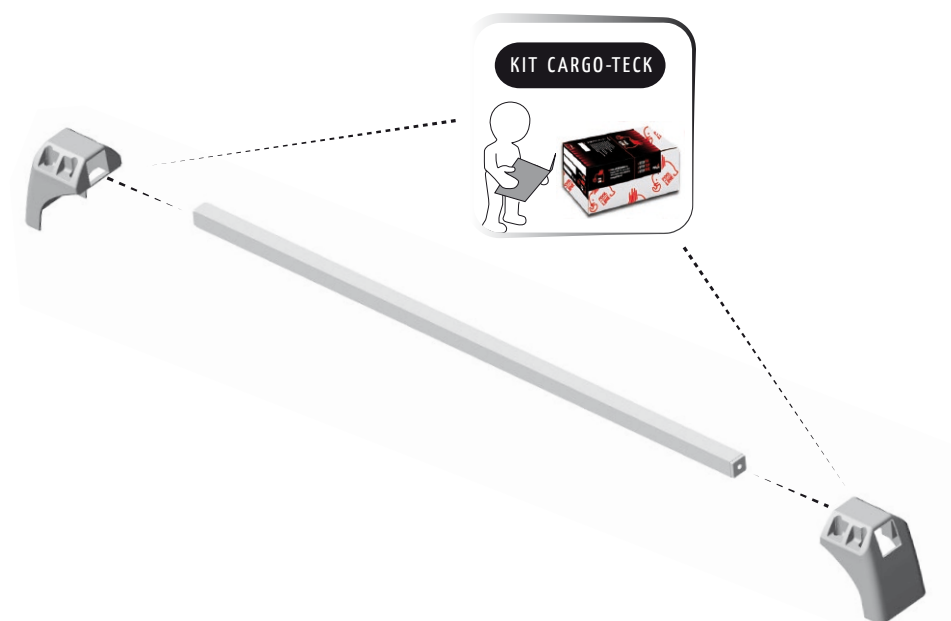


3

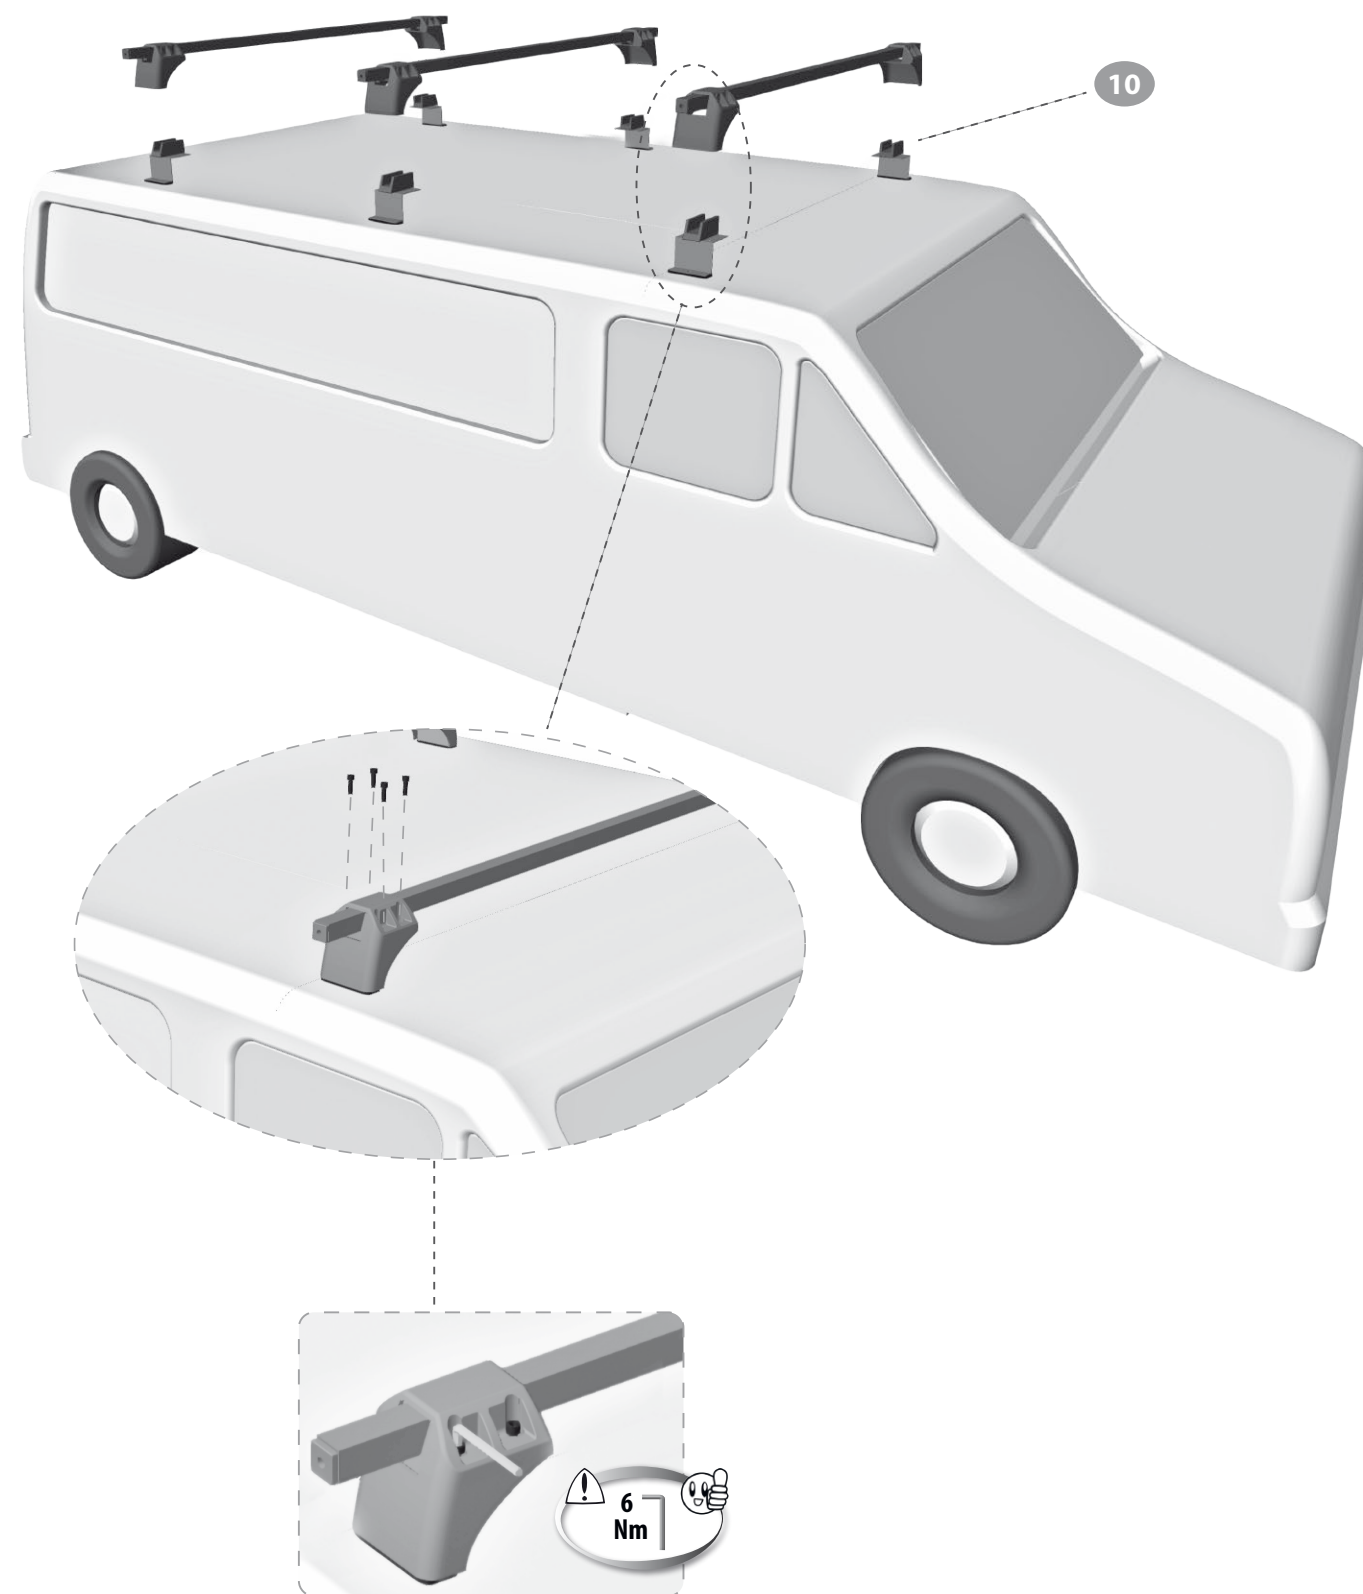


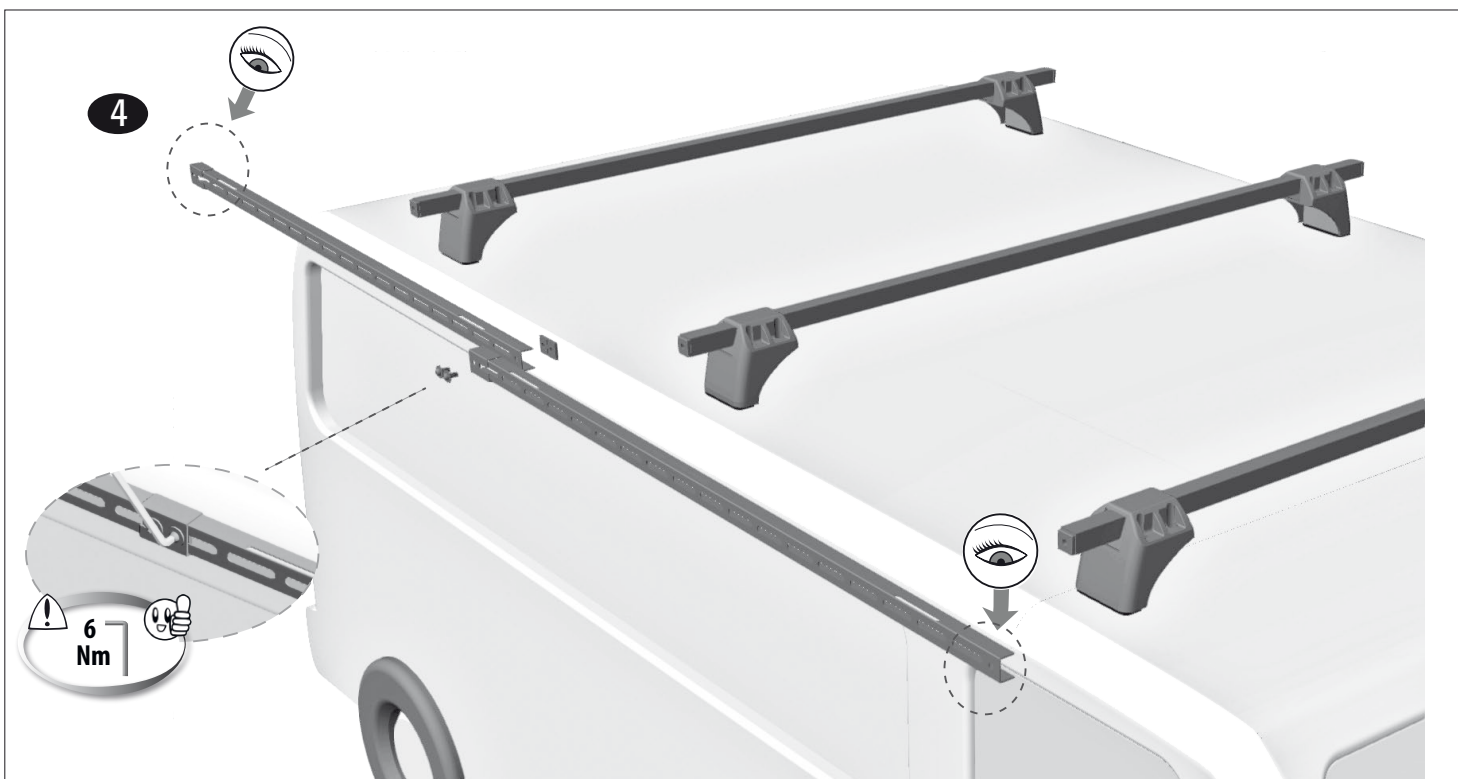


5

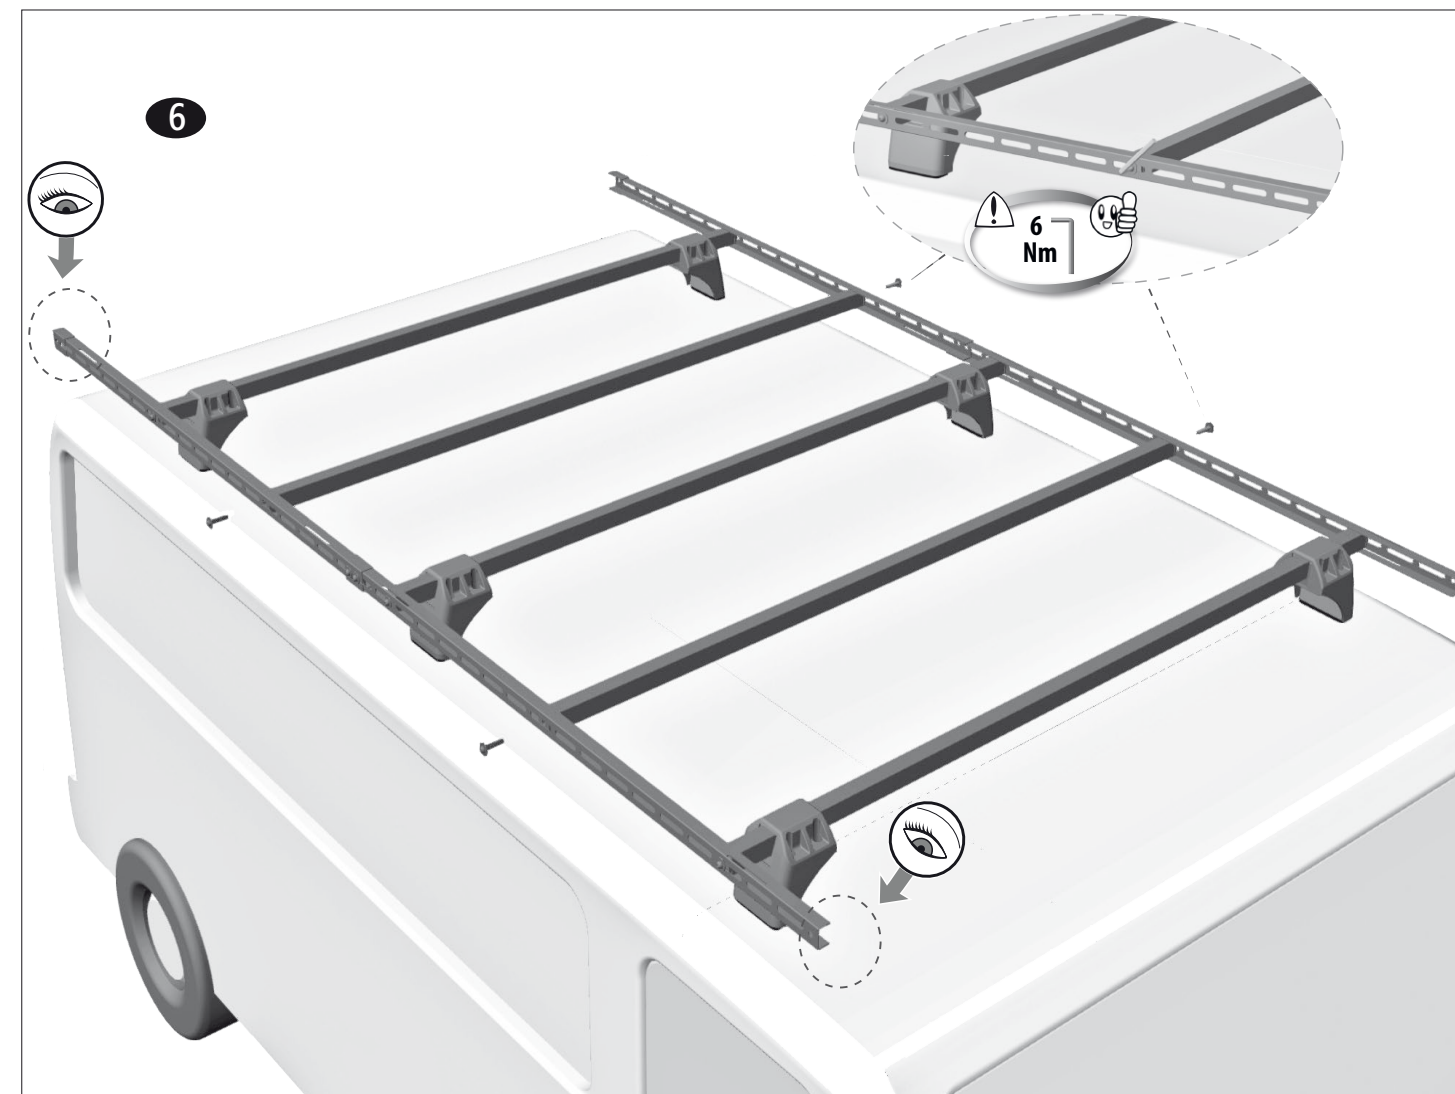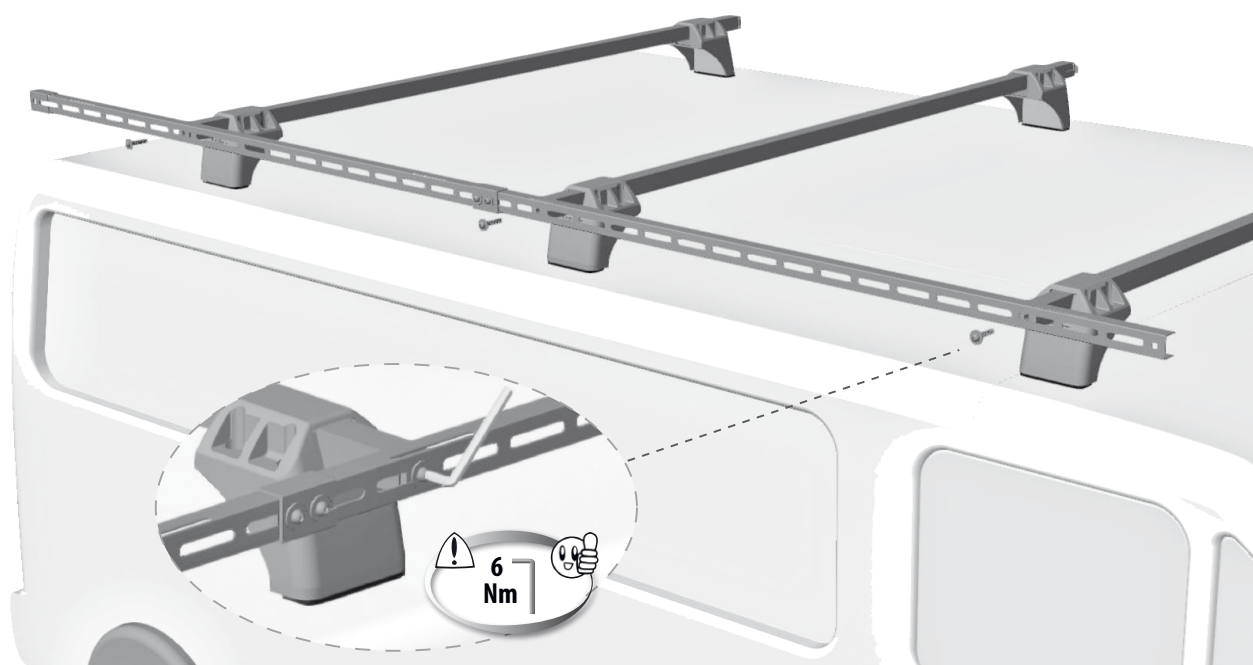



7




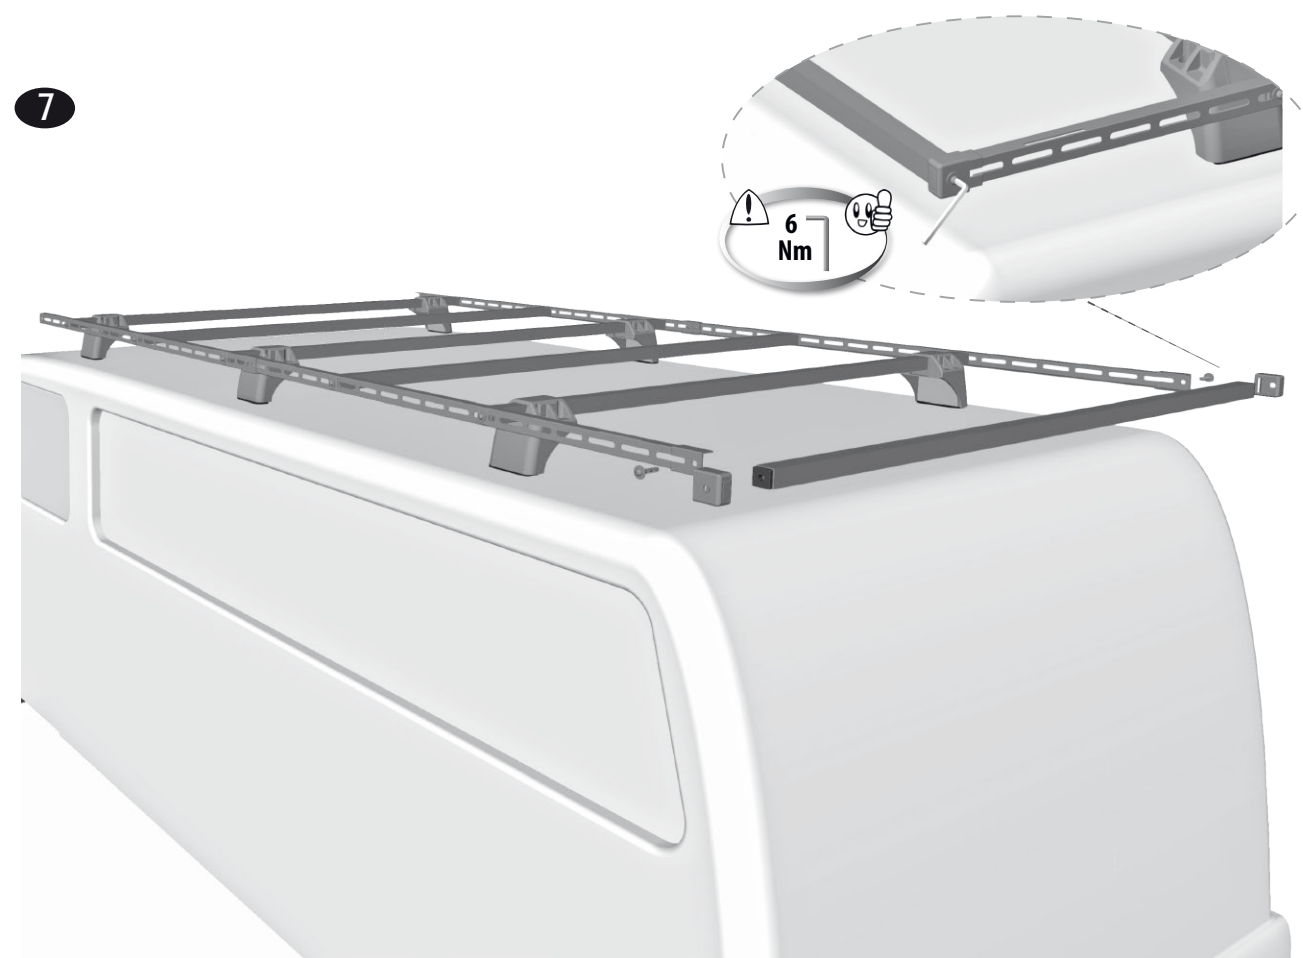


8

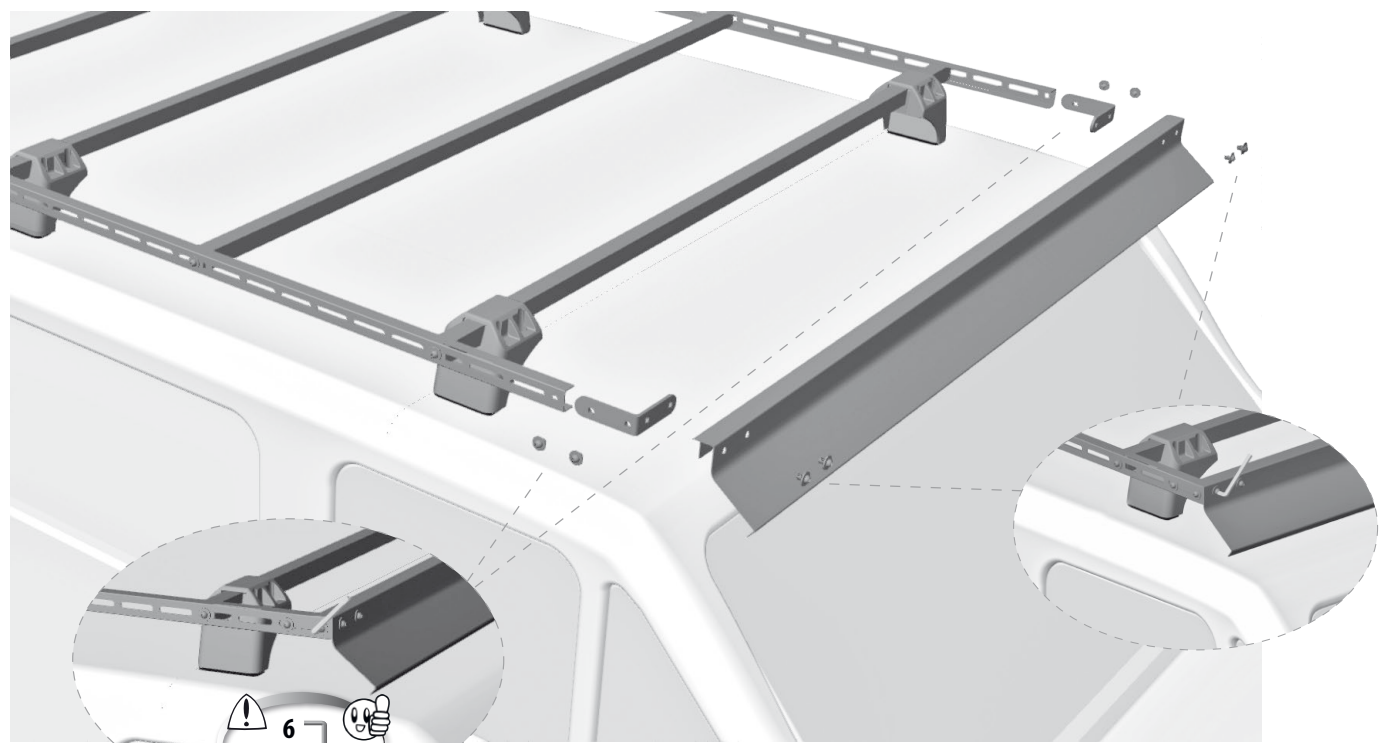


9

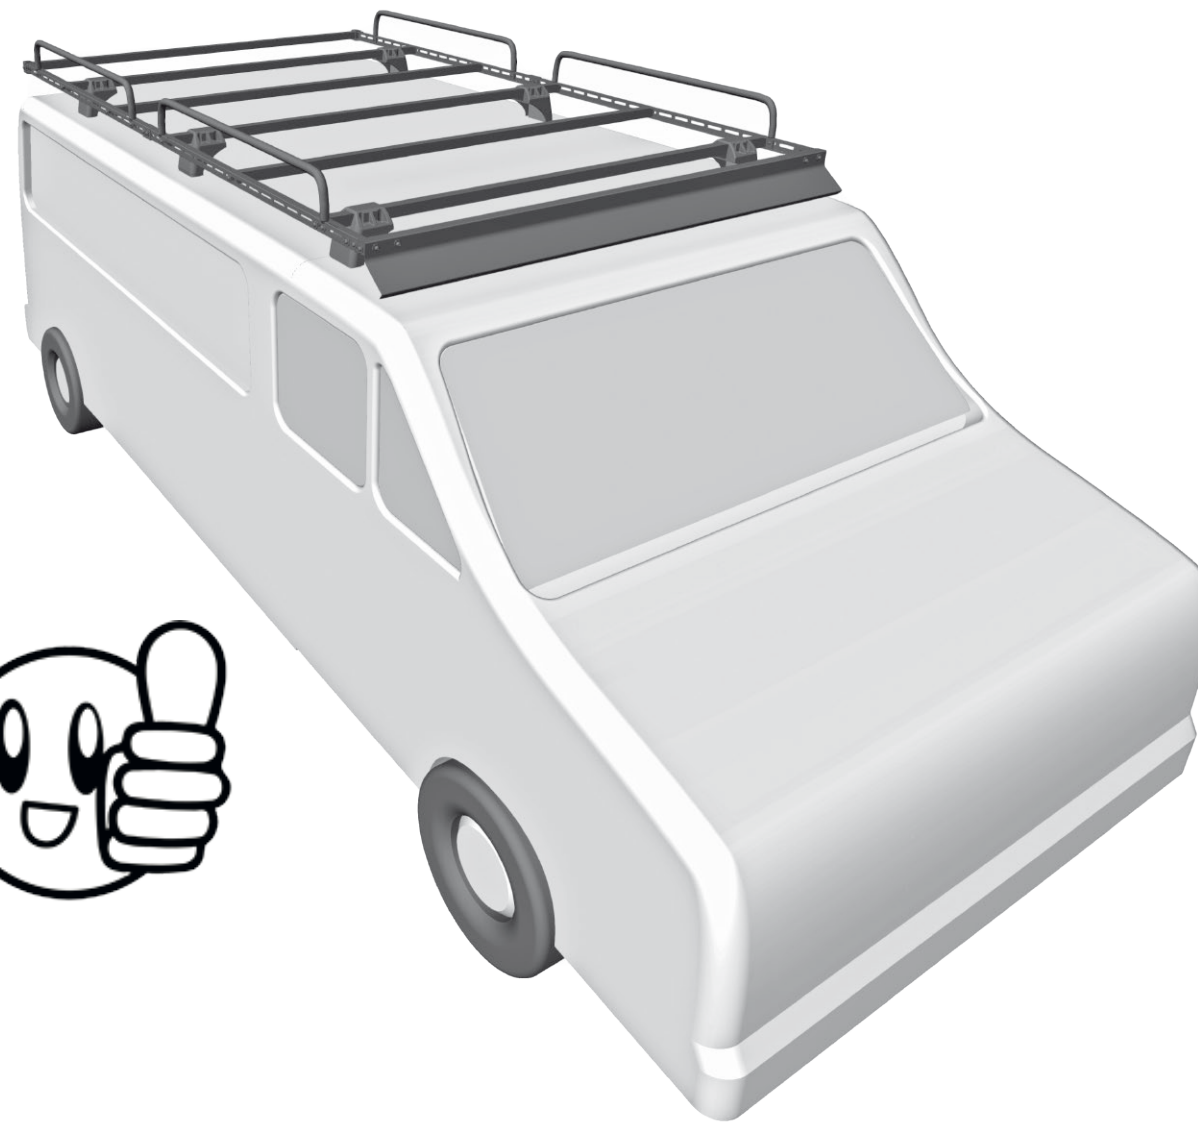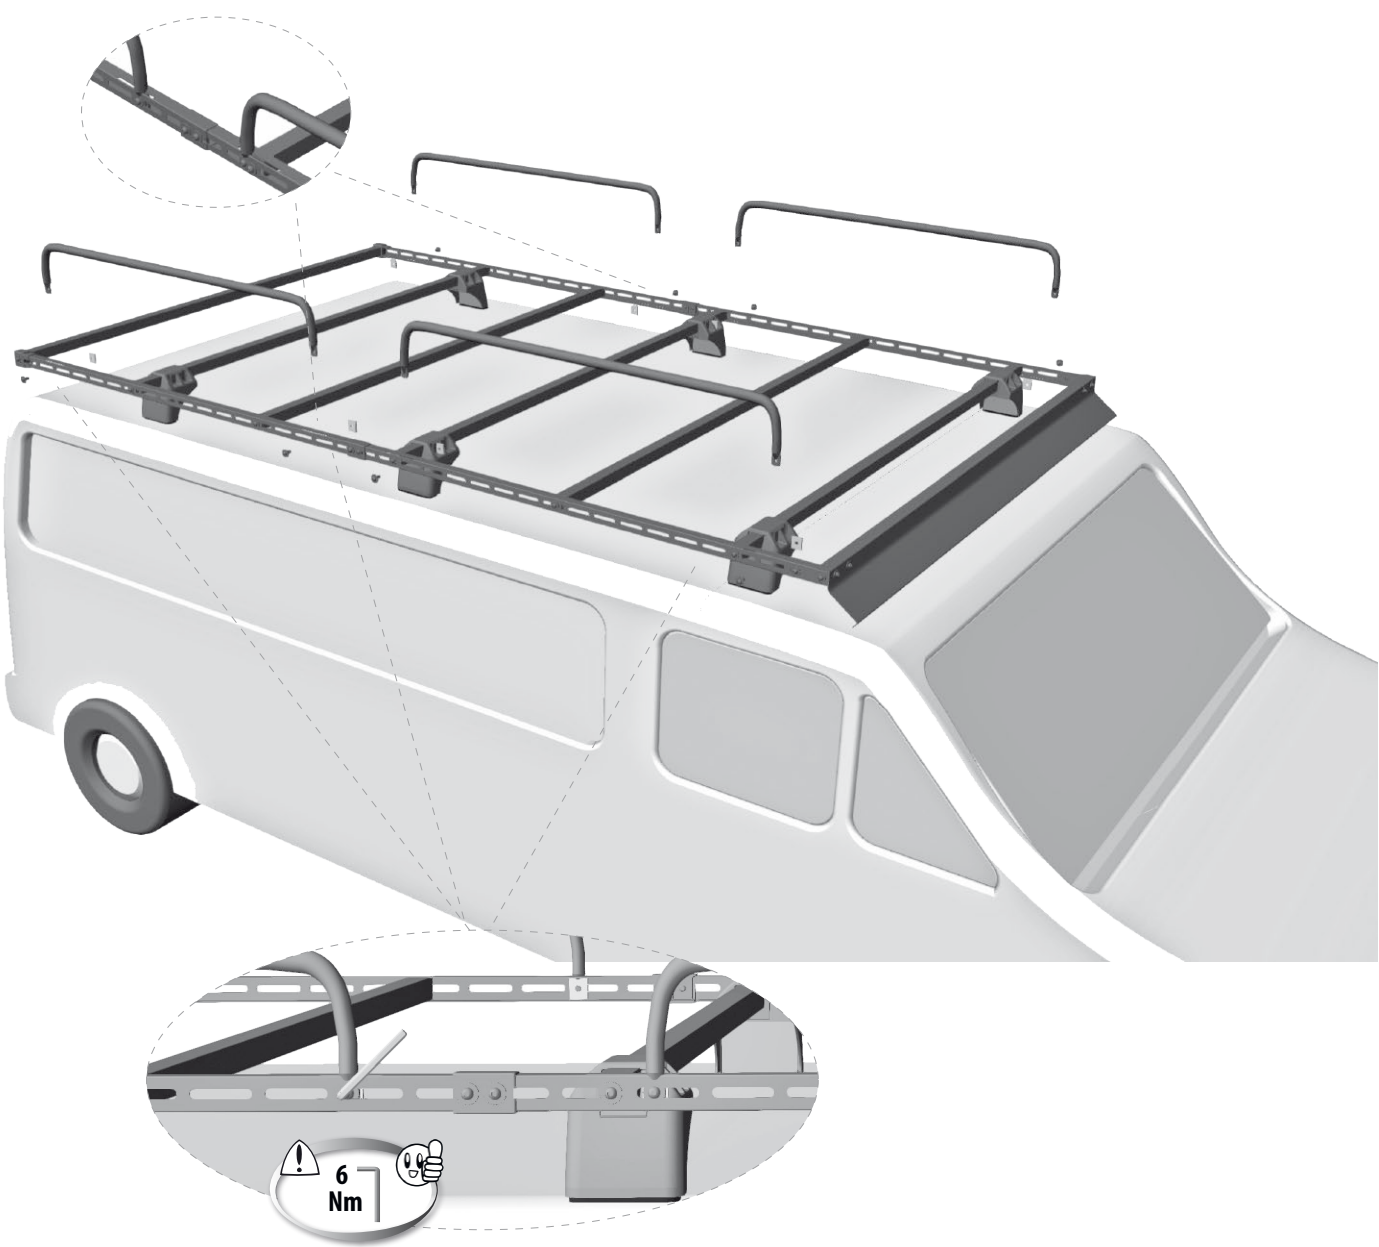

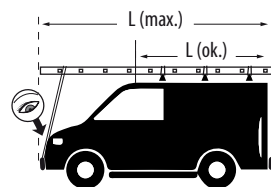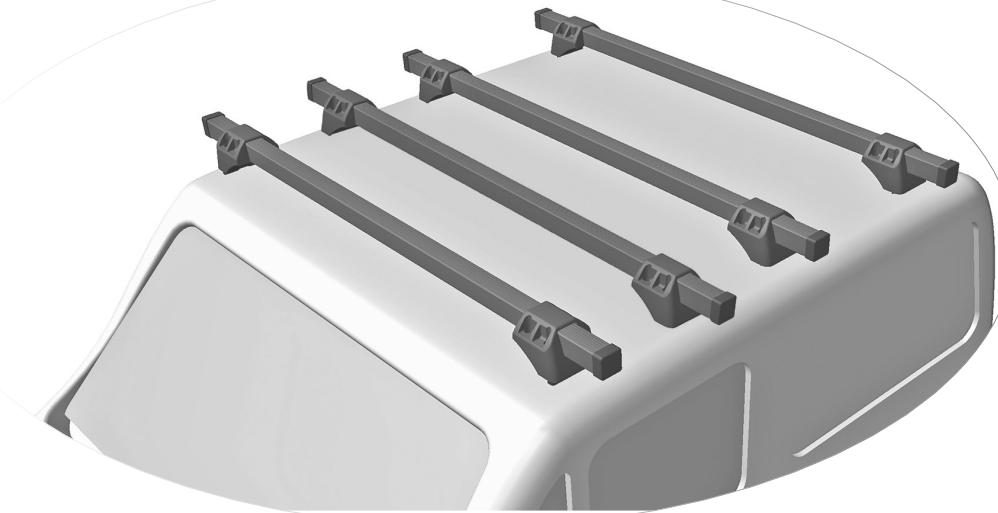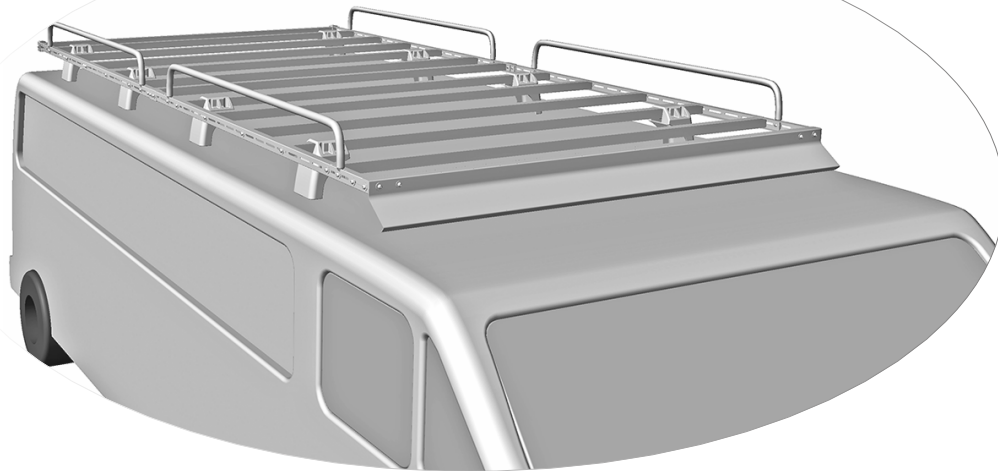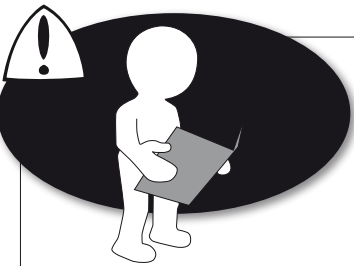


E	Instrucciones de montaje	Kit de fijación
C	Instruccions de muntatge	Kit de fixació
GB	Assembly instructions	Fixation Kit
F	Instruction de montage	Kit fixation
D	Montageanleitung	Stützfuß-Kit
PT	Instruções de montagem	Kit fixação
I	Istruzioni di montaggio	Kit di fissaggio
PL	Instrukcja montażu	Element mocujący
CZ	Montážní návod	Fixační kit
HU	Szerelési Utasítás	Rögzítő készlet
RO	Instrucțiuni de montaj	Kit de fixare
HR	Detaljne upute	Kit za montažu
TU	Öncelikli montaj	Montaj kiti

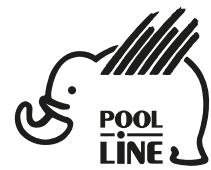

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1043

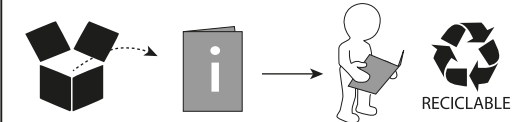

121013

Rv: 03/2024



- **CITROËN JUMPY III** L3 H1 (2016->)
- **OPEL VIVARO C** L3 H1 (2019->)
- **PEUGEOT EXPERT III** L3 H1 (2016->)
- **TOYOTA PROACE II** L3 H1 (2016->)

