

- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj




POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net





200 KG.
MAX.




Nº HOMOLOGACIÓN: E9 26R-03.1042





123313

Rv: 10/2024

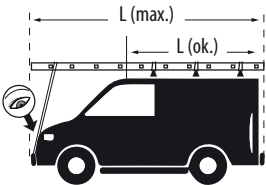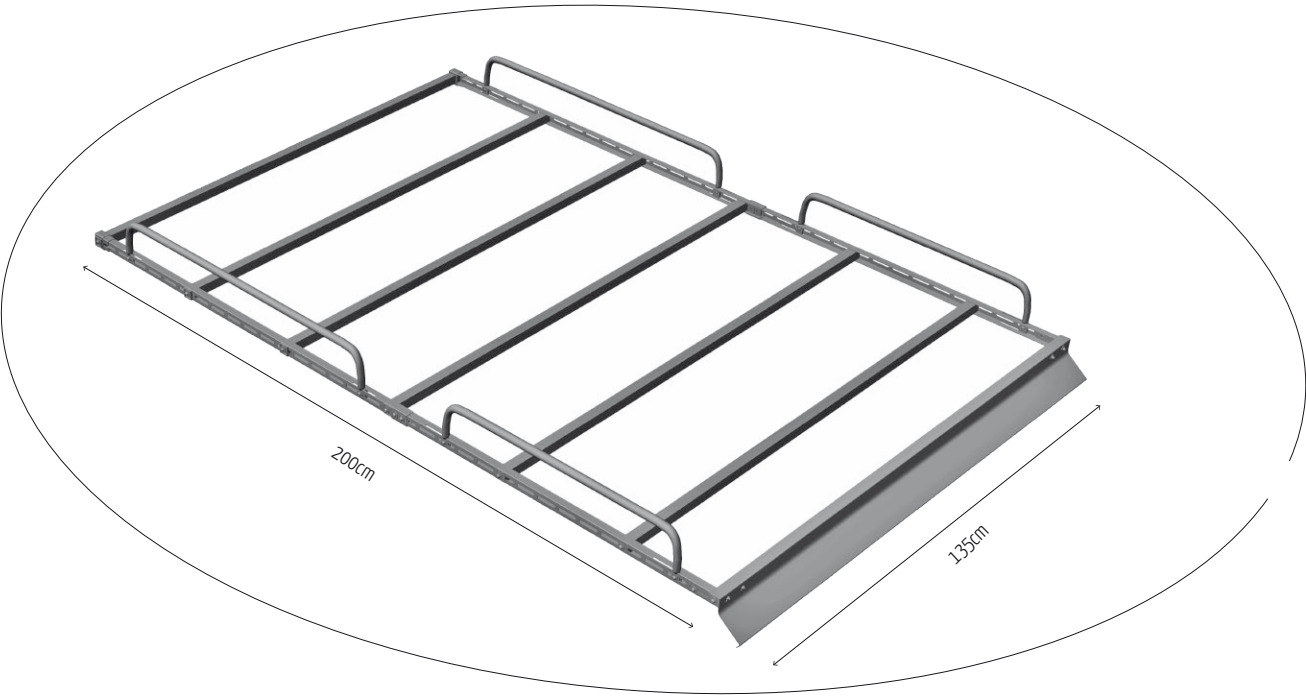


N		Q
1	 S-1350	1
2	 L-1120	2
3	 B-842	2
4	 L-943	2
5	 B-662	2
6	 T-1335	6
7	 CHA-M8	2
8	 ISO 7380 M8x30	12
9	 ISO 7380 M8x16	2
10	 DIN 125 Ø 8	8
12	 ISO 7380 M8x40	1
13	 CHA-M8	12
14	 ISO 7380 M8x30	10
15	 ISO 7380 M8x16	20
16	 DIN 125 Ø 8	32
17	 ISO 7380 M8x40	2

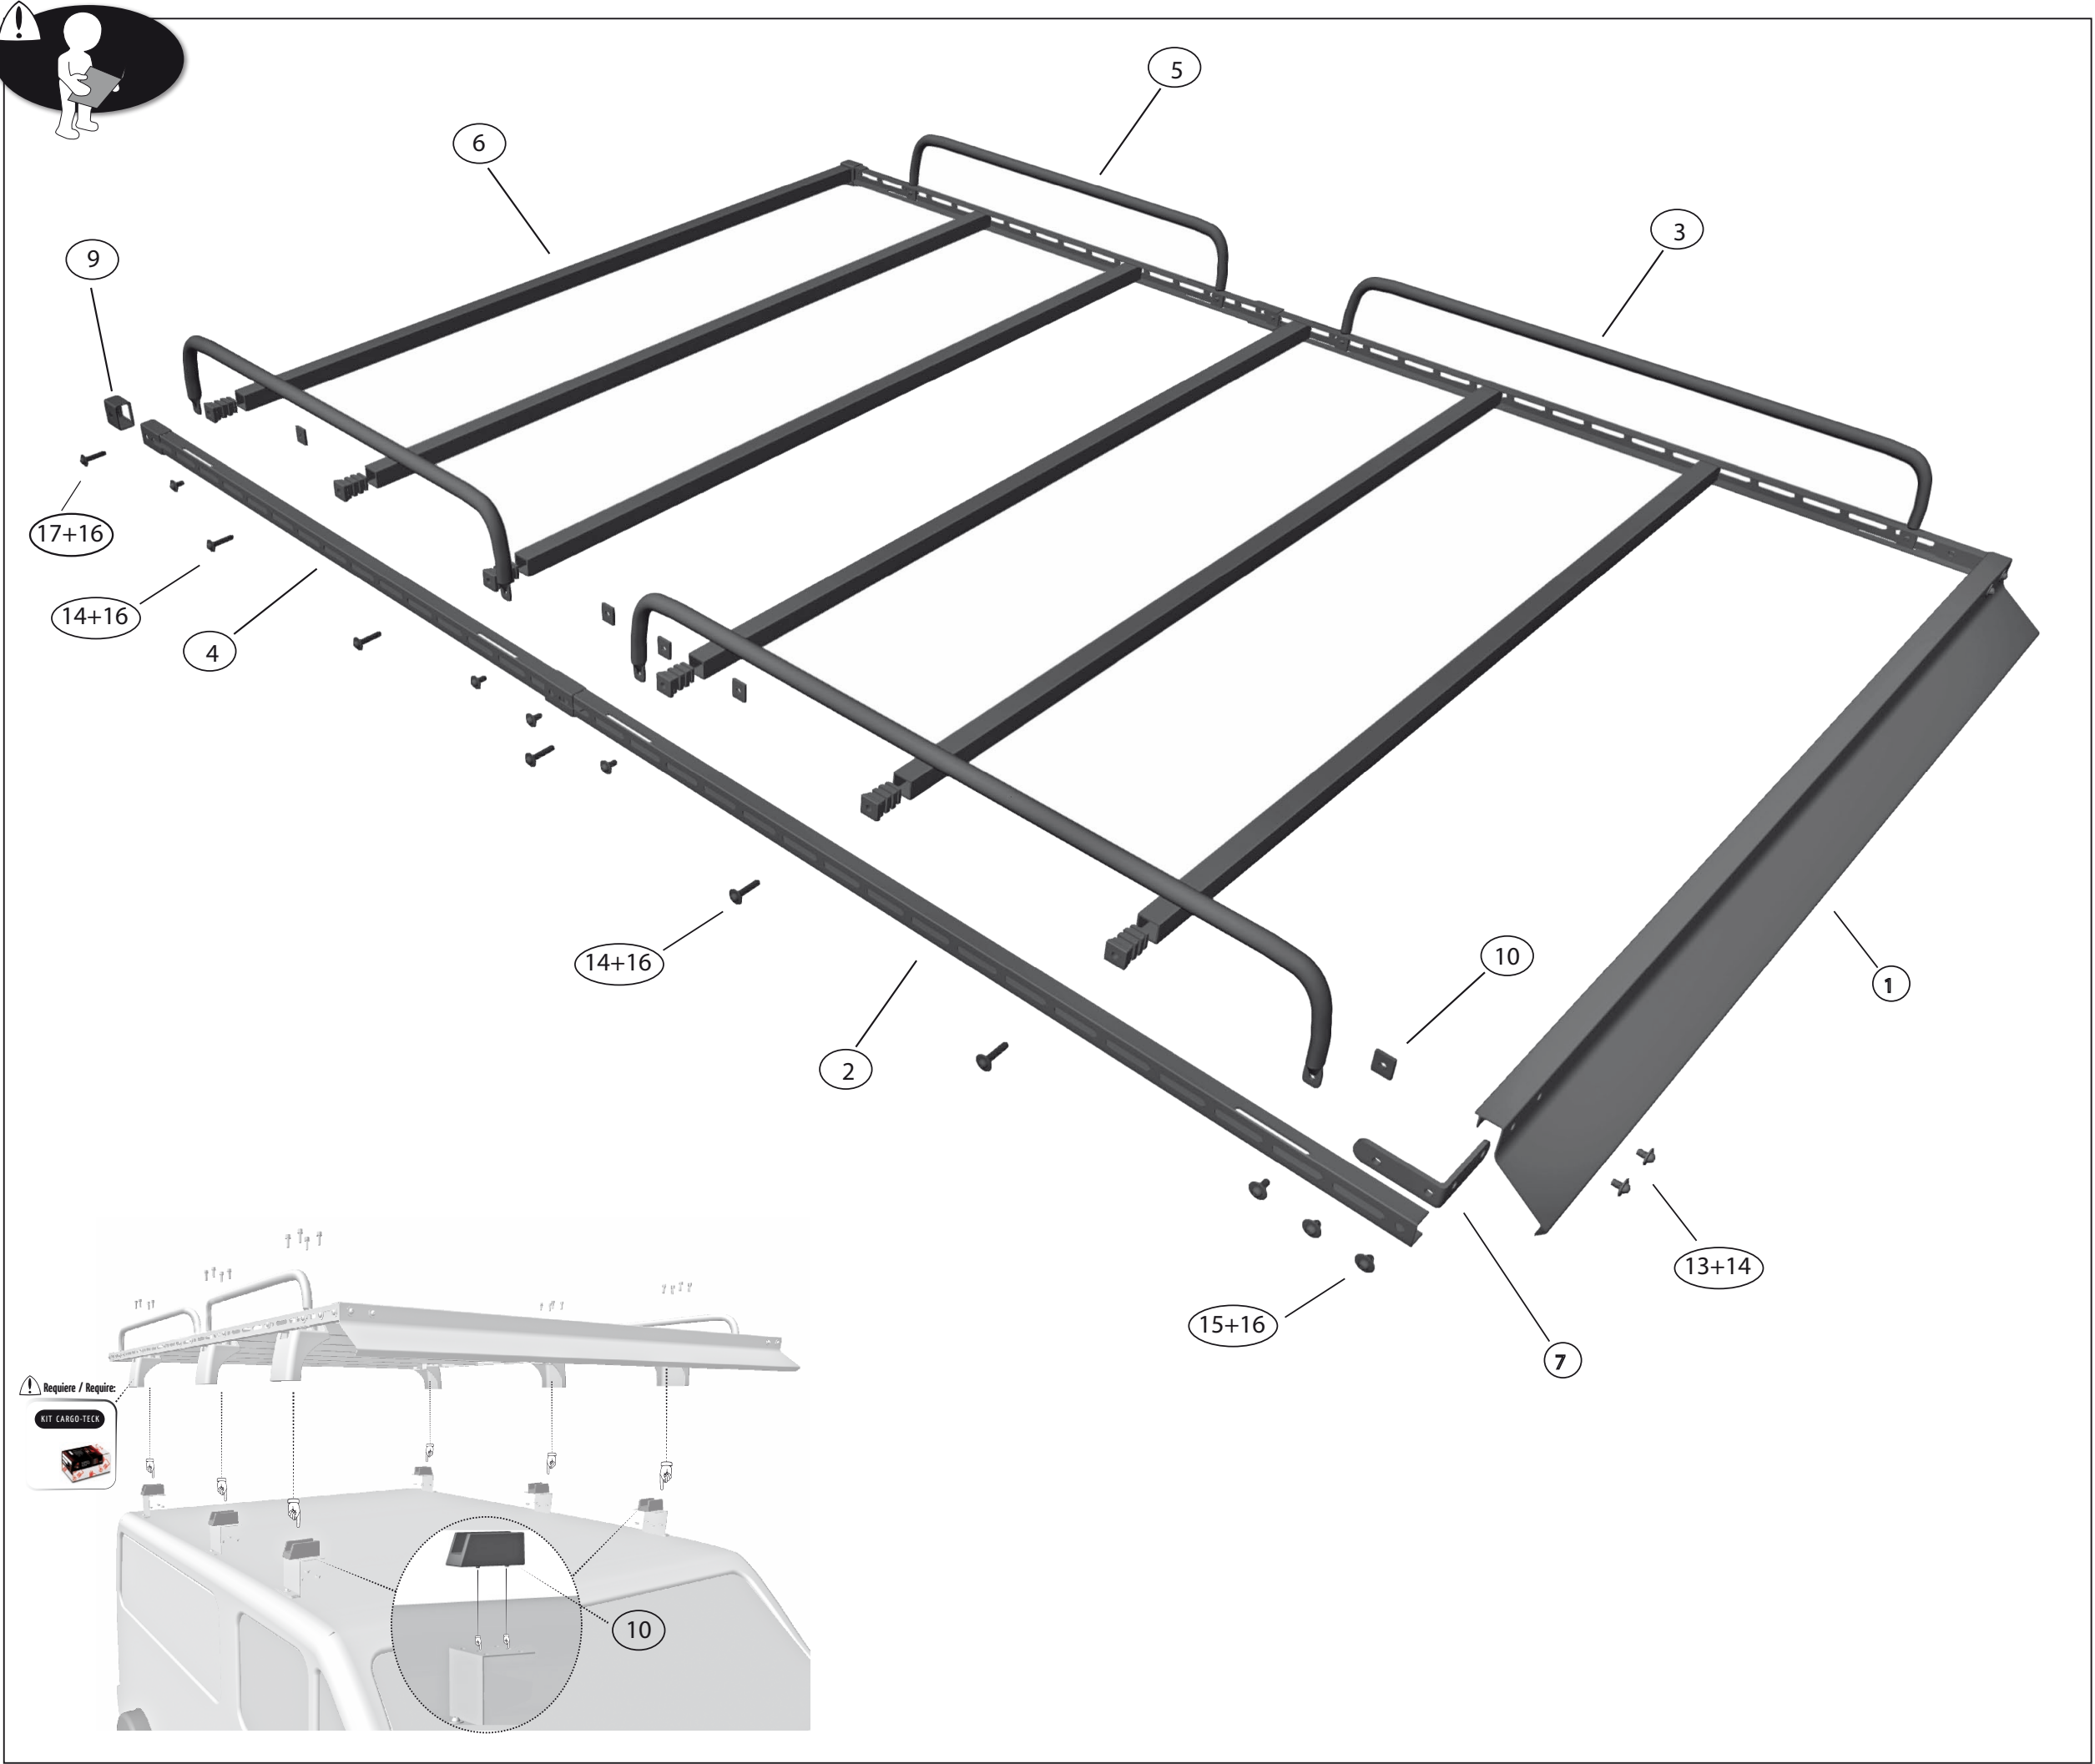


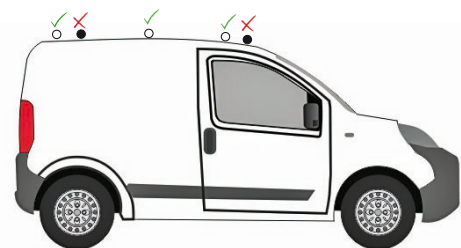


CITROËN NEMO / FIAT FIORINO II / PEUGEOT BIPPER

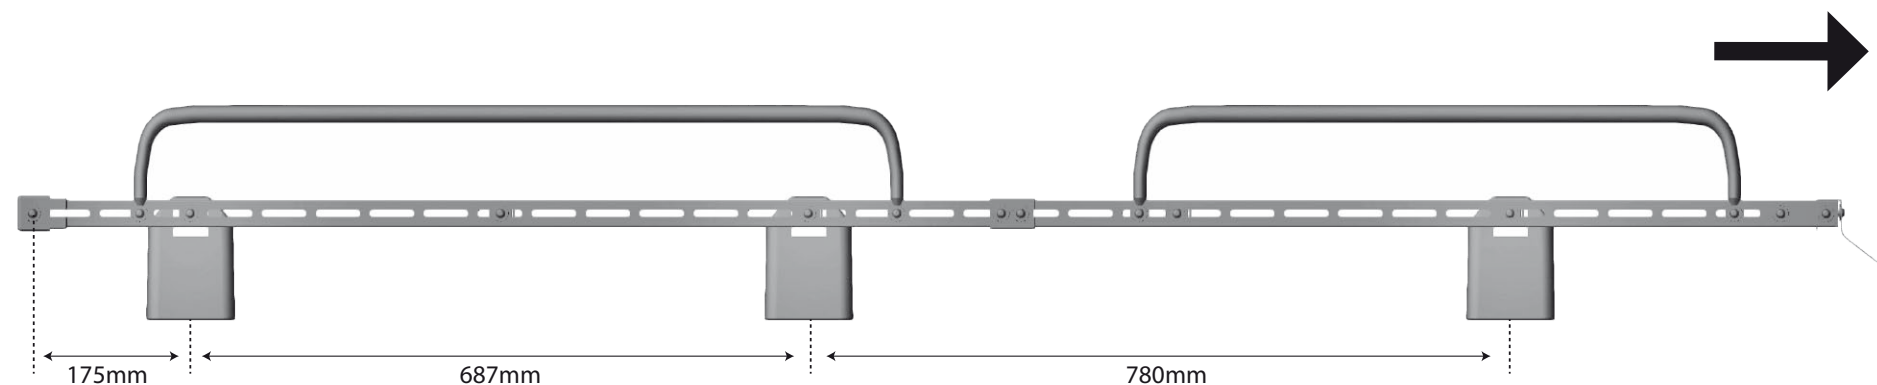



FIAT DOBLÓ I L1 H1 2001-2009

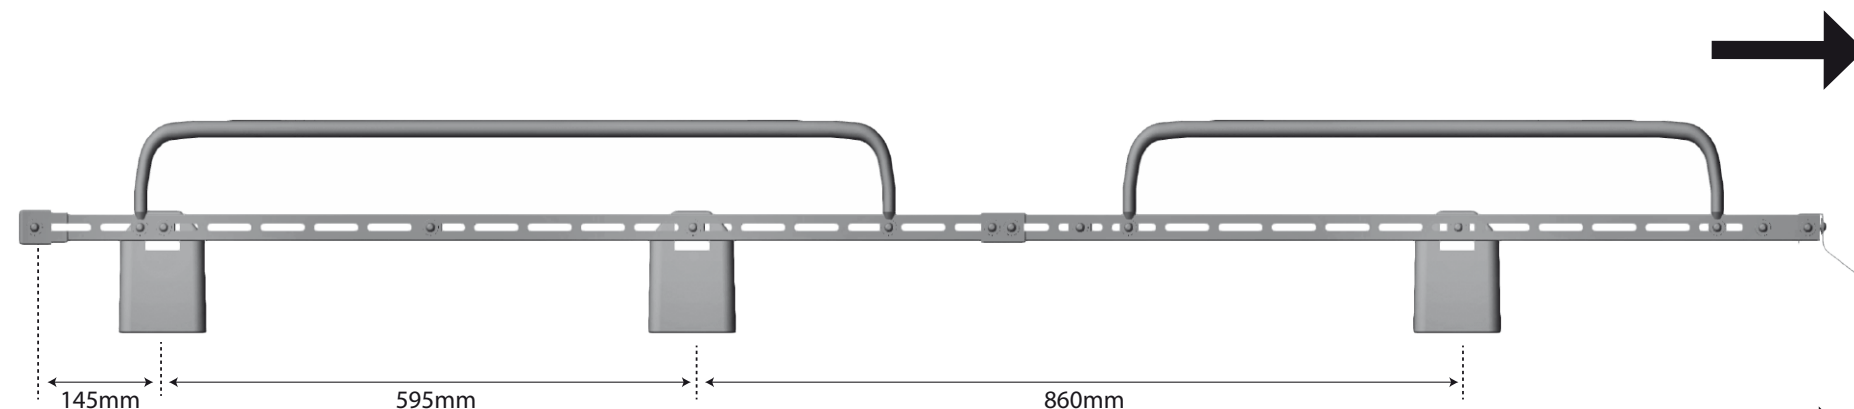


FIAT DOBLÓ II L1 H1 / OPEL COMBO D L1 H1 2010->

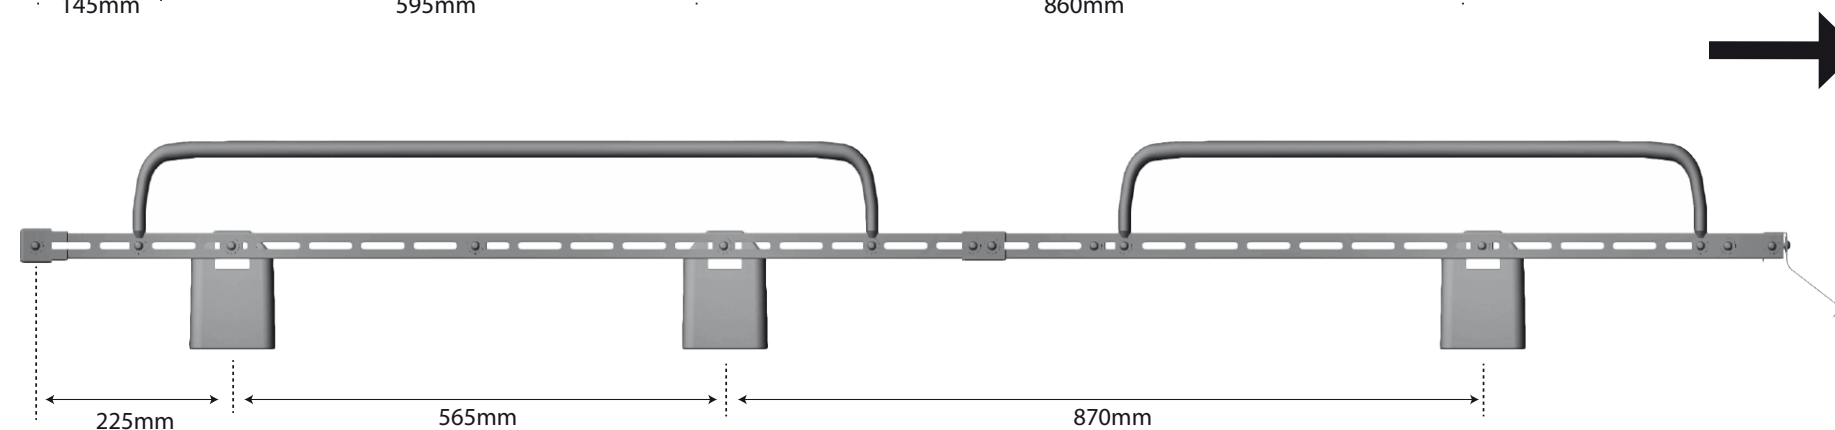


FORD CONNECT II TOURNEO / TRANSIT 2013->

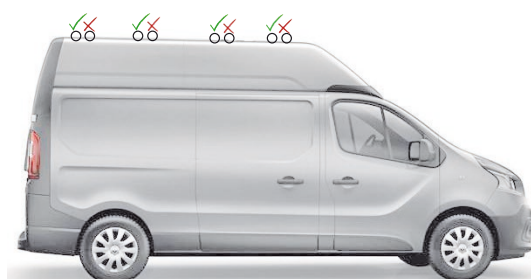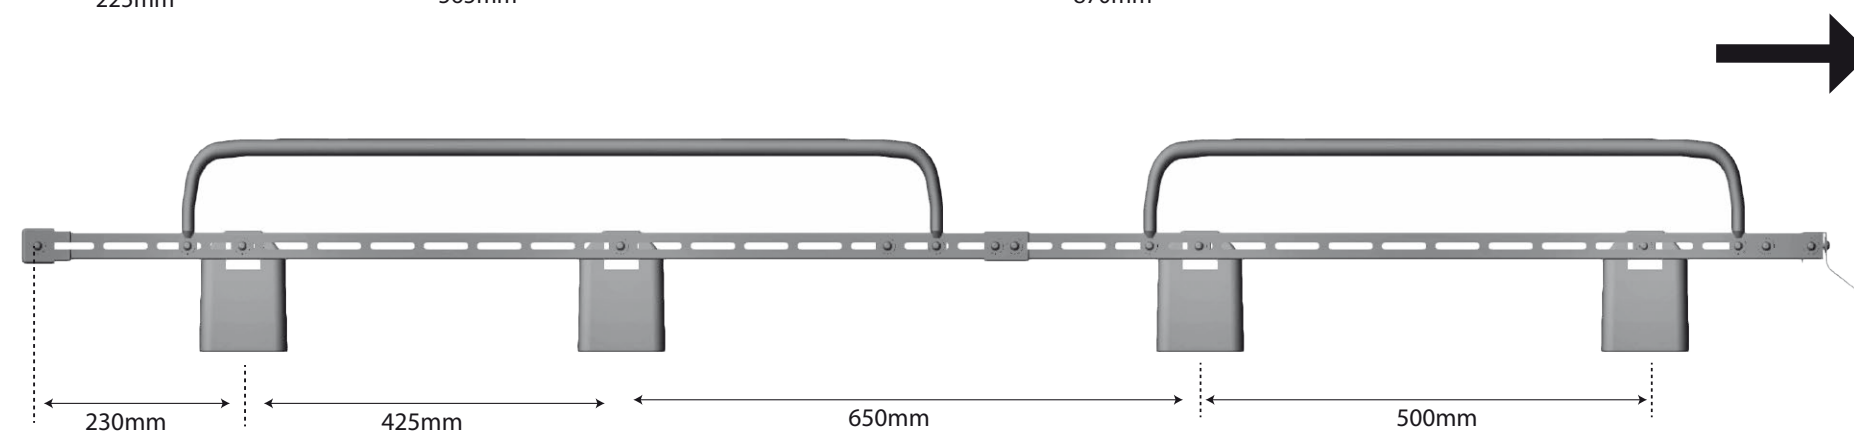


**NISSAN PRIMASTAR L1 H2 / OPEL VIVARO A L1 H2 /
RENAULT TRAFIC II L1 H2**

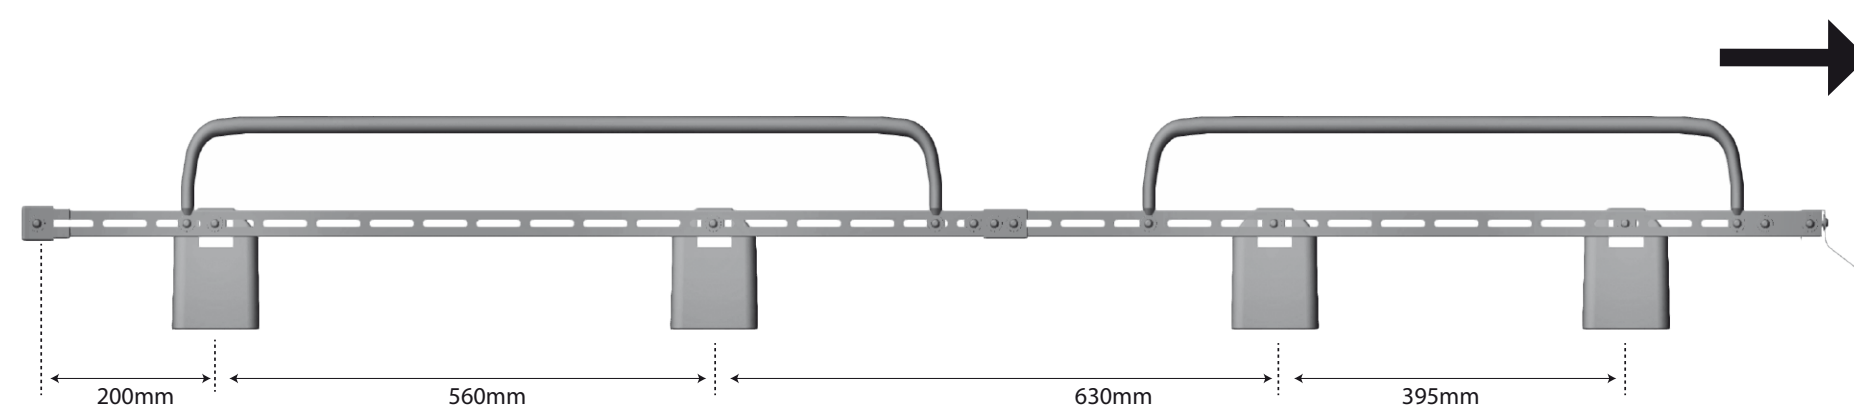


1

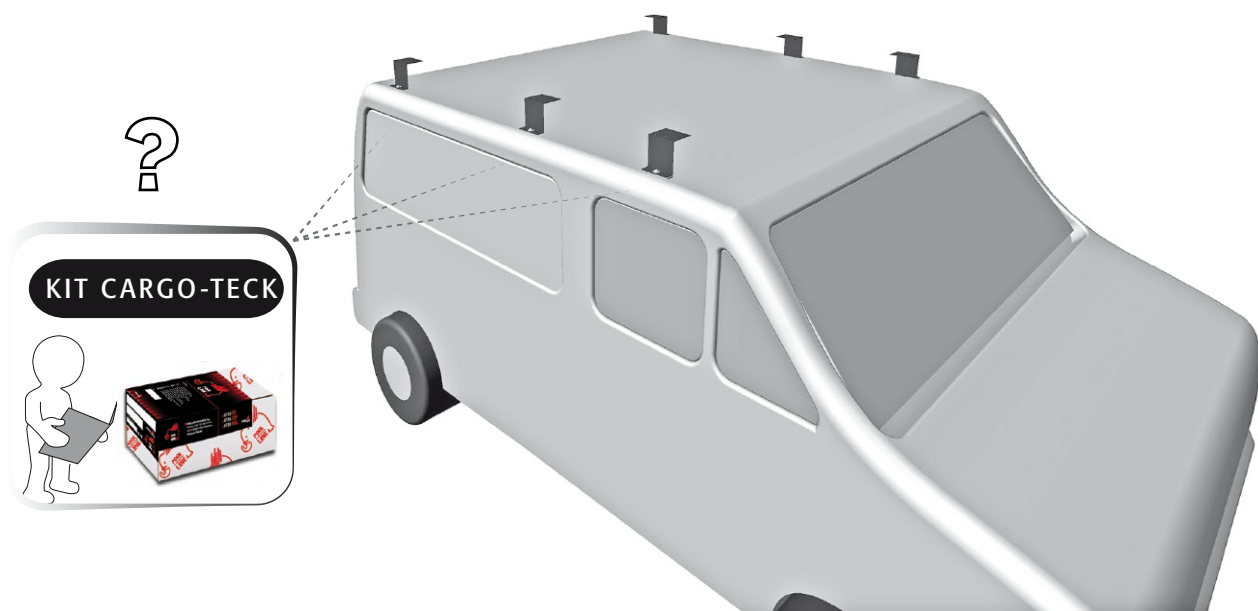


2

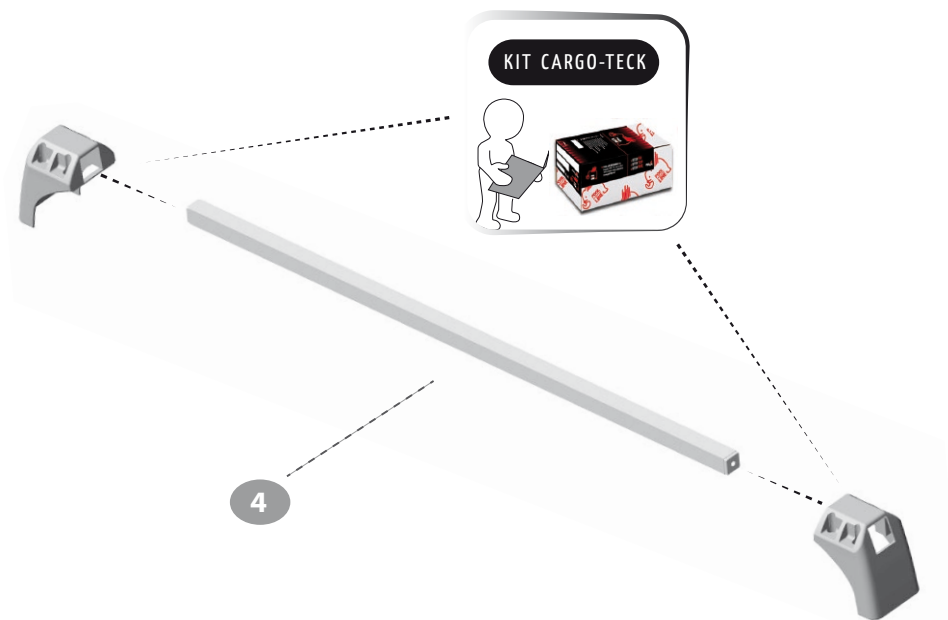


3

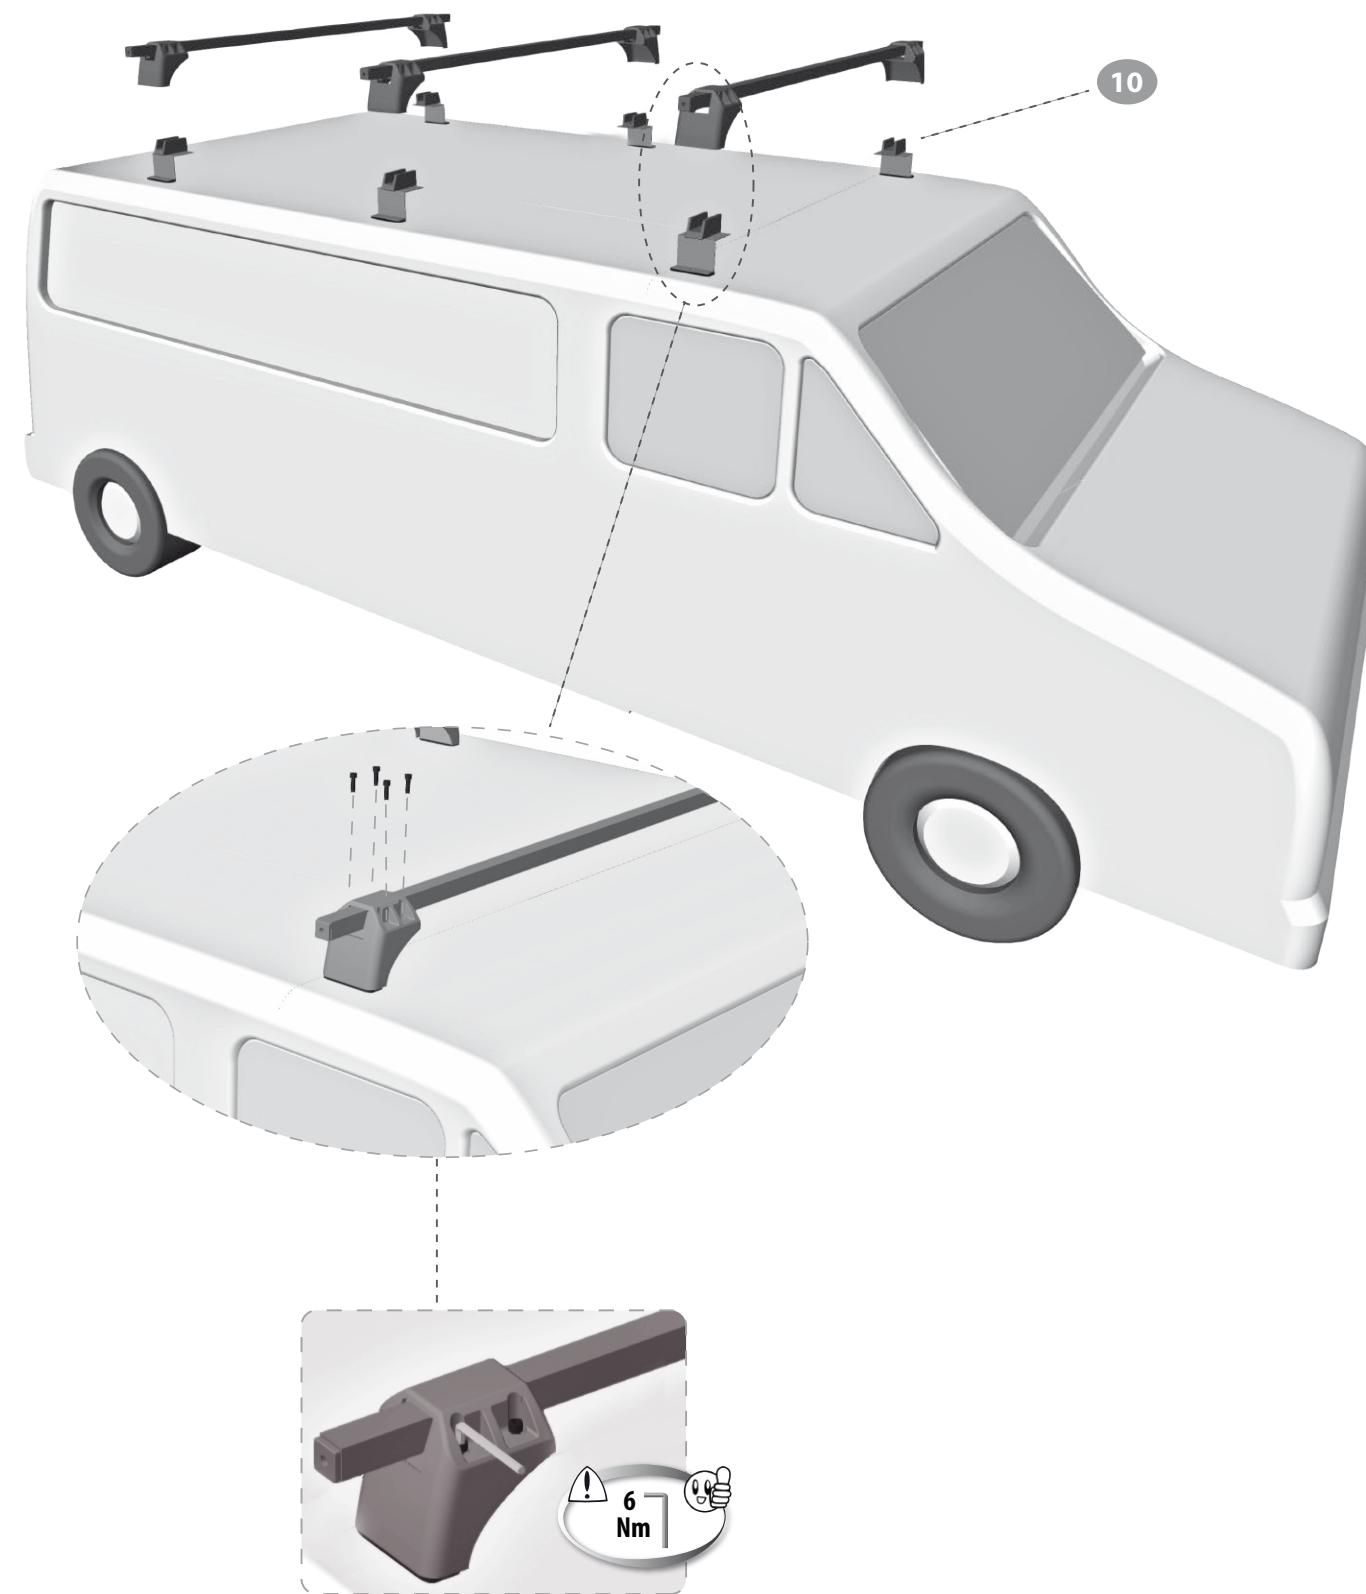


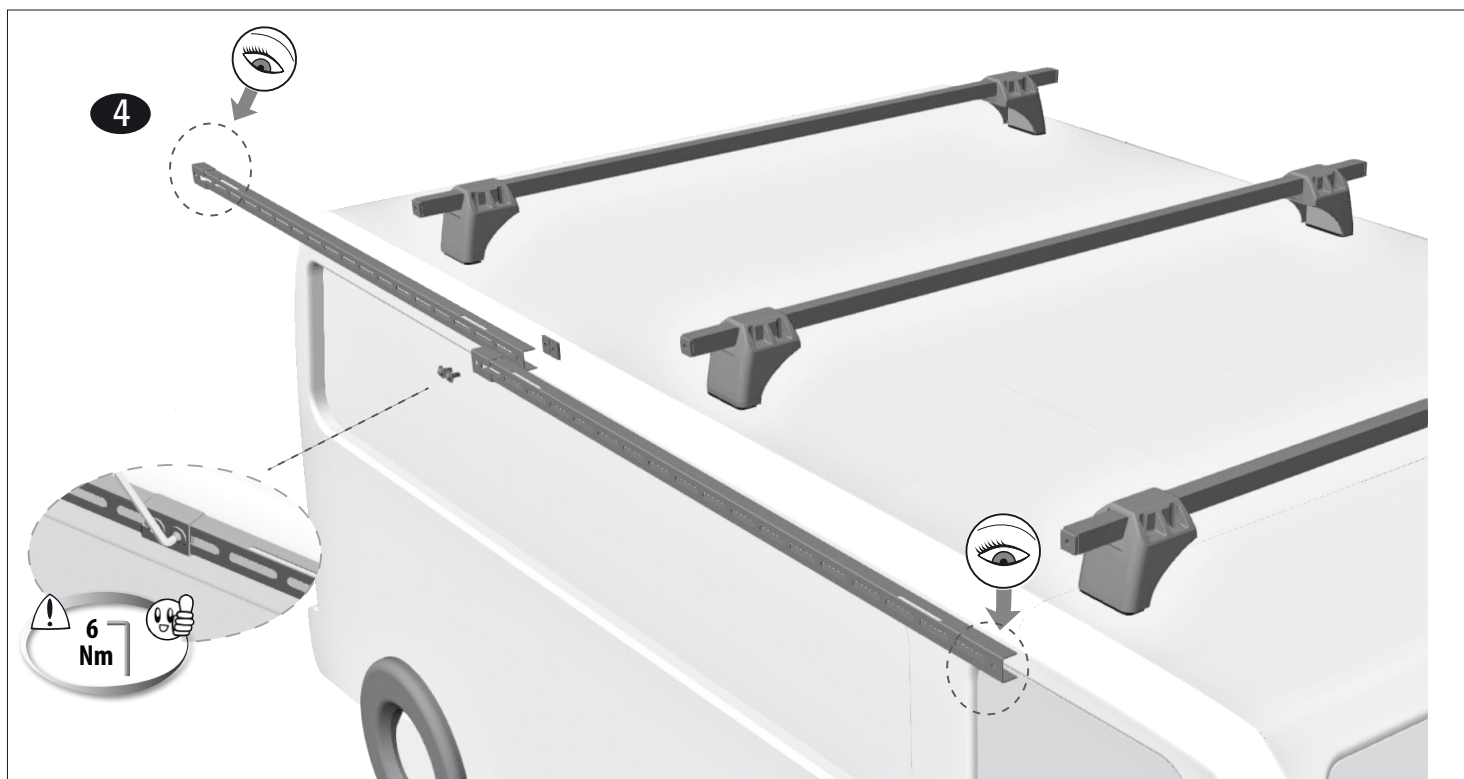


5

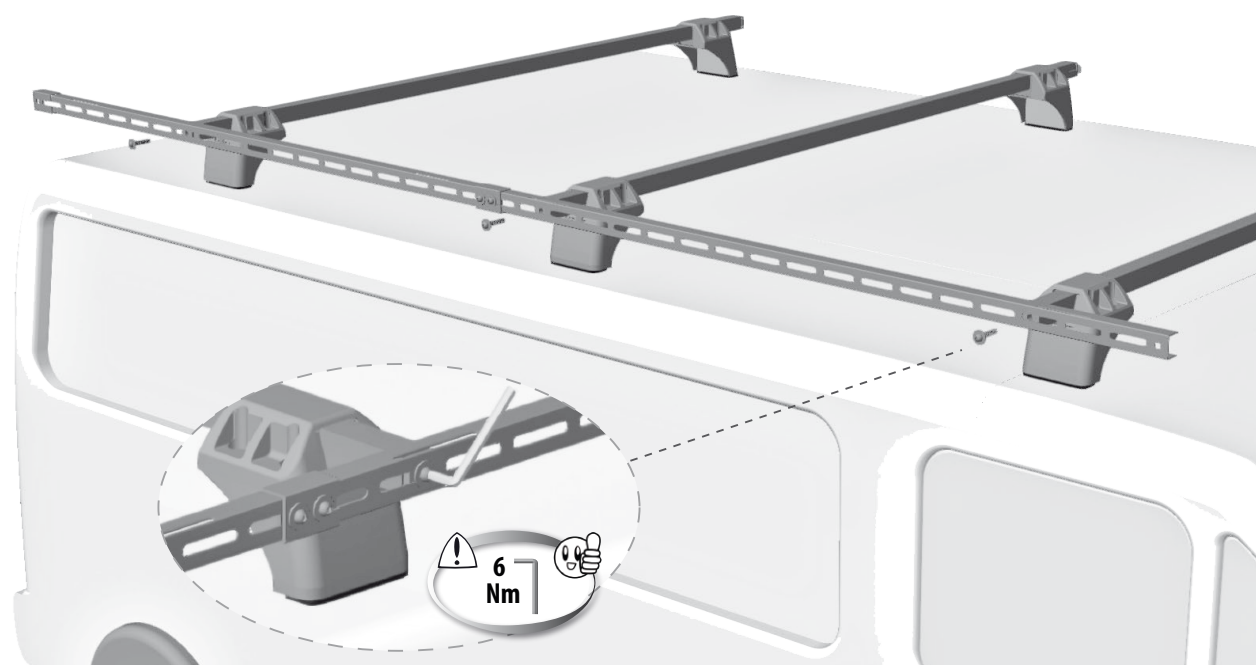


6

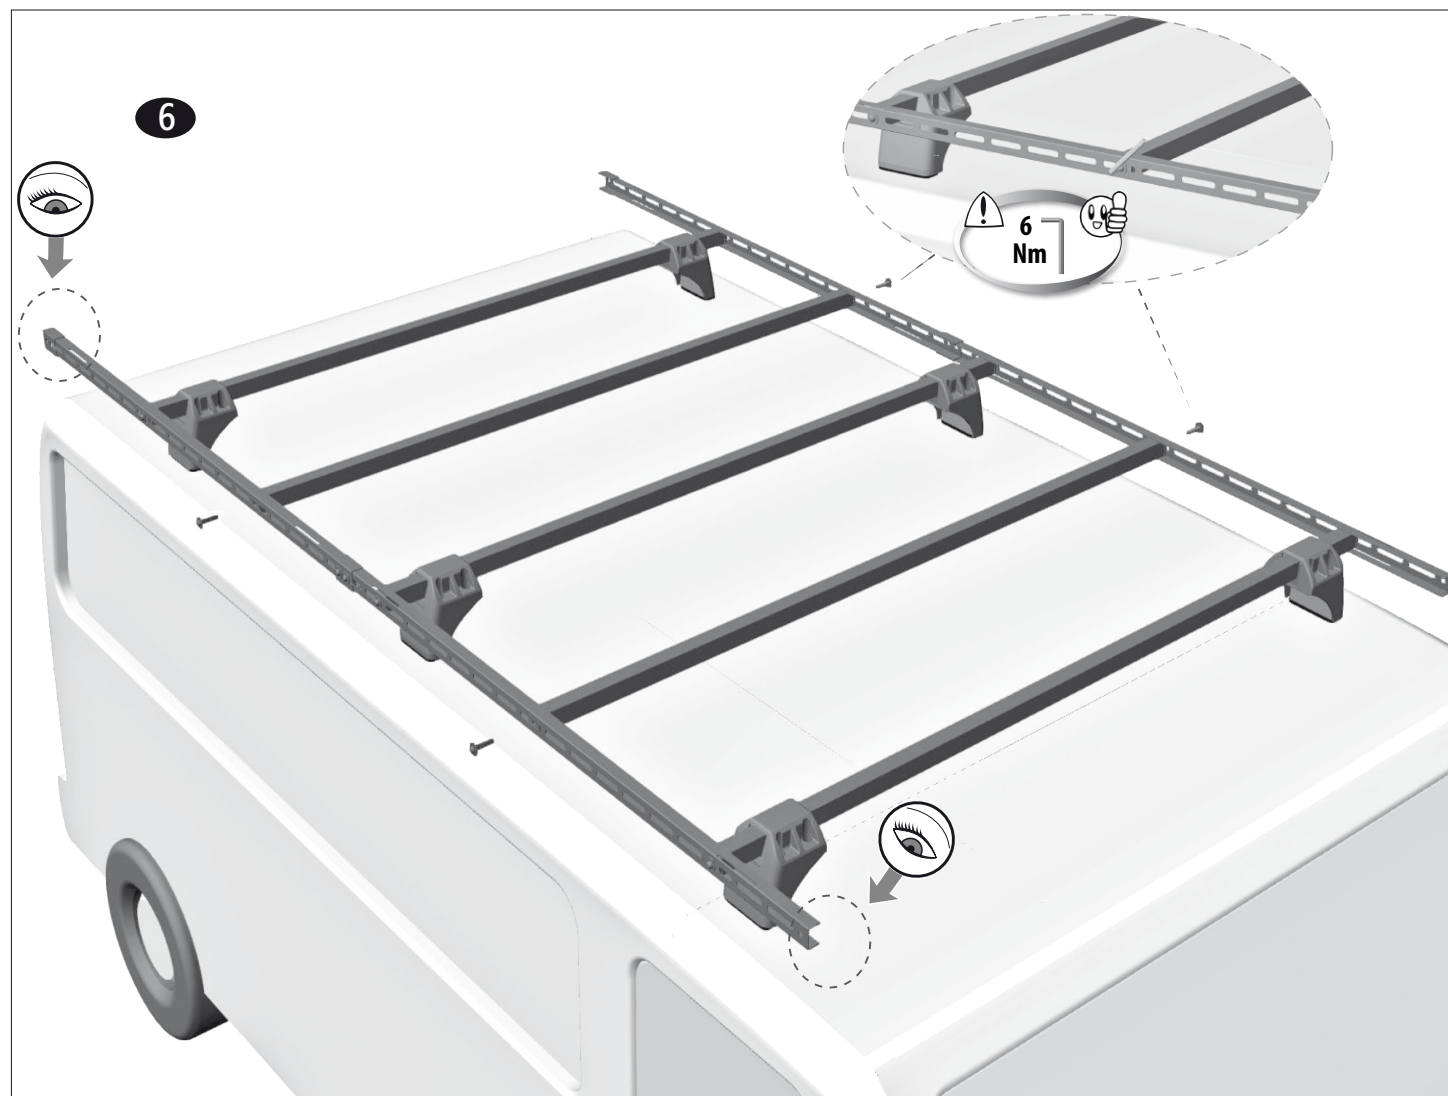



7

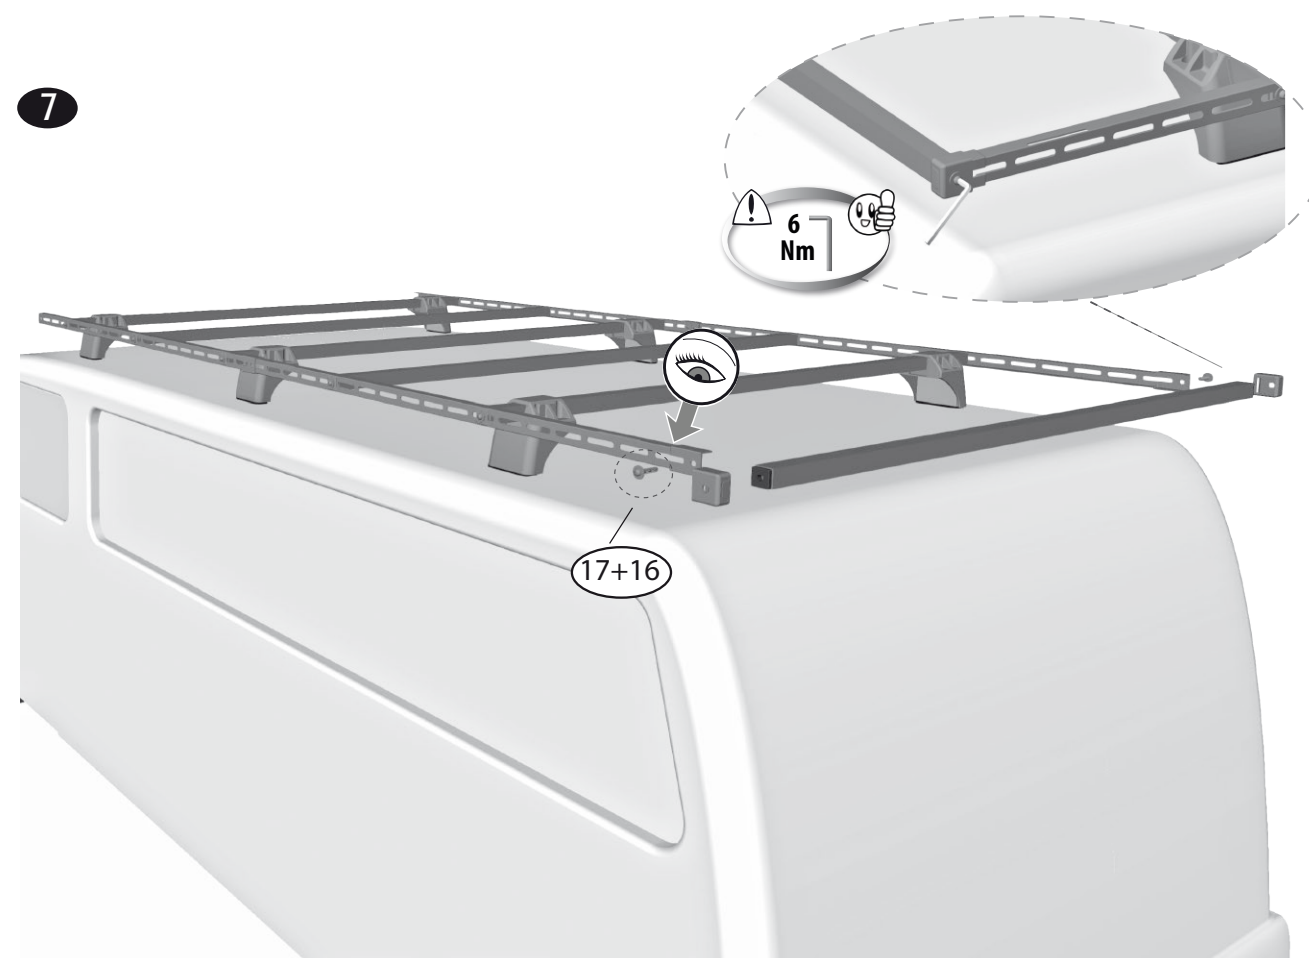











8

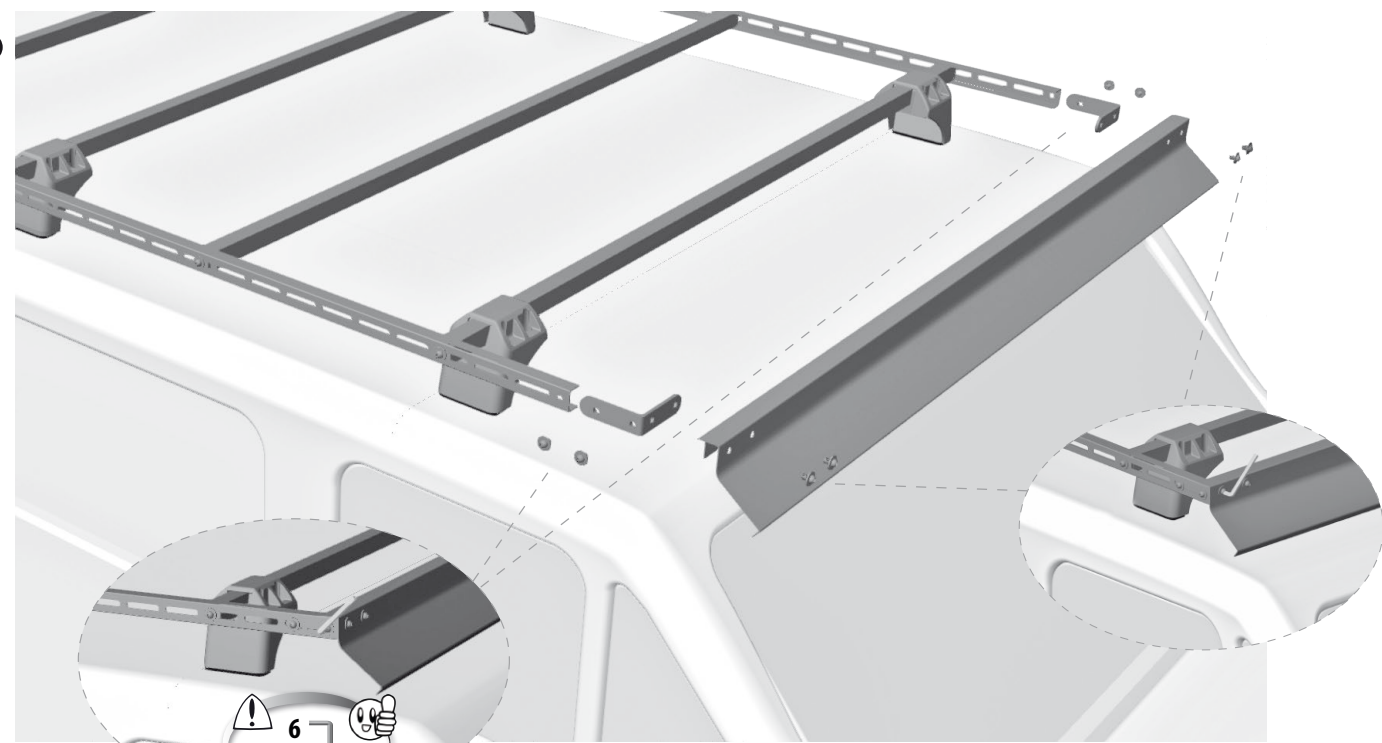



9

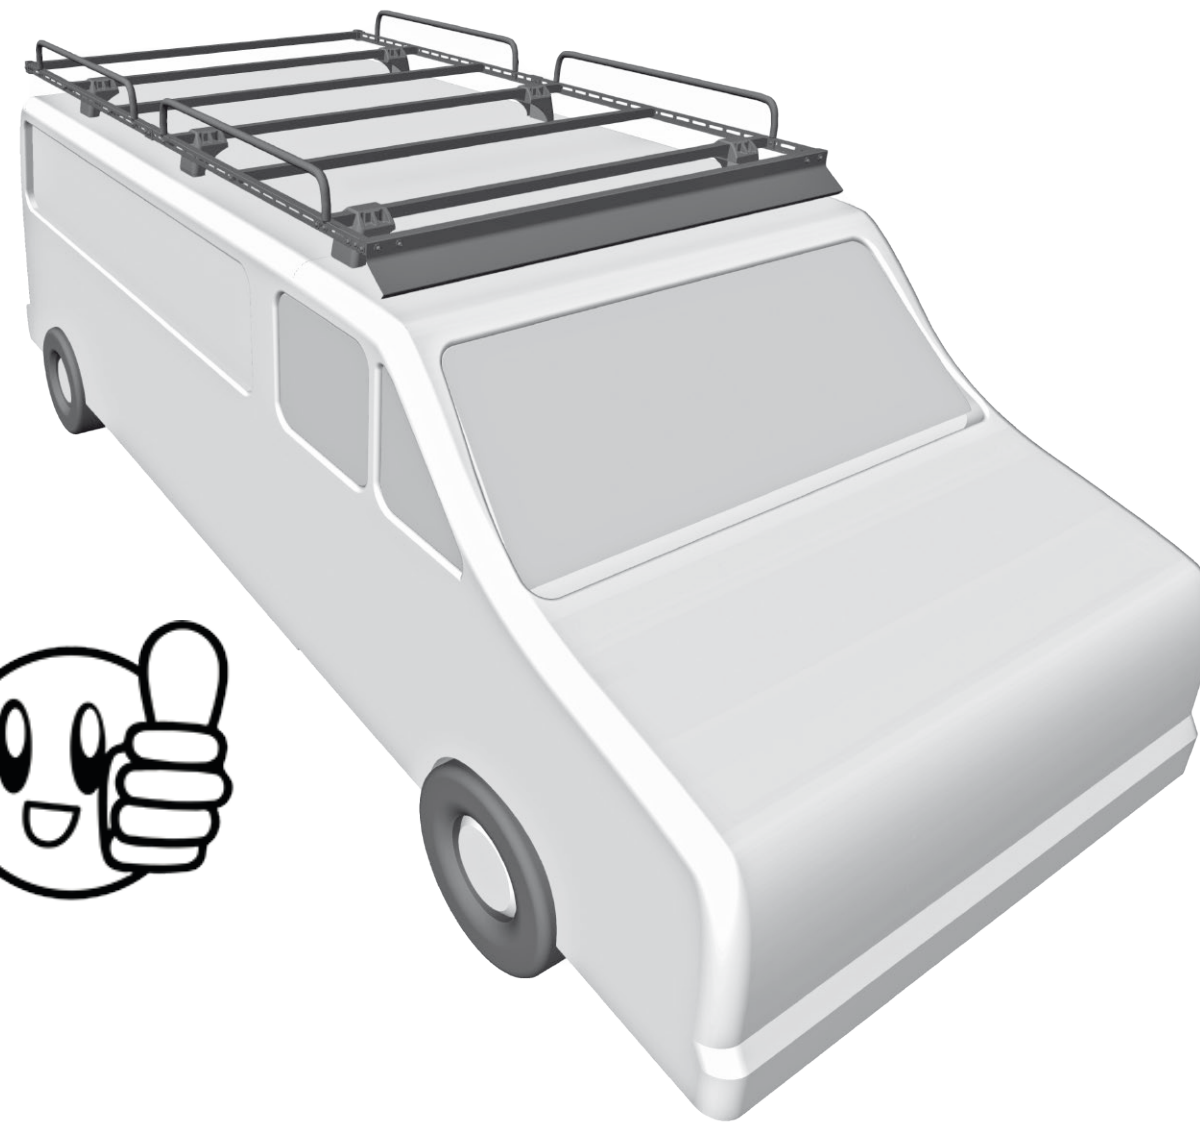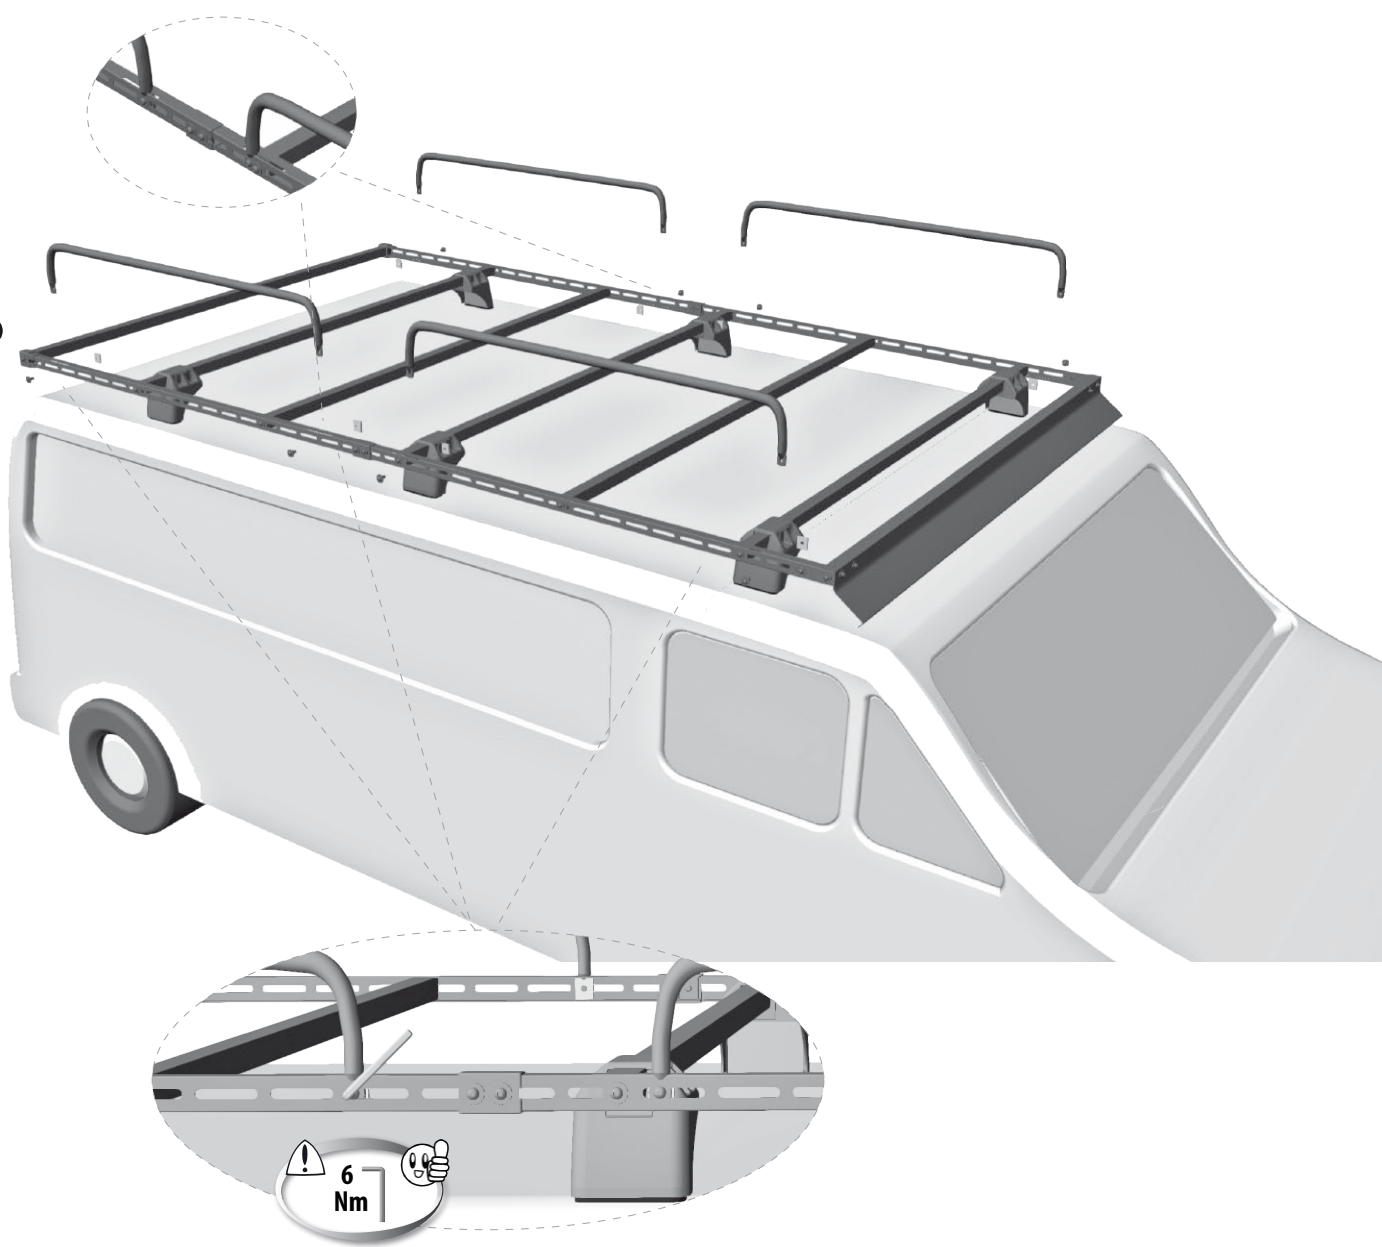

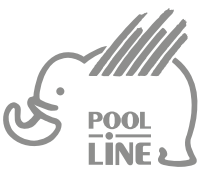

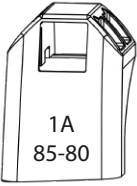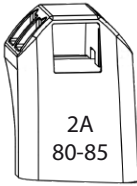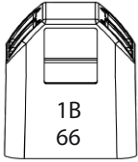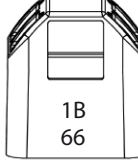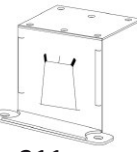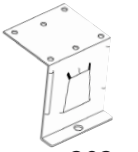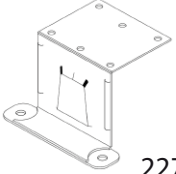N		Q		Q		Q
1	 	1+1		2		2
2	 	1+1		2		2
3		8				
4		2				
5		1				

N	BO0061	Q
8	 DIN912 M6x20	24
9	 DIN125	24

N	BO0005 x 5	Q
10	 DIN912 M6x20	10
11	 DIN9021	10

- E

Instrucciones de montaje

Kit de fijación
- C

Instruccions de muntatge

Kit de fixació
- GB

Assembly instrucctions

Fixation Kit
- F

Instruction de montage

Kit fixation
- D

Montageanleitung

Stützfuß-Kit
- PT

Instruções de montagem

Kit fixação
- I

Istruzioni di montaggio

Kit di fissaggio
- PL

Instrukcja montażu

Element mocujący
- CZ

Montážní návod

Fixační kit
- HU

Szerelési Utasítás

Rögzítő készlet
- RO

Instrucțiuni de montaj


Kit de fixare
- HR

Detaljne upute

Kit za montažu
- TU


Öncelikle montaj

Montaj kiti

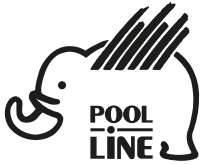




POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1043

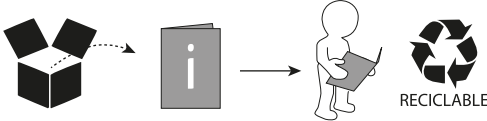

121041

Rv: 04/2024

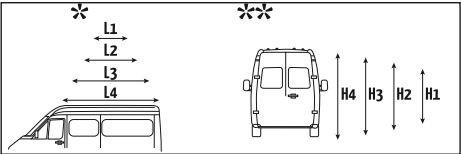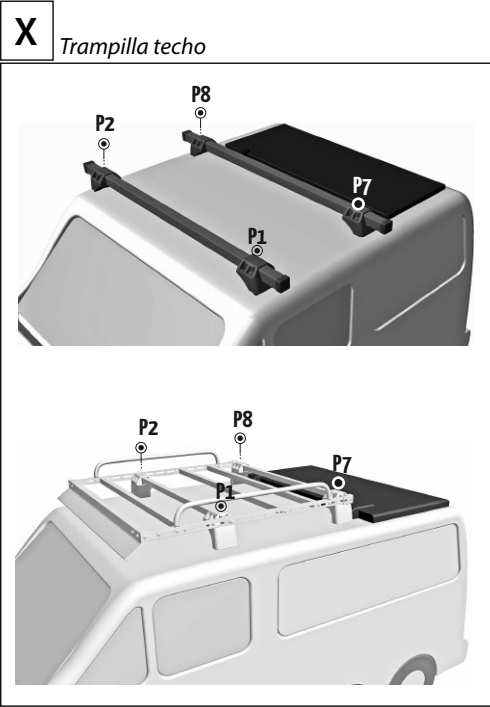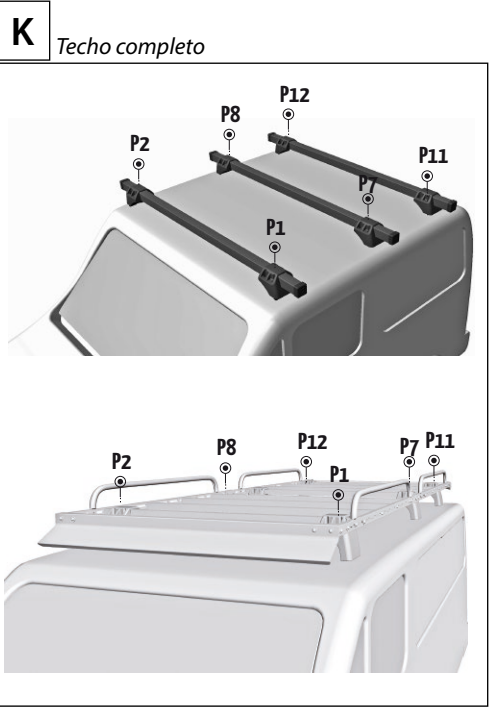


	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
FIAT																
DOBLO II	L1	H1	10-	800005	212+1A	211+2A					202+1B	202+1B			227+1B	227+1B
DOBLO II	L2	H1	10-	800005	212+1A	211+2A					202+1B	202+1B			227+1B	227+1B
DOBLO II (con trampilla)	L1	H1	10-	800005	212+1A	211+2A					202+1B	202+1B				
OPEL																
COMBO D	L1	H1	12-	800005	212+1A	211+2A					202+1B	202+1B			227+1B	227+1B
COMBO D	L2	H1	12-	800005	212+1A	211+2A					202+1B	202+1B			227+1B	227+1B
COMBO D (con trampilla)	L1	H1	12-	800005	212+1A	211+2A					202+1B	202+1B				



Limpieza pre-instalación

Pre-installation cleaning

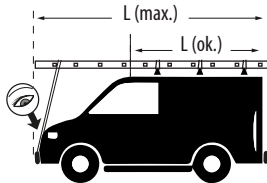

Revisar par de apriete

Check torque

