


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montazu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

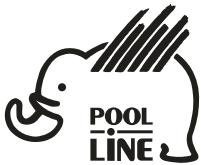

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net




200 **KG**
MAX.

Nº HOMOLOGACIÓN: **E9** 26R-03.1042




123413




Rv: 10/2024

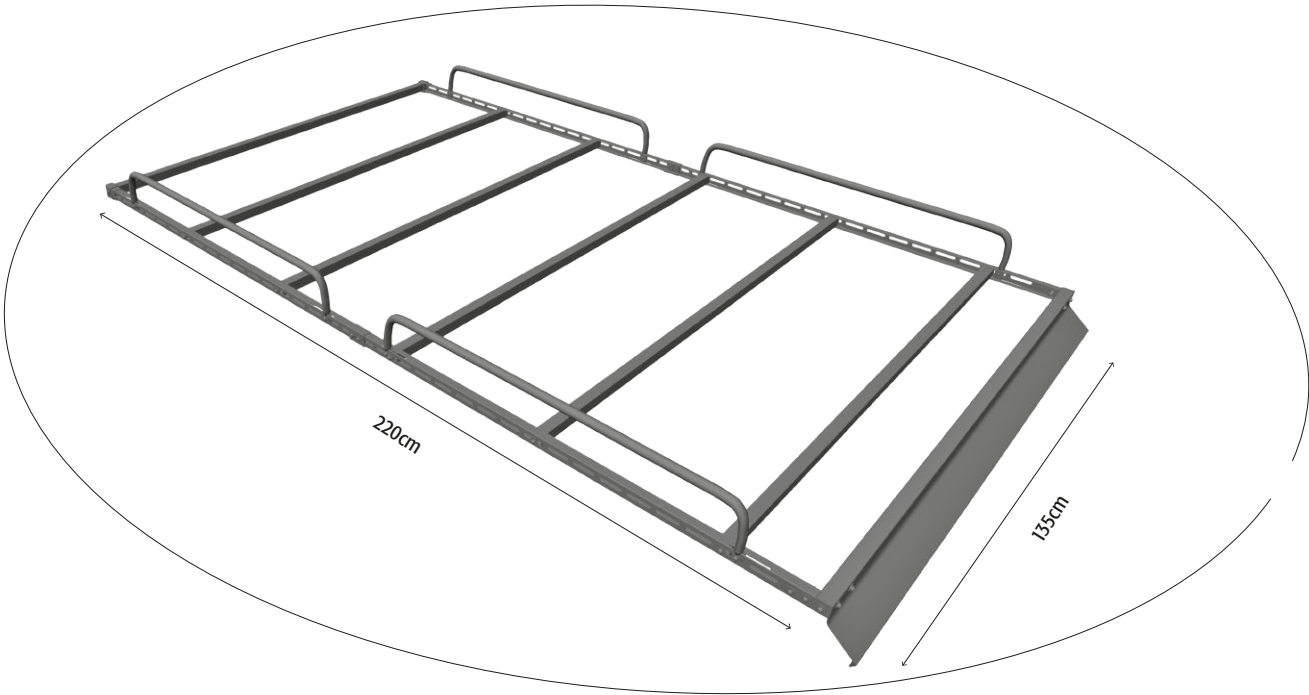


Limpeza pre-instalação
Pre-installation cleaning

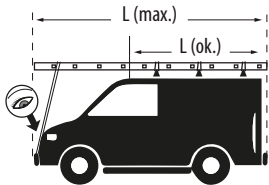

Revisar par de apriete
Check torque

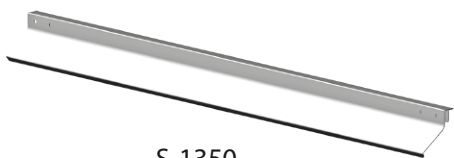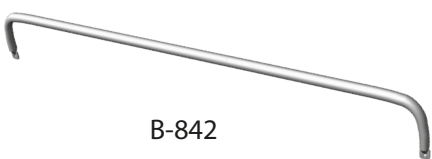N		Q
20	 S-1350	1
21		2
22	 L-1120	4
23	 B-842	4
24	 T-1335	6
25		12
26		2
27		8
28	 CHA-M8	12
29	 ISO 7380 M8x30	10
30	 ISO 7380 M8x16	20
31	 DIN 125 Ø 8	32
32	 ISO 7380 M8x 40	2

N		Q
32		1

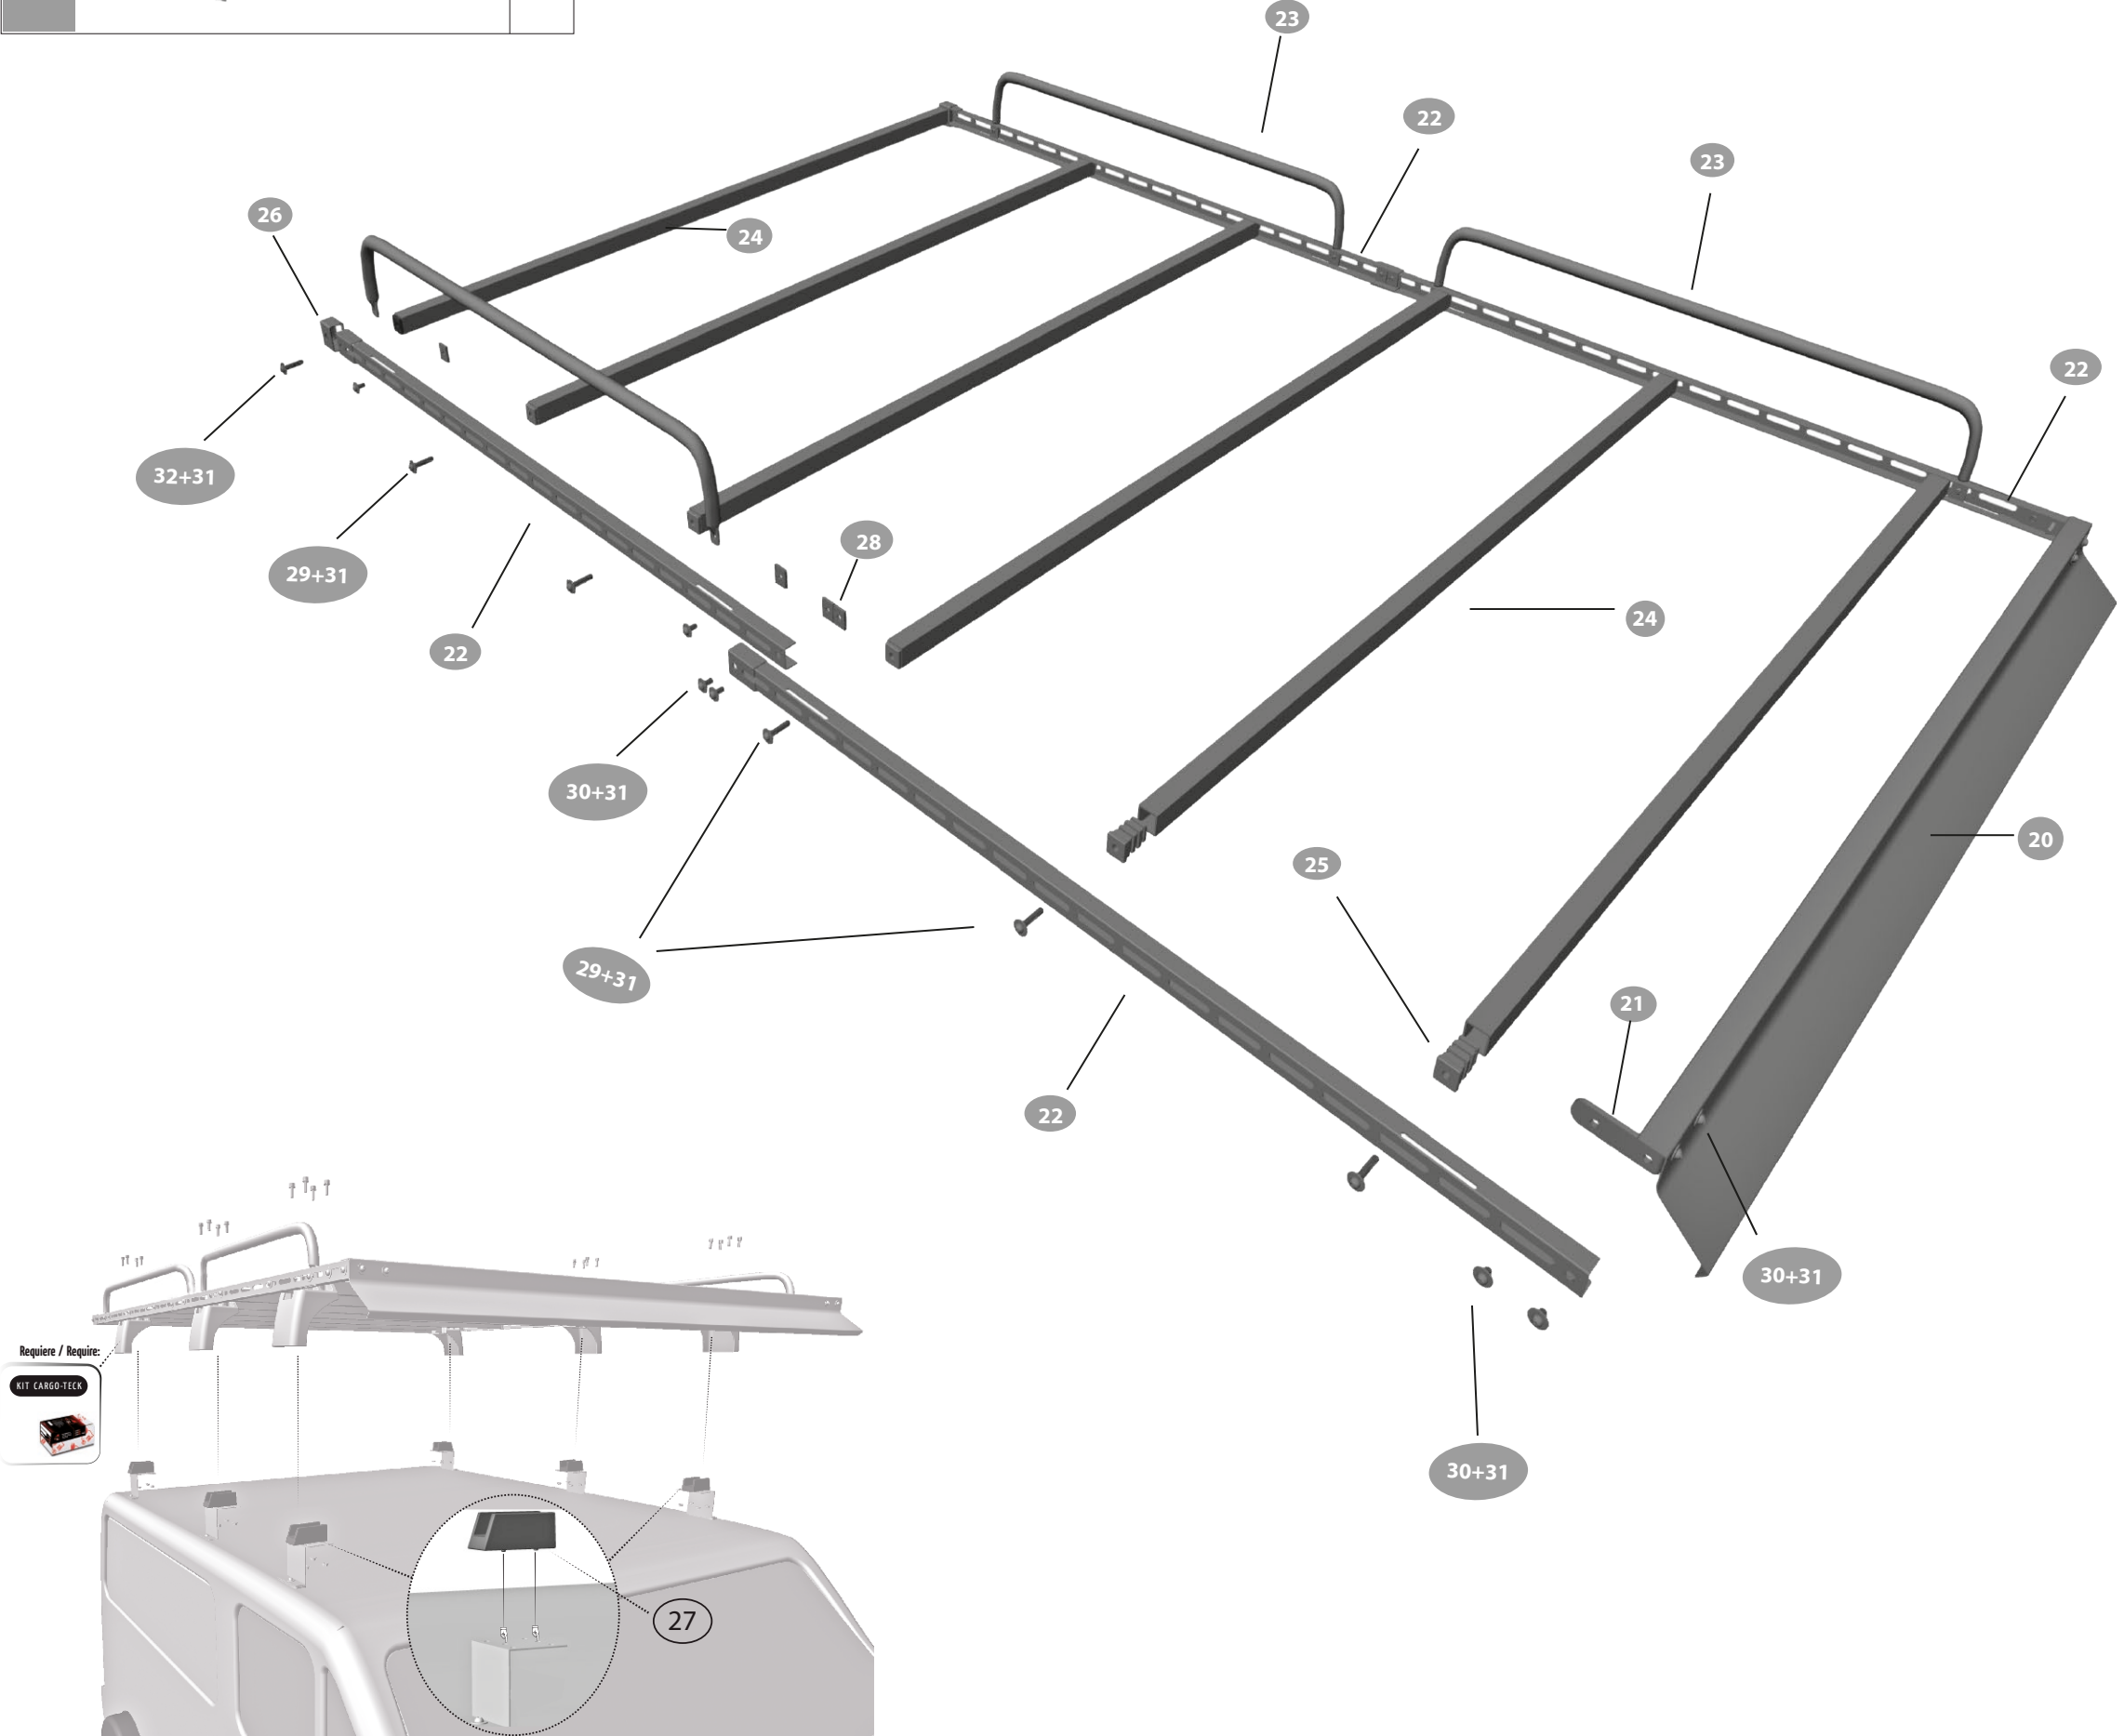





Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone




• CITROËN BERLINGO II L1 H1 (08-18)
• PEUGEOT PARTNER II L1 H1 (08-18)

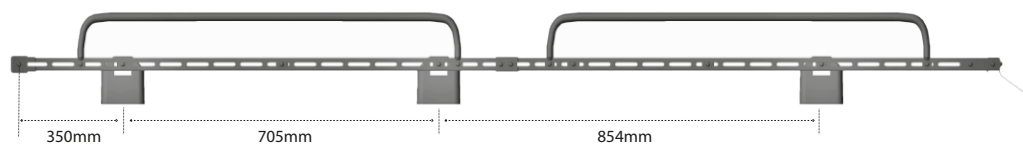


• CITROËN BERLINGO III (M) L1 H1 (2018->)
• FIAT DOBLÓ III / K9 (M) L1 H1 (2022->)
• OPEL COMBO E (M) L1 H1 (2018->)
• PEUGEOT PARTNER III (M) L1 H1 (2018->)
• TOYOTA PROACE CITY L1 H1 (2018->)

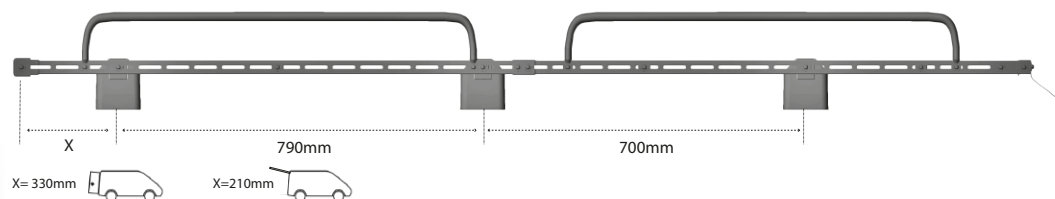


• CITROËN JUMPY II L1 H1 (07-13)
• FIAT SCUDO II L1 H1 (07-13)
• PEUGEOT EXPERT II L1 H1 (07-13)
• TOYOTA PROACE II L1 H1 (2013->)

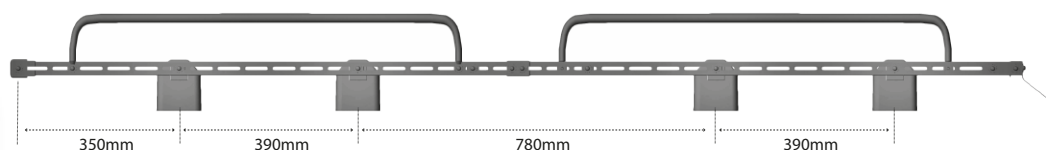


• NISSAN NV 200 (2009->)

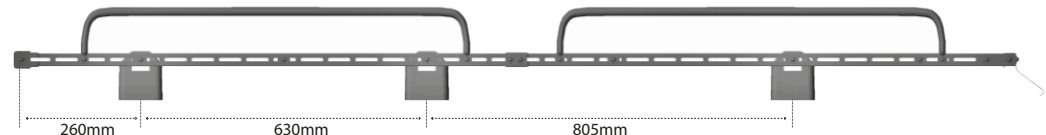


• FIAT DOBLÓ I L2 H1 (2007-2009)

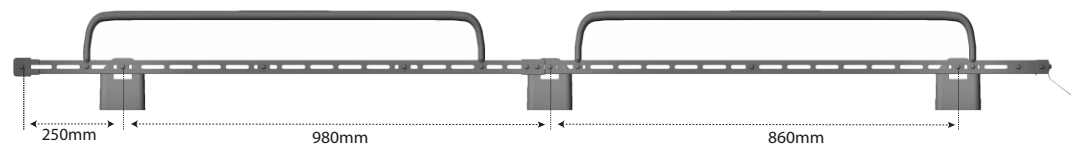


• FIAT DOBLÓ II L2 H1 (2010->)
• OPEL COMBO D L2 H1 (12-18)

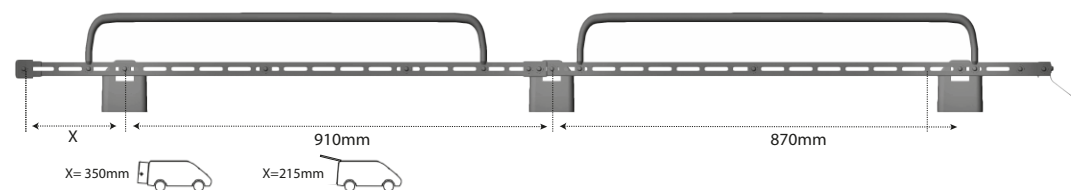

• TOYOTA LAND CRUISER J80 (90-97)

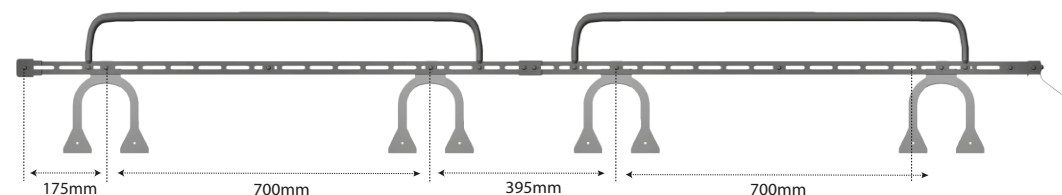


• VOLKSWAGEN ID. BUZZ L1-H1 (2022->)

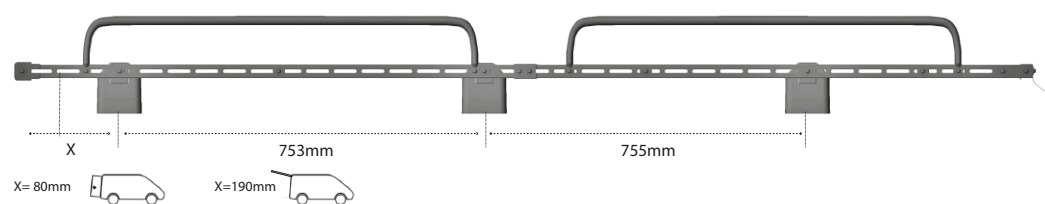


Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone



1

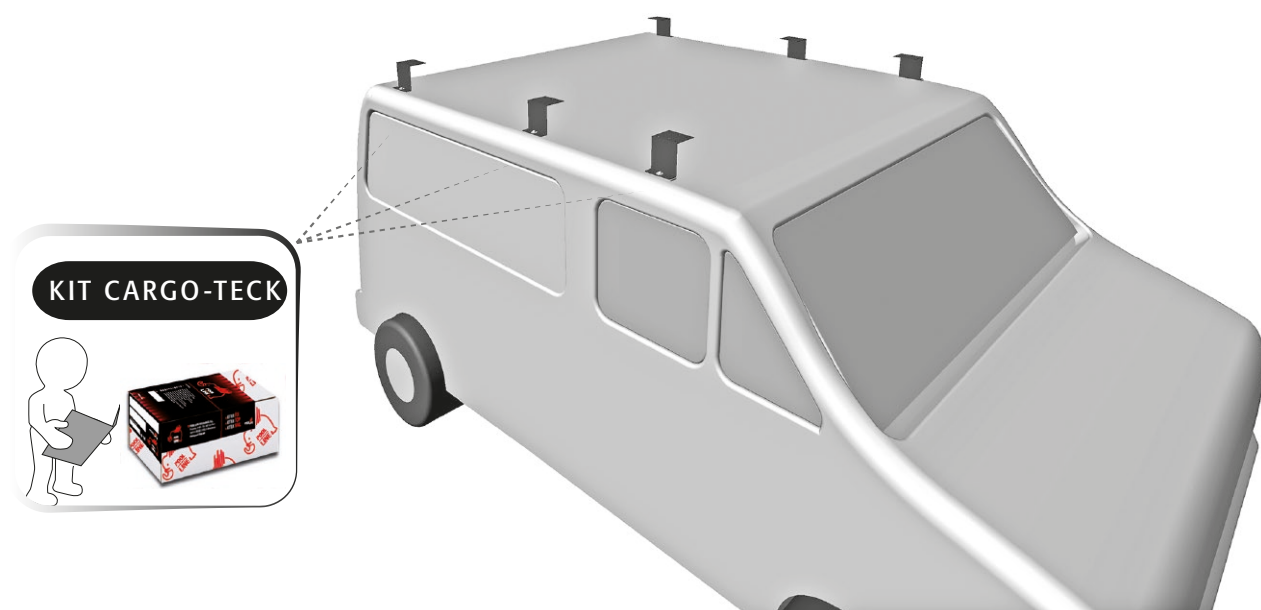


2

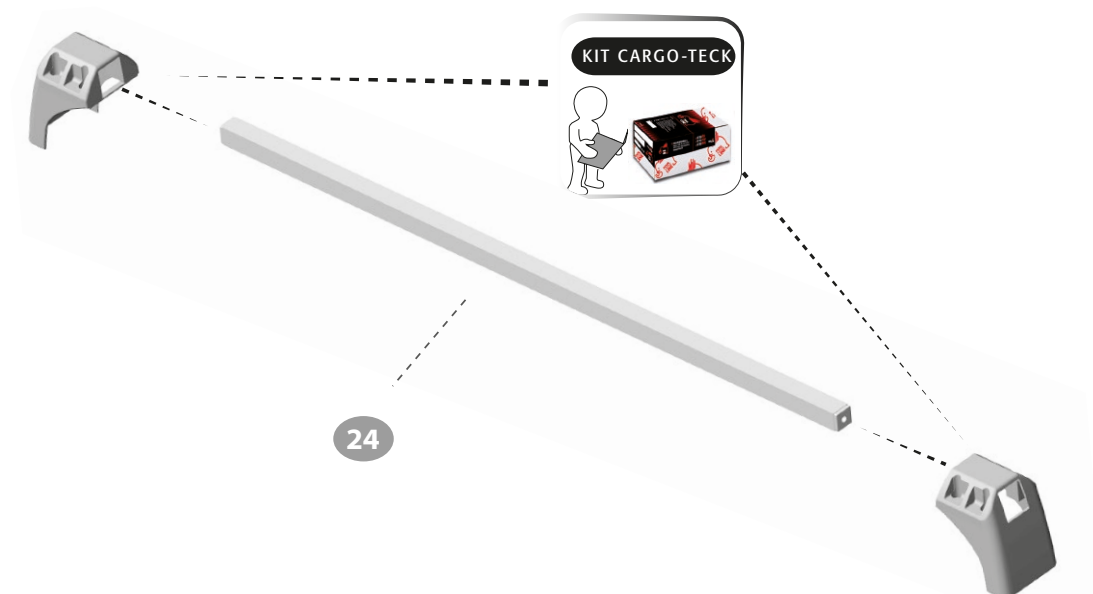


3

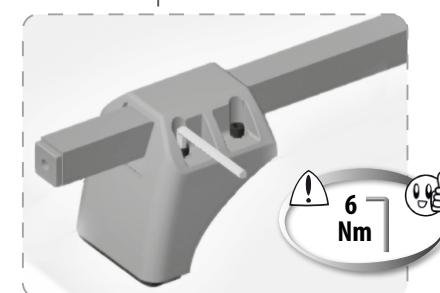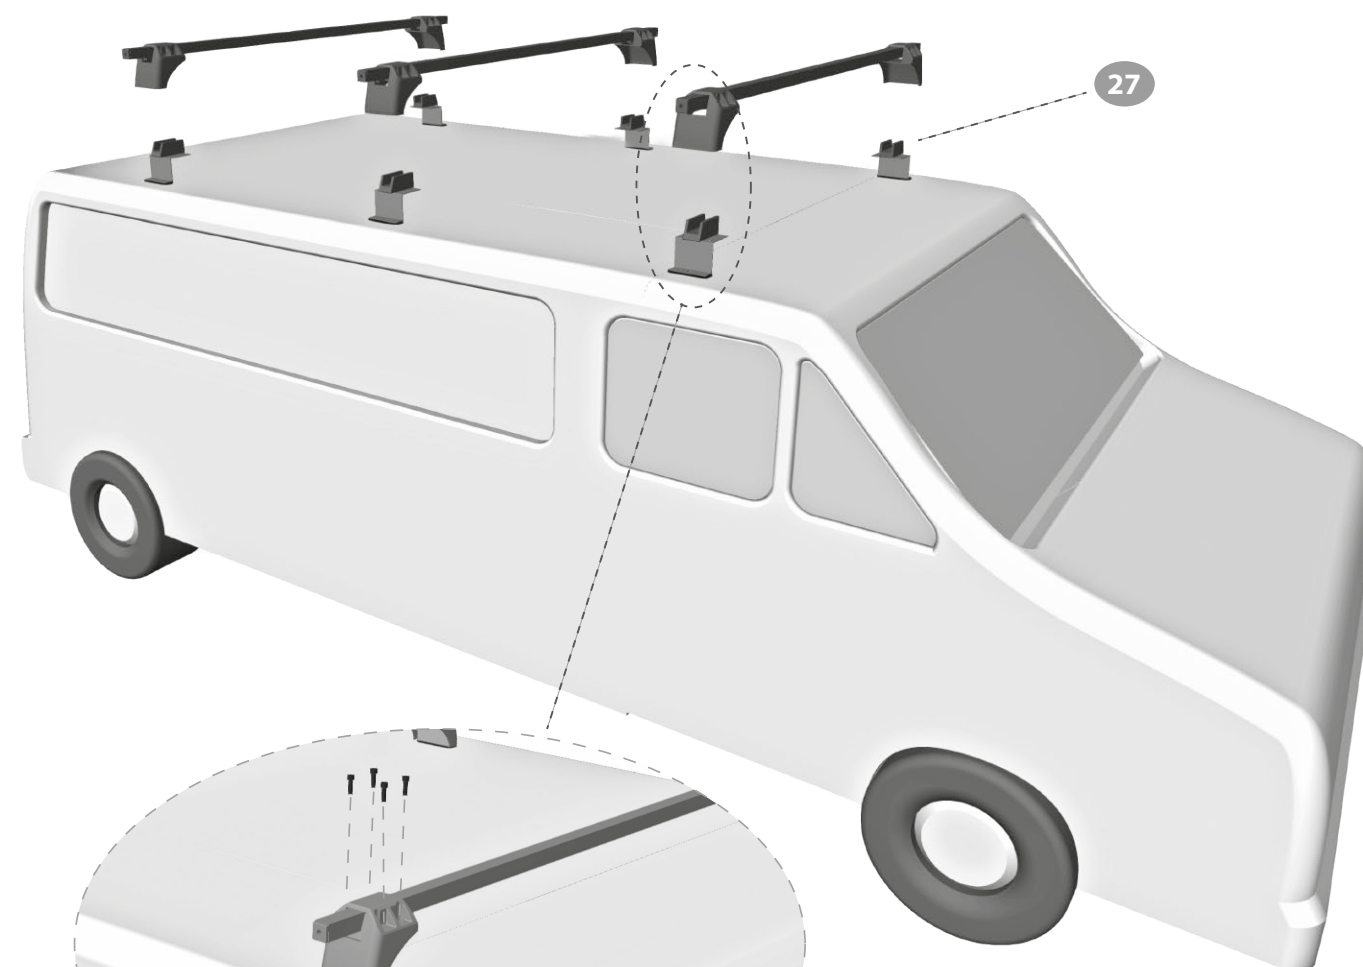


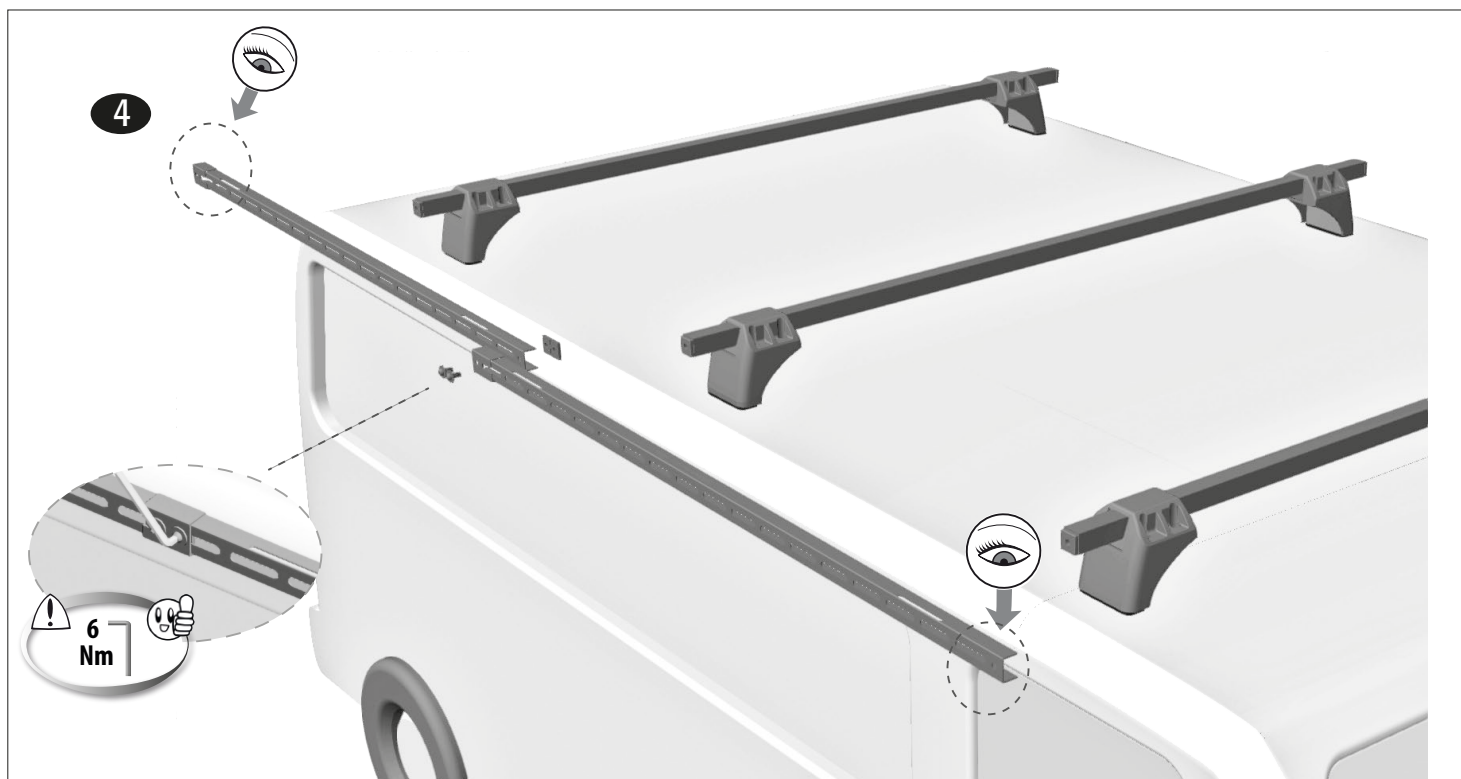


5

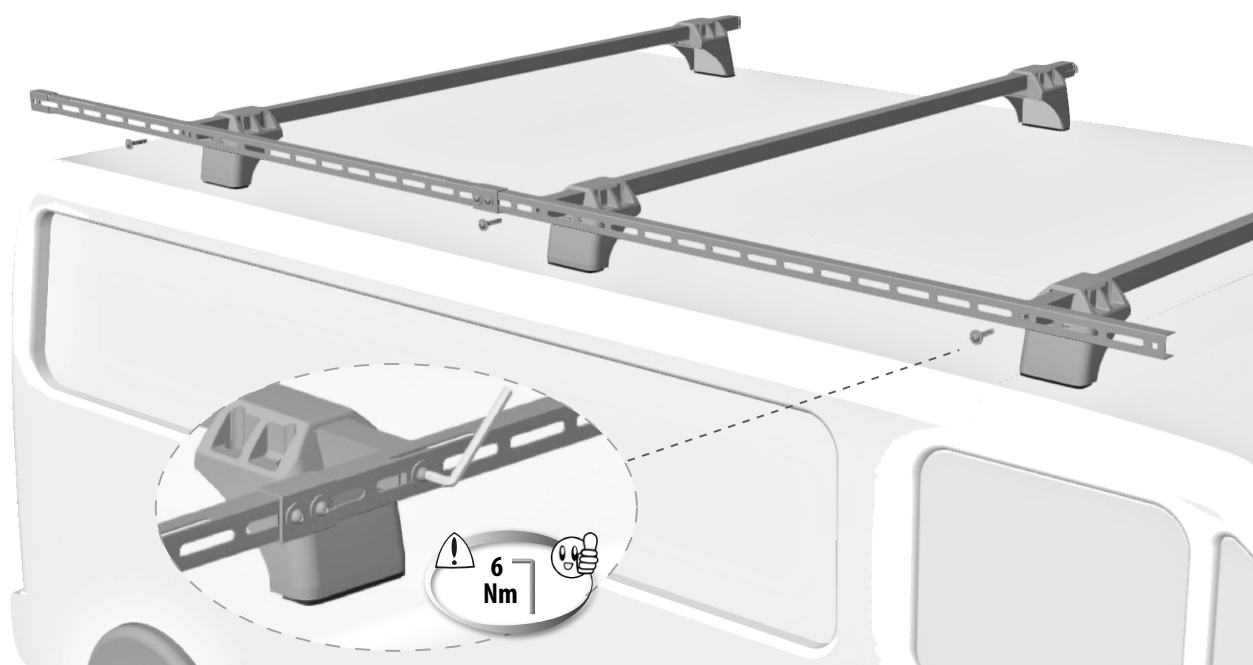


6

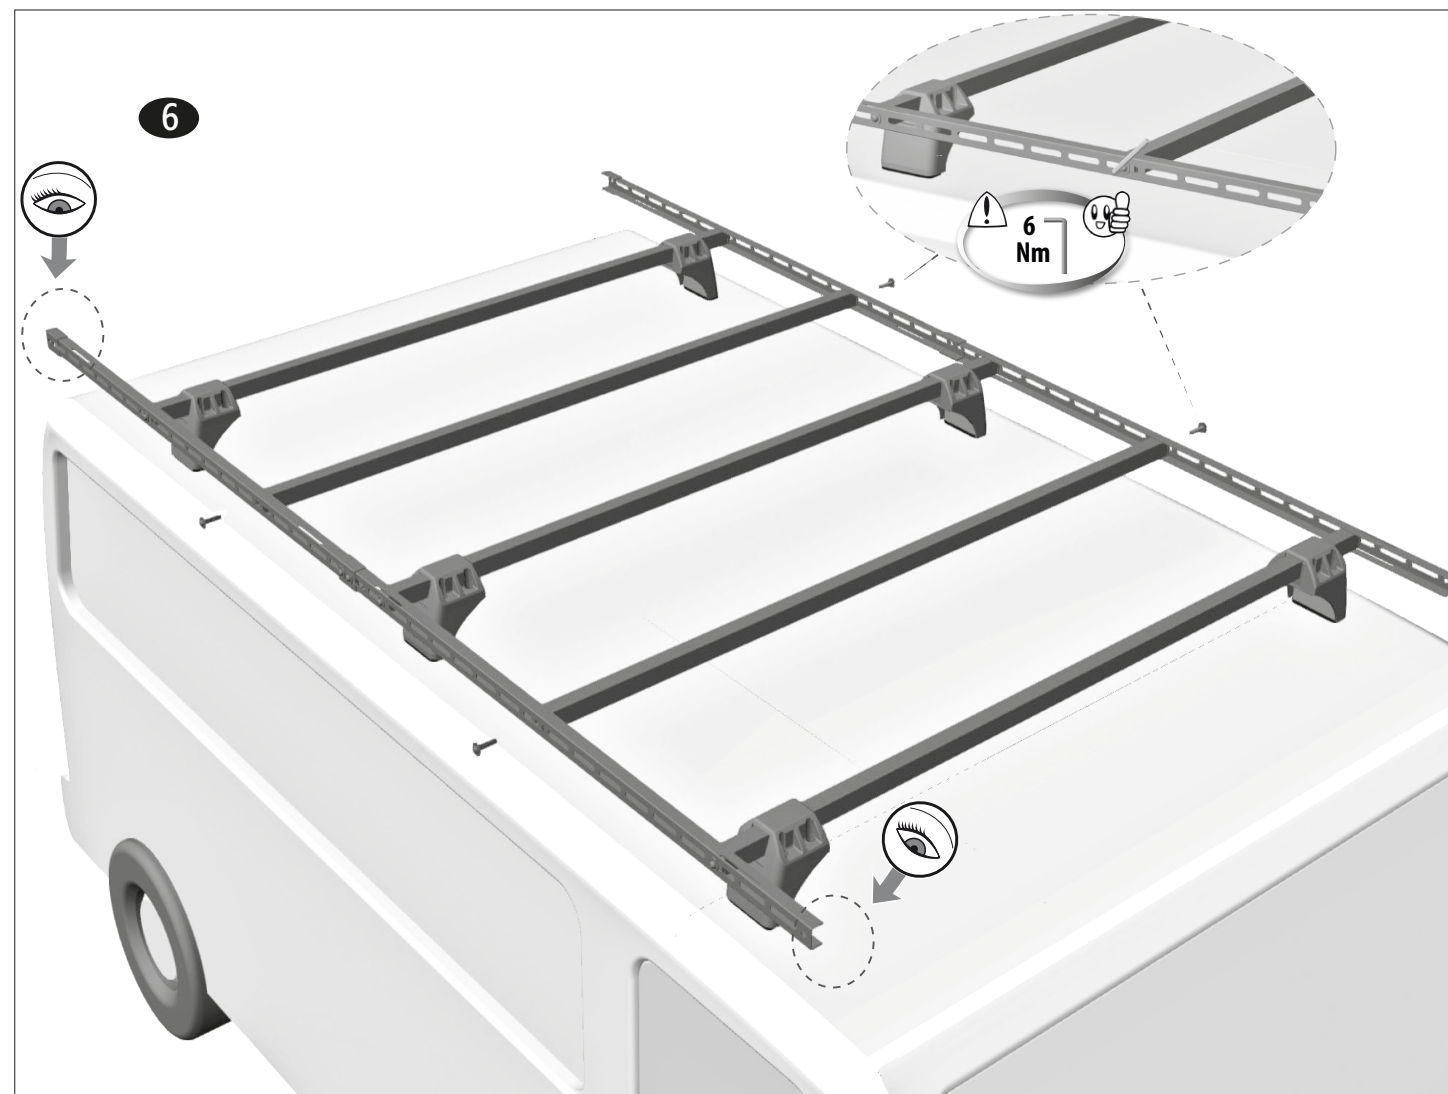



7









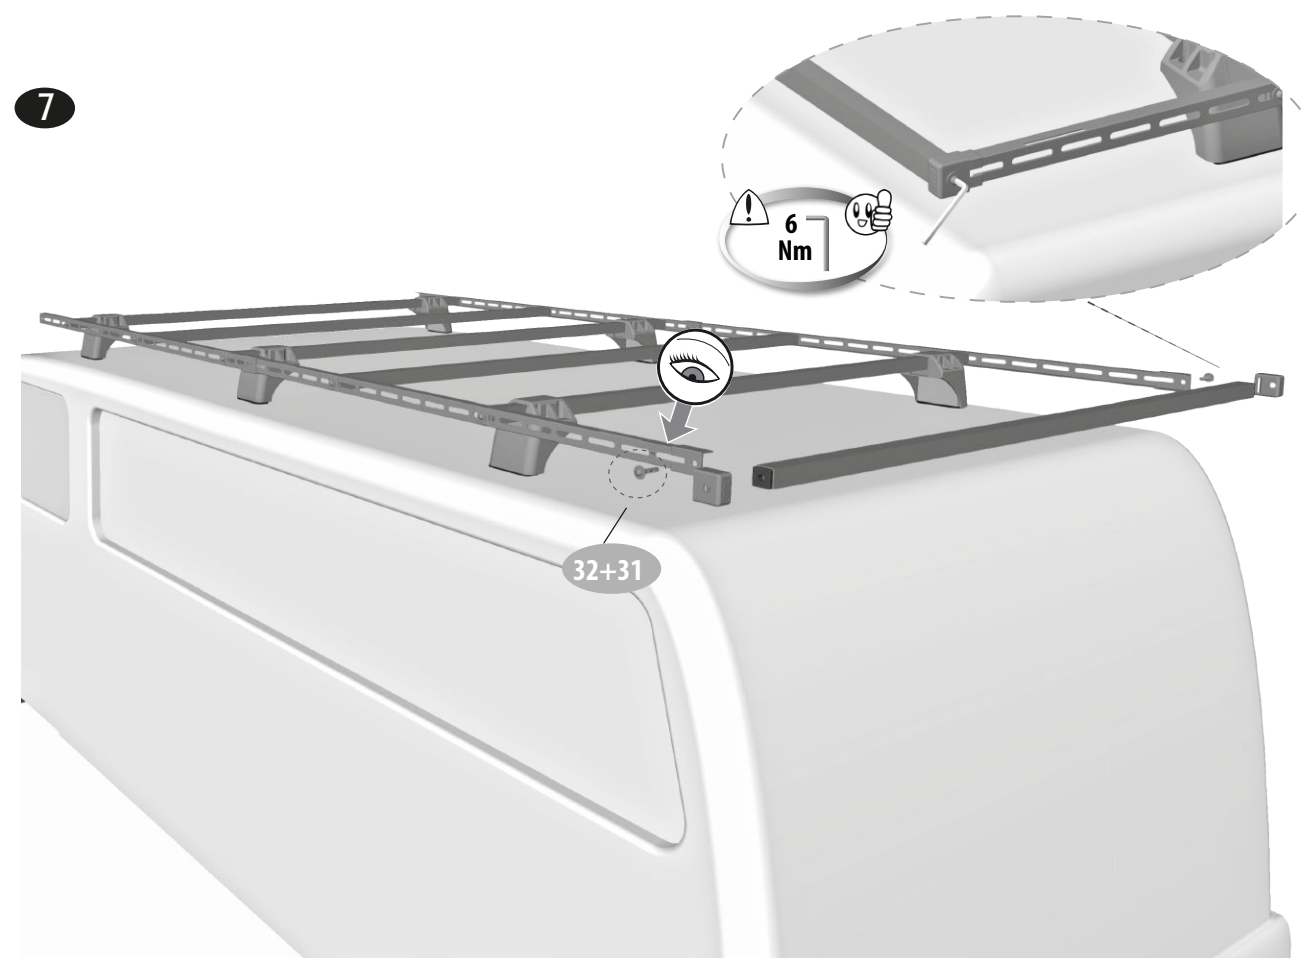



8

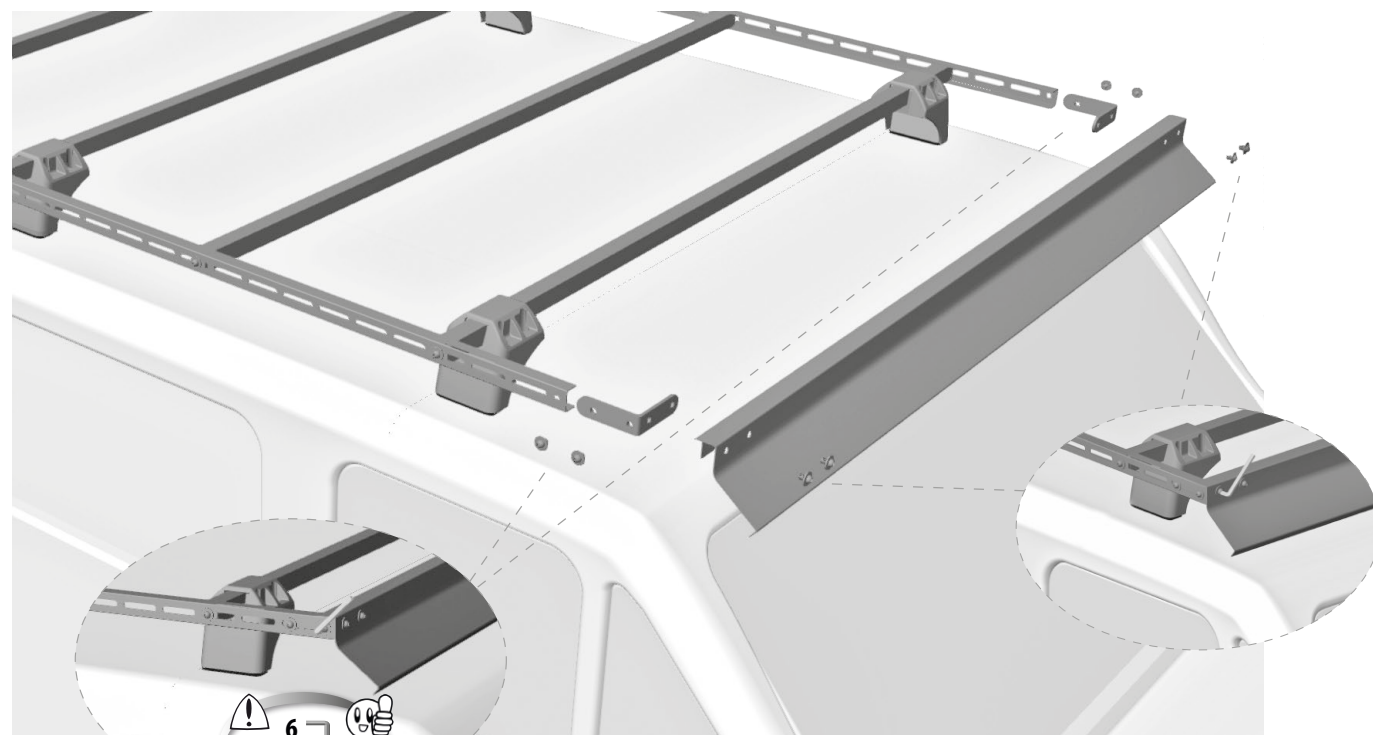


9

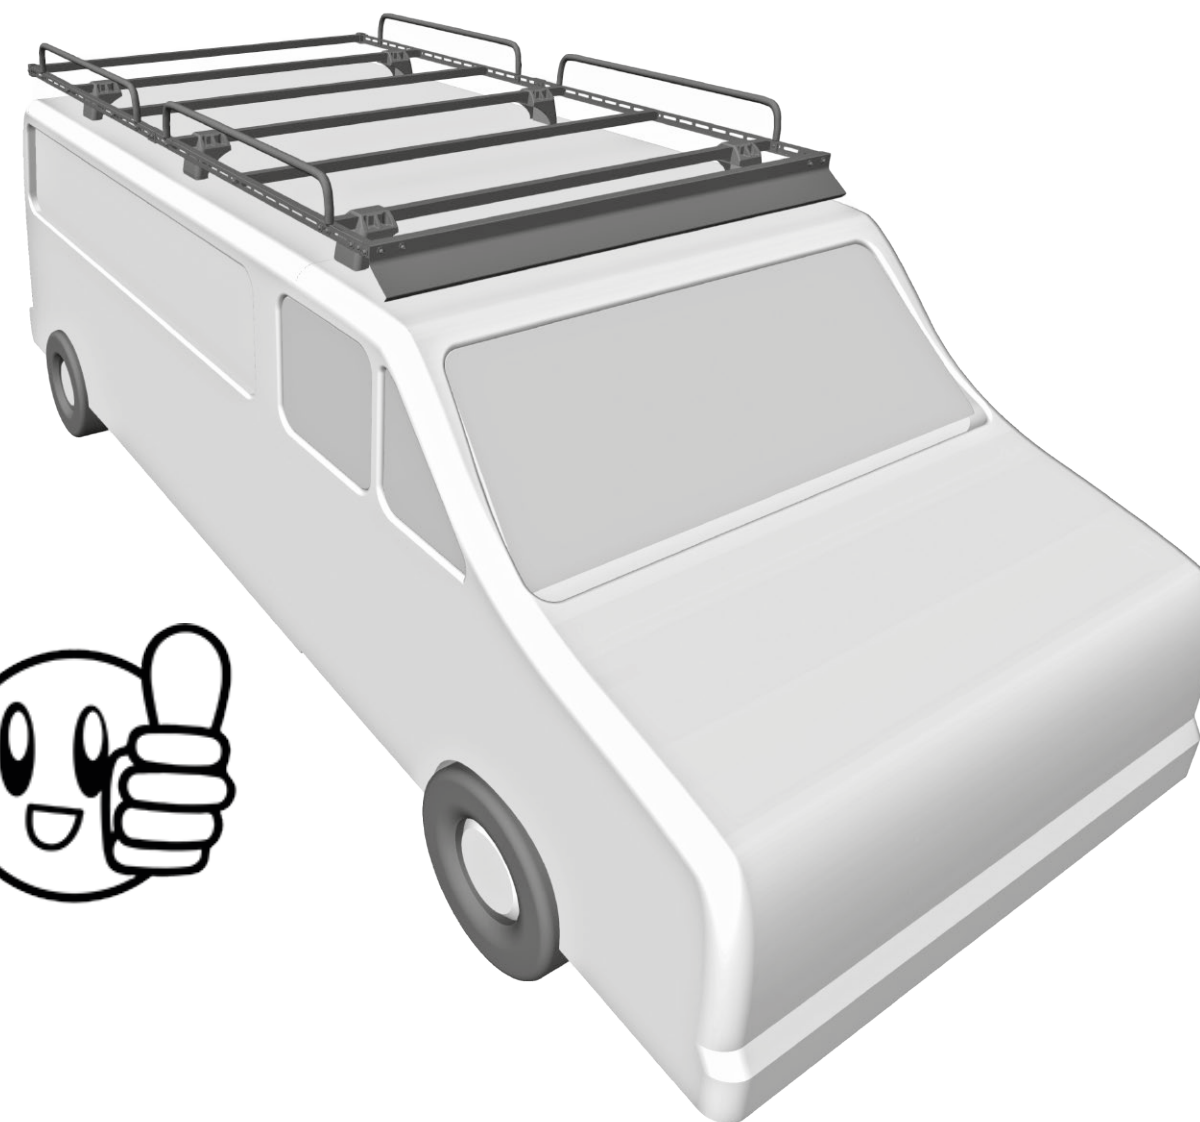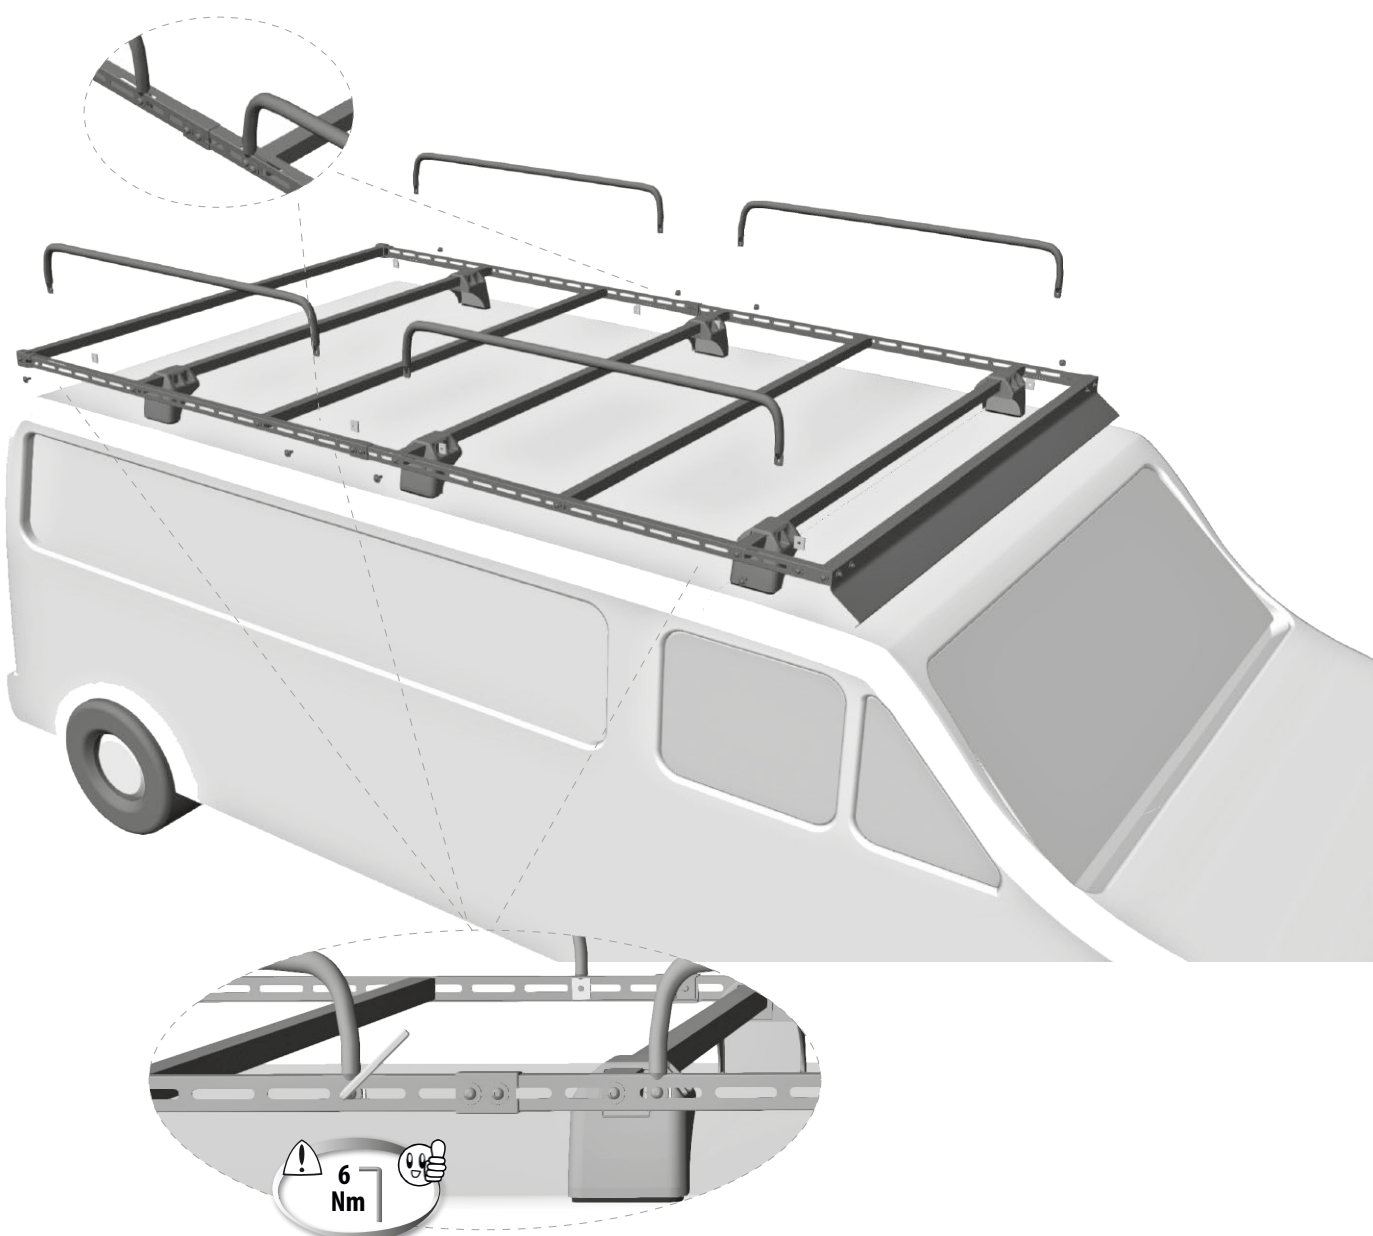

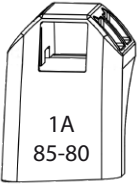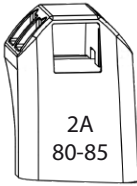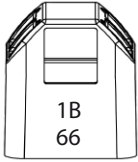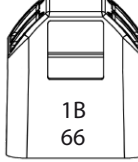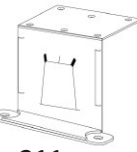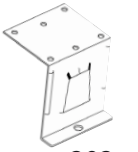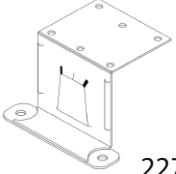N		Q		Q		Q
1	 	1+1		2		2
2	 	1+1		2		2
3		8				
4		2				
5		1				

N	BO0061	Q
8	 DIN912 M6x20	24
9	 DIN125	24

N	BO0005 x 5	Q
10	 DIN912 M6x20	10
11	 DIN9021	10

- E

Instrucciones de montaje

Kit de fijación
- C

Instruccions de muntatge

Kit de fixació
- GB

Assembly instrucctions

Fixation Kit
- F

Instruction de montage

Kit fixation
- D

Montageanleitung

Stützfuß-Kit
- PT

Instruções de montagem

Kit fixação
- I

Istruzioni di montaggio

Kit di fissaggio
- PL

Instrukcja montażu

Element mocujący
- CZ

Montážní návod

Fixační kit
- HU

Szerelési Utasítás

Rögzítő készlet
- RO

Instrucțiuni de montaj


Kit de fixare
- HR

Detaljne upute

Kit za montažu
- TU


Öncelikle montaj

Montaj kiti

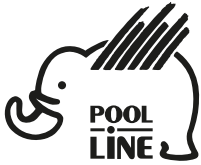




POOL-LINE ACCESORIOS, S.L.
 C. Esqueis, 19. P. I. Can Barri
 08415- Bigues i Riells. Barcelona (España)
 www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1043

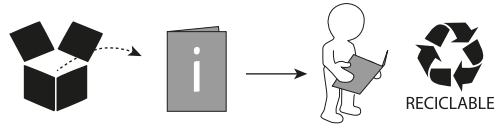

121041

Rv: 04/2024

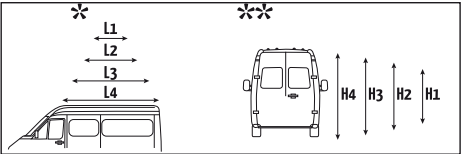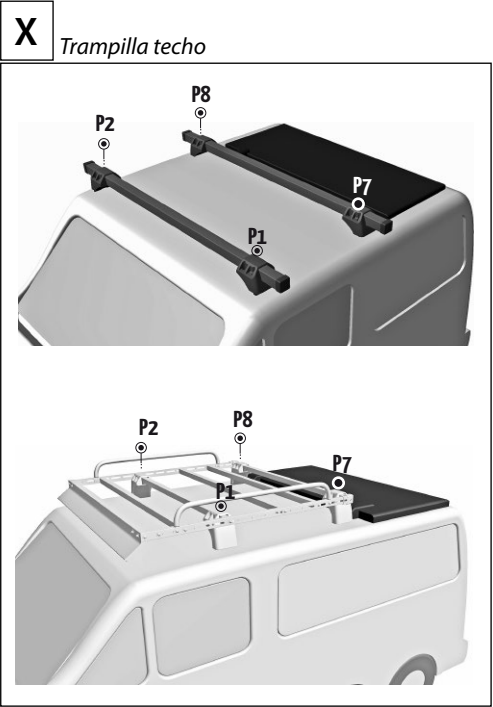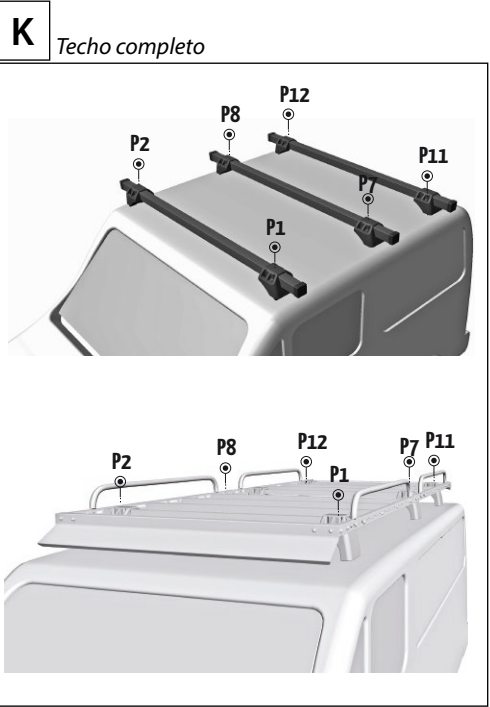


	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
FIAT																
DOBLO II	L1	H1	10-	800005	212+1A	211+2A					202+1B	202+1B			227+1B	227+1B
DOBLO II	L2	H1	10-	800005	212+1A	211+2A					202+1B	202+1B			227+1B	227+1B
DOBLO II (con trampilla)	L1	H1	10-	800005	212+1A	211+2A					202+1B	202+1B				
OPEL																
COMBO D	L1	H1	12-	800005	212+1A	211+2A					202+1B	202+1B			227+1B	227+1B
COMBO D	L2	H1	12-	800005	212+1A	211+2A					202+1B	202+1B			227+1B	227+1B
COMBO D (con trampilla)	L1	H1	12-	800005	212+1A	211+2A					202+1B	202+1B				



Limpieza pre-instalación

 Pre-installation cleaning

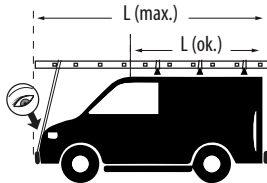

Revisar par de apriete

 Check torque

