


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

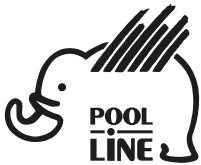


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net





200 KG.
MAX.


Nº HOMOLOGACIÓN: E9 26R-03.1042





123516

Rv: 05/2024

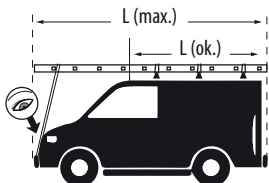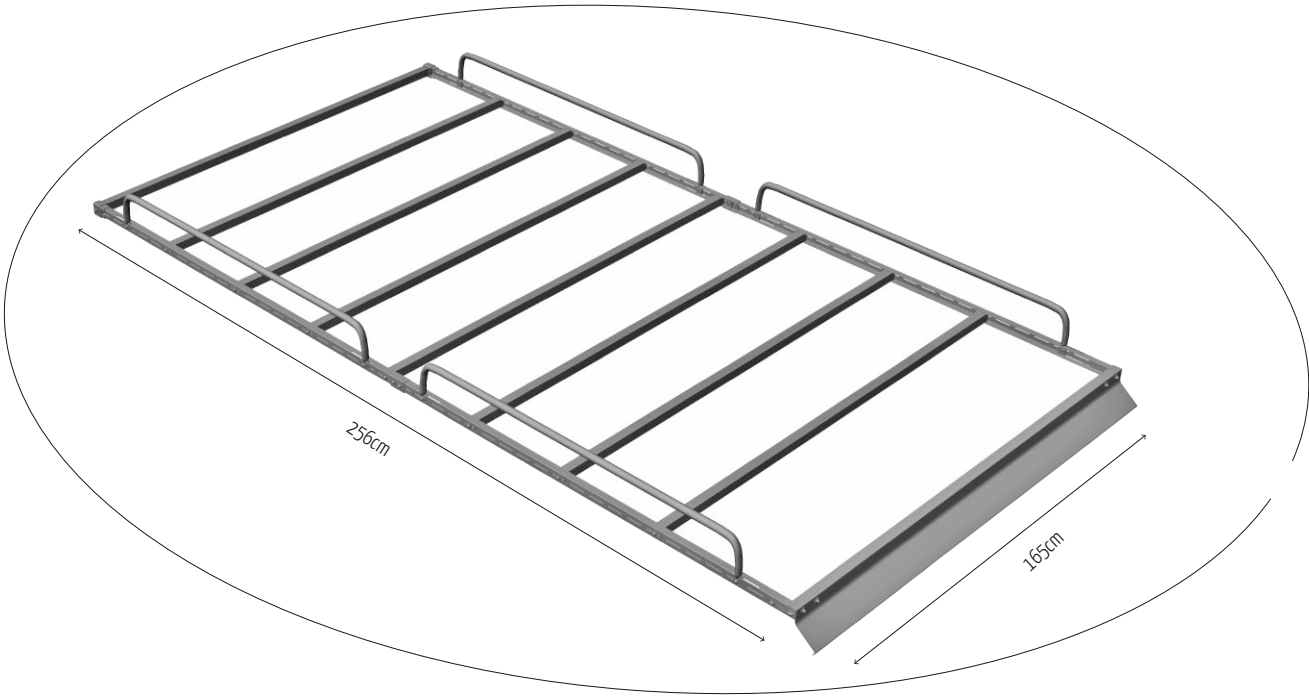

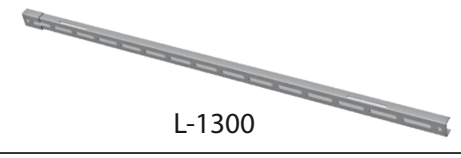
N		Q
1	 S-1650	1
2	 L-1300	4
3	 B-1022	4
4	 T-1635	8
5	 CHA-M8	16
6	 ISO 7380 M8x30	2
7	 ISO 7380 M8x16	2
8	 DIN 125 Ø 8	8
11	 KIT CARGO-TECH	1
12	 CHA-M8	12
13	 ISO 7380 M8x30	16
14	 ISO 7380 M8x16	20
15	 DIN 125 Ø 8	36

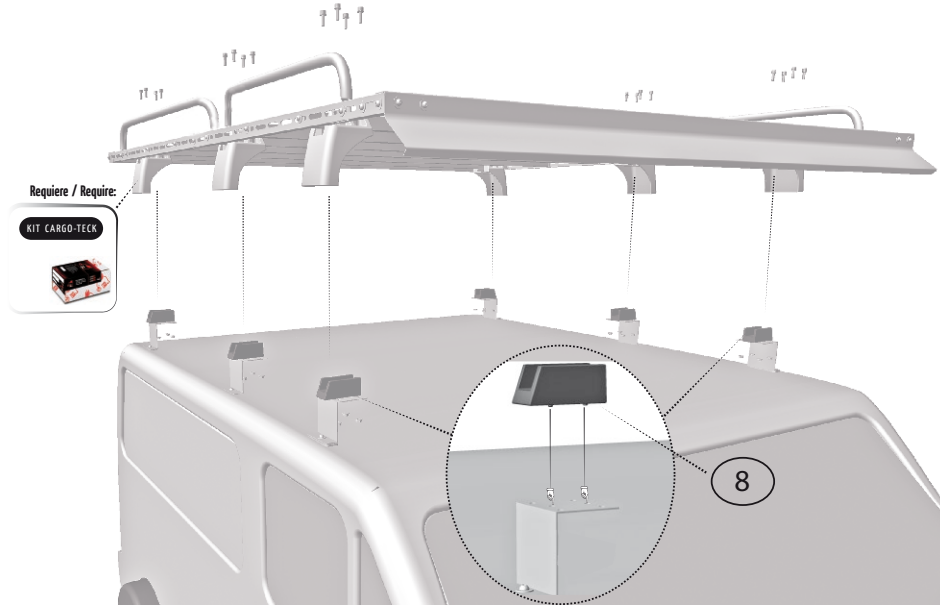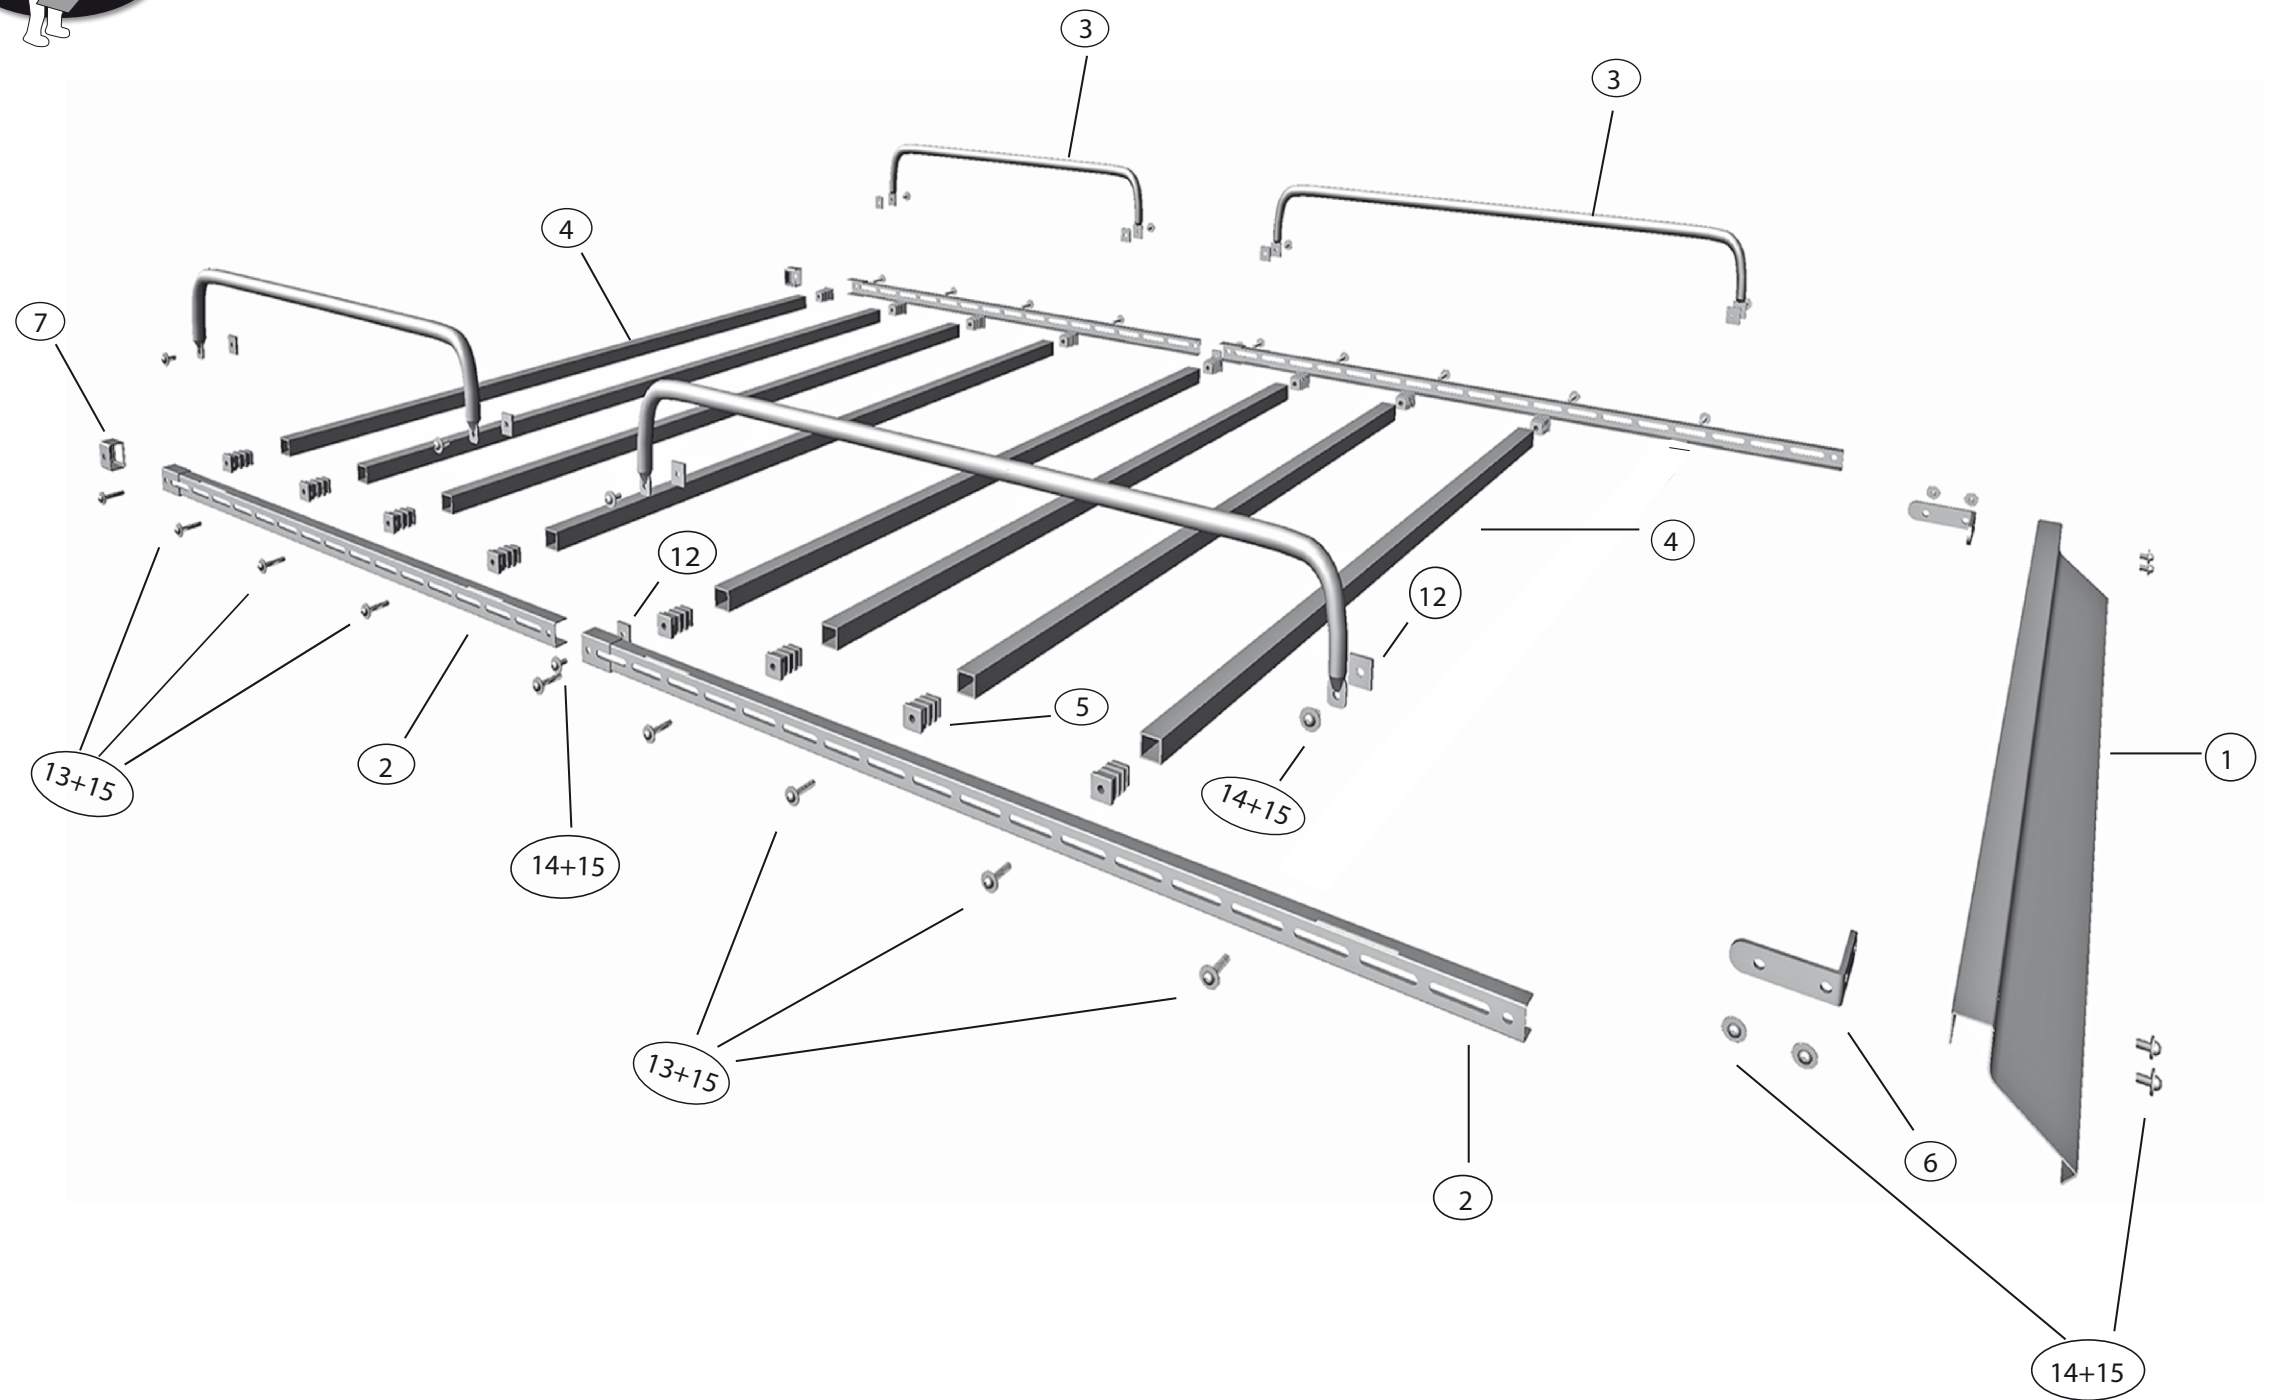




- CITROËN JUMPER I L1 (94-06)
- FIAT DUCATO II L1 (94-06)
- PEUGEOOT BOXER I (94-06)

X=250mm

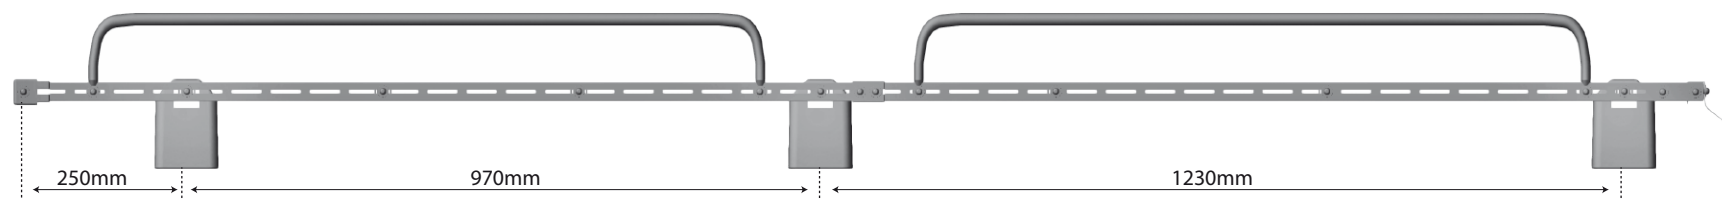

- IVECO DAILY 2000-2014 (V/C)

X=445mm

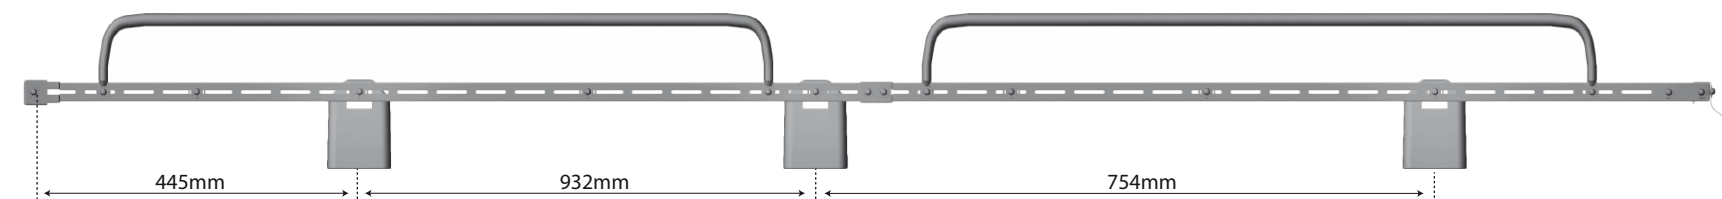


- NISSAN NV400 L1H1 10->
- OPEL MOVANO B L1H1 10->
- RENAULT MASTER III L1H1 10->

X=370mm




X=180mm

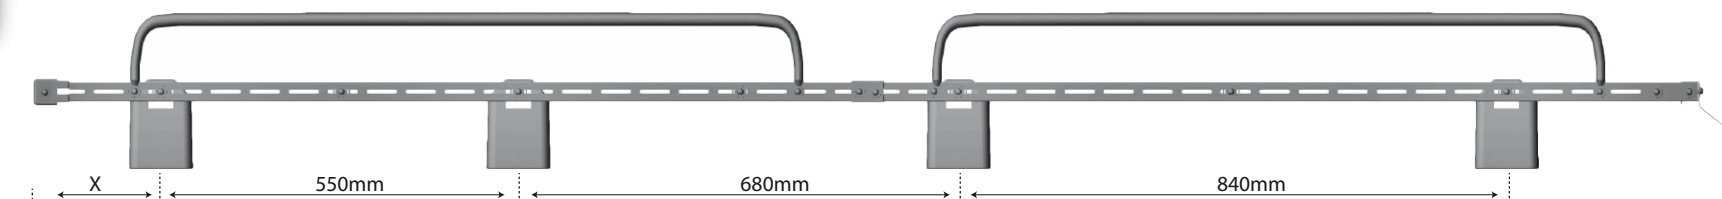

Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone


- CITROËN JUMPER II L1 (94-06)
- FIAT DUCATO III L1 (94-06)
- PEUGEOOT BOXER II (94-06)

X=250mm

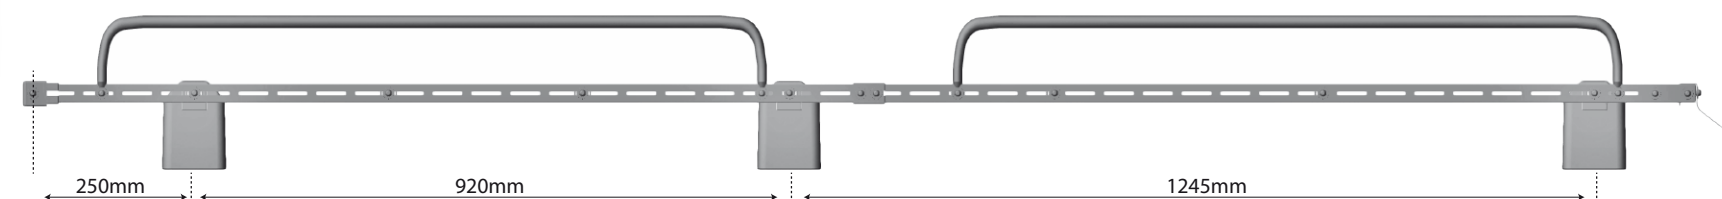


- NISSAN INTERSTAR (97-10)
- OPEL MOVANO A (97-10)
- RENAULT MASTER II (97-10)


X=500mm

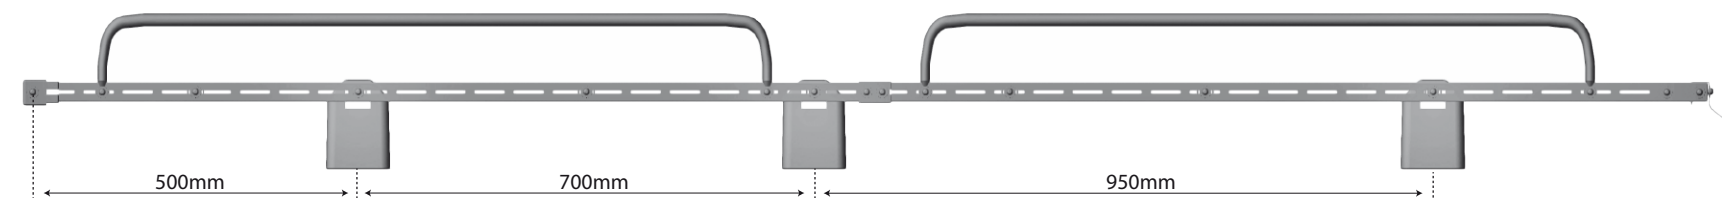


1

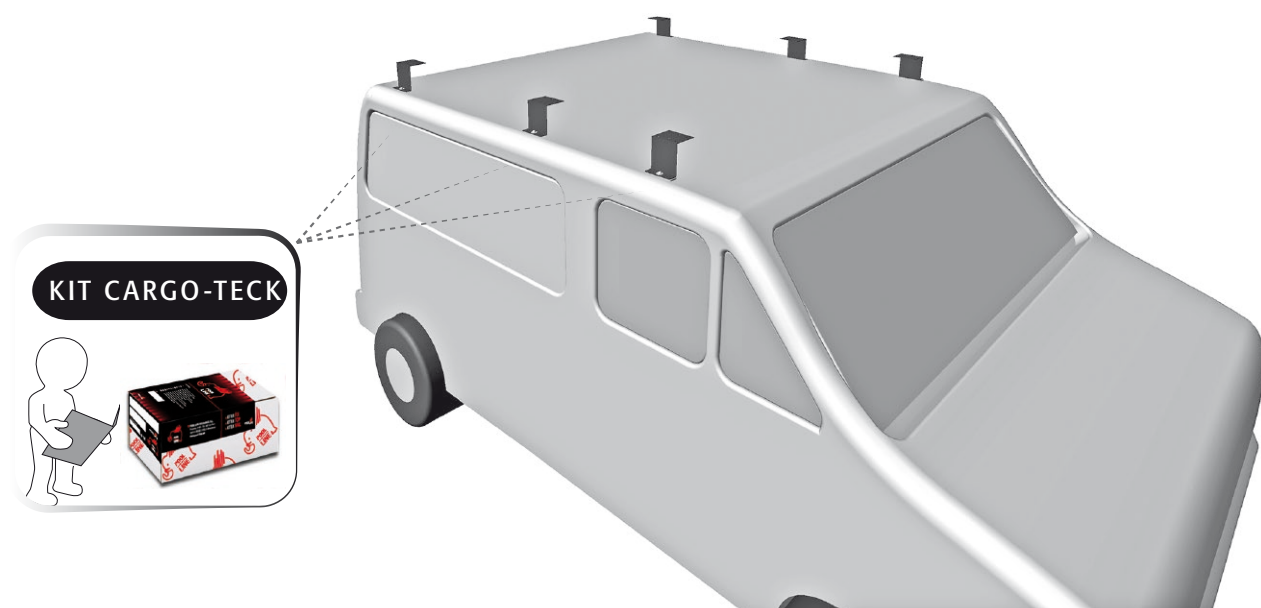


2

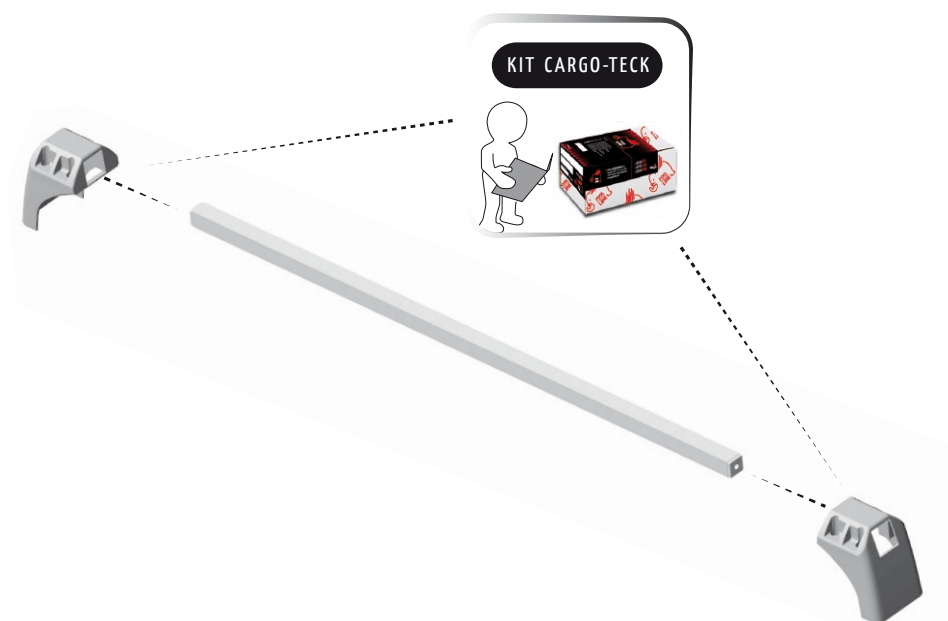


3

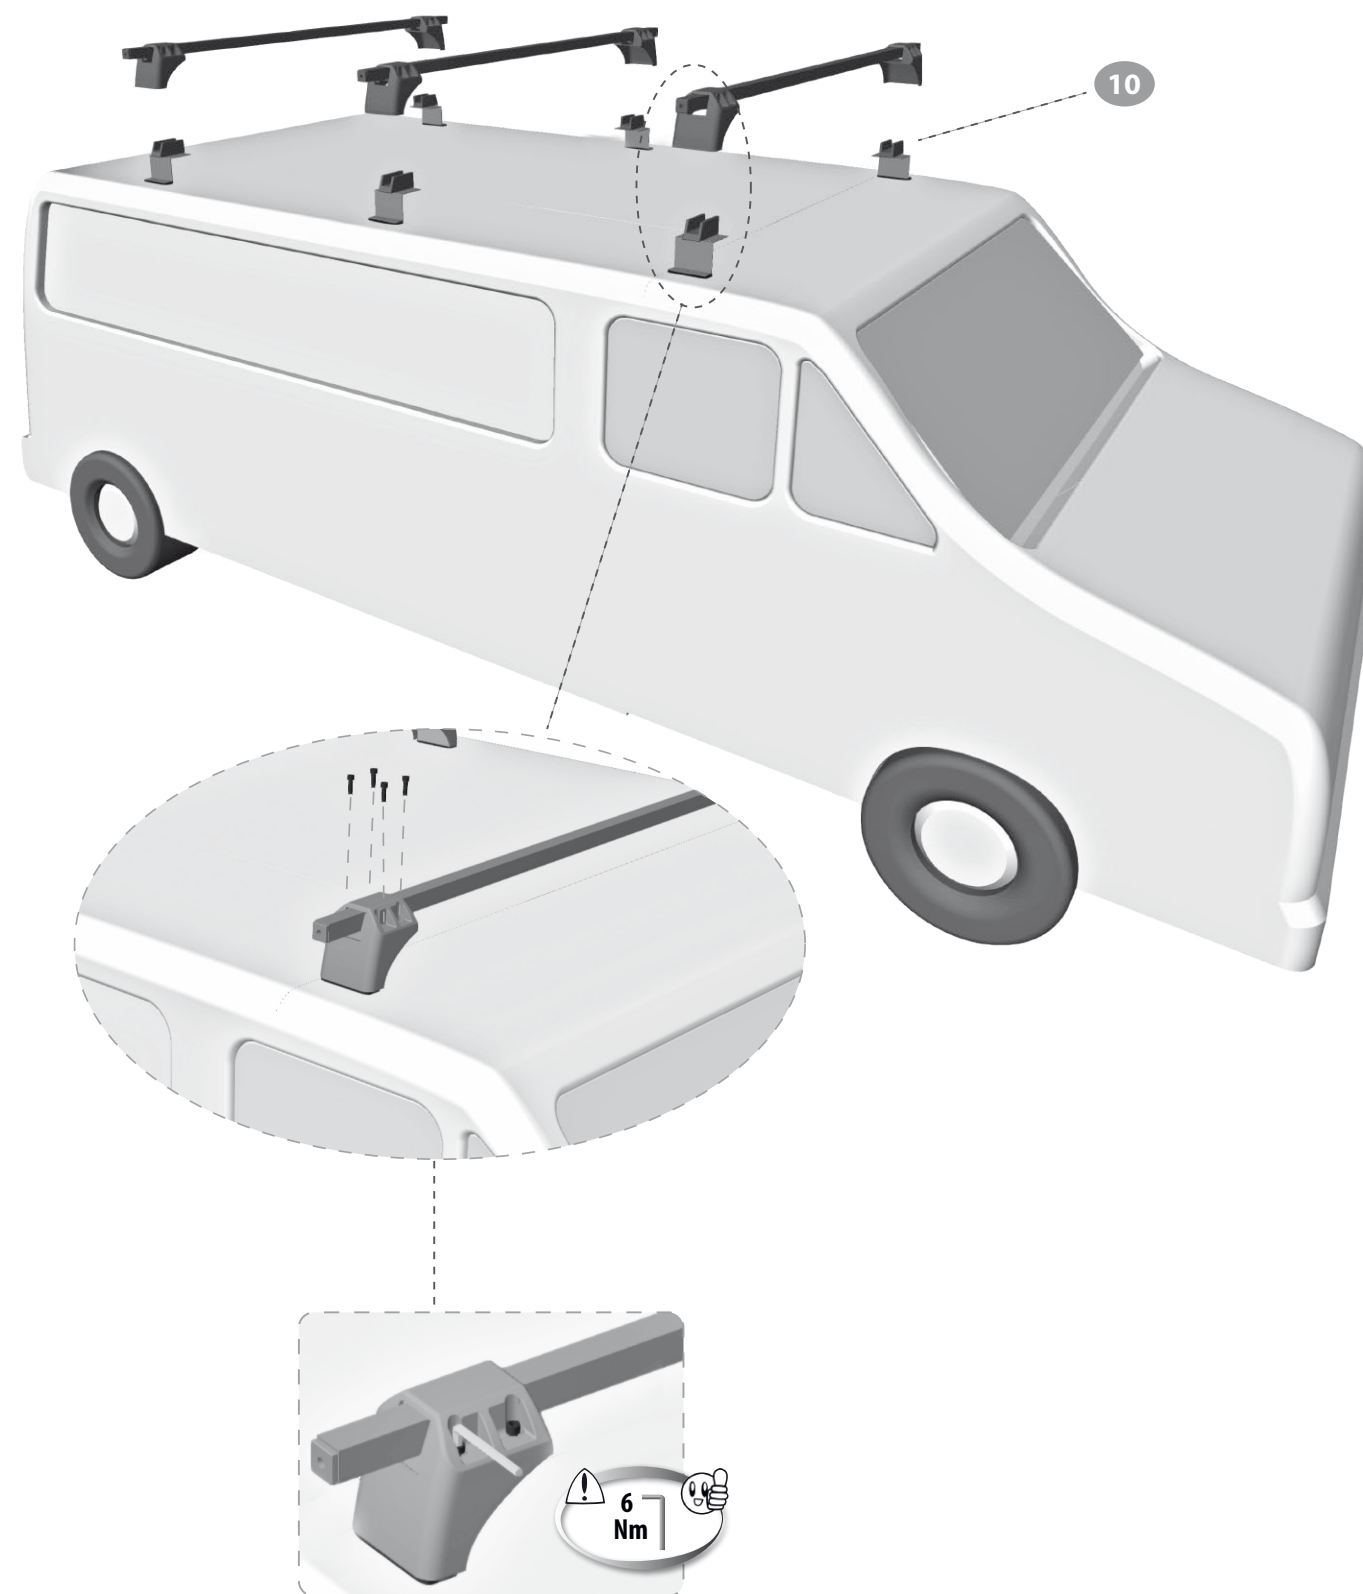


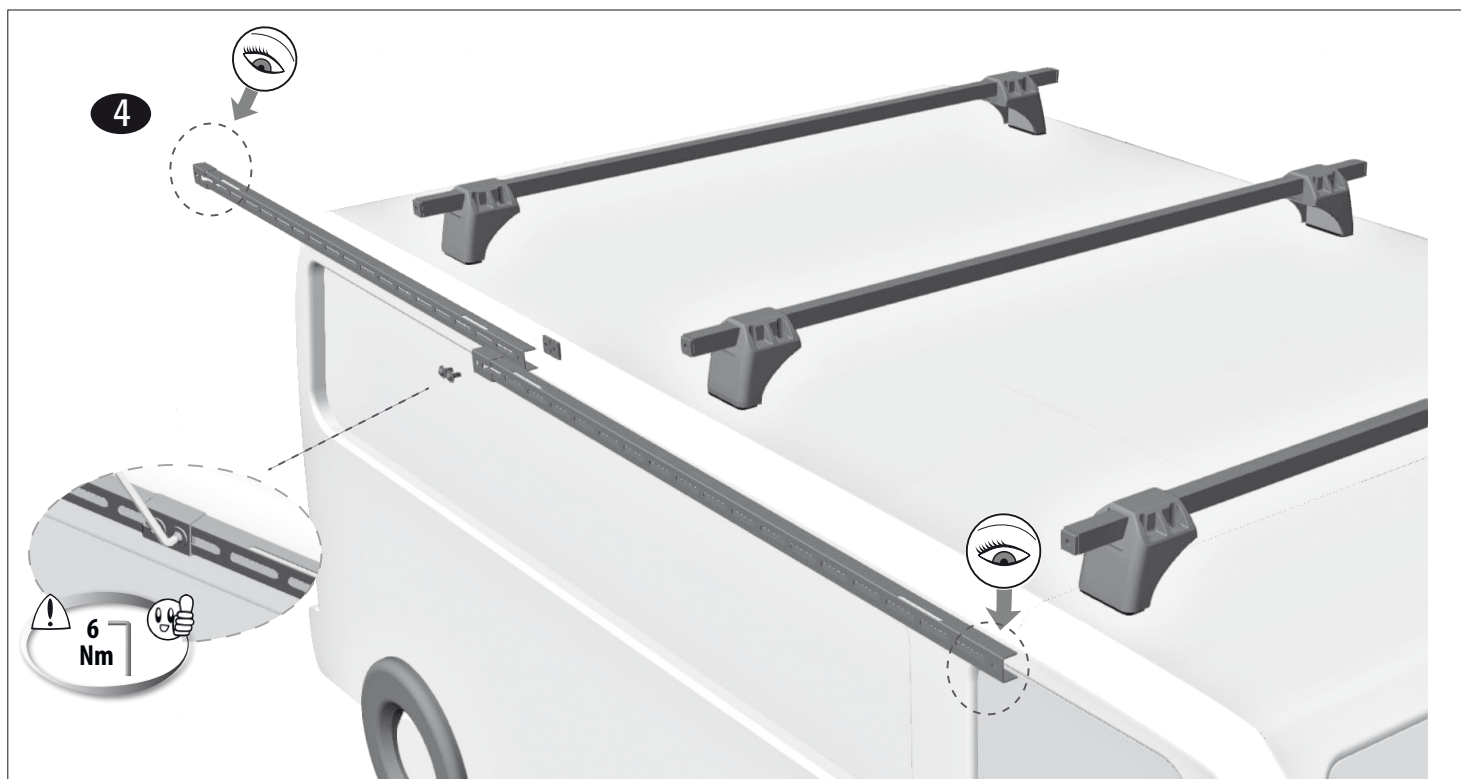


5

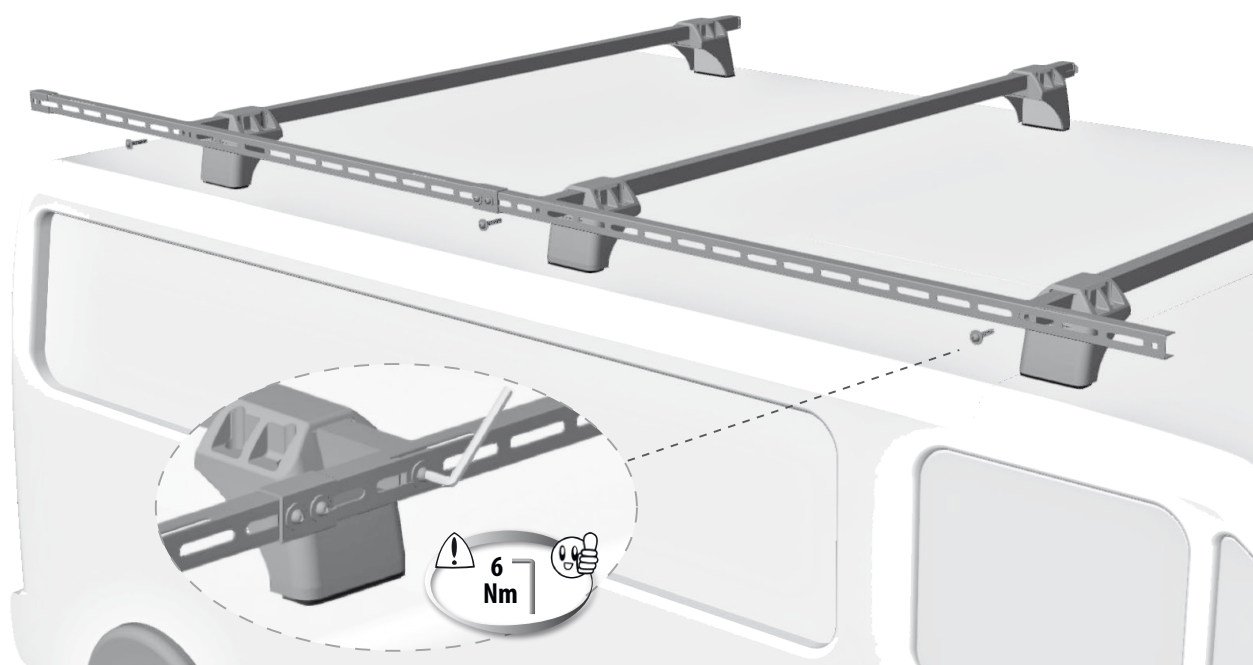


6

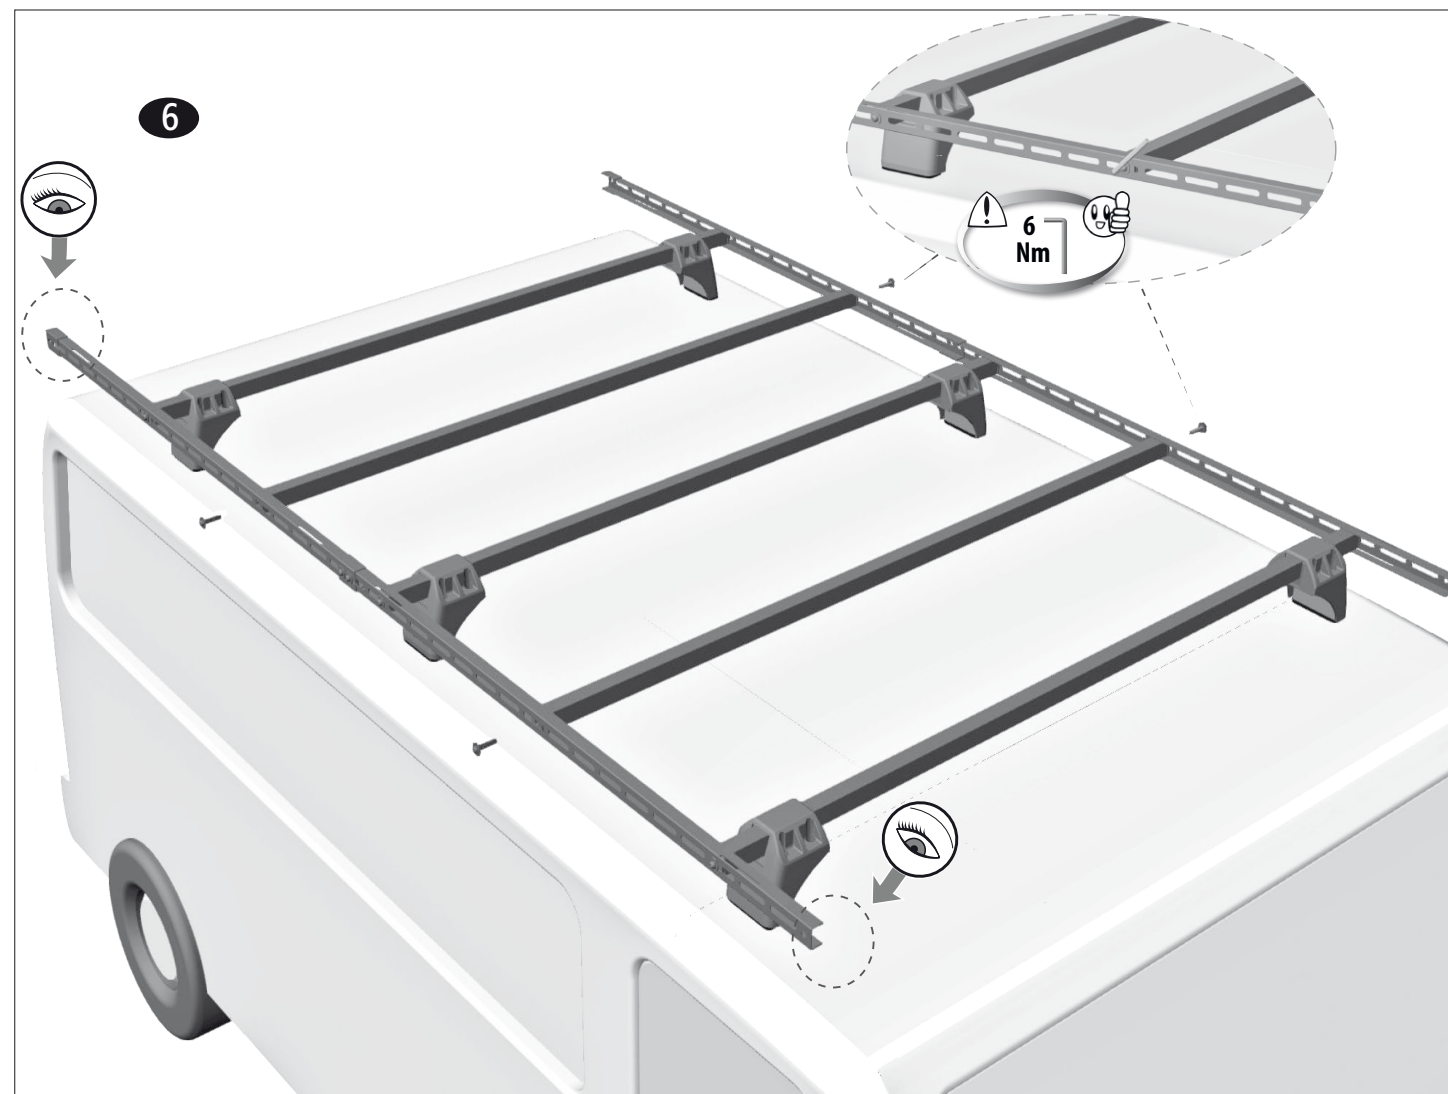



7


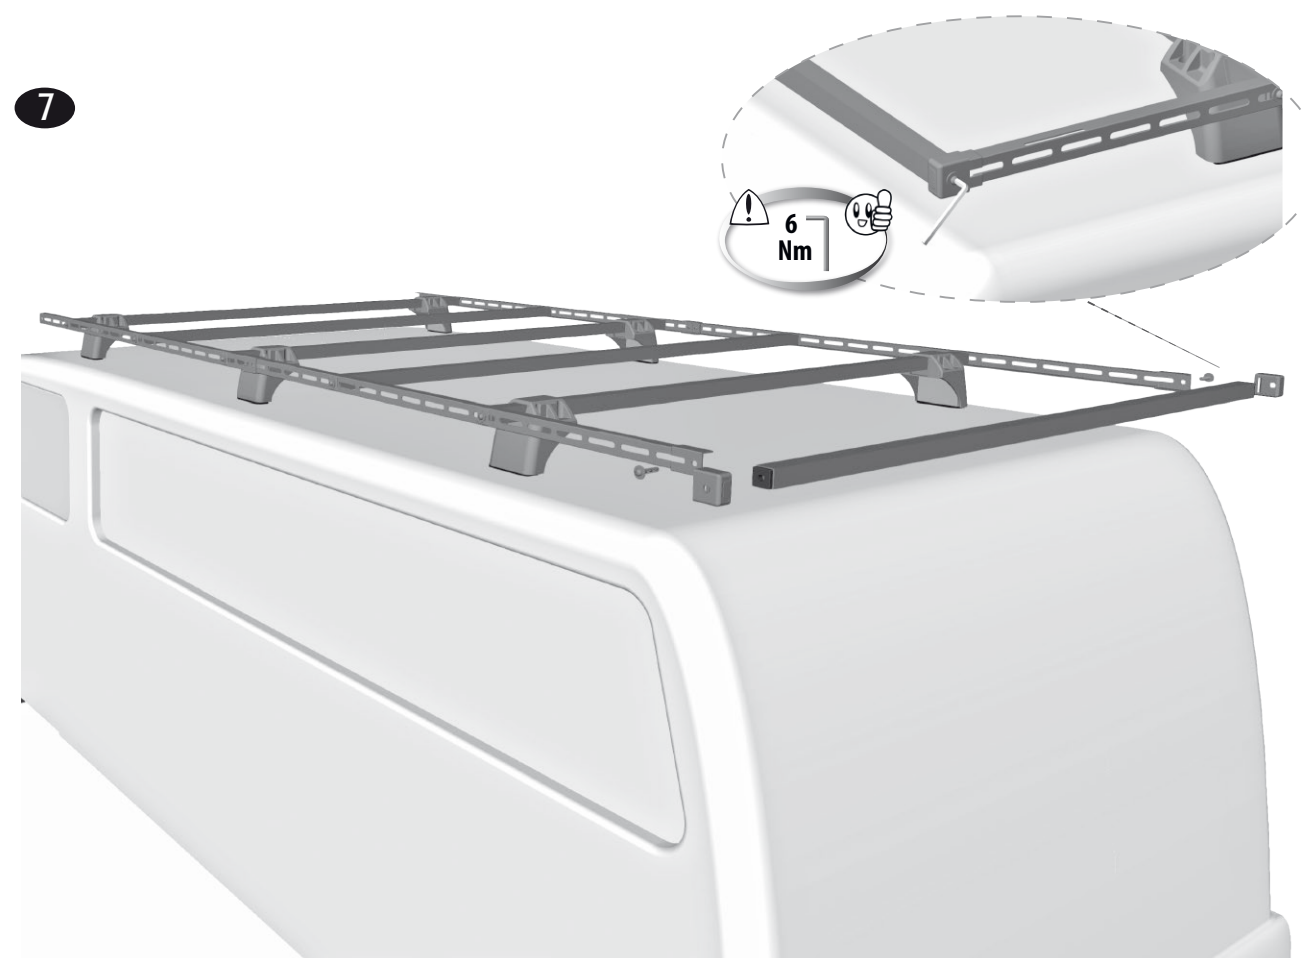


8

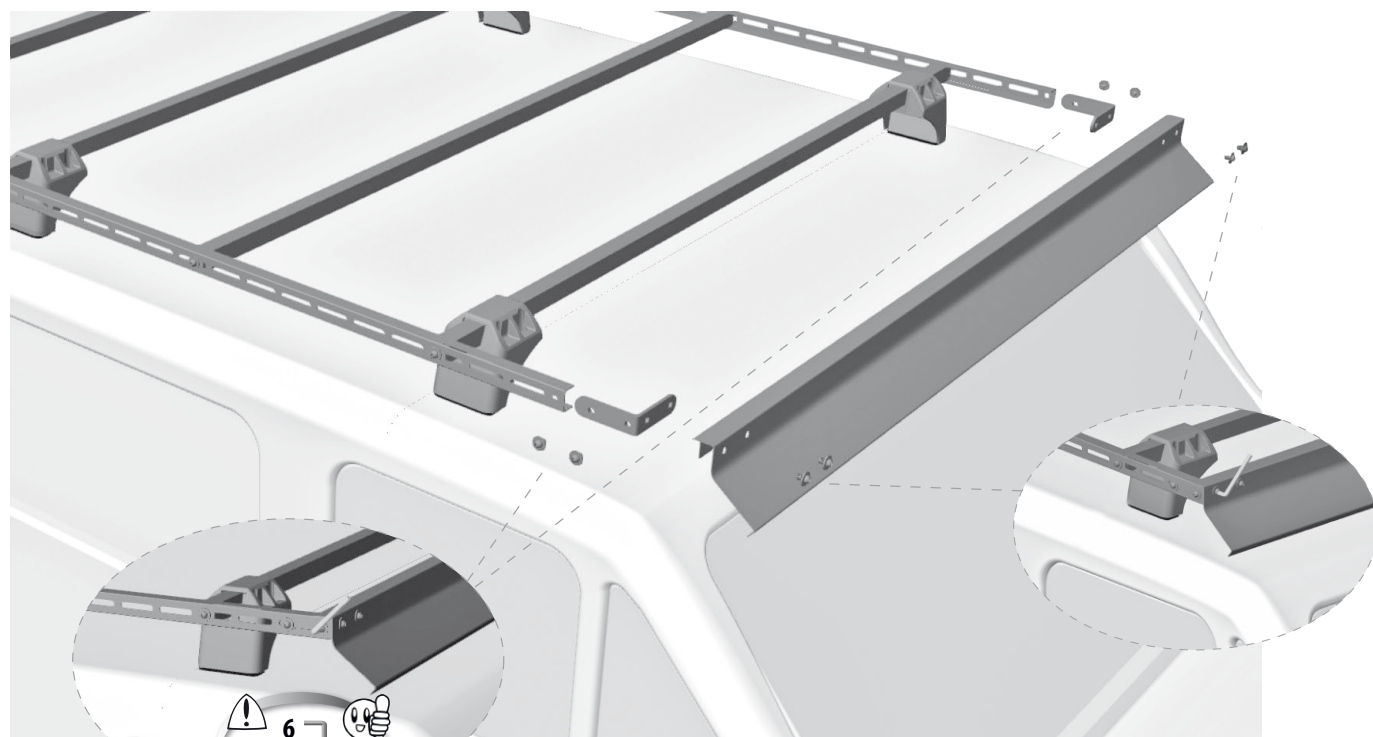


9

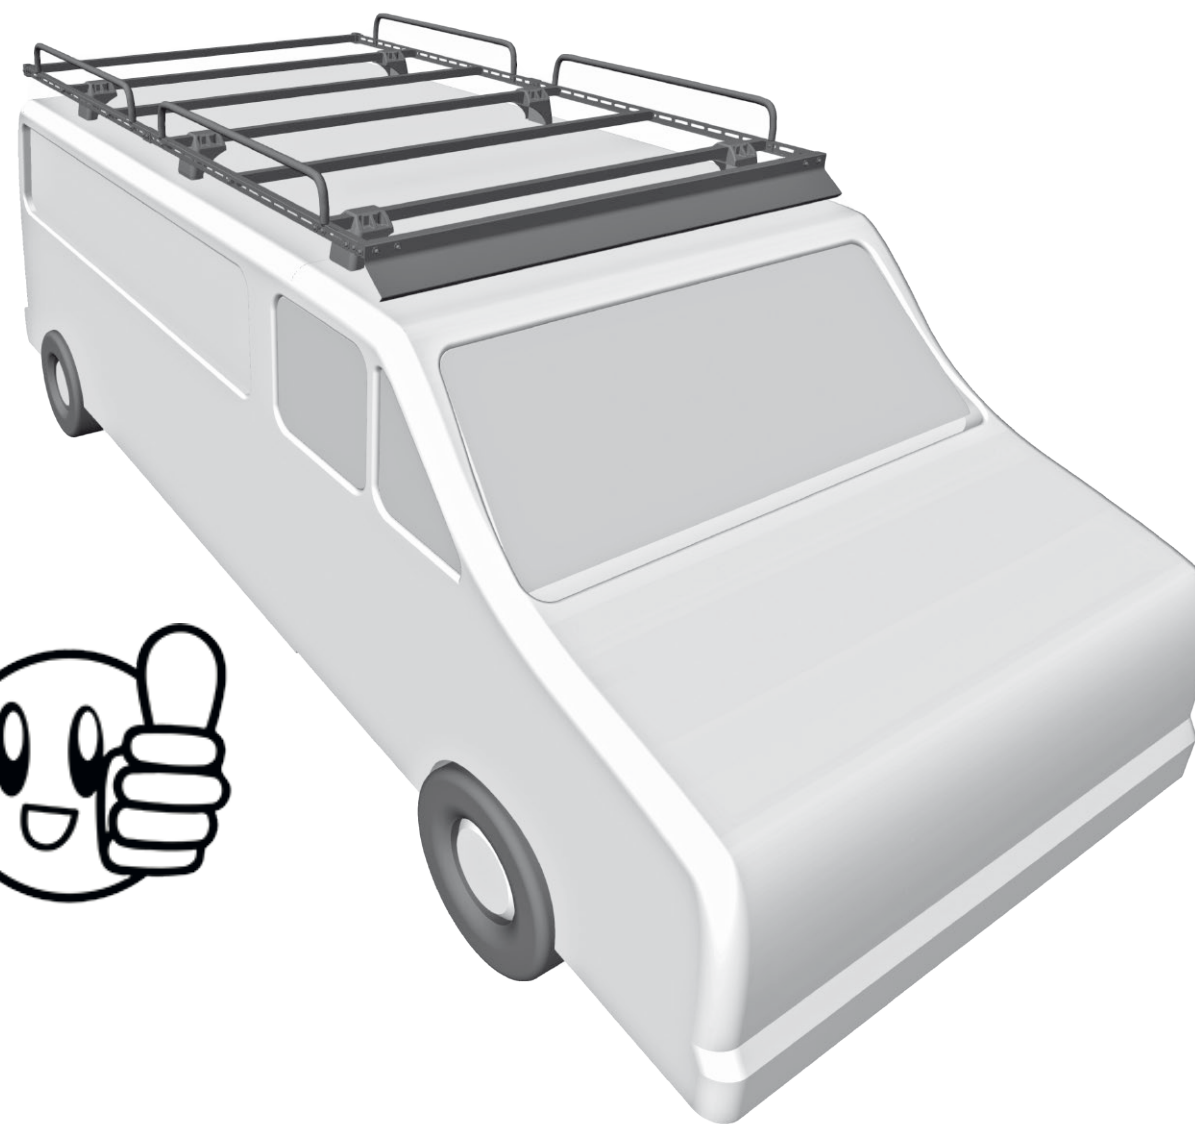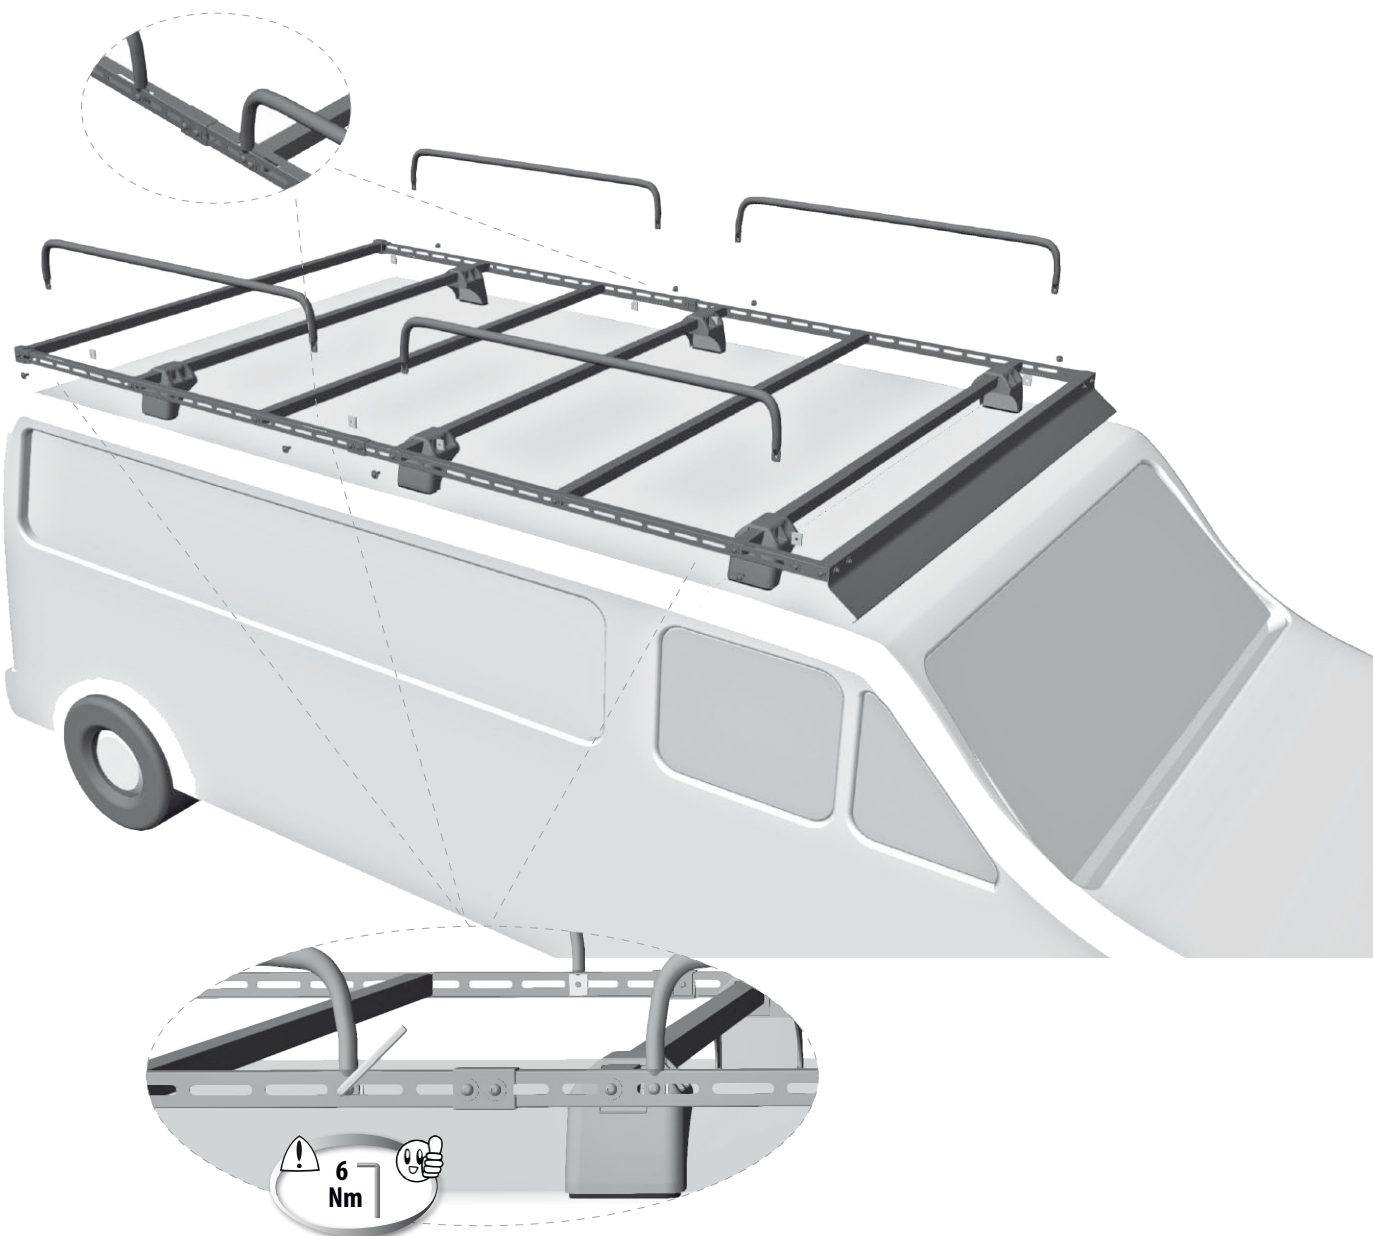

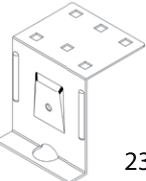N		Q
1	 95R236	6
2	 236	6
3	 G	6
4	 CHAP.20	6
5	 G12	6
6		1

N	BO0061	Q
8	 DIN912 M6x20	24
9	 DIN125 Ø6	24

N	BO0014x3	Q
10	 DIN912 M6x30	6
11	 DIN9021 Ø6	6

N		Q
12		6

- E

Instrucciones de montaje

Kit de fijación
- C

Instruccions de muntatge

Kit de fixació
- GB

Assembly instrucctions

Fixation Kit
- F

Instruction de montage

Kit fixation
- D

Montageanleitung

Stützfuß-Kit
- PT

Instruções de montagem

Kit fixação
- I

Istruzioni di montaggio

Kit di fissaggio
- PL

Instrukcja montażu

Element mocujący
- CZ

Montážní návod

Fixační kit
- HU

Szerelési Utasítás

Rögzítő készlet
- RO

Instrucțiuni de montaj


Kit de fixare
- HR

Detaljne upute

Kit za montažu
- TU


Öncelikle montaj

Montaj kiti

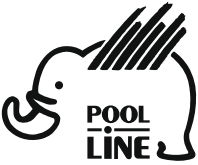

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1043



121985

Rv: 08/2022

