



- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net



200 KG.
MAX.



Nº HOMOLOGACIÓN: E 9 26R-03.1042




RECICLABLE

123580

Rv: 05/2024

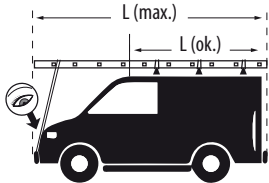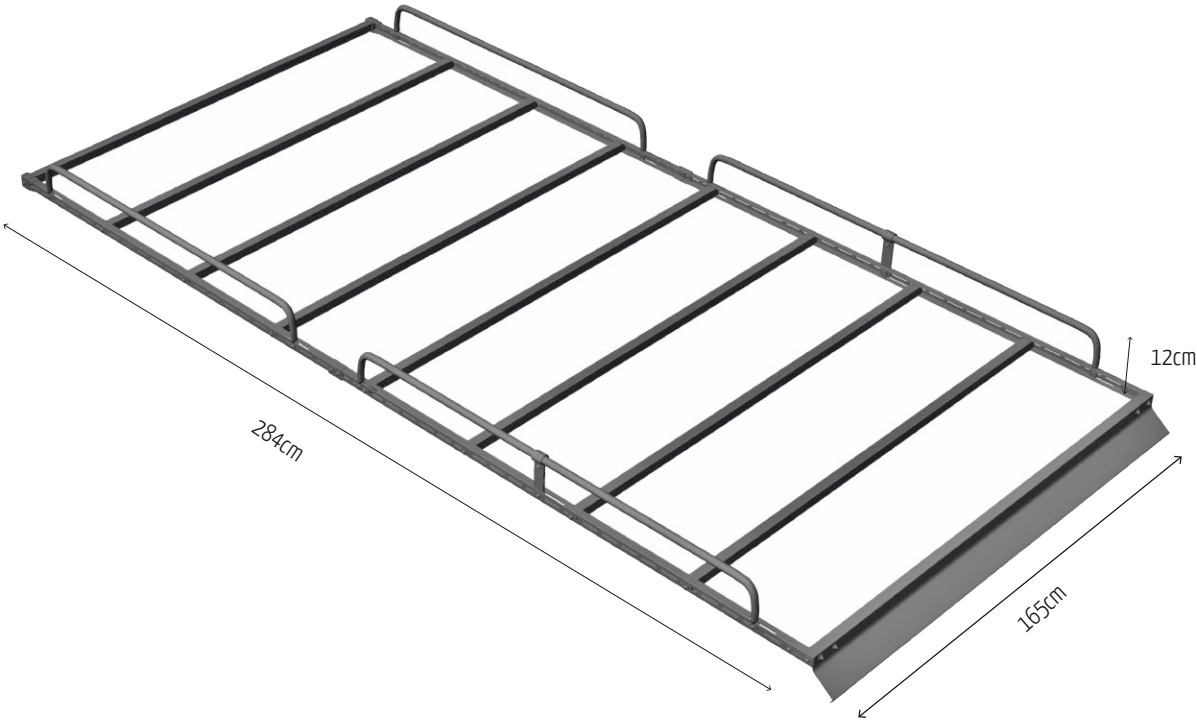


N		Q
1	 S-1650	1
2	 L-1540	2
3	 L-1300	2
4	 T-1635	8
5	 B-1262	2
6	 B-1022	2
7	 CHA-M8	16
8	 L-1540	2
9	 CHA-M8	2
10	 L-1540	8
12	 L-1300	1
13	 CHA-M8	14
14	 ISO 7380 M8x30	16
15	 ISO 7380 M8x16	22
16	 DIN 125 Ø 8	38
17	 L-1540	4
19	 DIN 603 M6x12	2
20	 DIN 6923 M6	2

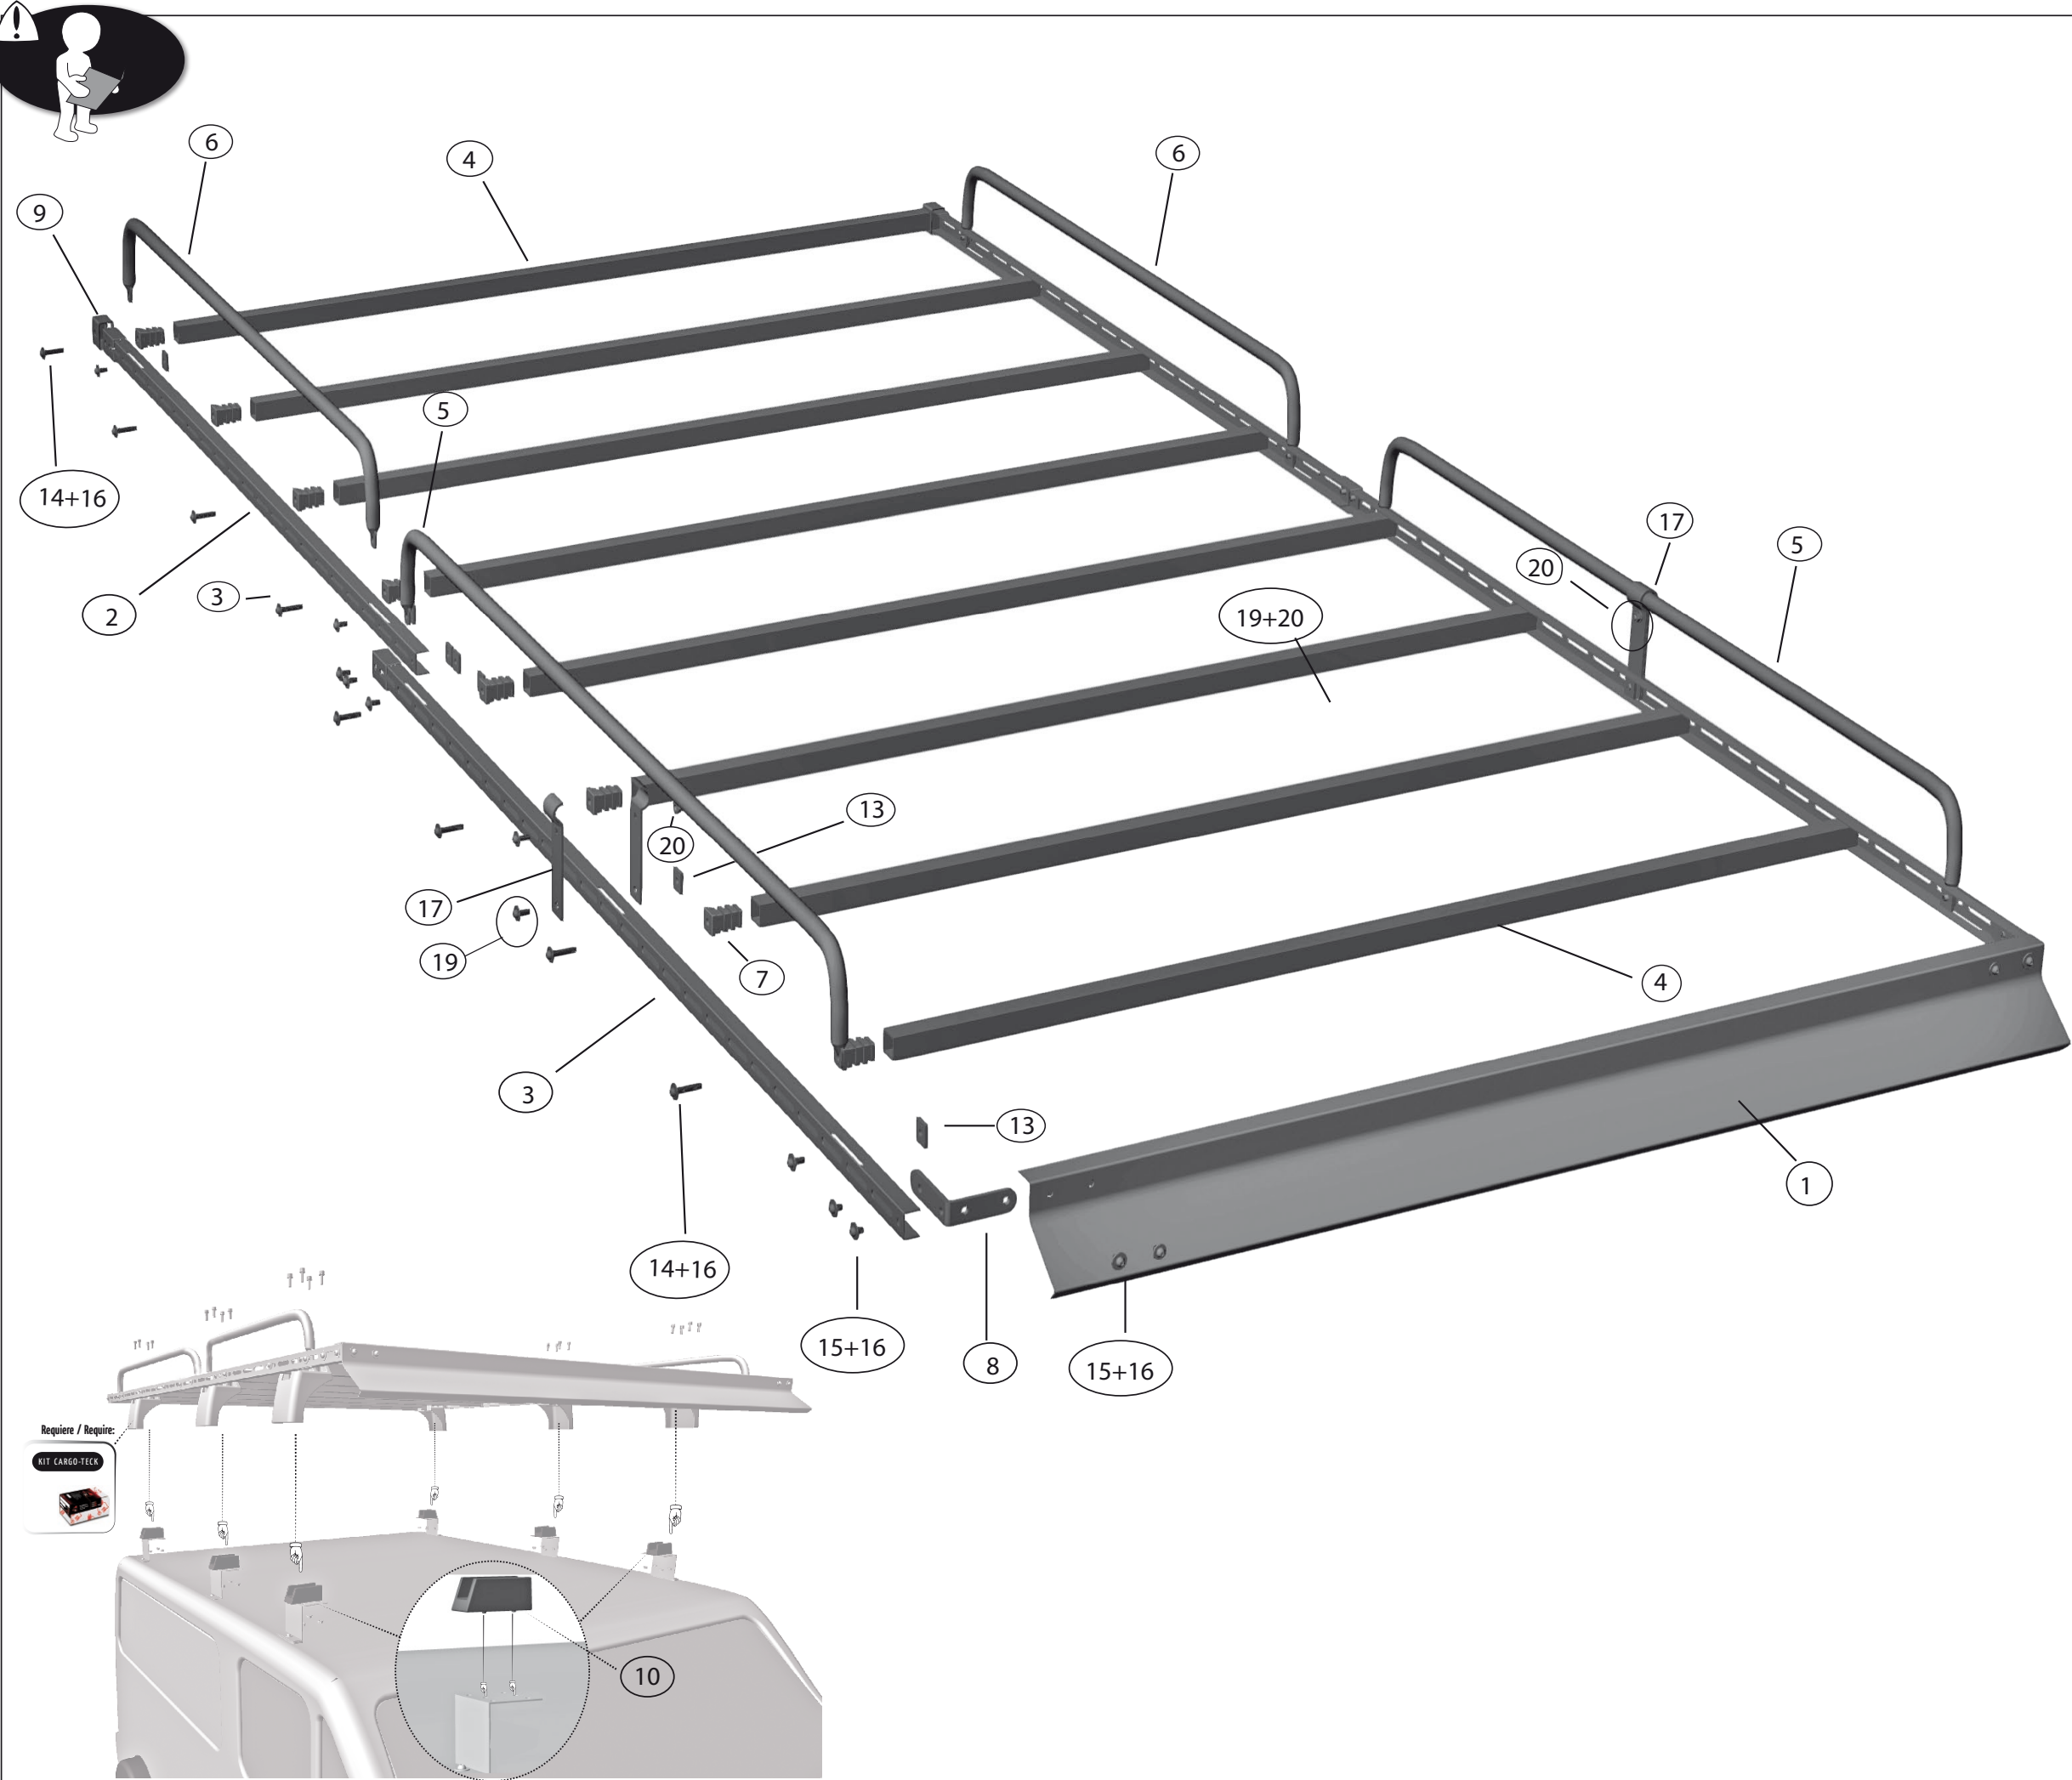




Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone

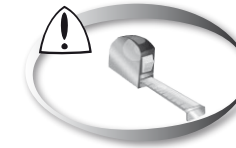


Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone



- NISSAN INTERSTAR L1-H1 (2022->)
- NISSAN NV400 L1-H1 (10-21)
- OPEL MOVANO B L1-H1 (10-21)
- RENAULT MASTER III L1-H1 (2010->)

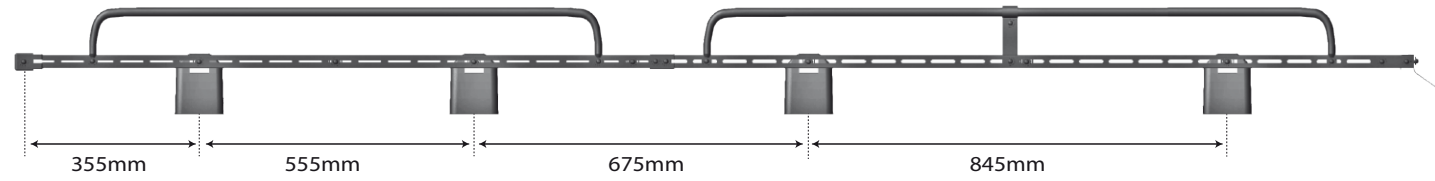

- NISSAN PRIMASTAR X83 L1-H1 (02-14)
- OPEL VIVARO A L1-H1 (02-14)
- RENAULT TRAFIC II L1-H1 (02-14)

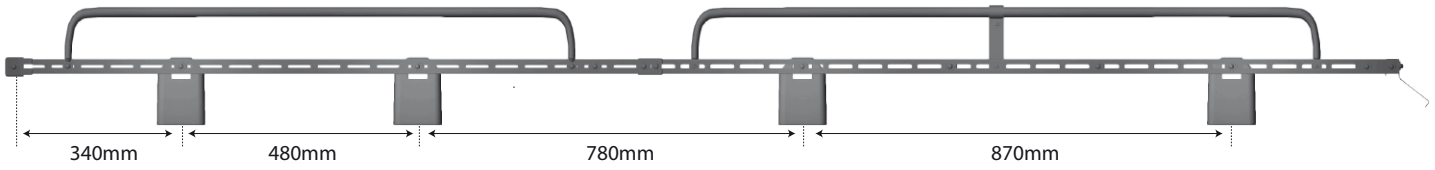


- FIAT TALENTO II L1H1 (2016->)
- NISSAN NV300 L1-H1 (16-22)
- NISSAN PRIMASTAR X-82 L1-H1 (2022->)
- OPEL VIVARO B L1H1 (14-19)
- RENAULT TRAFIC III L1H1 (2014->)

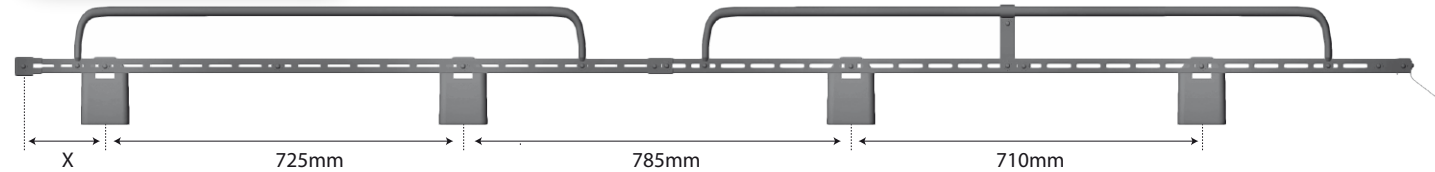

X=250mm


X=180mm

- MERCEDES SPRINTER II W906 L1 2006-2018
- VOLKSWAGEN CRAFTER L1 2006-2018

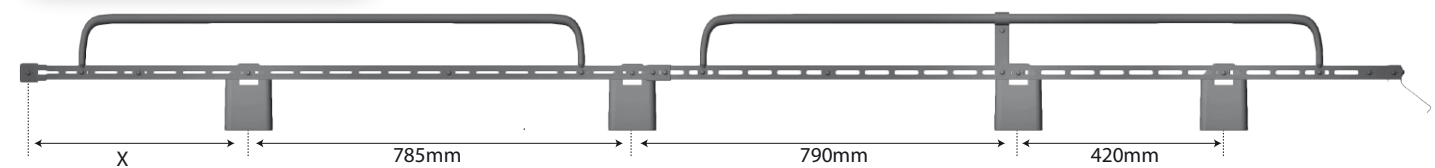

L1- H1 X= 485mm
L1- H2 X= 415mm


- CITROËN JUMPER III L1-H2 (2006->)
- FIAT DUCATO III L1-H2 (2006->)
- OPEL MOVANO C L1-H2 (21-)
- PEUGEOT BOXER III L1-H2 (2006->)

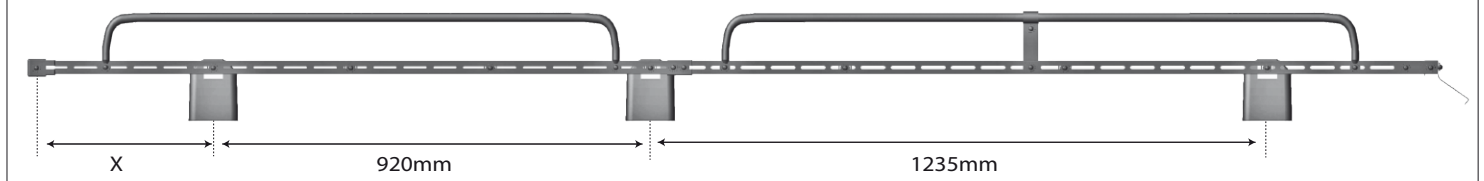

1


?

KIT CARGO-TECK

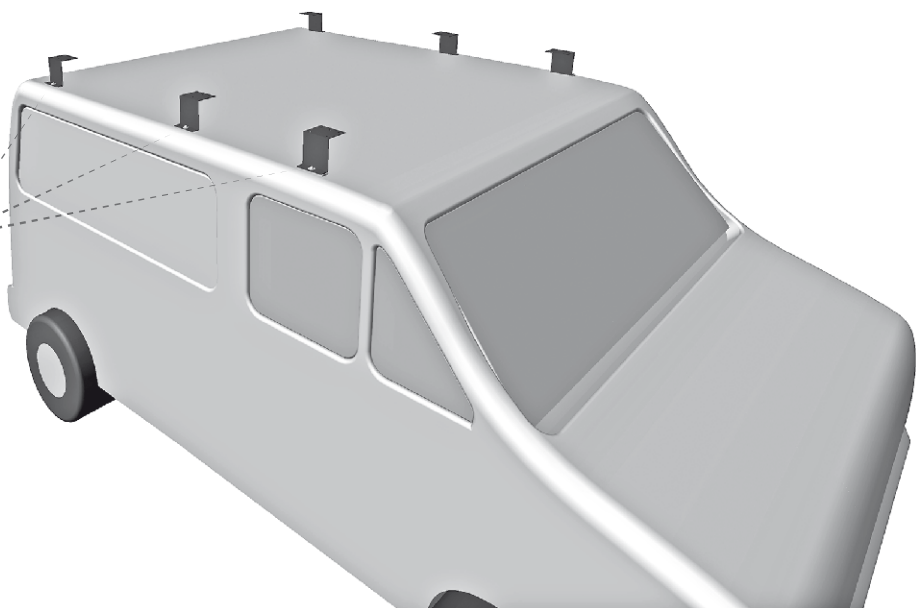

2



KIT CARGO-TECK

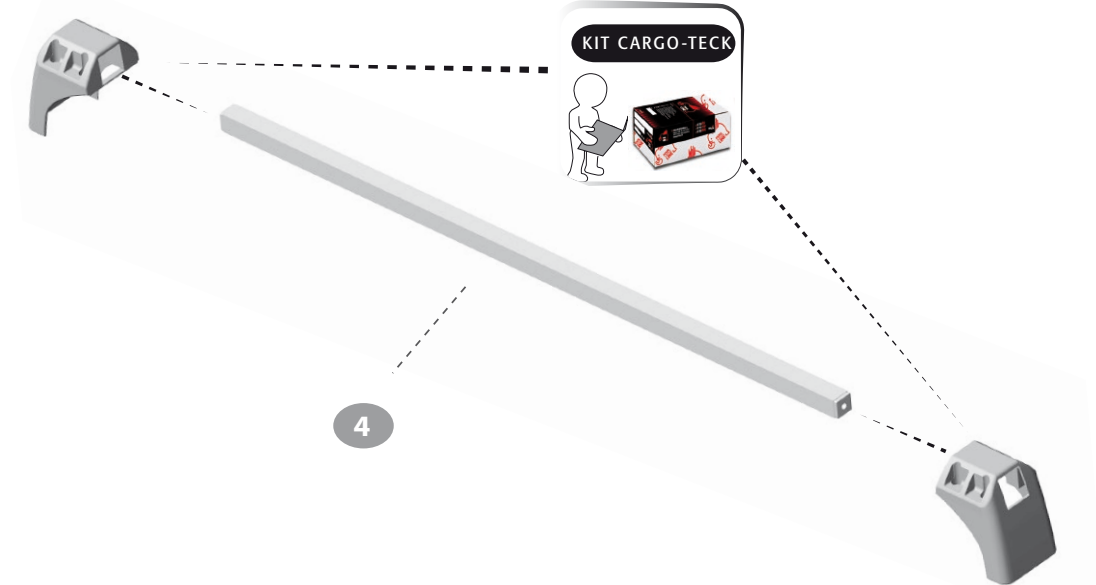


4


3

10

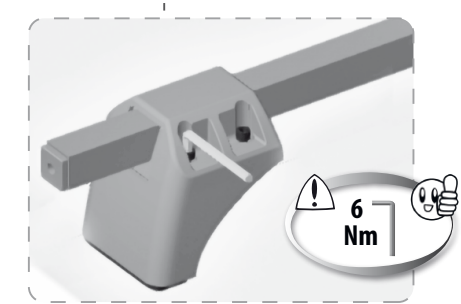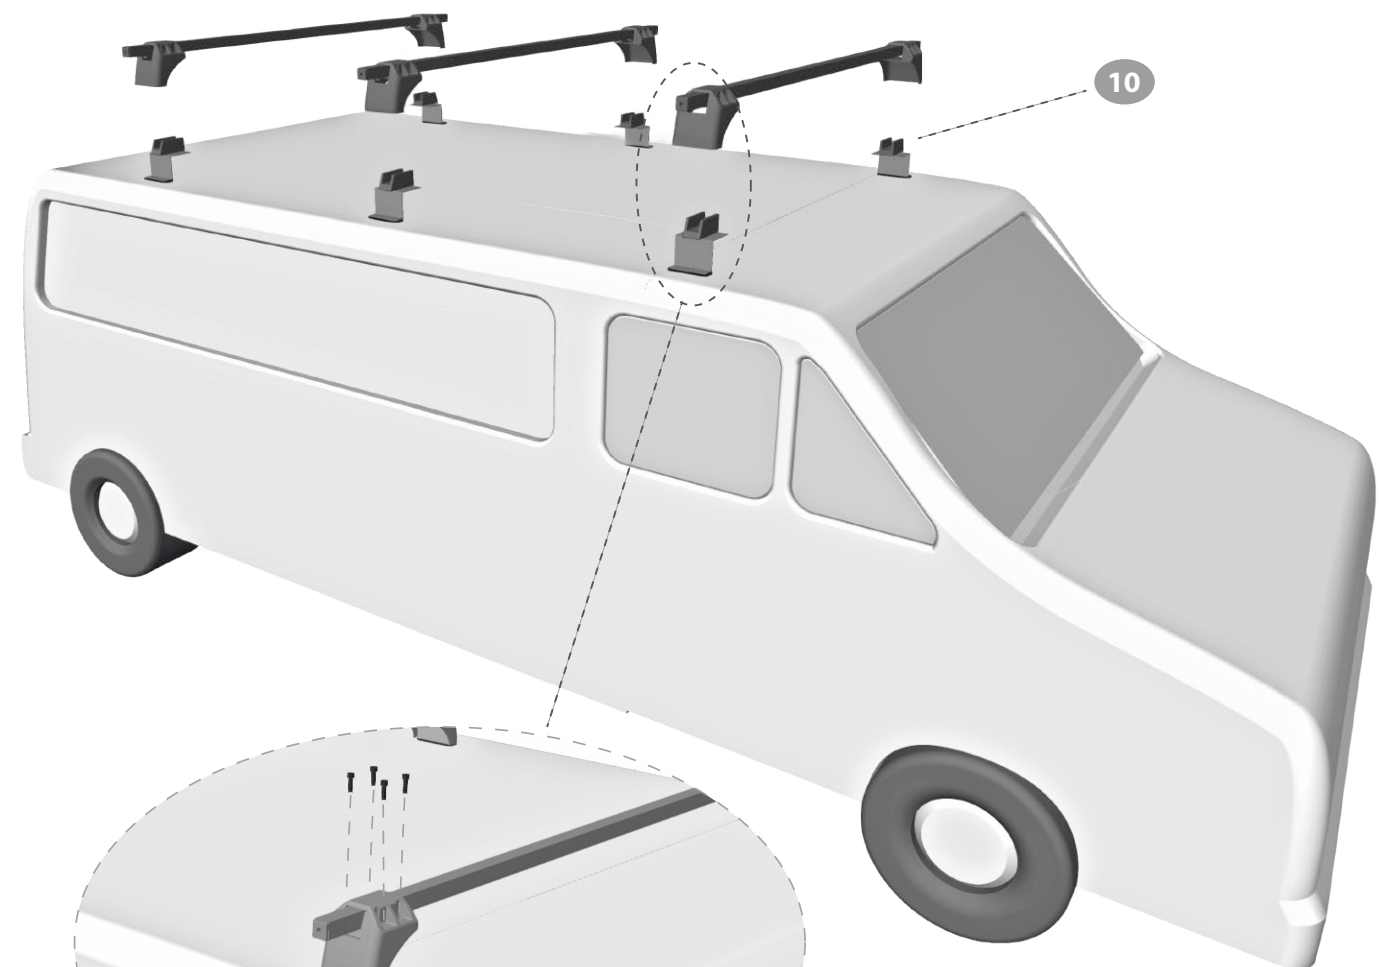


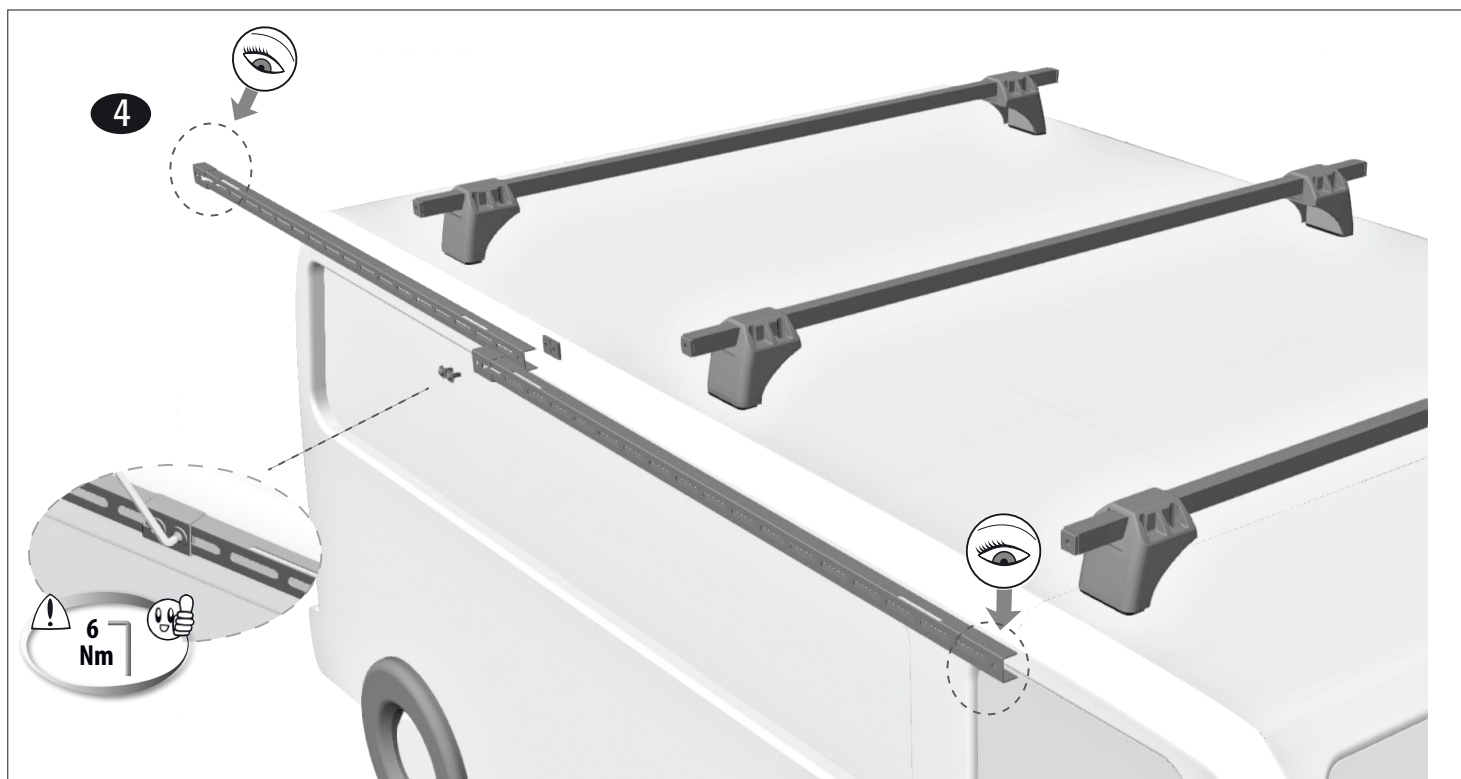


5

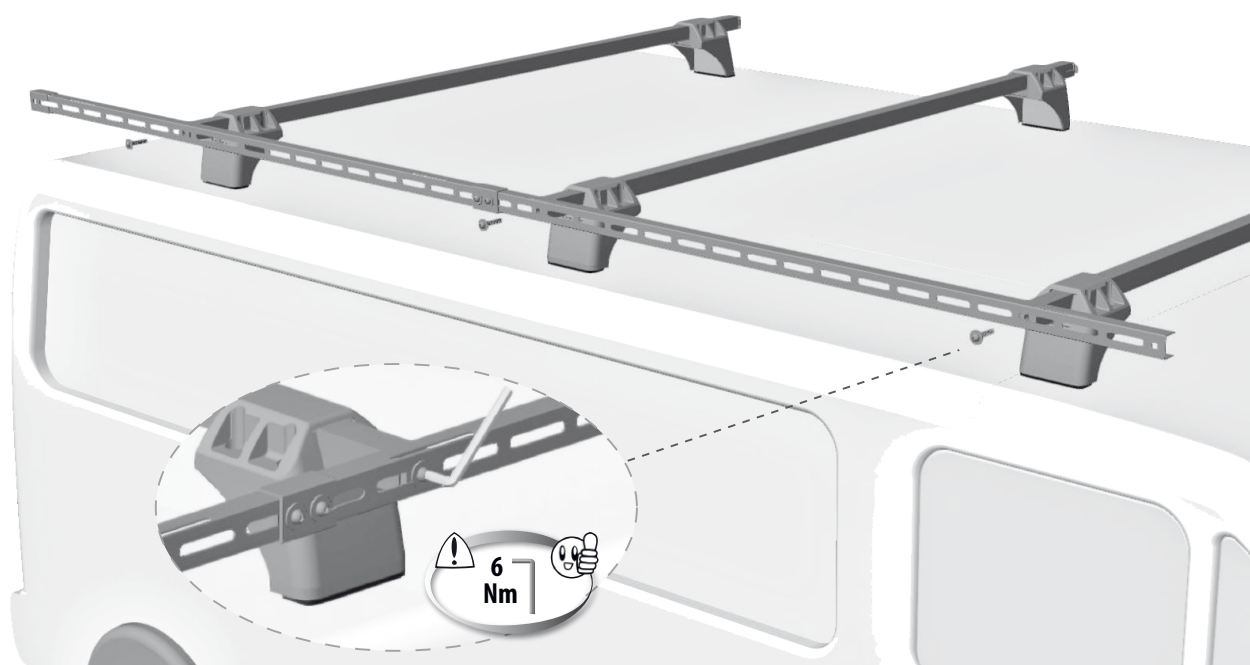


6

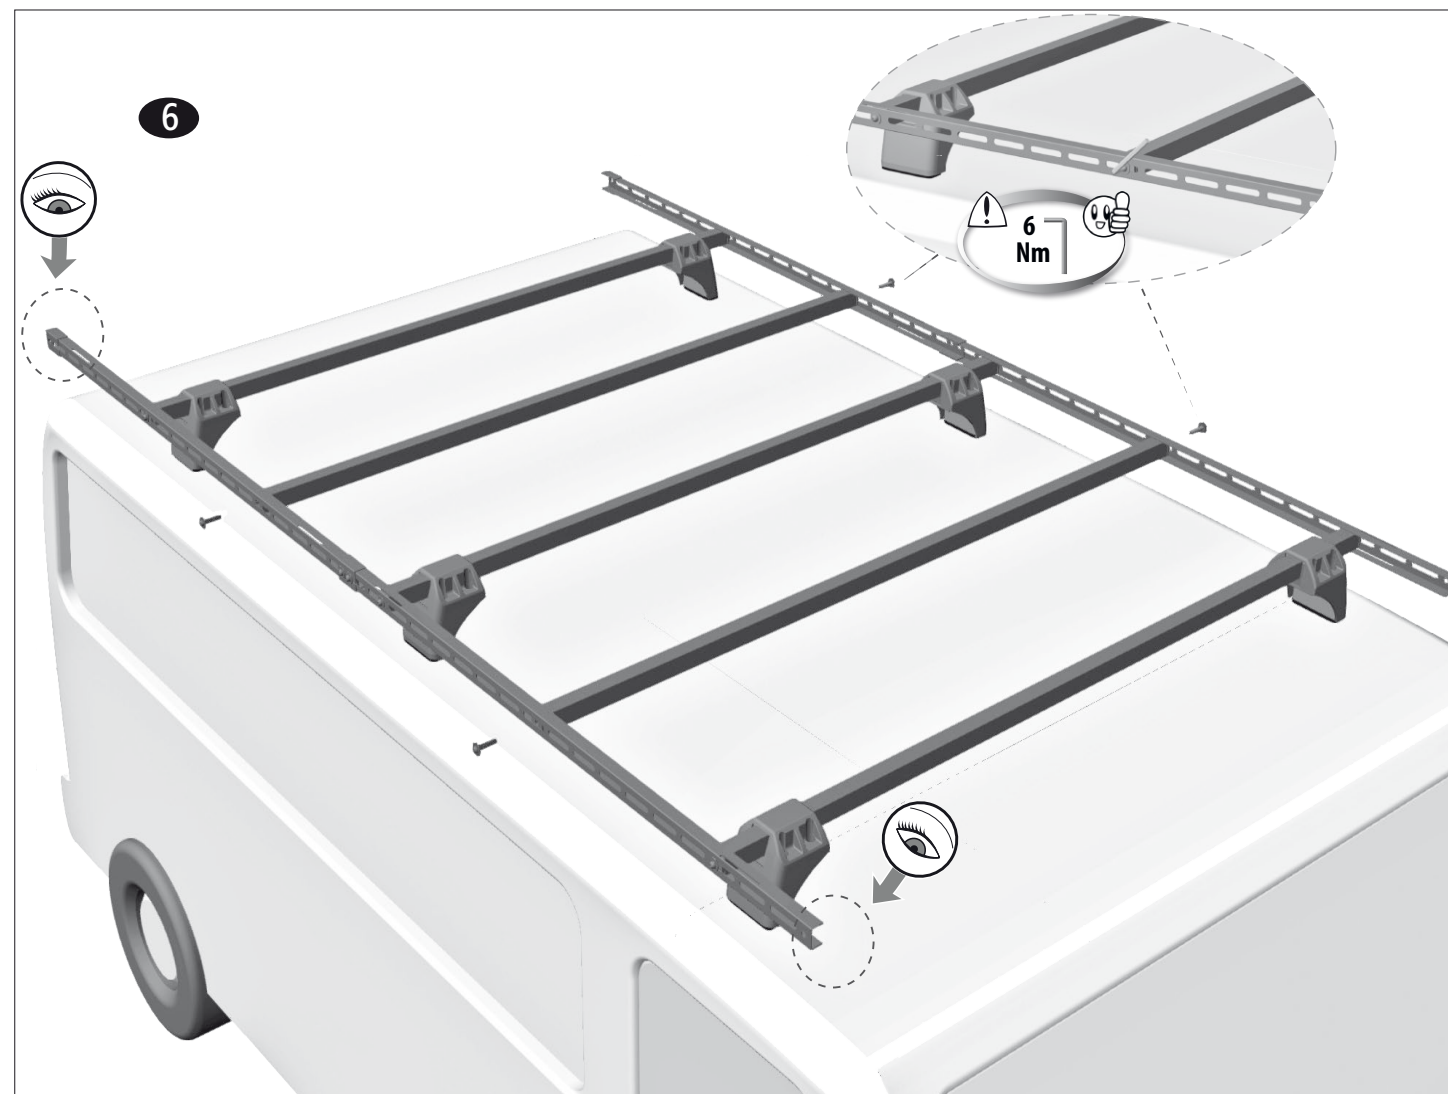



7



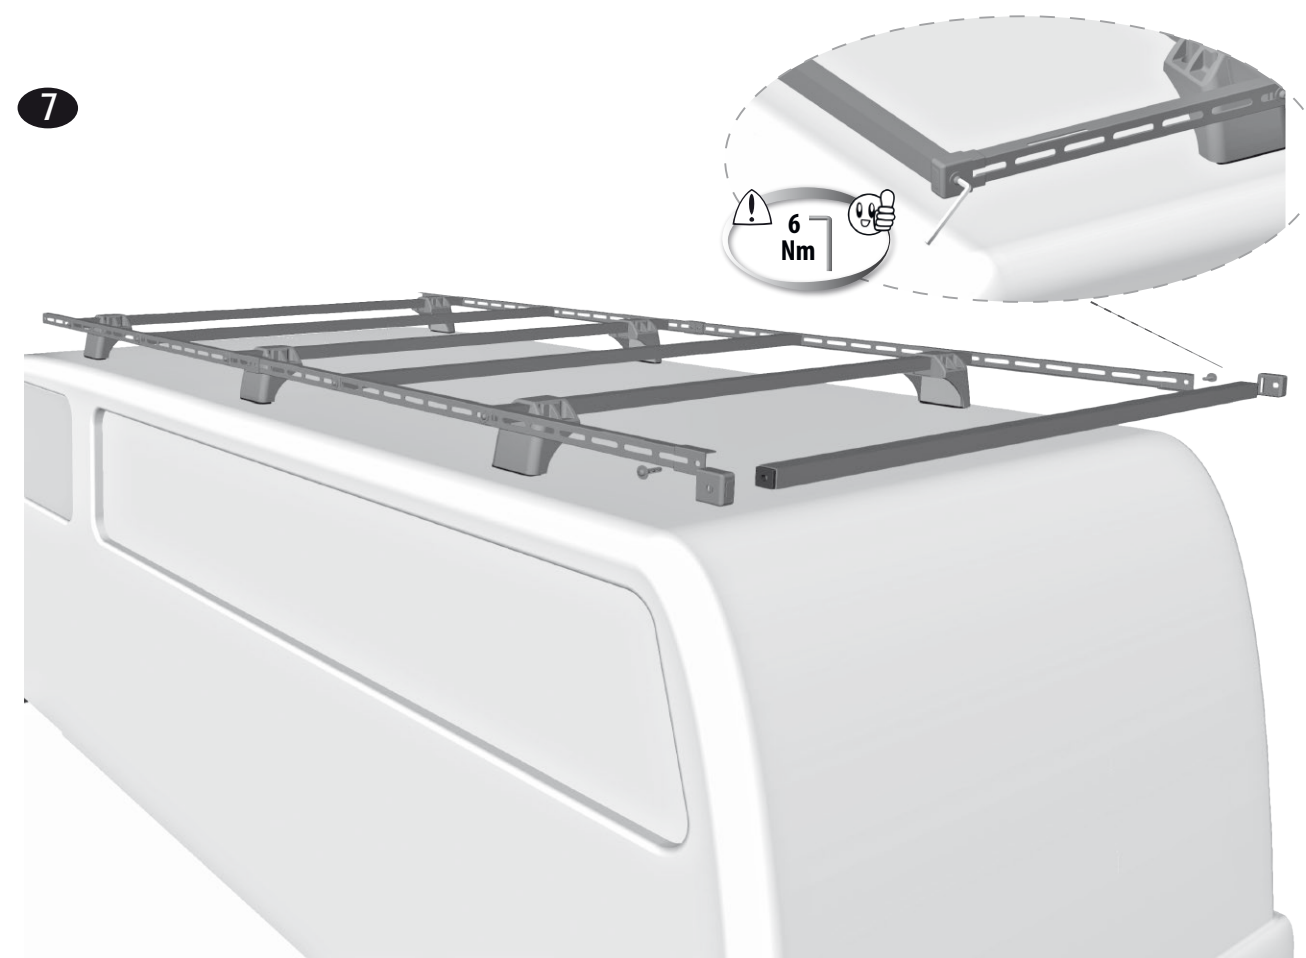





8

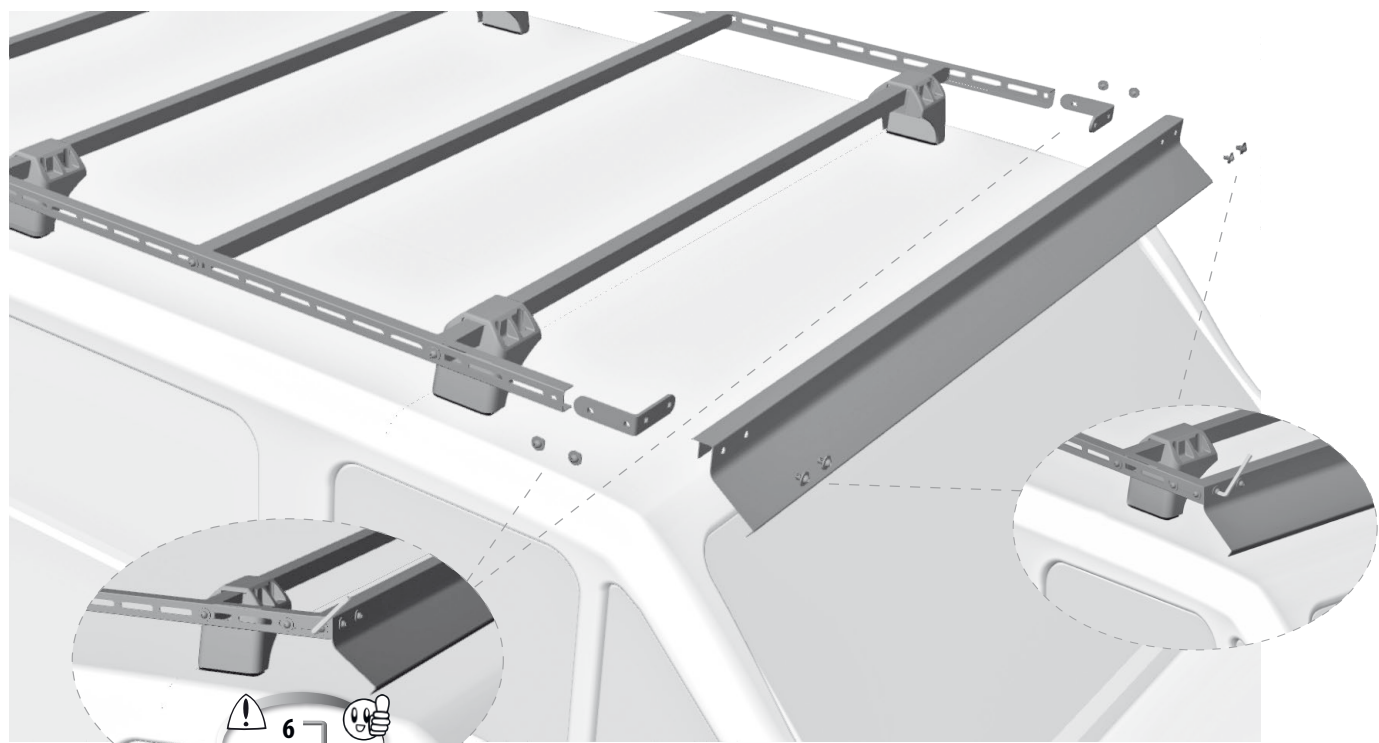


9

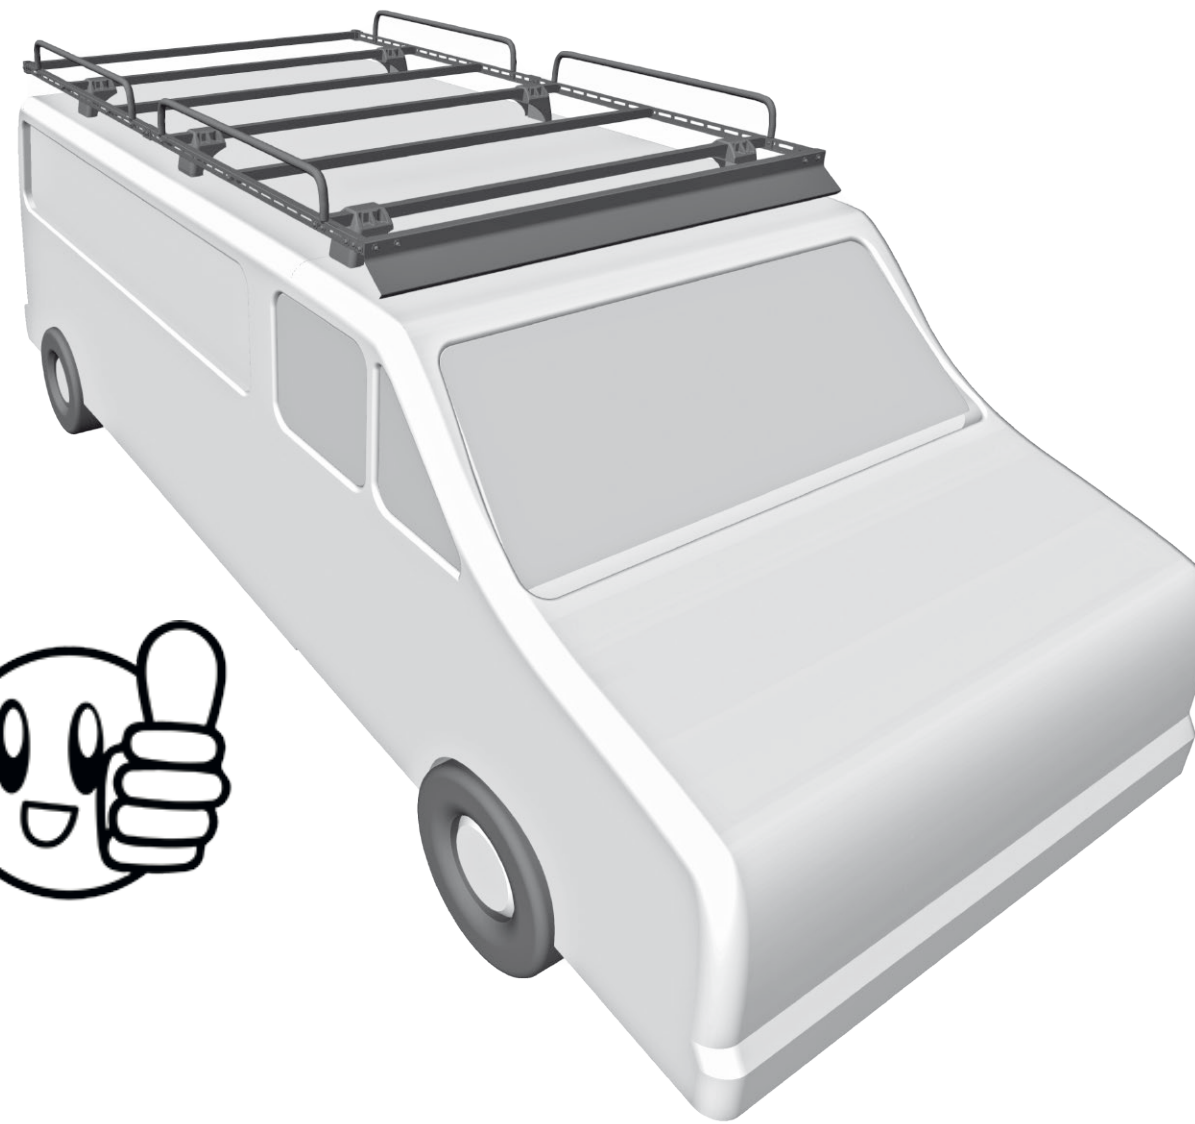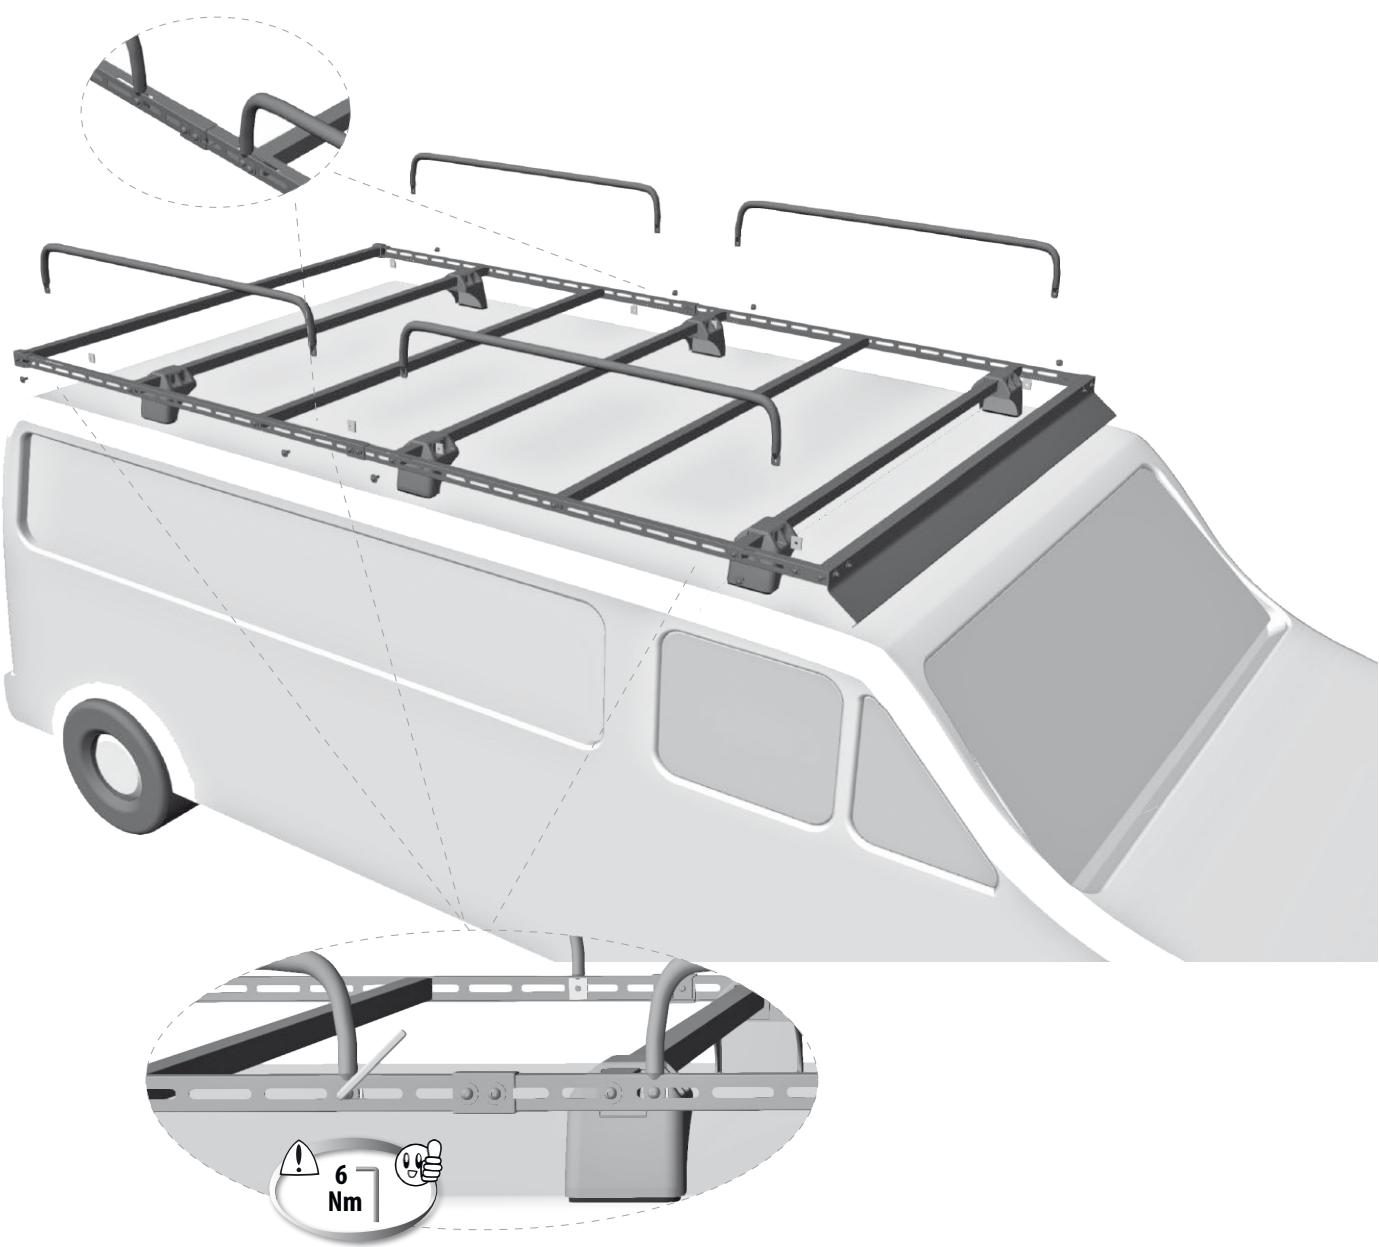

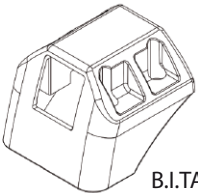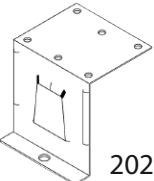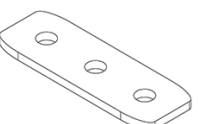N		Q
1	 B.I.TAP66	8
2	 202	8
3	 G3	8
4	 CH	8
5		1


N	BO0060 x2	Q
8	 DIN912 M6x20	32
9	 DIN125 Ø6	32
N	BO0020 x2	Q
10	 DIN9021 Ø6	8
N	BO0017 x2	Q
11	 DIN912 M6x20	8
N	BO0035 x2	Q
14	 DIN912 M6x30	8
N	BO0032 x2	Q
10	 DIN125 Ø8	8

E	Instrucciones de montaje	Kit de fijación
C	Instruccions de muntatge	Kit de fixació
GB	Assembly instrucctions	Fixation Kit
F	Instruction de montage	Kit fixation
D	Montageanleitung	Stützfuß-Kit
PT	Instruções de montagem	Kit fixação
I	Istruzioni di montaggio	Kit di fissaggio
PL	Instrukcja montażu	Element mocujący
CZ	Montážní návod	Fixační kit
HU	Szerelési Utasítás	Rögzítő készlet
RO	Instrucțiuni de montaj	Kit de fixare
HR	Detaljne upute	Kit za montažu
TU	Öncelikli montaj	Montaj kiti

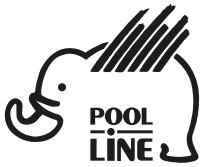




POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: E9 26R-03.1042

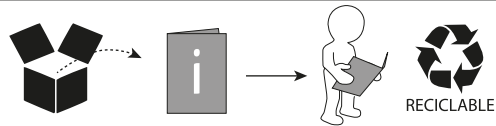

121911

Rv: 06/2024

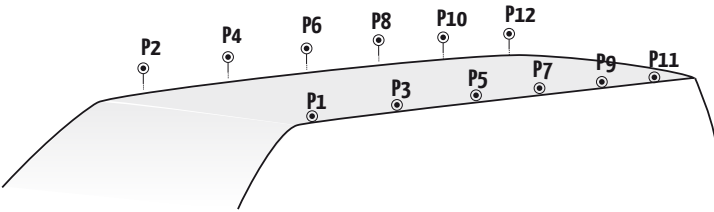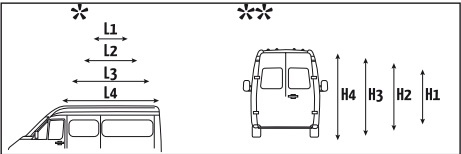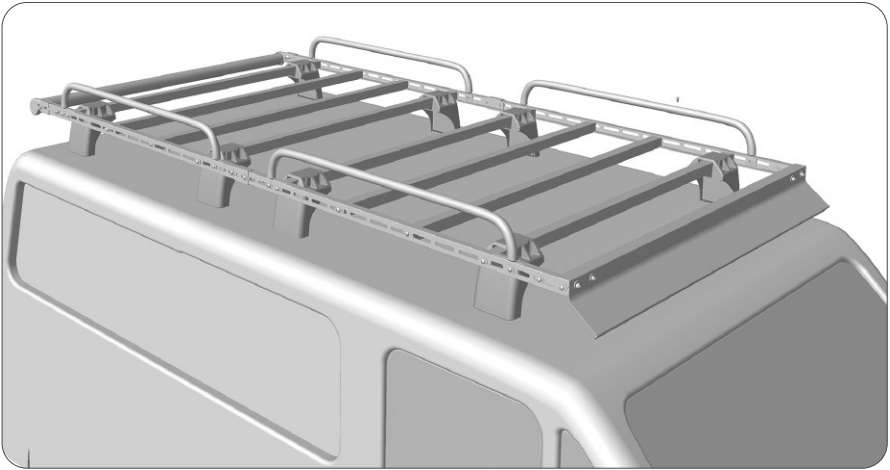

	L *	H **			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
FIAT																
Talento II	L1	H1	2016-	B00017 + B00020	202	202			202	202			202	202	202	202
Talento II	L2	H2	2016-	B00017 + B00020	202	202			202	202			202	202	202	202
FORD																
Transit VI	L3	H2	2014-	B00035 + B00032	202	202	202	202			202	202			202	202
Transit VI	L3	H3	2014-	B00035 + B00032	202	202	202	202			202	202			202	202
MERCEDES																
Sprinter II (W906/W907)	L1	H1	2006-	B00017 + B00020	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH			202+CH	202+CH
Sprinter II (W906/W907)	L1	H2	2006-	B00017 + B00020	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH			202+CH	202+CH
NISSAN																
NV300 (X82)	L1	H1	16 - 22	B00017 + B00020	202	202			202	202			202	202	202	202
NV300 (X82)	L2	H1	16 - 22	B00017 + B00020	202	202			202	202			202	202	202	202
Primastar (X82)	L1	H1	2022-	B00017 + B00020	202	202			202	202			202	202	202	202
Primastar (X82)	L2	H1	2022-	B00017 + B00020	202	202			202	202			202	202	202	202
OPEL																
Vivaro B	L1	H1	14- 19	B00017 + B00020	202	202			202	202			202	202	202	202
Vivaro B	L2	H1	14- 19	B00017 + B00020	202	202			202	202			202	202	202	202
RENAULT																
Trafic III	L1	H1	2014-	B00017 + B00020	202	202			202	202			202	202	202	202
Trafic III	L2	H1	2014-	B00017 + B00020	202	202			202	202			202	202	202	202
VOLKSWAGEN																
Crafter	L1	H1	06 - 17	B00017 + B00020	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH			202+CH	202+CH
Crafter	L1	H2	06 - 17	B00017 + B00020	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH			202+CH	202+CH
T5 (con rail opcional)	L1	H1	03 - 15	B00017 + B00020	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH			202+CH	202+CH
T5	L1	H1	03 - 15	B00017 + B00020	202	202	202	202	202	202	202	202	202	202	202	202
T6 (con rail opcional)	L1	H1	2015-	B00017 + B00020	202+CH	202+CH	202+CH	202+CH	202	202	202+CH	202+CH	202	202	202+CH	202+CH
T6	L1	H1	2015-	B00017 + B00020	202	202	202	202	202	202	202	202	202	202	202	202

