


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

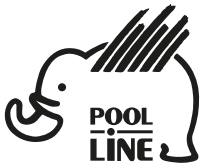

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net



200 KG.
MAX.



Nº HOMOLOGACIÓN: E9 26R-03.1042




RECICLABLE

123312

Rv: 10/2024

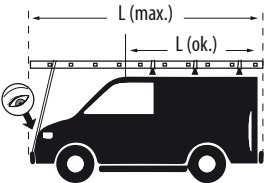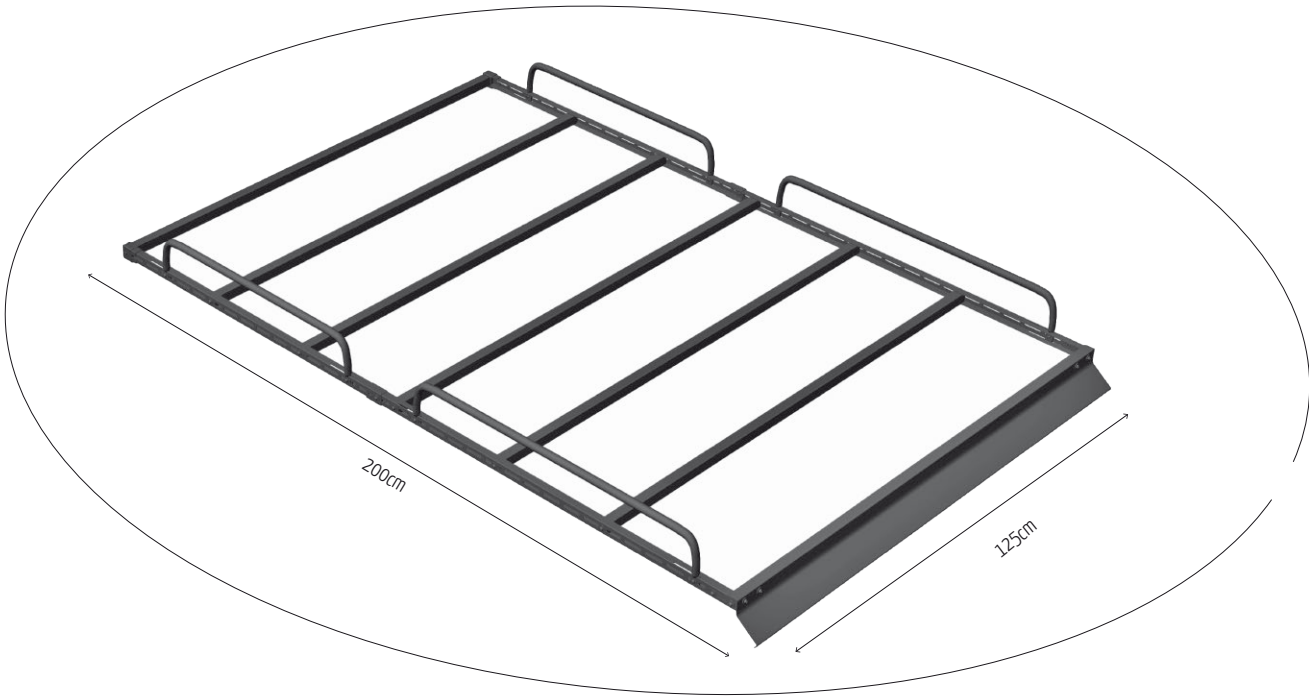


N		Q
1	 S-1250	1
2	 L-1120	2
3	 B-842	2
4	 L-943	2
5	 B-662	2
6	 T-1235	6
7	 	2
8	 	12
9	 	2
10	 	8
12	 	1
13	 CHA-M8	12
14	 ISO 7380 M8x30	10
15	 ISO 7380 M8x16	20
16	 DIN 125 Ø 8	32
17	 ISO 7380 M8x40	2

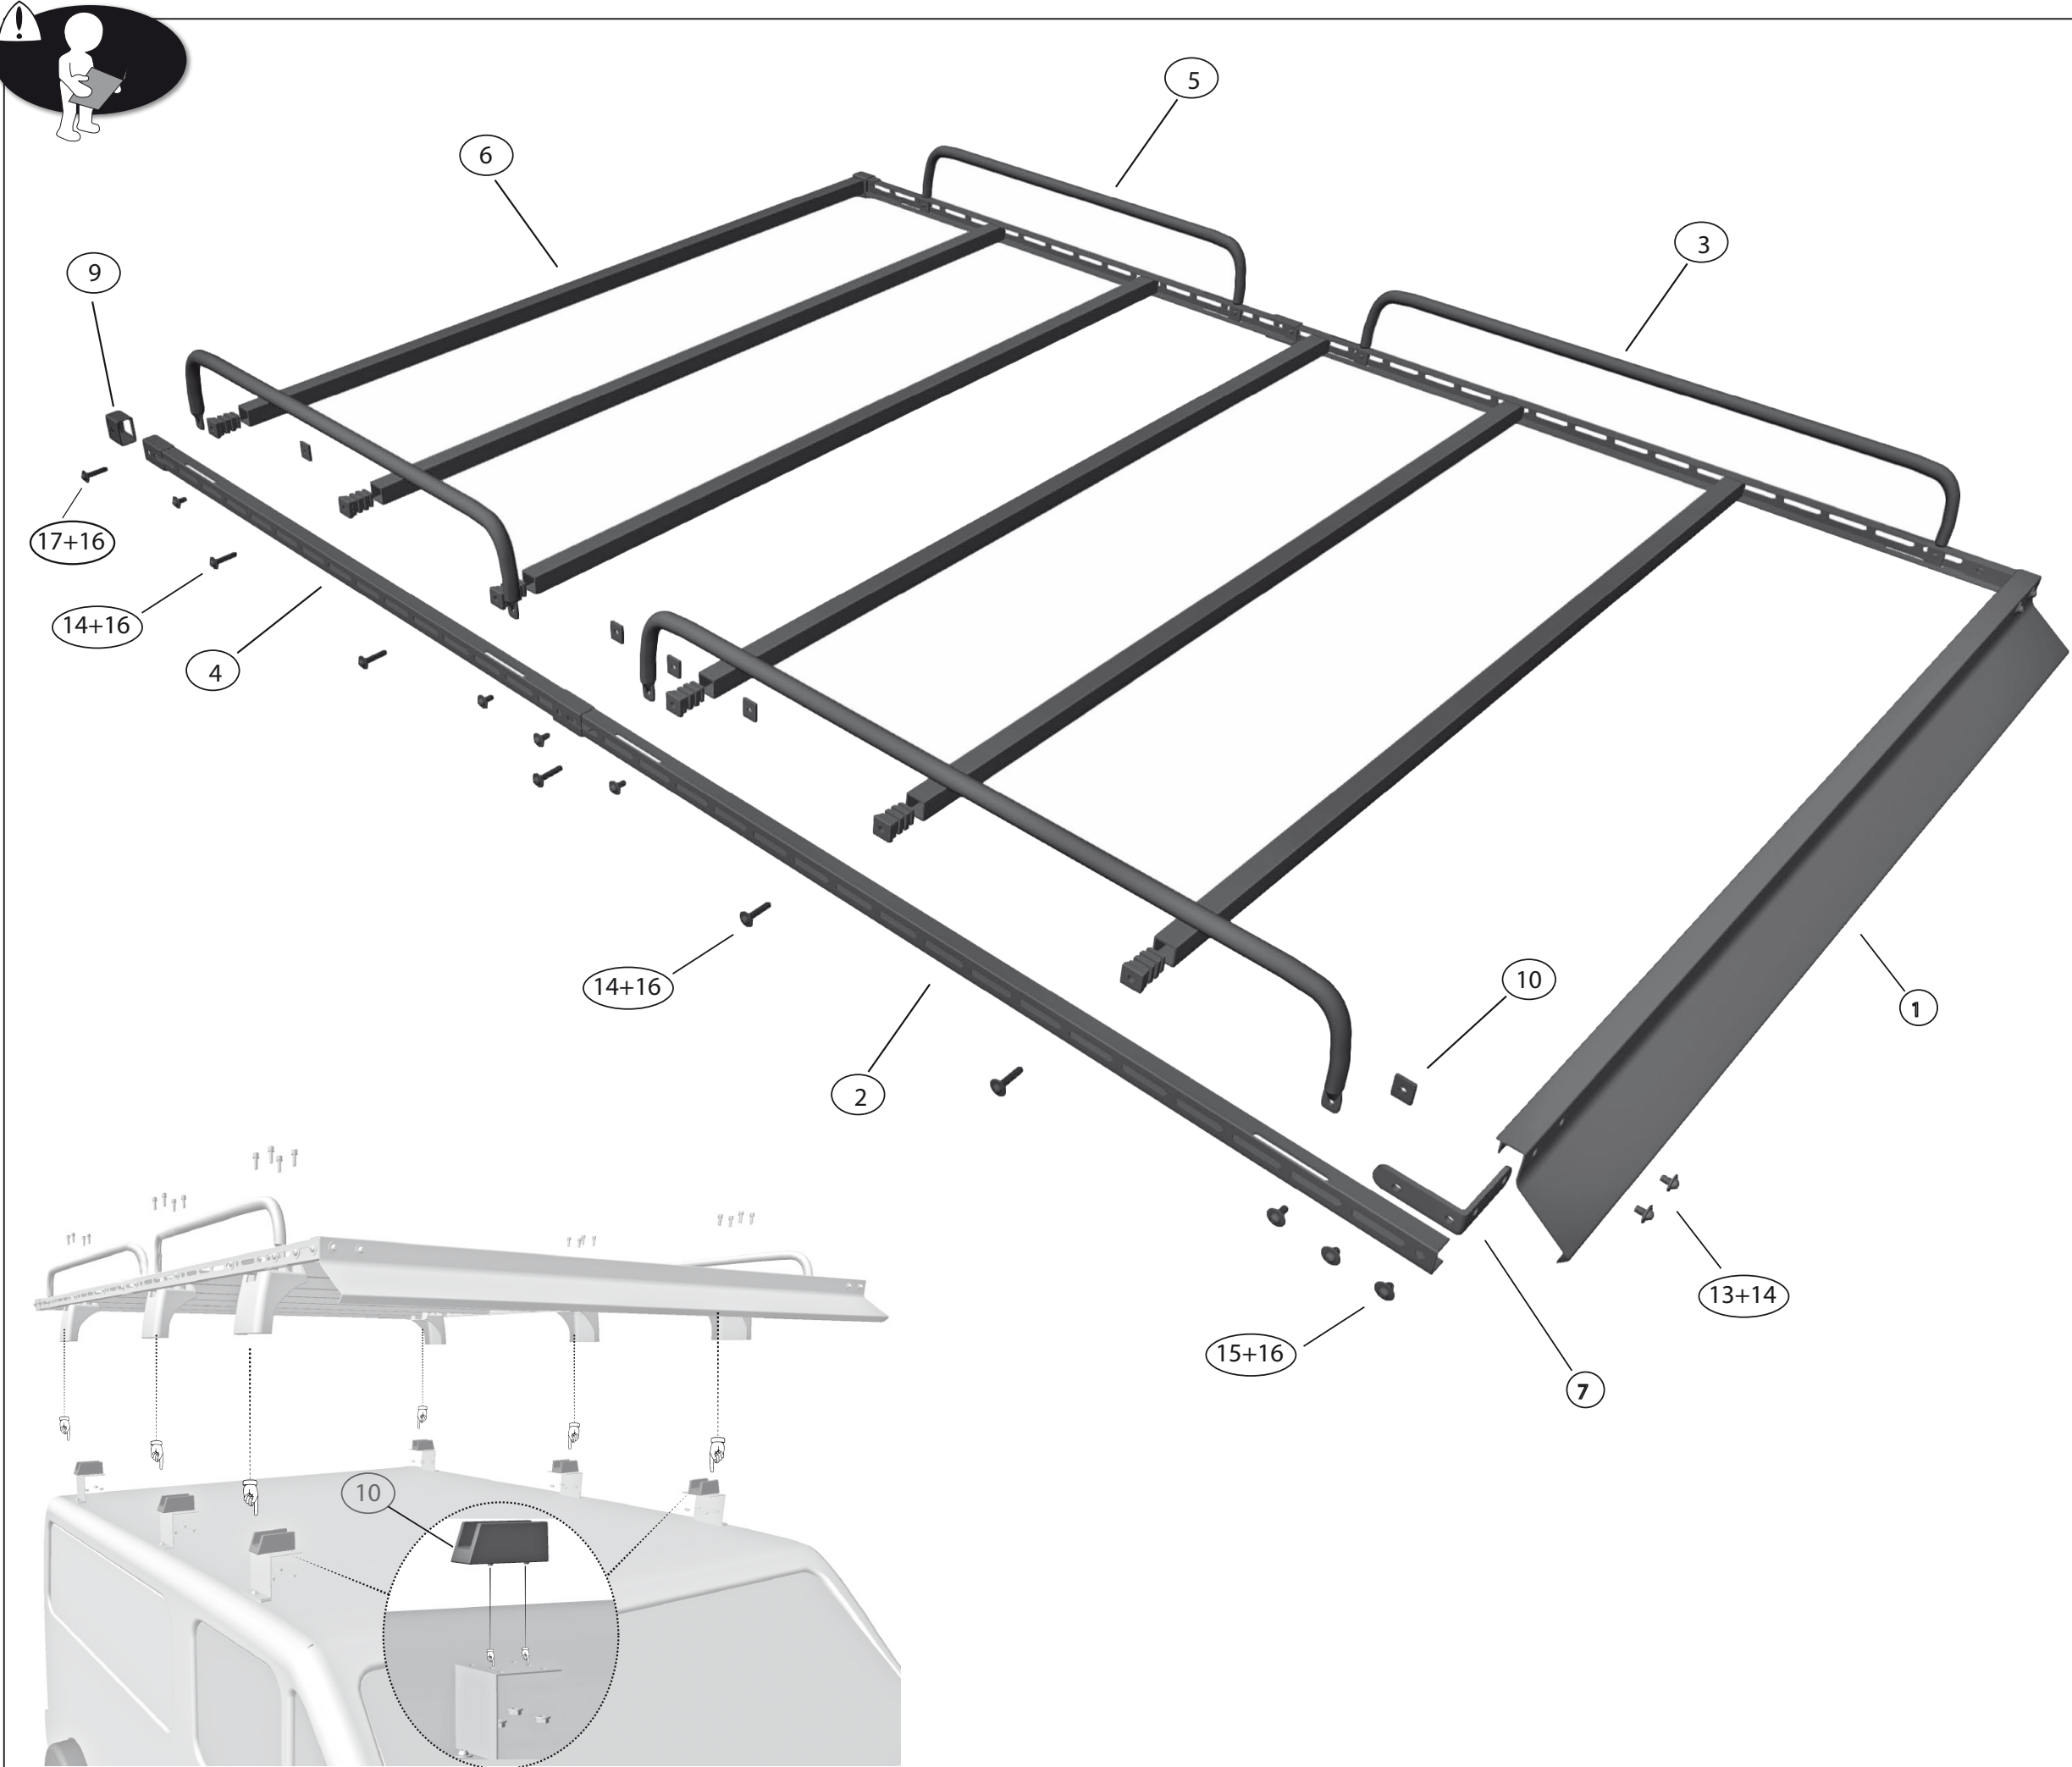




CITROËN BERLINGO I / PEUGEOT PARTENR I

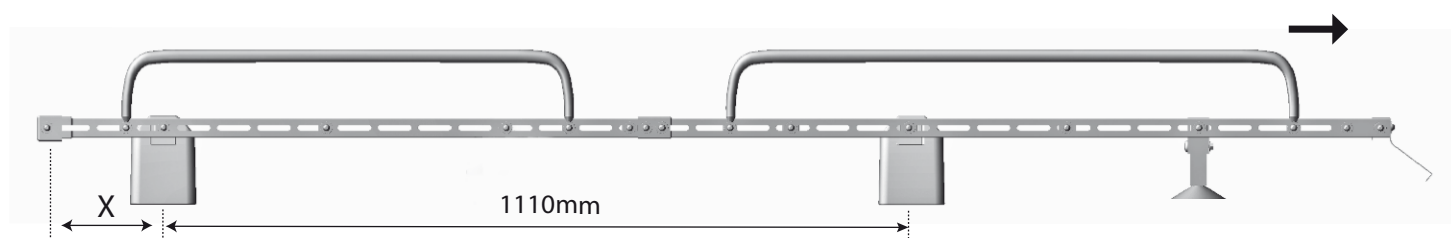


200mm = X

CITROËN JUMPY I / FIAT SCUDO I / PEUGEOT EXPERT I

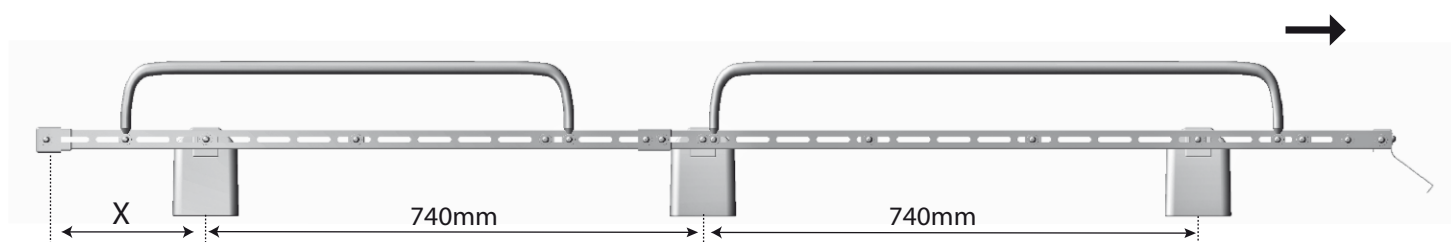


210mm = X

DACIA DOKKER VAN

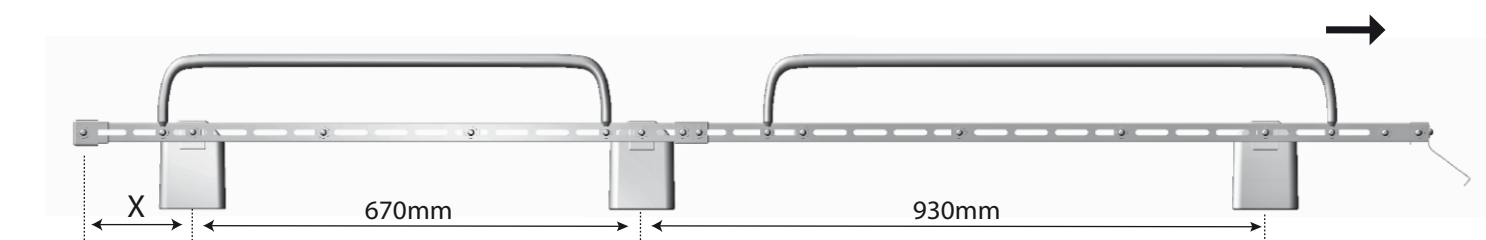


100mm = X 70mm = X

FORD TOURNEO CONNECT I L1 / FORD TRANSIT CONNEC I T L1

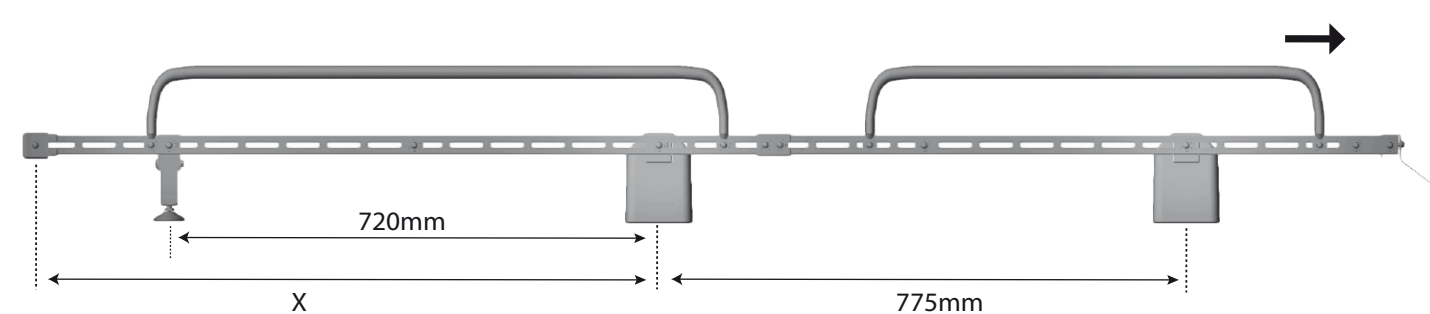


900mm = X

FORD TOURNEO CONNECT I L2 / FORD TRANSIT CONNEC I T L2

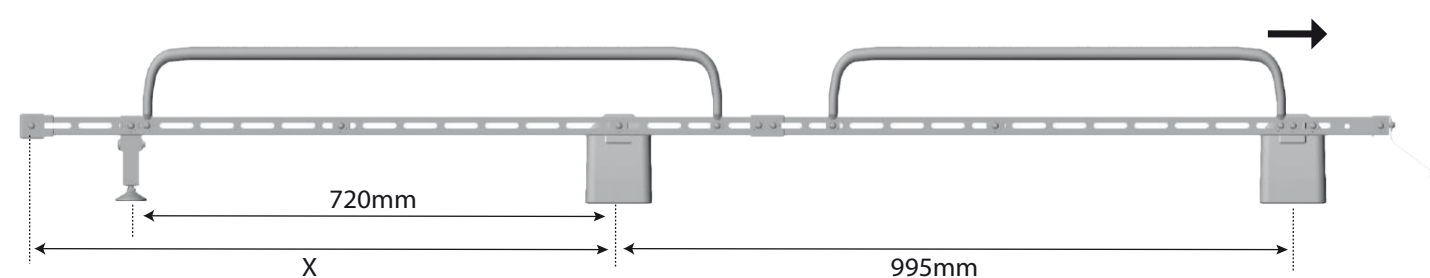

800mm = X


FORD TRANSIT CONNECT VAN II (2013->)

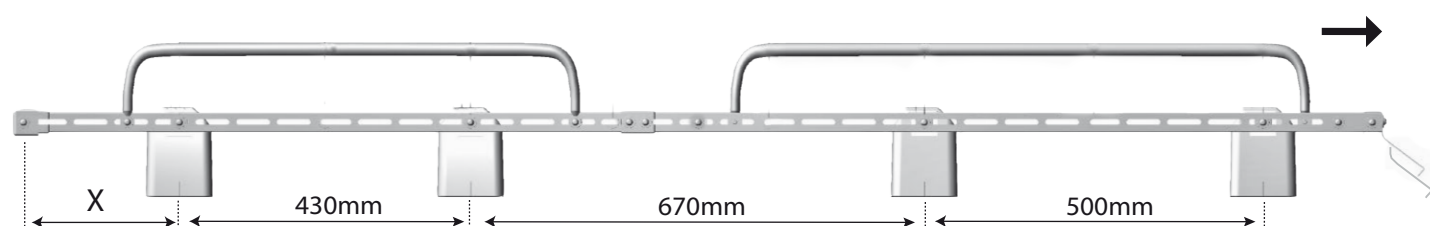

300mm = X




FORD COURIER II (2013->)

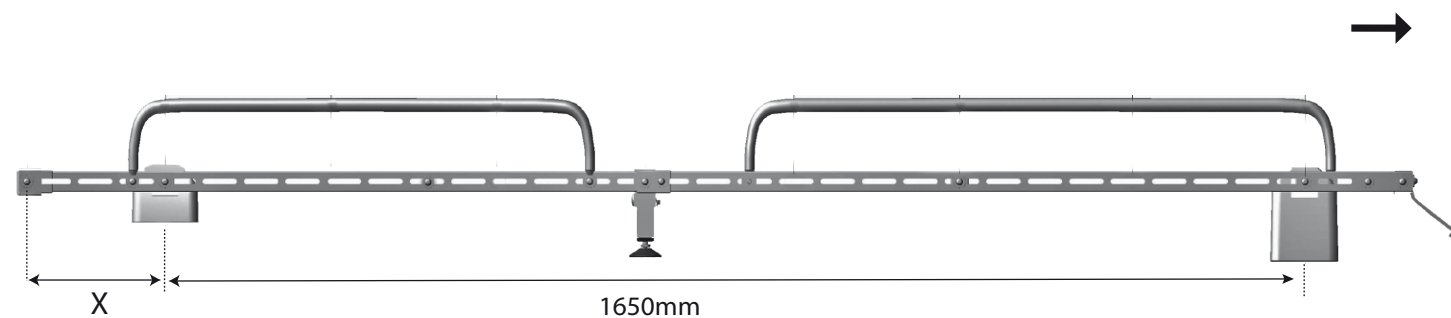


200mm = X

RENAULT EXPRESS (2021->)

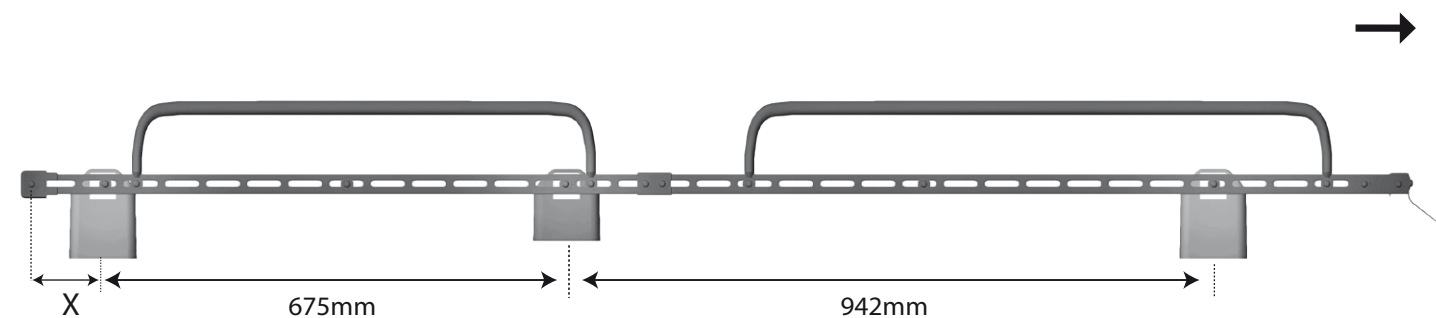


100mm = X

MERCEDES CITAN W415 L2 / NISSAN NV250 L1 / RENAULT KANGOO II L2

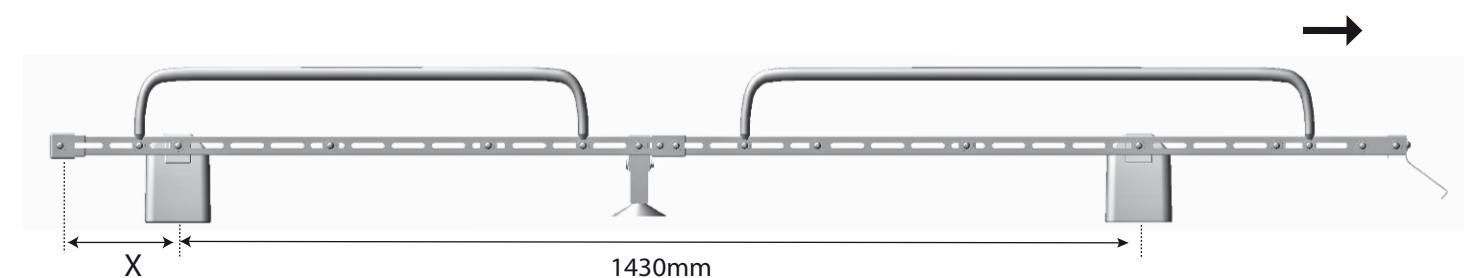


100mm = X

MERCEDES CITAN 420 L1 (2021->) / RENAULT KANGOO III (2021->)

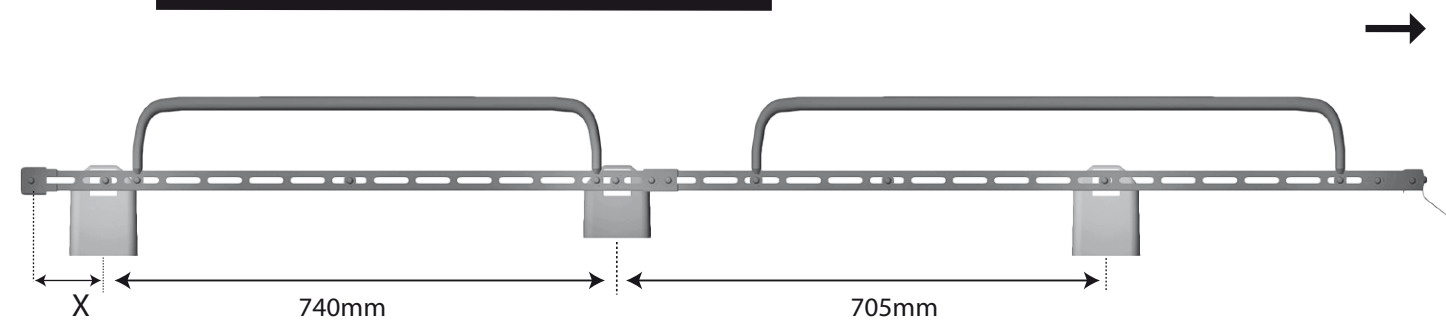


100mm = X

VOLKSWAGEN CADDY IV L1

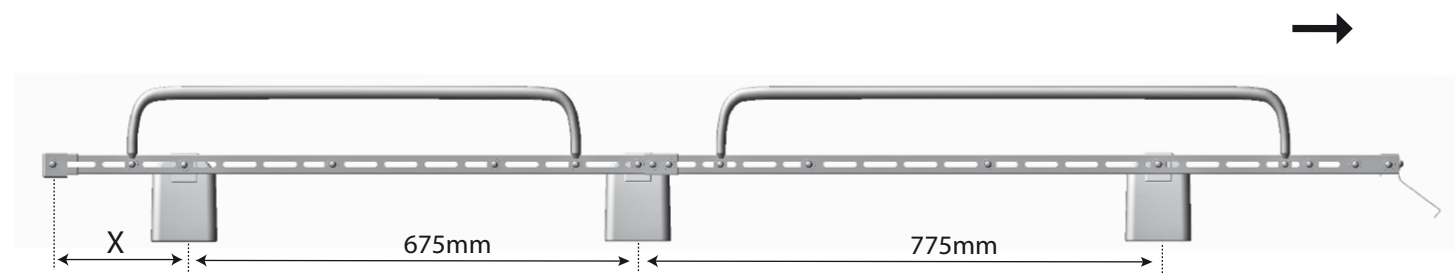


300mm = X



1




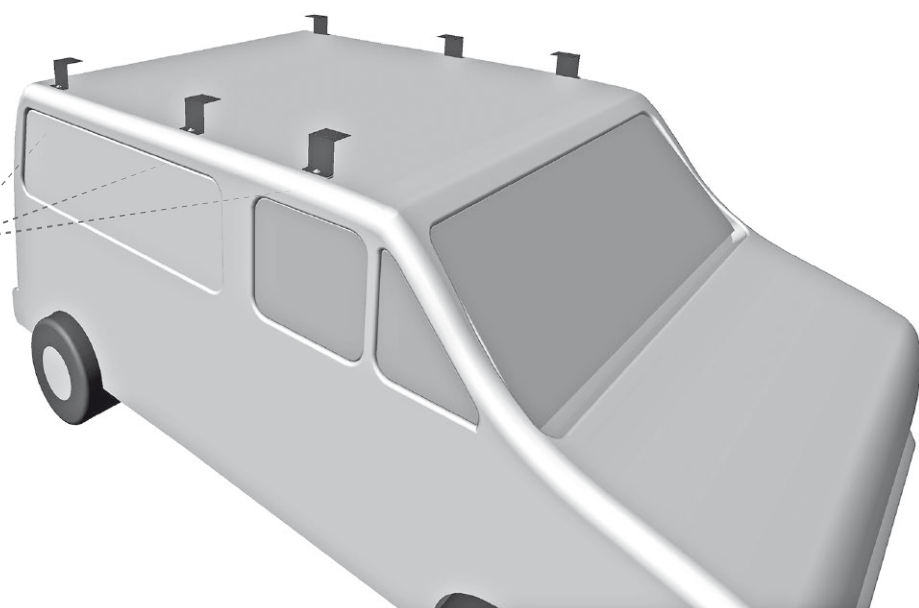


2

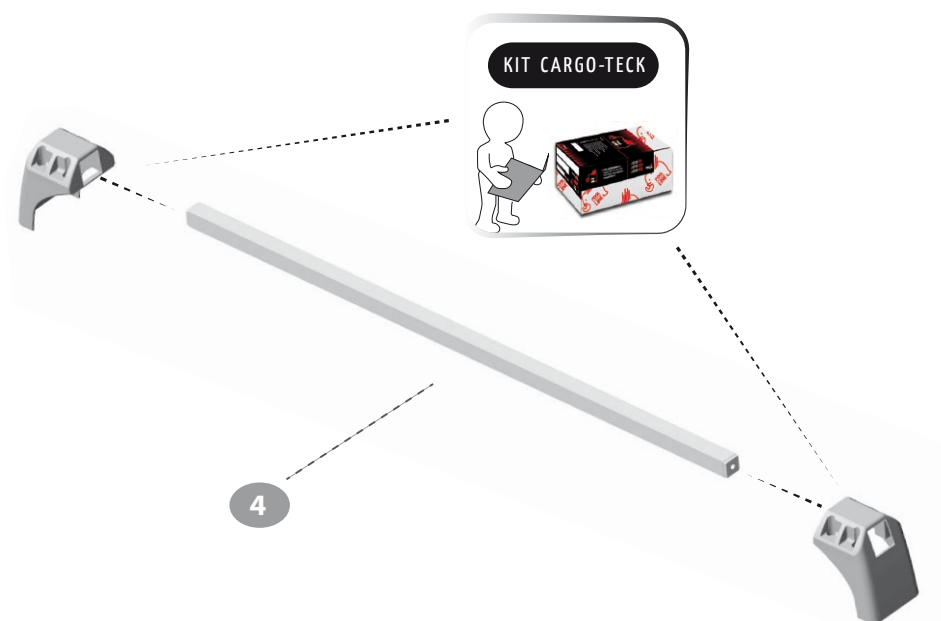


3

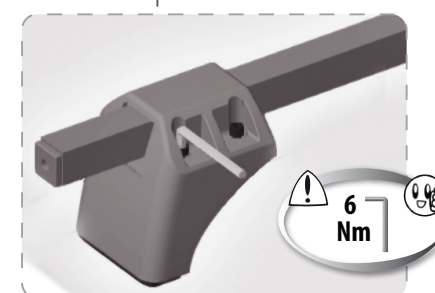
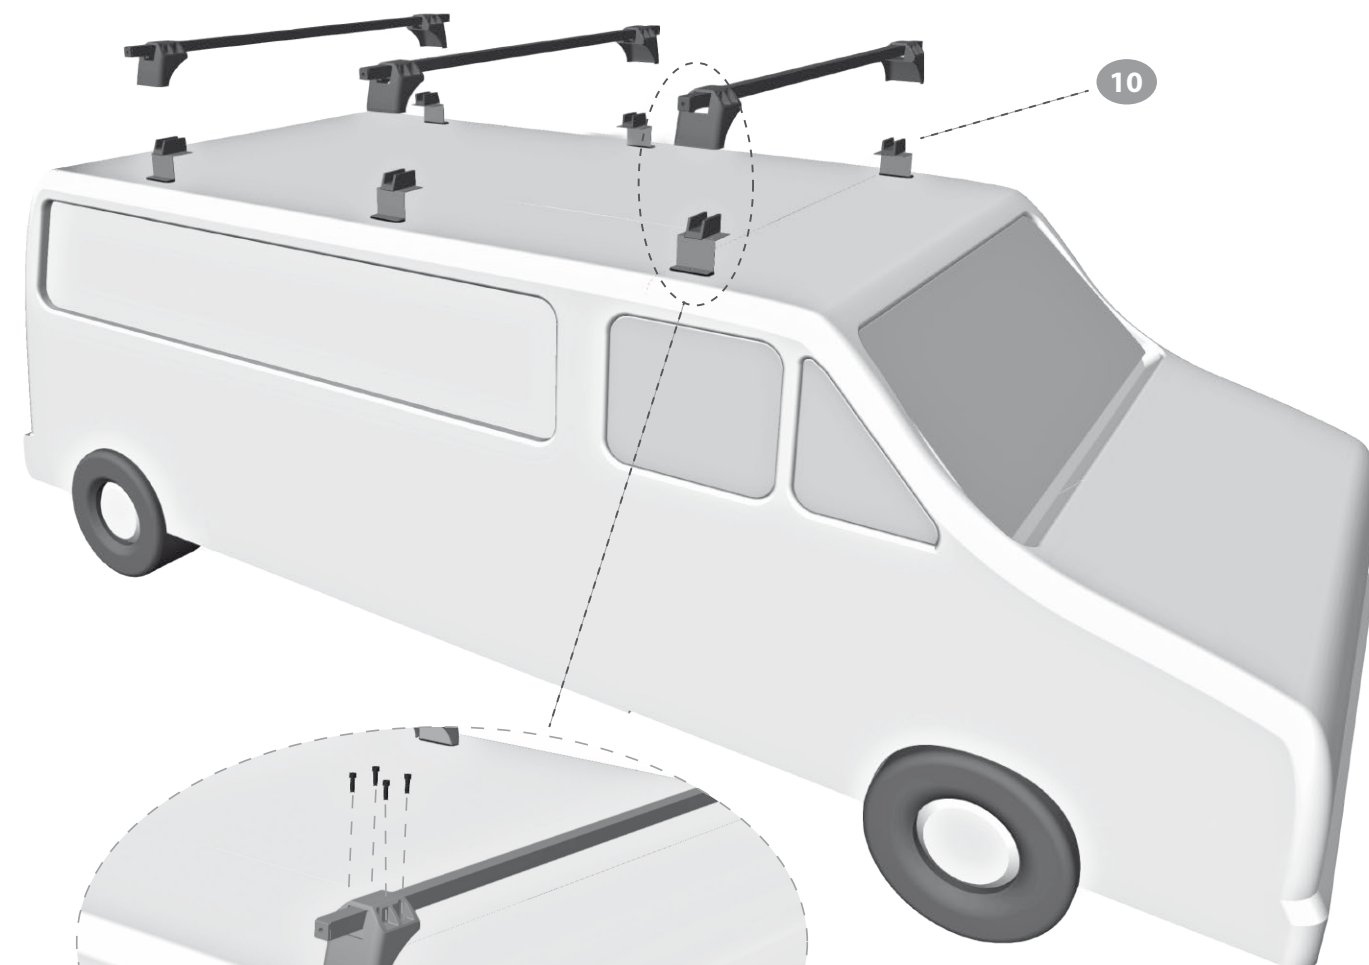


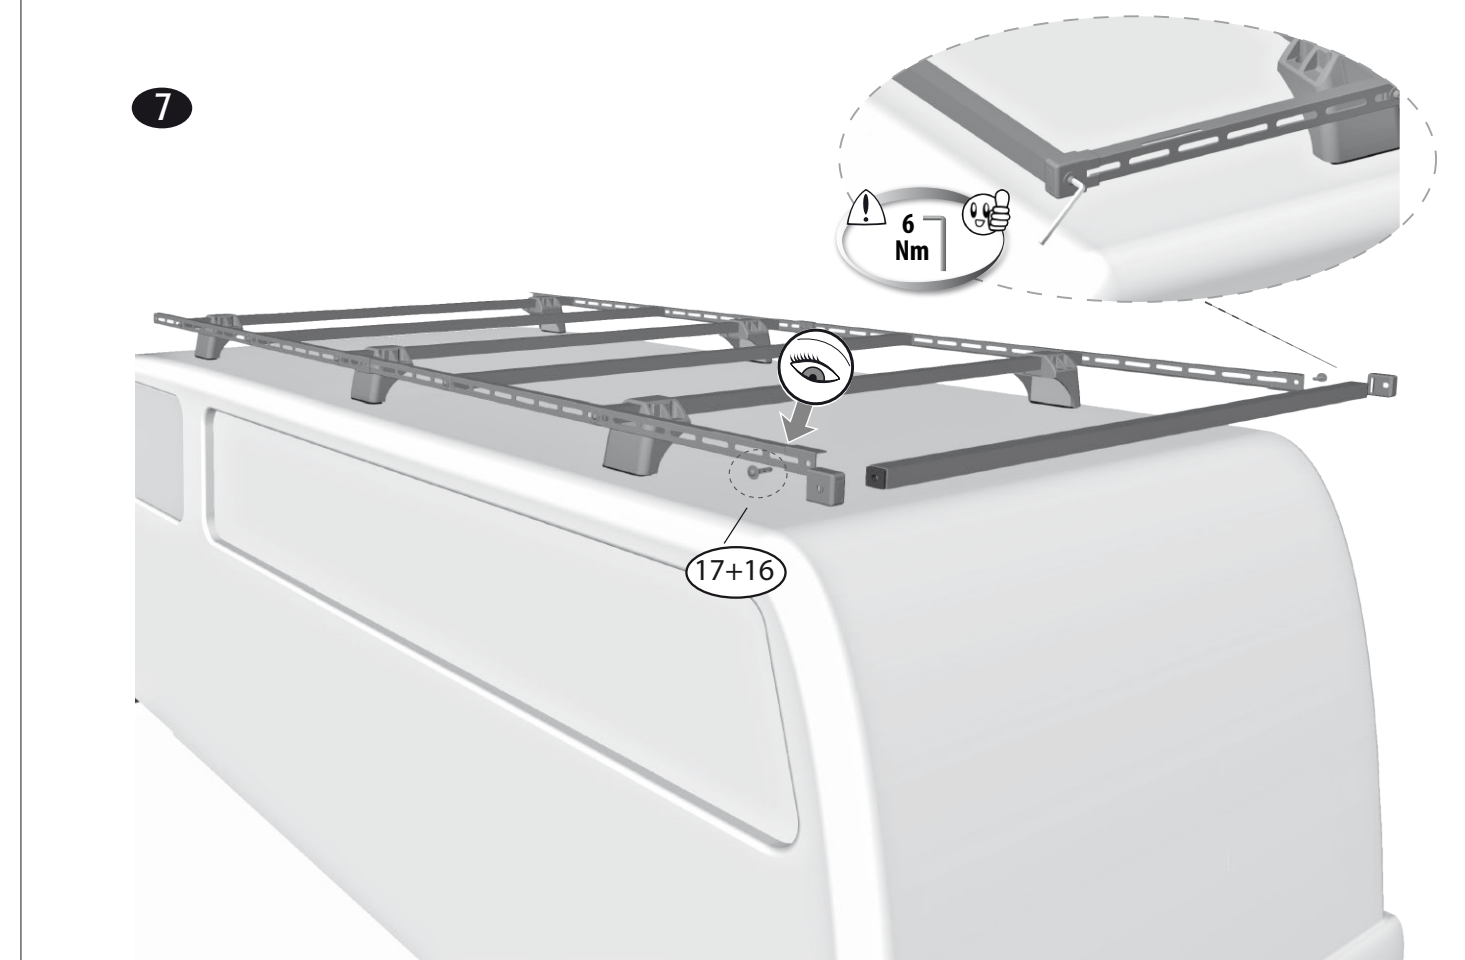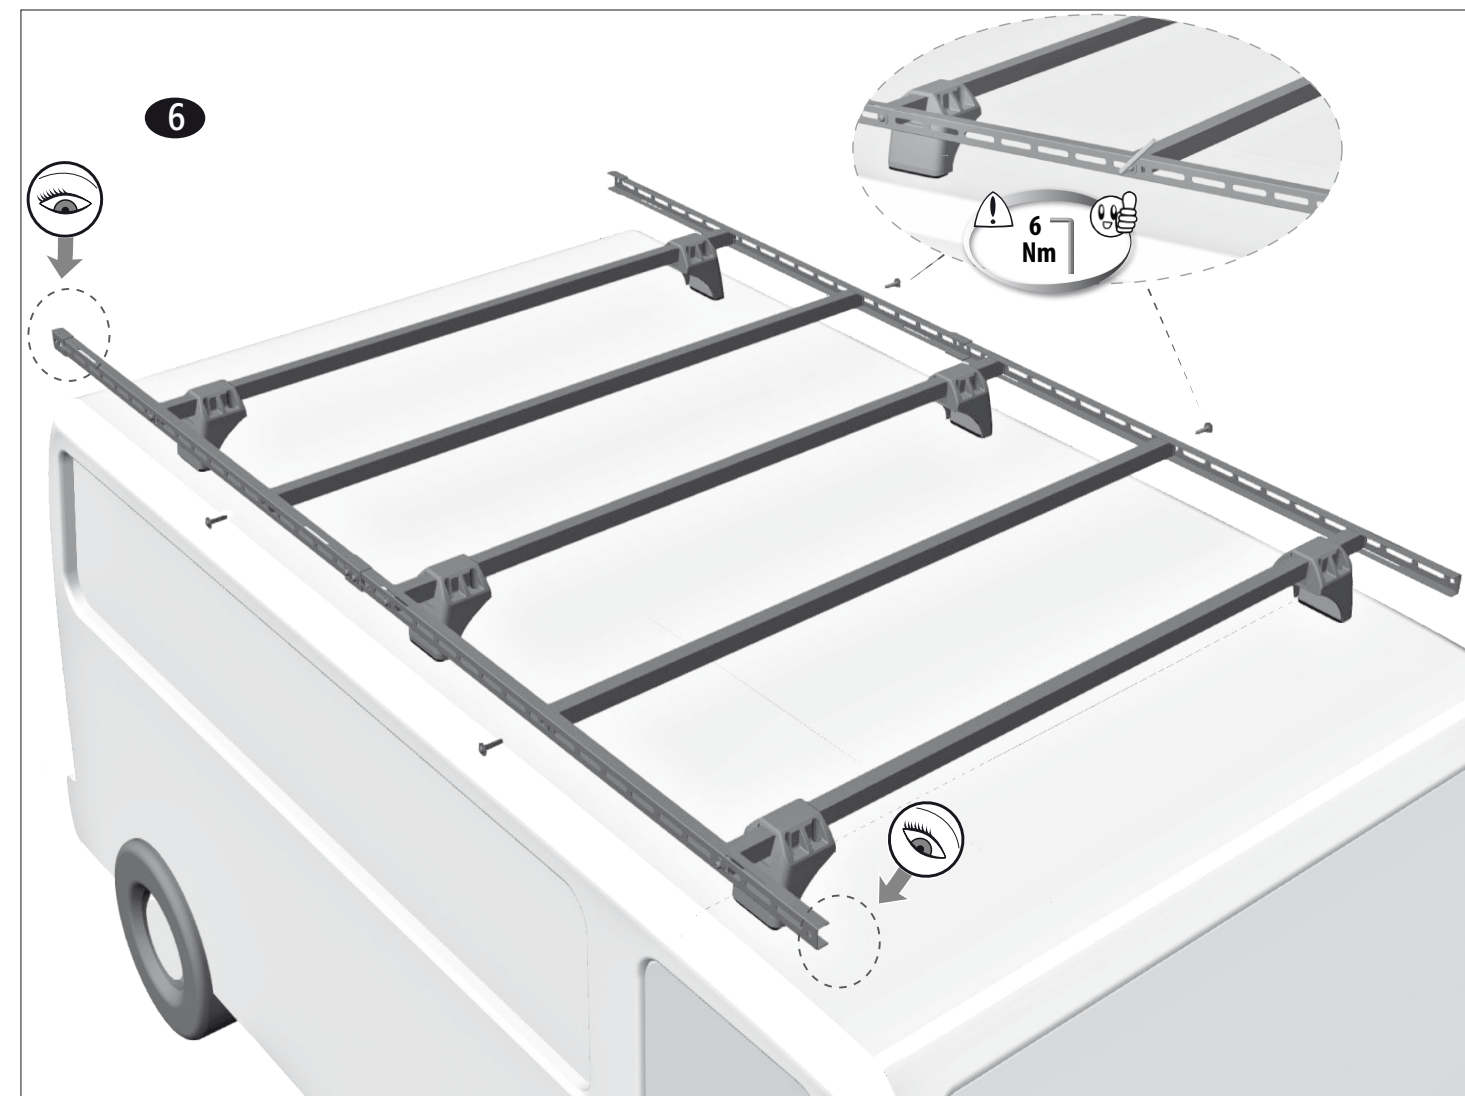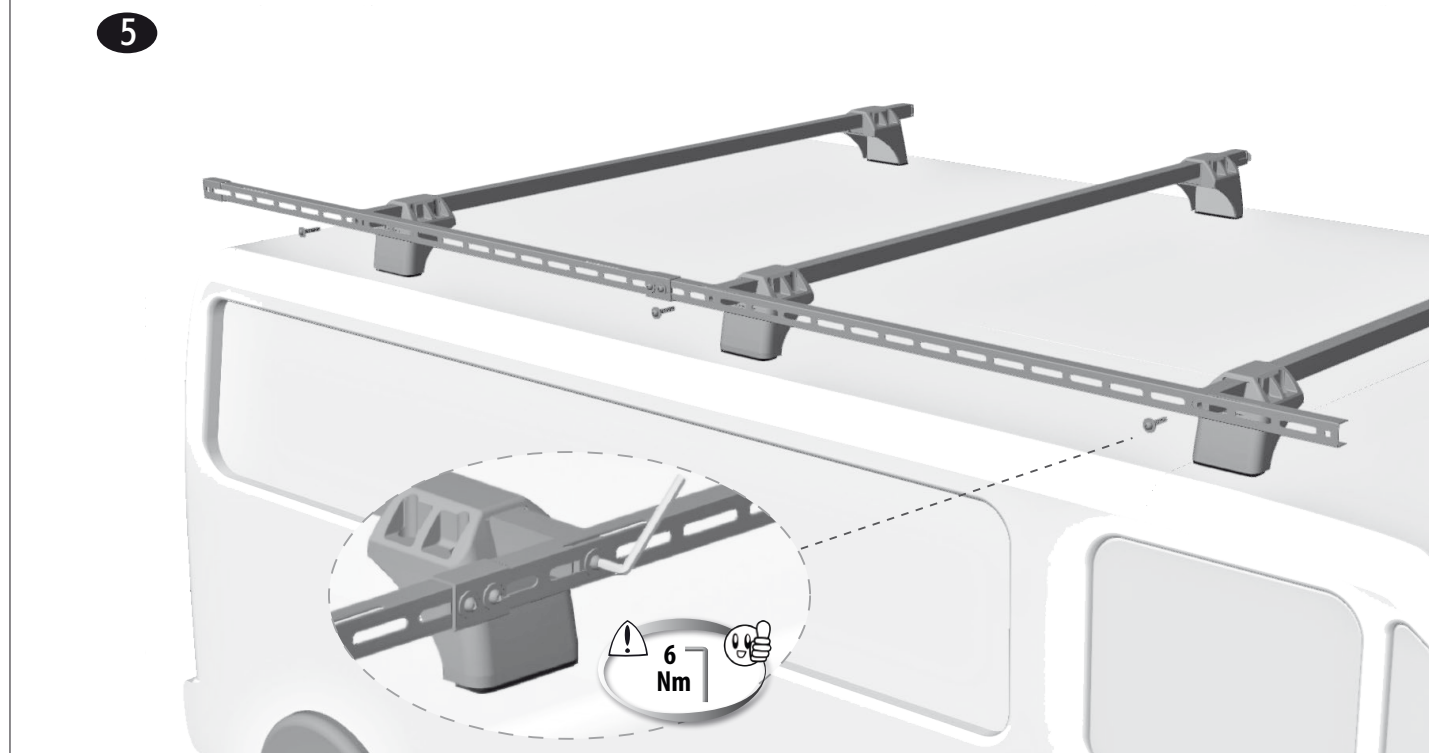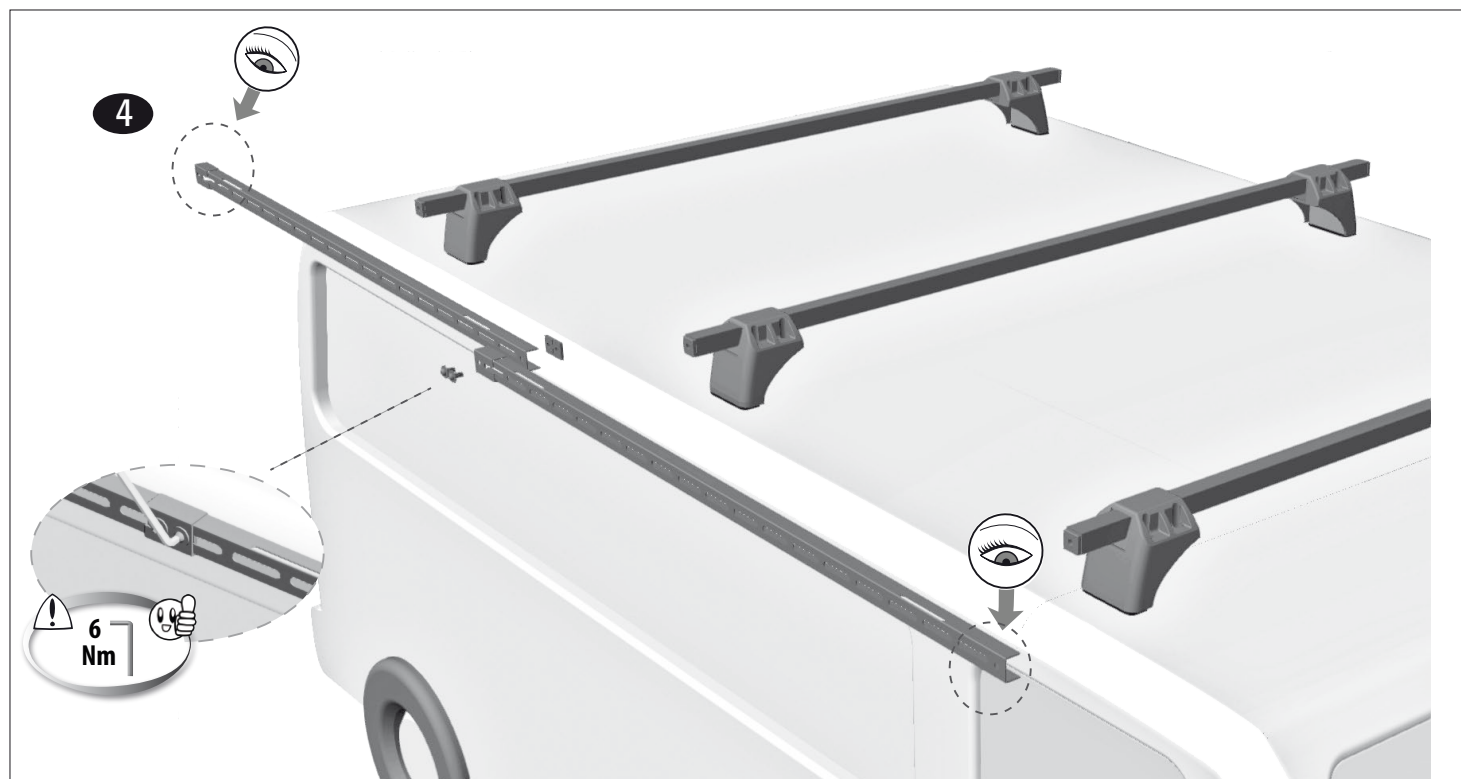


8





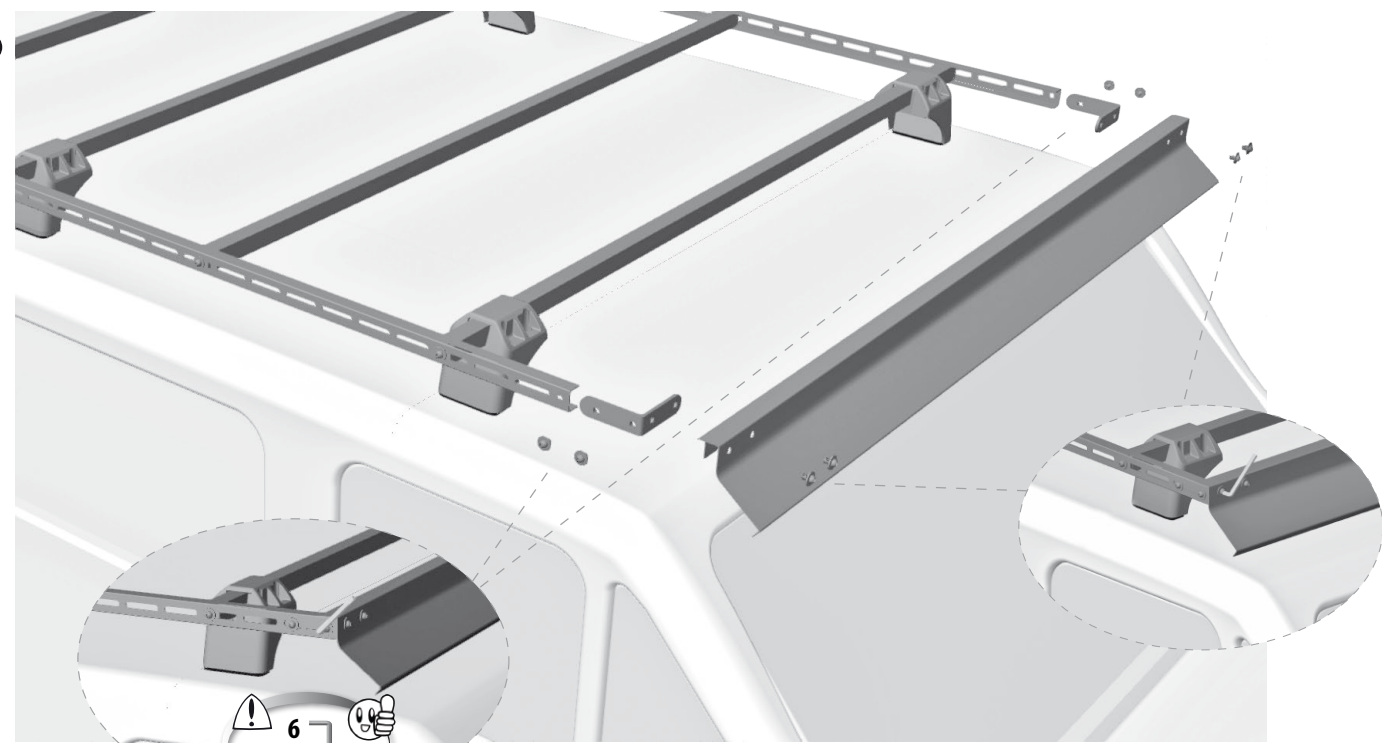


9

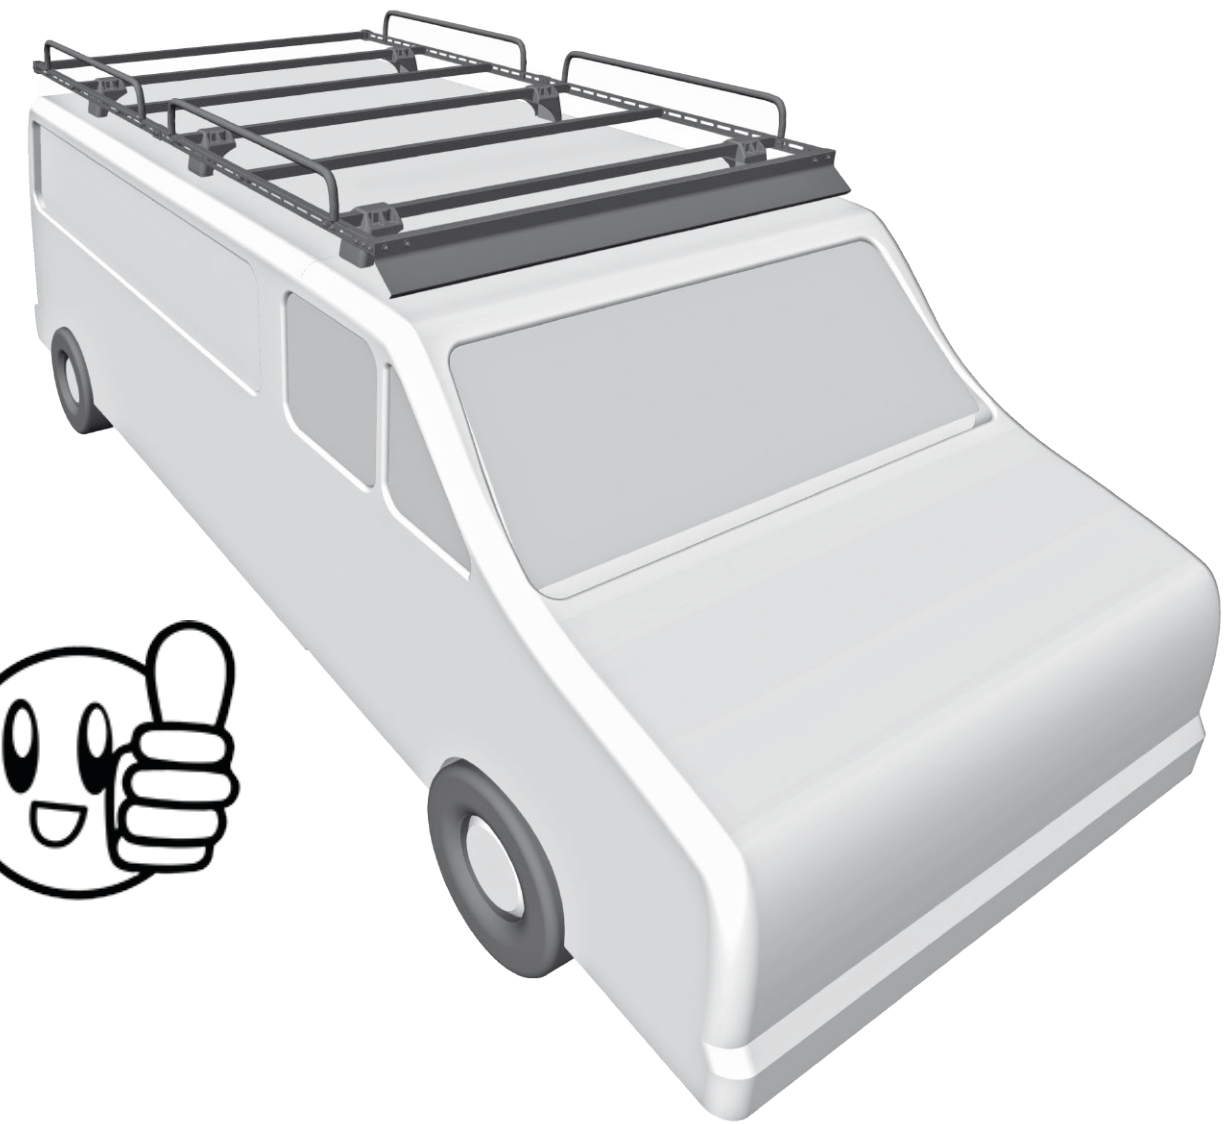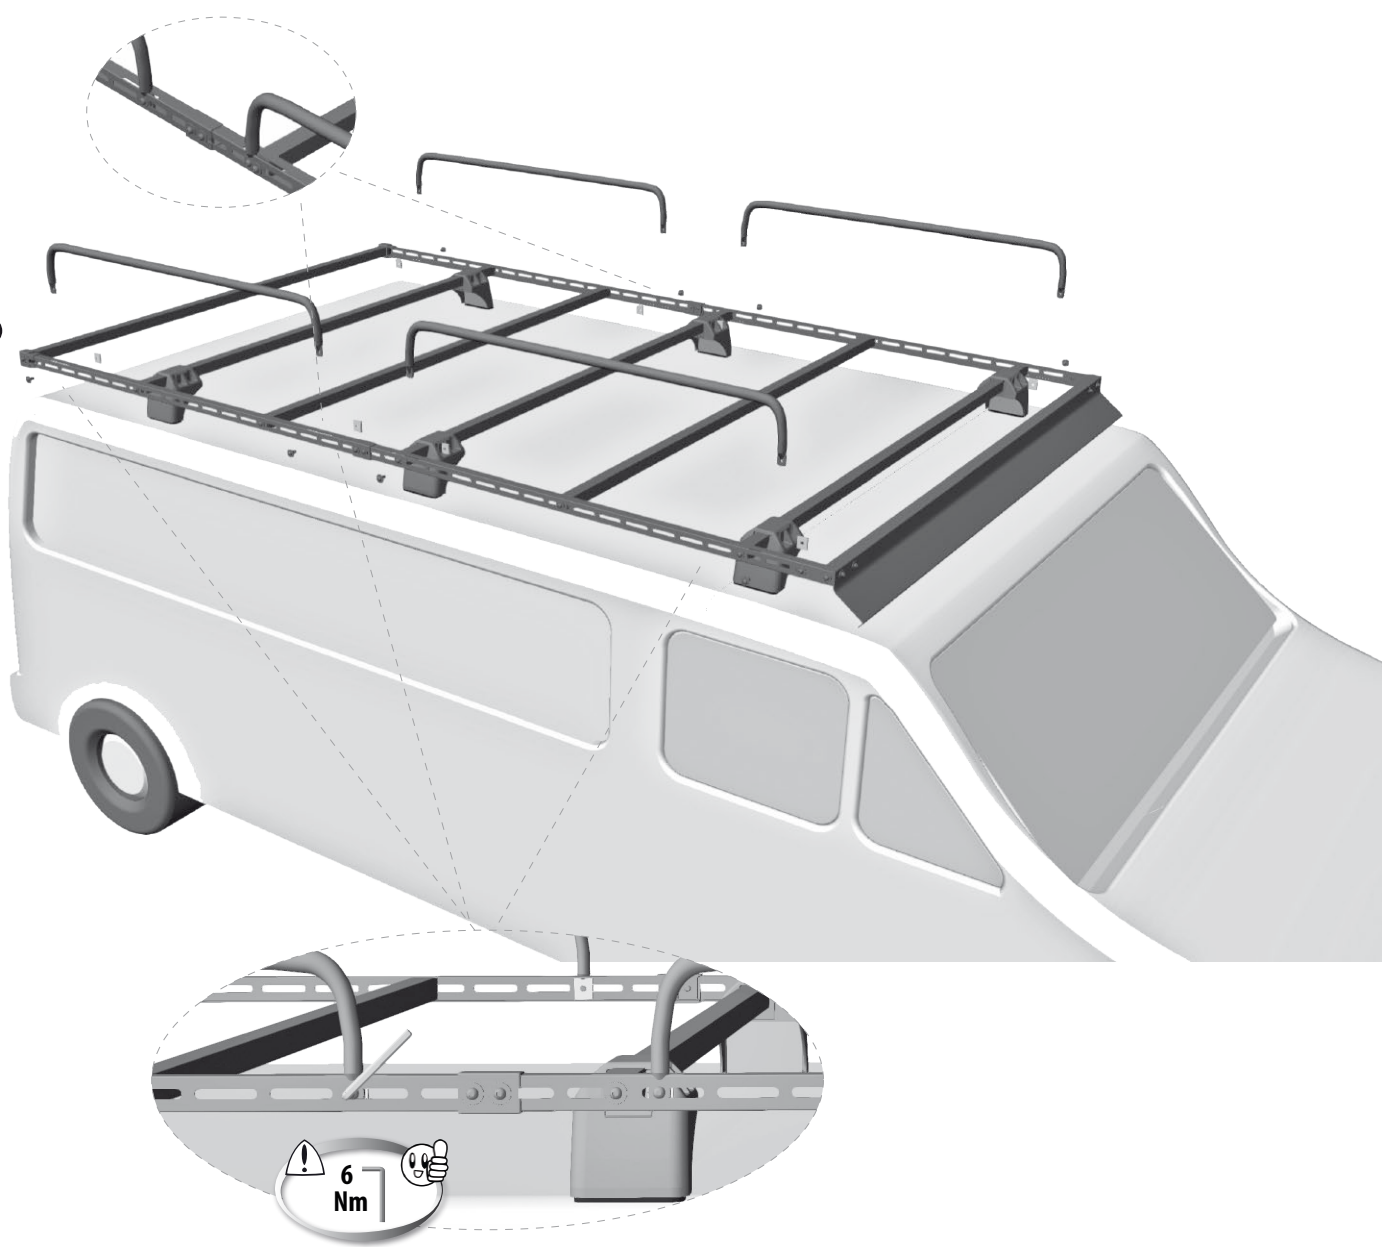

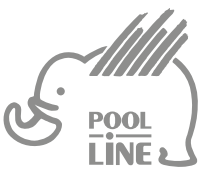


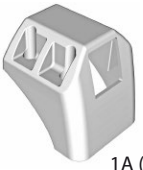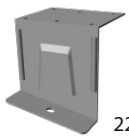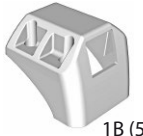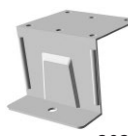

N			Q
1	 225	 1A (75-70)	1+1
2	 226	 2A (70-75)	1+1
3	 210	 1B (54)	4 + 4
4	 202	 1C (72)	2+2
5	 G3		12
6	 B.TF		8
7	 		1
8	 		1


N	BO0060 x2		Q
12		DIN912 M6x20	32
13		DIN125 Ø6	32
BO0014 x 4			
14		DIN912 M6x20	8
15		DIN9021 Ø6	8

E	Instrucciones de montaje	Kit de fijación
C	Instruccions de muntatge	Kit de fixació
GB	Assembly instrucctions	Fixation Kit
F	Instruction de montage	Kit fixation
D	Montageanleitung	Stützfuß-Kit
PT	Instruções de montagem	Kit fixação
I	Istruzioni di montaggio	Kit di fissaggio
PL	Instrukcja montażu	Element mocujący
CZ	Montážní návod	Fixační kit
HU	Szerelési Utasítás	Rögzítő készlet
RO	Instrucțiuni de montaj	Kit de fixare
HR	Detaljne upute	Kit za montažu
TU	Öncelikli montaj	Montaj kiti

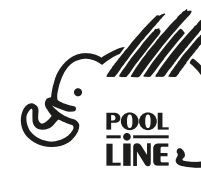

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042

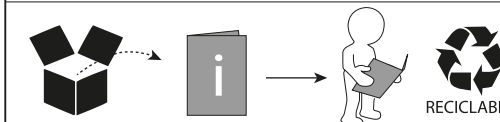



121095

Rv: 08/2025



- FORD CONNECT II TRANSIT (2013-2022)
- FORD CONNECT II TOURNEO (2013-2022)







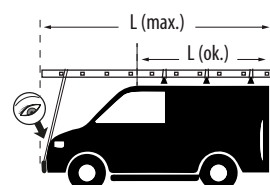


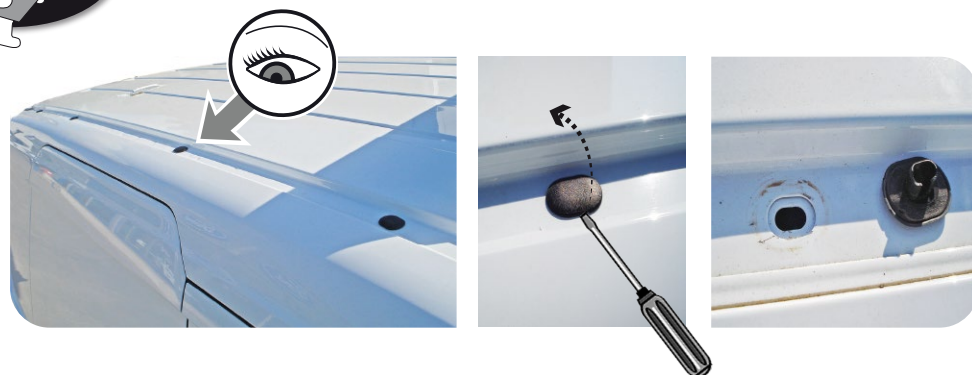

* ZONAS CON TECHO TAPIZADO / TAPIZADO ROOF ZONES






- E** •Separar la goma del tapizado para acceder al interior del techo vehículo
- GB** •Separate the rubber upholstered to access the interior of the vehicle roof
- I** •Si separano gomma cornice per accedere all'interno del tetto del veicolo
- F** •Séparer le caoutchouc garniture pour accéder à l'intérieur du toit du véhicule
- D** •Trenne die Gummipolster das Innere des Fahrzeugdaches zugreifen

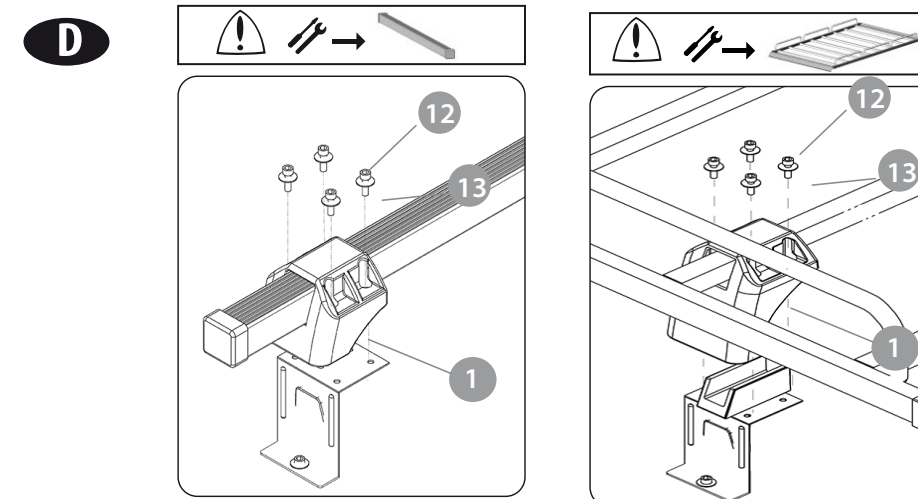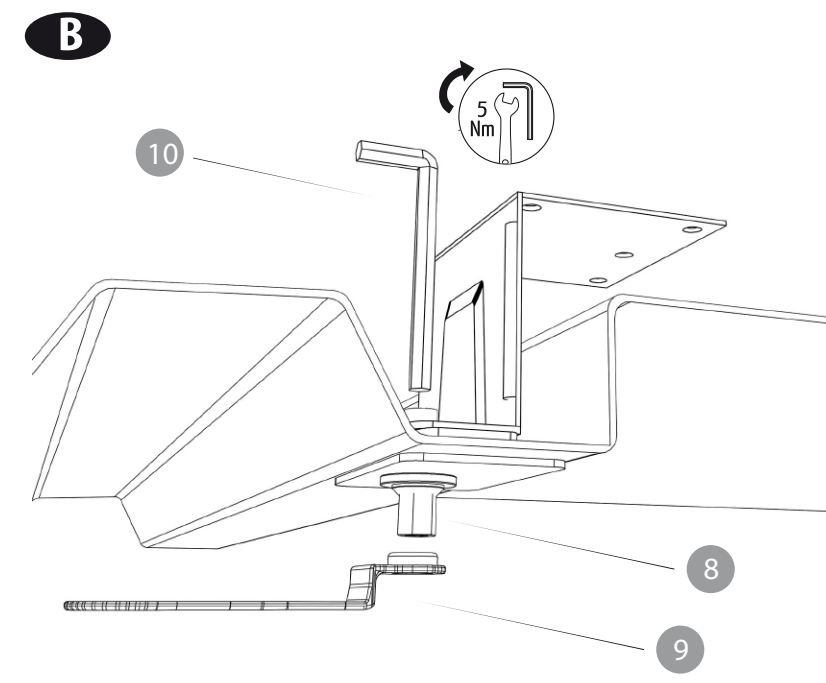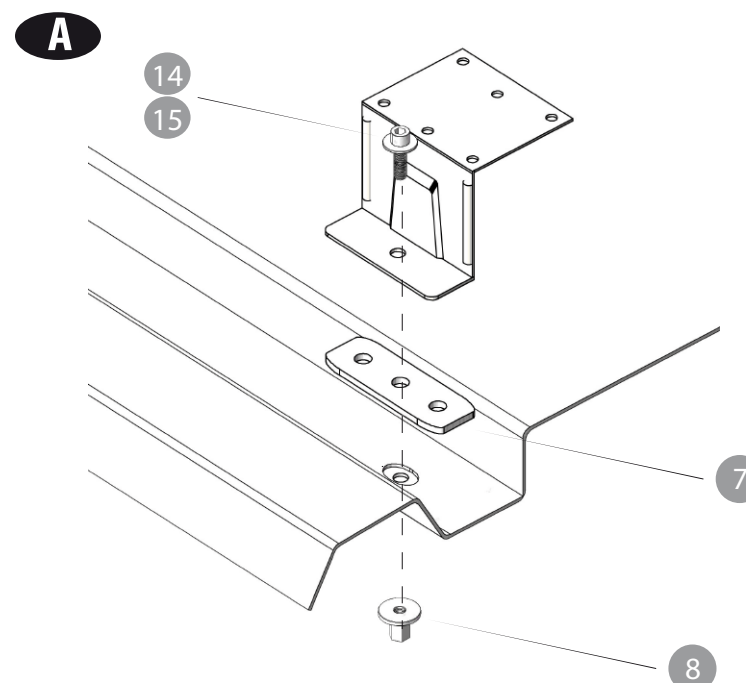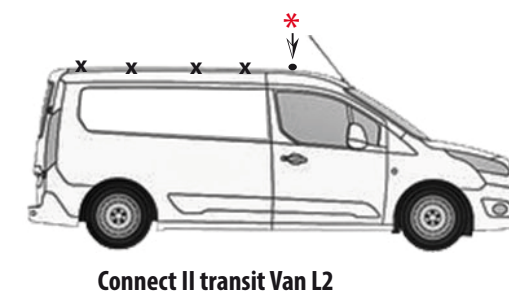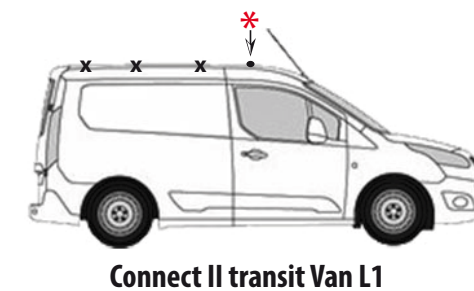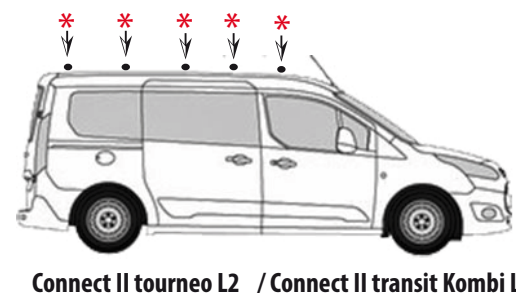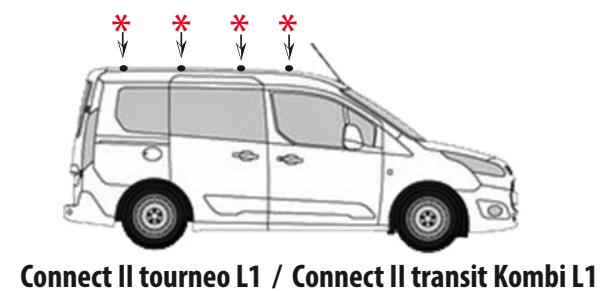





- FORD CONNECT II TRANSIT L1-H1 (2013-2022)
- FORD CONNECT II TOURNEO L1-H1 (2013-2022)

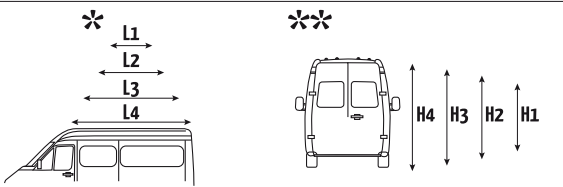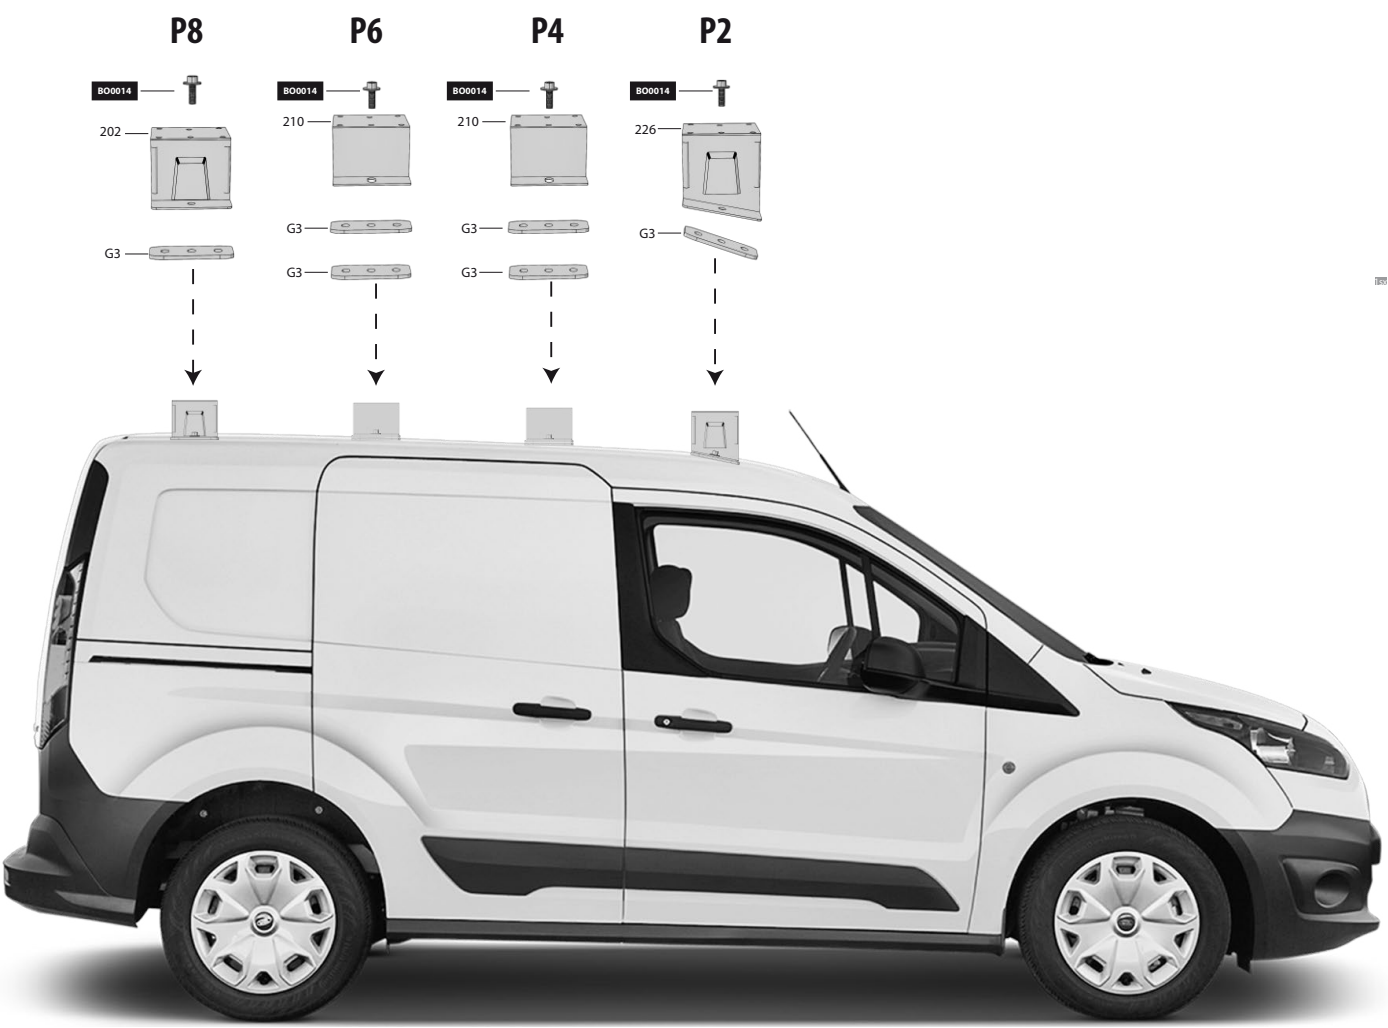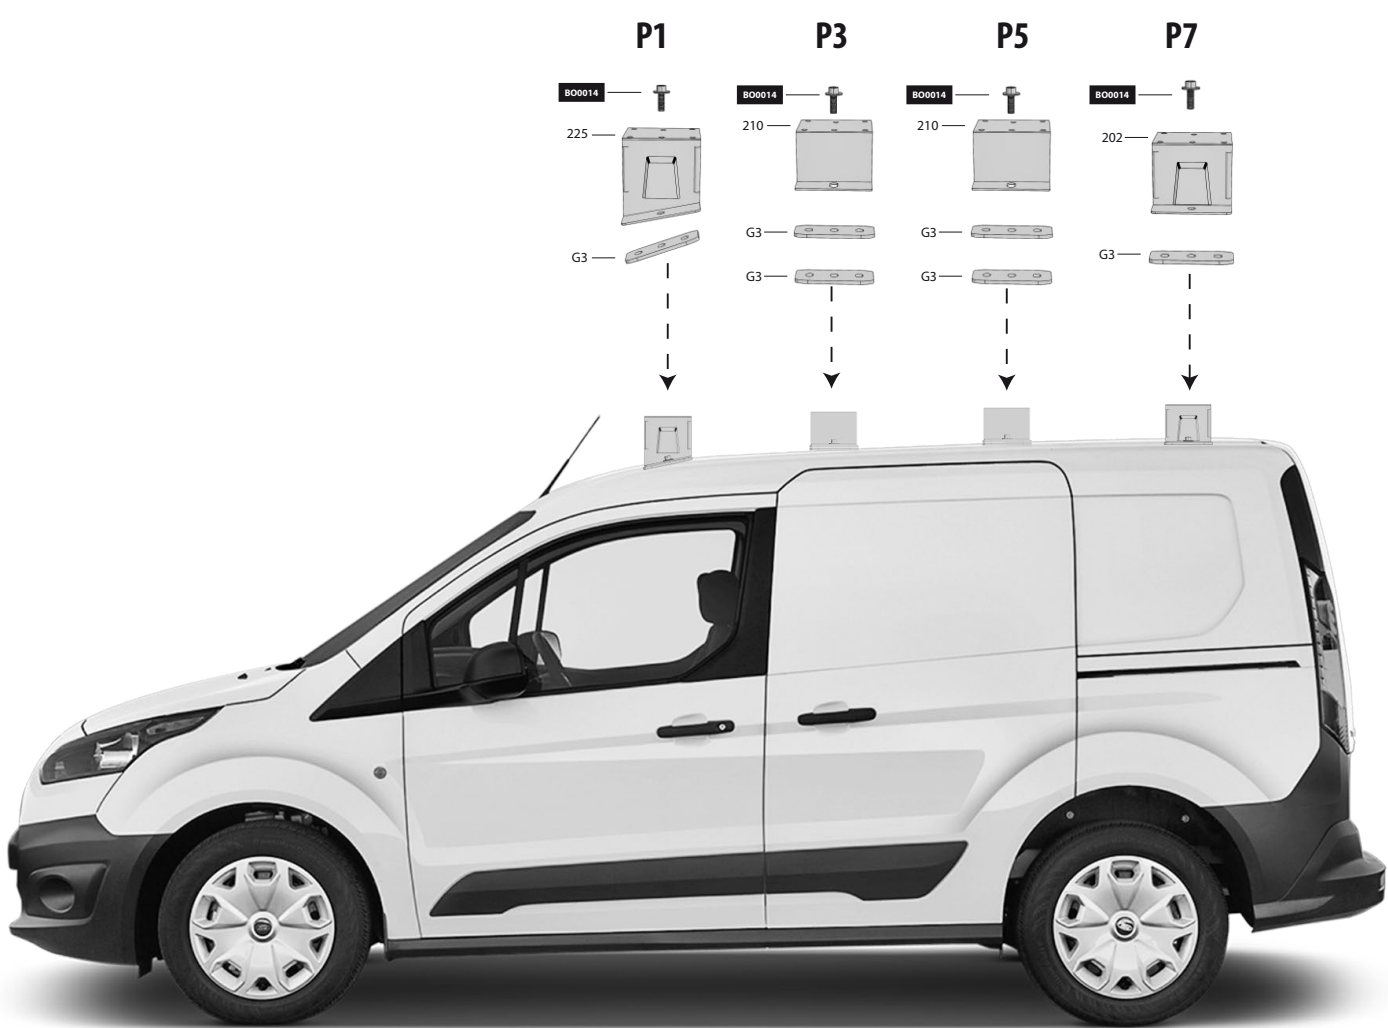

					P1	P2	P3	P4	P5	P6	P7	P8
FORD												
Connect II Tourneo	L1	H1	13 - 22	B00014	225+1A+1G3	226+2A+1G3	210+1B+2G3*	210+1B+2G3*	210+1B+2G3*	210+1B+2G3*	202+1C+1G3	202+1C+1G3
Connect II Transit Van	L1	H1	13 - 22	B00014	225+1A+1G3	226+2A+1G3	210+1B+2G3*	210+1B+2G3*	210+1B+2G3*	210+1B+2G3*	202+1C+1G3	202+1C+1G3
Connect II Transit Kombi	L1	H1	13 - 22	B00014	225+1A+1G3	226+2A+1G3	210+1B+2G3*	210+1B+2G3*	210+1B+2G3*	210+1B+2G3*	202+1C+1G3	202+1C+1G3



- FORD CONNECT II TRANSIT L2-H1 (2013-2022)
- FORD CONNECT II TOURNEO L2-H1 (2013-2022)

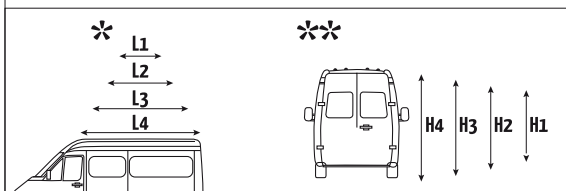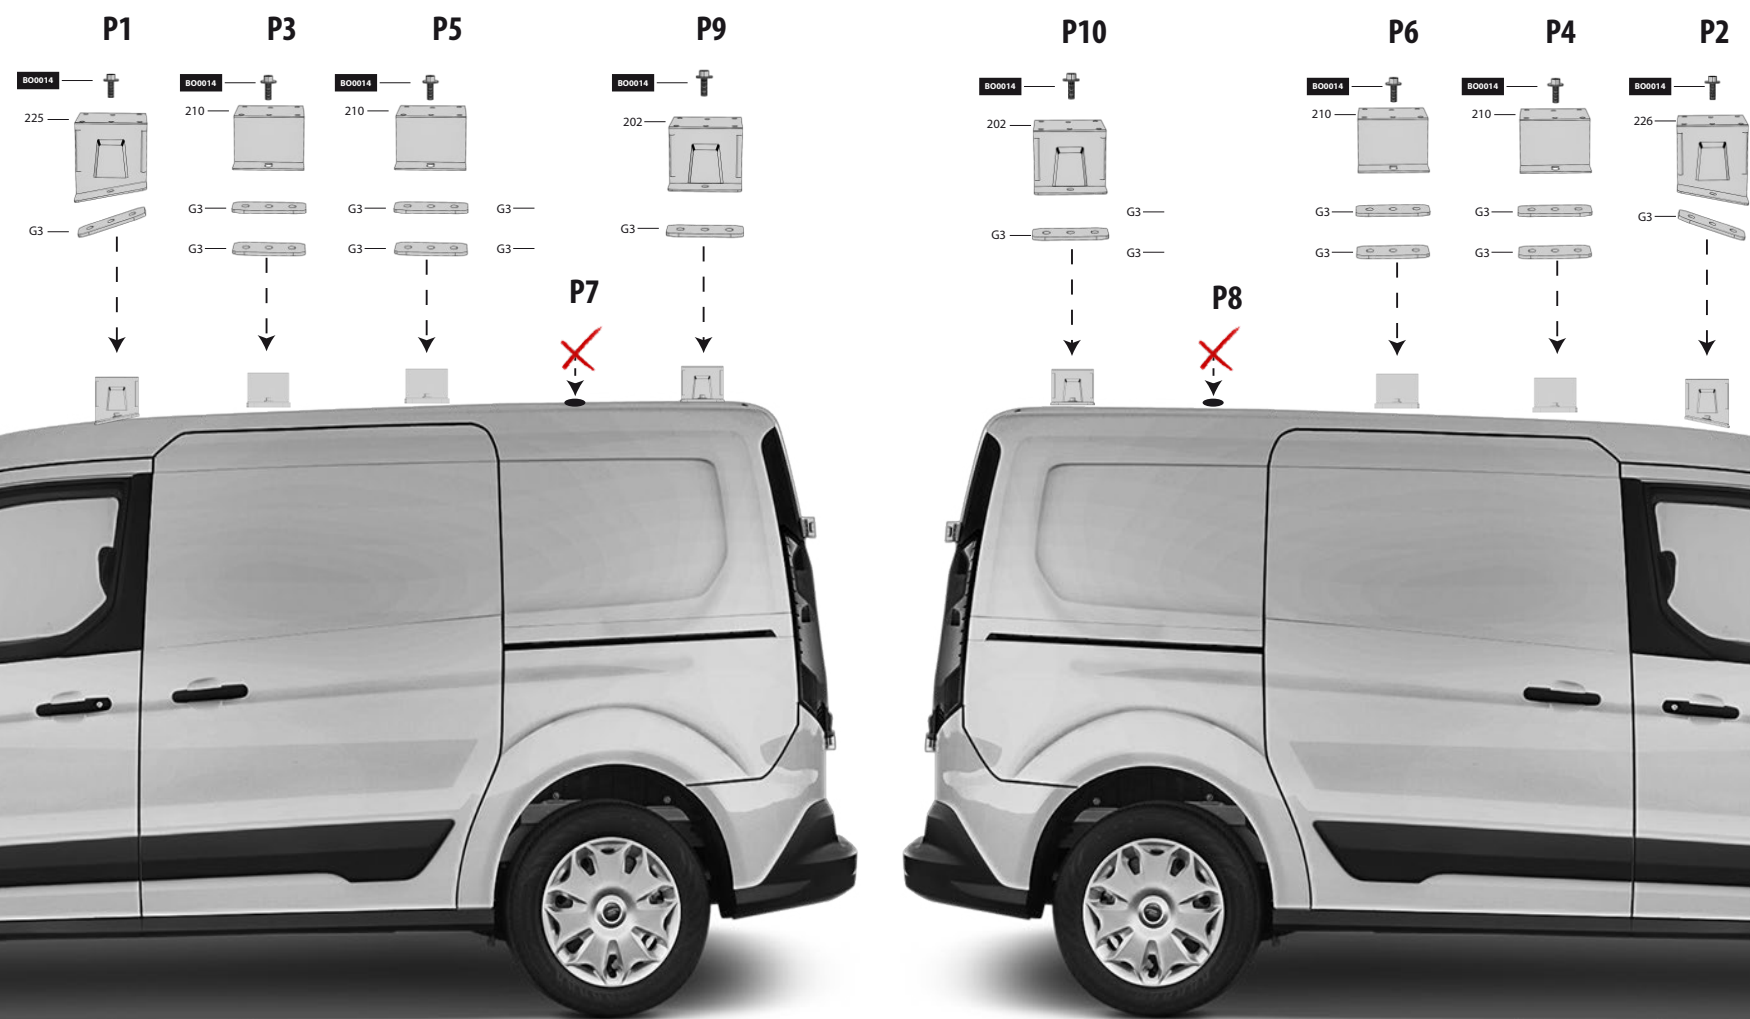

	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10
FORD														
Connect II Tourneo	L2	H1	13 - 22	B00014	225+1A+1G3	226+2A+1G3	210+1B+2G3*	210+1B+2G3*	210+1B+2G3*	210+1B+2G3*	✗	✗	202+1C+1G3	202+1C+1G3
Connect II Transit Van	L2	H1	13 - 22	B00014	225+1A+1G3	226+2A+1G3	210+1B+2G3*	210+1B+2G3*	210+1B+2G3*	210+1B+2G3*	✗	✗	202+1C+1G3	202+1C+1G3
Connect II Transit Kombi	L2	H1	13 - 22	B00014	225+1A+1G3	226+2A+1G3	210+1B+2G3*	210+1B+2G3*	210+1B+2G3*	210+1B+2G3*	✗	✗	202+1C+1G3	202+1C+1G3