


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

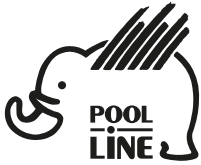

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net





200 KG.
MAX.

Nº HOMOLOGACIÓN: E9 26R-03.1042




123412

Rv: 05/2025

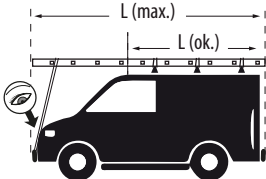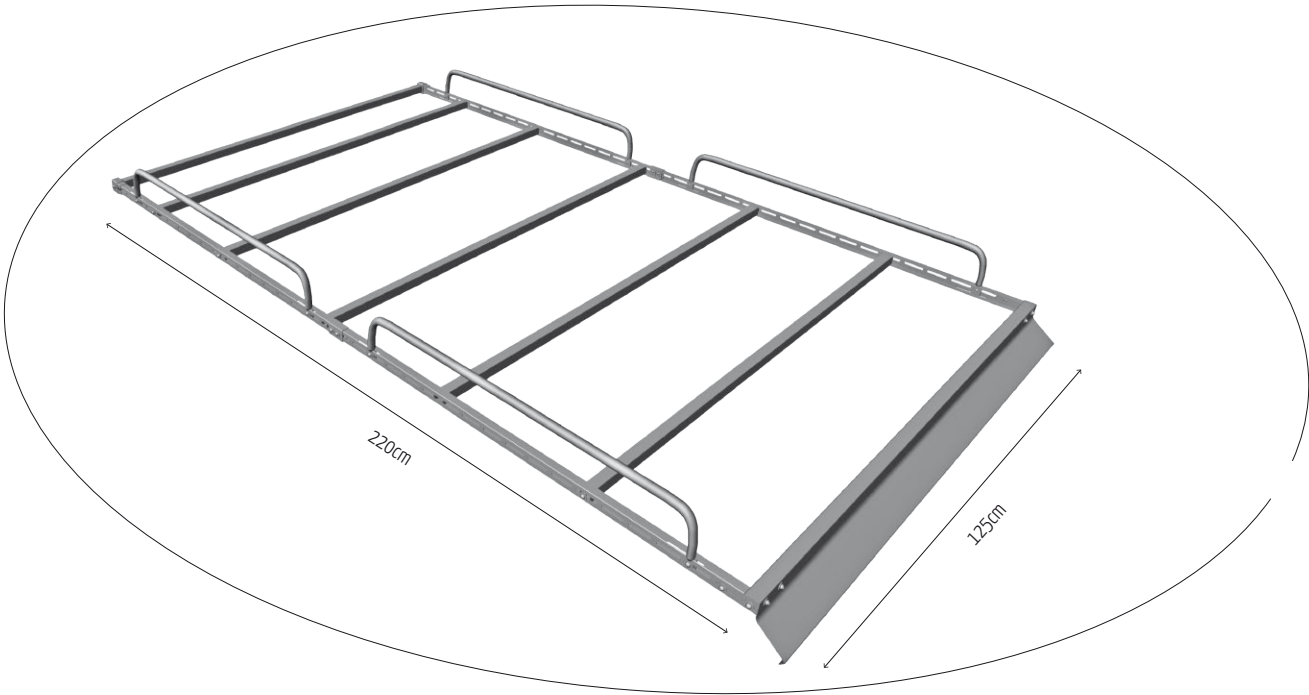

N		Q
20	 S-1250	1
21		2
22	 L-1120	4
23	 B-842	4
24	 T-1235	6
25		14
26		2
27		8
28	 CHA-M8	12
29	 ISO 7380 M8x30	10
30	 ISO 7380 M8x16	20
31	 DIN 125 Ø 8	32
32	 ISO 7380 M8x 40	2


N		Q
32		1

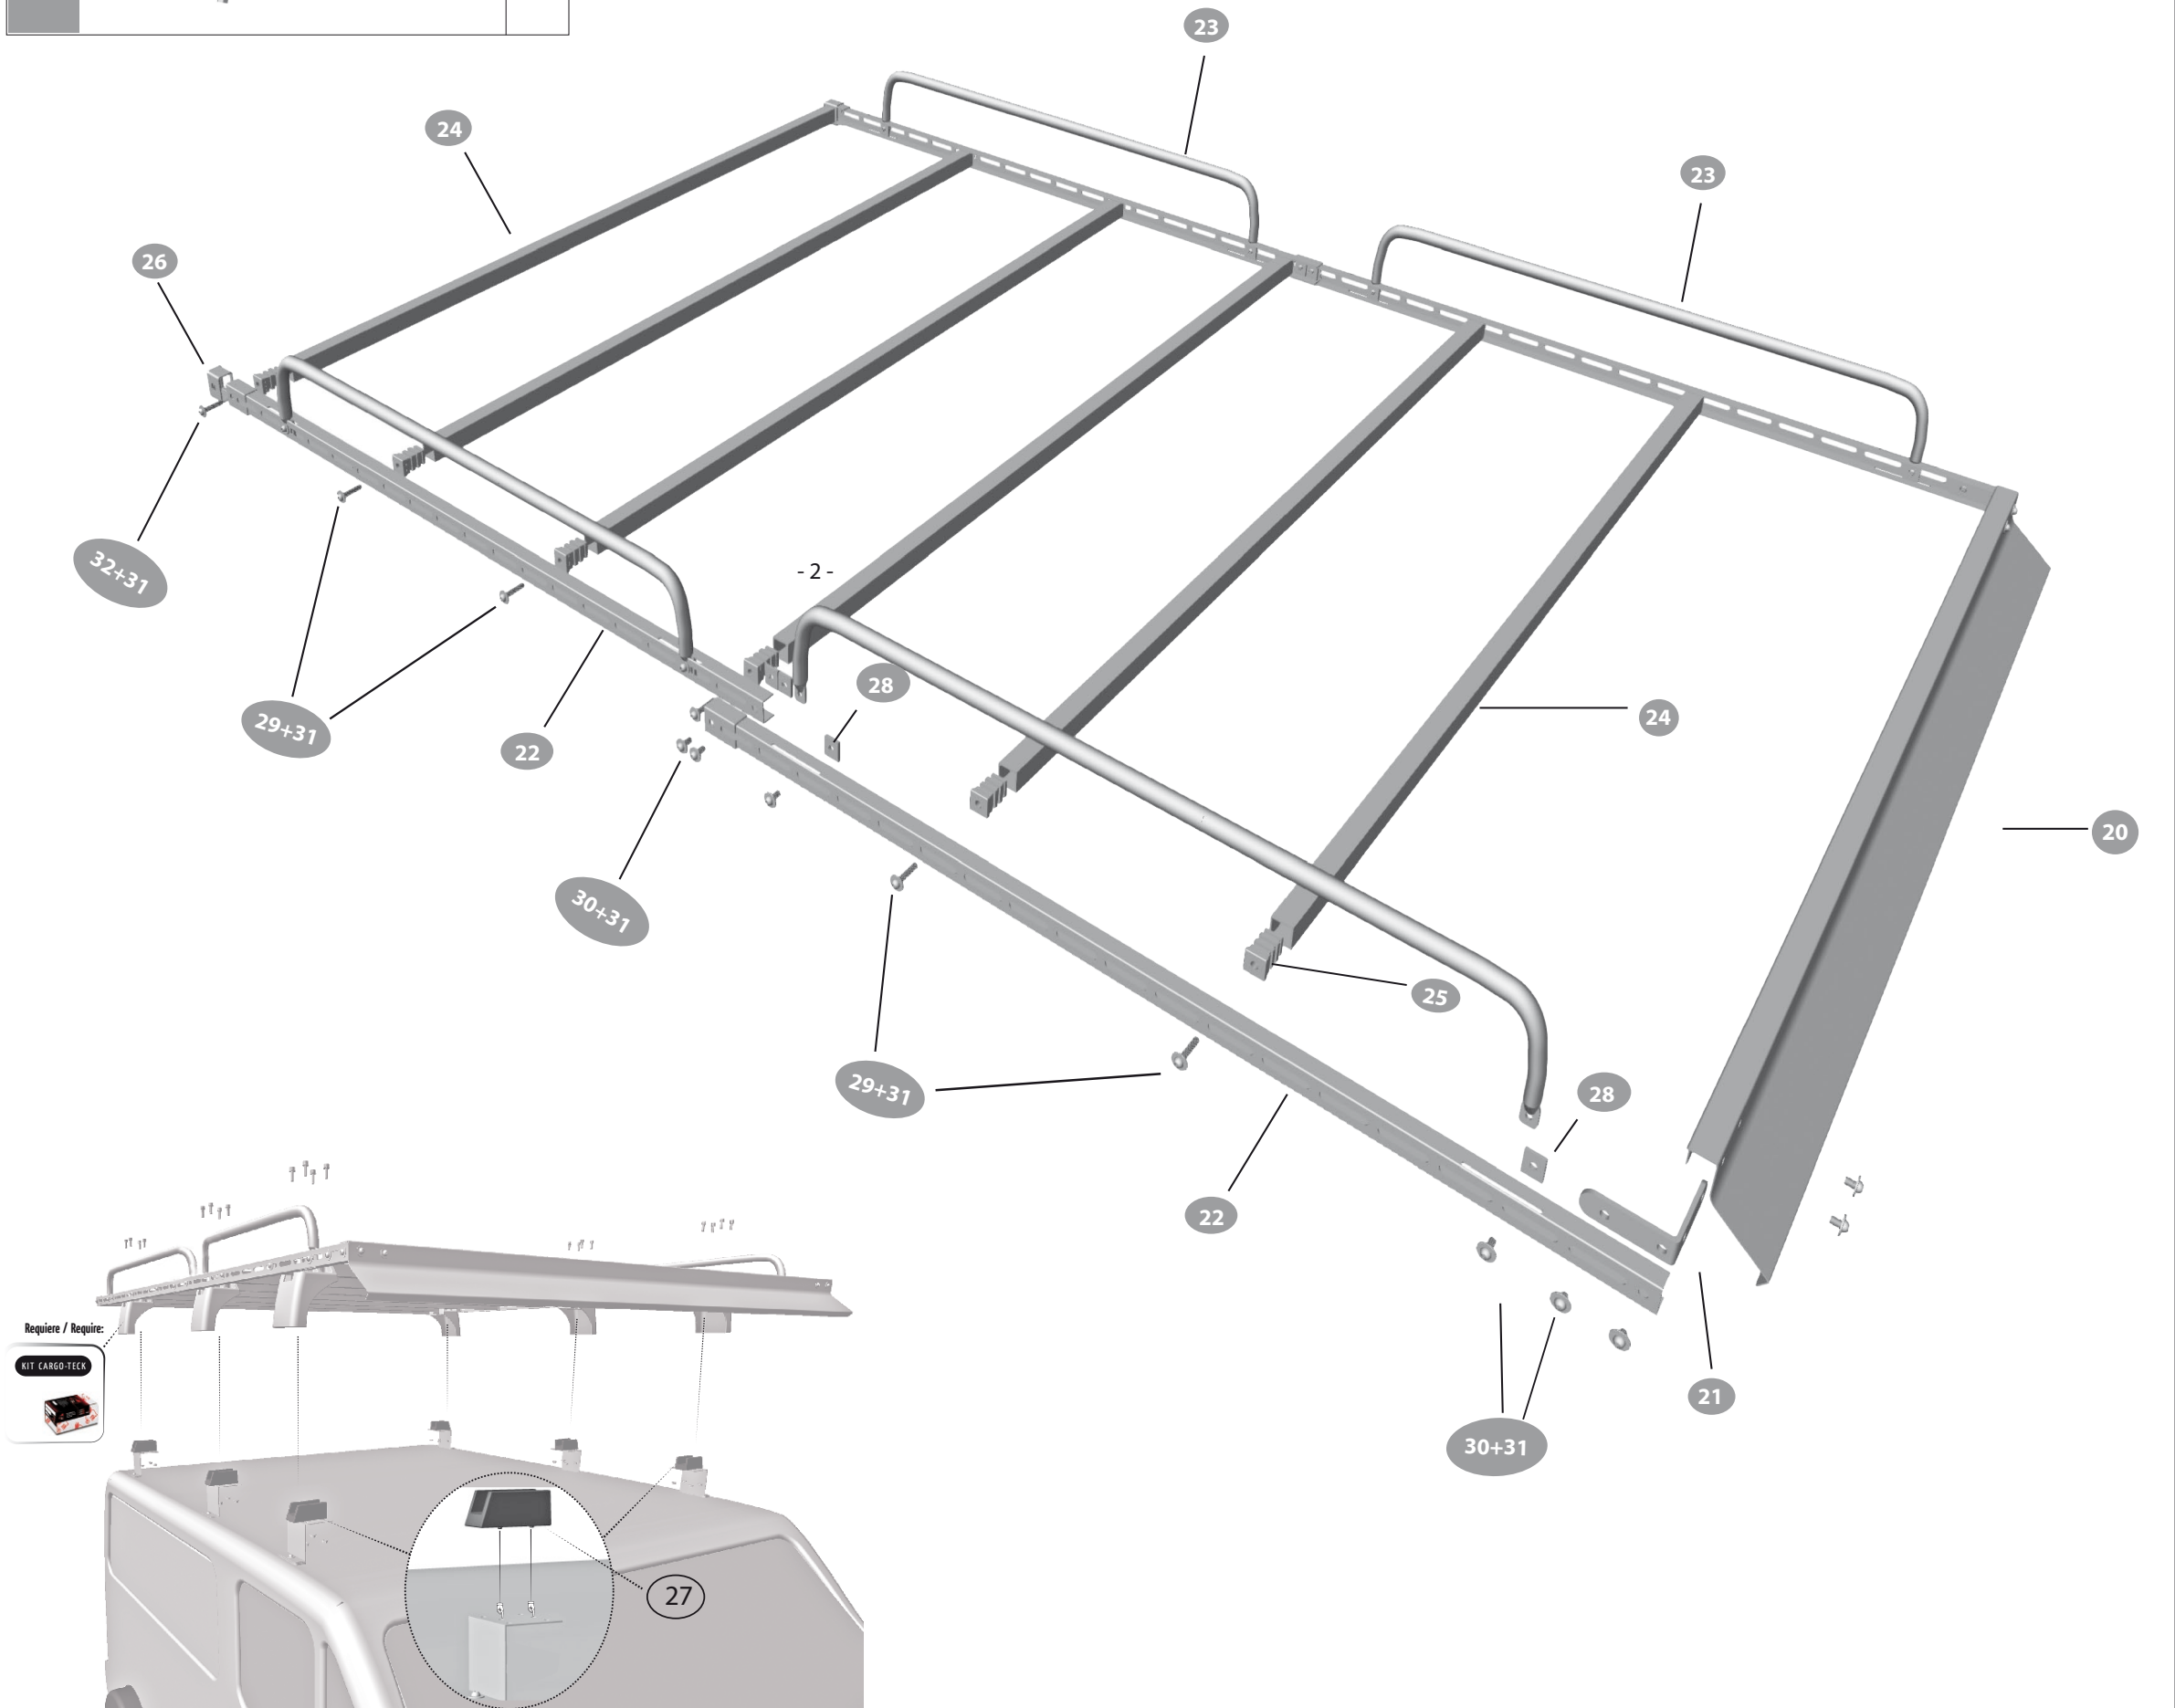




Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone


CITROËN C15

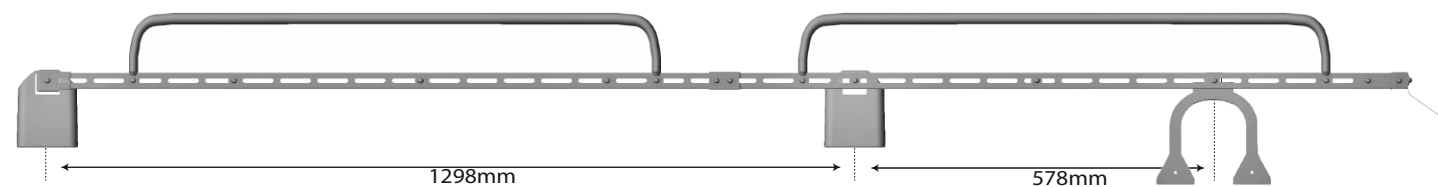



FORD CONNECT I L2 (04-13)

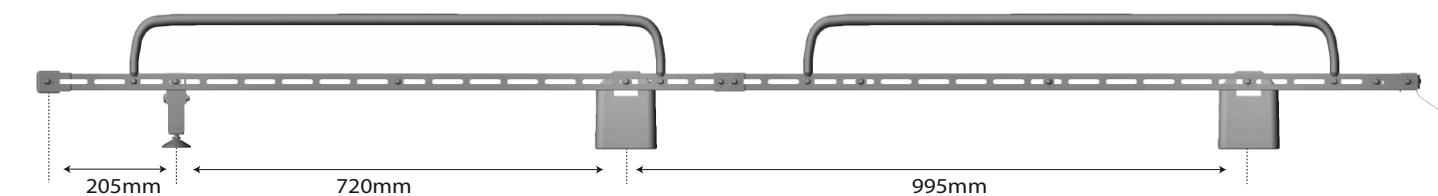



FORD CONNECT II L2 (13-)

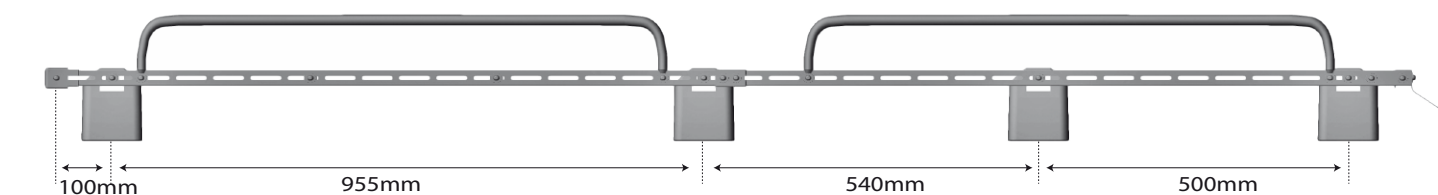

**FORD CONNECT III L1 (2022->)
VOLKSWAGEN CADDY V L1 (2021->)**

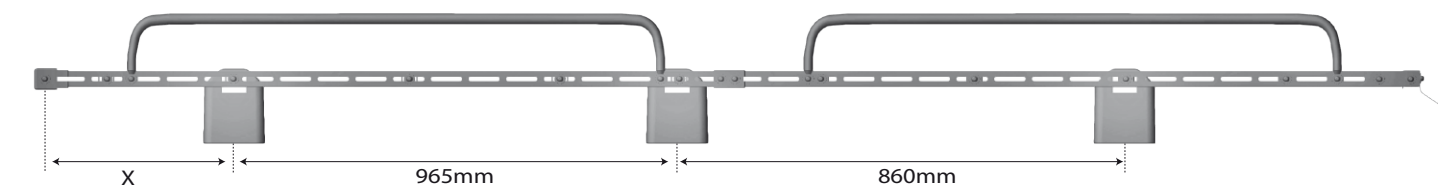


**MERCEDES CITAN L3
NISSAN NV250 L2
RENAULT KANGOO II L3**

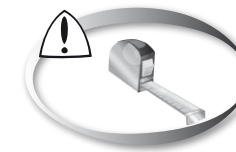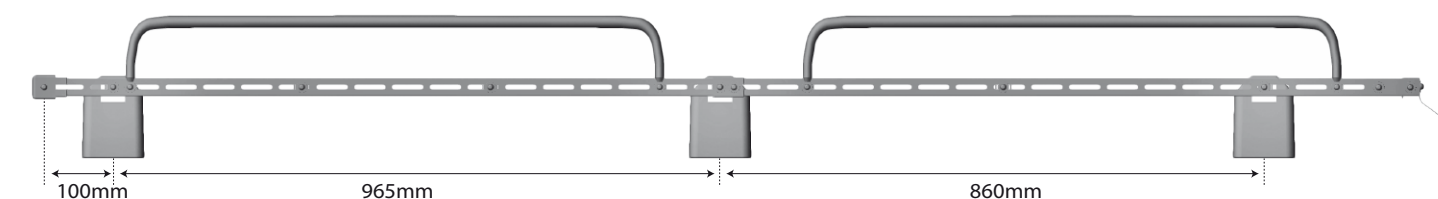


Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone


VOLKSWAGEN CADDY III L2 (04-13)

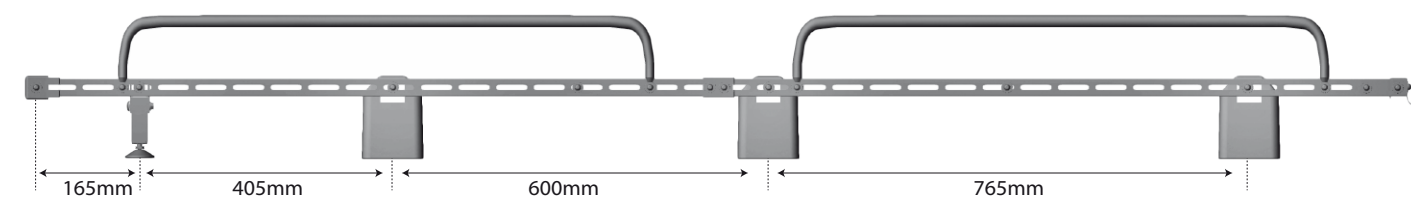


VOLKSWAGEN CADDY III.2 / IV L1 (2011-)

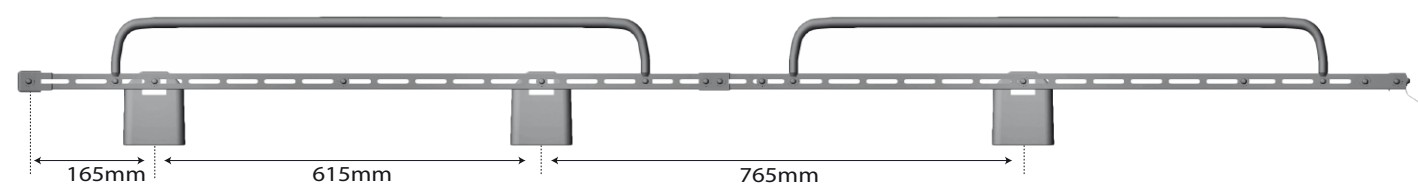


FORD COURIER II L1 (2024-)

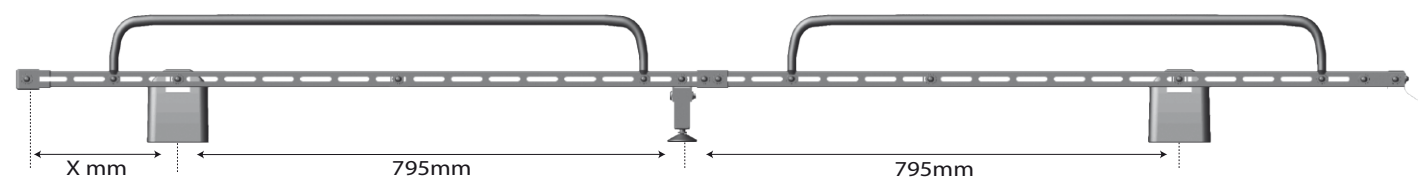


NISSAN KUBISTAR L2 / RENAULT KANGOO I L2 (97-09)

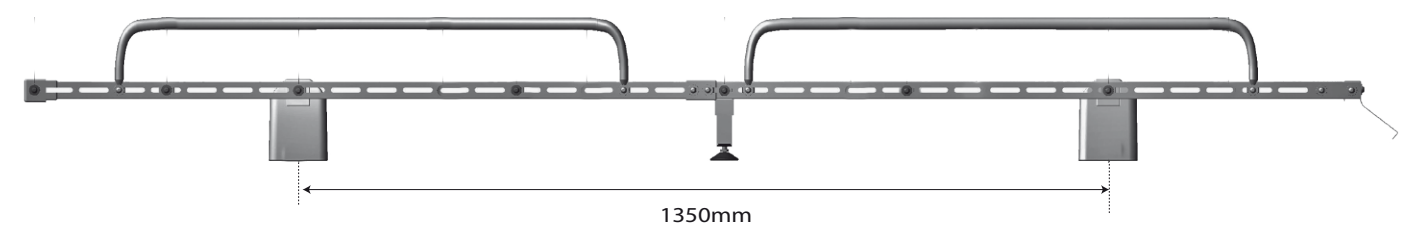


VOLKSWAGEN CADDY MAXI L2 (2011->)

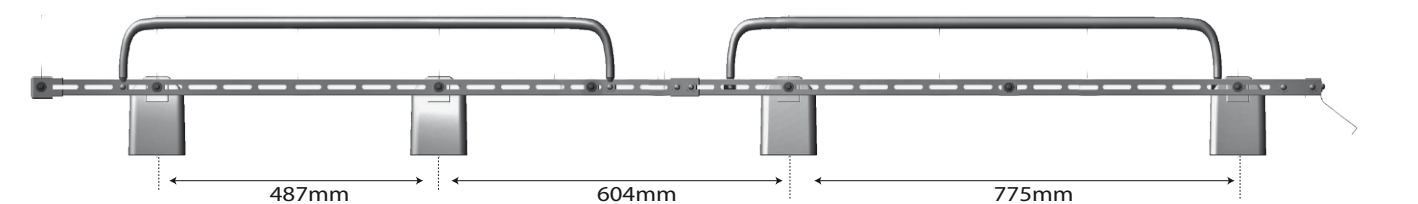



1

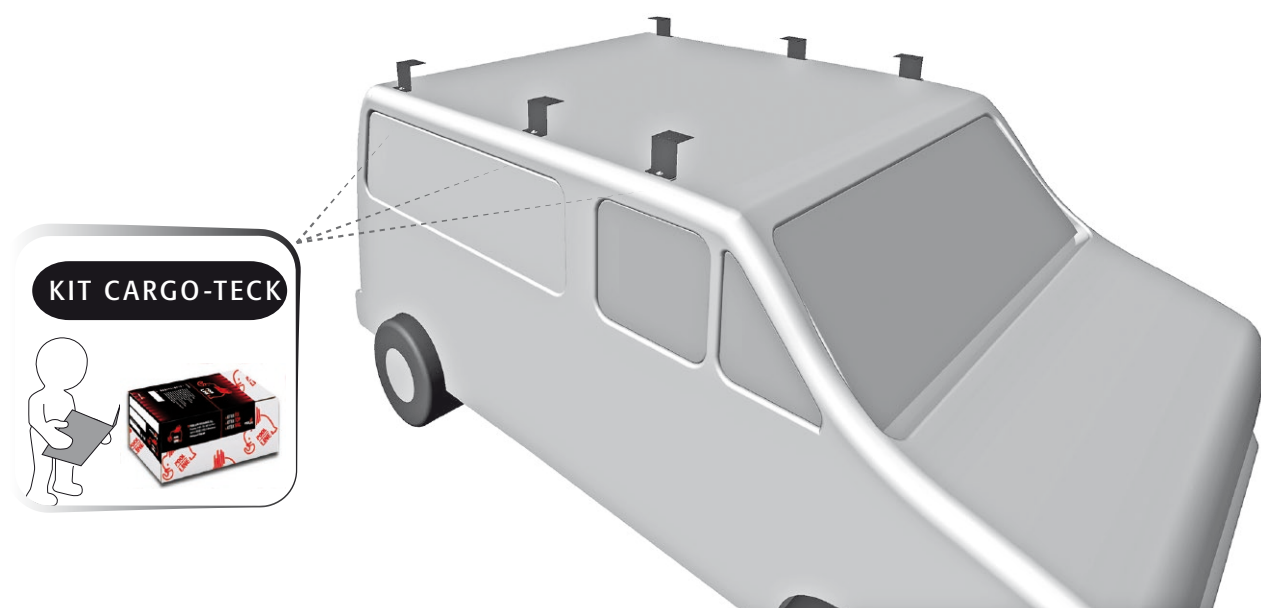


2

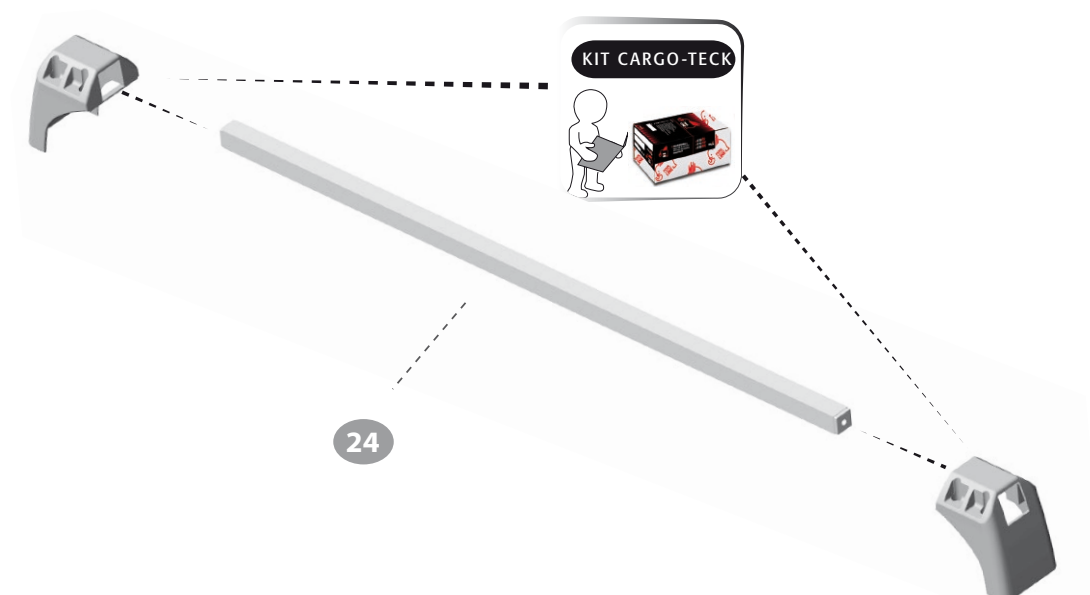


3

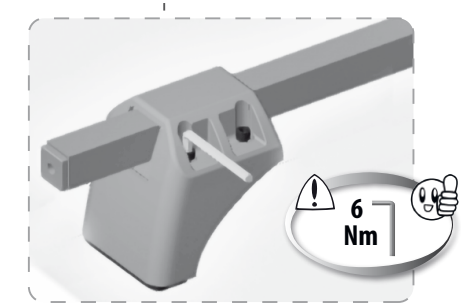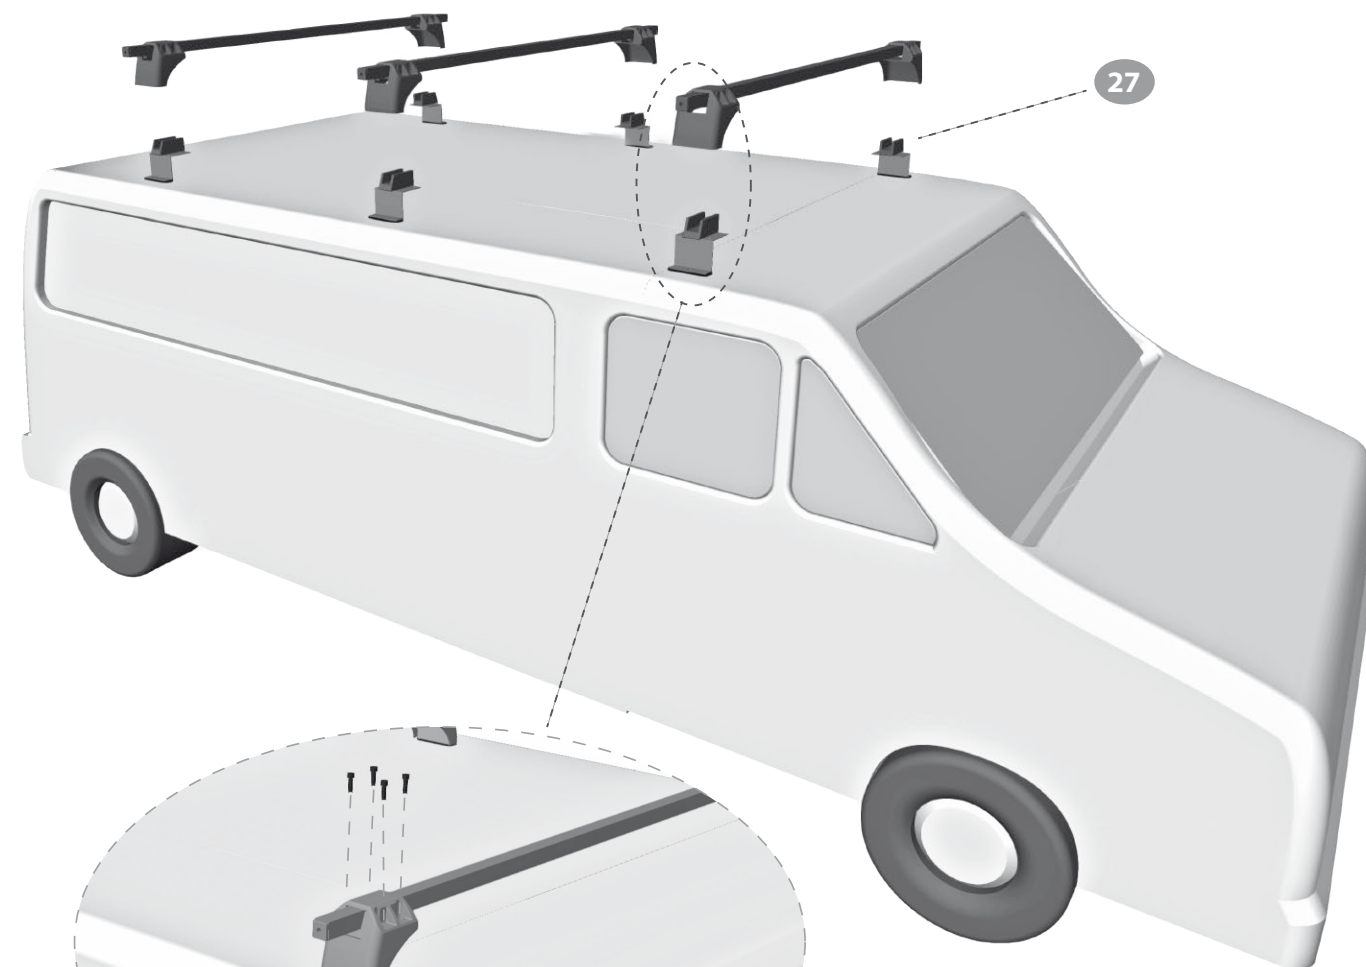


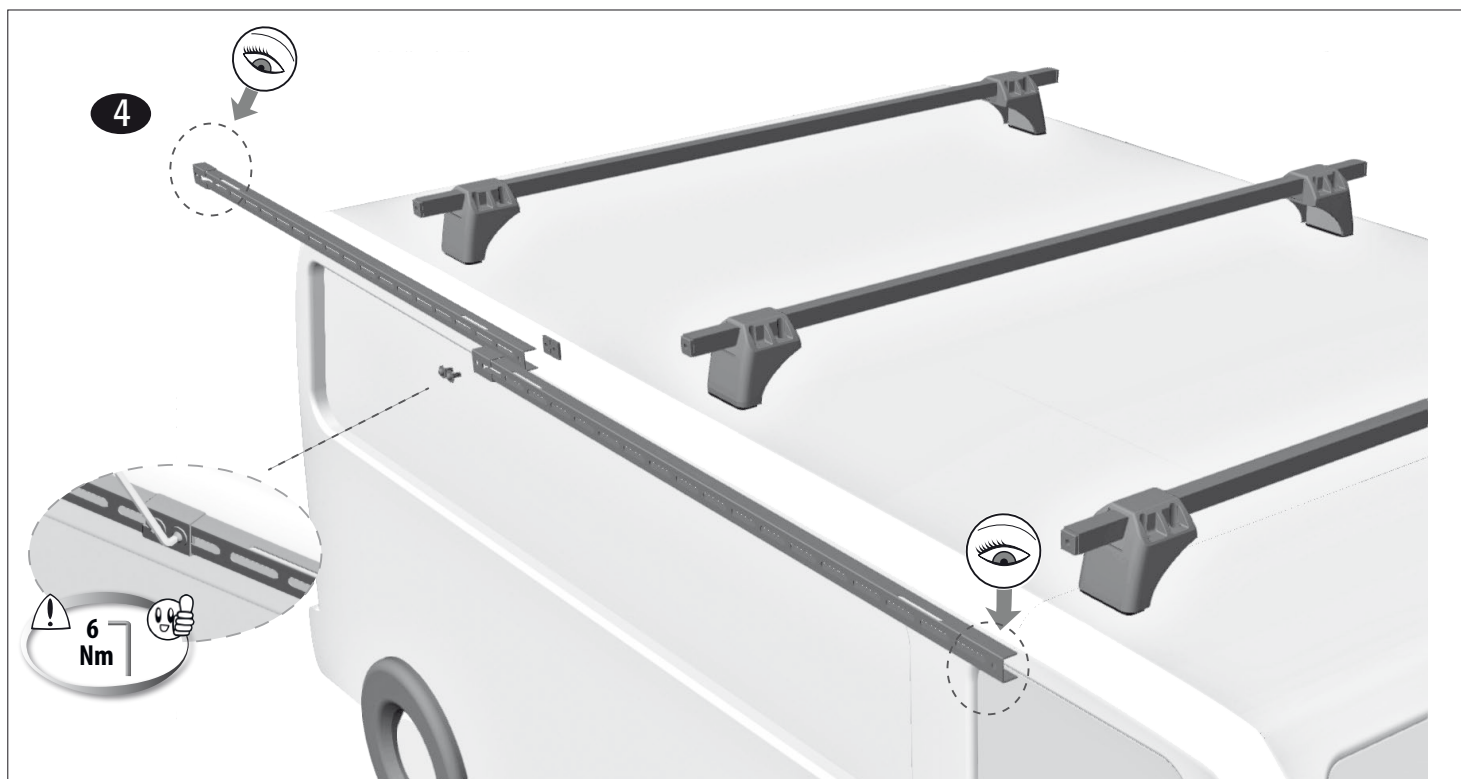


5

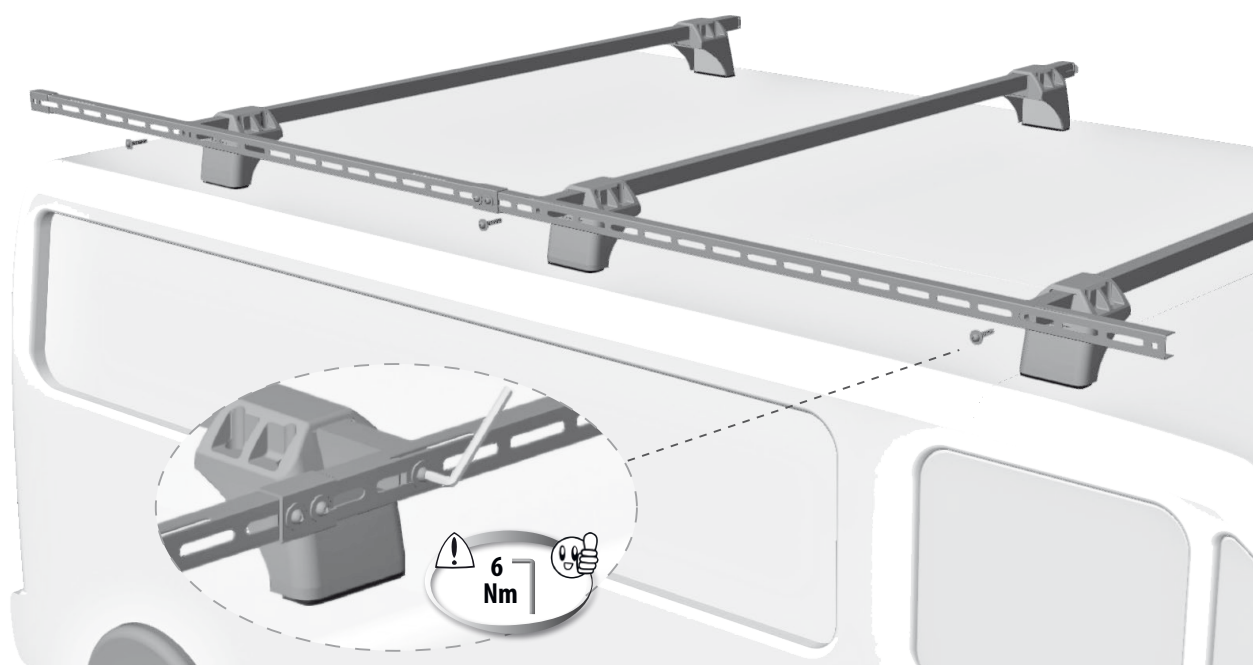


6

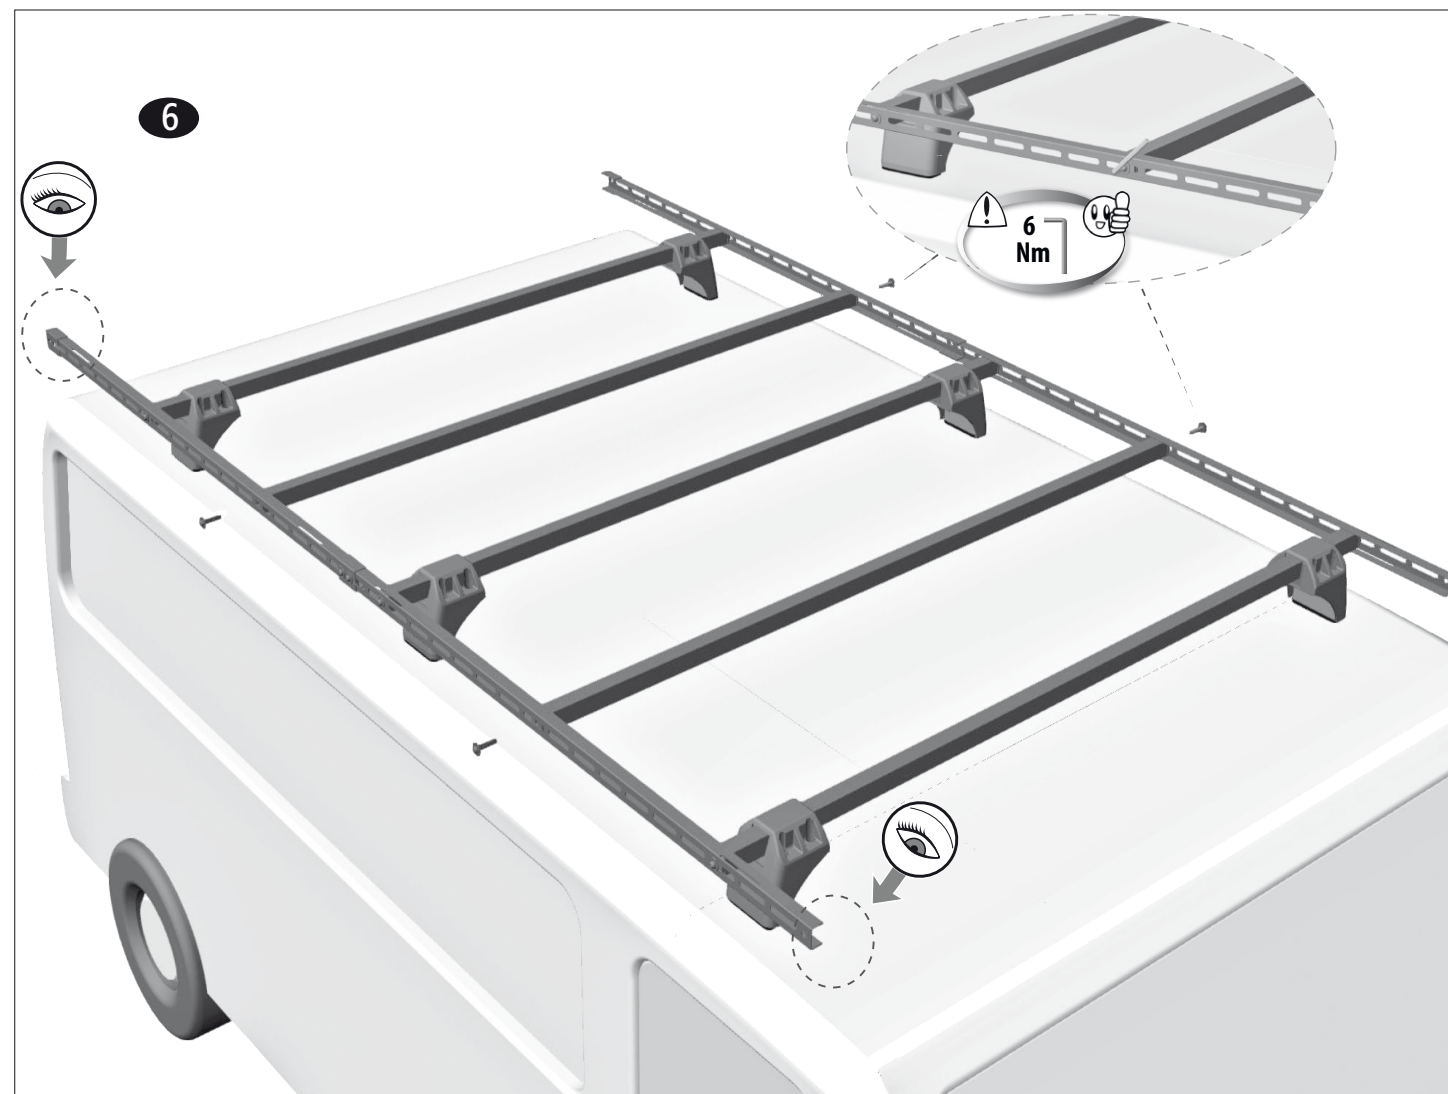



7







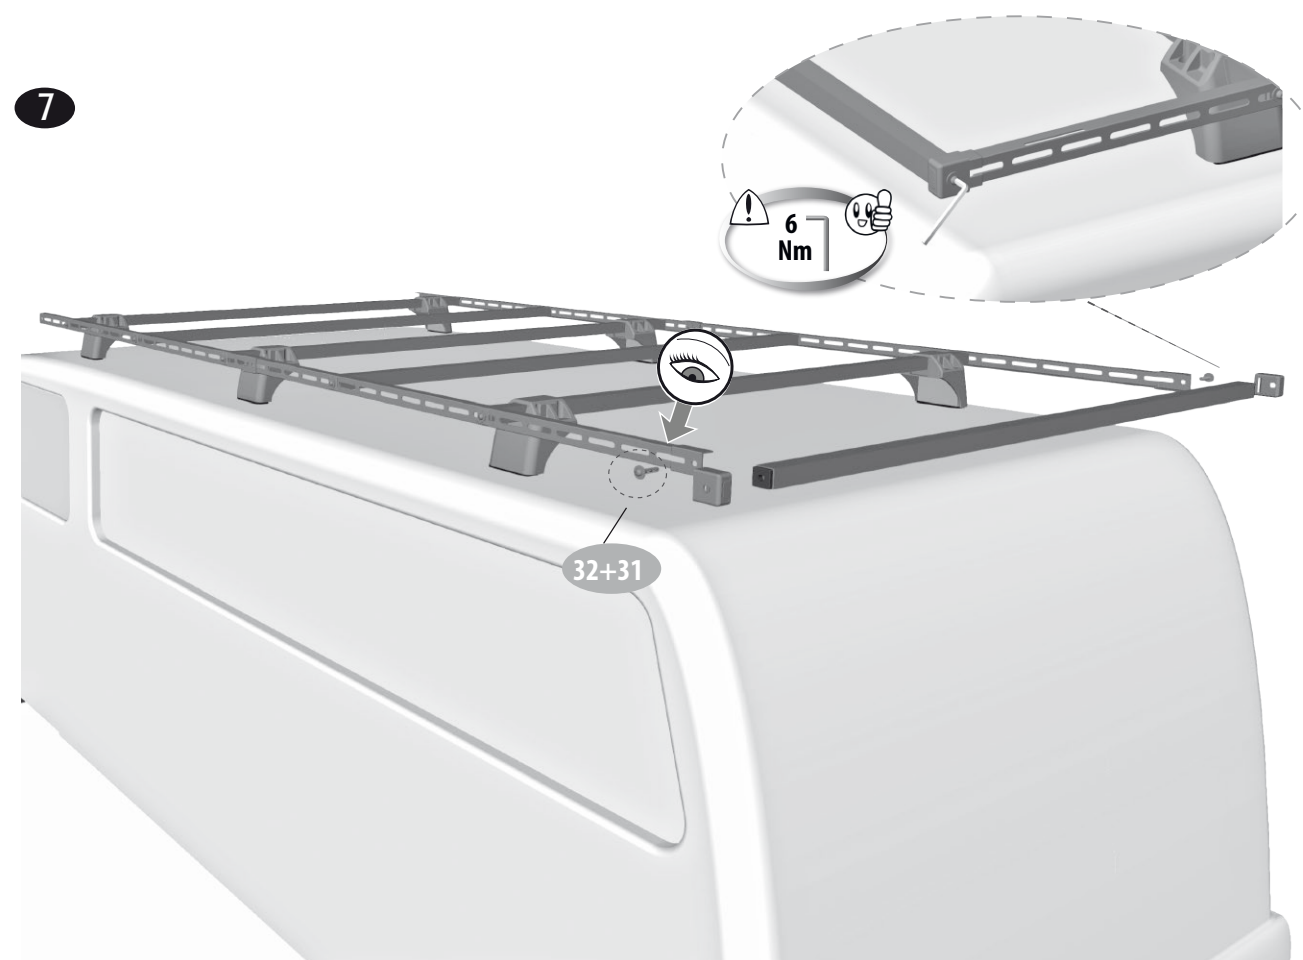



8

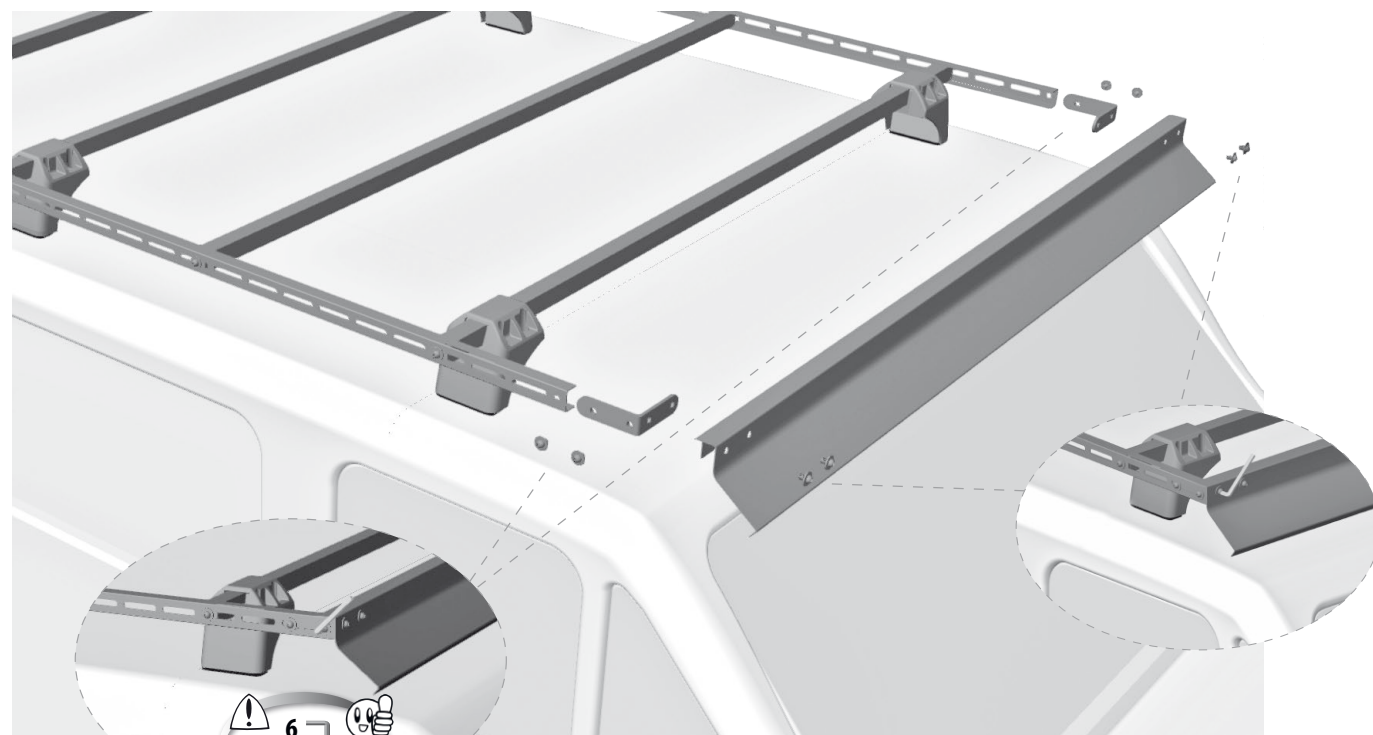

9

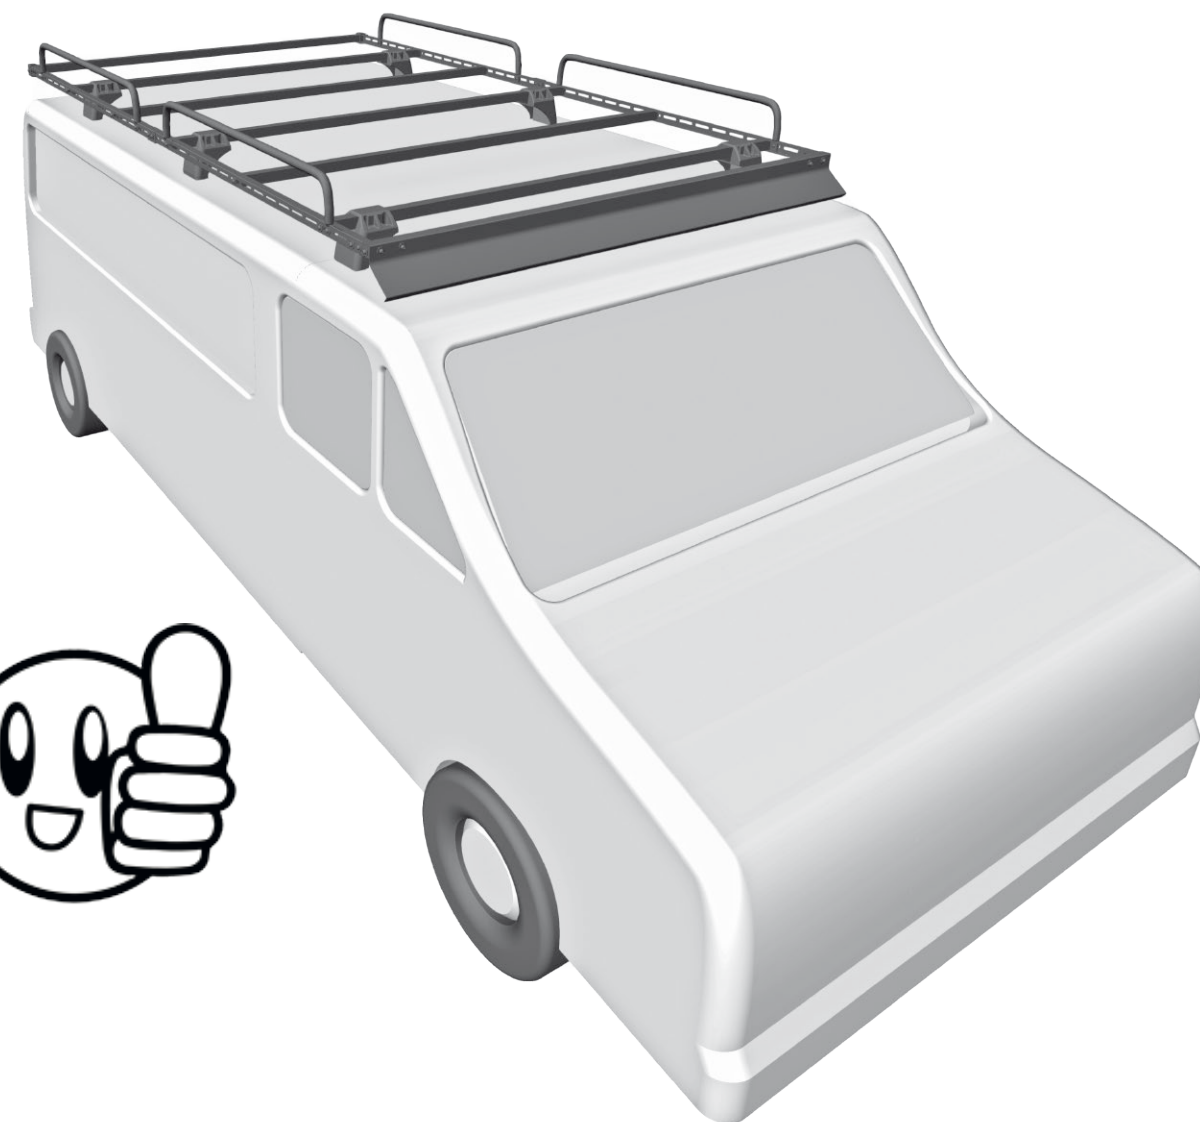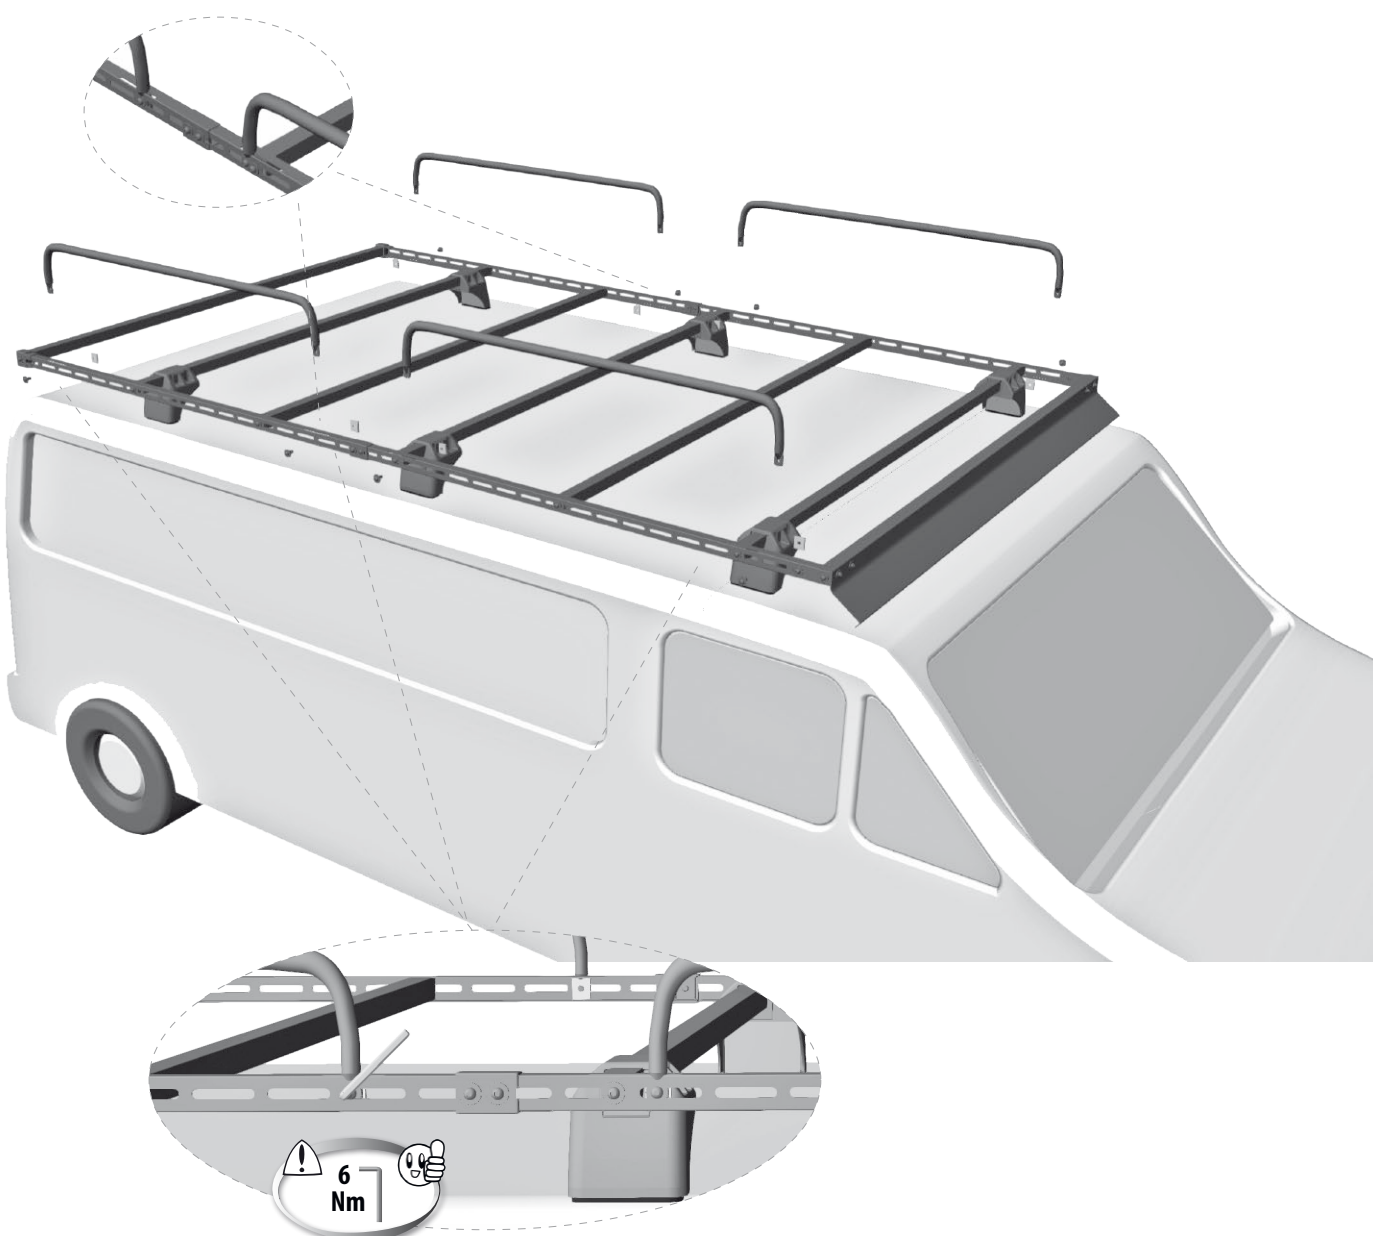

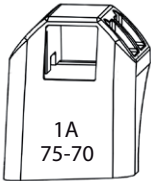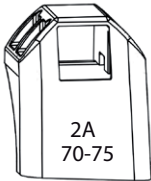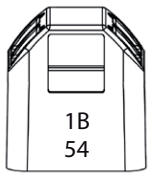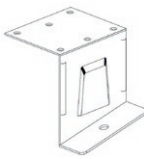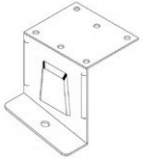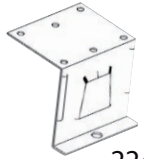N			Q			Q
1	 1A 75-70	 2A 70-75	4	 1B 54		2
2	 225	 226	2+2	 224		2
3						6
4						1

N	BO0061	Q
8	 DIN912 M6x20	24
9	 DIN125	24

N	BO0010 x 3	Q
10	 ISO 7380 M8x20	6
11	 Din125 Ø8	6

- E

Instrucciones de montaje

Kit de fijación
- C

Instruccions de muntatge

Kit de fixació
- GB

Assembly instrucctions

Fixation Kit
- F

Instruction de montage

Kit fixation
- D

Montageanleitung

Stützfuß-Kit
- PT

Instruções de montagem

Kit fixação
- I

Istruzioni di montaggio

Kit di fissaggio
- PL

Instrukcja montażu

Element mocujący
- CZ

Montážní návod

Fixační kit
- HU

Szerelési Utasítás

Rögzítő készlet
- RO

Instruciuni de montaj


Kit de fixare
- HR

Detaljne upute

Kit za montažu
- TU


Öncelikli montaj

Montaj kiti

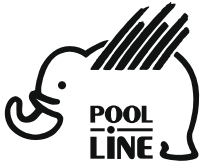


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1043

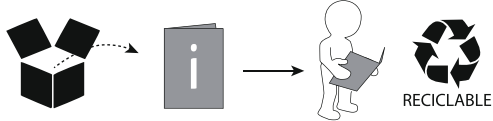


121083

Rv: 06/2023

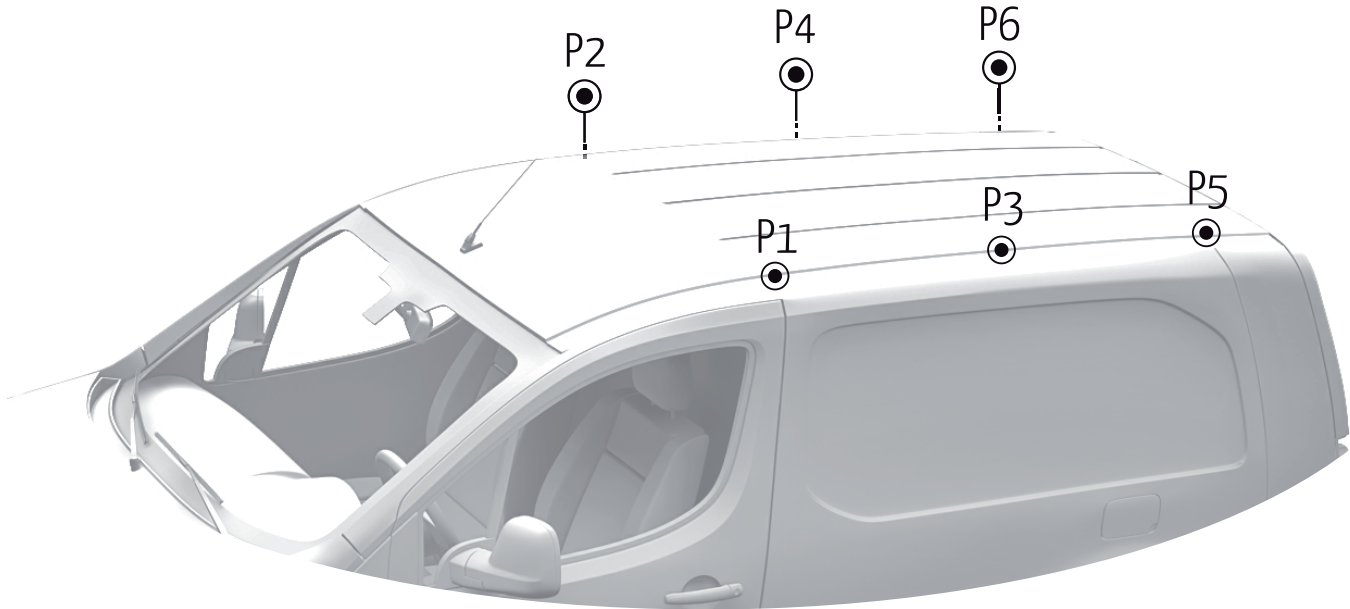

Limpieza pre-instalación

 Pre-installation cleaning

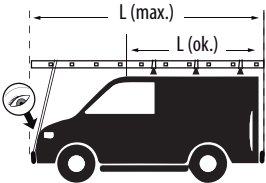

Revisar par de apriete

 Check torque

										
FORD										
CONNECT III	L1	H1	2020->	B00010	225+1A	226+2A	224+1B	224+1B	226+2A	225+1A
VOLKSWAGEN										
CADDY V	L1	H1	2022->	B00010	225+1A	226+2A	224+1B	224+1B	226+2A	225+1A



P1	P2		P3	P4		P5	P6
225+1A	226+1A		224+1B	224+1B		226+1A	225+1A
225+1A	226+1A		224+1B	224+1B		226+1A	225+1A
225+1A	226+1A		224+1B	224+1B		226+1A	225+1A

Pag. 1

