

- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net



200



KG.
MAX.


Nº HOMOLOGACIÓN: E9 26R-03.1042



RECICLABLE

123312


Rv: 10/2024

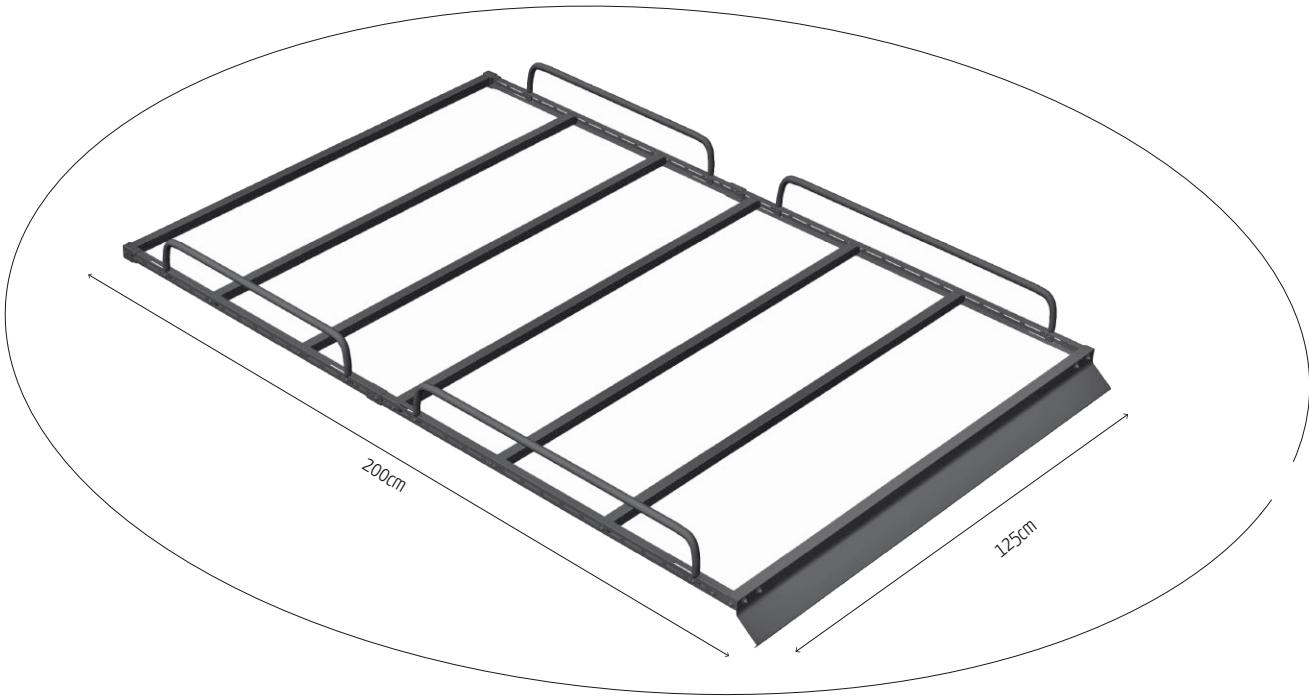

Limpieza pre-instalación



Pre-installation cleaning

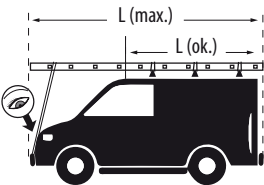


Revisar par de apriete




Check torque

N		Q
1	 S-1250	1
2	 L-1120	2
3	 B-842	2
4	 L-943	2
5	 B-662	2
6	 T-1235	6
7		2
8		12
9		2
10		8
12		1
13	 CHA-M8	12
14	 ISO 7380 M8x30	10
15	 ISO 7380 M8x16	20
16	 DIN 125 Ø 8	32
17	 ISO 7380 M8x40	2

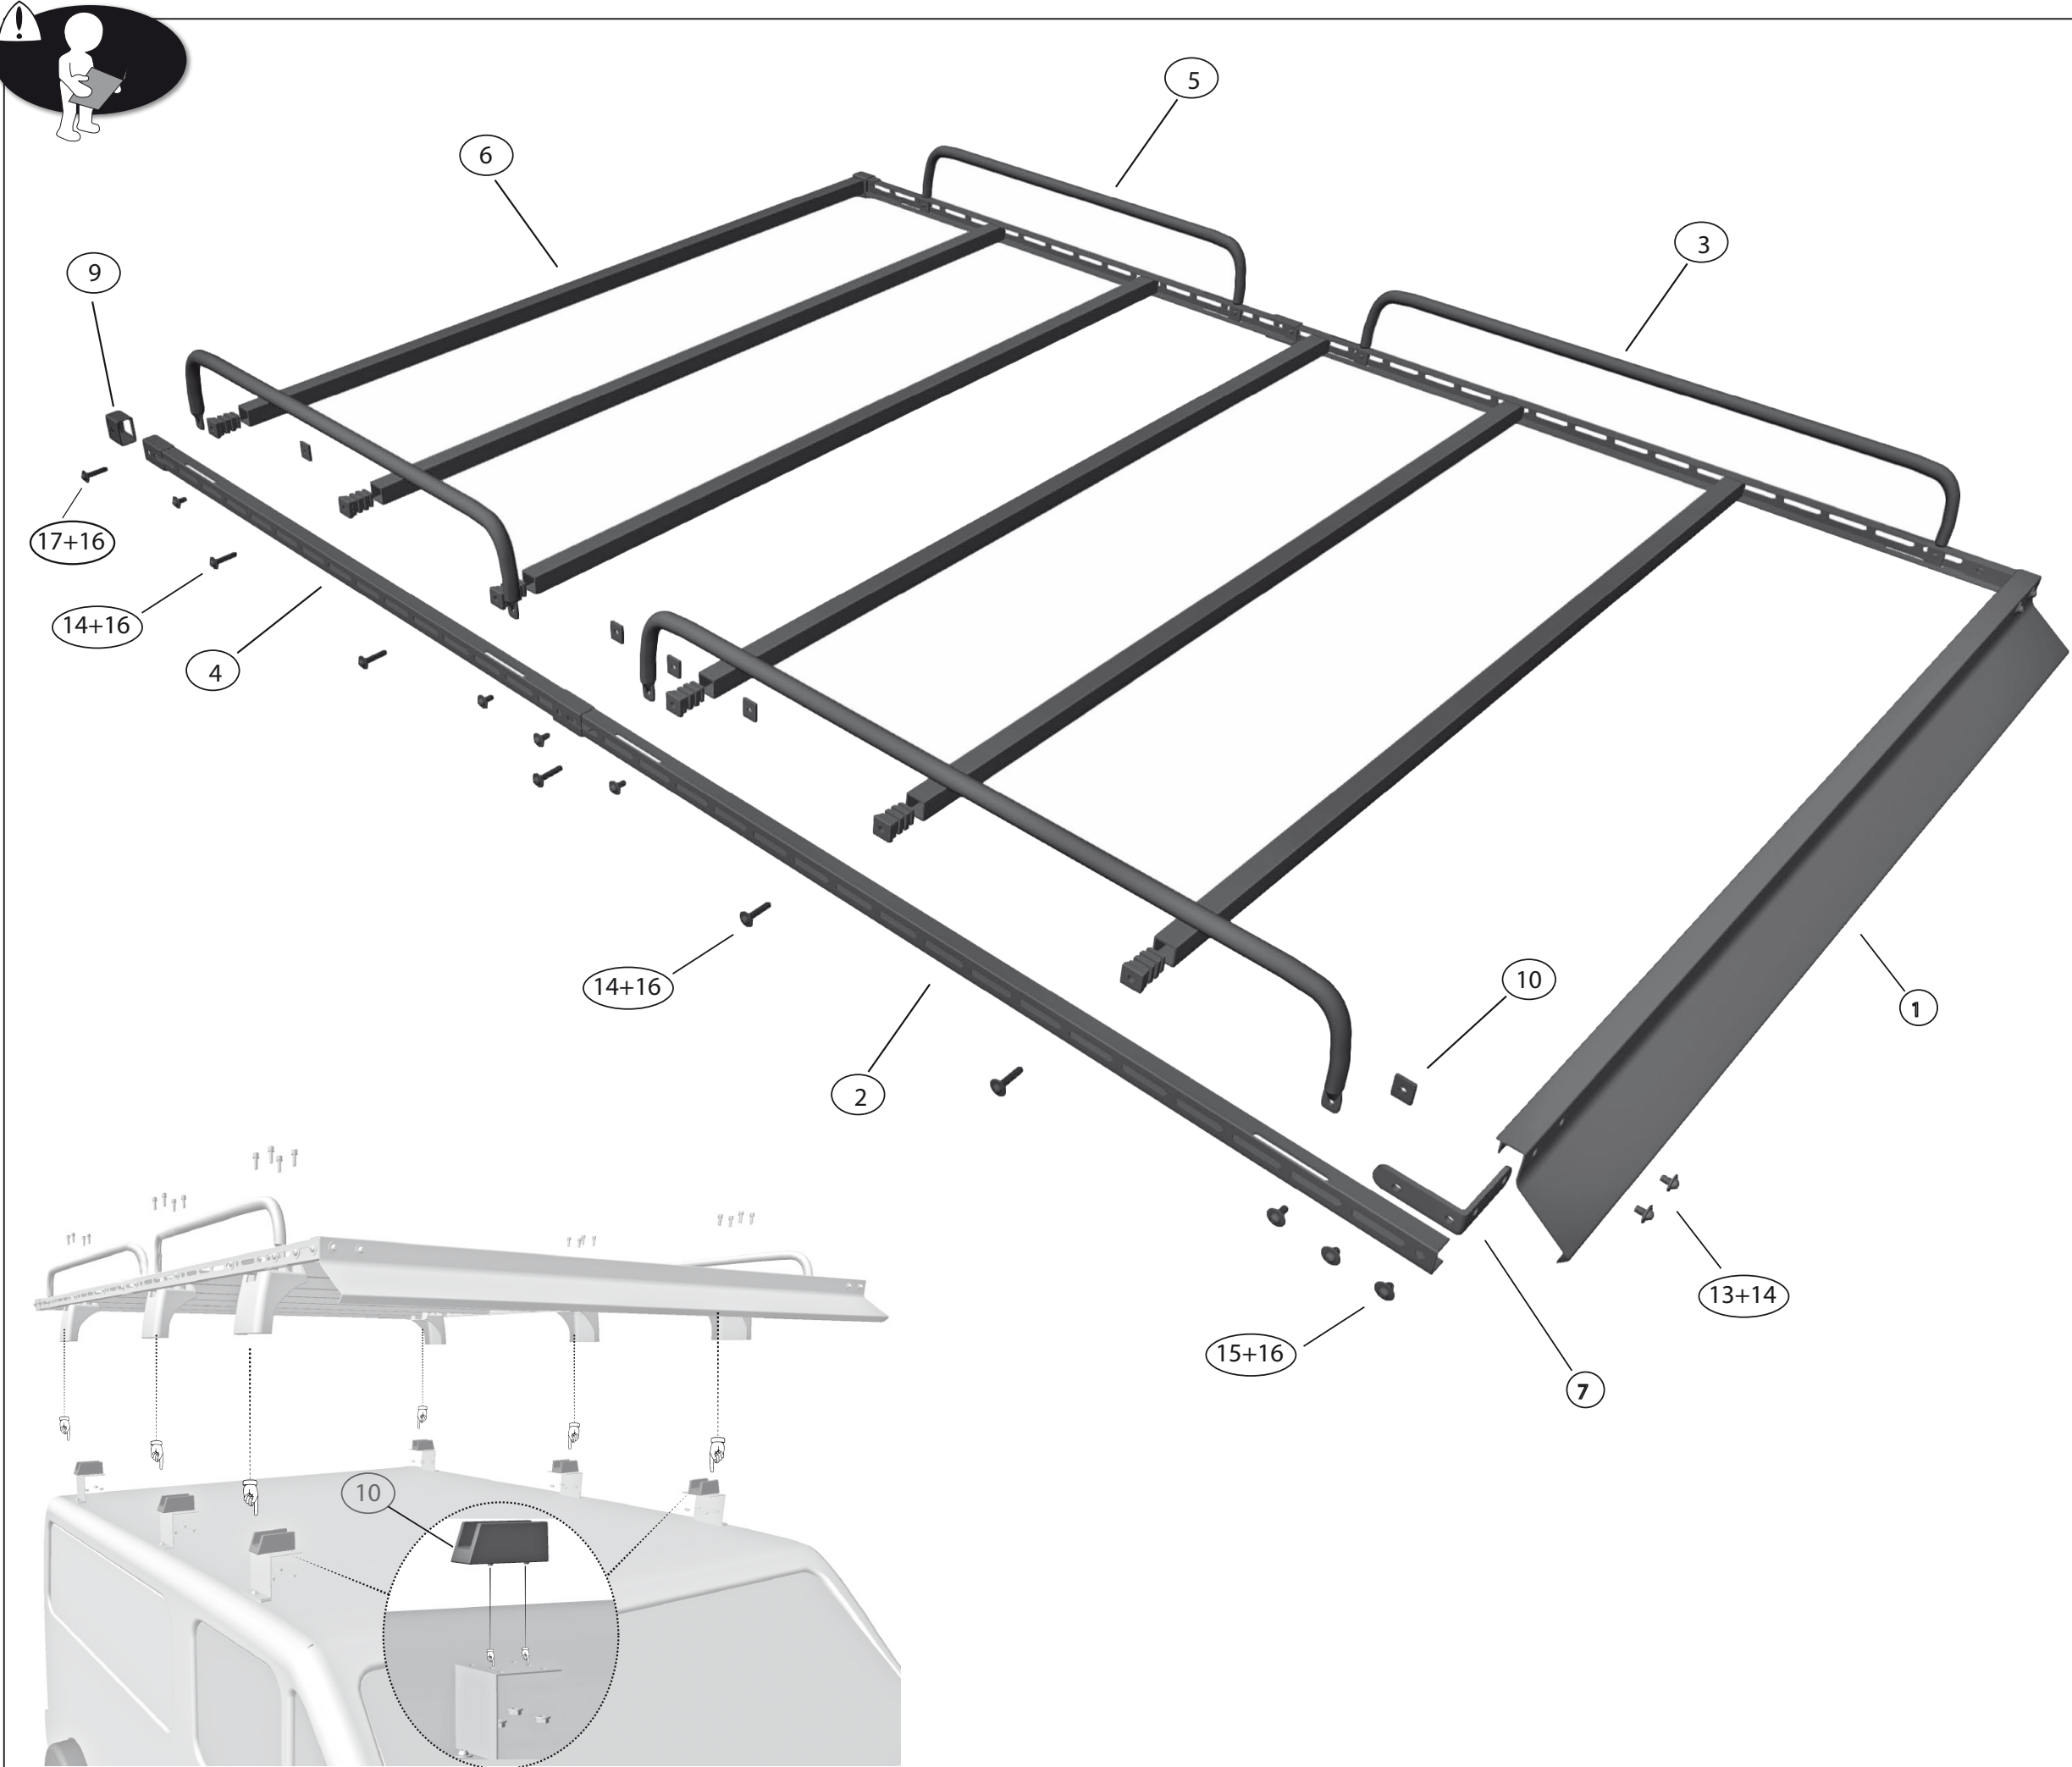




CITROËN BERLINGO I / PEUGEOT PARTENR I

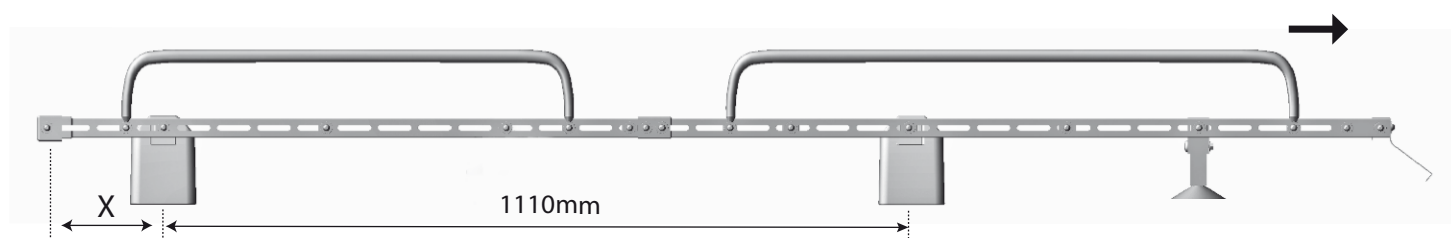


$200\text{mm} = X$

CITROËN JUMPY I / FIAT SCUDO I / PEUGEOT EXPERT I

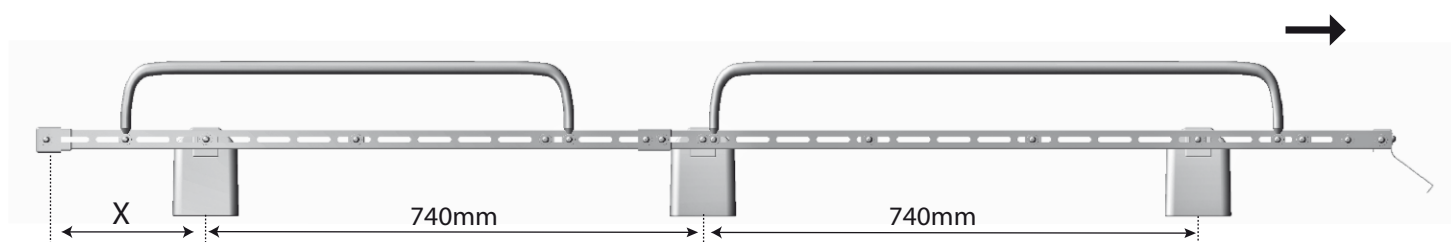

$210\text{mm} = X$


DACIA DOKKER VAN

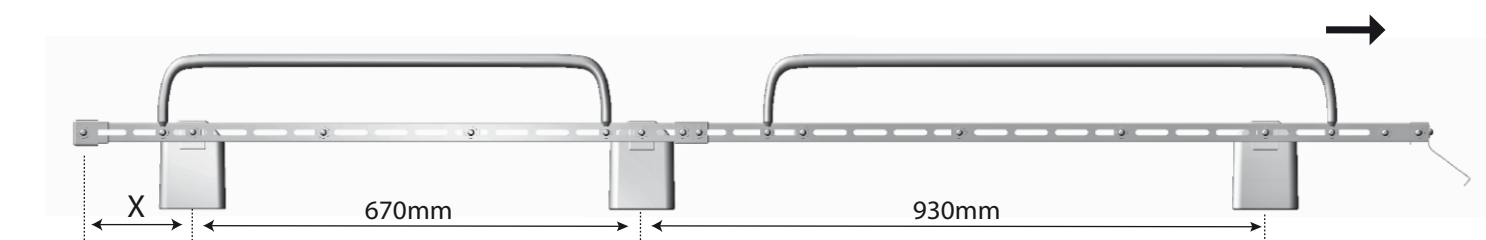

$100\text{mm} = X$


$70\text{mm} = X$

FORD TOURNEO CONNECT I L1 / FORD TRANSIT CONNEC I T L1

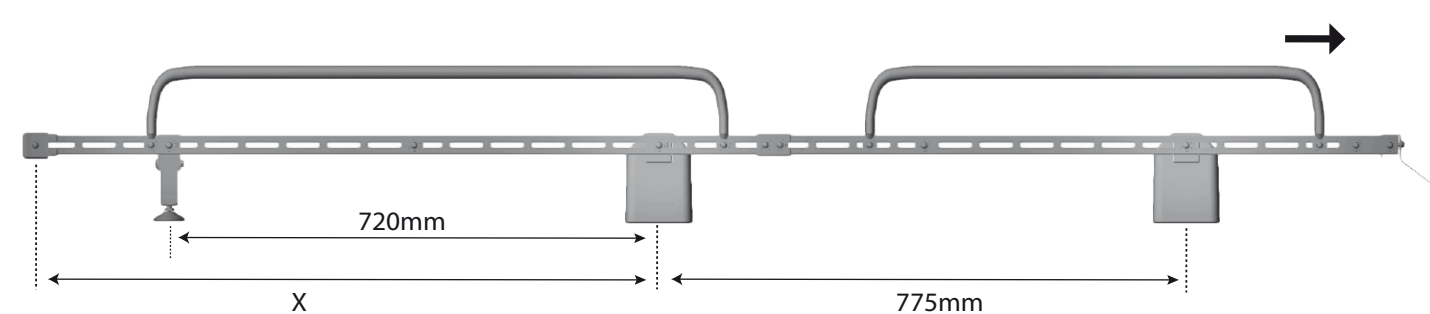


$900\text{mm} = X$

FORD TOURNEO CONNECT I L2 / FORD TRANSIT CONNEC I T L2

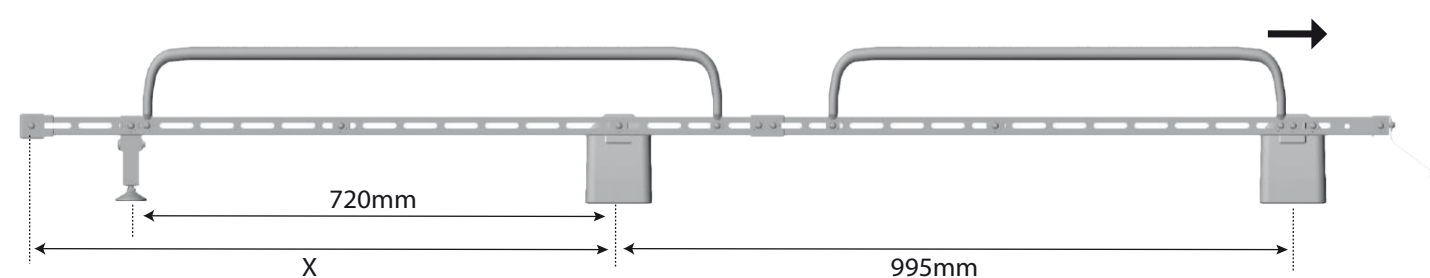

$800\text{mm} = X$


FORD TRANSIT CONNECT VAN II (2013->)

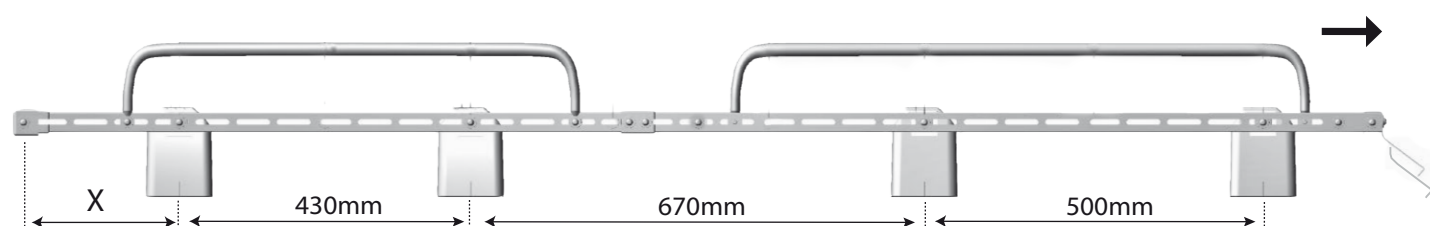

$300\text{mm} = X$




FORD COURIER II (2013->)

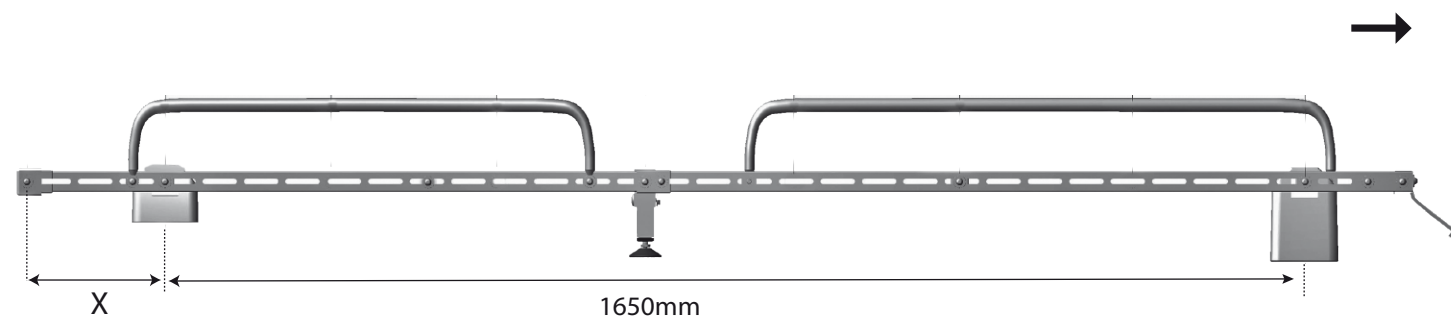


200mm = X 

RENAULT EXPRESS (2021->)

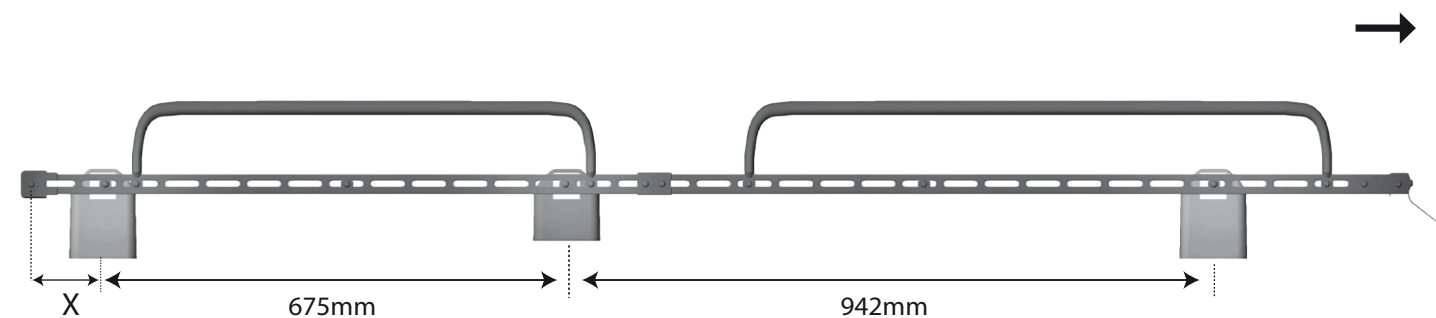


100mm = X 

MERCEDES CITAN W415 L2 / NISSAN NV250 L1 / RENAULT KANGOO II L2

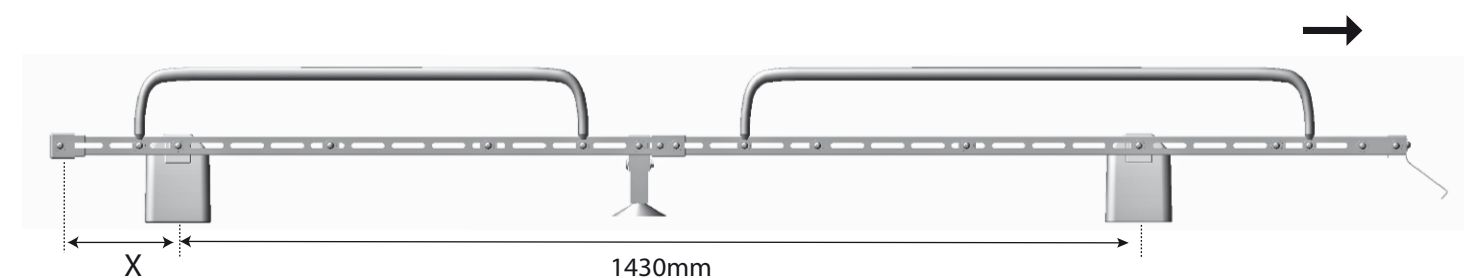


100mm = X 

MERCEDES CITAN 420 L1 (2021->) / RENAULT KANGOO III (2021->)

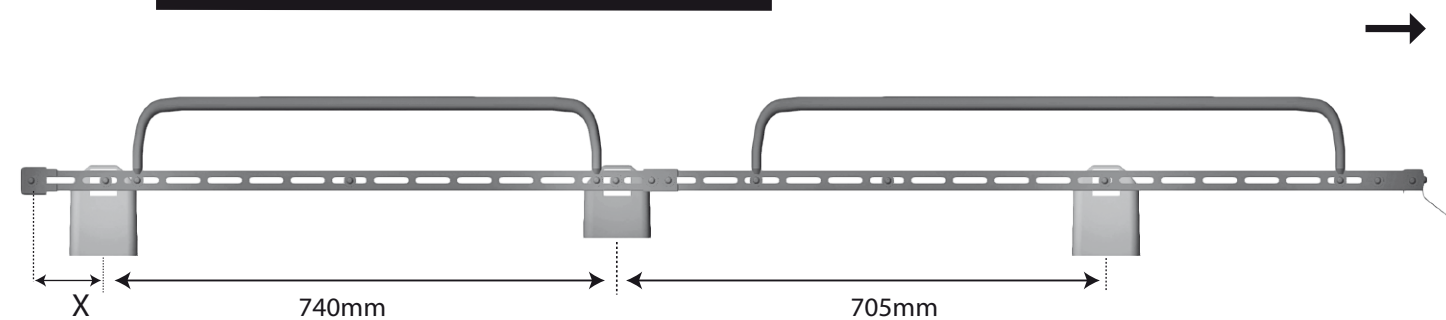


100mm = X 

VOLKSWAGEN CADDY IV L1

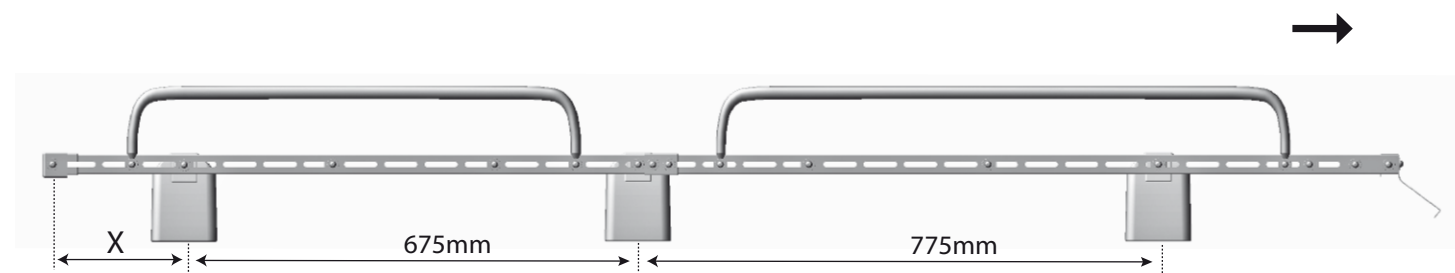


300mm = X 



1




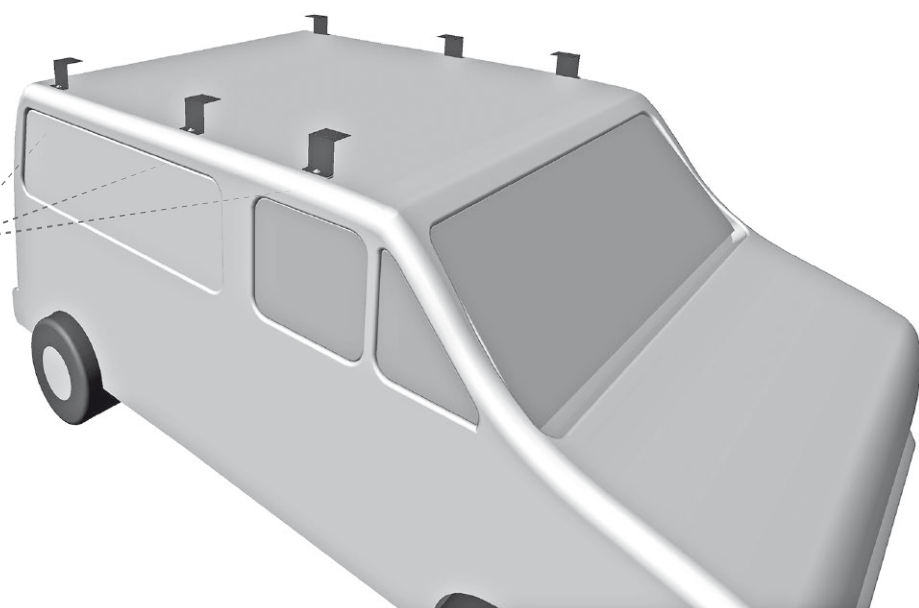


2

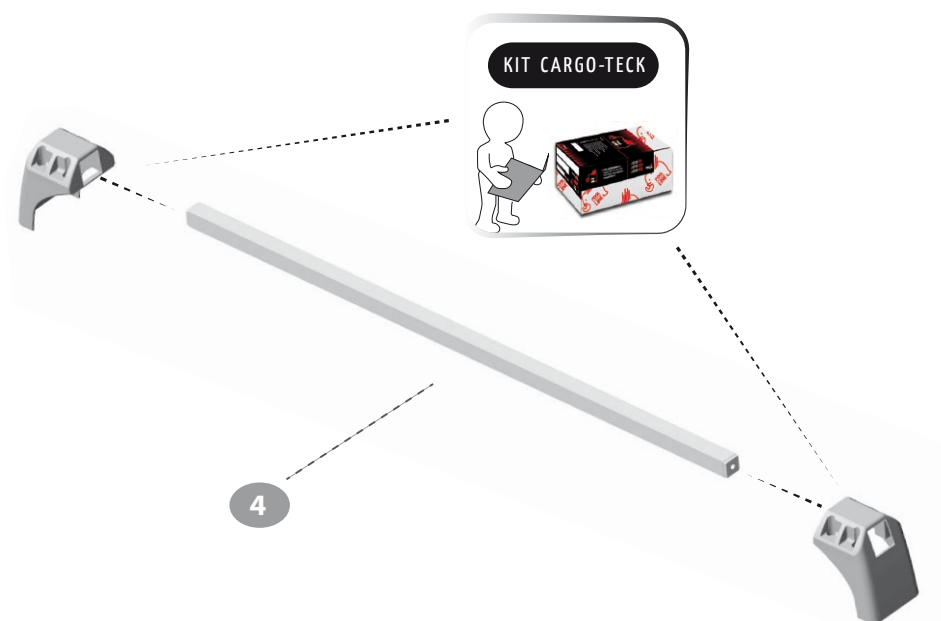


3

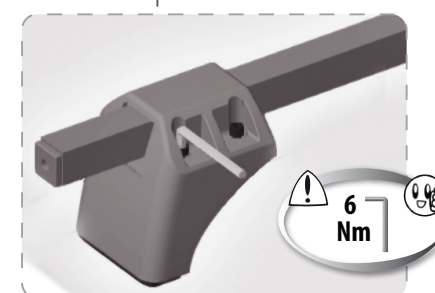
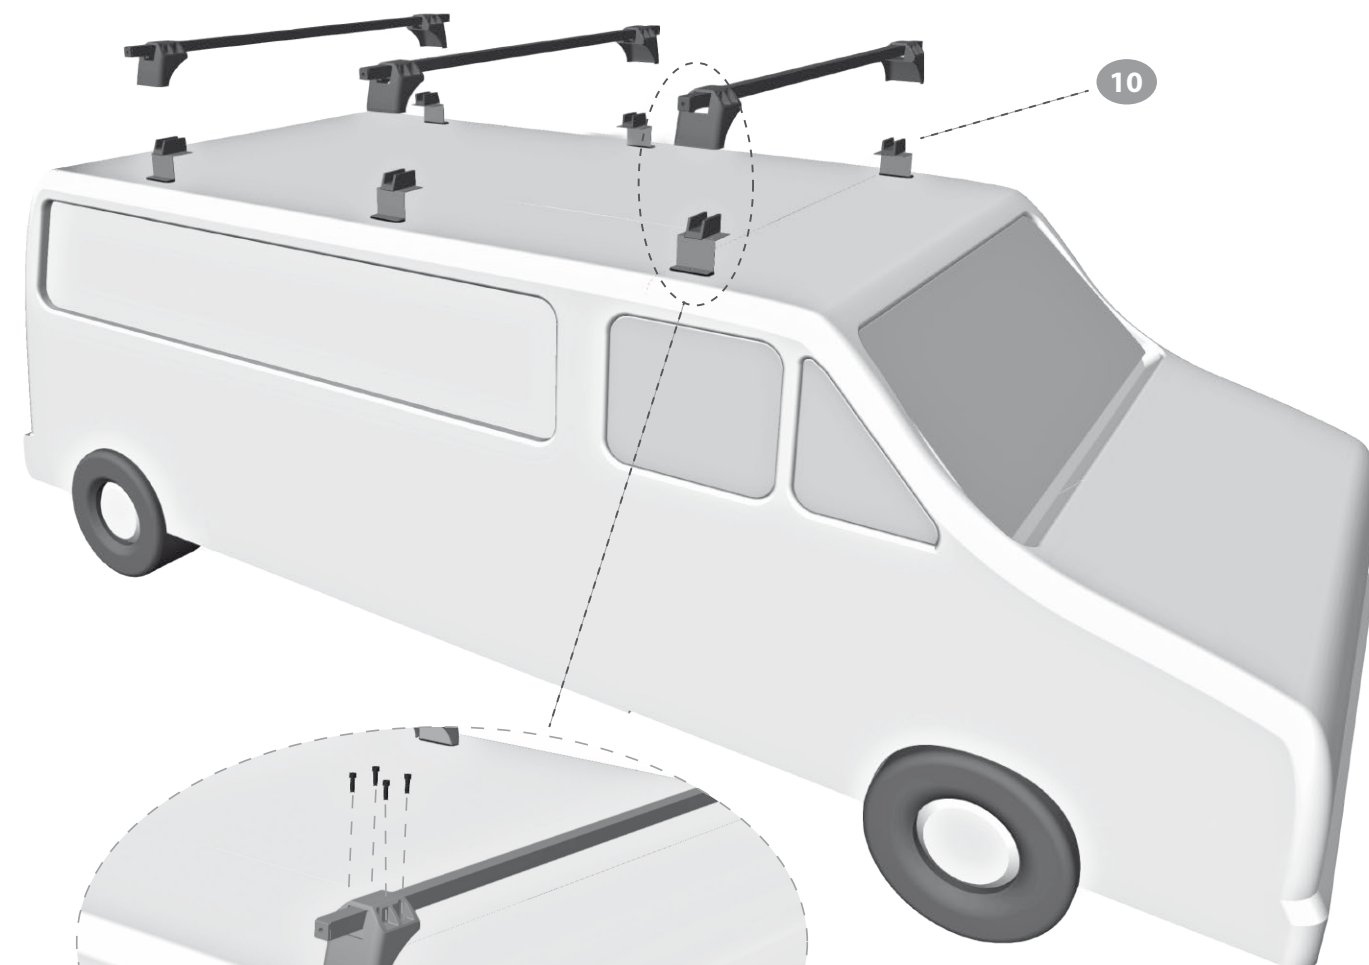


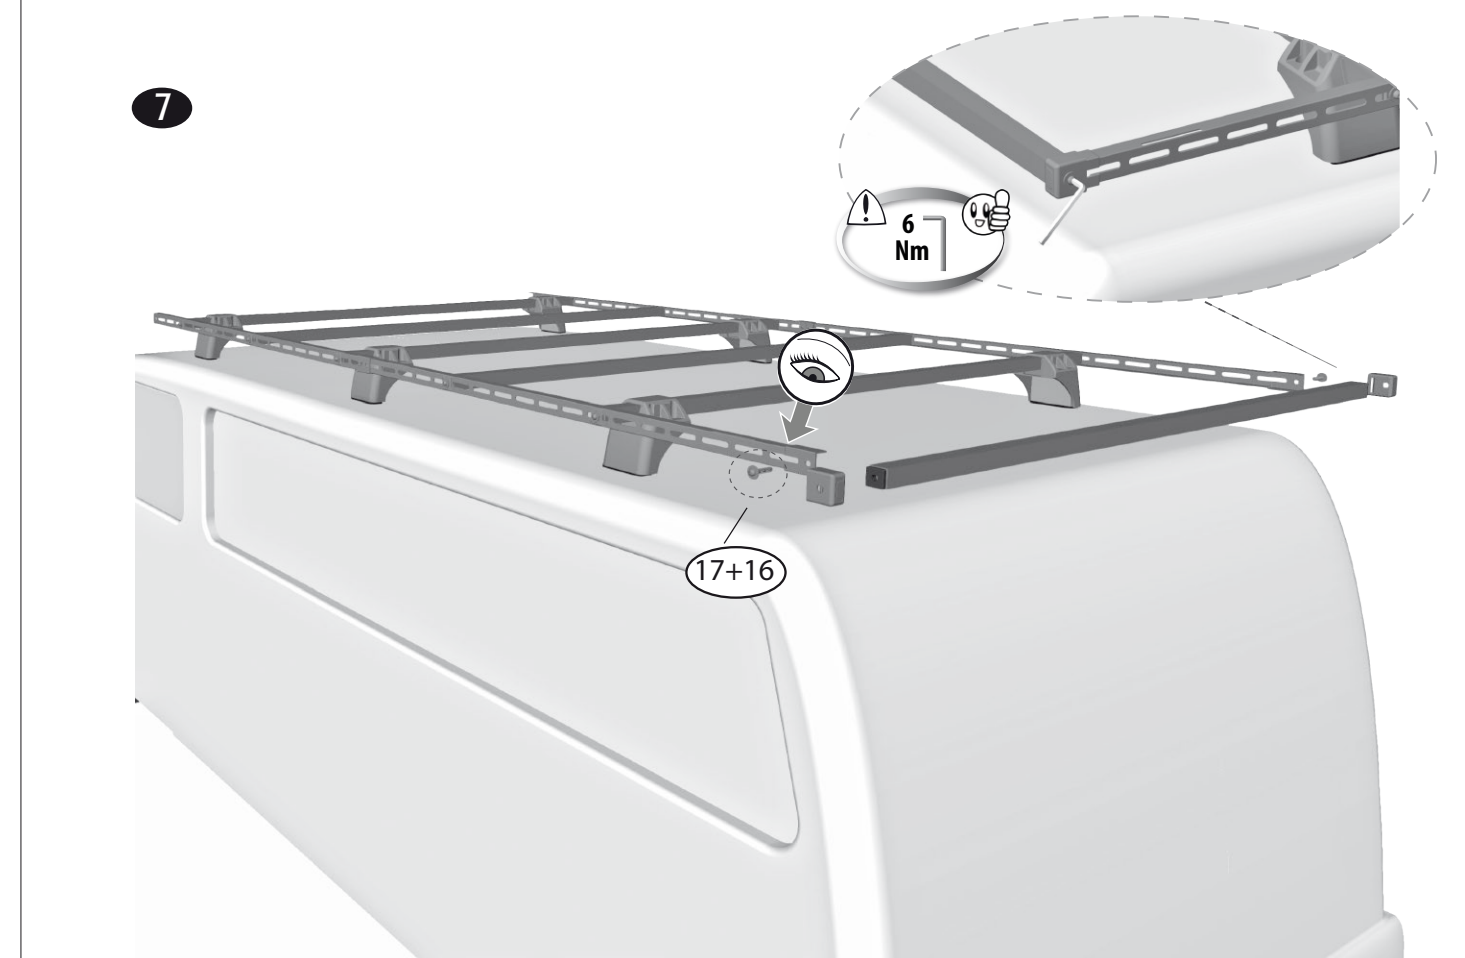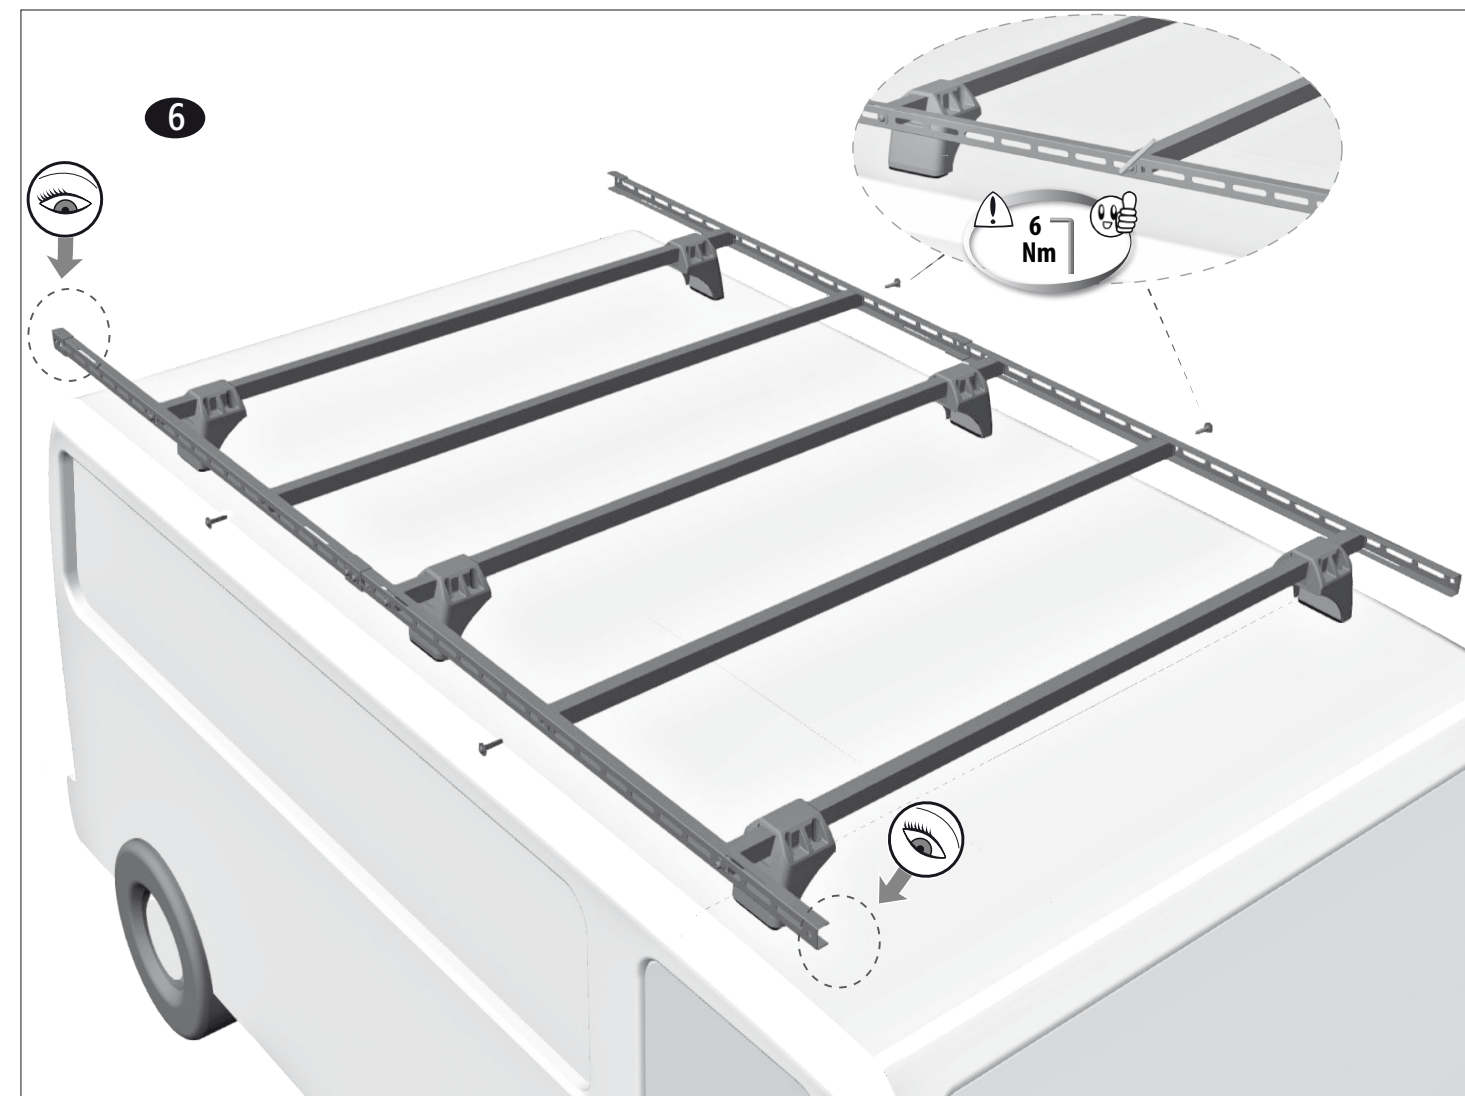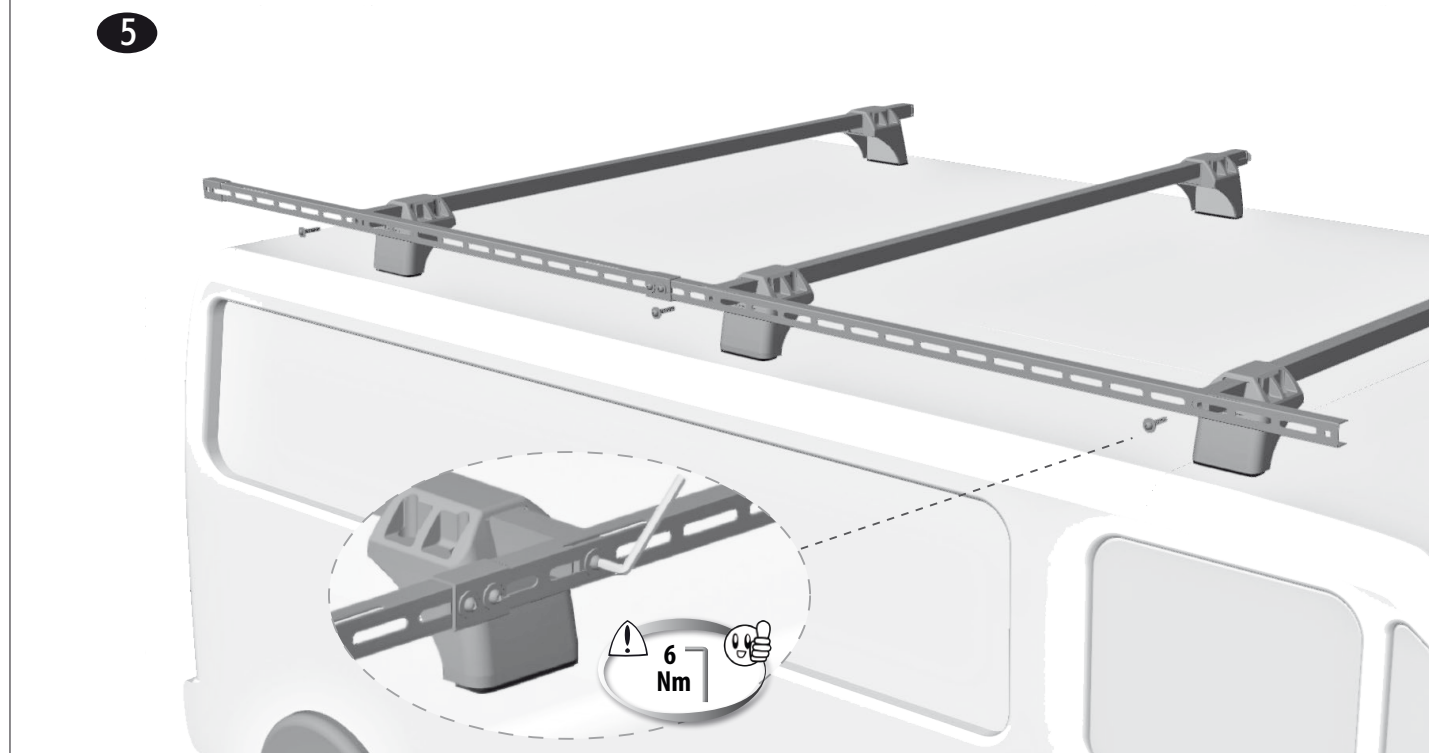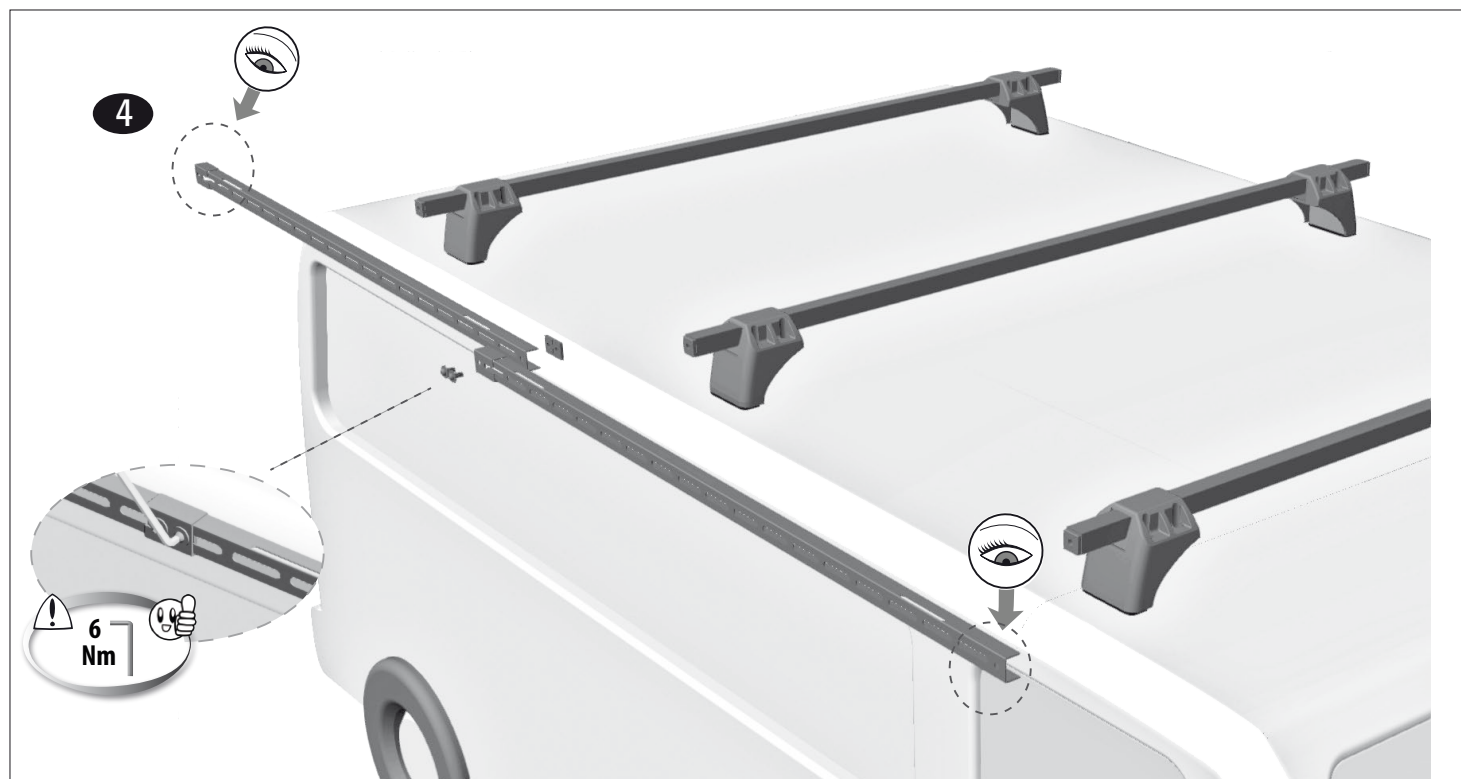








8

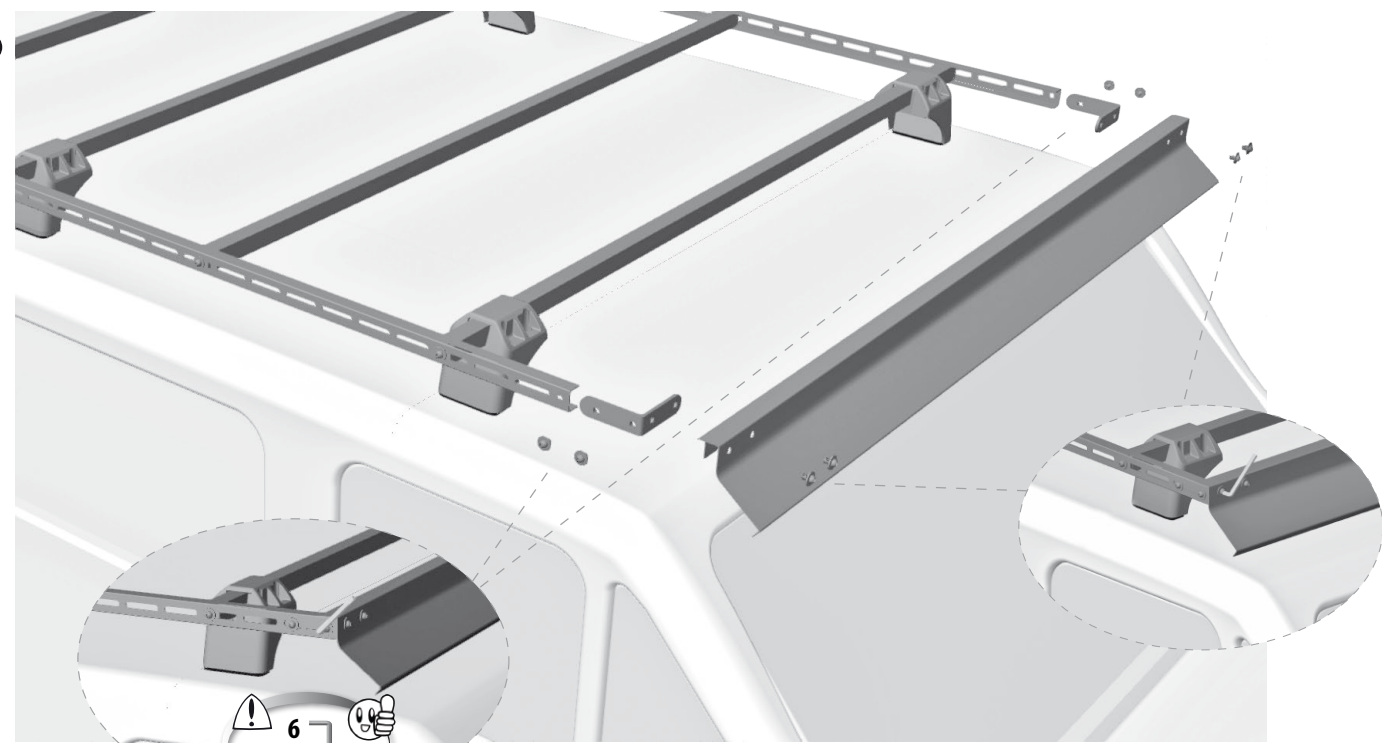



9

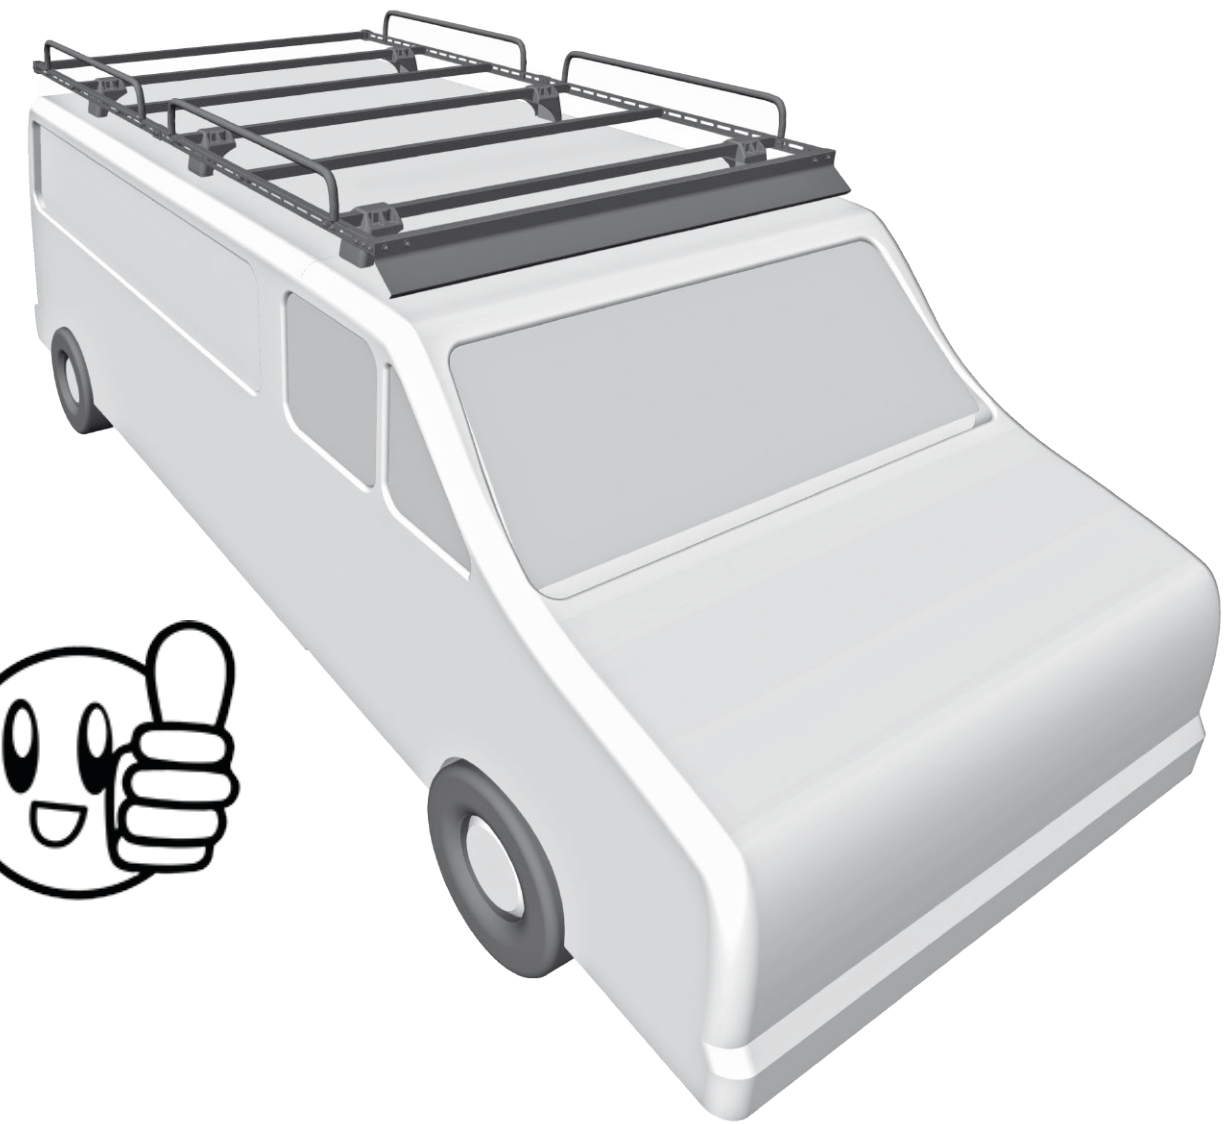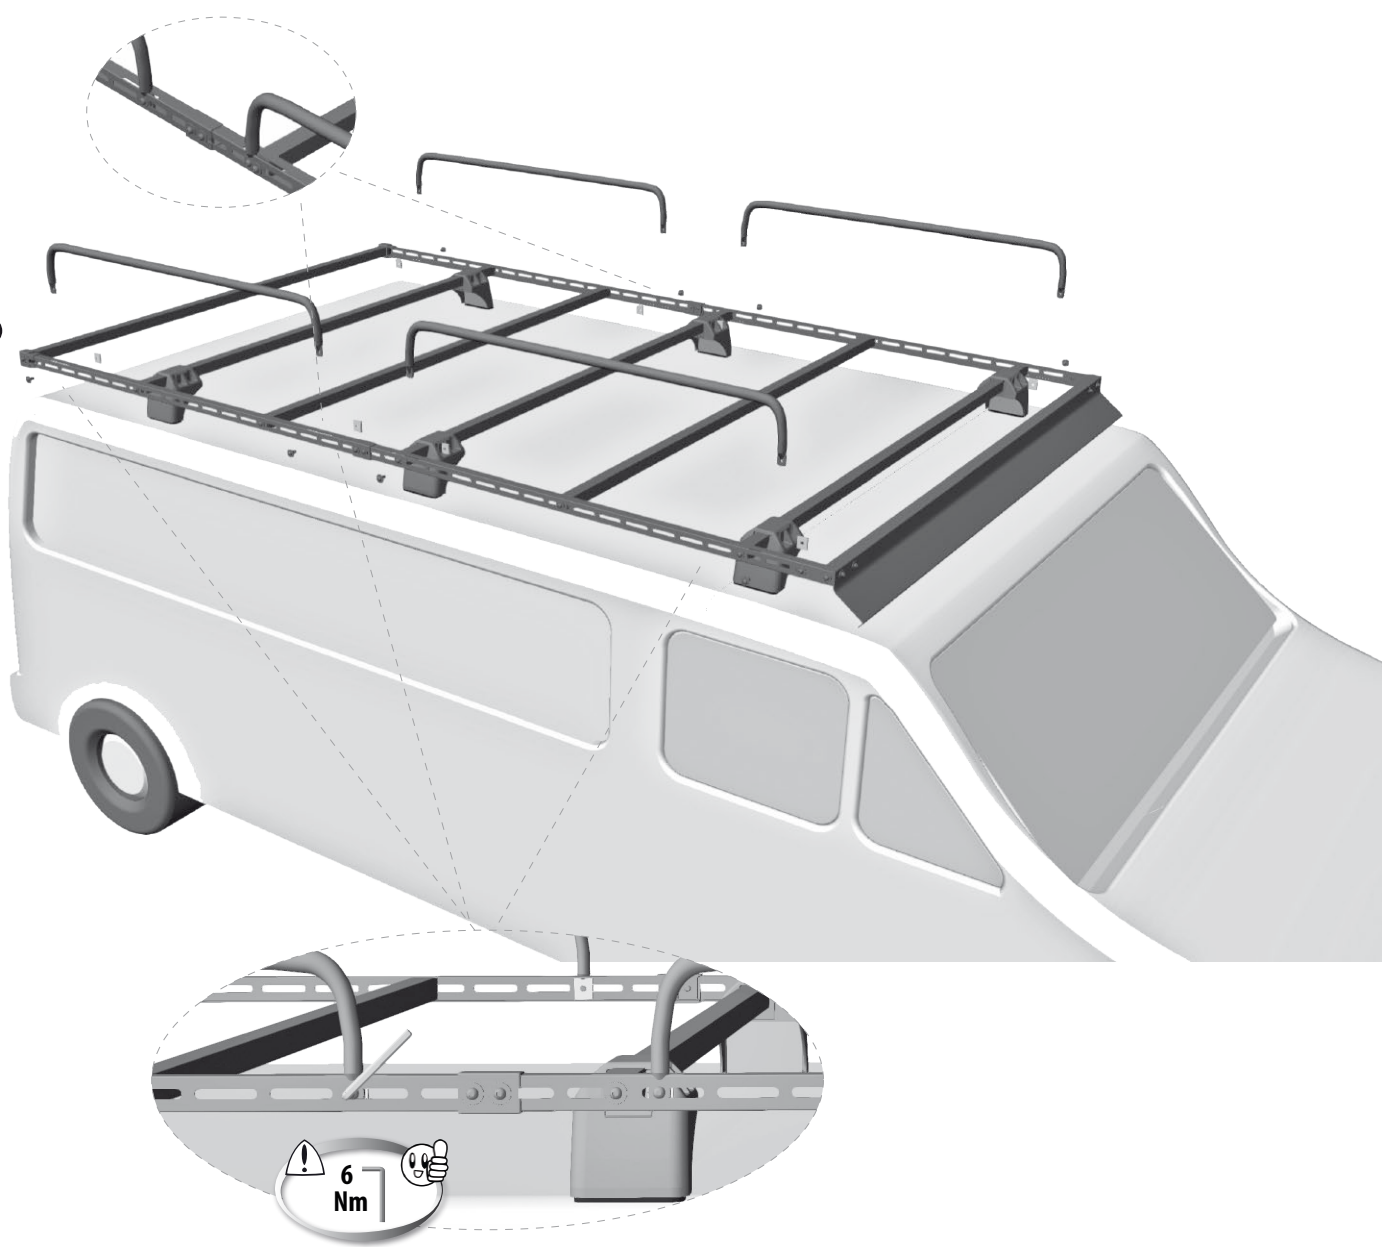

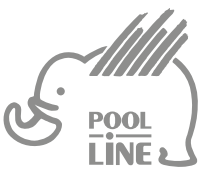

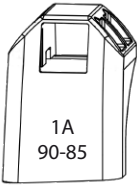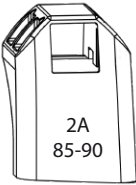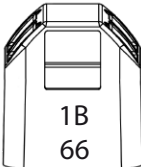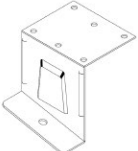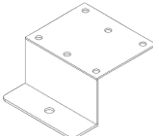N			Q			Q
1			1+1			2
2			1+1			2
3						4
4						1
5						2
6						1

N	BO0060	Q
8	 DIN912 M6x20	16
9	 DIN125	16

N	BO0005 x 2	Q
10	 DIN912 M6x20	4
11	 DIN9021	4

- E

Instrucciones de montaje

Kit de fijación
- C

Instruccions de muntatge

Kit de fixació
- GB

Assembly instrucctions

Fixation Kit
- F

Instruction de montage

Kit fixation
- D

Montageanleitung

Stützfuß-Kit
- PT

Instruções de montagem

Kit fixação
- I

Istruzioni di montaggio

Kit di fissaggio
- PL

Instrukcja montażu

Element mocujący
- CZ

Montážní návod

Fixační kit
- HU

Szerelési Utasítás

Rögzítő készlet
- RO

Instrucțiuni de montaj


Kit de fixare
- HR

Detaljne upute

Kit za montažu
- TU


Öncelikli montaj

Montaj kiti

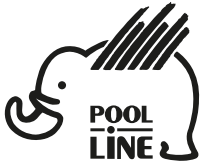




POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: E9 26R-03.1043

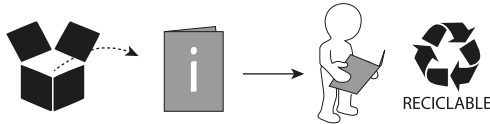

121093

Rv: 06/2024

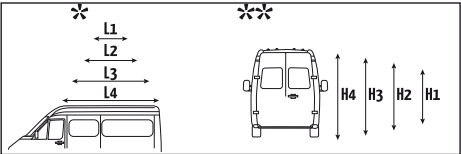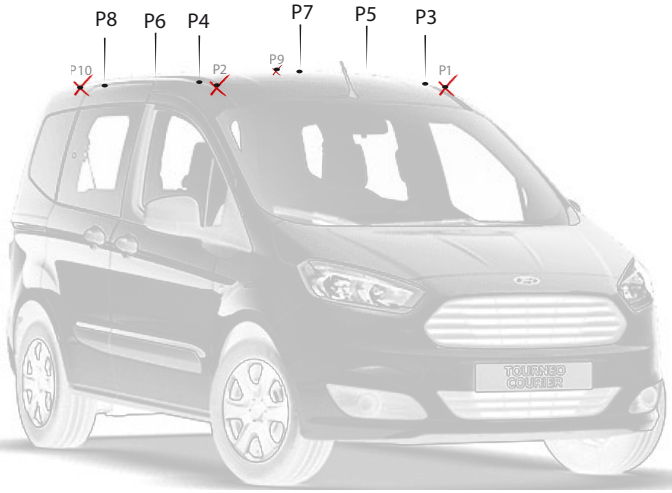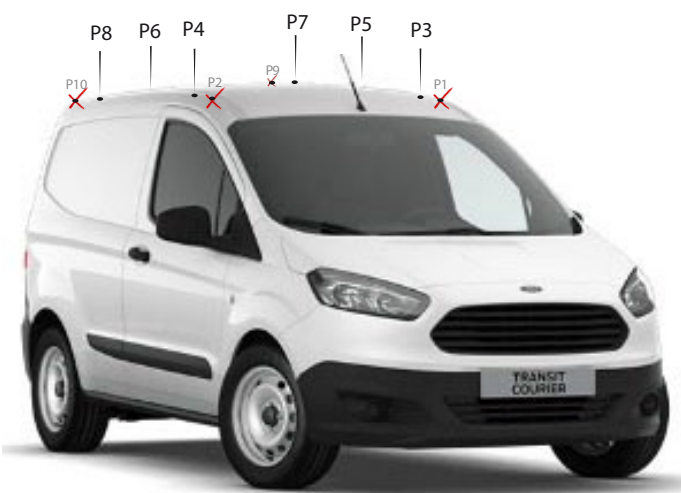


	L*	H**			P1	P2	P3	P4		P5	P6		P7	P8	P9	P10
FORD																
Courier II transit	L1	H1	2014->	B00005	--	--	221+1A	222+2A		VENT6,5	VENT6,5		210+1B	210+1B	--	--
Courier II Tourneo	L1	H1	2014->	B00005	--	--	221+1A	222+2A		VENT6,5	VENT6,5		210+1B	210+1B	--	--



Limpieza pre-instalación

 Pre-installation cleaning

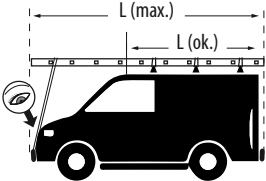

Revisar par de apriete

 Check torque

