

- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj



POOL-LINE ACCESORIOS, S.L.  
C. Esqueis, 19. P. I. Can Barri  
08415- Bigues i Riells. Barcelona (España)  
[www.pool-line.net](http://www.pool-line.net)



200



KG.  
MAX.



Nº HOMOLOGACIÓN: E 9 26R-03.1042



RECICLABLE


123412

Rv: 05/2025

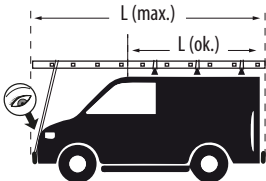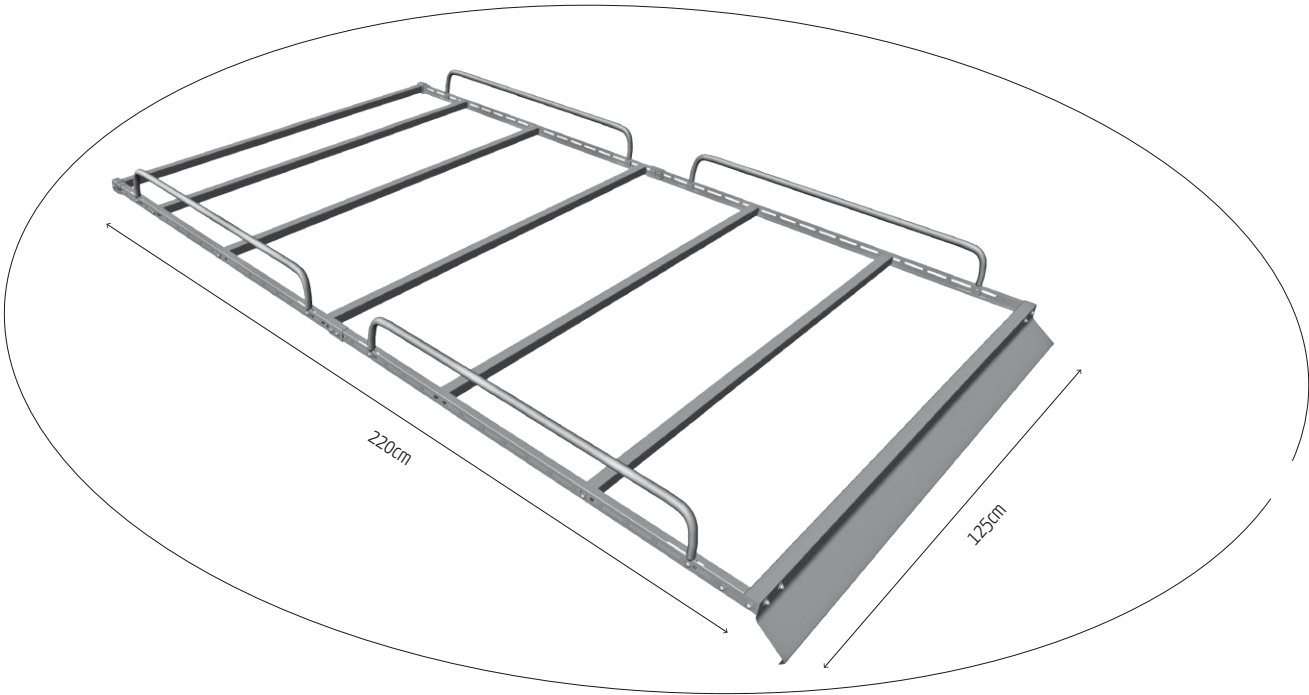

| N  |                                                                                                    | Q  |
|----|----------------------------------------------------------------------------------------------------|----|
| 20 |  S-1250           | 1  |
| 21 |                   | 2  |
| 22 |  L-1120           | 4  |
| 23 |  B-842            | 4  |
| 24 |  T-1235          | 6  |
| 25 |                 | 14 |
| 26 |                 | 2  |
| 27 |                 | 8  |
| 28 |  CHA-M8         | 12 |
| 29 |  ISO 7380 M8x30 | 10 |
| 30 |  ISO 7380 M8x16 | 20 |
| 31 |  DIN 125 Ø 8    | 32 |
| 32 |  ISO 7380 M8x40 | 2  |


| N  |                                                                                    | Q |
|----|------------------------------------------------------------------------------------|---|
| 32 |  | 1 |

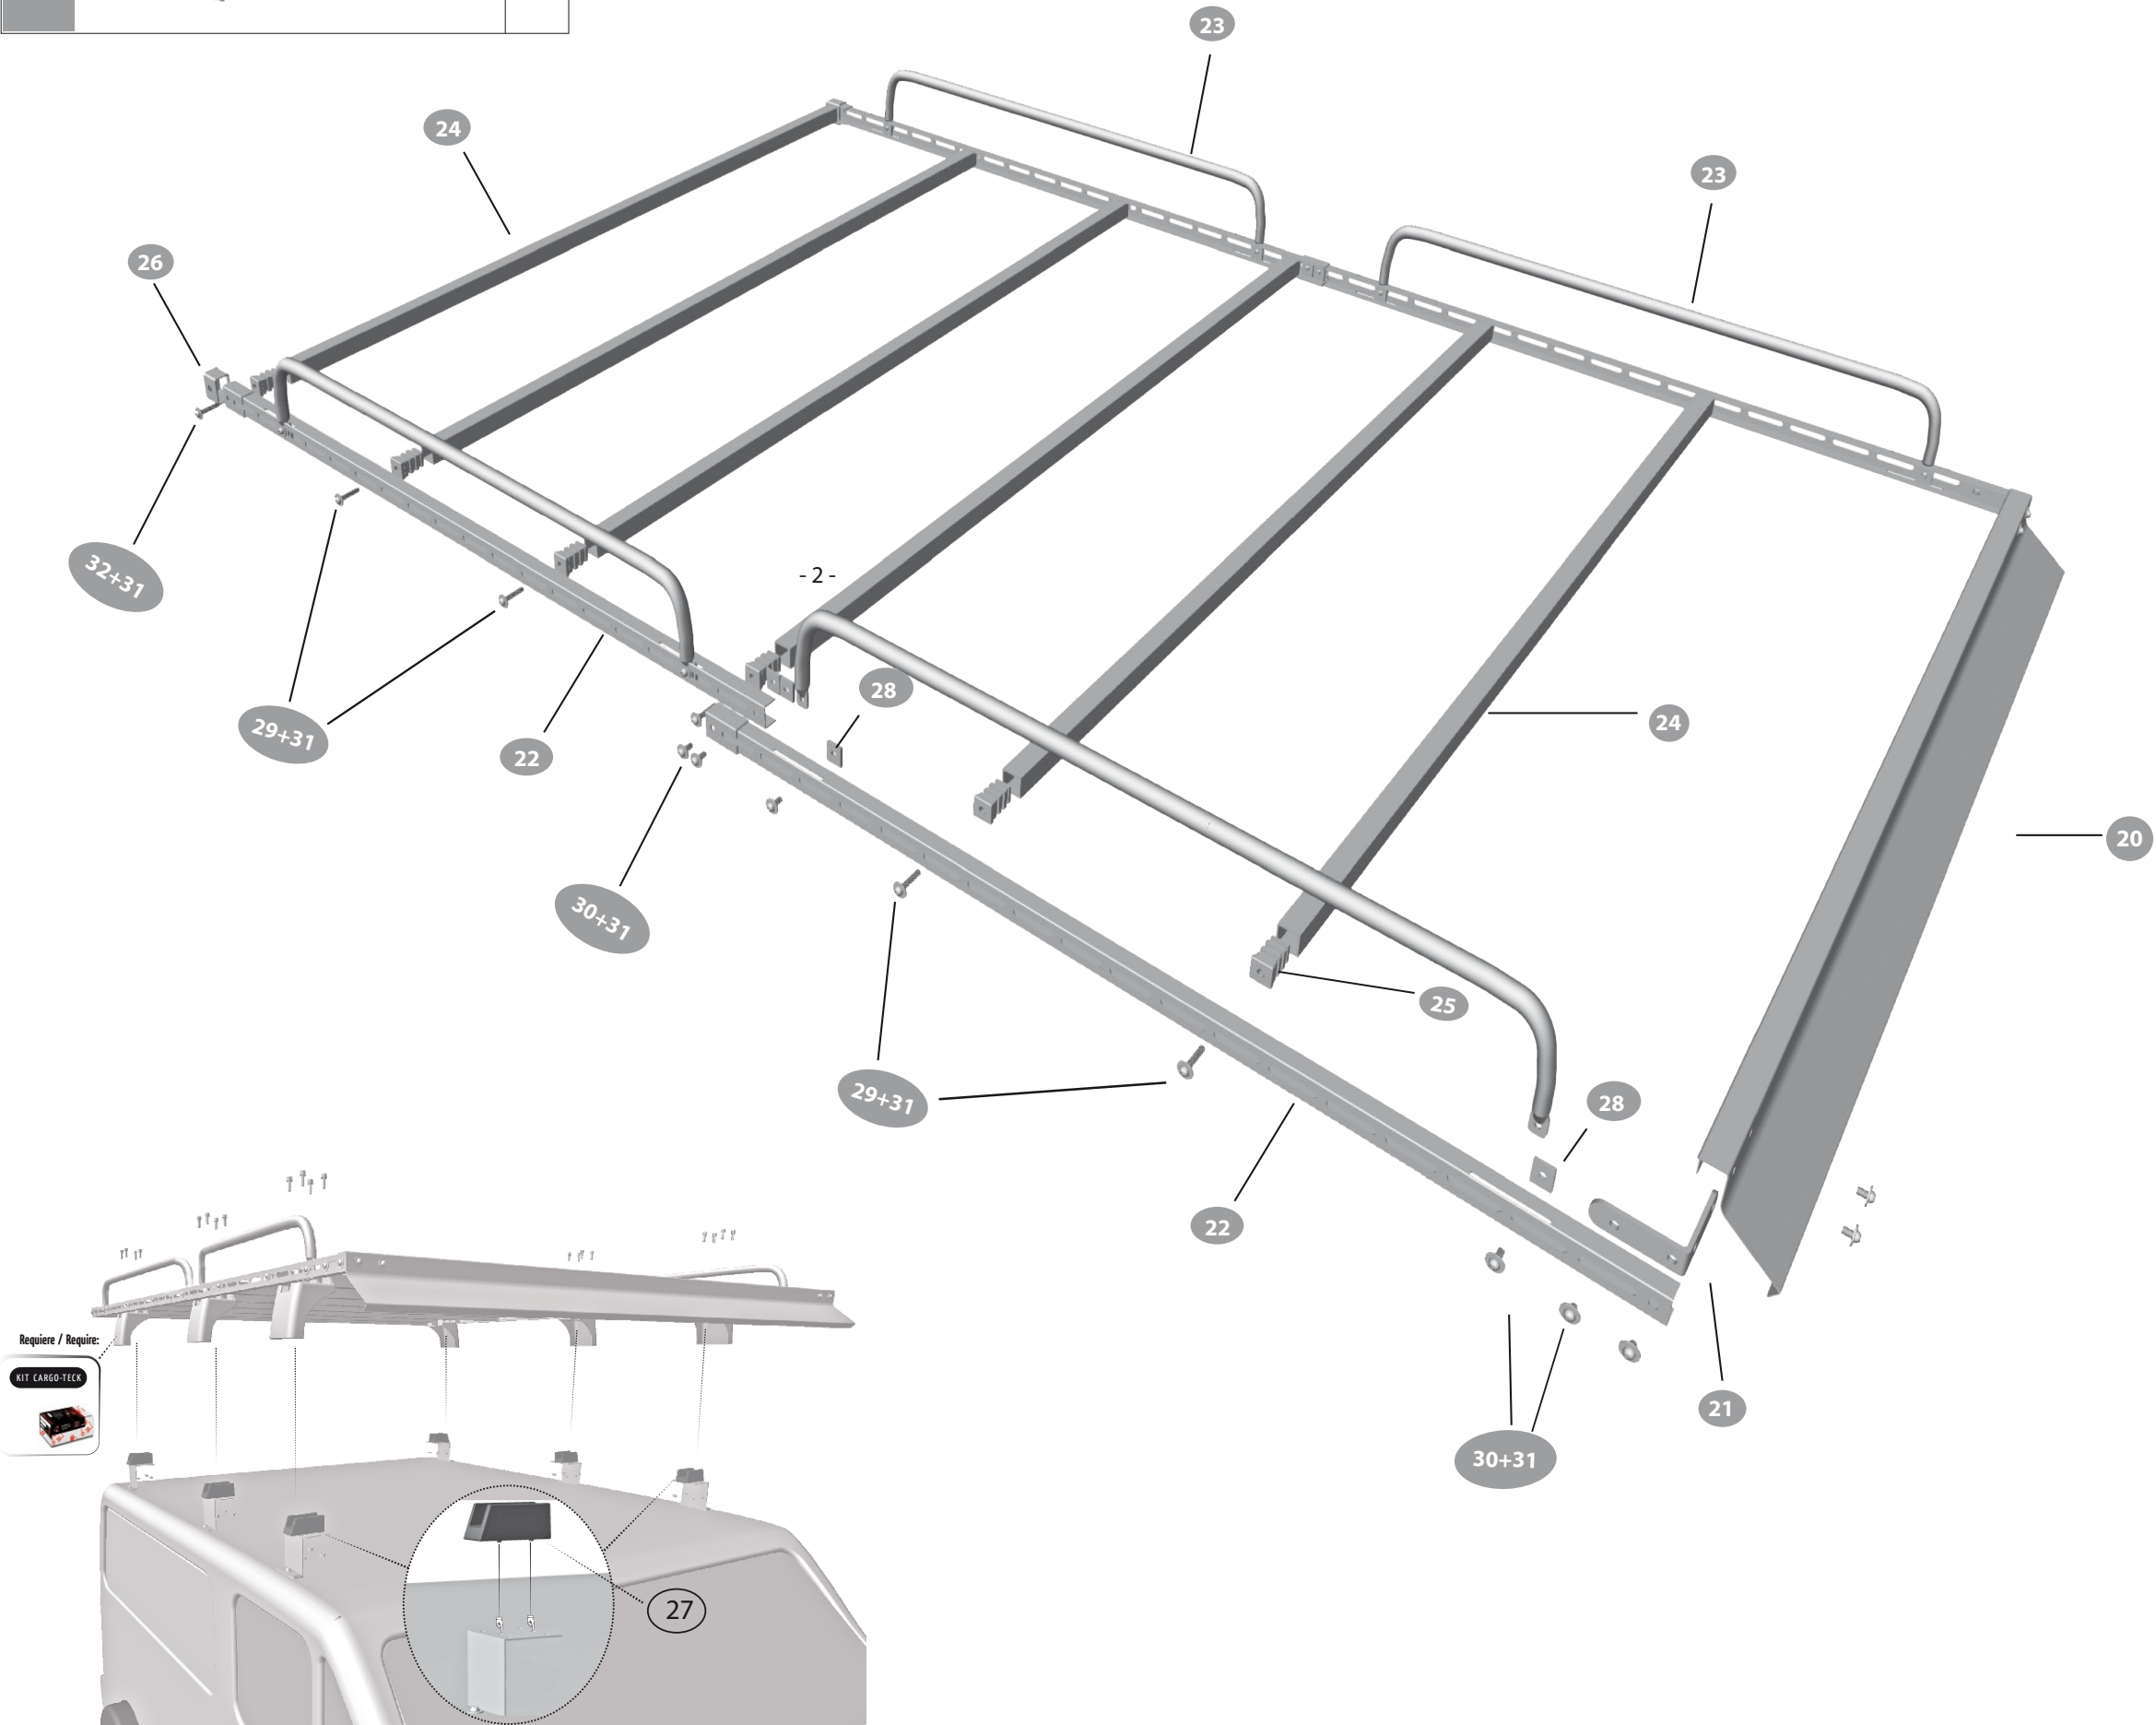




Zona delantera  
Zone avant  
Front zone  
Zone anteriore  
Vorderzone


**CITROËN C15**

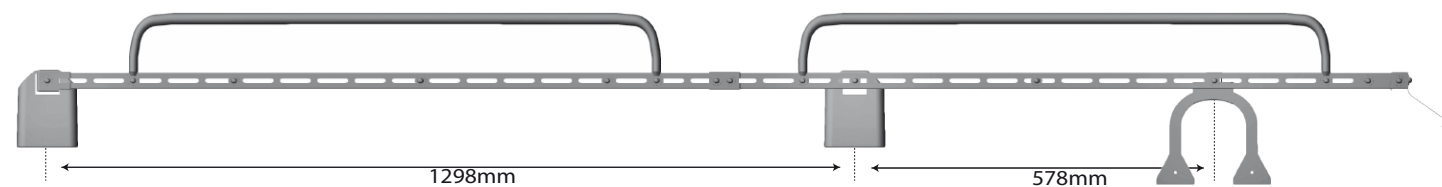



**FORD CONNECT I L2 (04-13)**

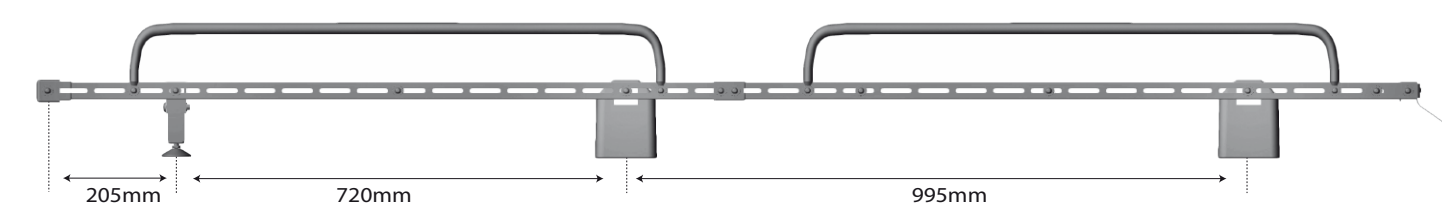



**FORD CONNECT II L2 (13-)**

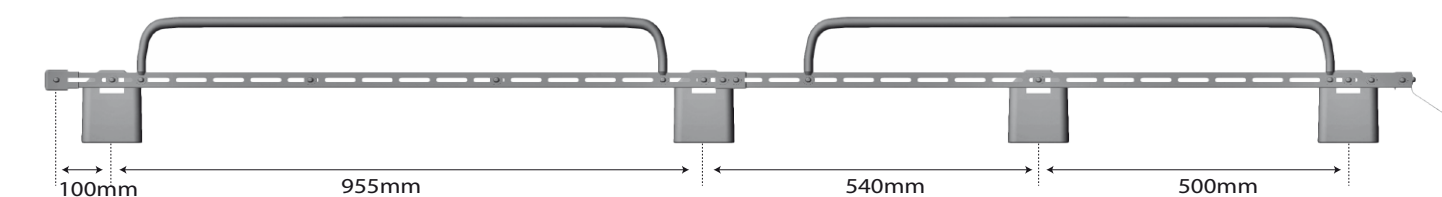

**FORD CONNECT III L1 (2022->)  
VOLKSWAGEN CADDY V L1 (2021->)**

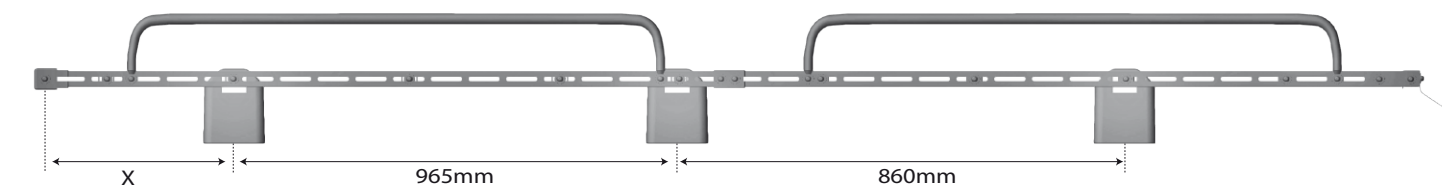


**MERCEDES CITAN L3  
NISSAN NV250 L2  
RENAULT KANGOO II L3**

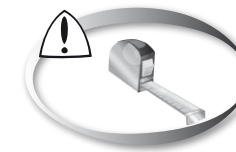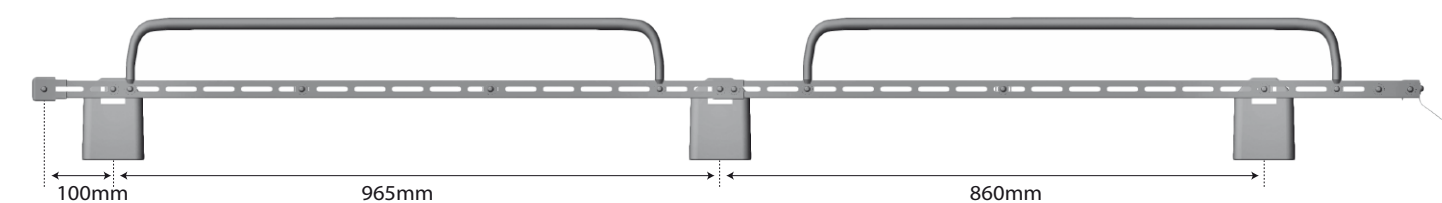


Zona delantera  
Zone avant  
Front zone  
Zone anteriore  
Vorderzone



**VOLKSWAGEN CADDY III L2 (04-13)**

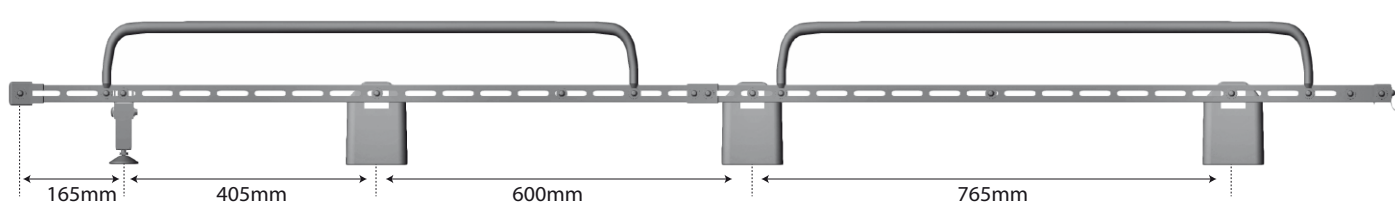


**VOLKSWAGEN CADDY III.2 / IV L1 (2011-)**

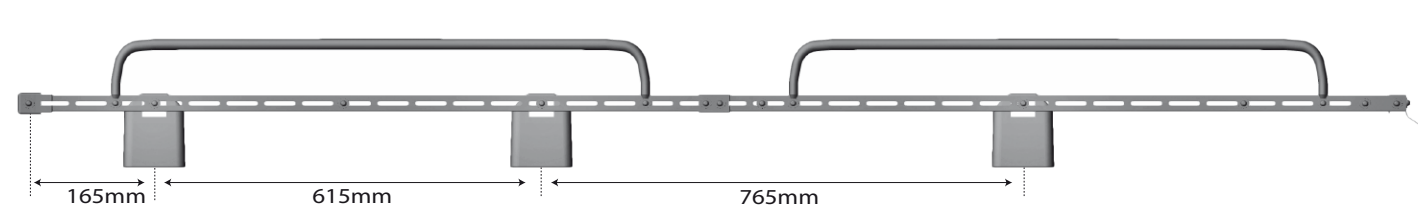


**FORD COURIER II L1 (2024-)**

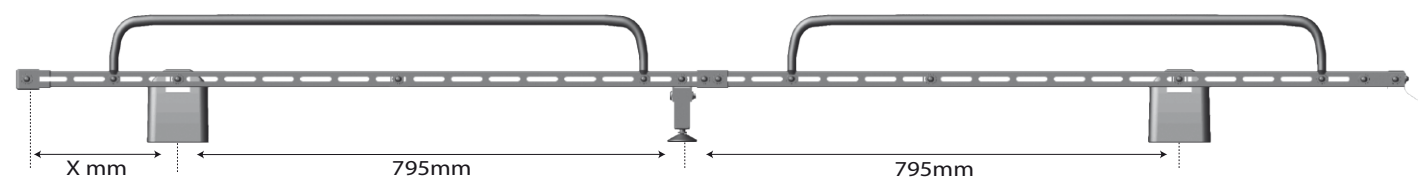


**NISSAN KUBISTAR L2 / RENAULT KANGOO I L2 (97-09)**

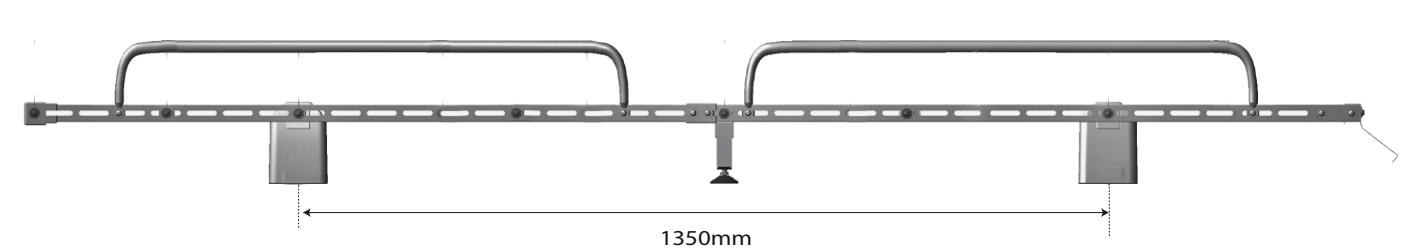


**VOLKSWAGEN CADDY MAXI L2 (2011->)**

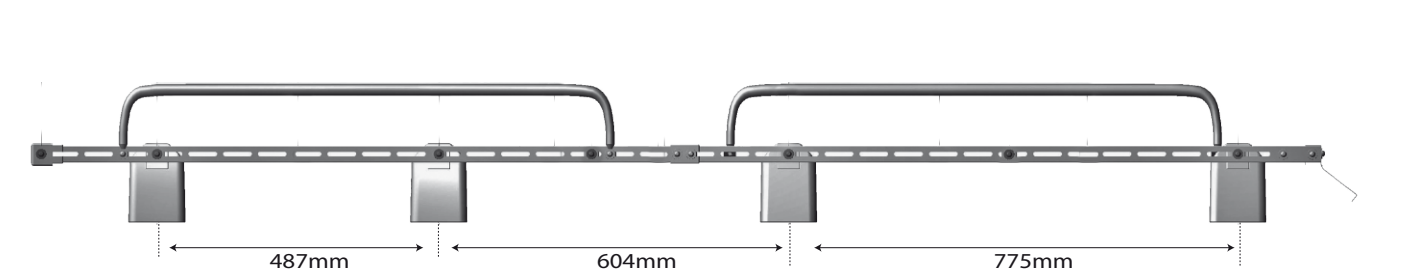



1

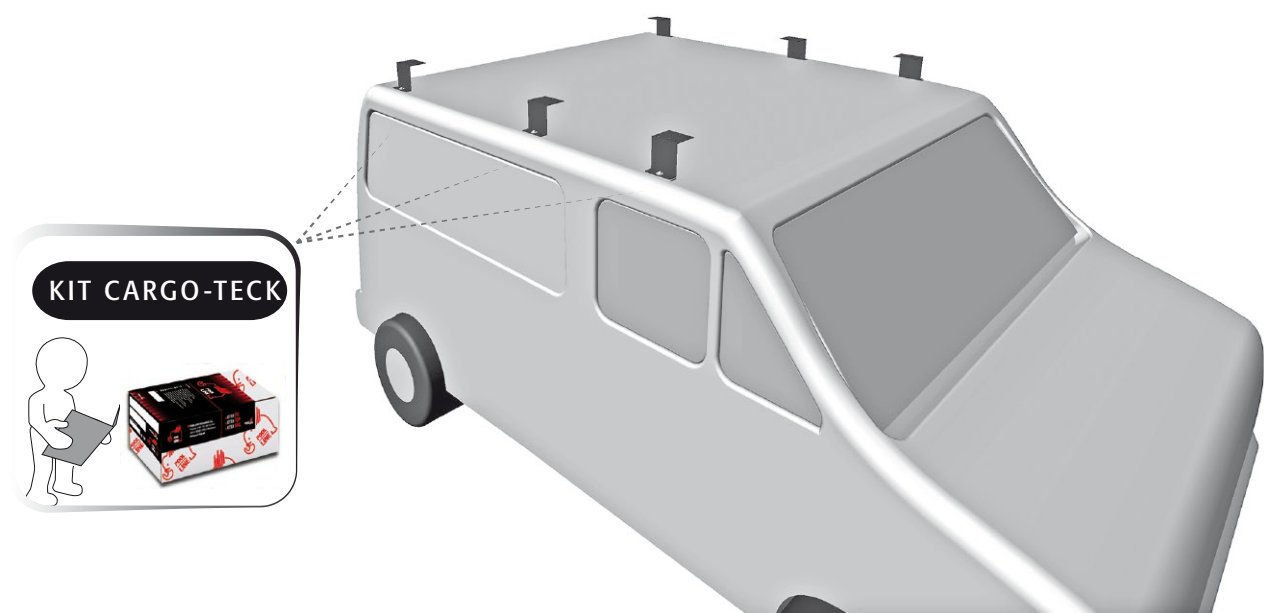


2


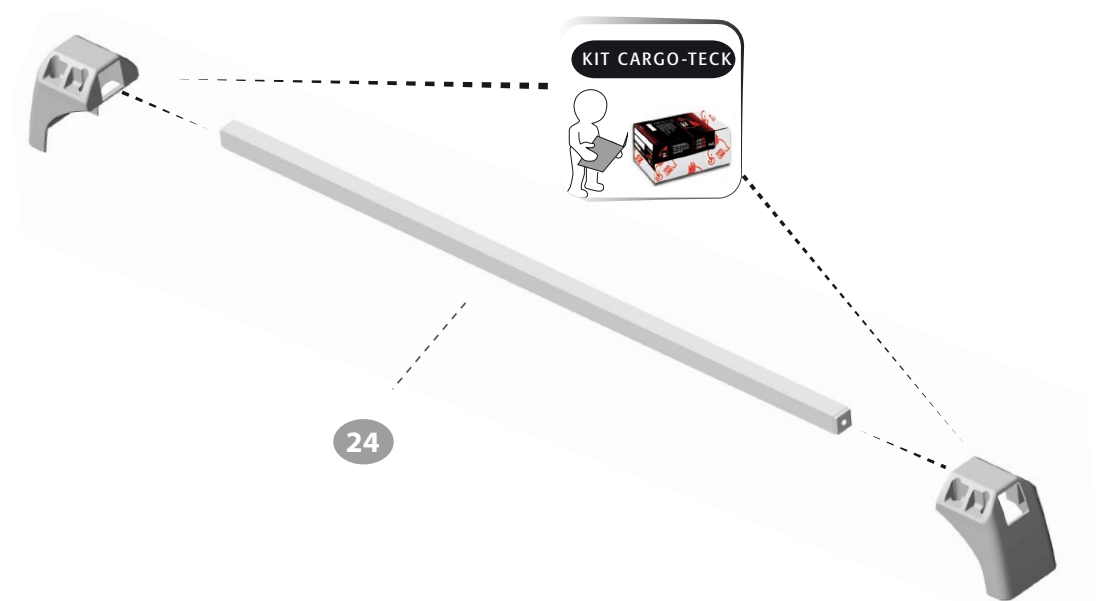


3

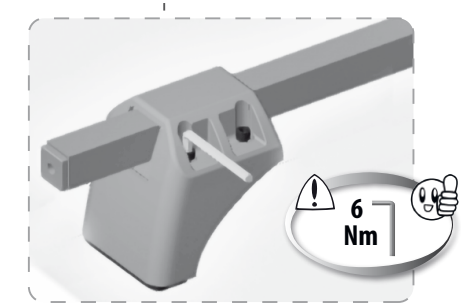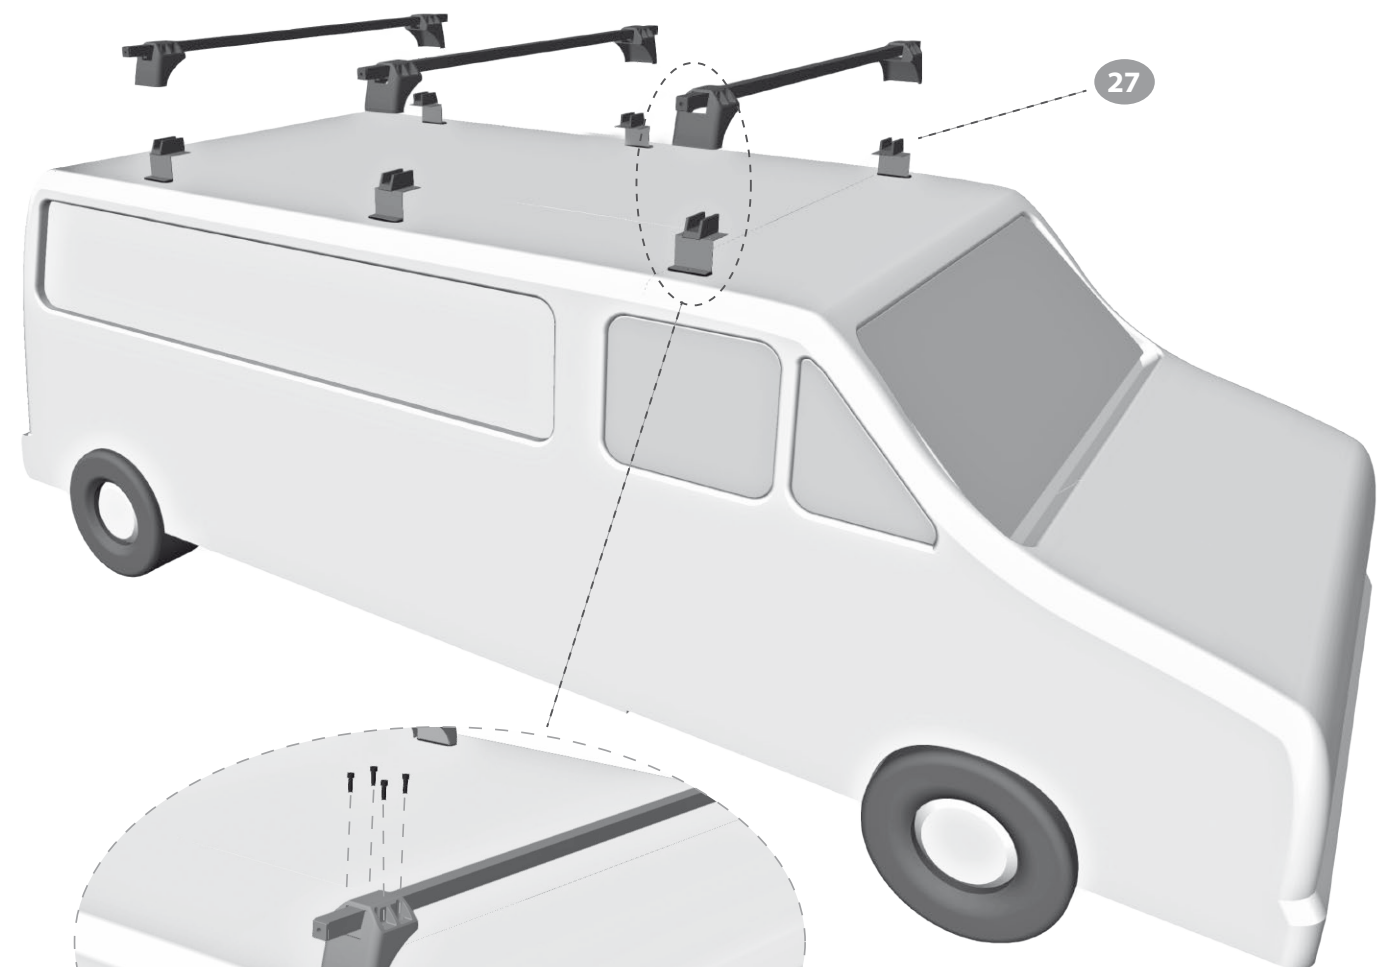


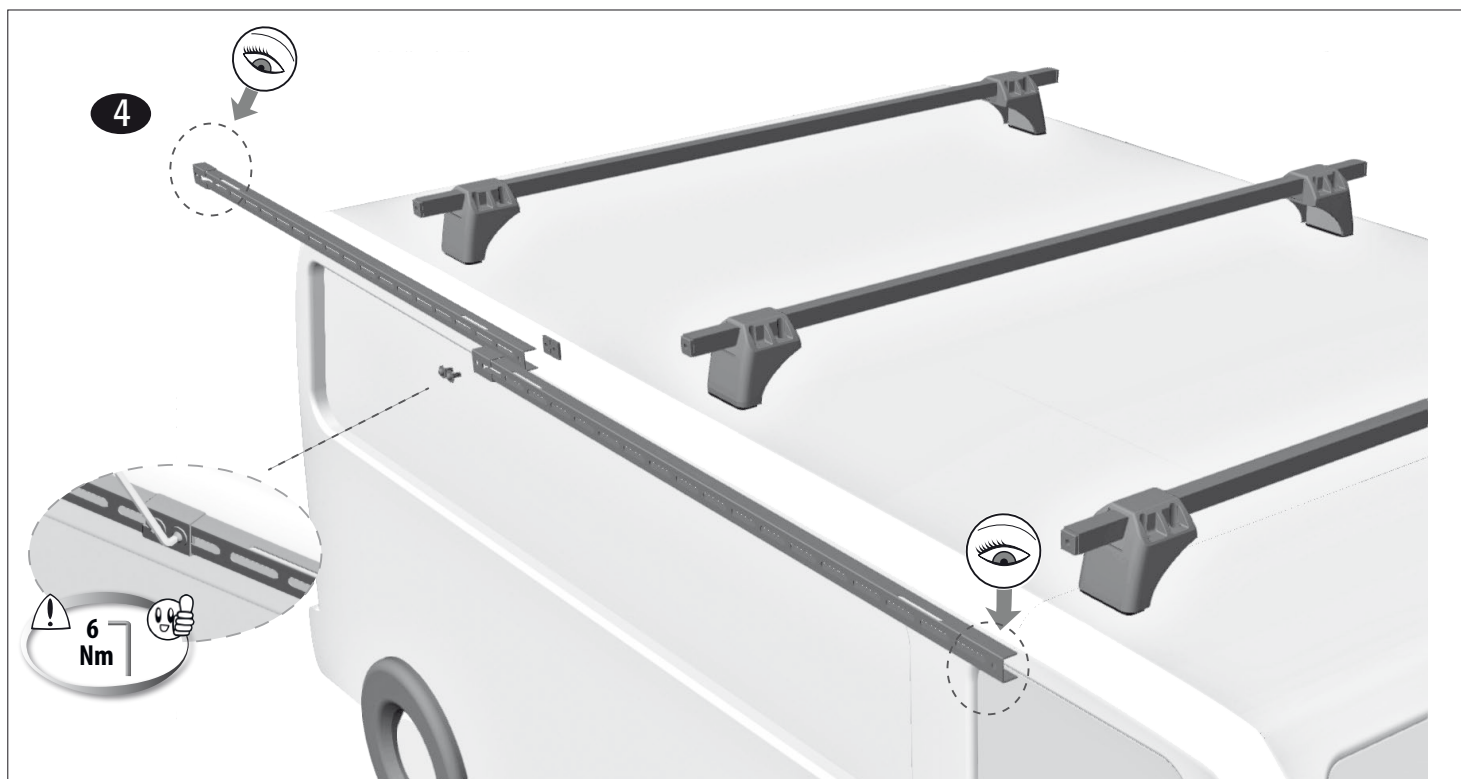


5

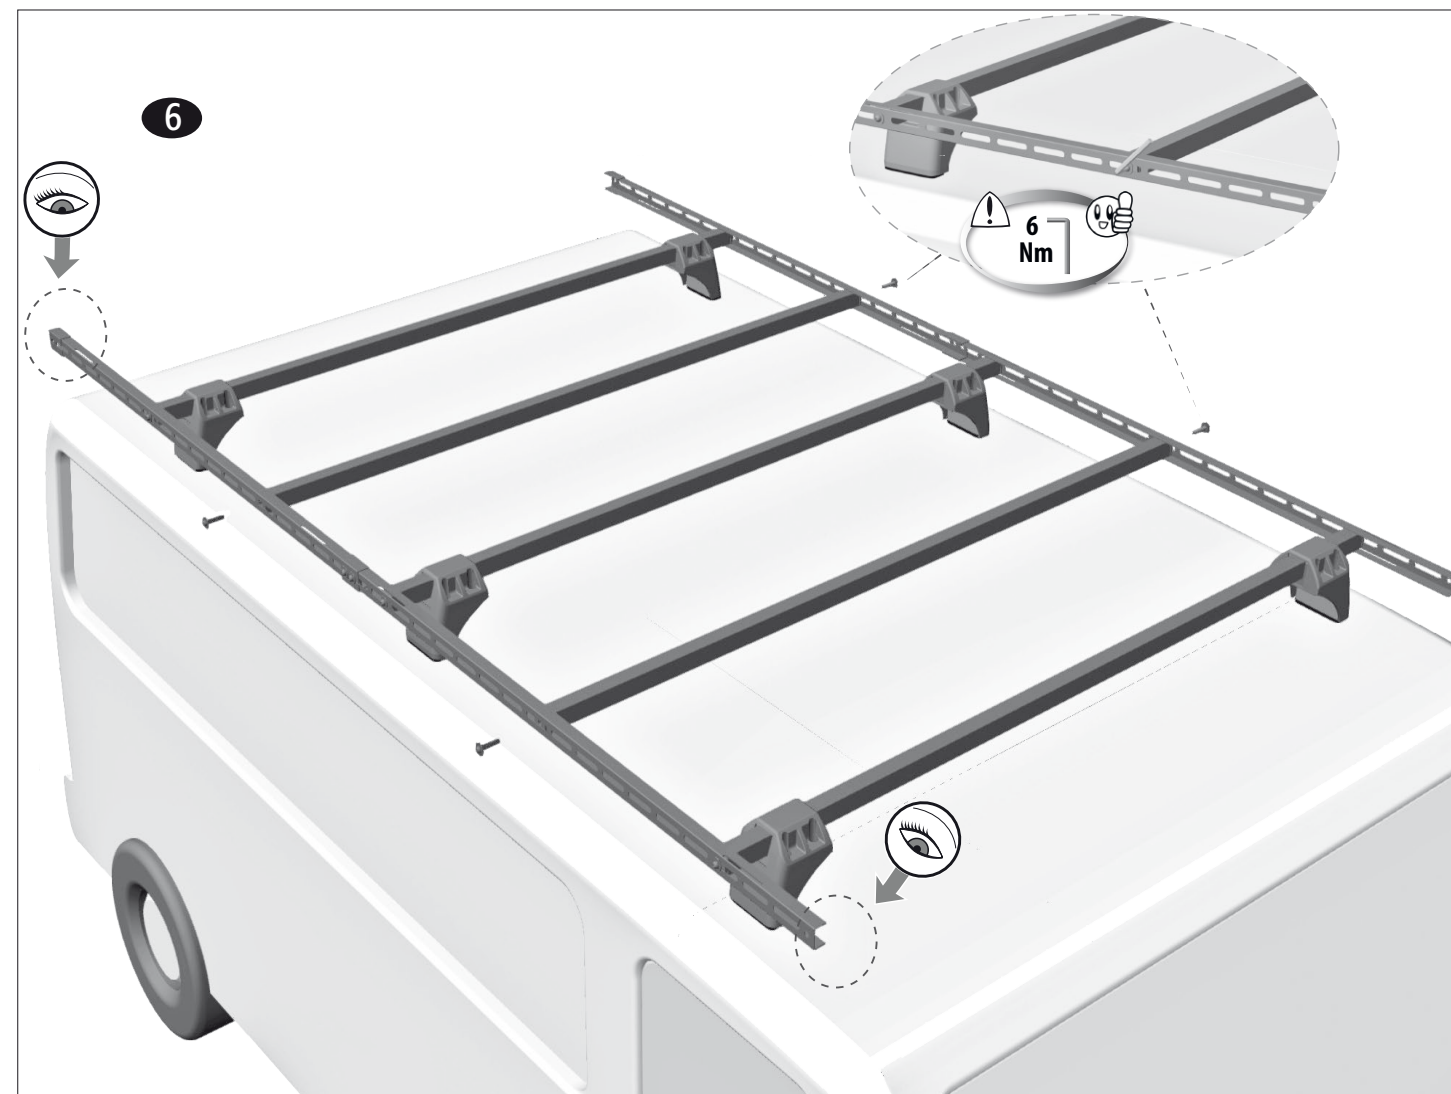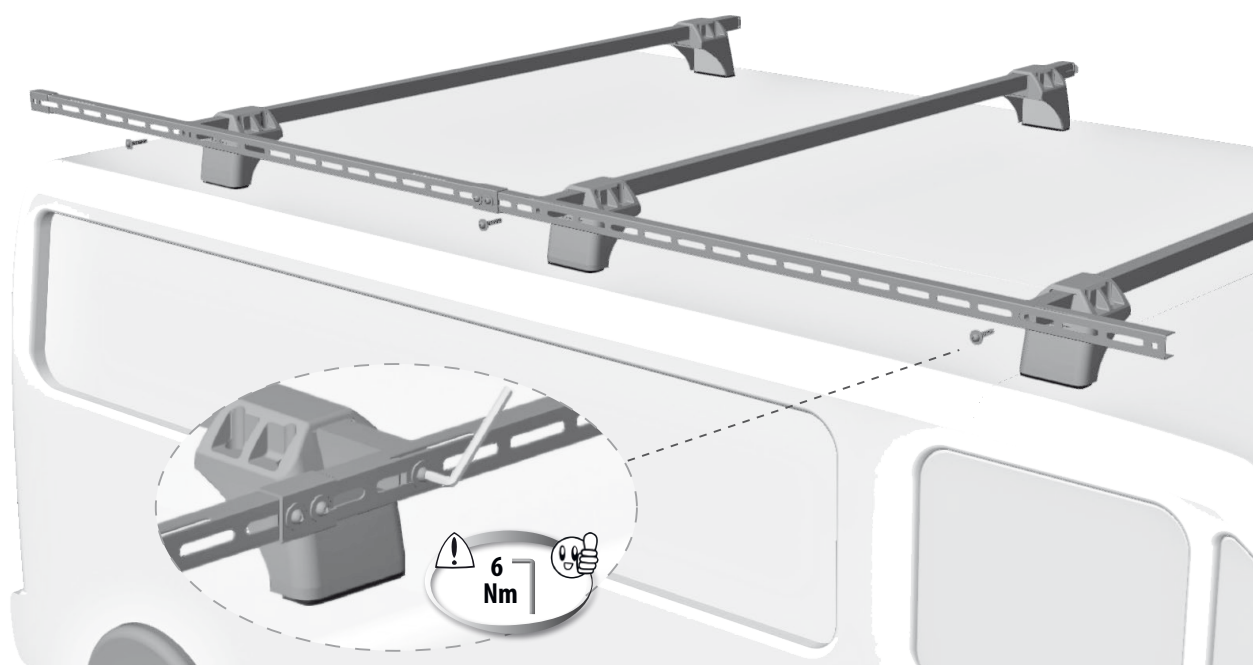



7




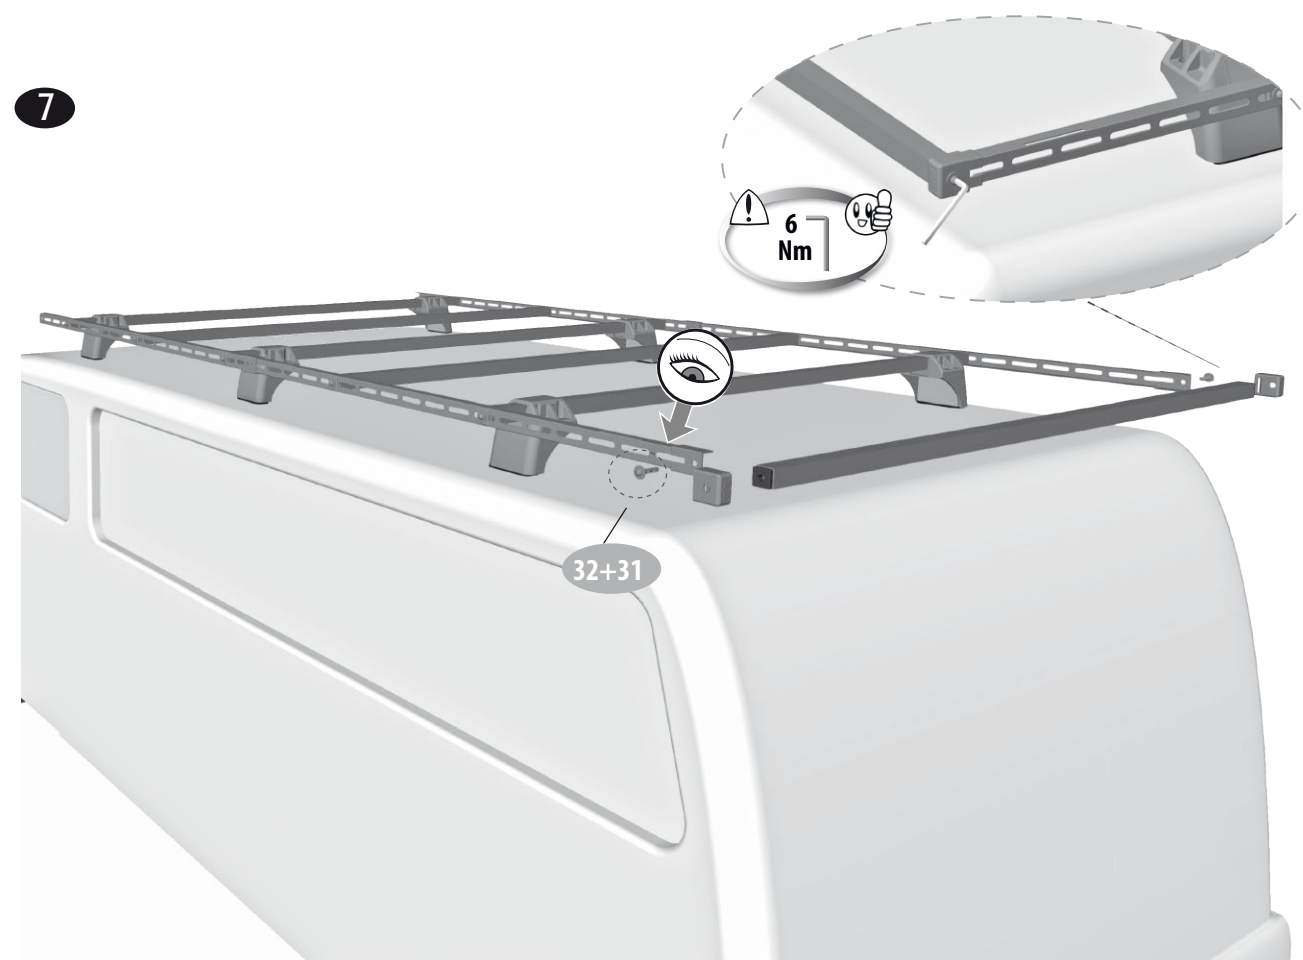




8

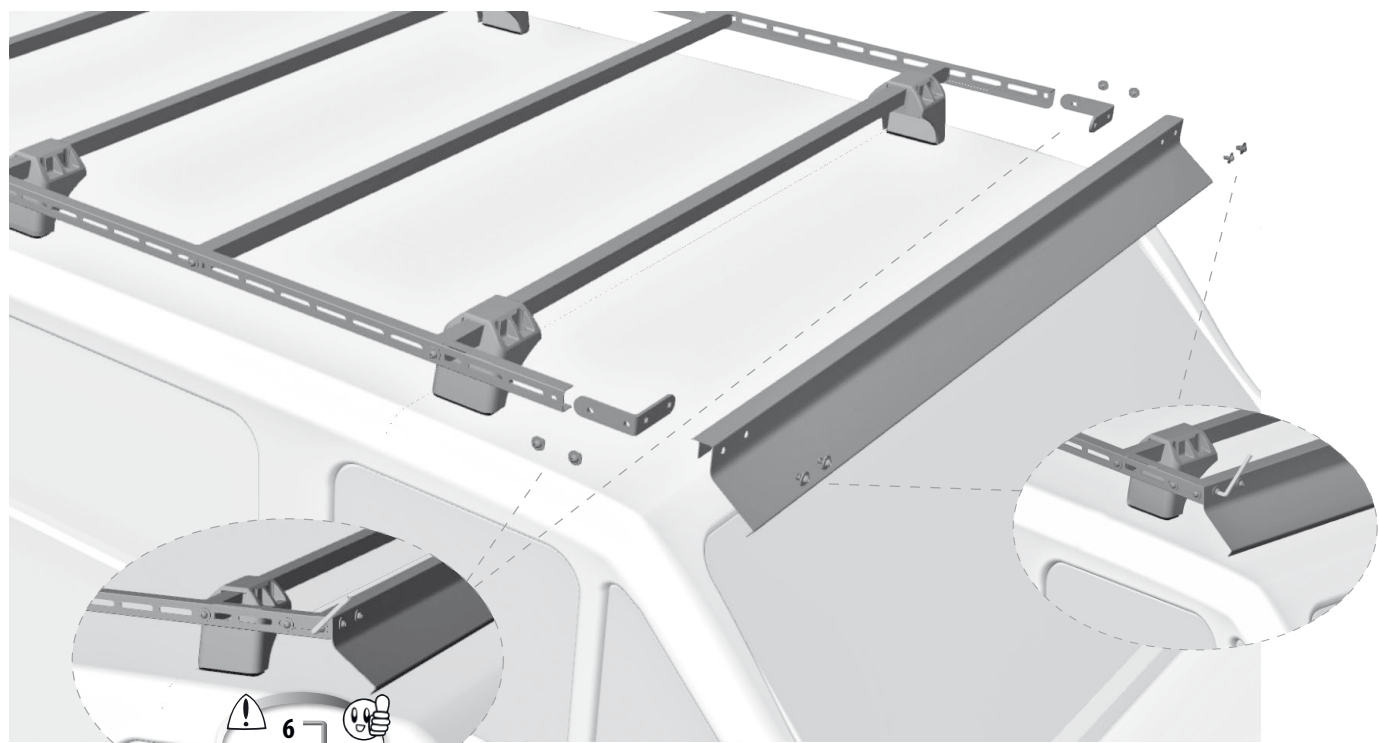


9

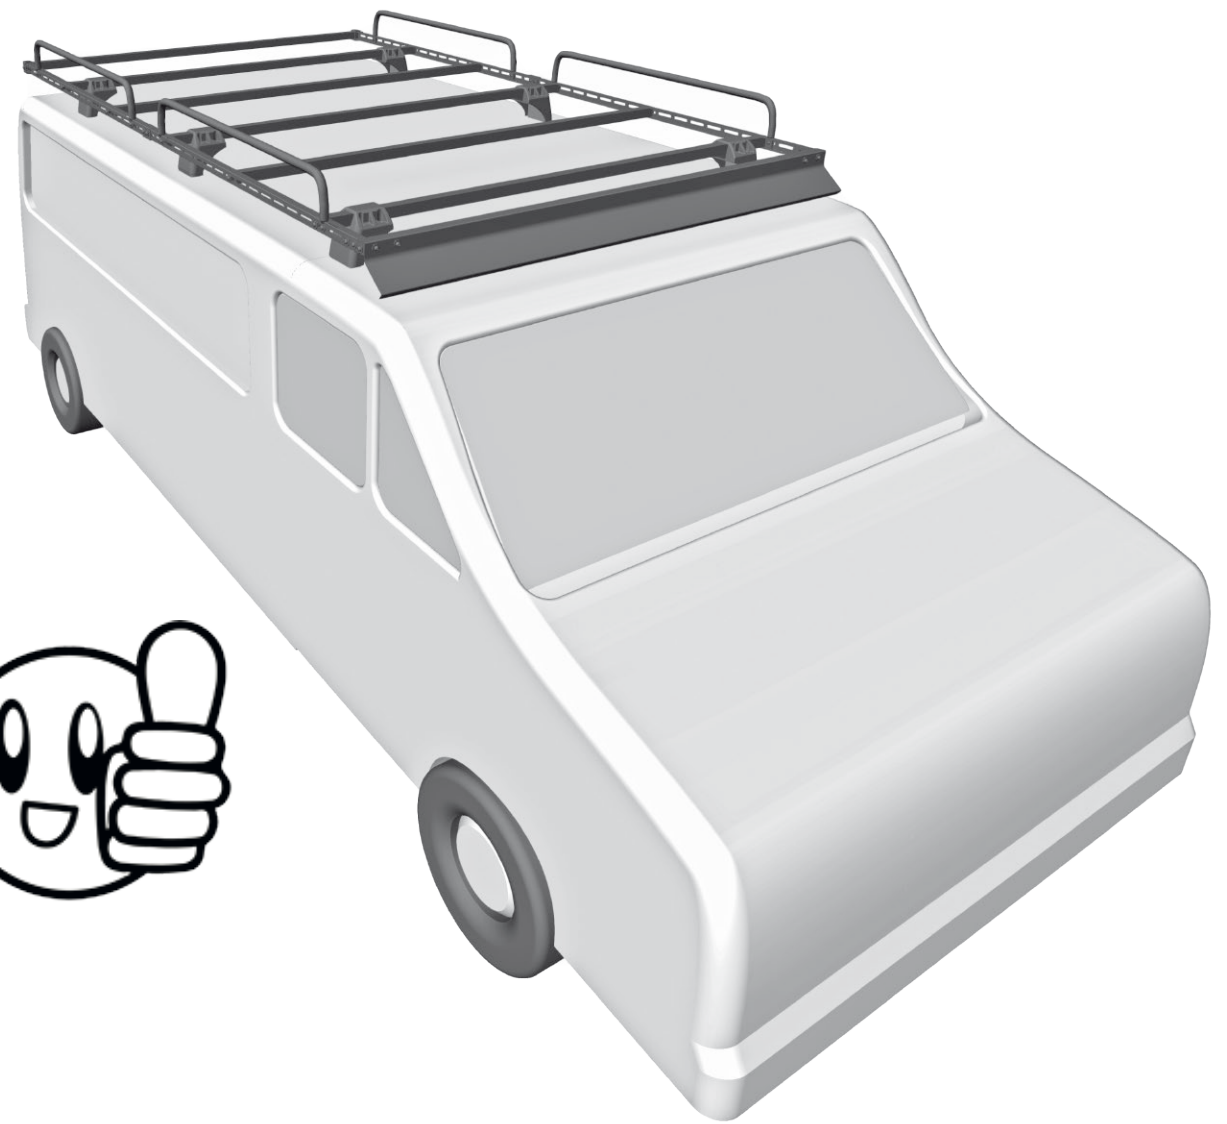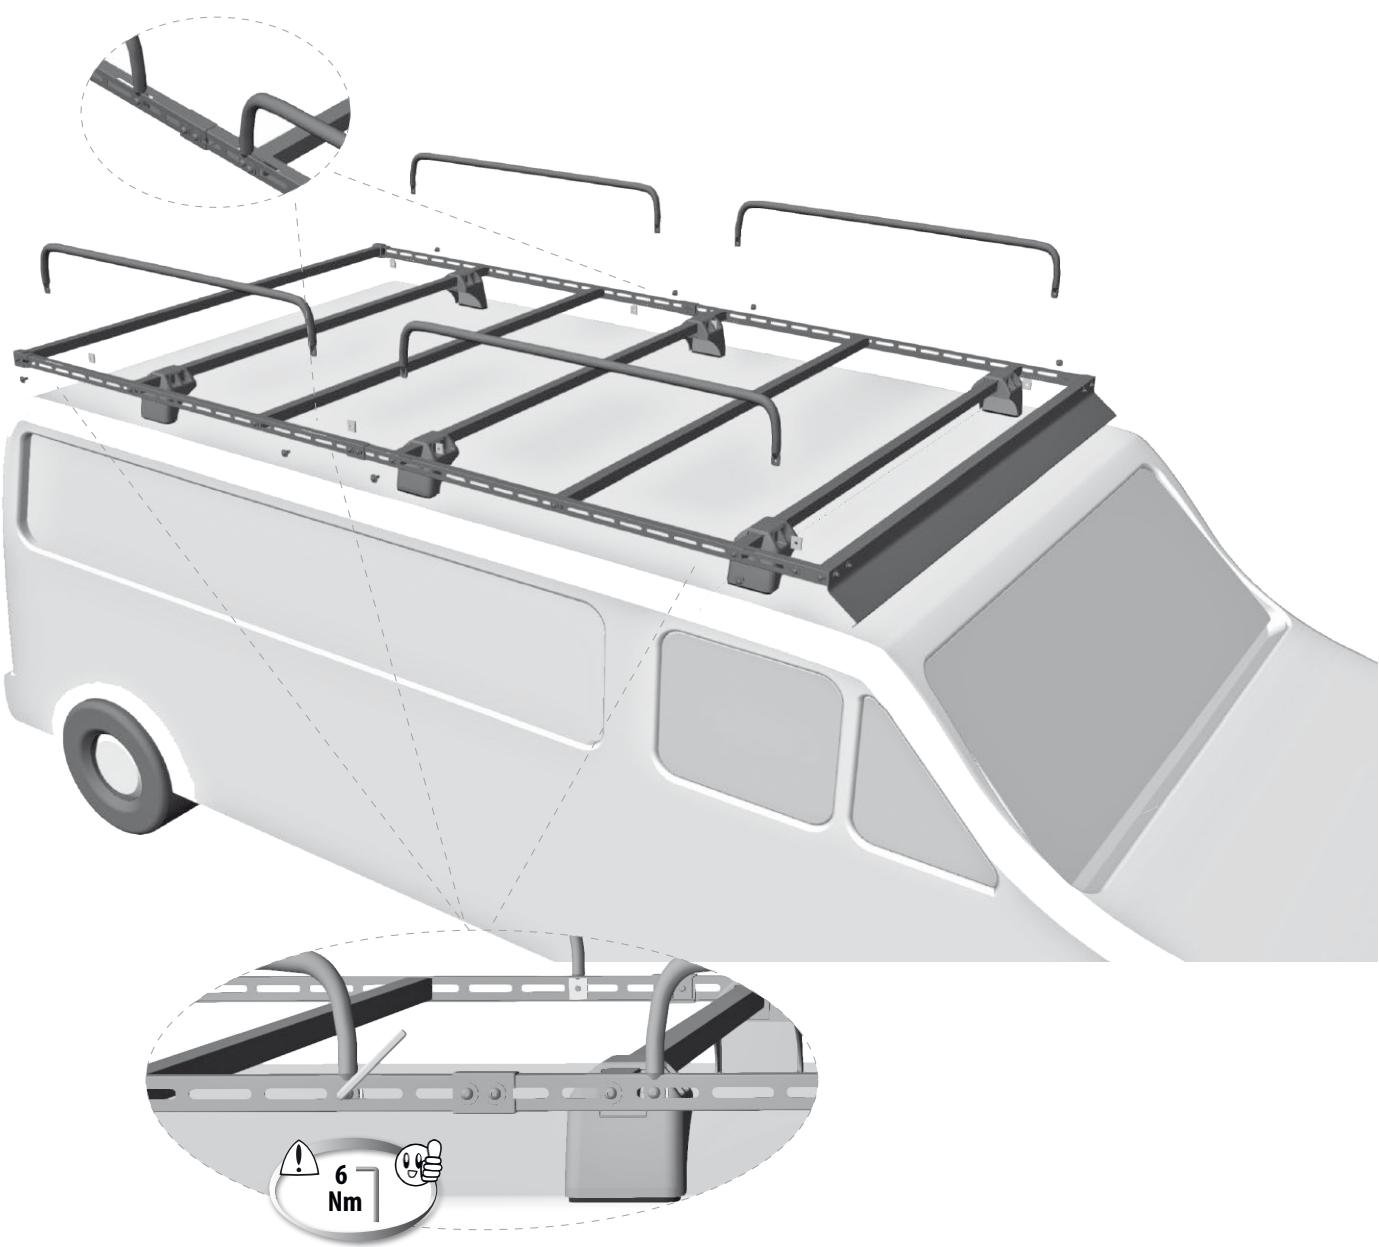
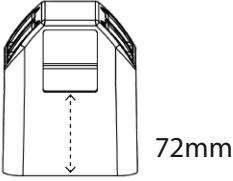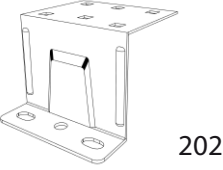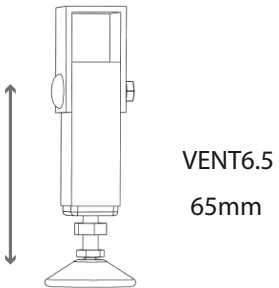
| N |                                                                                                    | Q |
|---|----------------------------------------------------------------------------------------------------|---|
| 1 |  72mm             | 4 |
| 2 |  202              | 4 |
| 3 |  G3               | 4 |
| 4 |                   | 1 |
| 5 |  VENT6.5<br>65mm | 2 |
| 6 |                 | 1 |


| N  | BO0060                                                                                              | Q  |
|----|-----------------------------------------------------------------------------------------------------|----|
| 8  |  DIN912<br>M6x20 | 16 |
| 9  |  DIN125          | 16 |
| N  | BO0004x4                                                                                            | Q  |
| 10 |  DIN 912<br>M6X25 | 8  |
| 11 |  DIN 9021 Ø6     | 8  |

|    |                          |                  |
|----|--------------------------|------------------|
| E  | Instrucciones de montaje | Kit de fijación  |
| C  | Instruccions de muntatge | Kit de fixació   |
| GB | Assembly instrucctions   | Fixation Kit     |
| F  | Instruction de montage   | Kit fixation     |
| D  | Montageanleitung         | Stützfuß-Kit     |
| PT | Instruções de montagem   | Kit fixação      |
| I  | Istruzioni di montaggio  | Kit di fissaggio |
| PL | Instrukcja montażu       | Element mocujący |
| CZ | Montážní návod           | Fixační kit      |
| HU | Szerelési Utasítás       | Rögzítő készlet  |
| RO | Instrucțiuni de montaj   | Kit de fixare    |
| HR | Detaljne upu e           | Kit za montažu   |
| TU | Öncelikle montaj         | Montaj kiti      |

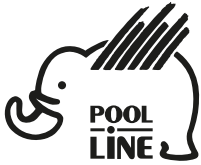



POOL-LINE ACCESORIOS, S.L.  
C. Esqueis, 19. P. I. Can Barri  
08415- Bigues i Riells. Barcelona (España)  
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1043

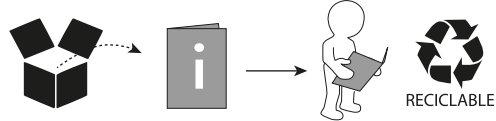

**121990**


Rv: 03/2024

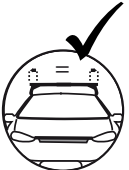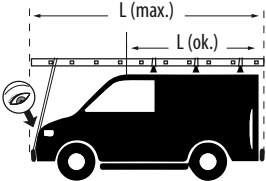


|                    |        |        | P1  | P2  | P3      | P4      | P5  | P6  |
|--------------------|--------|--------|-----|-----|---------|---------|-----|-----|
| <b>FORD</b>        |        |        |     |     |         |         |     |     |
| Transit Courier II | 2023 - | BO0004 | 202 | 202 | VENT6.5 | VENT6.5 | 202 | 202 |



**A**

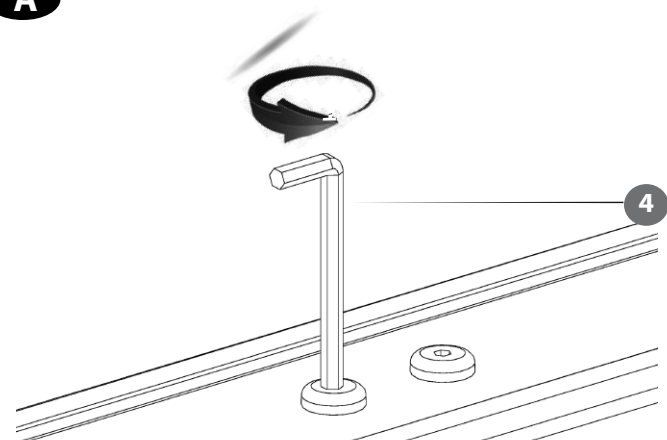

**B**

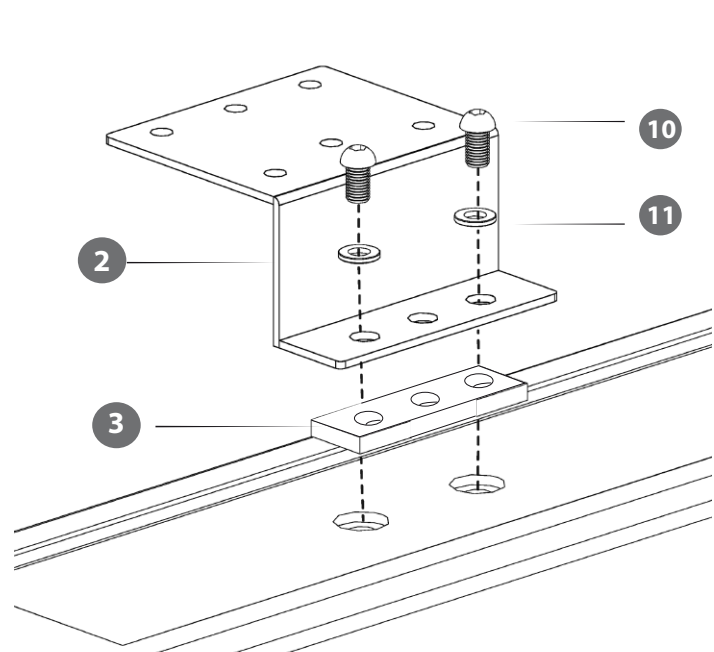

**C**

