




- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

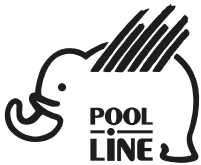

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net



200  KG.
MAX.



Nº HOMOLOGACIÓN:  26R-03.1042




RECICLABLE

123814

Rv: 05/2024

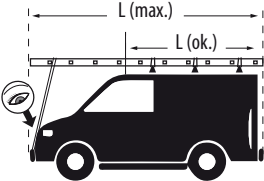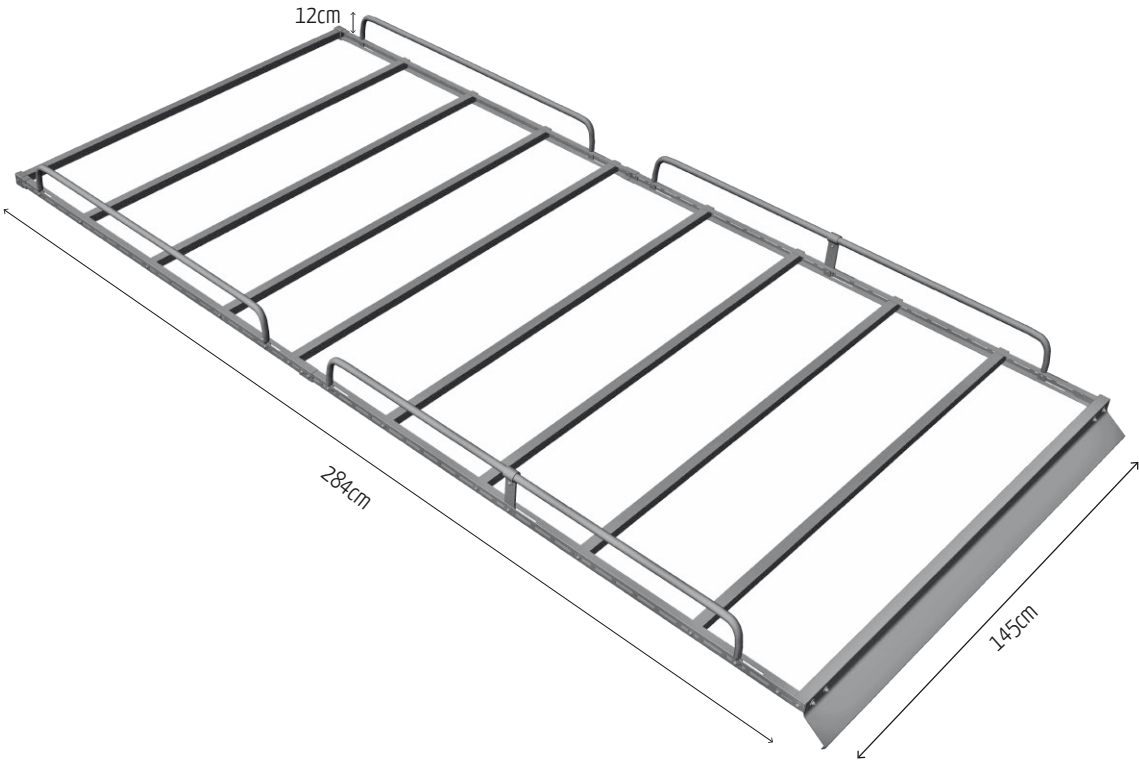


N		Q
1	 S-1450	1
2	 L-1540	2
3	 L-1300	2
4	 T-1435	9
5	 B-1262	2
6	 B-1022	2
7	 CHA-M8	18
8	 L-Bracket	2
9	 U-Bracket	2
10	 L-Bracket	8
12	 L-Bracket	1
13	 CHA-M8	14
14	 ISO 7380 M8x30	18
15	 ISO 7380 M8x16	22
16	 DIN 125 Ø 8	38
17	 L-Bracket	4
19	 DIN 603 M6x12	2
20	 DIN 6923 M6	2

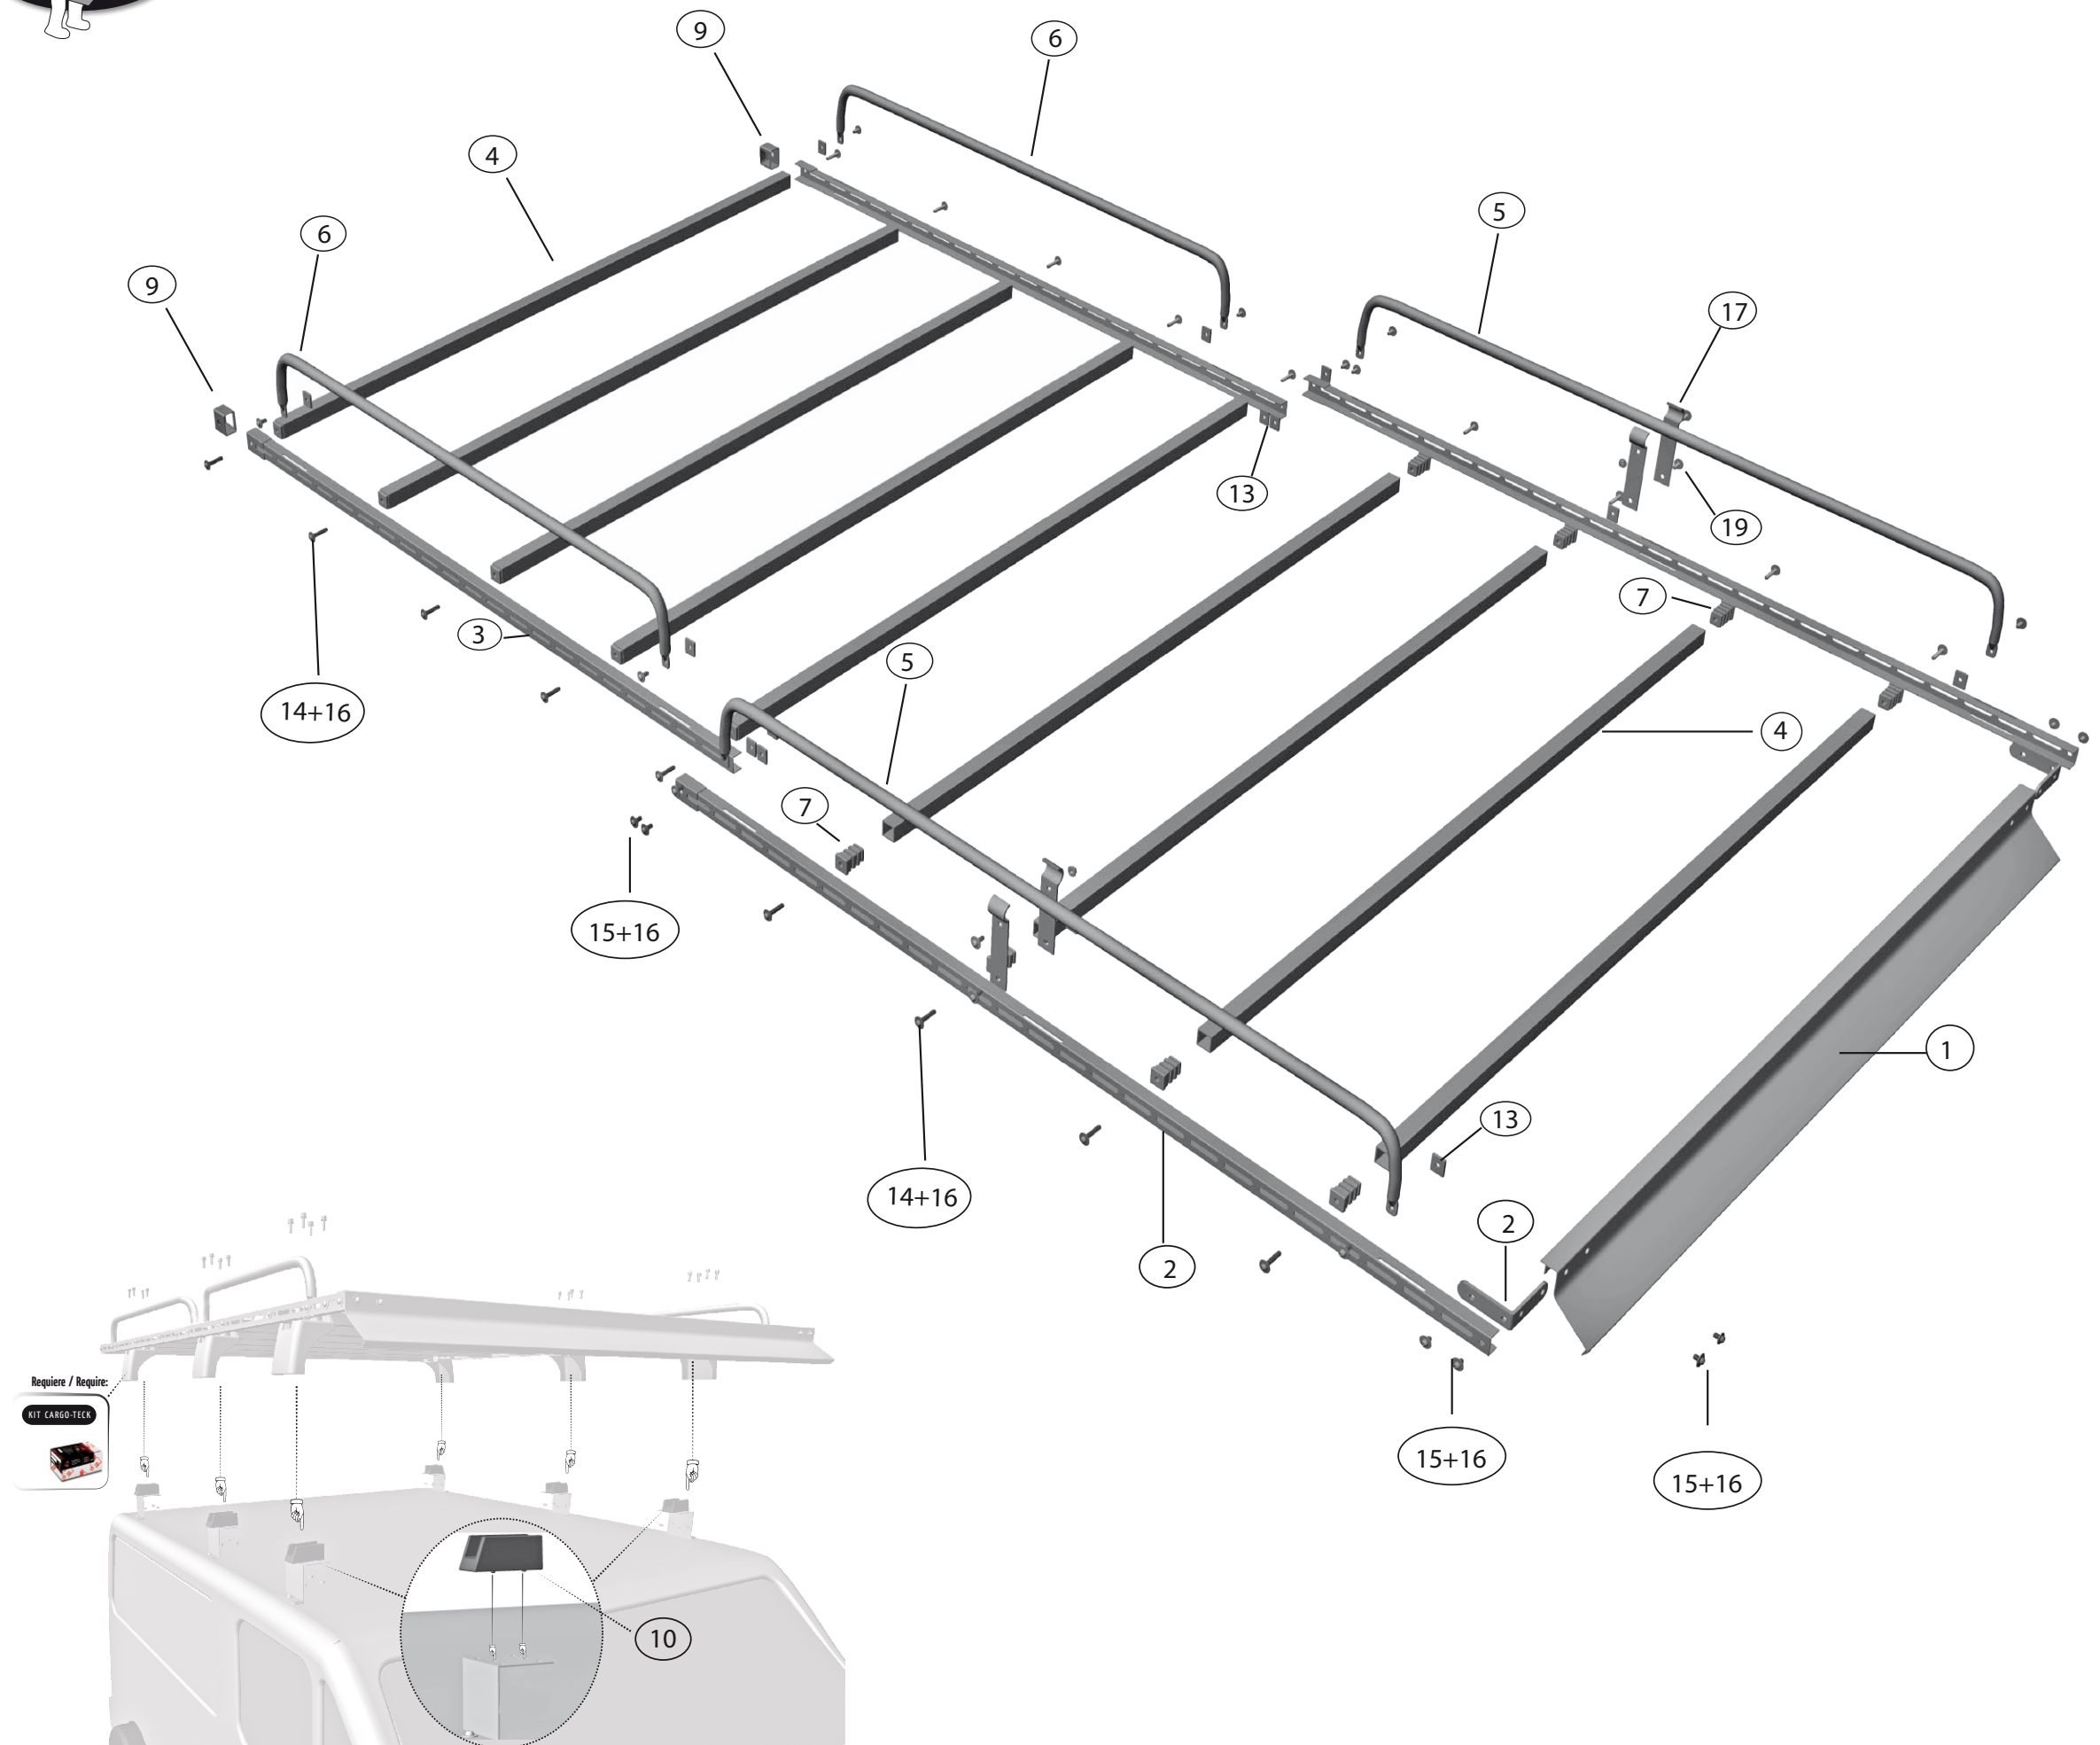




• FORD CUSTOM L1H1 (2013->)

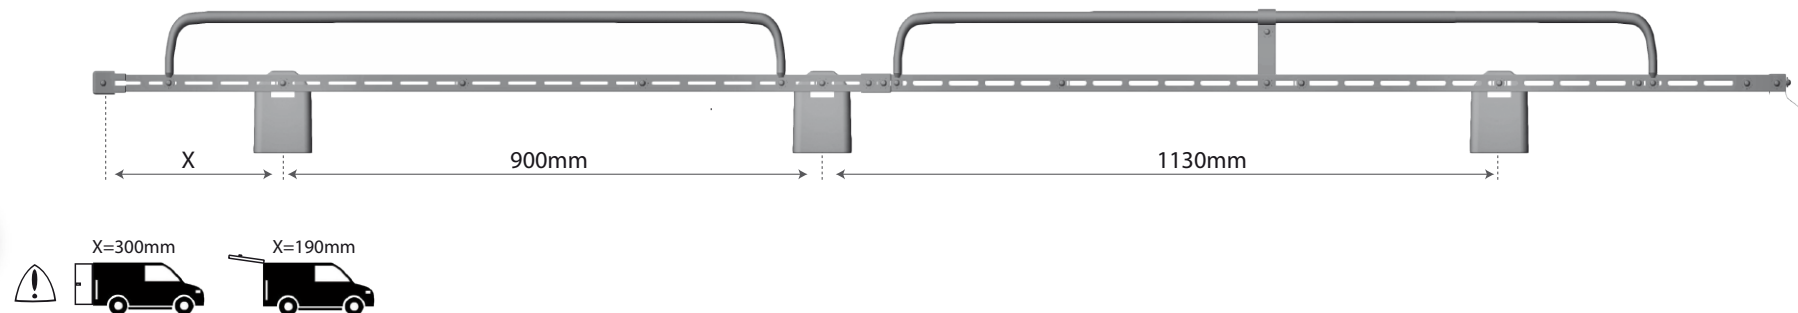

• IVECO DAILY L2H2 (2000-2014)




• CITROËN JUMPY III L3 (XL) 2016 ->
• FIAT SCUDO L3 (XL) 2022->
• OPEL VIVARO C L3 (XL) 2019->
• PEUGEOT EXPERT III L3 (XL) 2016 ->
• TOYOTA PROACE II (XL) 2016 ->

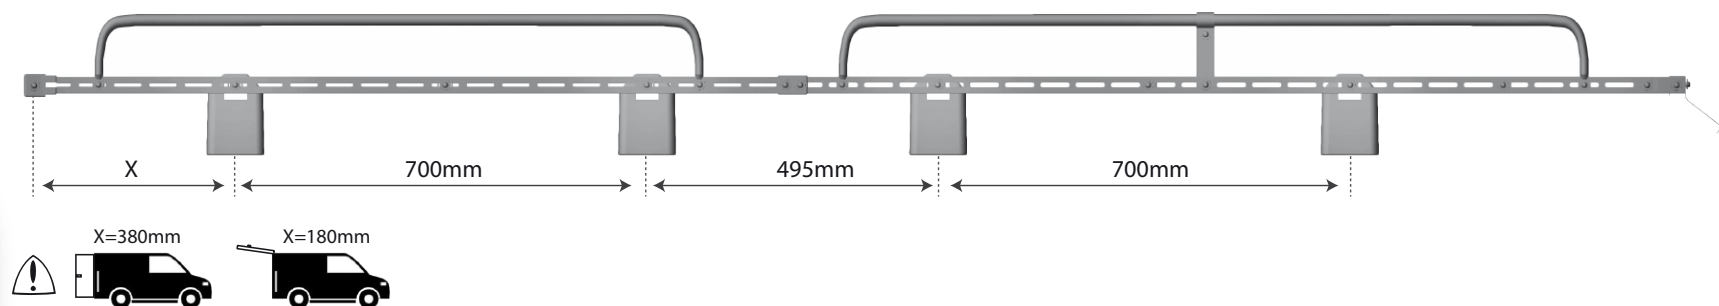


→
Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone




• MERCEDES VITO W639 L1H1 (2003-2014)
• MERCEDES VITO W447 L1H1 (2014->)

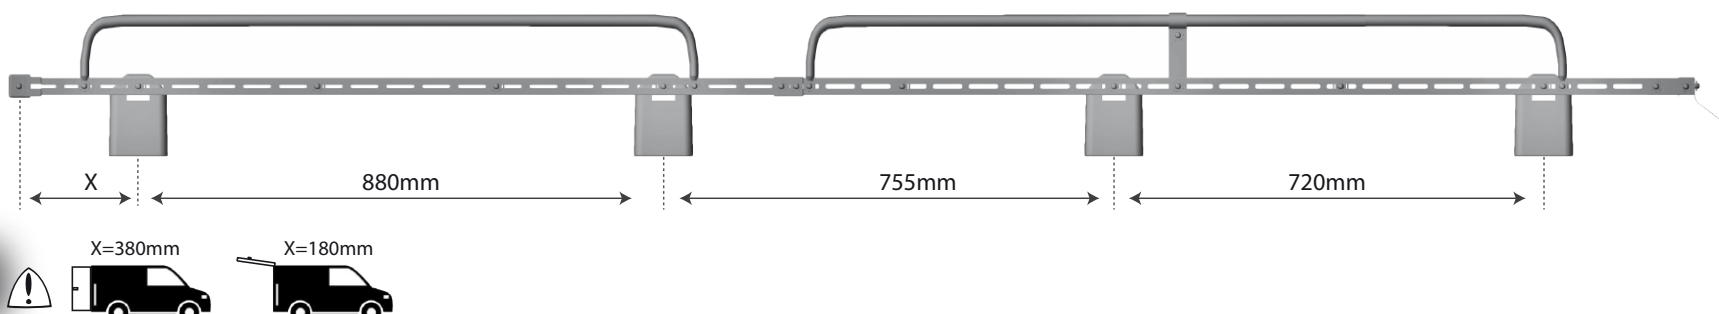


• VOLKSWAGEN T5 L1H1 (2003 - 2014)
• VOLKSWAGEN T6 L1H1 (2015->)

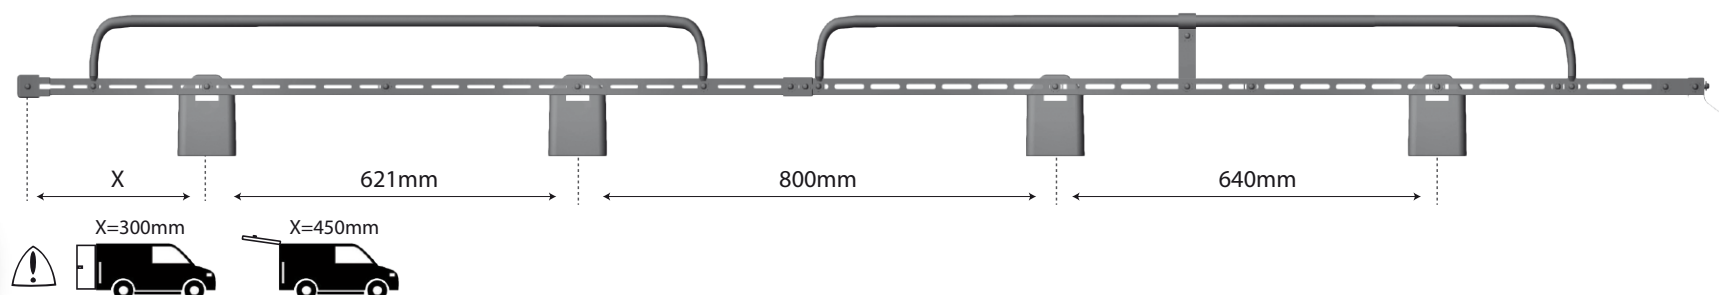


1

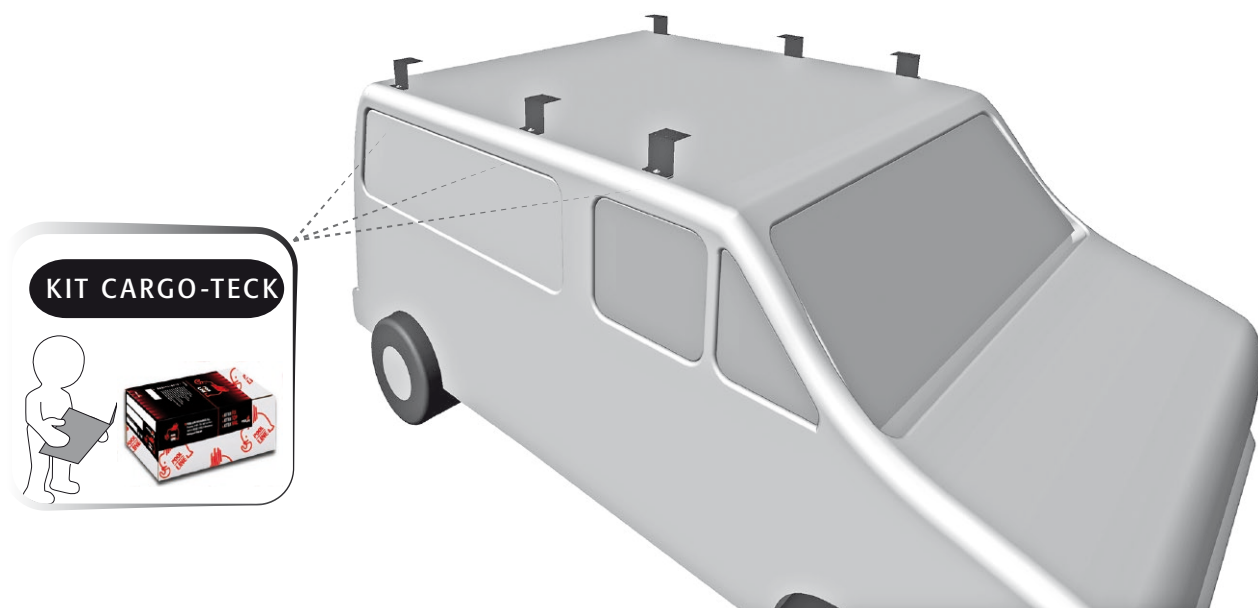


2

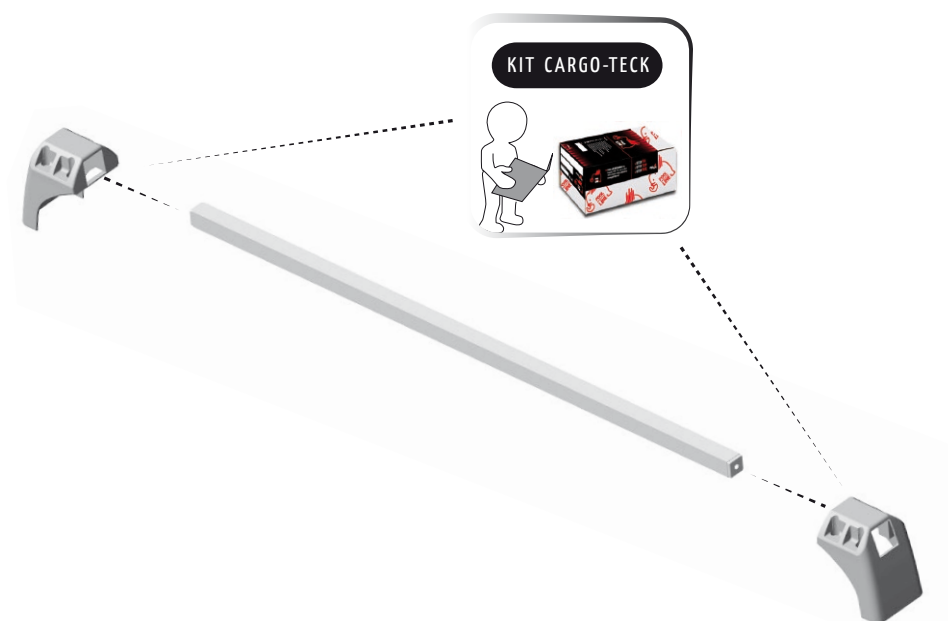


3

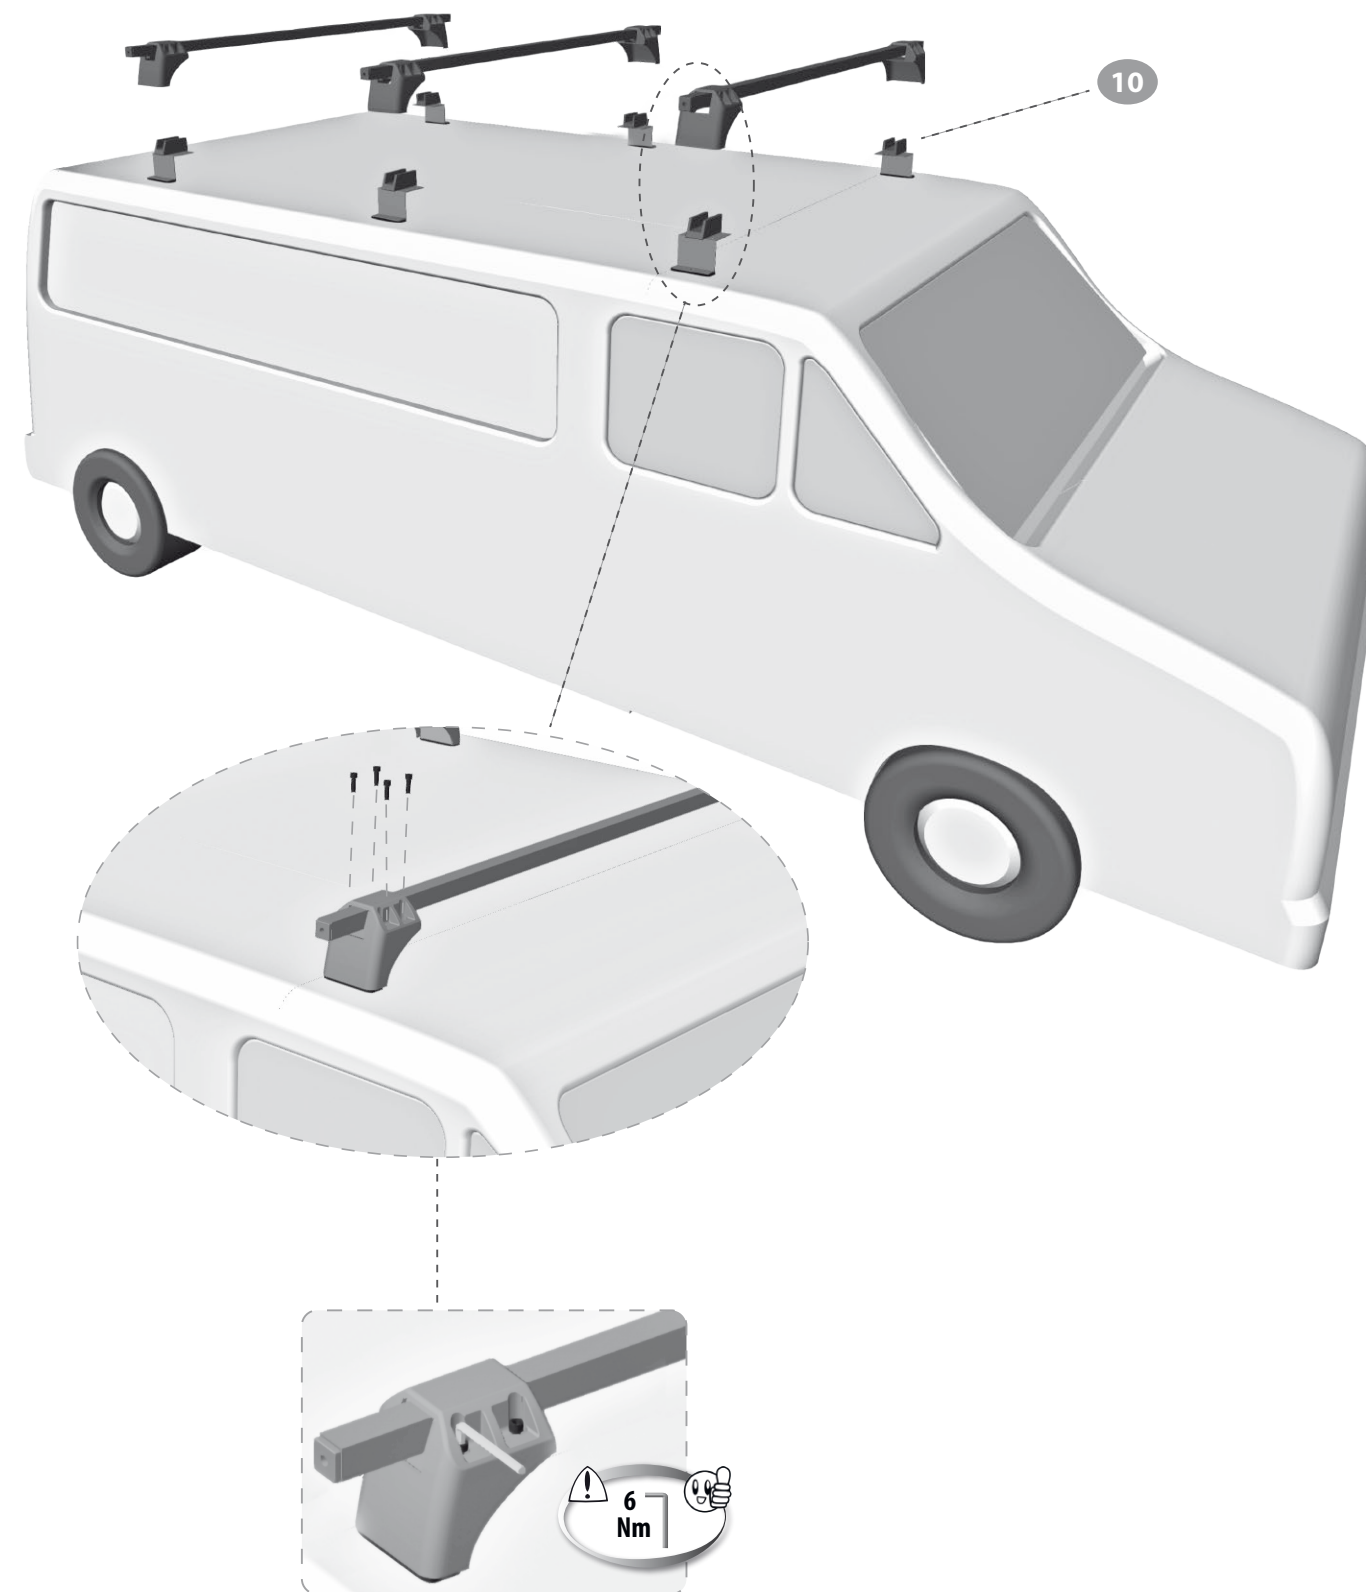


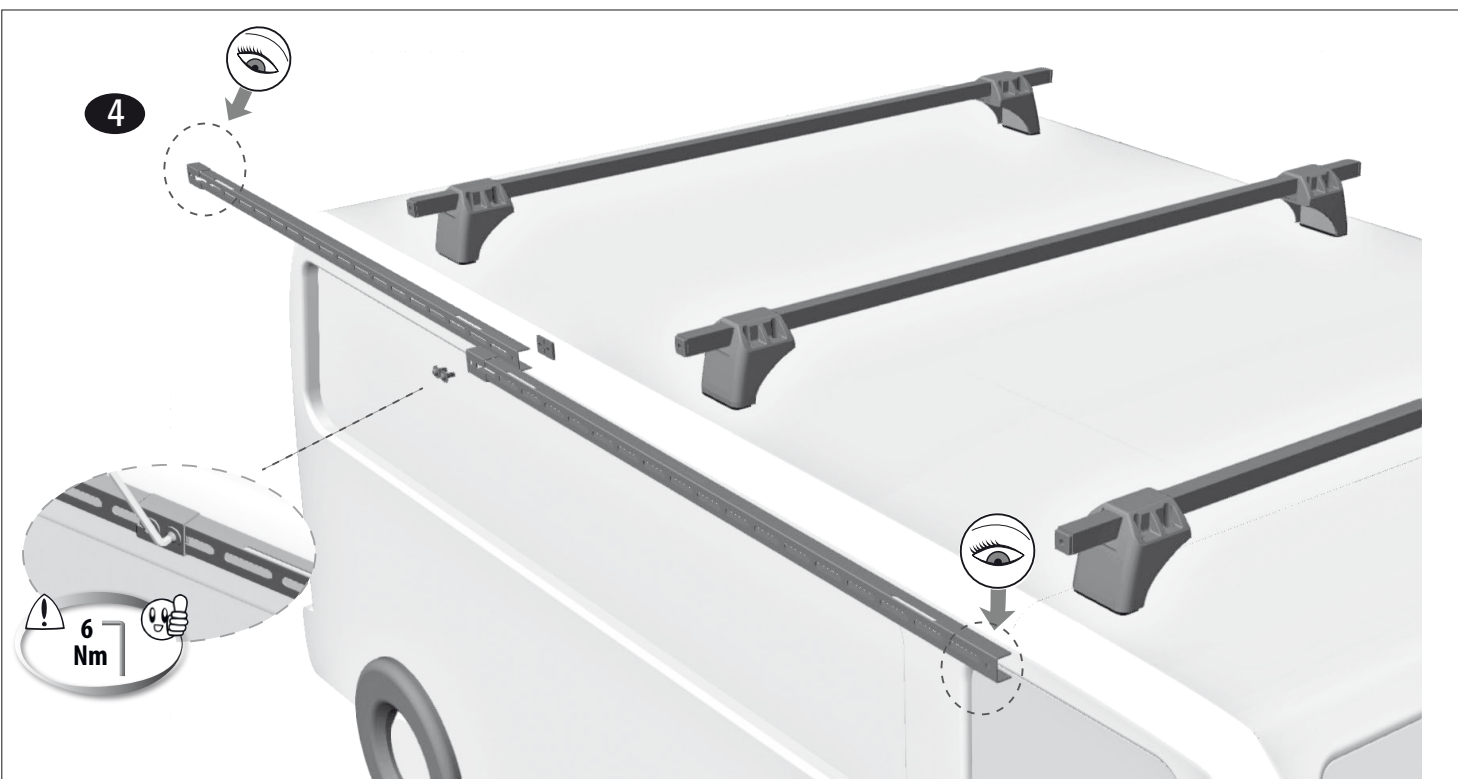


5

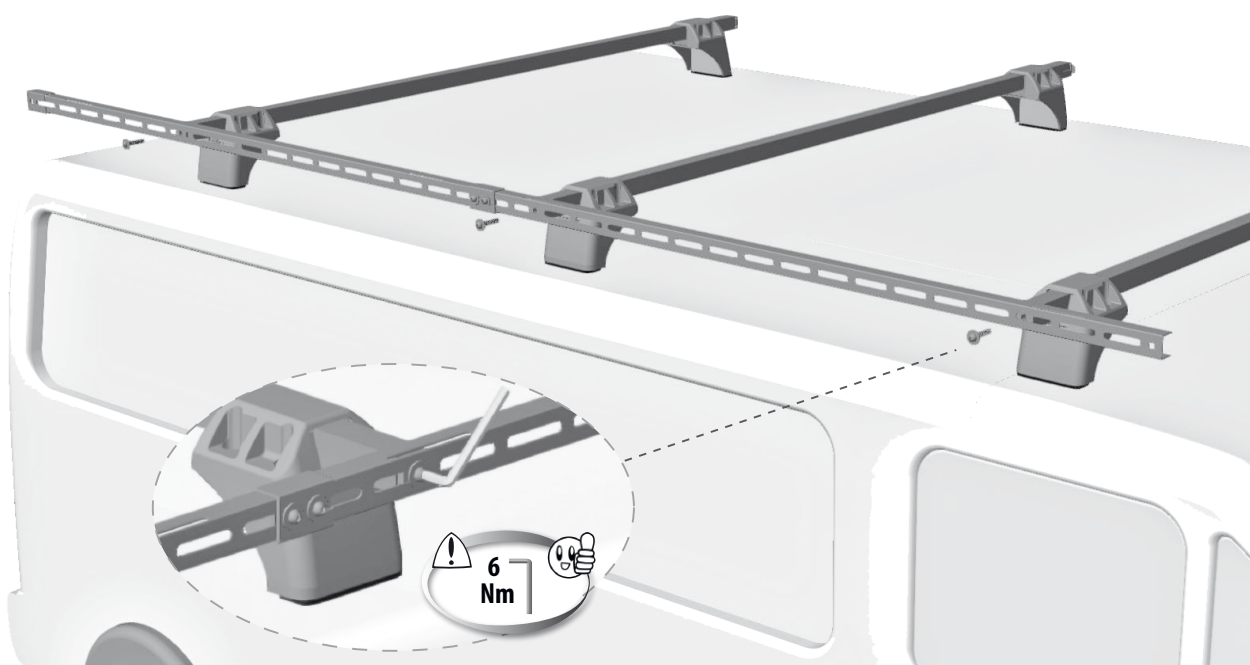


6

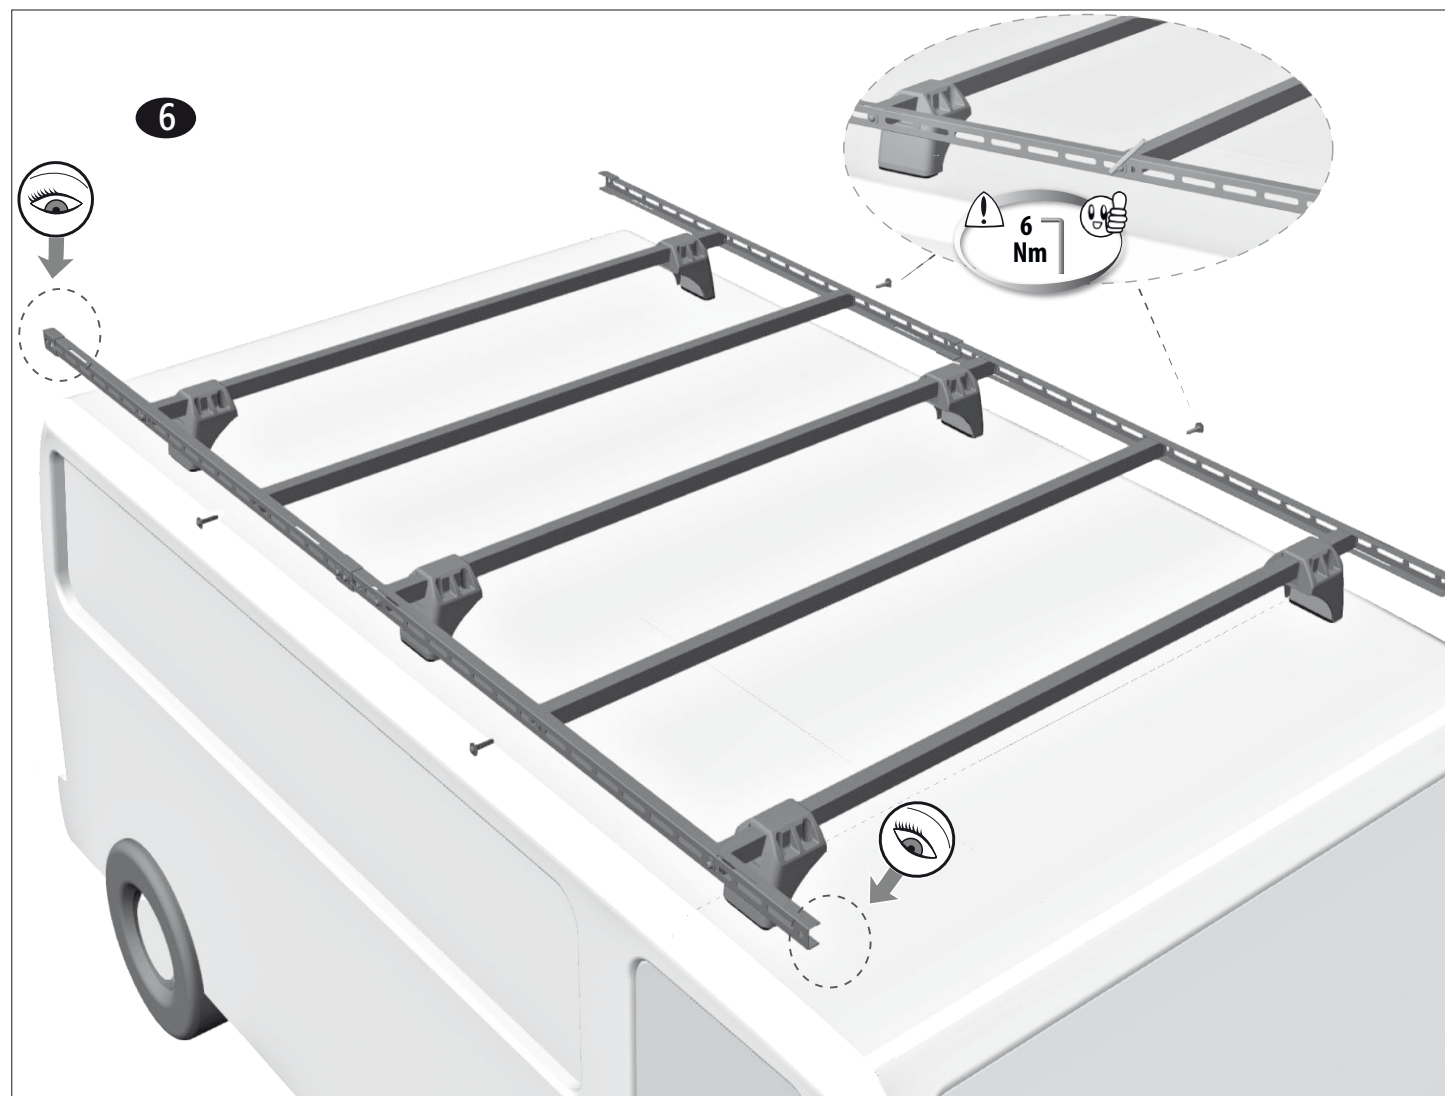



7



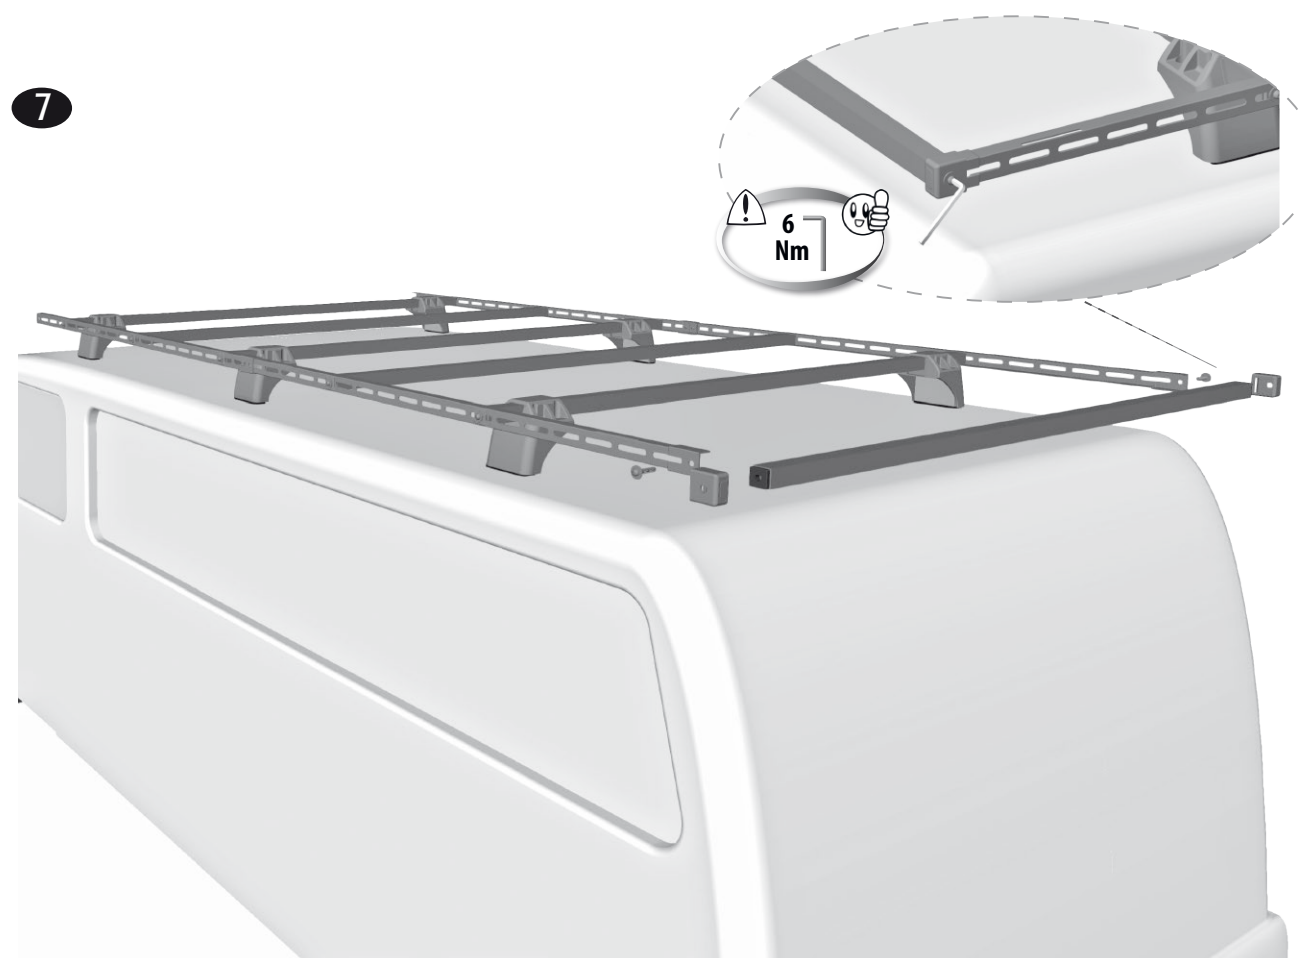



8


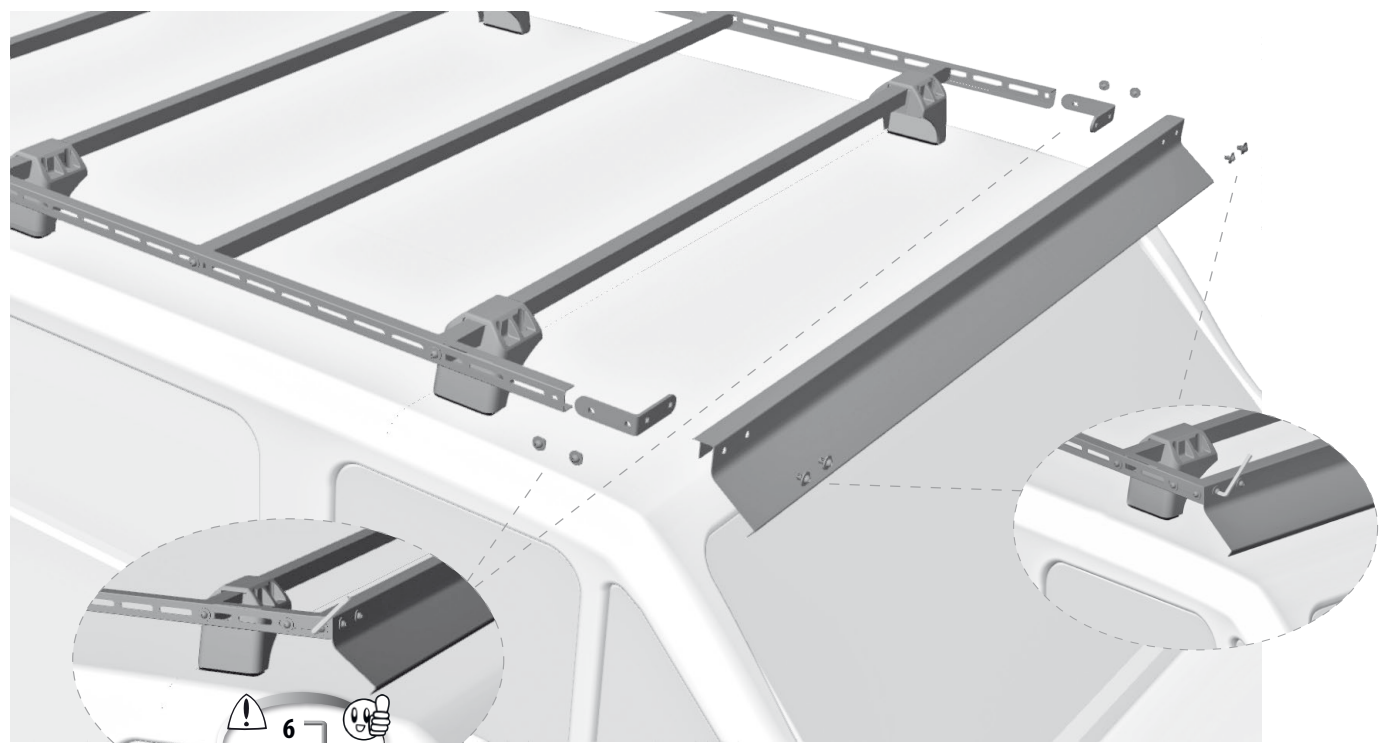


9

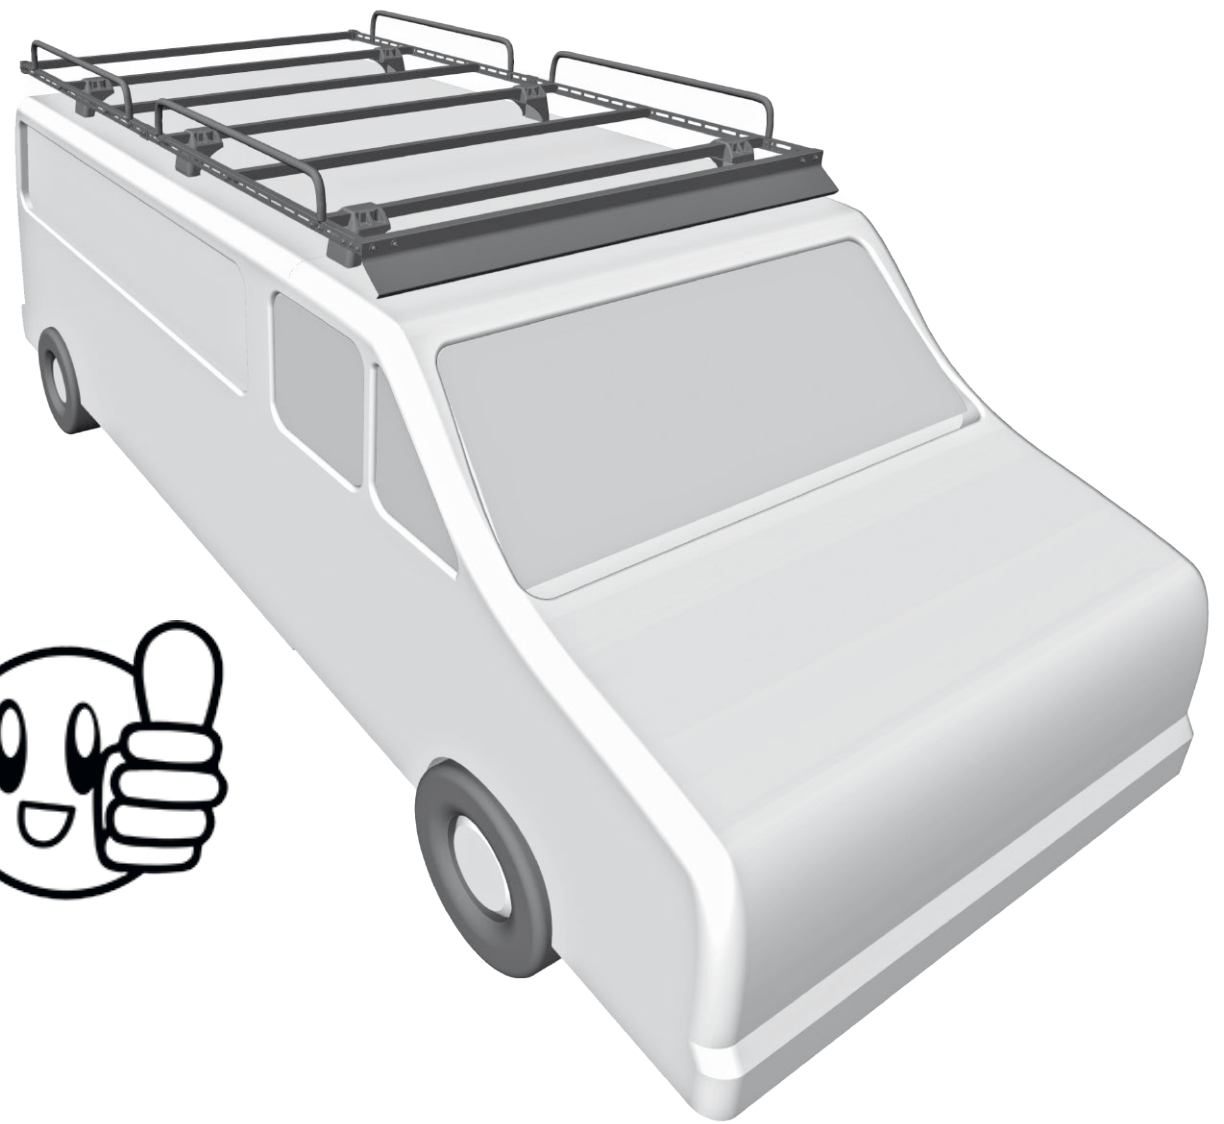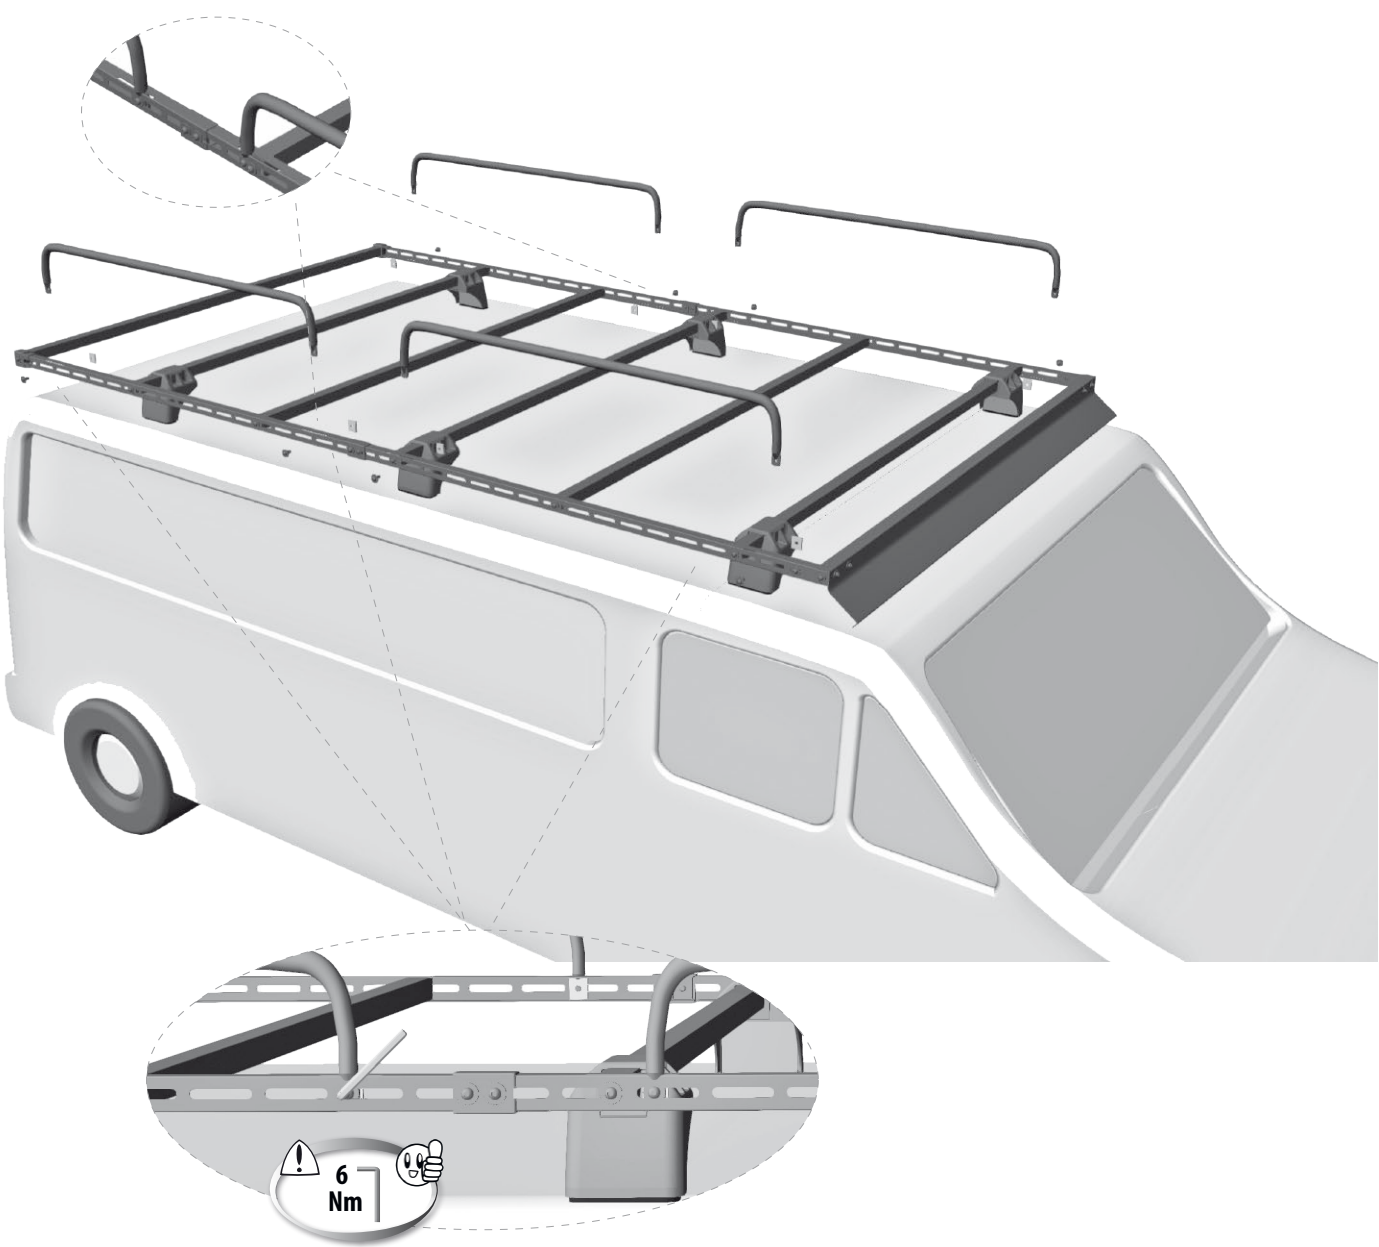


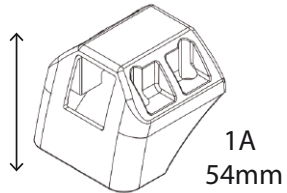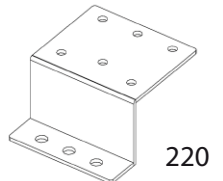N		Q
1	 1A 54mm	6
2	 220	6
3	 G2	12
4		1

N	BO0061	Q
8	 DIN912 M6x20	24
9	 DIN125	24


N	BO0008x6	Q
10	 ISO 7380 M8X16	12
11	 DIN 125 Ø8	12

E	Instrucciones de montaje	Kit de fijación
C	Instruccions de muntatge	Kit de fixació
GB	Assembly instrucctions	Fixation Kit
F	Instruction de montage	Kit fixation
D	Montageanleitung	Stützfuß-Kit
PT	Instruções de montagem	Kit fixação
I	Istruzioni di montaggio	Kit di fissaggio
PL	Instrukcja montażu	Element mocujący
CZ	Montážní návod	Fixační kit
HU	Szerelési Utasítás	Rögzítő készlet
RO	Instrucțiuni de montaj	Kit de fixare
HR	Detaljne upute	Kit za montažu
TU	Öncelikle montaj	Montaj kiti





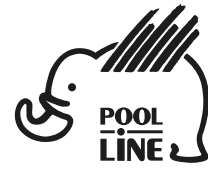


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1043

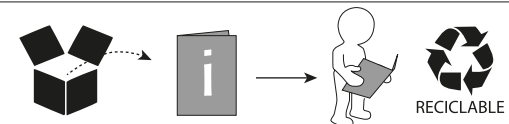


121091
Rv: 04/2024

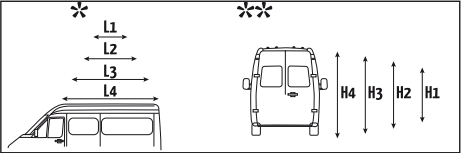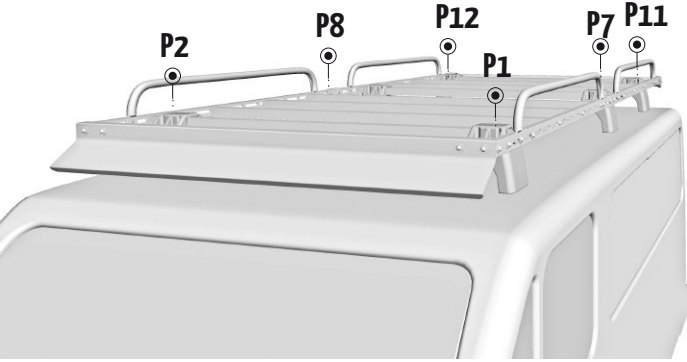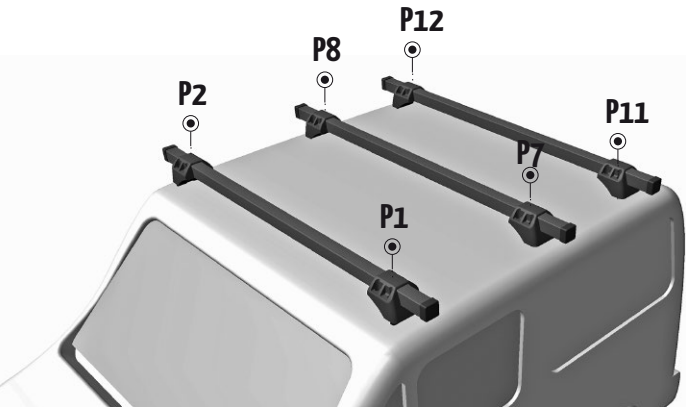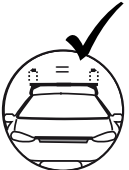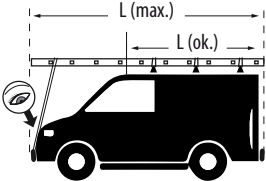


	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
FORD																
Transit Coustom	L1	H1	2013 - 2023	BO0008	220	220			220	220					220	220
Transit Coustom	L2	H1	2013 - 2023	BO0008	220	220			220	220					220	220




A

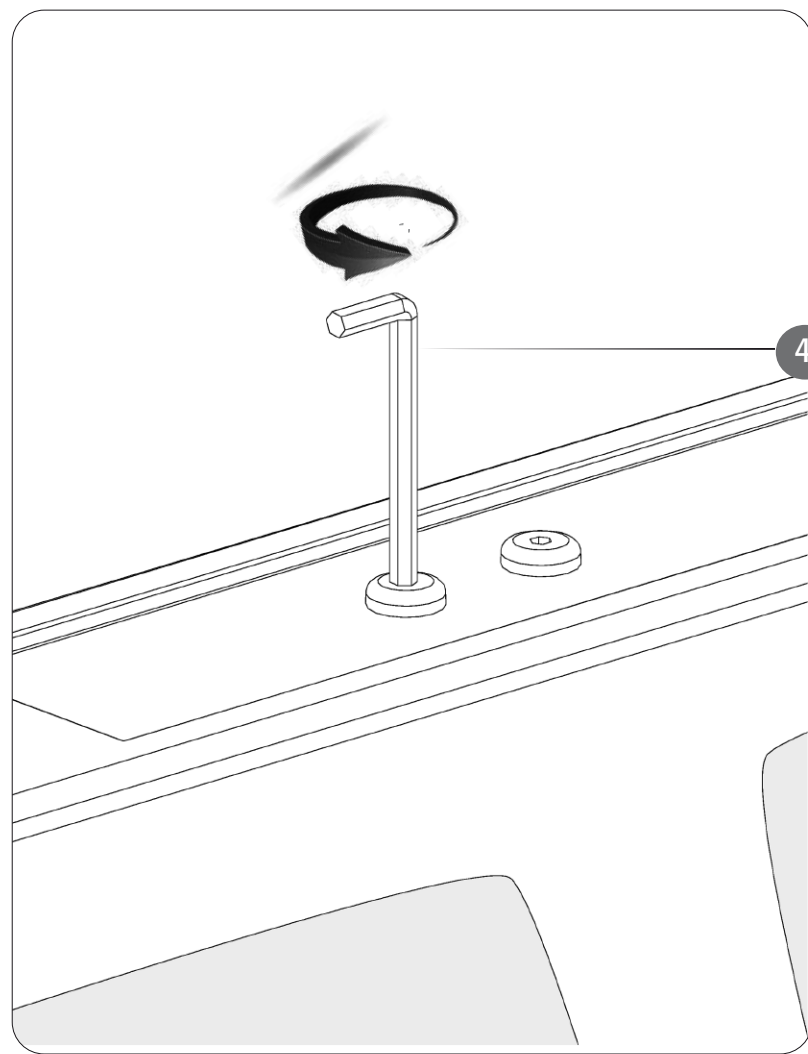

B

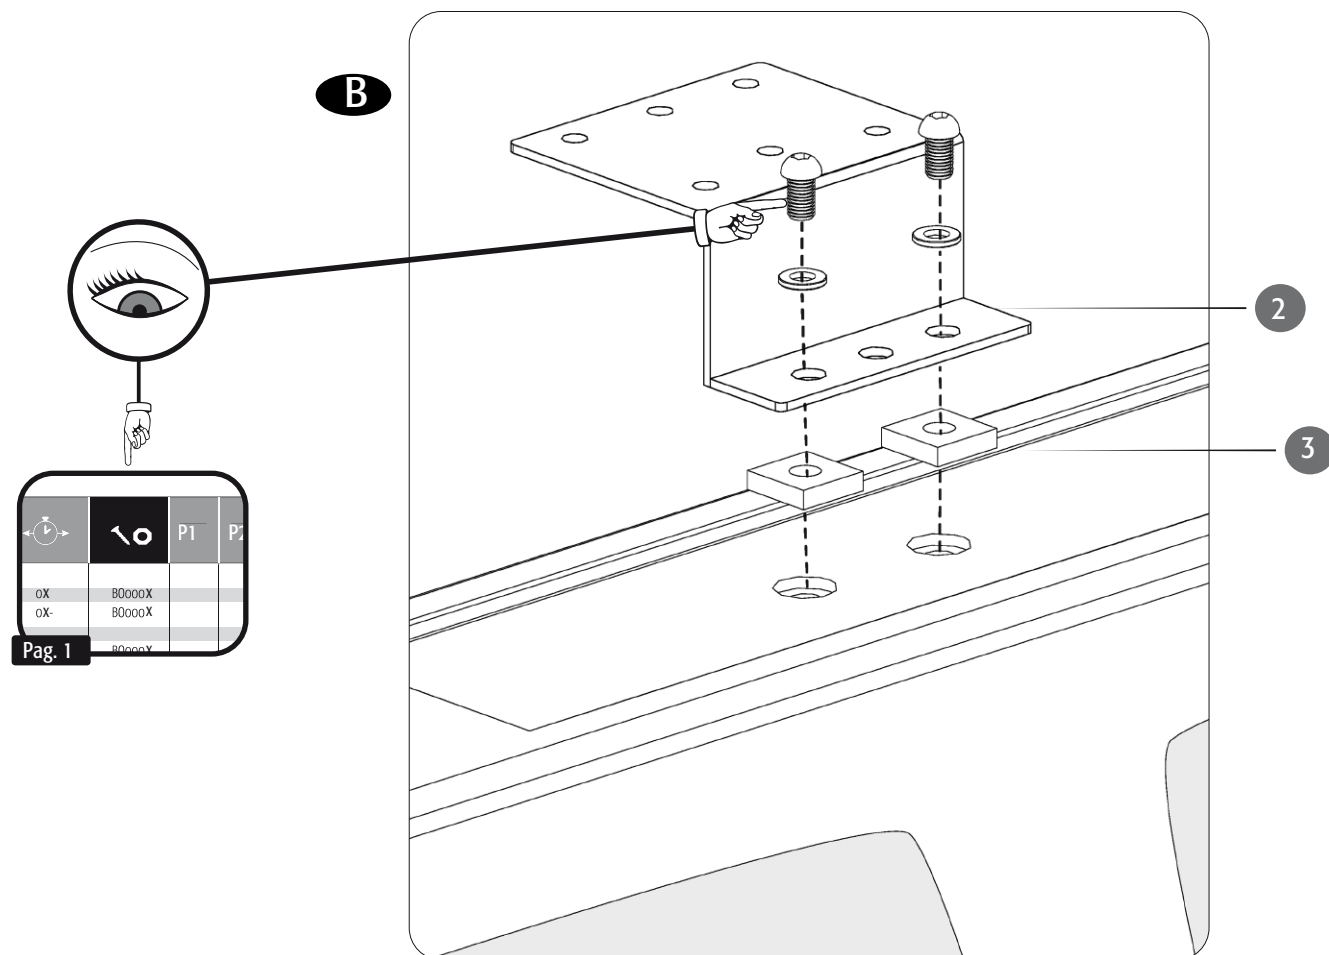

C

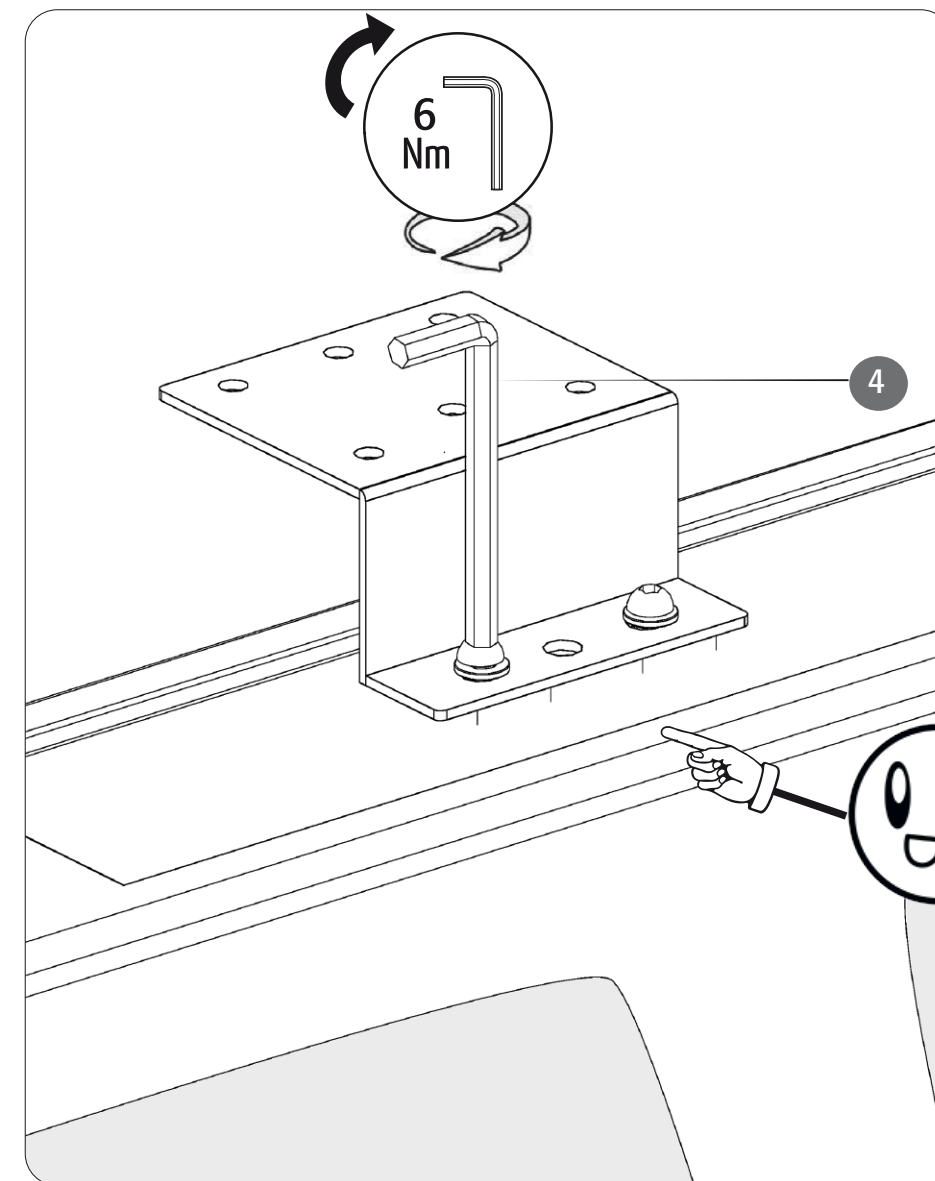

D

