


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

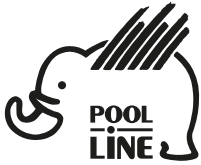

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net



200



KG.
MAX.



Nº HOMOLOGACIÓN: E9 26R-03.1042






RECICLABLE


123614

Rv: 06/2024

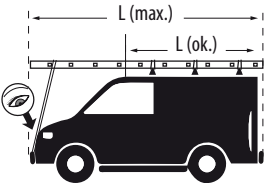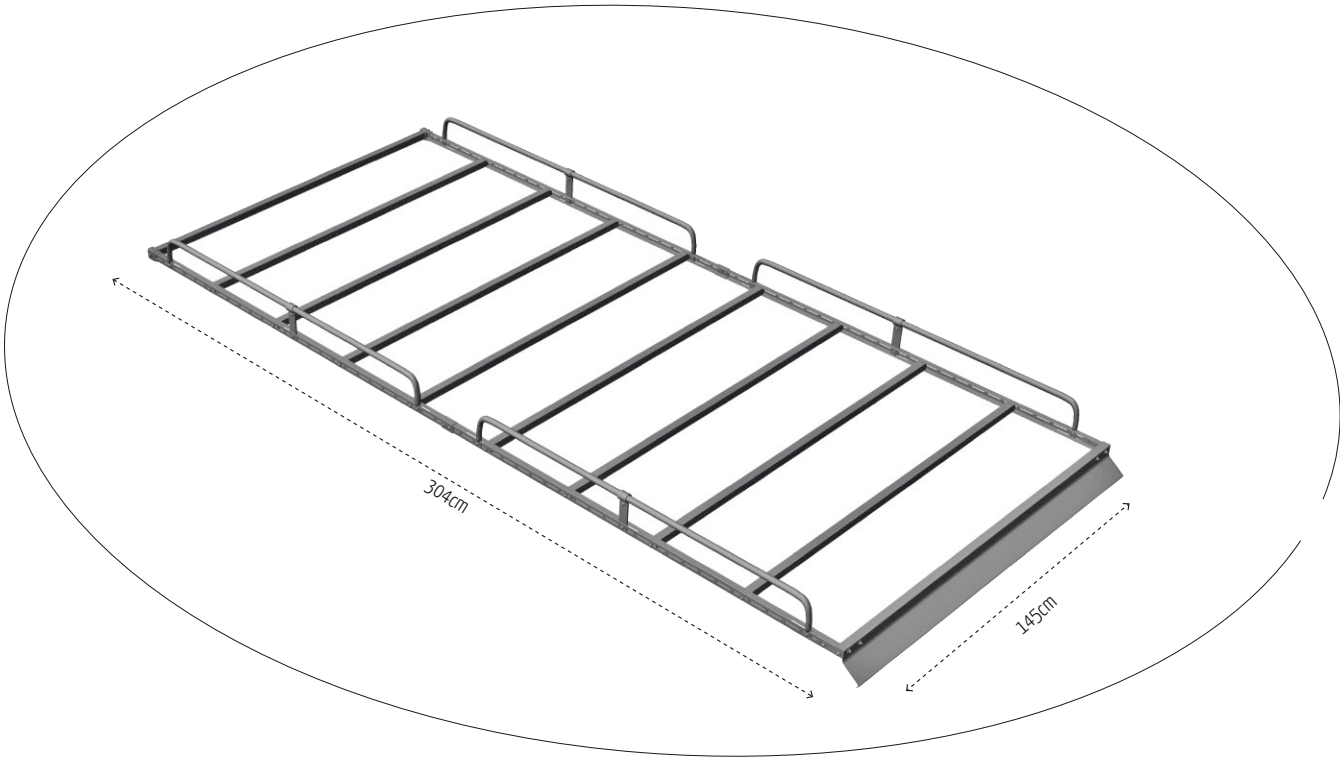


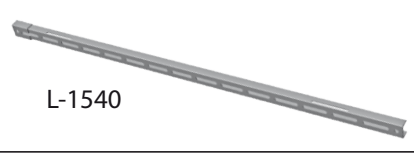N		Q
1	 S-1450	1
2	 L-1540	4
3	 B-1262	4
4	 T-1435	9
7		18
8		2
9		2
10		8
11		1
12	 CHA-M8	16
13	 ISO 7380 M8x30	18
14	 ISO 7380 M8x16	24
15	 DIN 125 Ø 8	42
16	 DIN 603 M6x12	8
17	 DIN 603 M6x12	4
18	 DIN 6923 M6	4

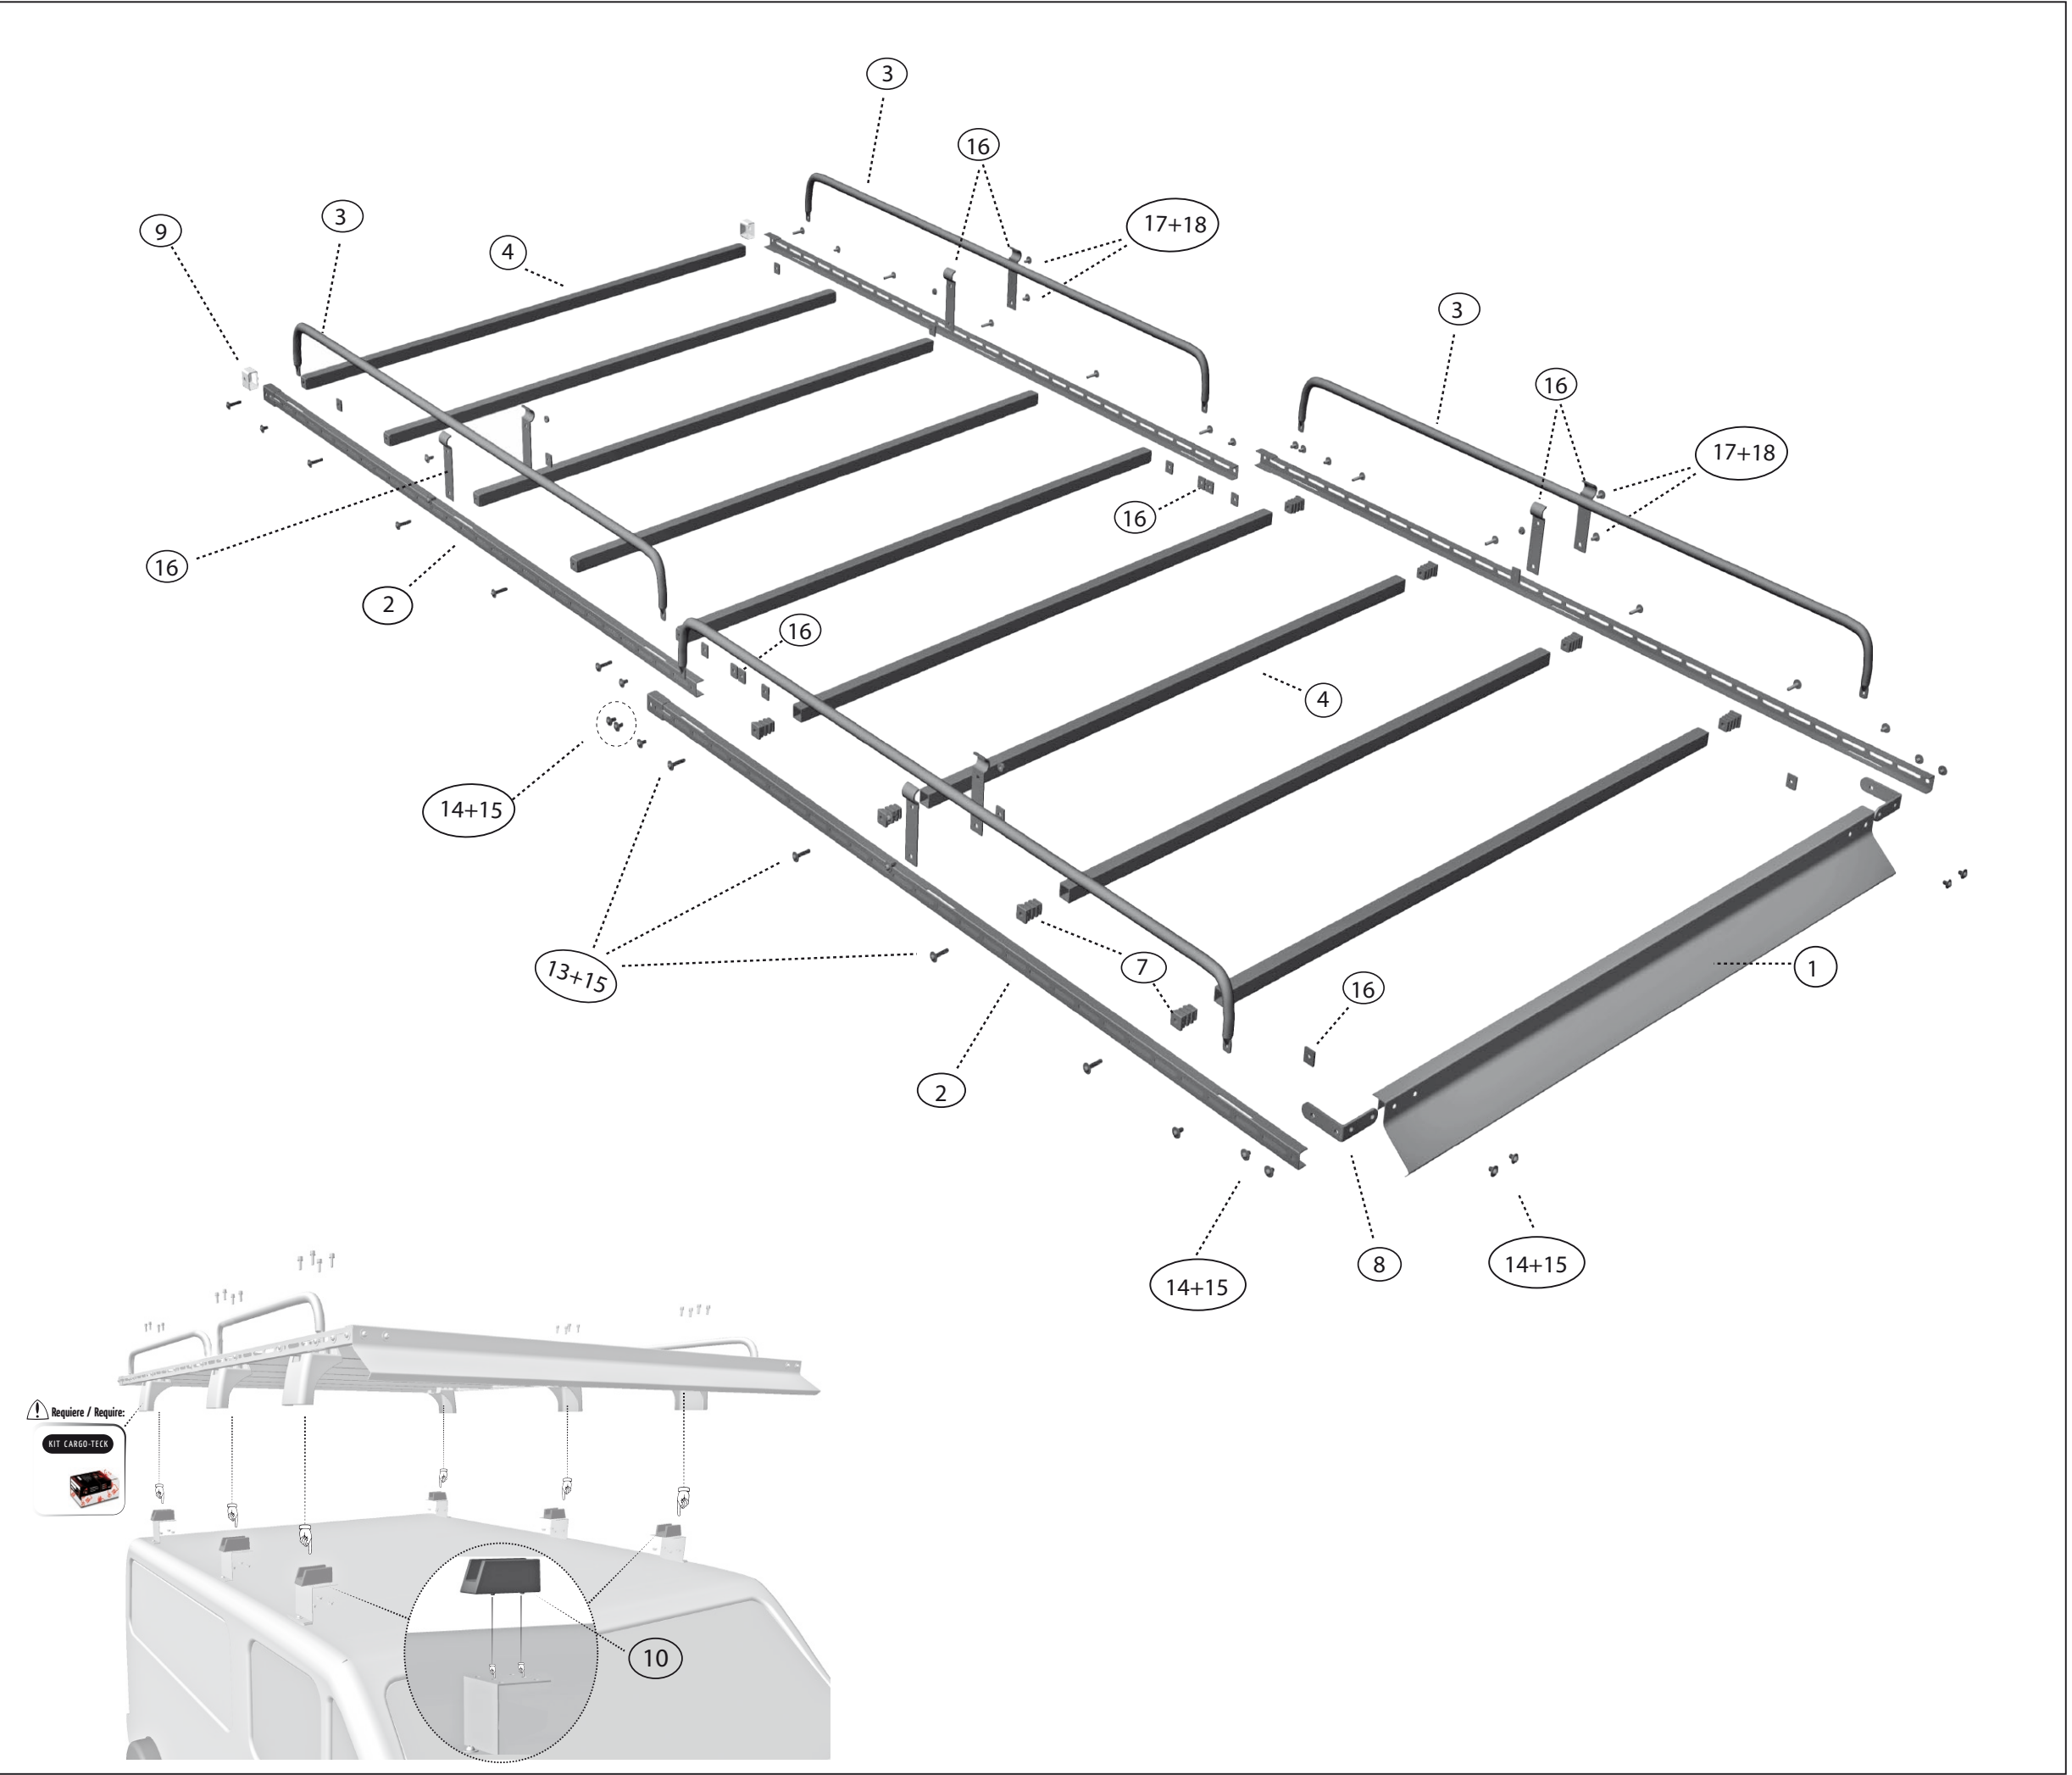


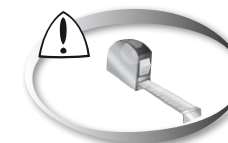


• IVECO DAILY VI (10,8m³) 3520 - H2
3 fijaciones (2014->)

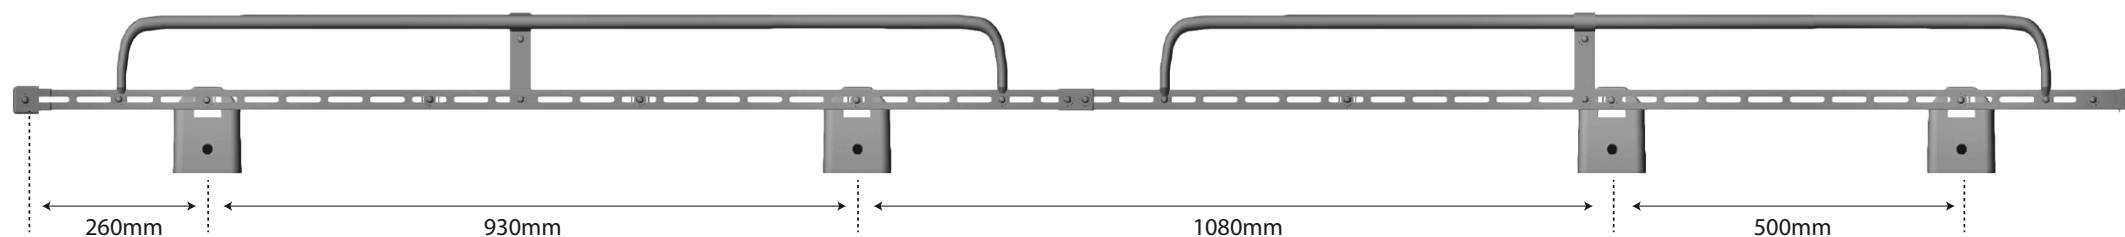


• IVECO DAILY VI (10,8m³) 3520 - H2
2 fijaciones (2014->)

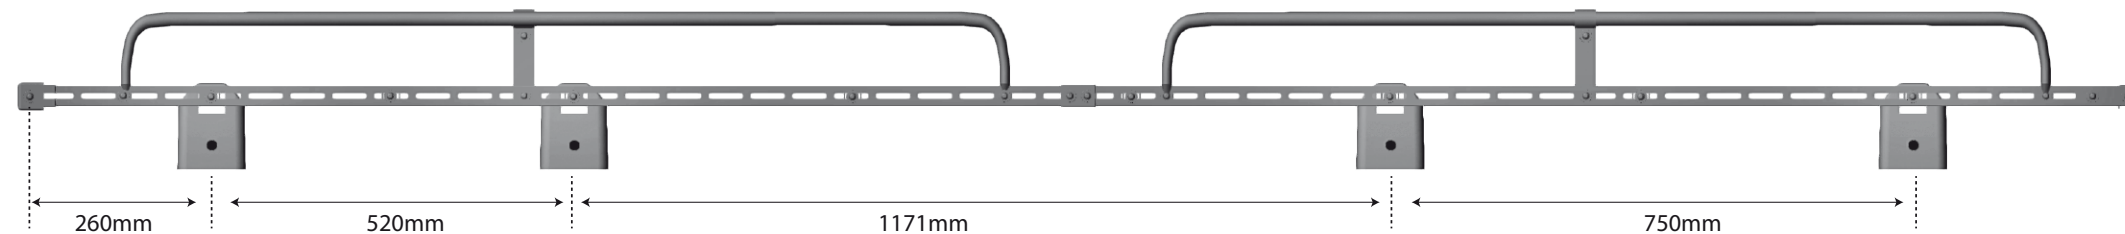


• FORD CUSTOM II TOURNEO L1-H1 (23->)
• FORD CUSTOM II TRANSIT L1-H1 (23->)

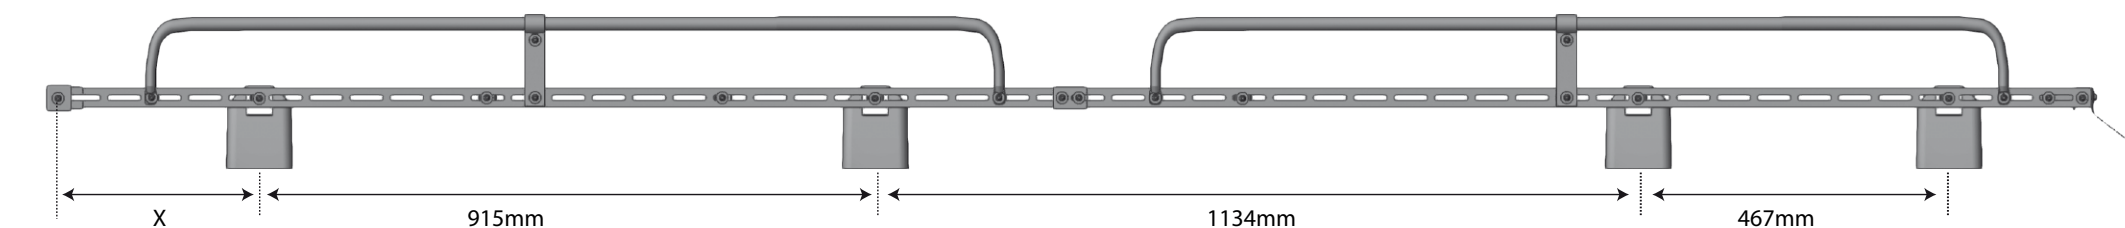

• MERCEDES VITO W639 L1 (2003 - 2014)
• MERCEDES VITO W447 L1 (2014->)

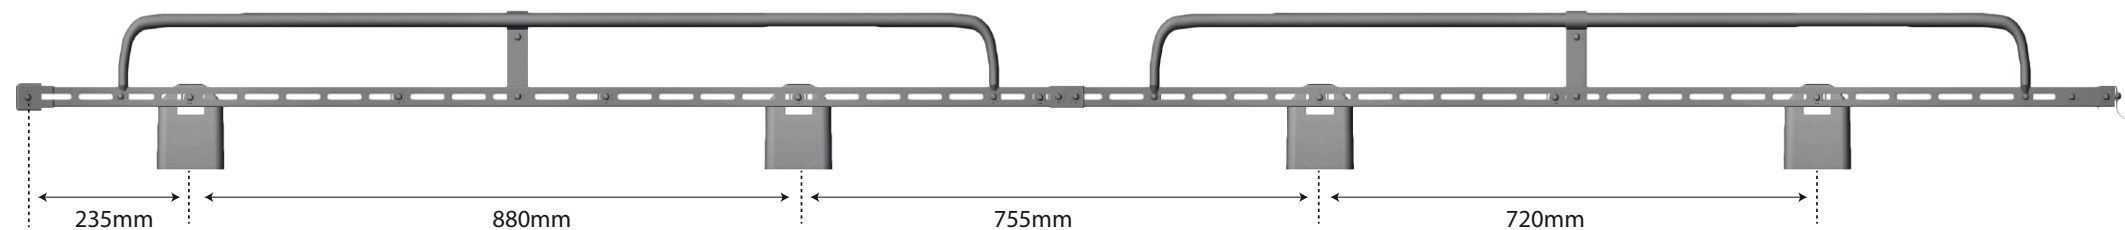

• MERCEDES VITO W639 L2 (2003 - 2014)
• MERCEDES VITO W447 L2 (2014->)

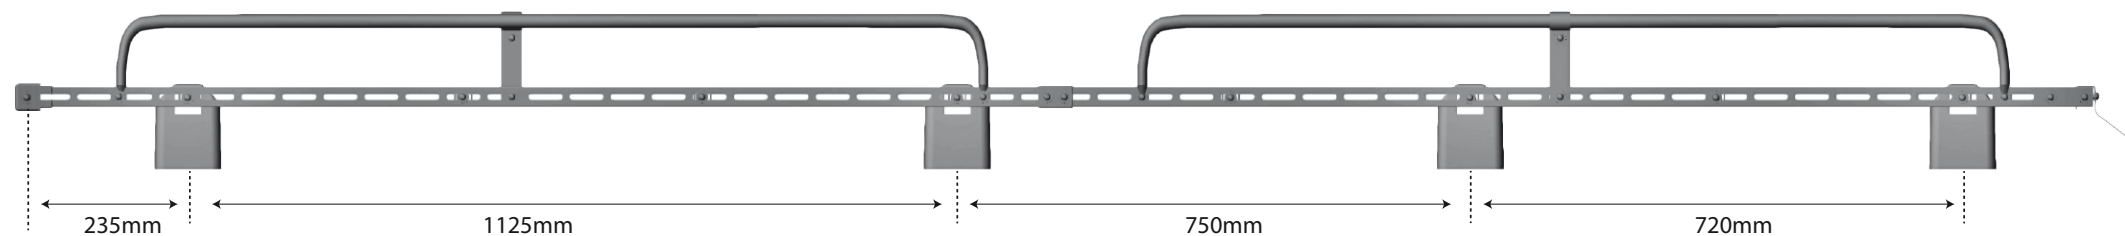


• HYUNDAI
• LDV
• DFSK




Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone


1




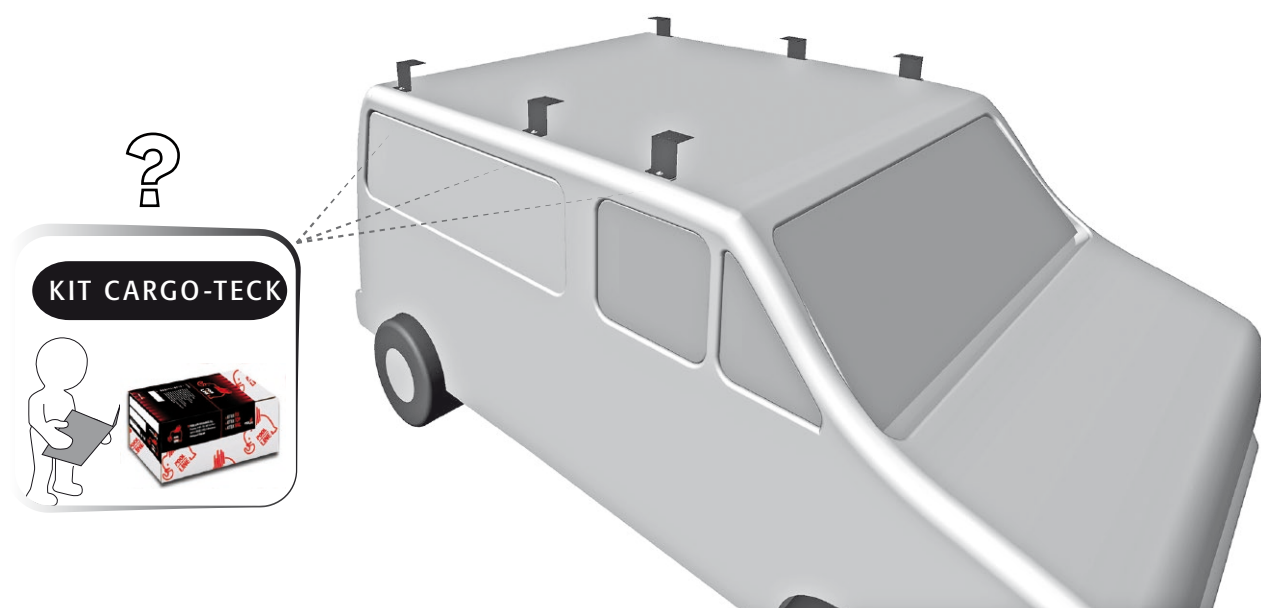


2

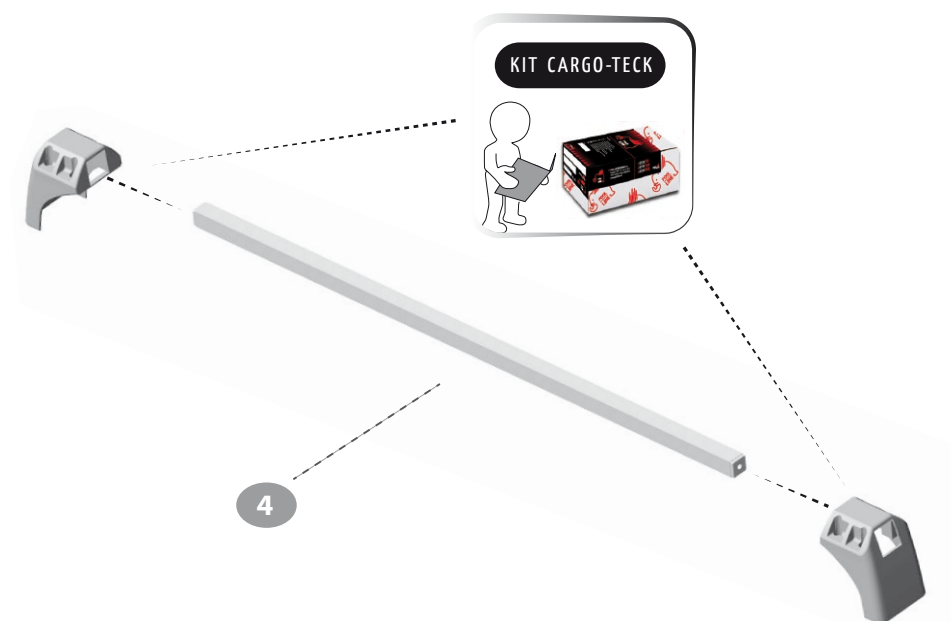


3


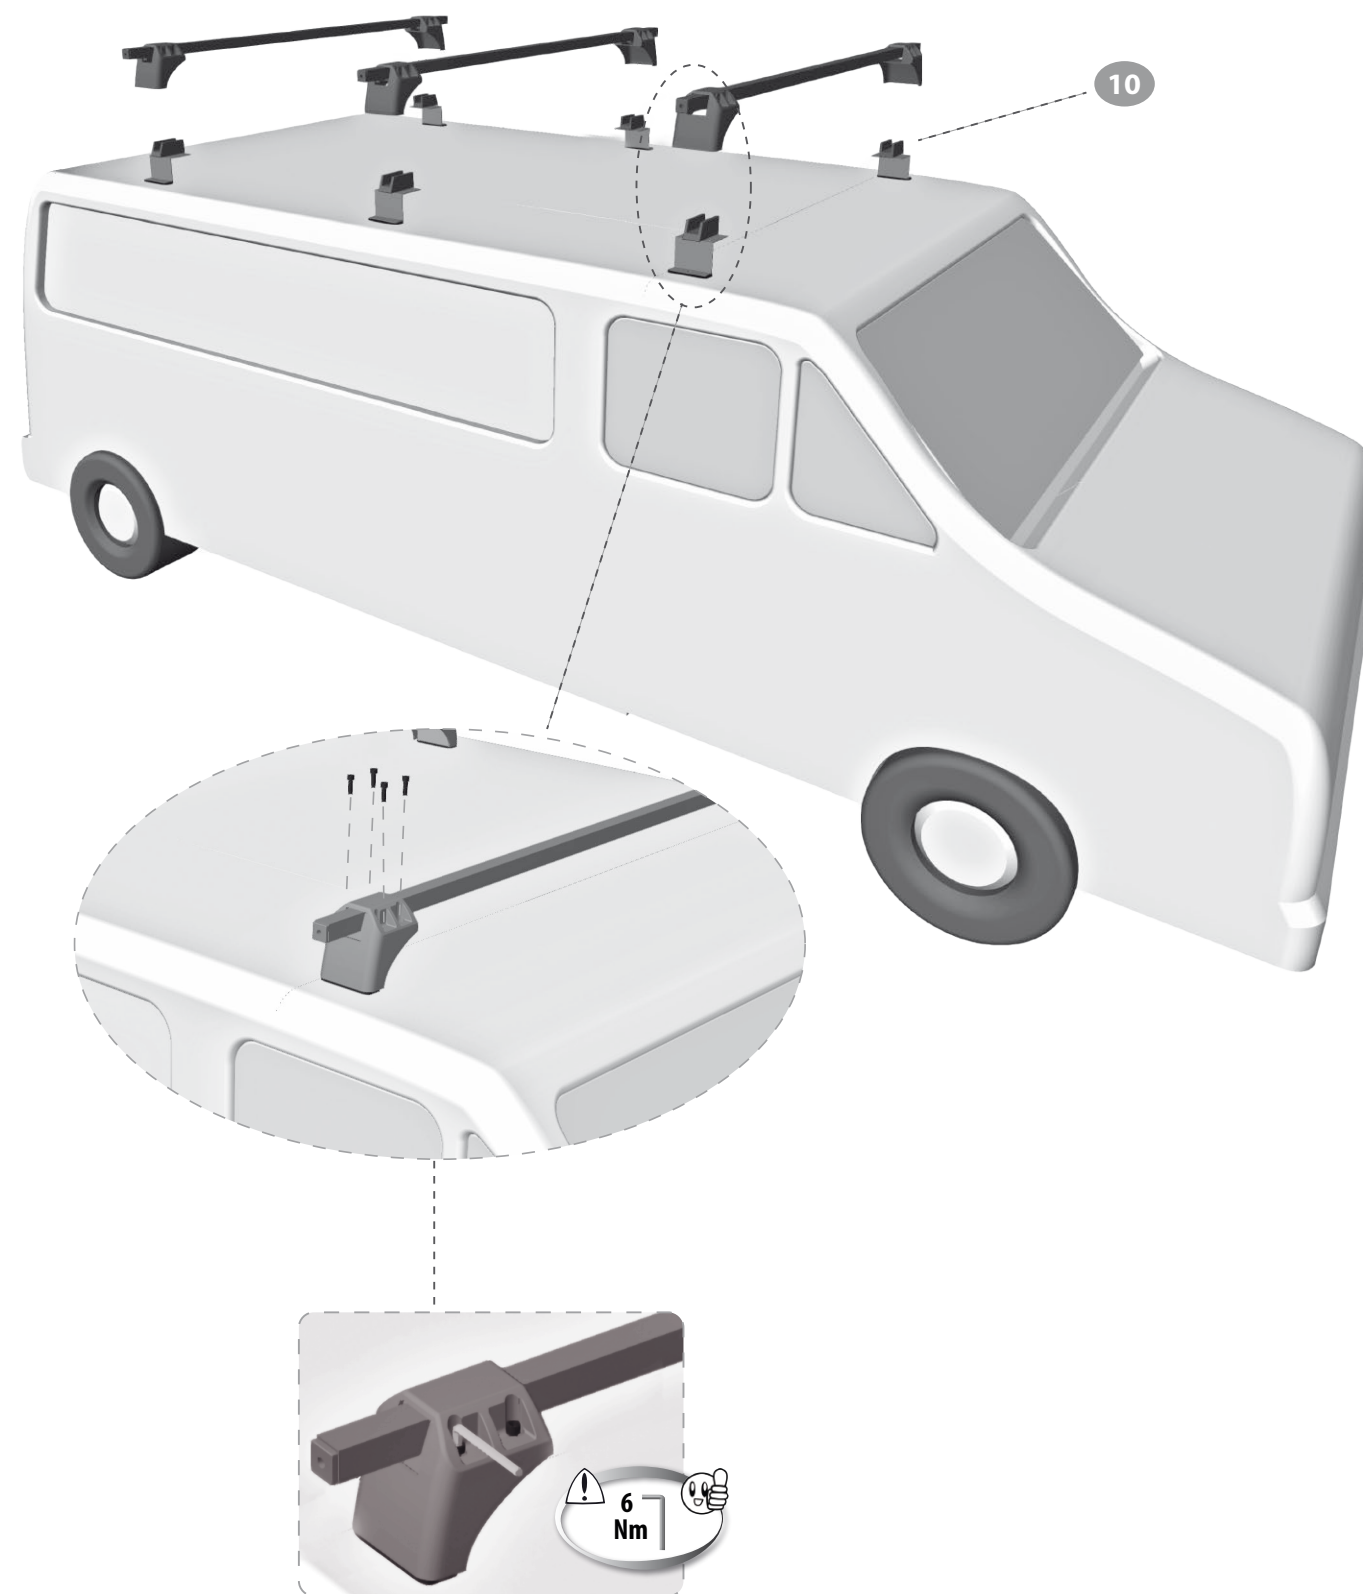







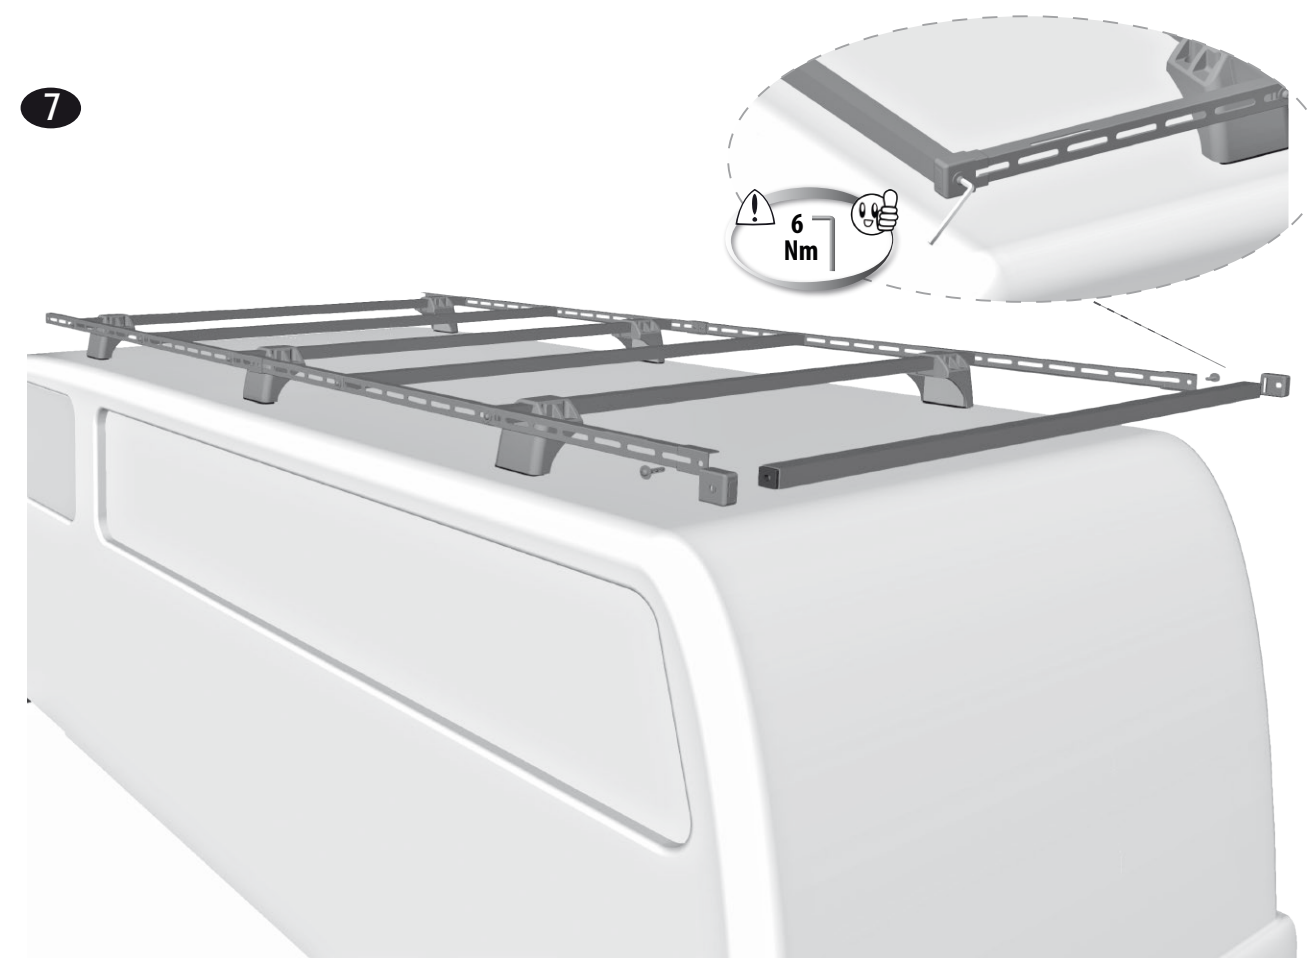
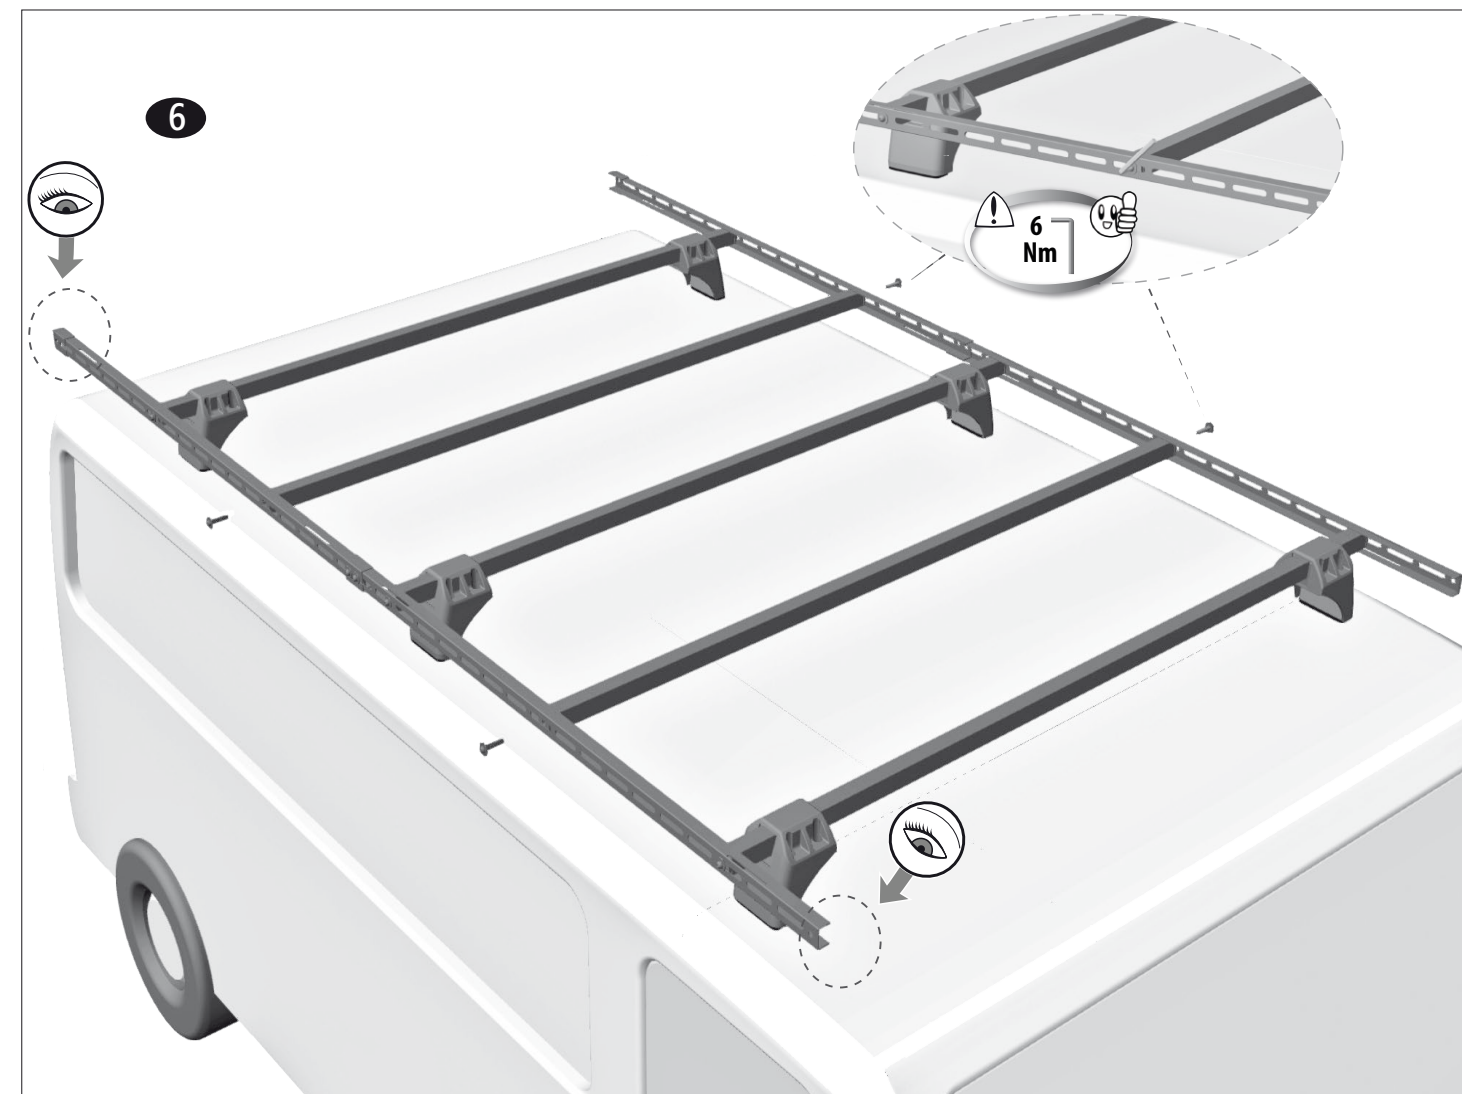
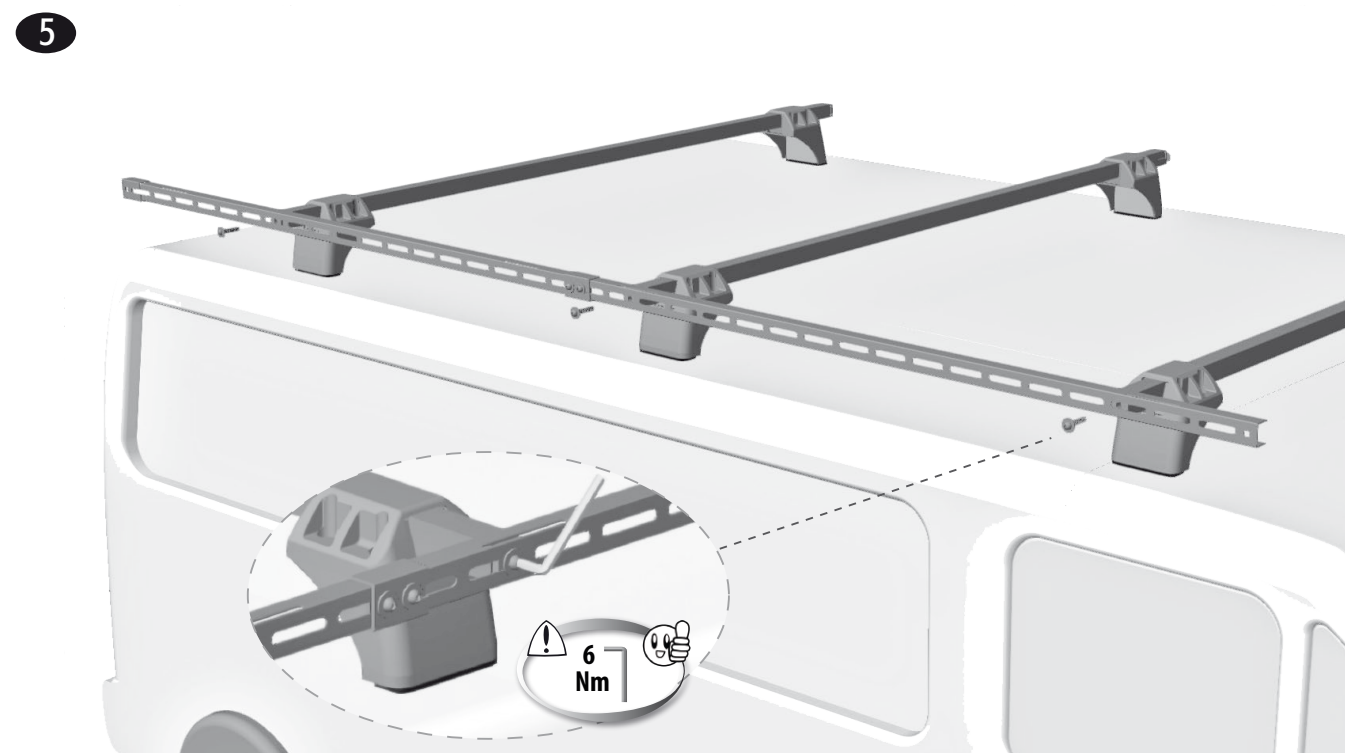
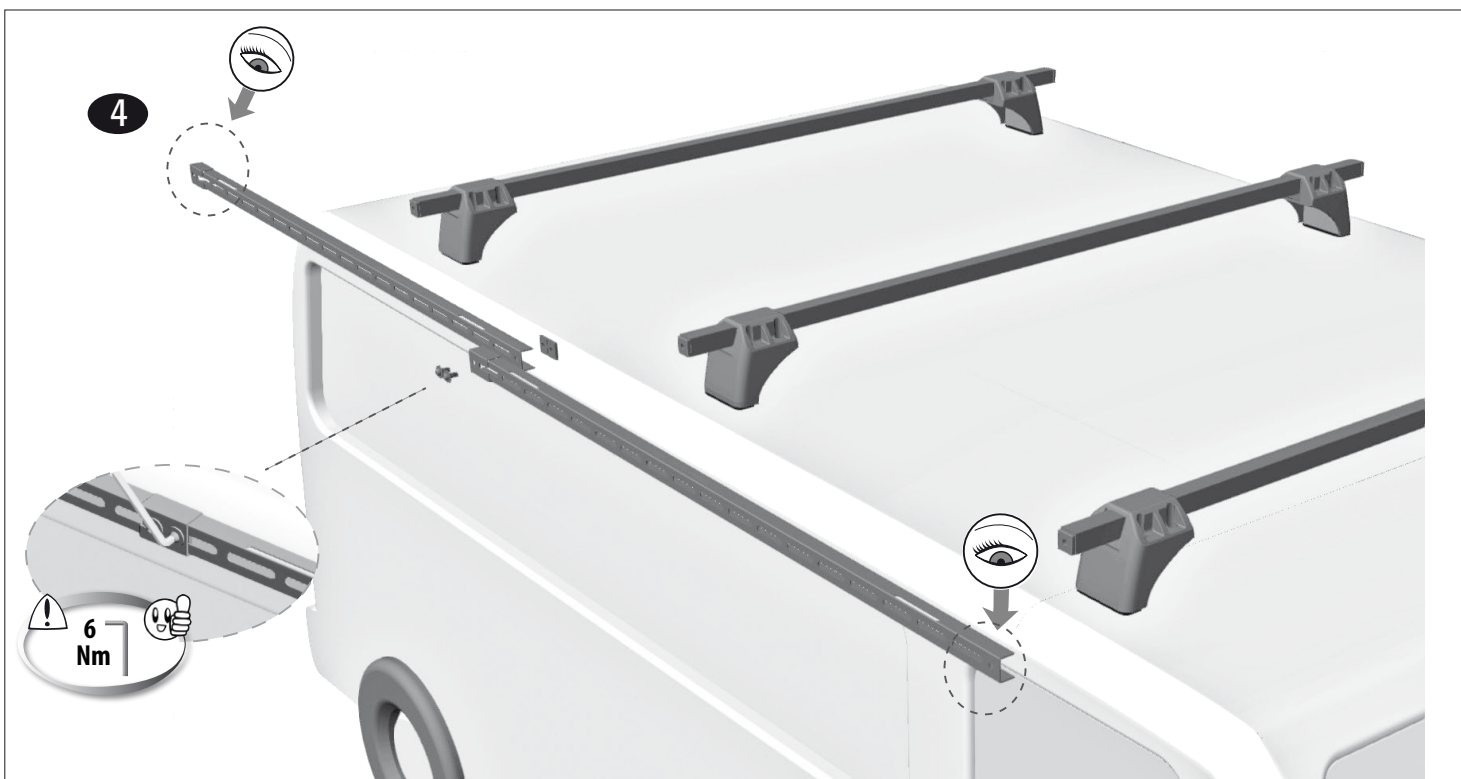



8

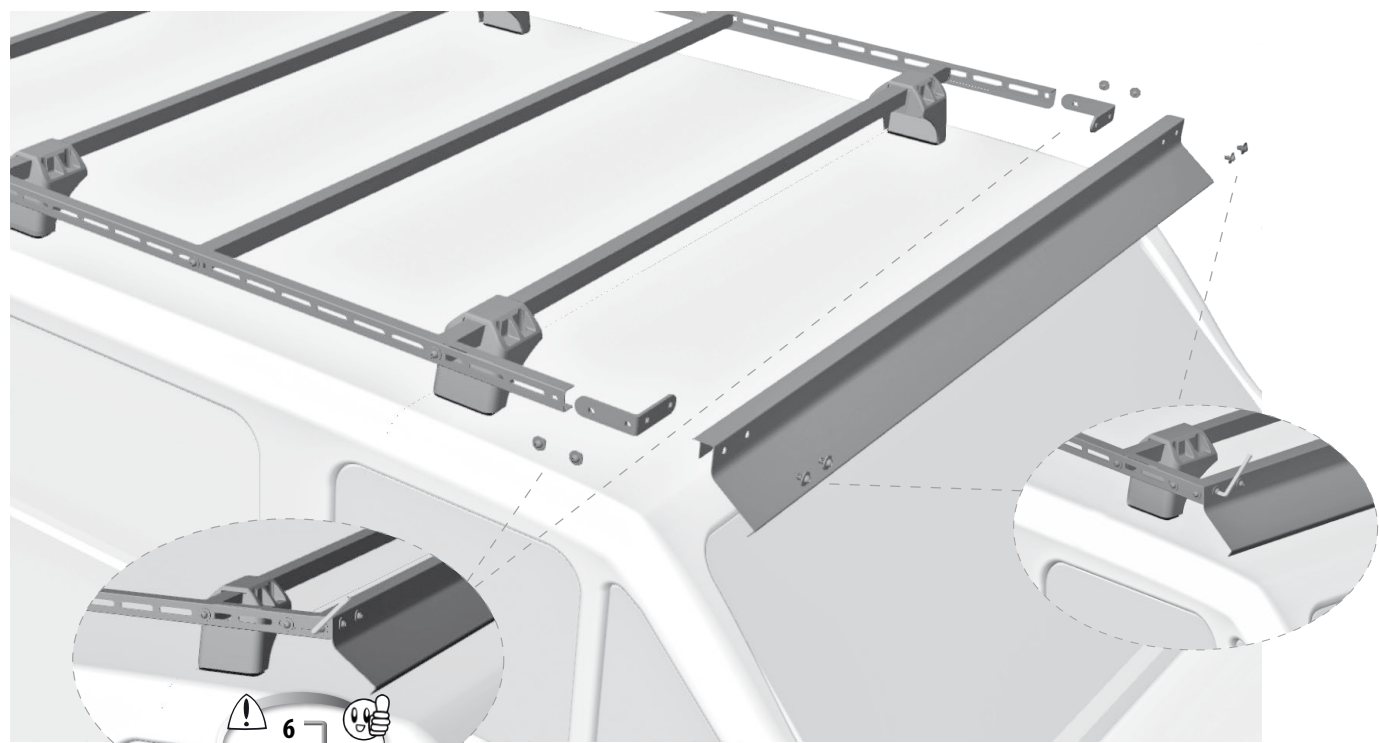


9

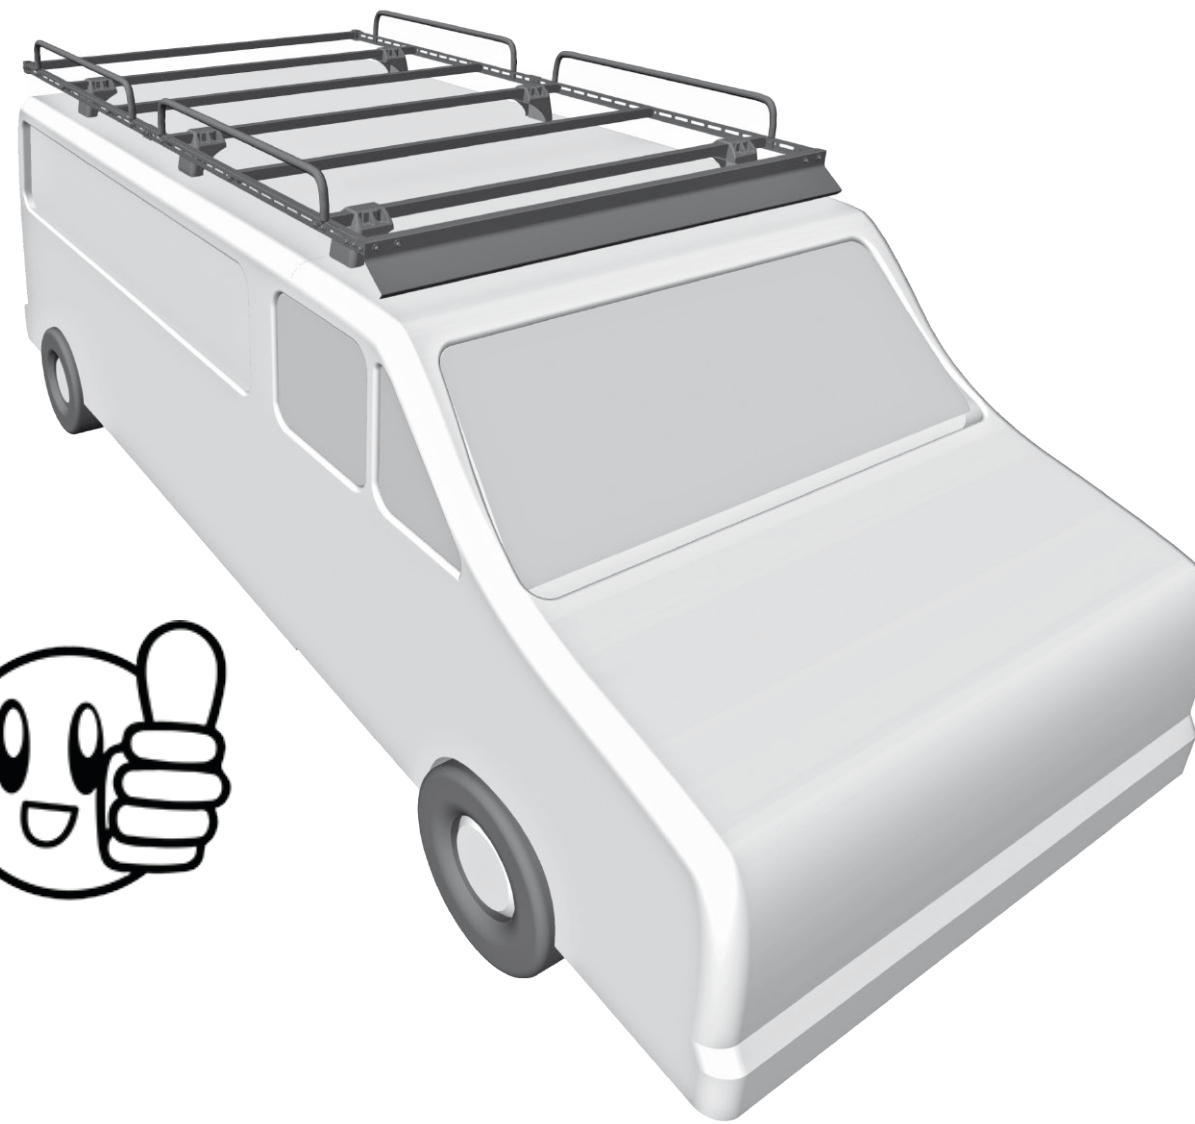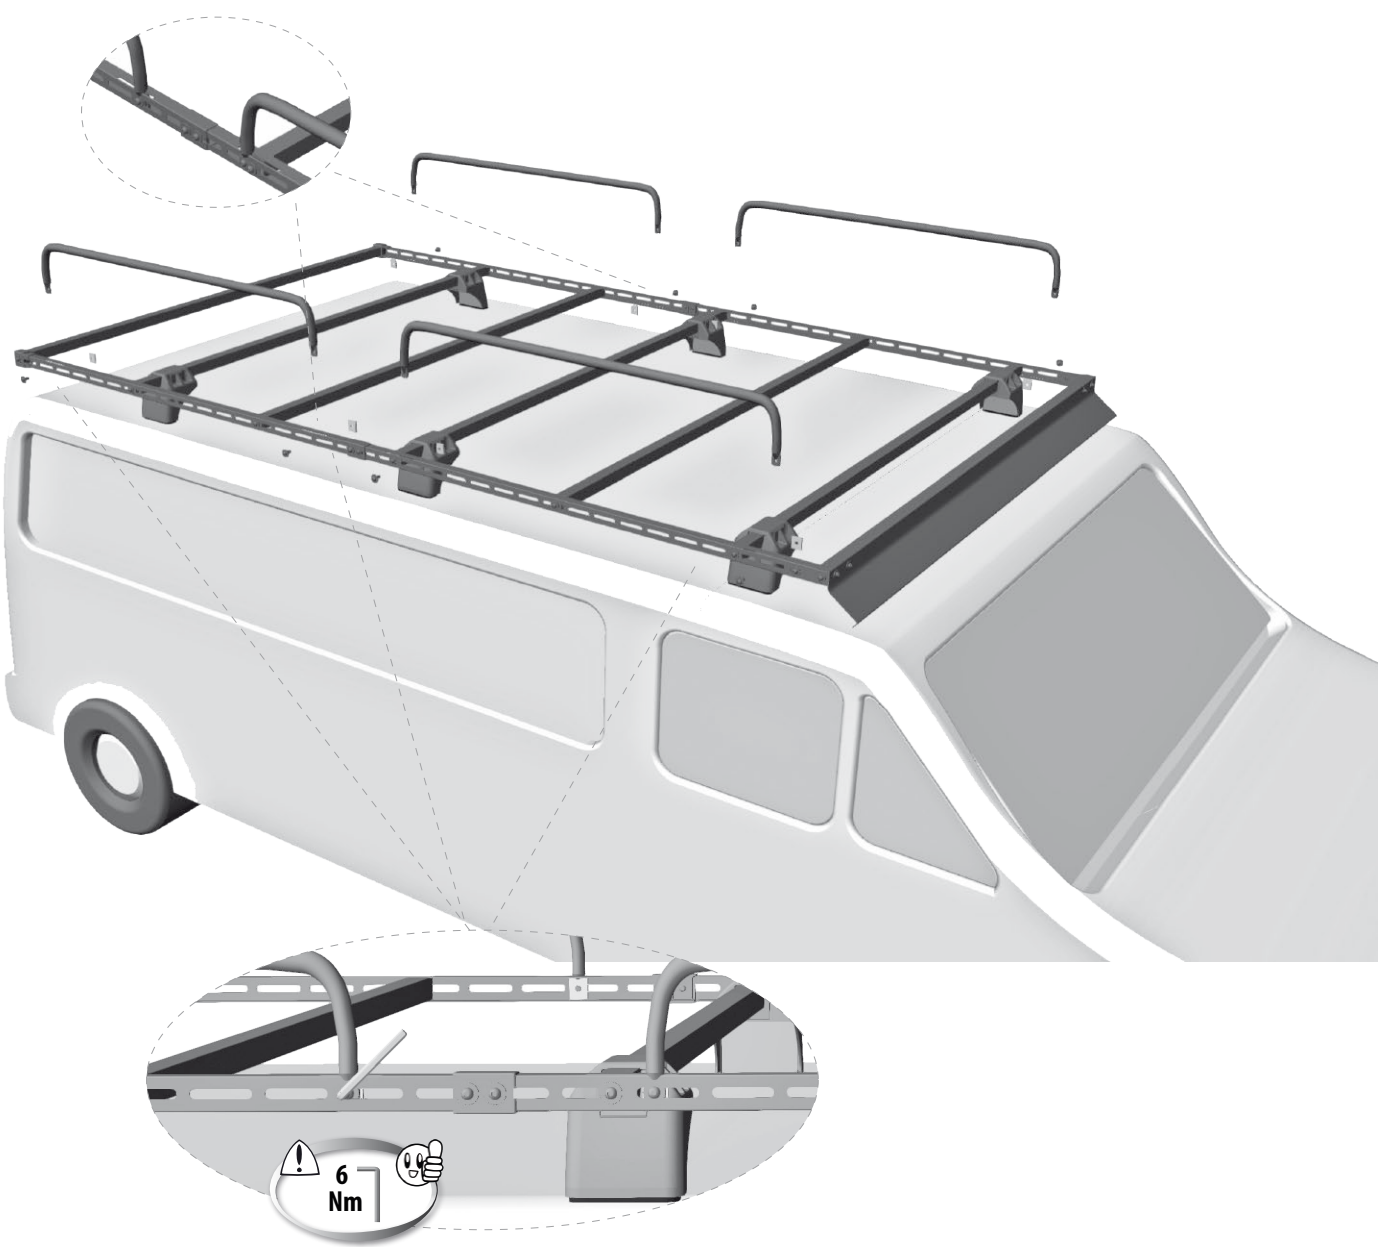

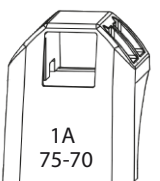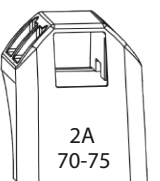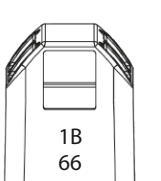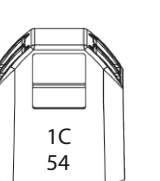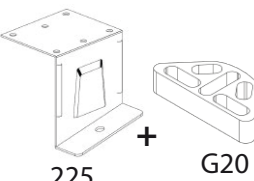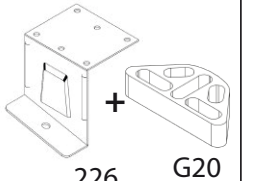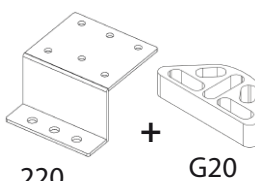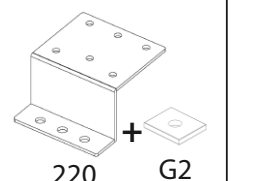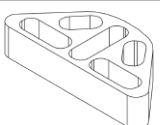N			Q			Q	Q
1			1+1		2		4
2			1+1		2		4
3							8
4							4
5							1

N	BO0060x2	Q
8	 DIN912 M6x20	32
9	 DIN125	32

N	BO0010 x 4	Q
10	 ISO 7380 M8x20	8
11	 Din125 Ø8	8

N	BO0066 x 3	Q
12	 ISO 7380 M8x30	6
13	 Din125 Ø8	6

- E

Instrucciones de montaje

Kit de fijación
- C

Instruccions de muntatge

Kit de fixació
- GB

Assembly instrucctions

Fixation Kit
- F

Instruction de montage

Kit fixation
- D

Montageanleitung

Stützfuß-Kit
- PT

Instruções de montagem

Kit fixação
- I

Istruzioni di montaggio

Kit di fissaggio
- PL

Instrukcja montażu

Element mocujący
- CZ

Montážní návod

Fixační kit
- HU

Szerelési Utasítás

Rögzítő készlet
- RO

Instrucțiuni de montaj


Kit de fixare
- HR

Detaljne upute

Kit za montažu
- TU

Öncelikli montaj

Montaj kiti

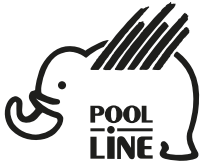

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN:

E9



26R-03.1043






121100

Rv: 06/2024

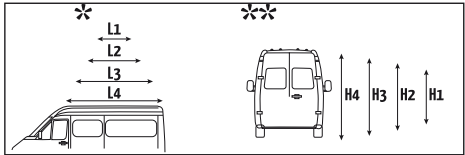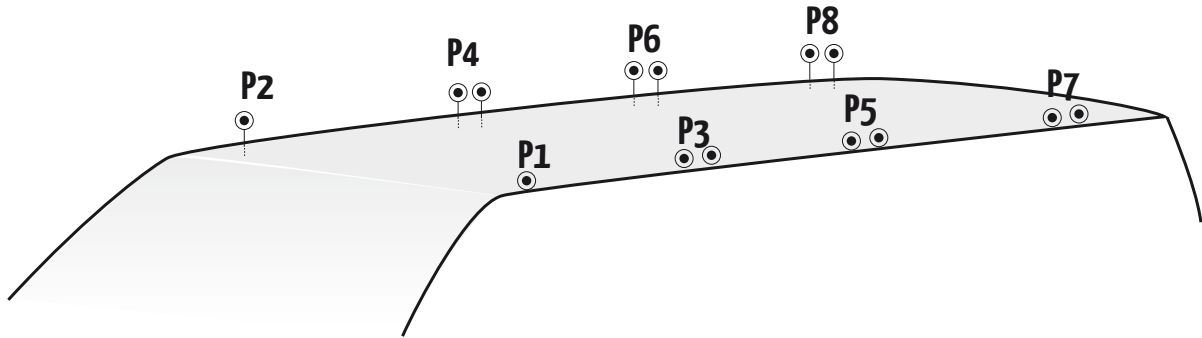

	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8
FORD												
Transit Custom II	L1	H1	2023 ->	BO0010 / B00066	225+G20+1A	226+G20+2A	220+G20+1B	220+G20+1B	220+G2+1B	220+G2+1B	220+G2+1C	220+G2+1C
Transit Custom II	L2	H1	2023 ->	BO0010 / B00066	225+G20+1A	226+G20+2A	220+G20+1B	220+G20+1B	220+G2+1B	220+G2+1B	220+G2+1C	220+G2+1C

