


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

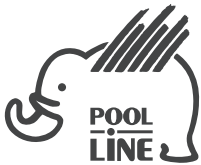

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net





200 KG.
MAX.

Nº HOMOLOGACIÓN: **E9** 26R-03.1042





123517


Rv: 06/2020

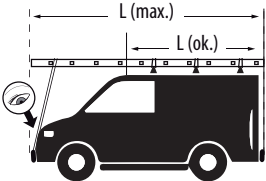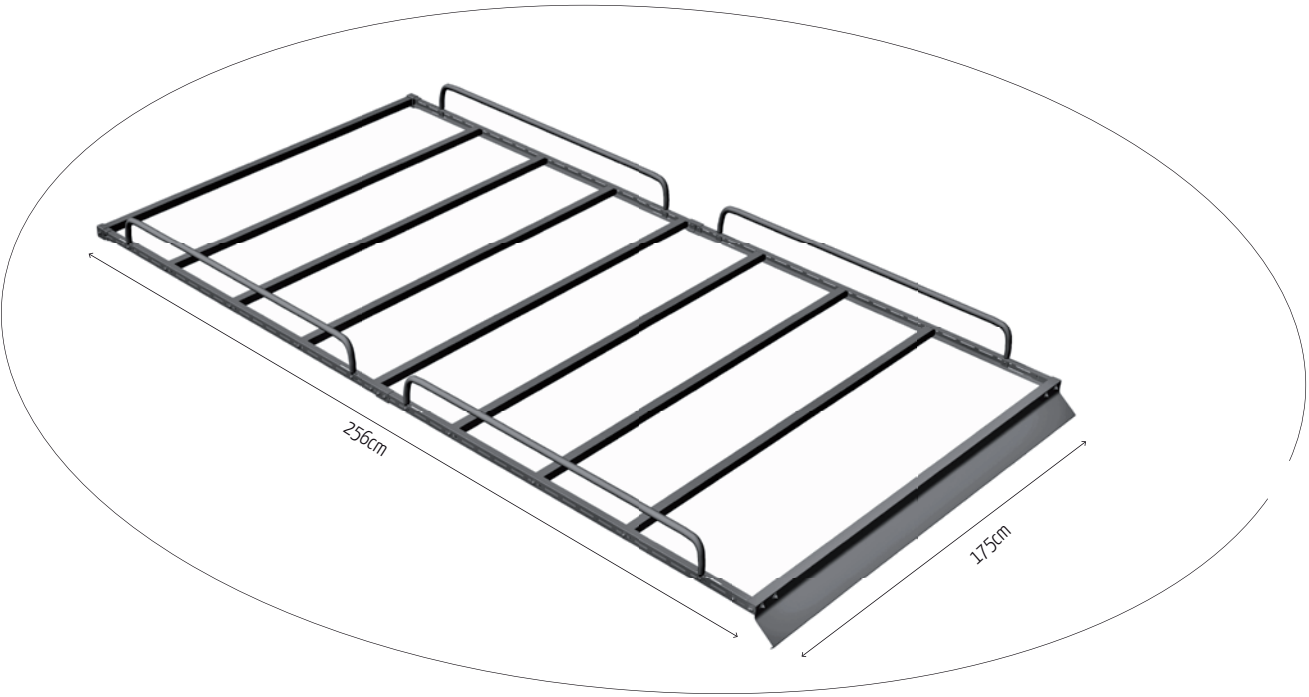


N		Q
1	 S-1750	1
2	 L-1300	4
3	 B-1022	4
4	 T-1735	8
5		16
6		2
7		2
8		6

N		Q
11		1
12	 CHA-M8	12
13	 ISO 7380 M8x40	16
14	 ISO 7380 M8x16	20
15	 DIN 125 Ø 8	36


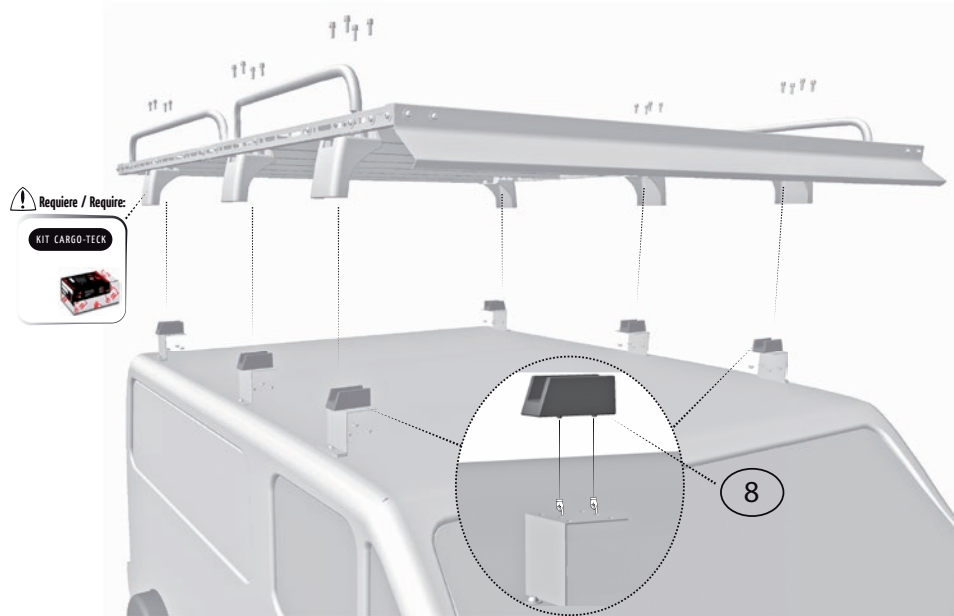
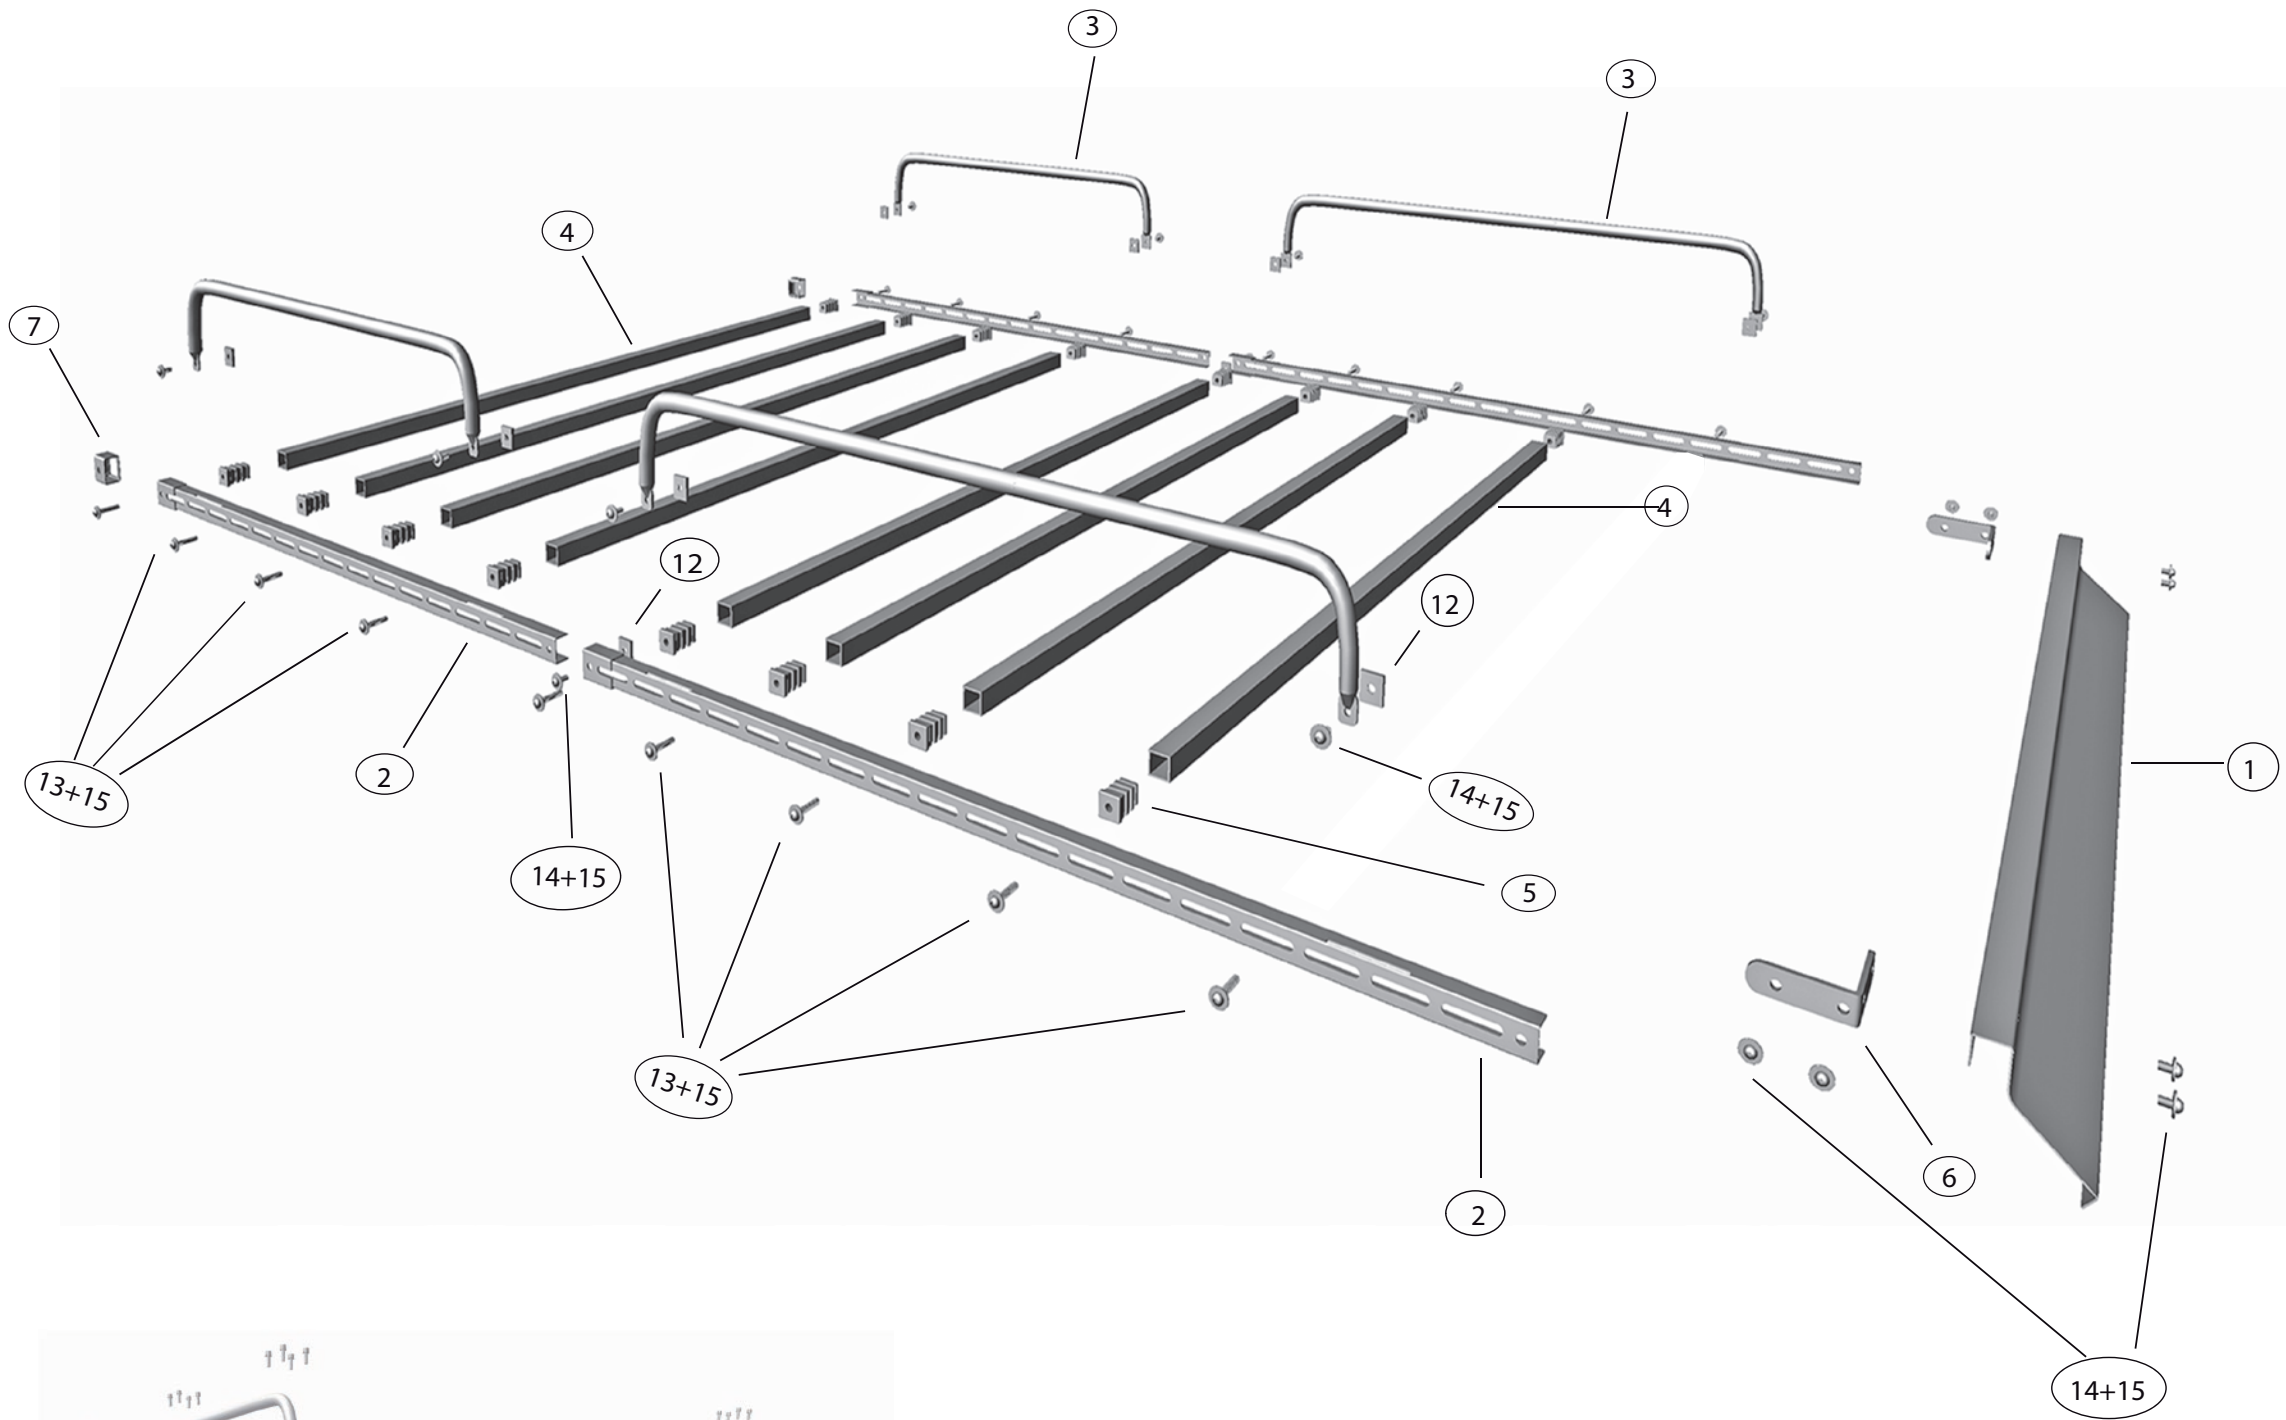


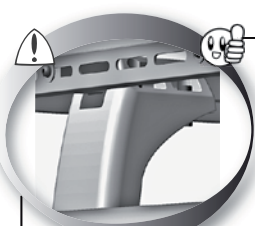


KIT CARGO-TECK

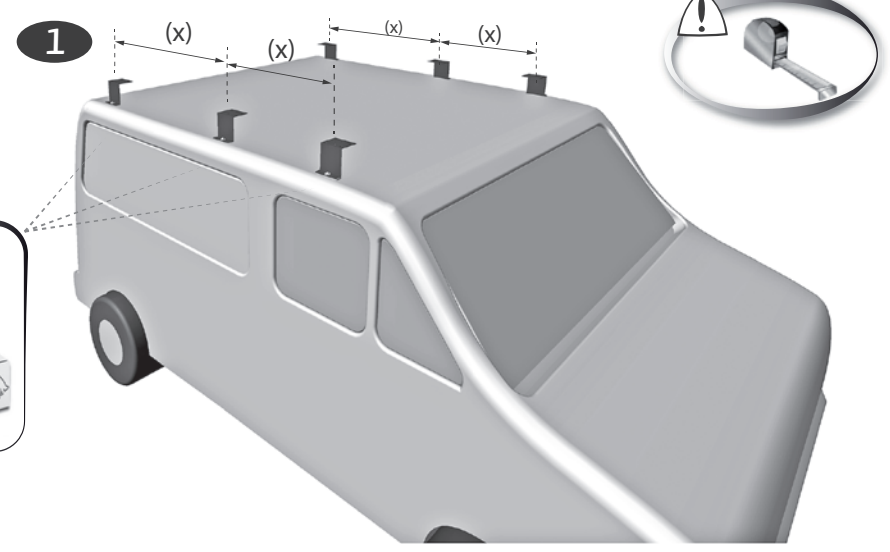



2

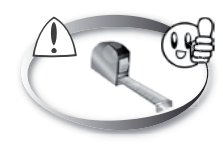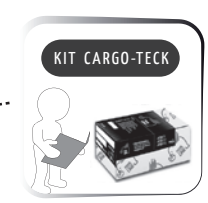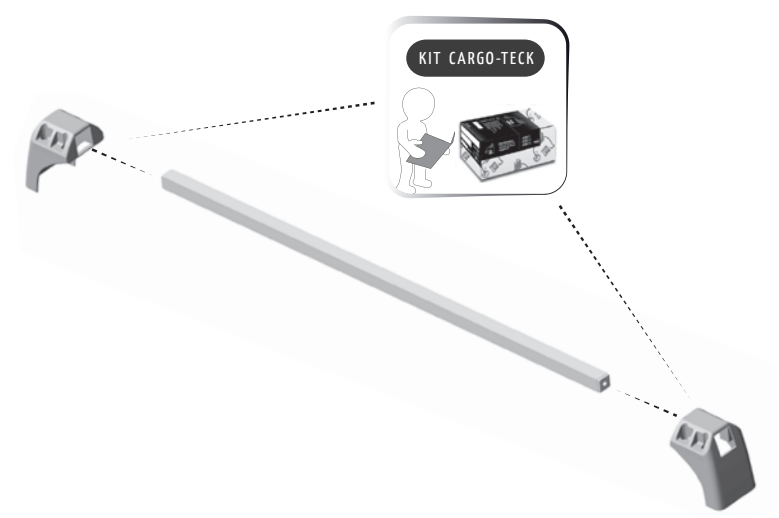


3

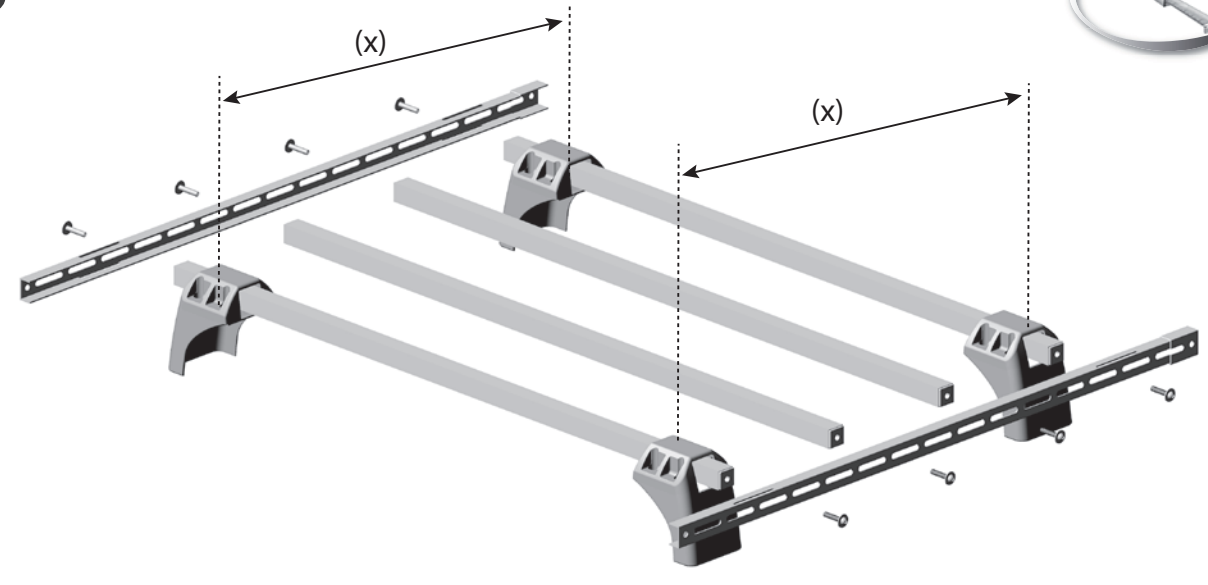

4

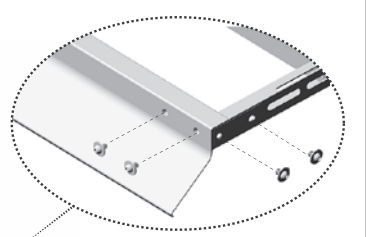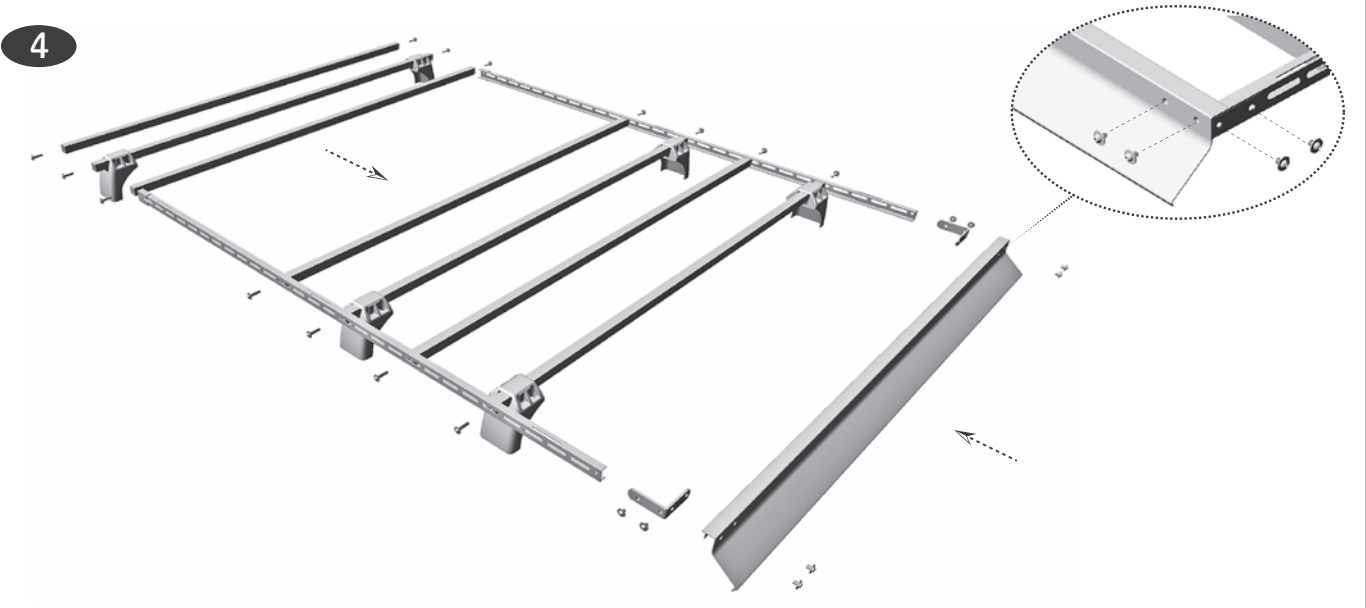


5

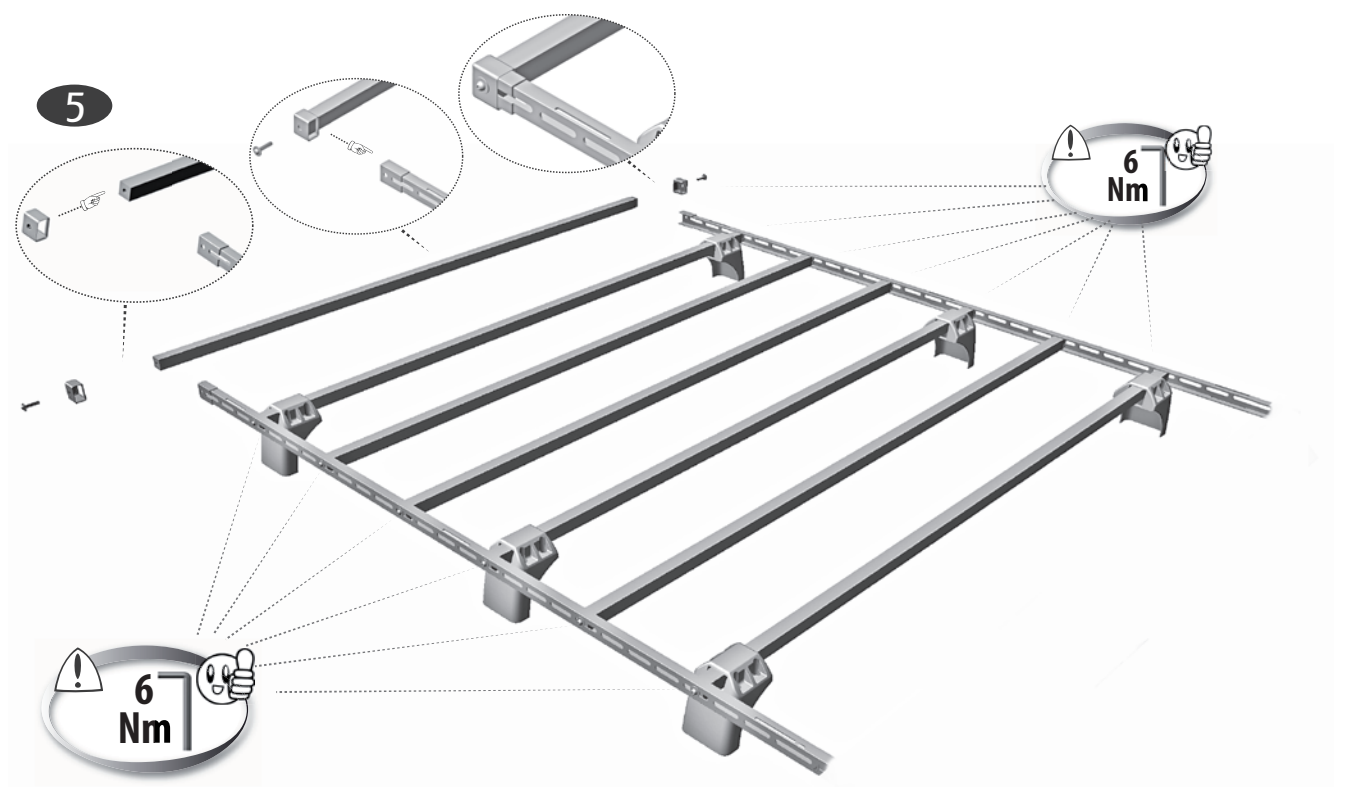


6 Nm

6 Nm


6

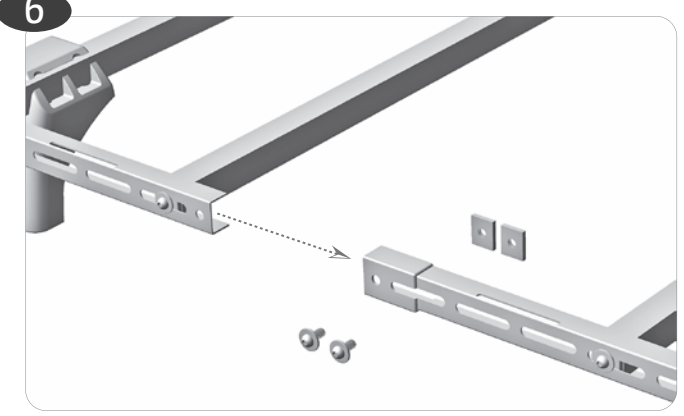


7

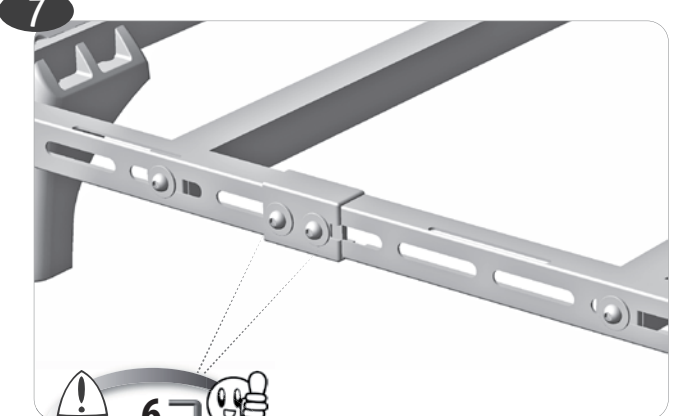


6 Nm

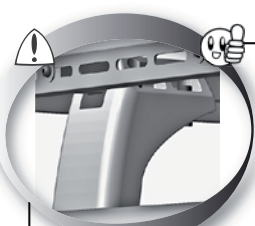




8





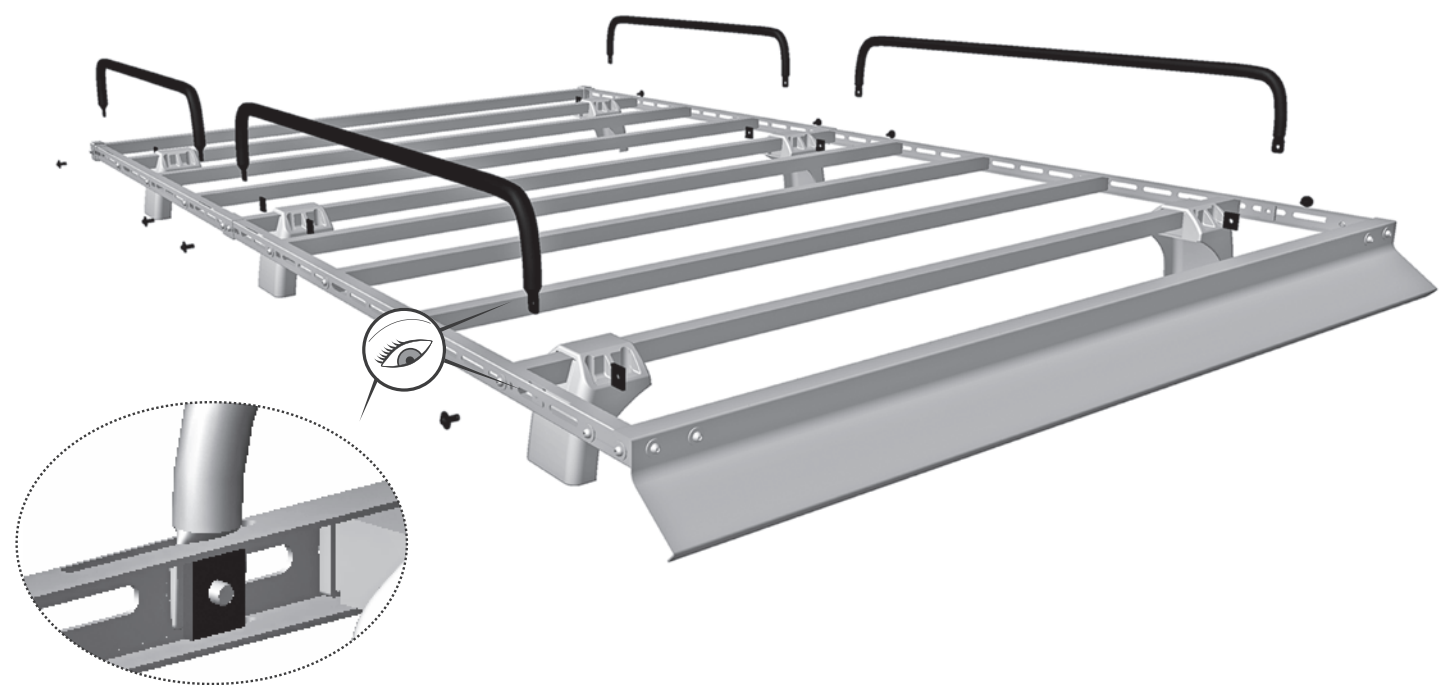




9

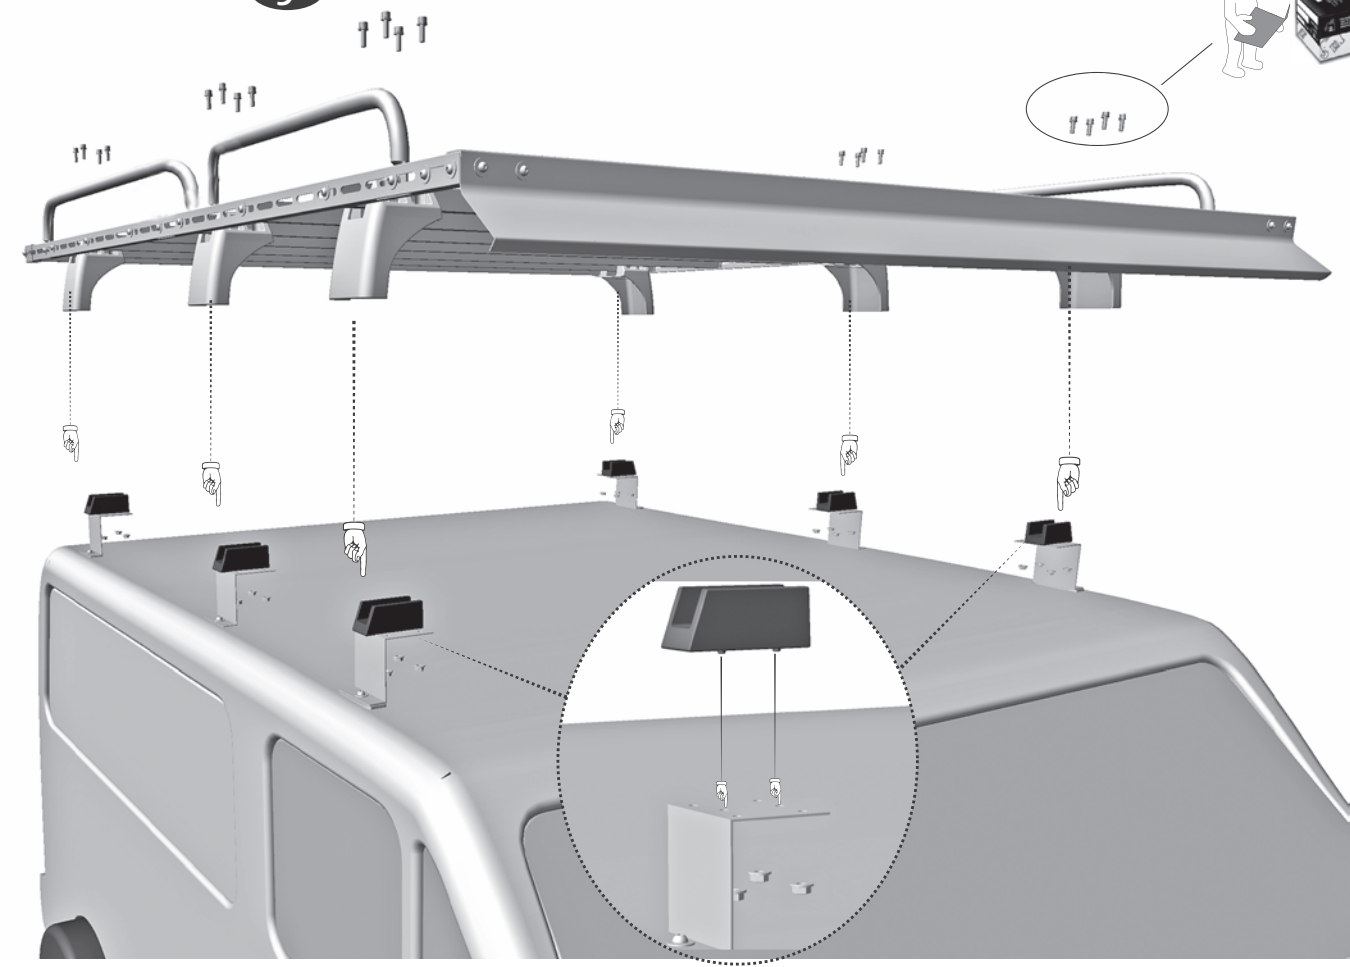



10

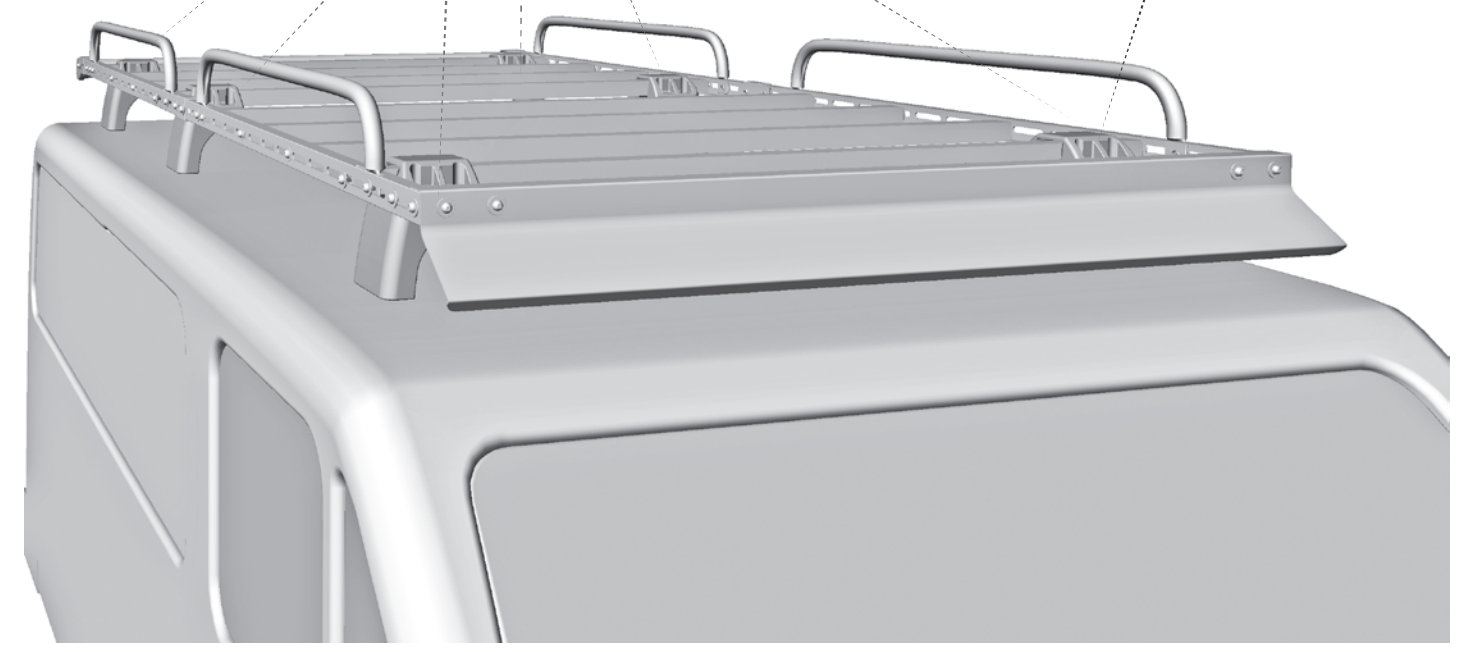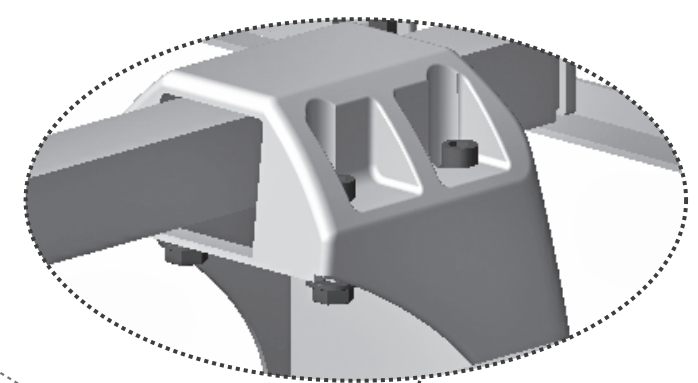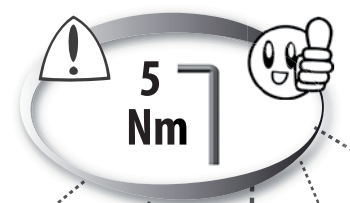

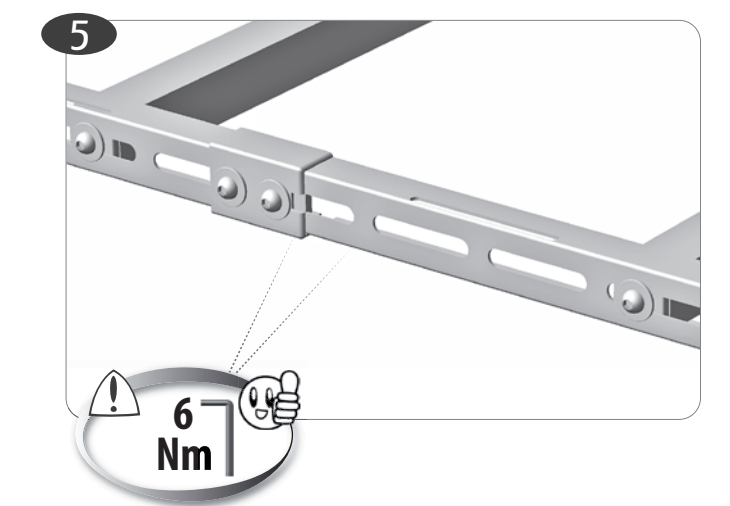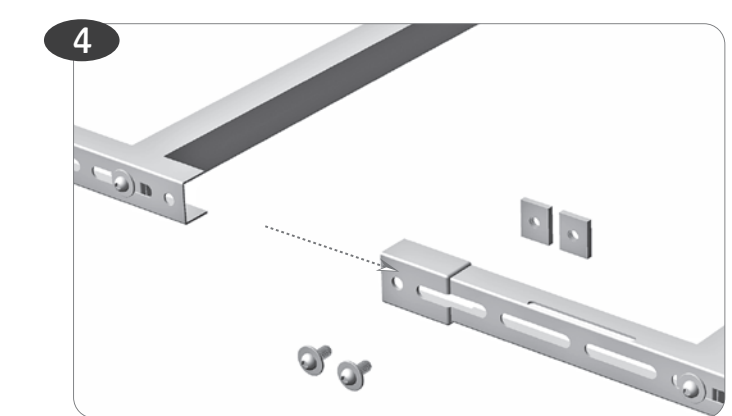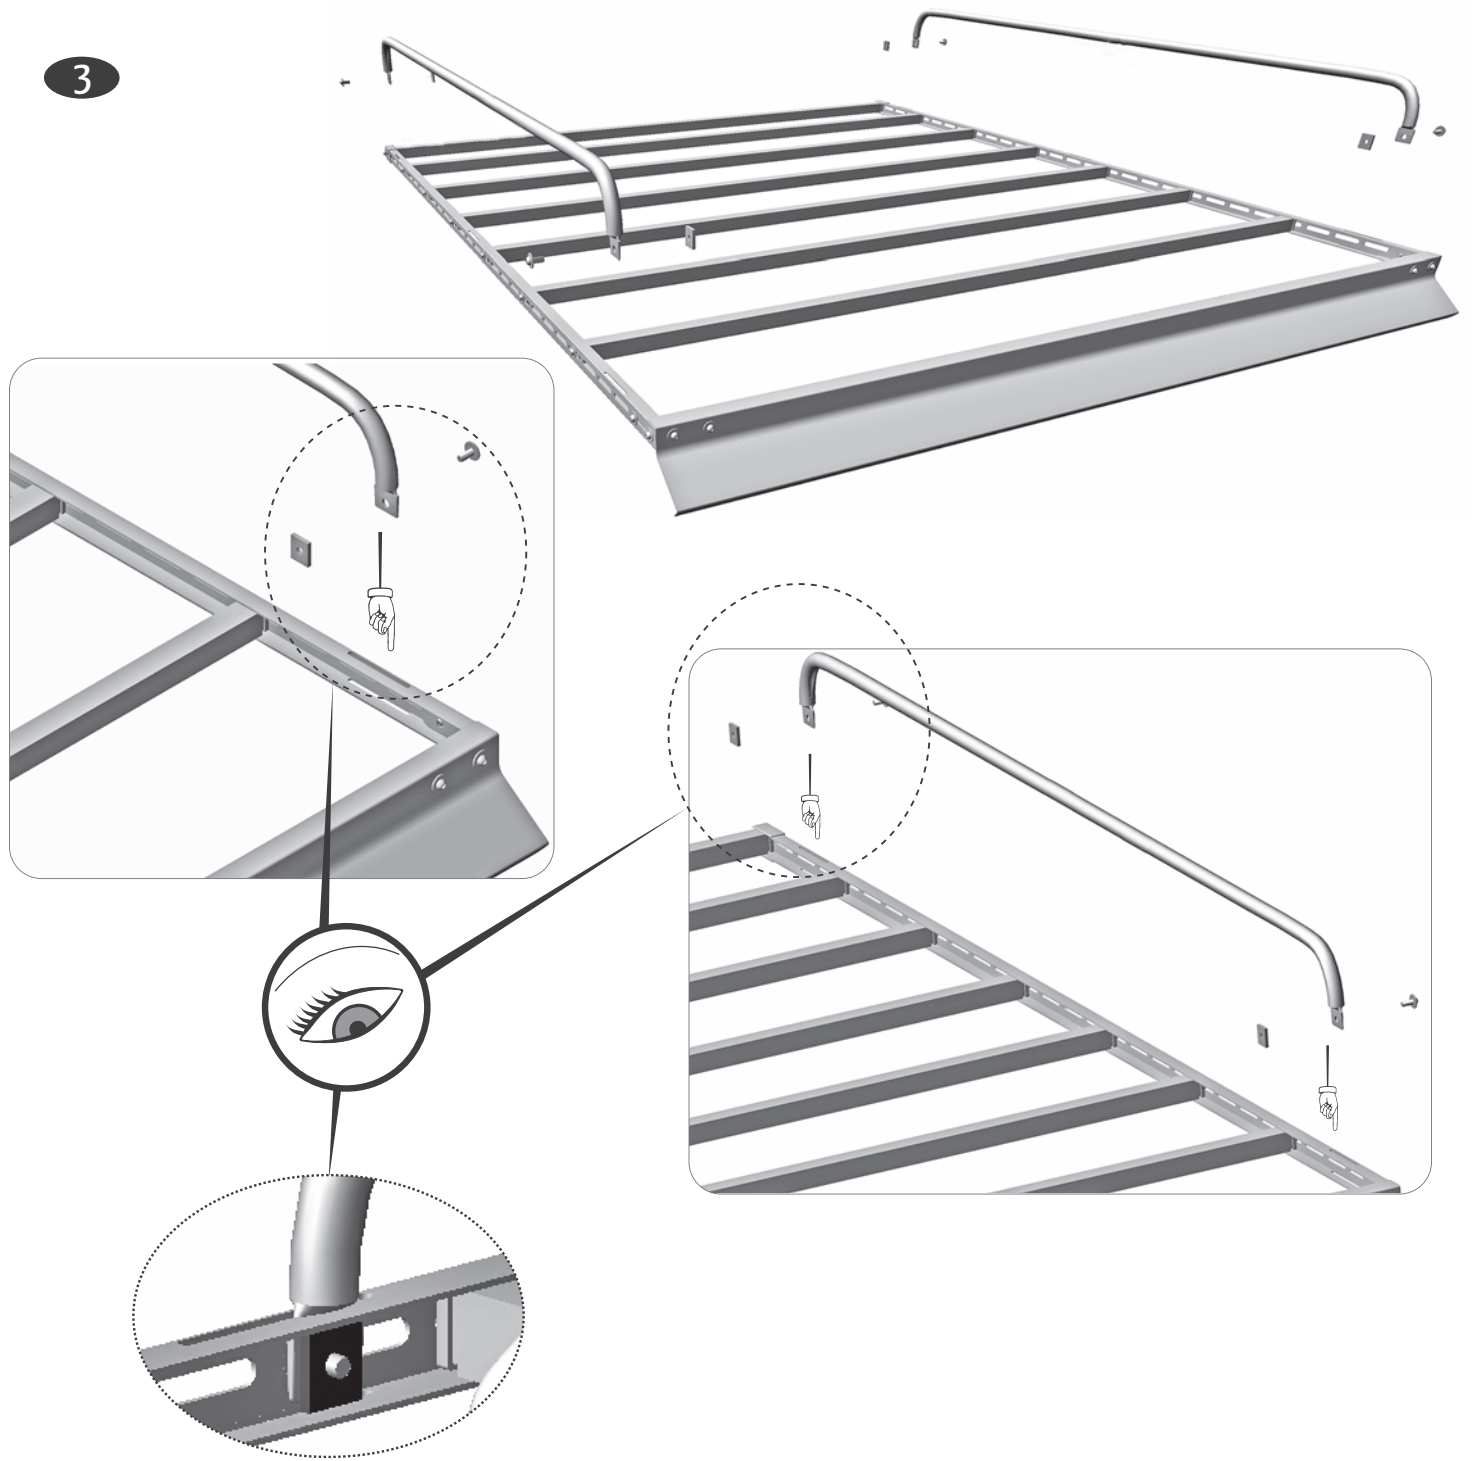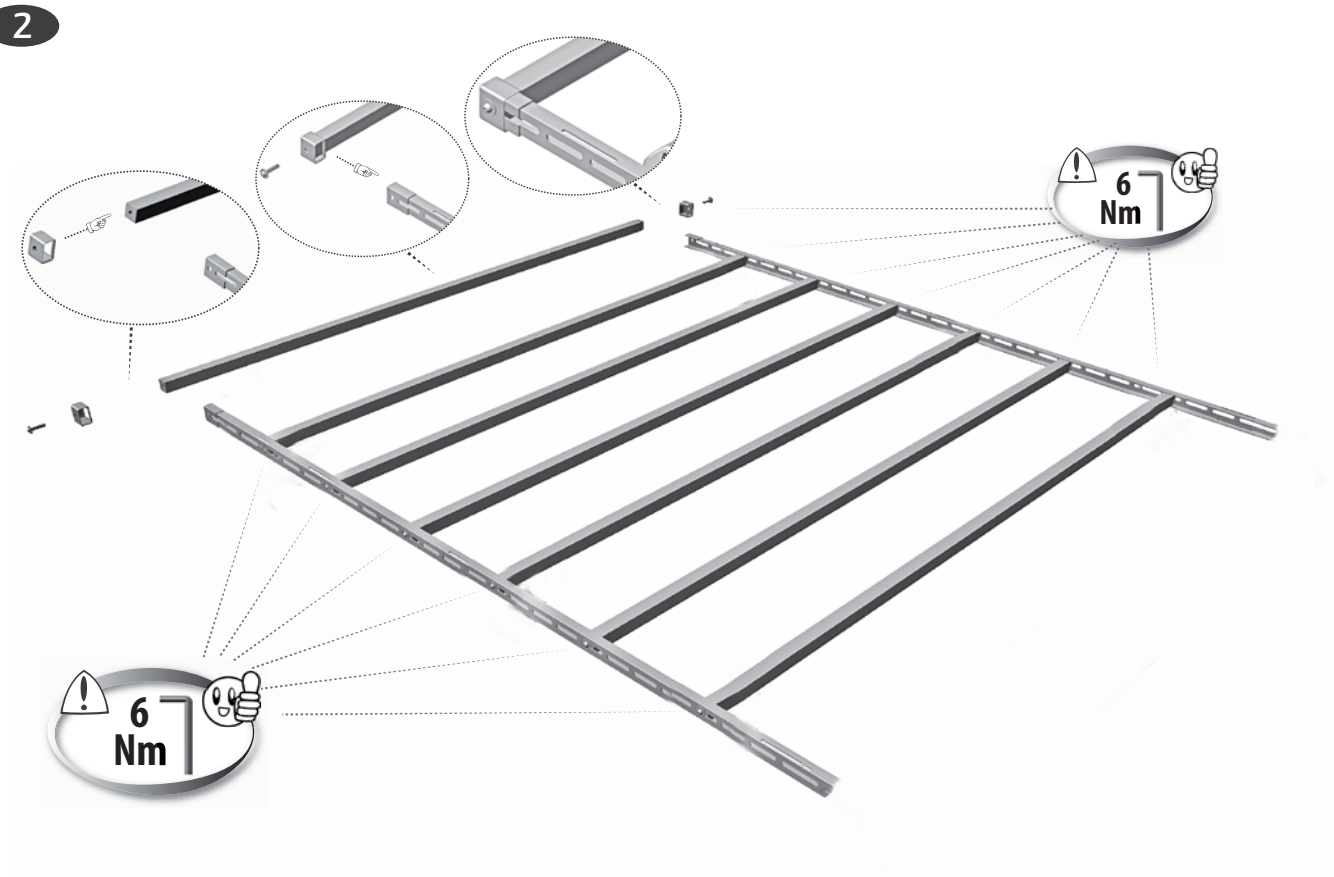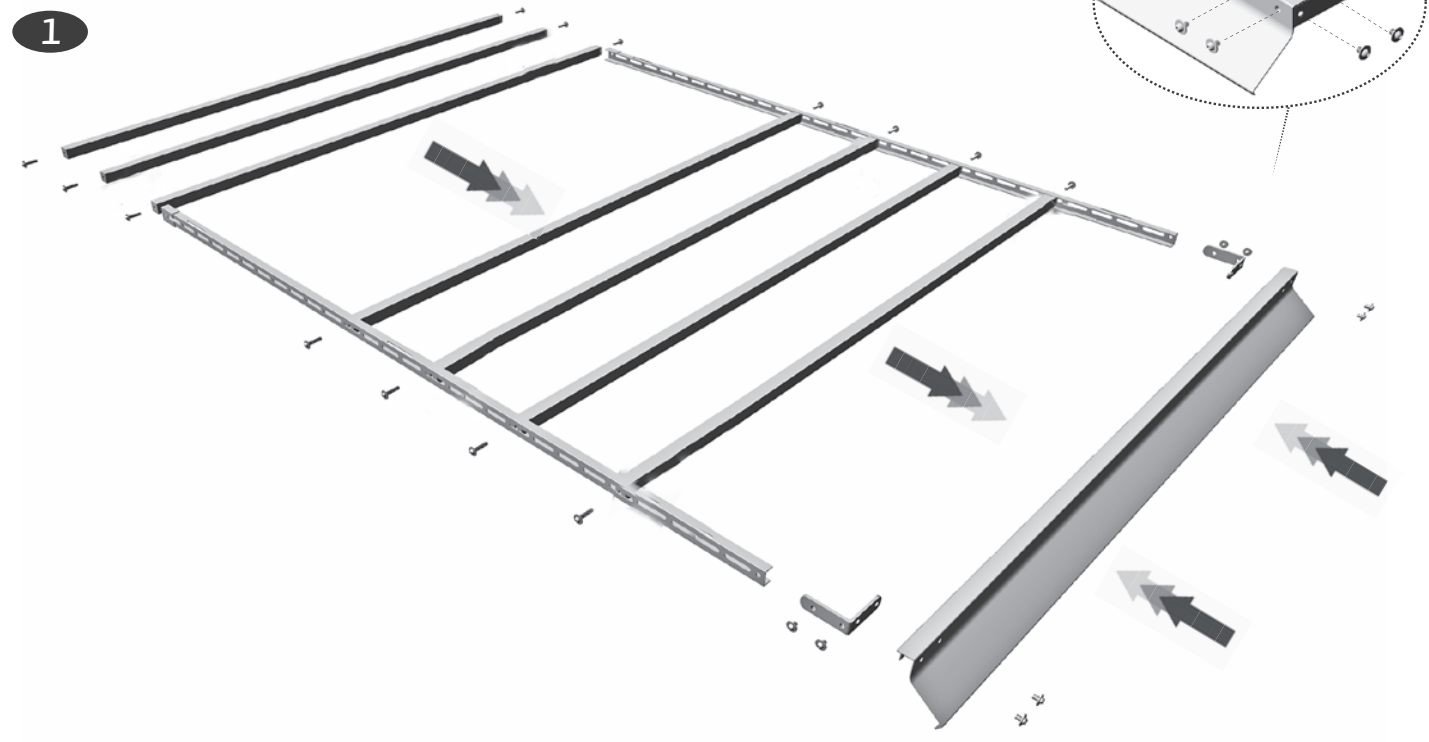

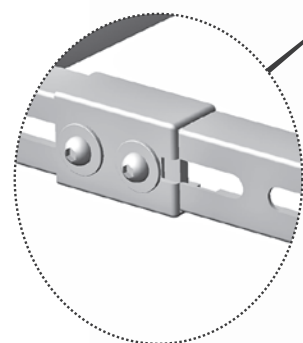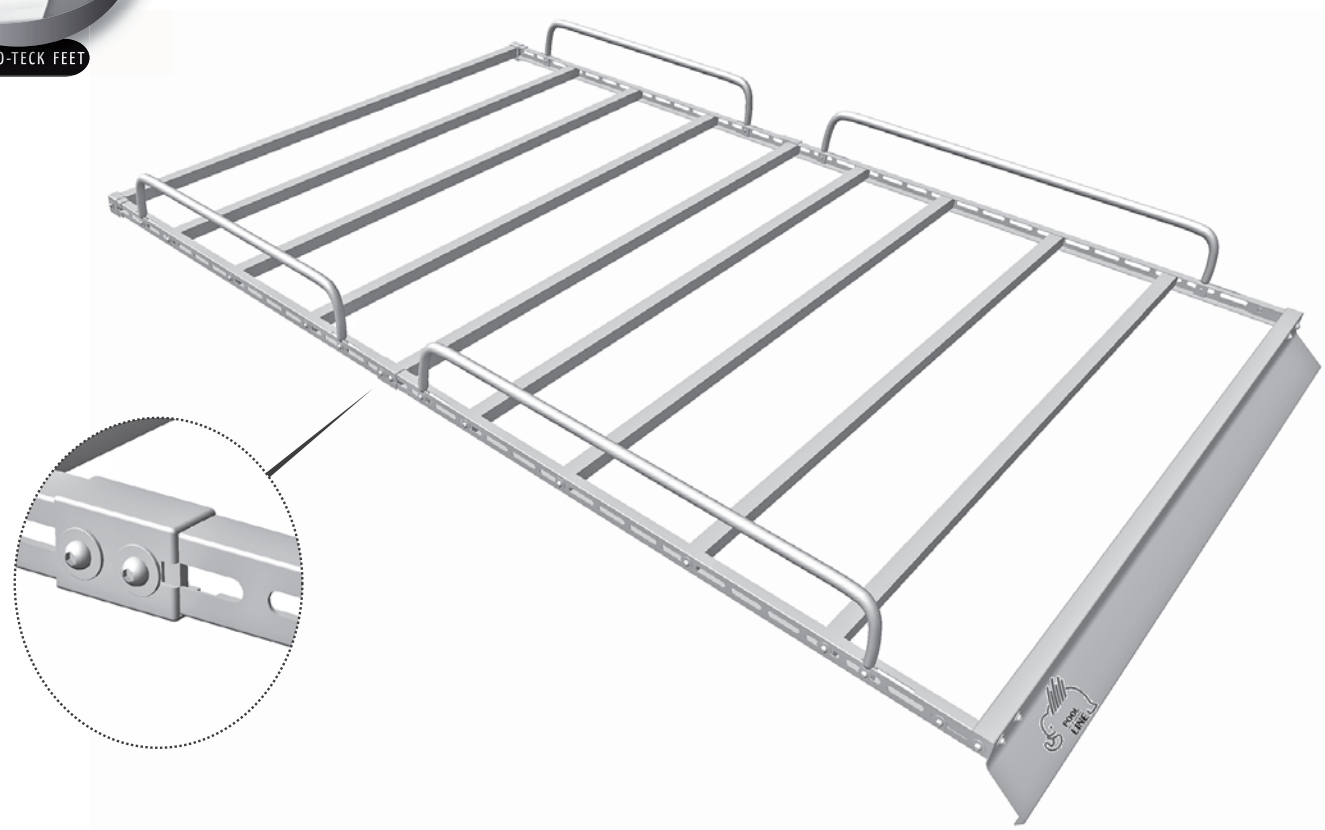

7

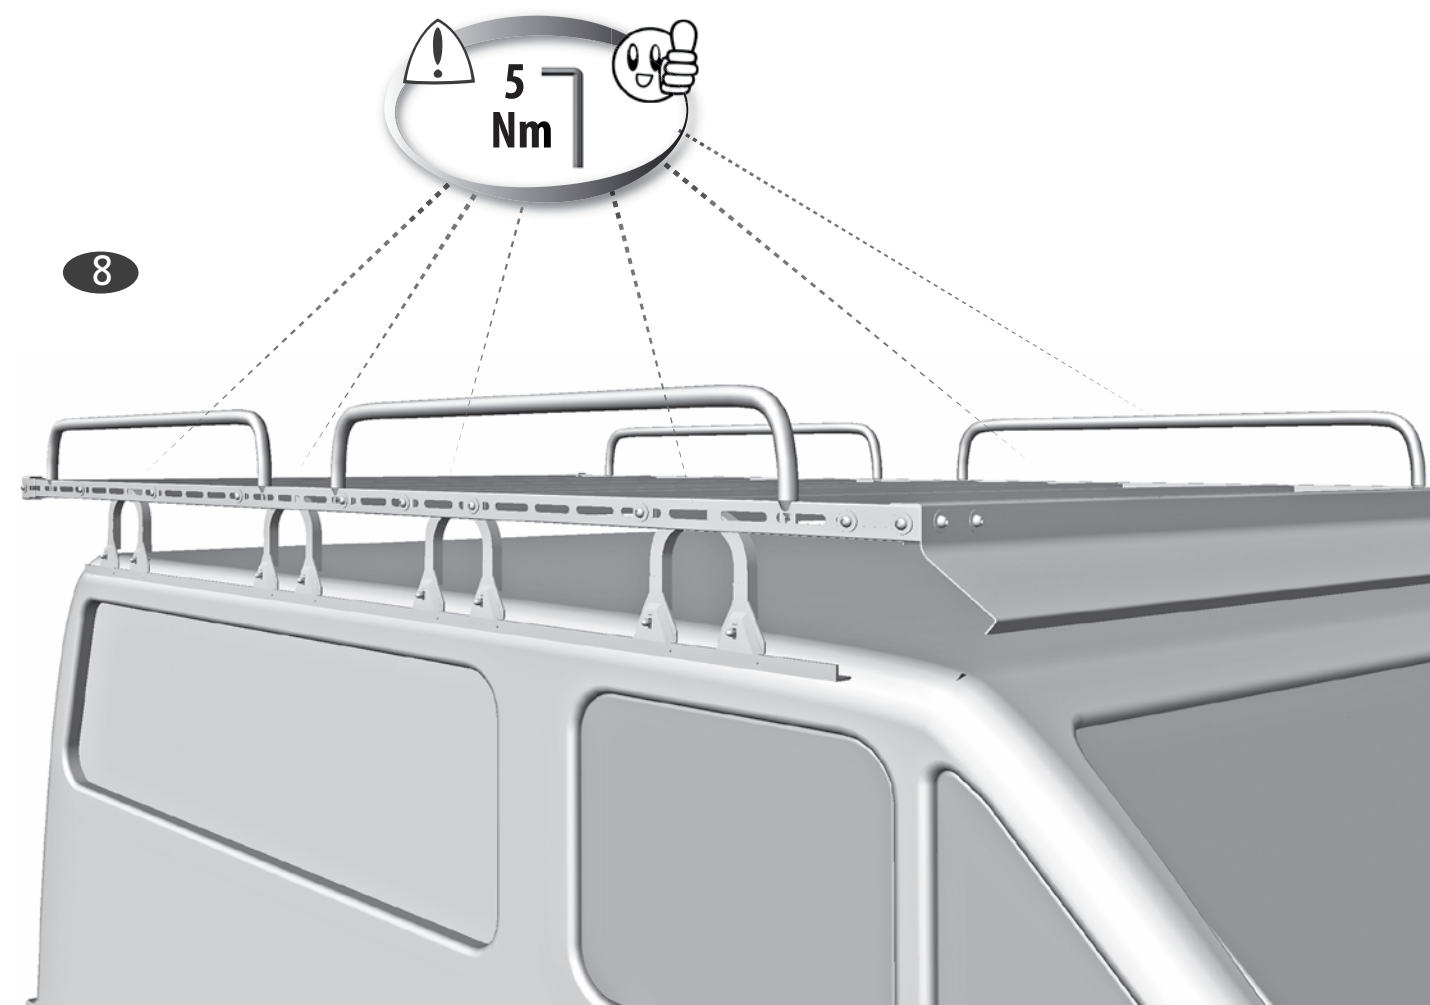
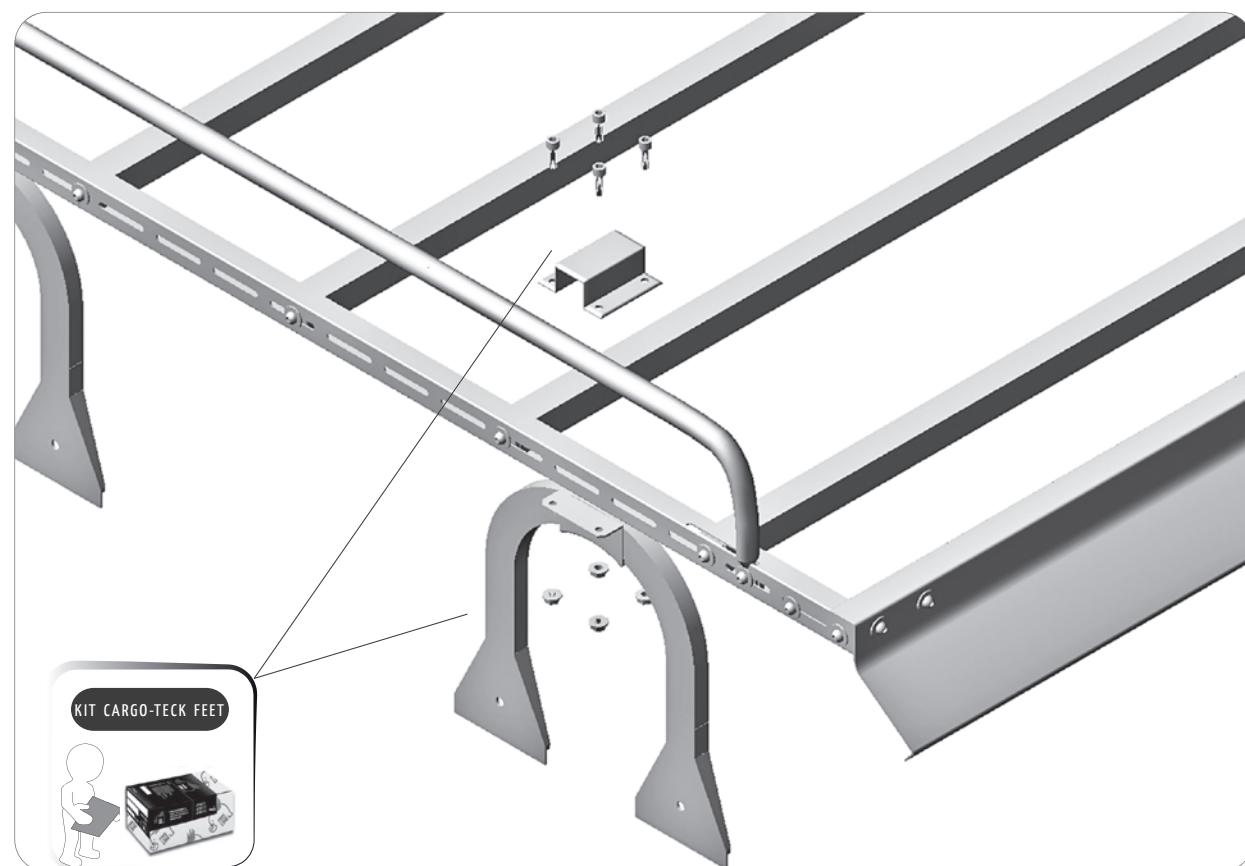


8











- FORD TRANSIT VI L2 H2 (2010->)
- FORD TRANSIT VI L2 H3 (2010->)

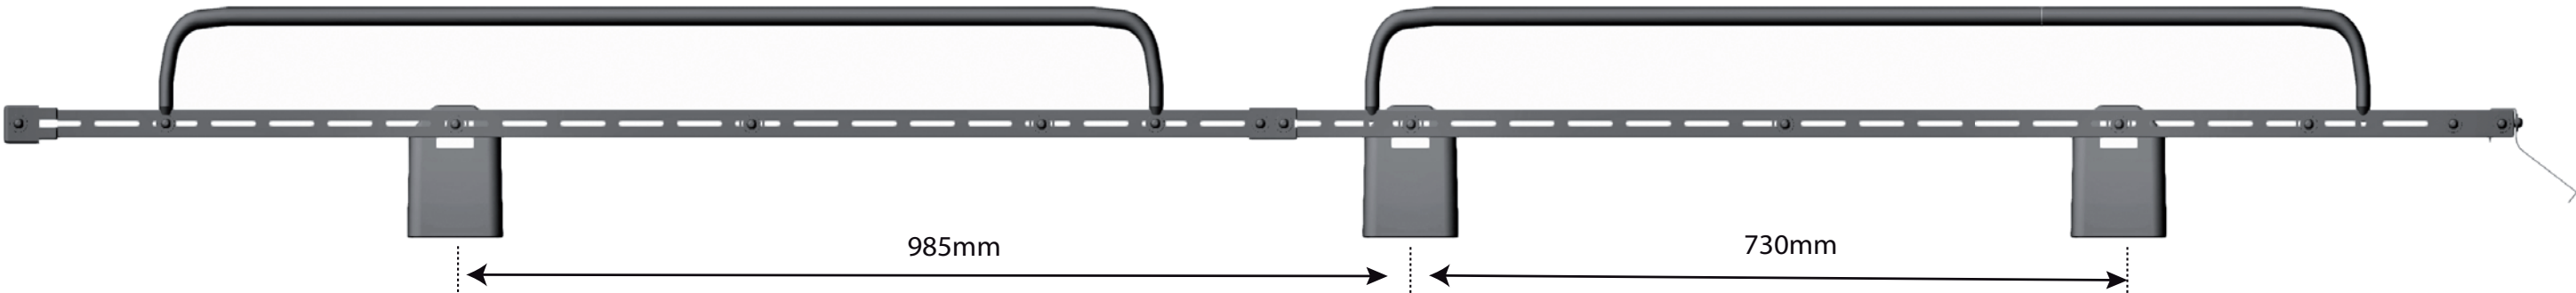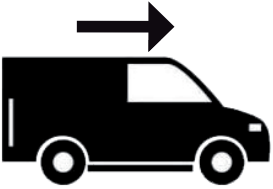

- RESTO MODELOS CON VIERTEAGUAS

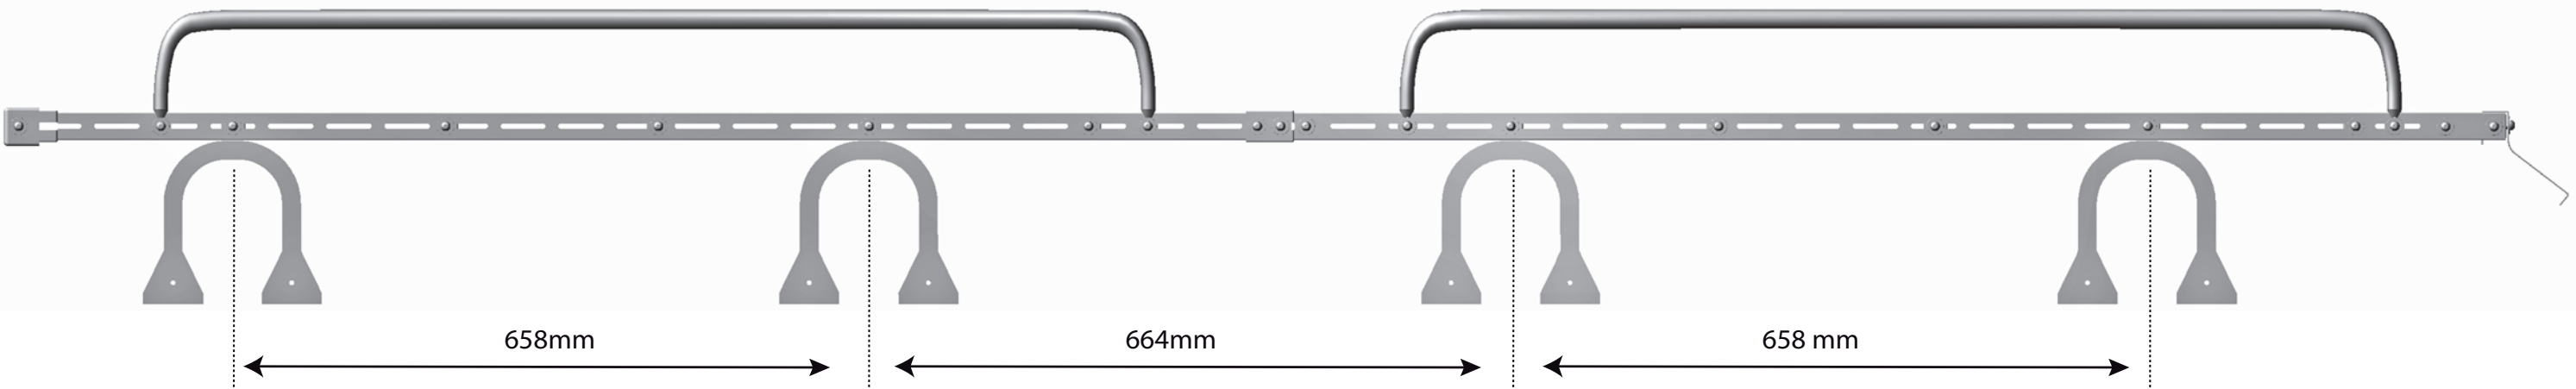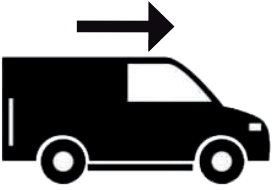


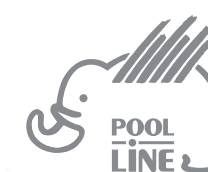

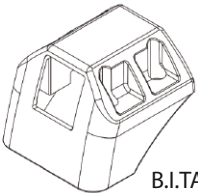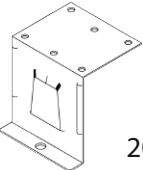N		Q
1	 B.I.TAP66	6
2	 202	6
3	 G3	6
4	 CH	6
5		1


N	BO0061	Q
8	 DIN912 M6x20	24
9	 DIN125 Ø6	24
N	BO0005 x3	Q
10	 DIN9021	6
11	 DIN912 M6x20	6
N	BO0010 x3	Q
10	 DIN125 Ø 8	6
11	 ISO7380 M8x20	6

E	Instrucciones de montaje	Kit de fijación
C	Instruccions de muntatge	Kit de fixació
GB	Assembly instructions	Fixation Kit
F	Instruction de montage	Kit fixation
D	Montageanleitung	Stützfuß-Kit
PT	Instruções de montagem	Kit fixação
I	Istruzioni di montaggio	Kit di fissaggio
PL	Instrukcja montażu	Element mocujący
CZ	Montážní návod	Fixační kit
HU	Szerelési Utasítás	Rögzítő készlet
RO	Instructiuni de montaj	Kit de fixare
HR	Detaljne upute	Kit za montažu
TU	Öncelikle montaj	Montaj kiti

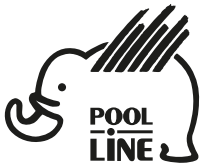



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1043

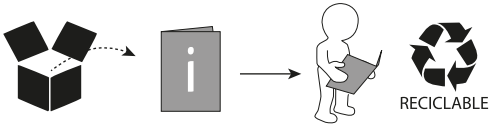

121791

Rv: 04/2024

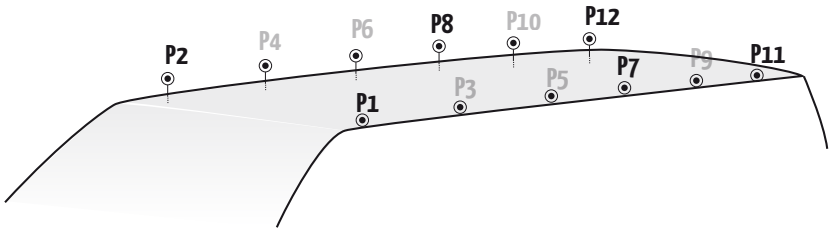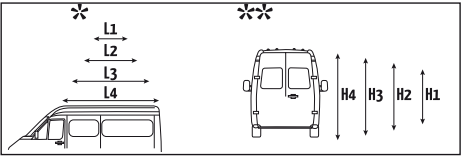

	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
FIAT																
Talento II	L1	H1	16-	B00005	202	202					202	202			202	202
Talento II	L2	H2	16-	B00005	202	202					202	202			202	202
Ford																
Transit VI	L2	H2	14-	B00010	202	202					202	202			202	202
Transit VI	L2	H3	14-	B00010	202	202					202	202			202	202
Transit VI	L3	H2	14-	B00010	202	202					202	202			202	202
Transit VI	L3	H3	14-	B00010	202	202					202	202			202	202
Transit VI	L4	H2	14-	B00010	202	202					202	202			202	202
Transit VI	L4	H3	14-	B00010	202	202					202	202			202	202
Mercedes																
Sprinter II W906	L1	H1	06-	B00005	202+CH	202+CH					202+CH	202+CH			202+CH	202+CH
Sprinter II W906	L1	H2	06-	B00005	202+CH	202+CH					202+CH	202+CH			202+CH	202+CH
Sprinter II W906	L2	H1	06-	B00005	202+CH	202+CH					202+CH	202+CH			202+CH	202+CH
Sprinter II W906	L2	H2	06-	B00005	202+CH	202+CH					202+CH	202+CH			202+CH	202+CH
Sprinter II W906	L2	H3	06-	B00005	202+CH	202+CH					202+CH	202+CH			202+CH	202+CH
Sprinter II W906	L3	H2	06-	B00005	202+CH	202+CH					202+CH	202+CH			202+CH	202+CH
Sprinter II W906	L3	H3	06-	B00005	202+CH	202+CH					202+CH	202+CH			202+CH	202+CH
Sprinter II W906	L4	H2	06-	B00005	202+CH	202+CH					202+CH	202+CH			202+CH	202+CH
NISSAN																
NV300	L1	H1	16-22	B00005	202	202					202	202			202	202
NV300	L2	H2	16-22	B00005	202	202					202	202			202	202
PRIMASTAR	L1	H1	22-	B00005	202	202					202	202			202	202
PRIMASTAR	L2	H2	22-	B00005	202	202					202	202			202	202
Opel																
Vivaro B	L1	H1	14-19	B00005	202	202					202	202			202	202
Vivaro B	L2	H1	14-19	B00005	202	202					202	202			202	202
Renault																
Trafic III	L1	H1	14-	B00005	202	202					202	202			202	202
Trafic III	L2	H1	14-	B00005	202	202					202	202			202	202
Volkswagen																
Crafter 30	L1	H1	06-17	B00005	202+CH	202+CH					202+CH	202+CH			202+CH	202+CH
Crafter 35	L2	H1	06-17	B00005	202+CH	202+CH					202+CH	202+CH			202+CH	202+CH
Crafter 35	L2	H2	06-17	B00005	202+CH	202+CH					202+CH	202+CH			202+CH	202+CH
Crafter 35-50	L3	H2	06-17	B00005	202+CH	202+CH					202+CH	202+CH			202+CH	202+CH
Crafter 35-50	L4	H2	06-17	B00005	202+CH	202+CH					202+CH	202+CH			202+CH	202+CH

