



- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net




200 KG.
MAX.

Nº HOMOLOGACIÓN: E9 26R-03.1042




123816





Rv: 06/2024

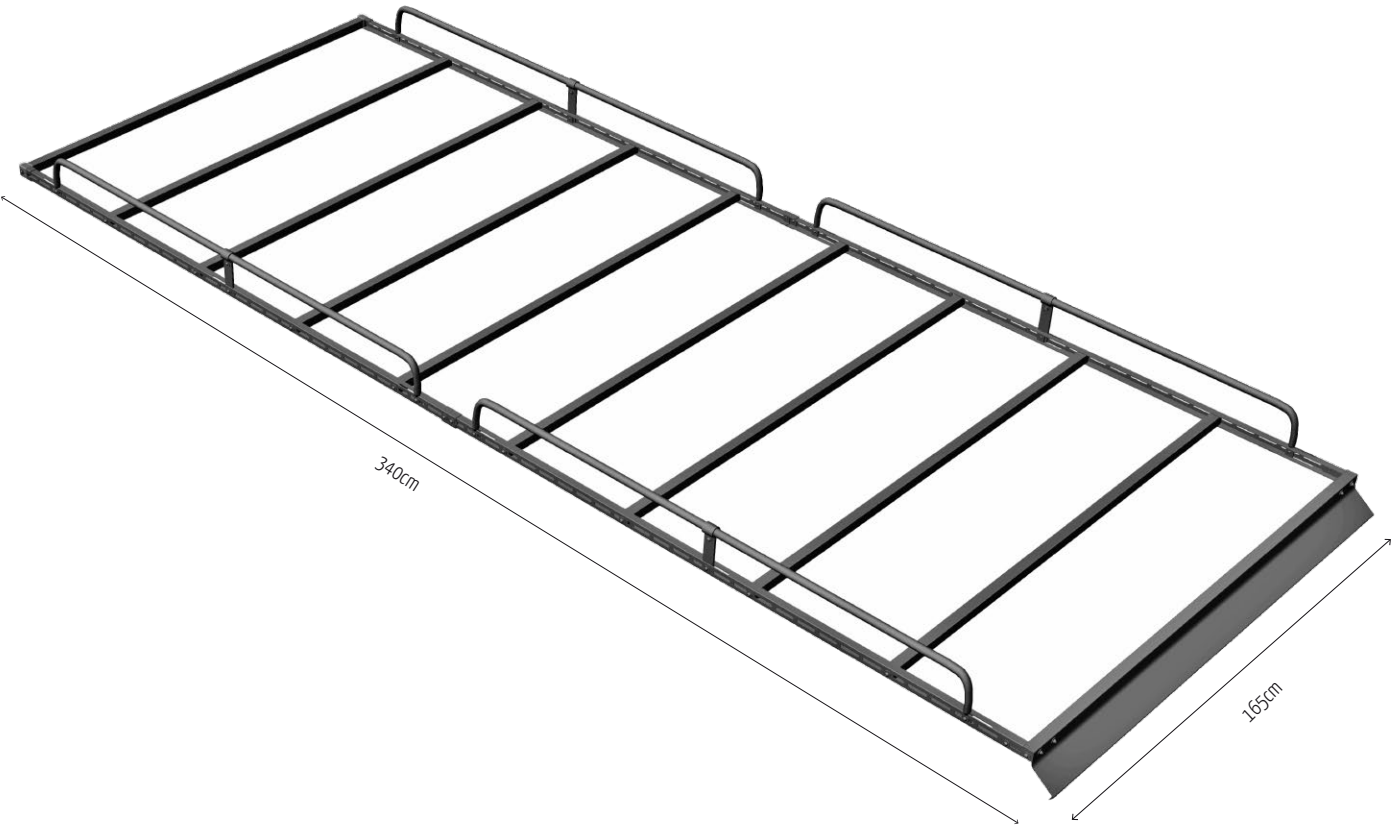


Limpieza pre-instalación
Pre-installation cleaning

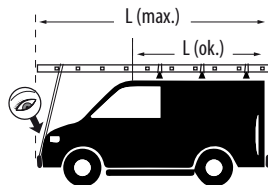



Revisar par de apriete
Check torque

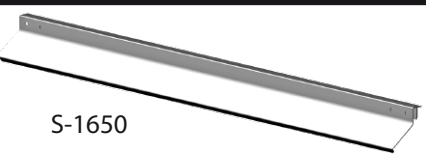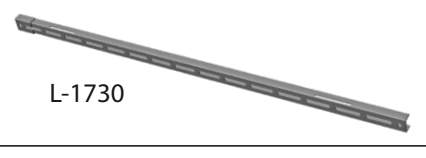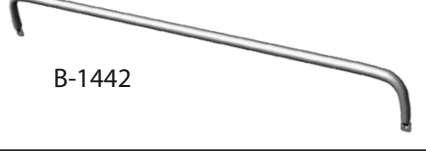N		Q
1	 S-1650	1
2	 L-1730	4
3	 B-1442	4
4	 T-1635	9
7		18
8		2
9		2
10		10
11		1
12	 CHA-M8	16
13	 ISO 7380 M8x30	18
14	 ISO 7380 M8x16	24
15	 DIN 125 Ø 8	42
16		8
17	 DIN 603 M6x12	4
18	 DIN 6923 M6	4


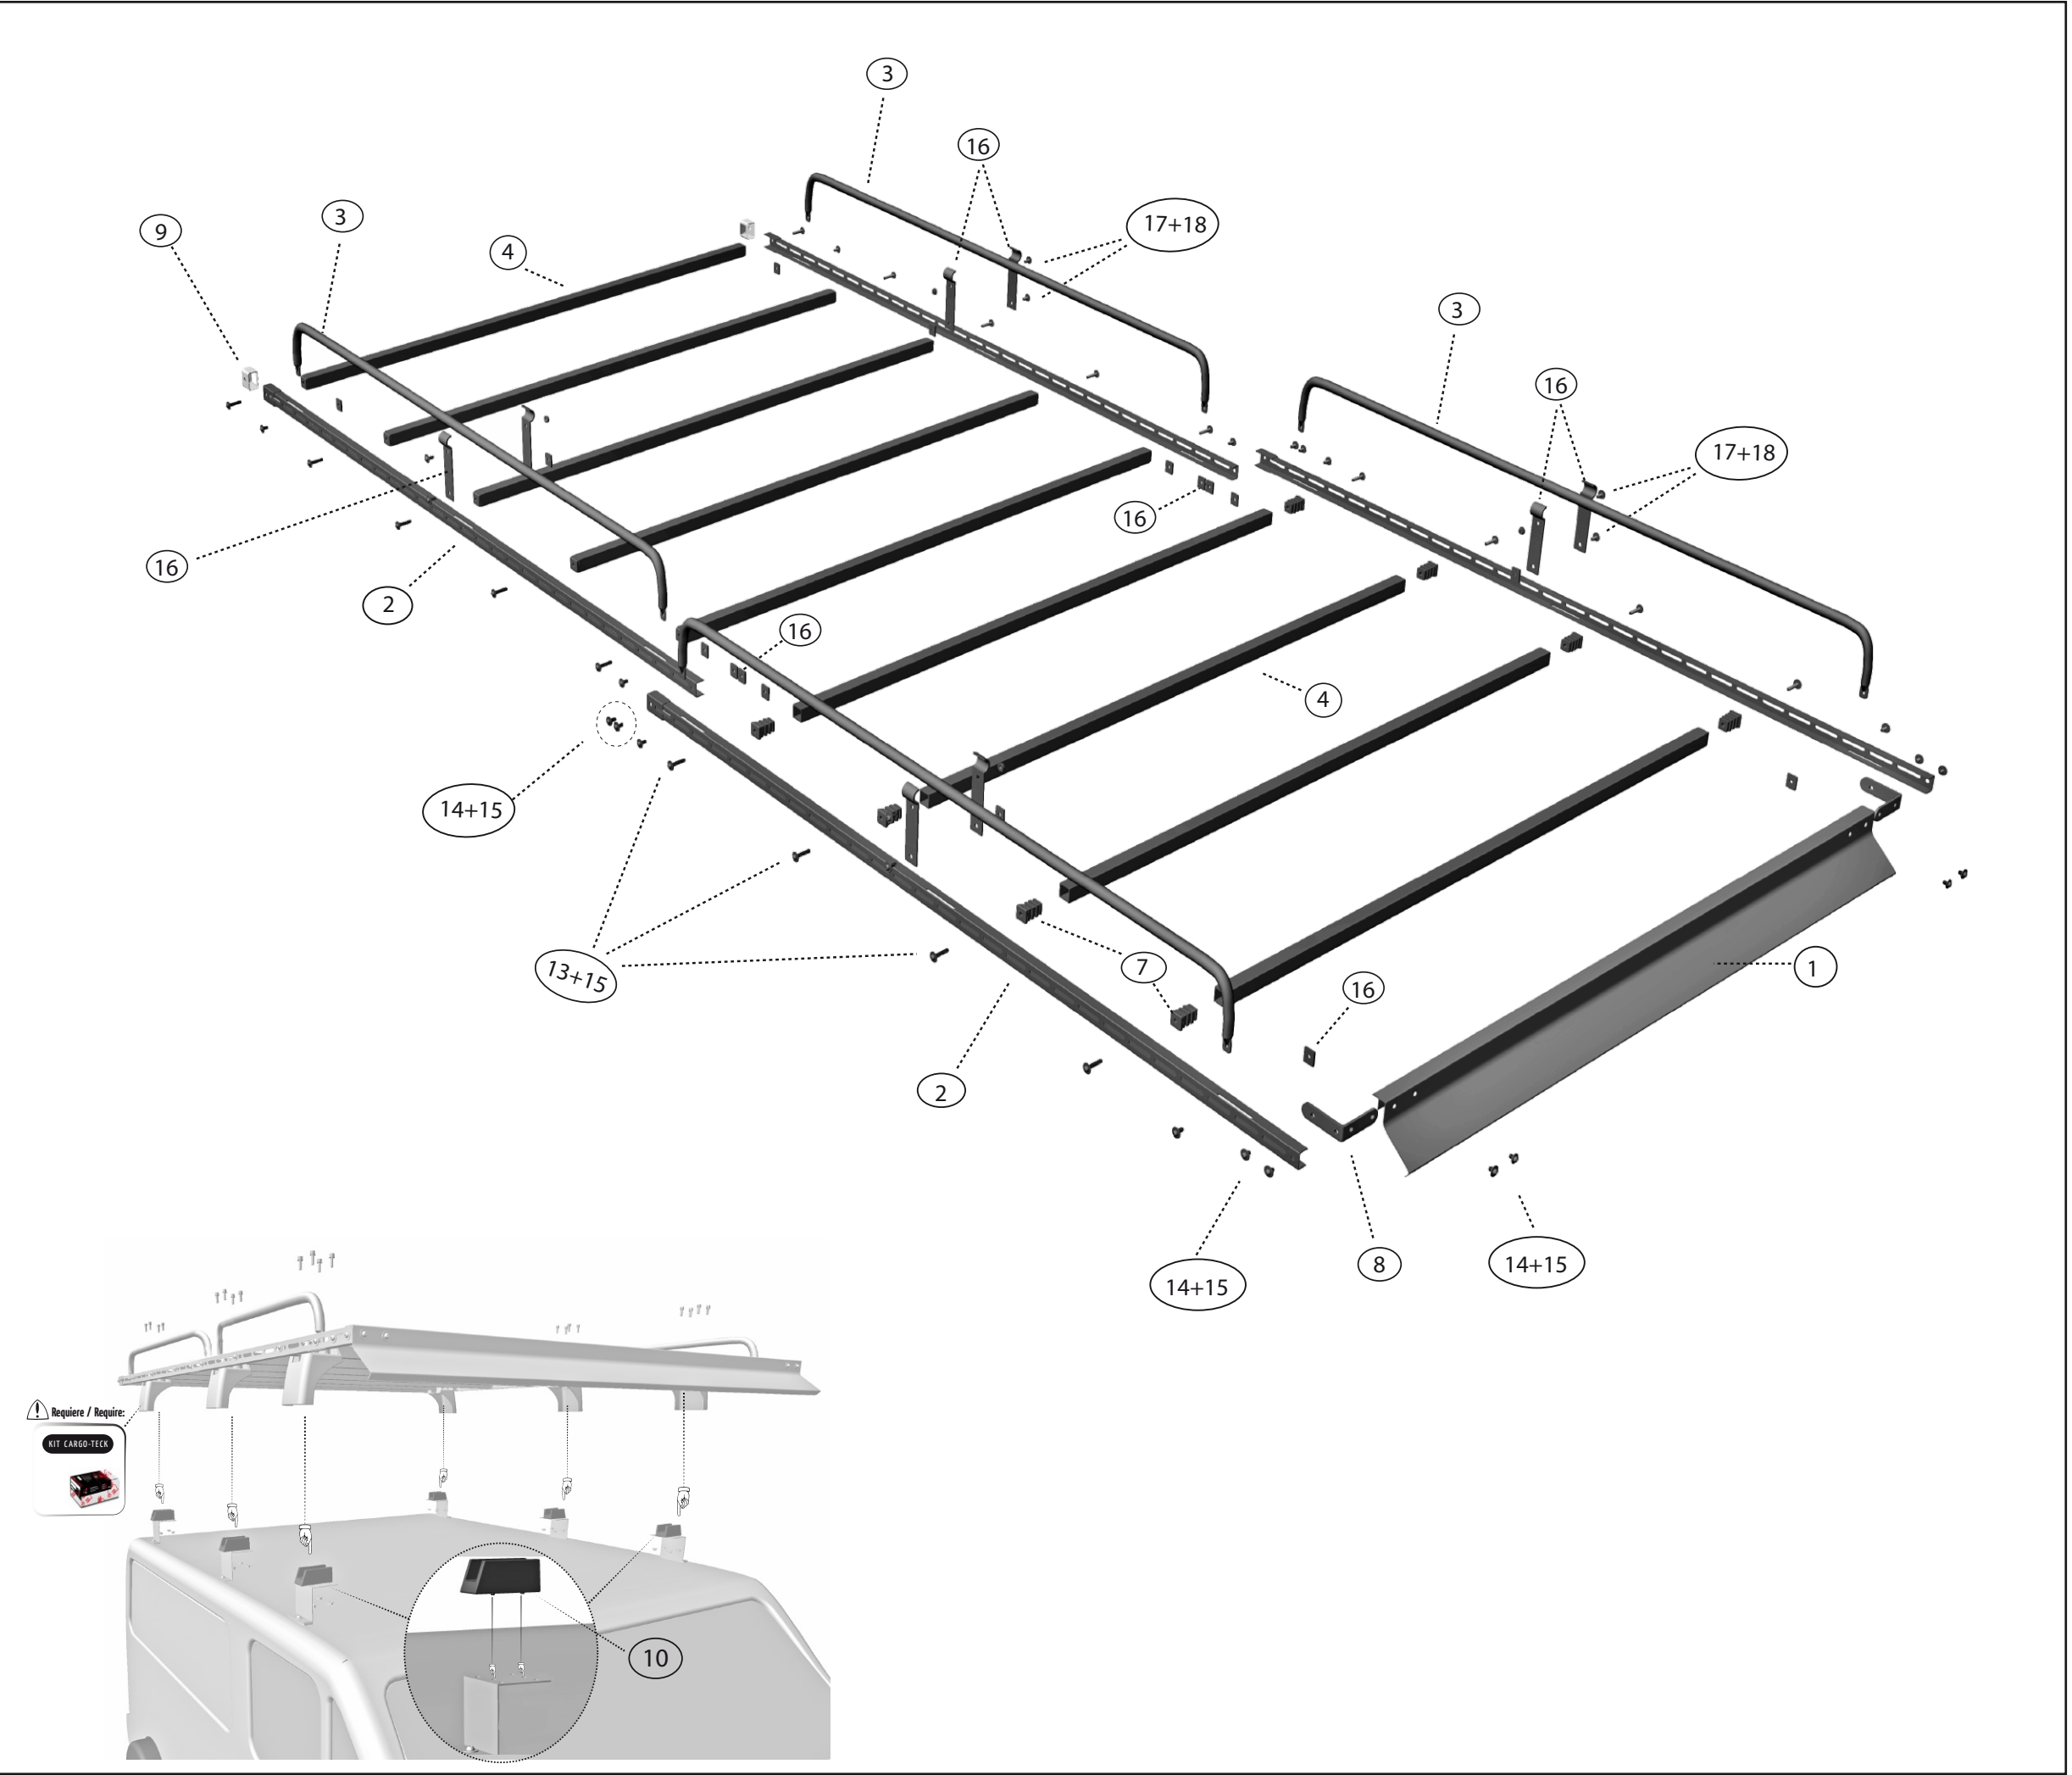




• IVECO DAILY VI (9m) 3520 - H1 (2014->)

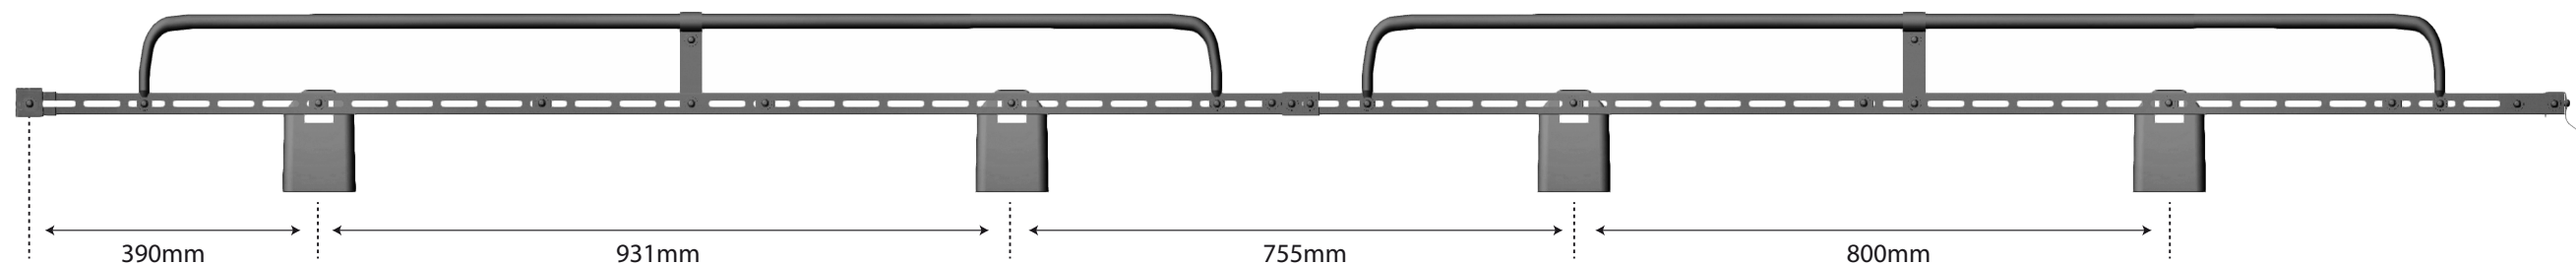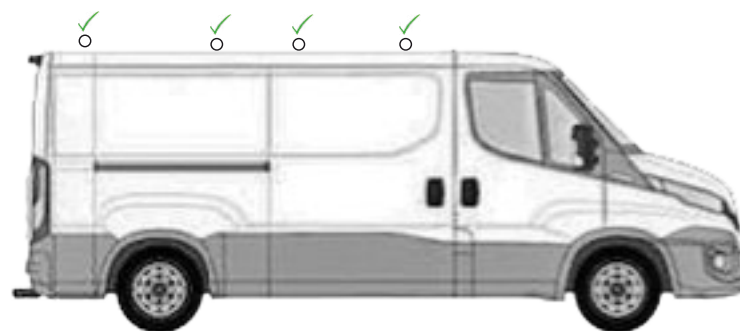


• CITROËN JUMPER L2 H1 (2006->)
• FIAT DUCATO L2 H1 (2006->)
• OPEL MOVANO C L2 H1 (2021->)
• PEUGEOT BOXER L2 H1 (2006->)

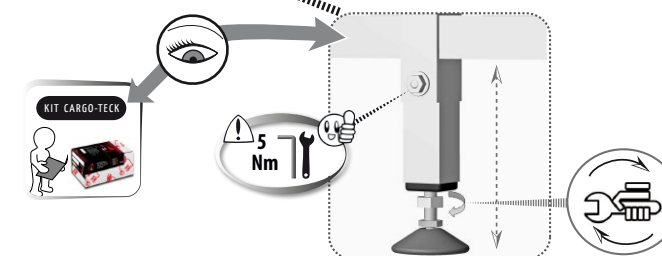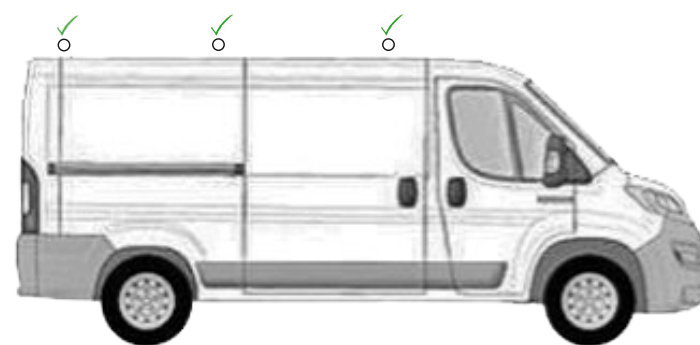






- NISSAN NV300 L2H1 (2016->)
- FIAT TALENTO II L2H1 (2016->)
- OPEL VIVARO B L2 H1 (2014->)
- RENAULT TRAFIC III L2 H1 (2014->)

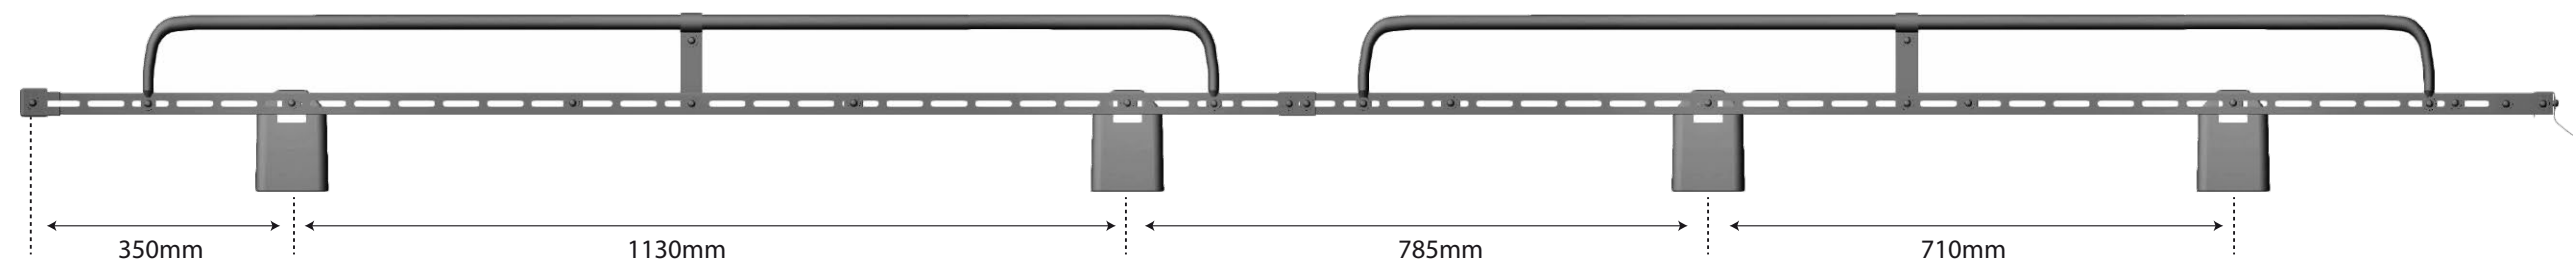

- NISSAN PRIMASTAR L2 H1 (02 - 14)
- OPEL VIVARO A L2 H1 (02 - 14)
- RENAULT TRAFIC II L2 H1 (02 - 14)

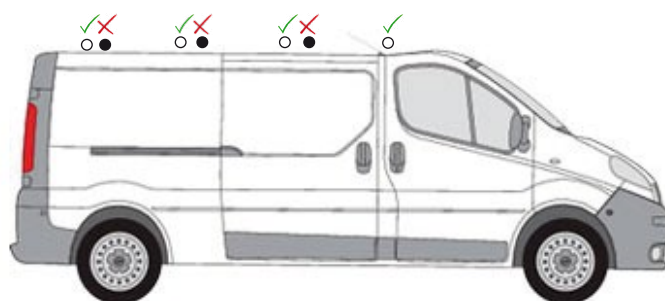


- NISSAN INTERSTAR L3 H2/H3 (1997 - 2010)
- OPEL MOVANO A L3 H2/H3 (1997 - 2010)
- RENAULT TRAFIC II L3 H2/H3 (1997 - 2010)

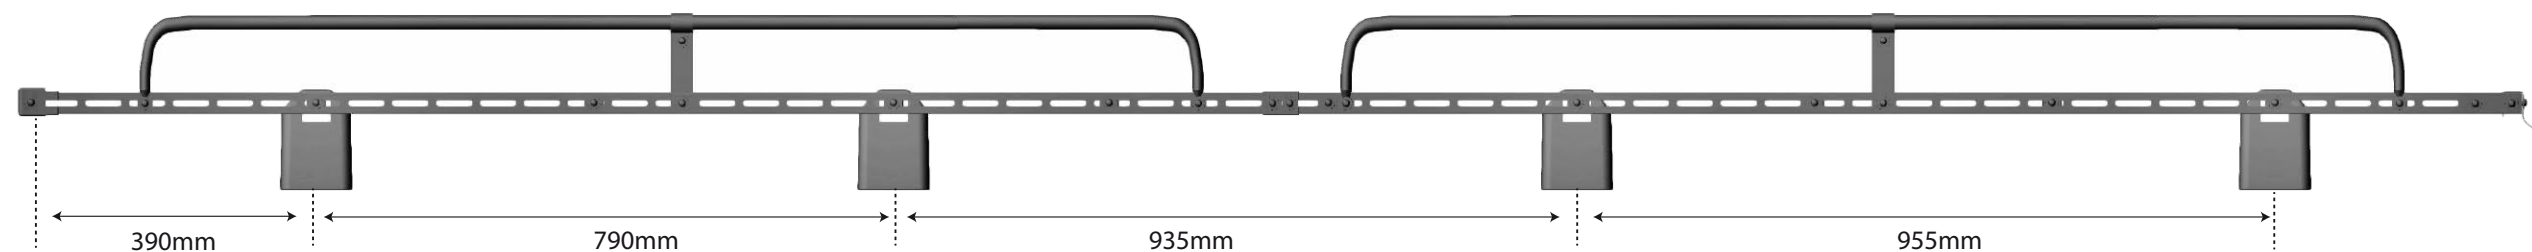
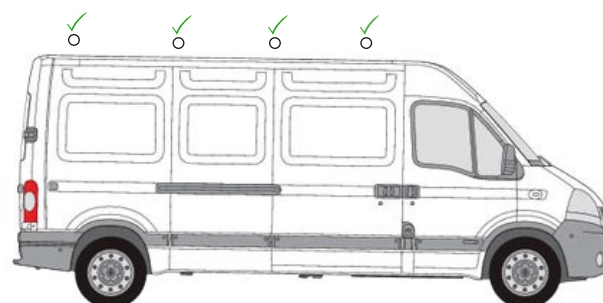





- MERCEDES SPRINTER II L2 W906 / W907
- VOLKSWAGEN CRAFTER L2 / L3 (2006->)

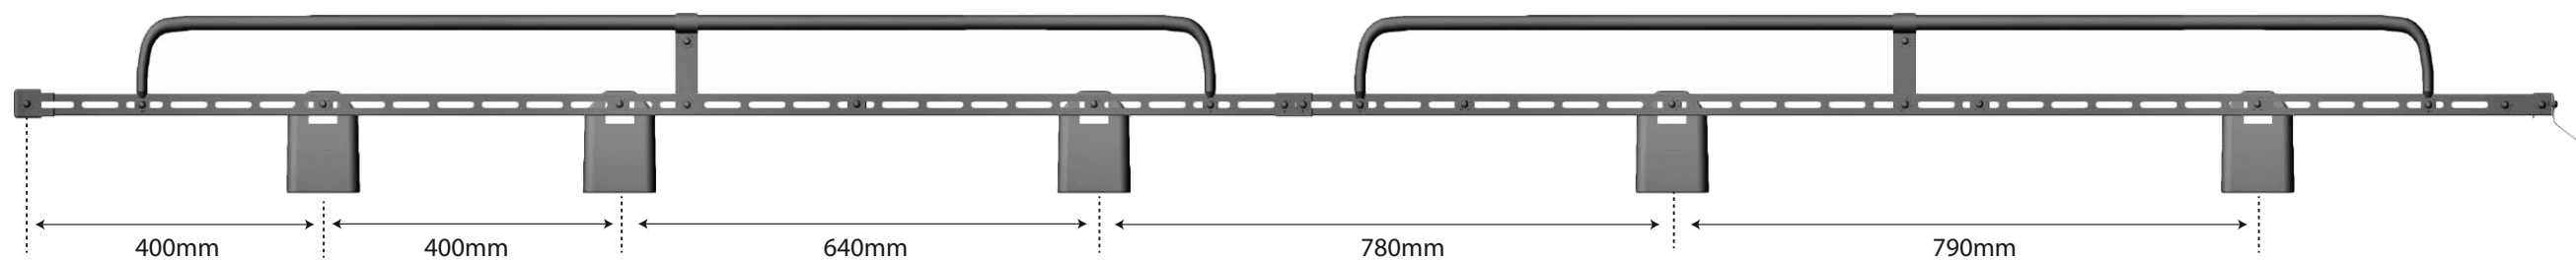


- FIAT DUCATO I L2-H2 (81-94)
- NISSAN TRADE L2-H2 (87-01)
- TOYOTA HIACE L2-H1 (JP-h200) (2013->)

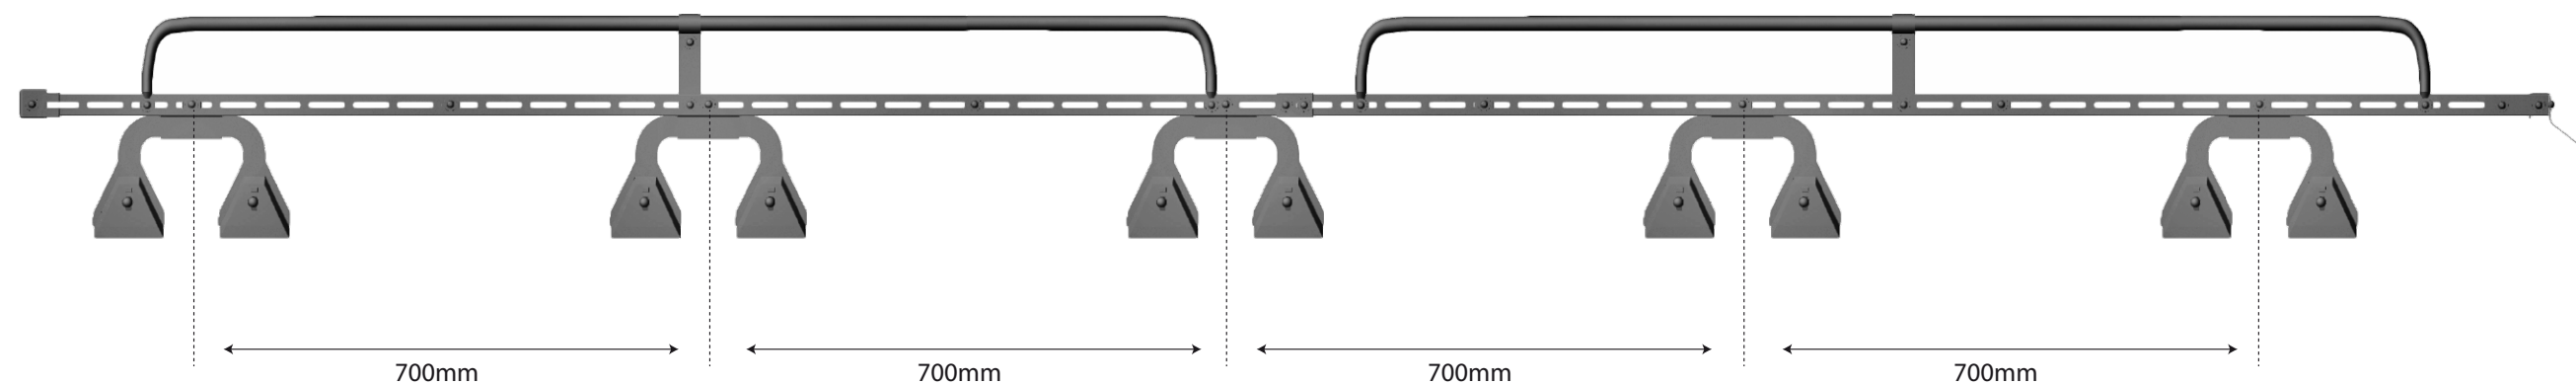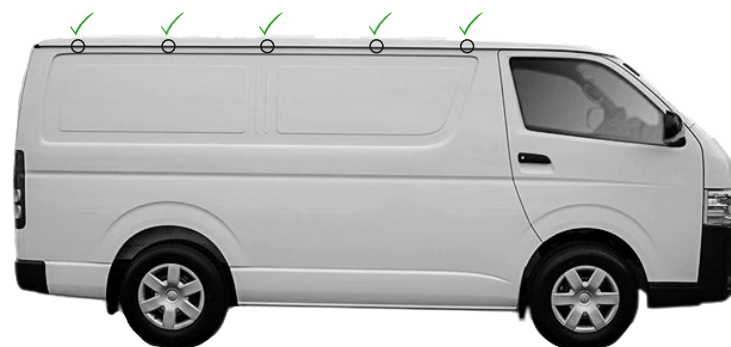


1

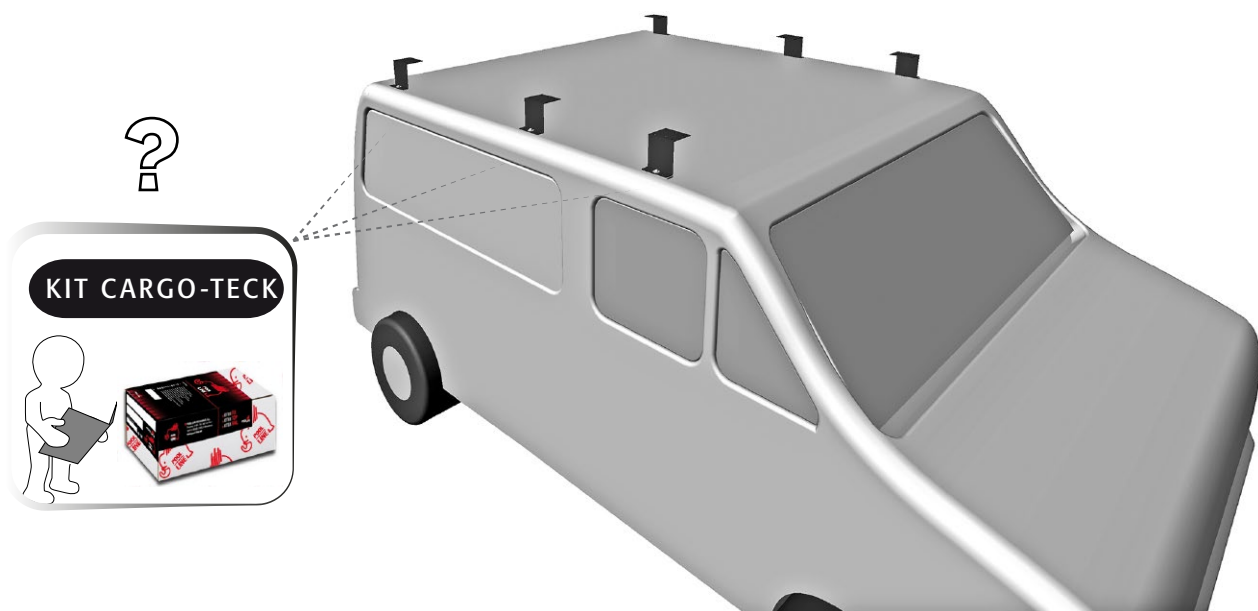

2


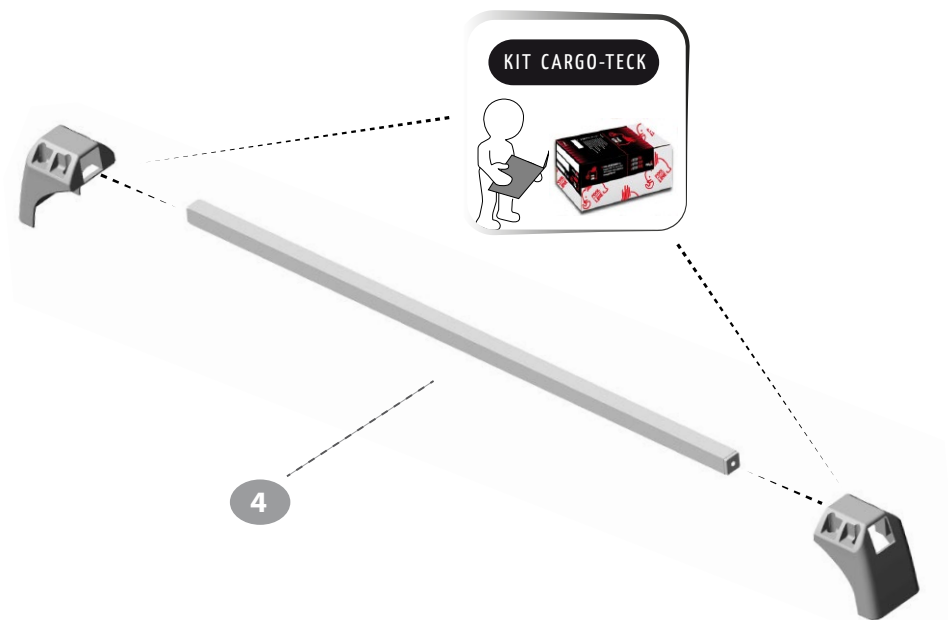


3

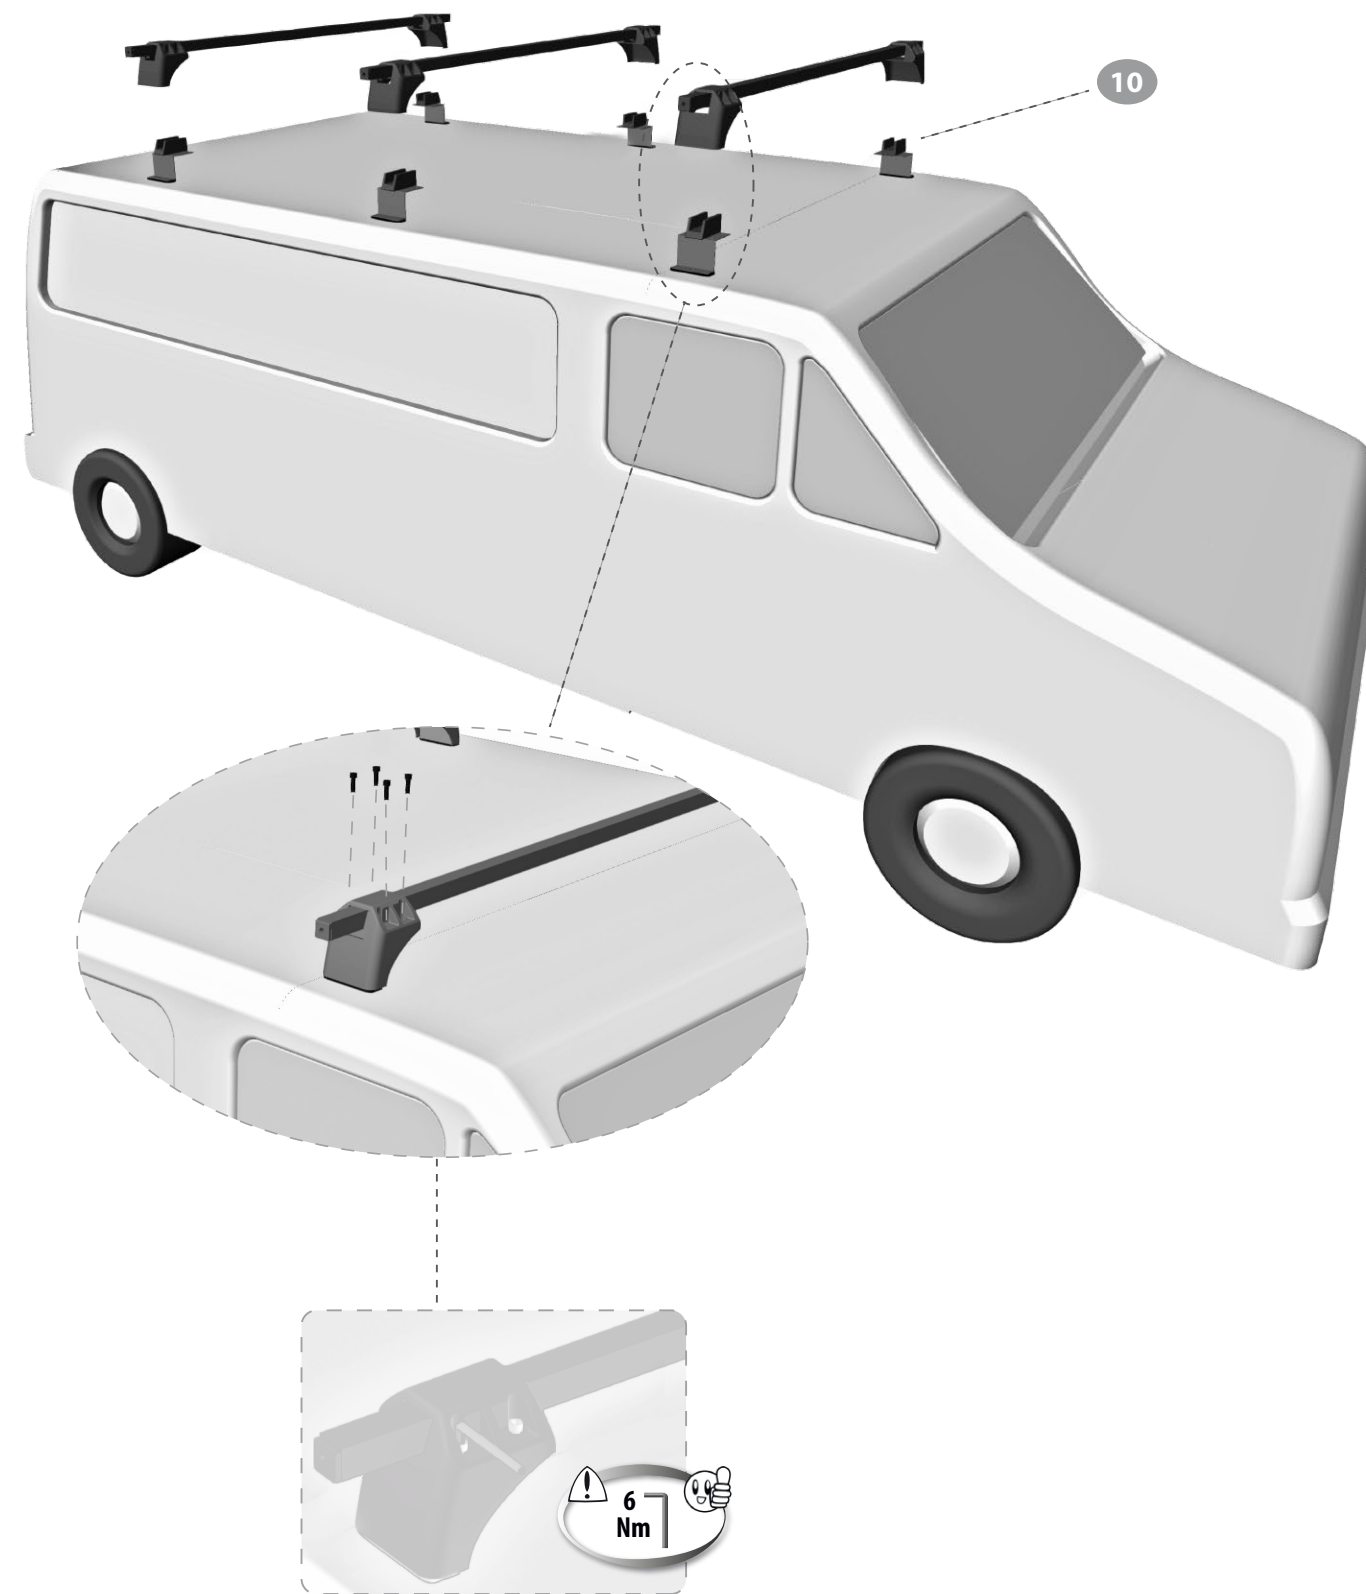





5

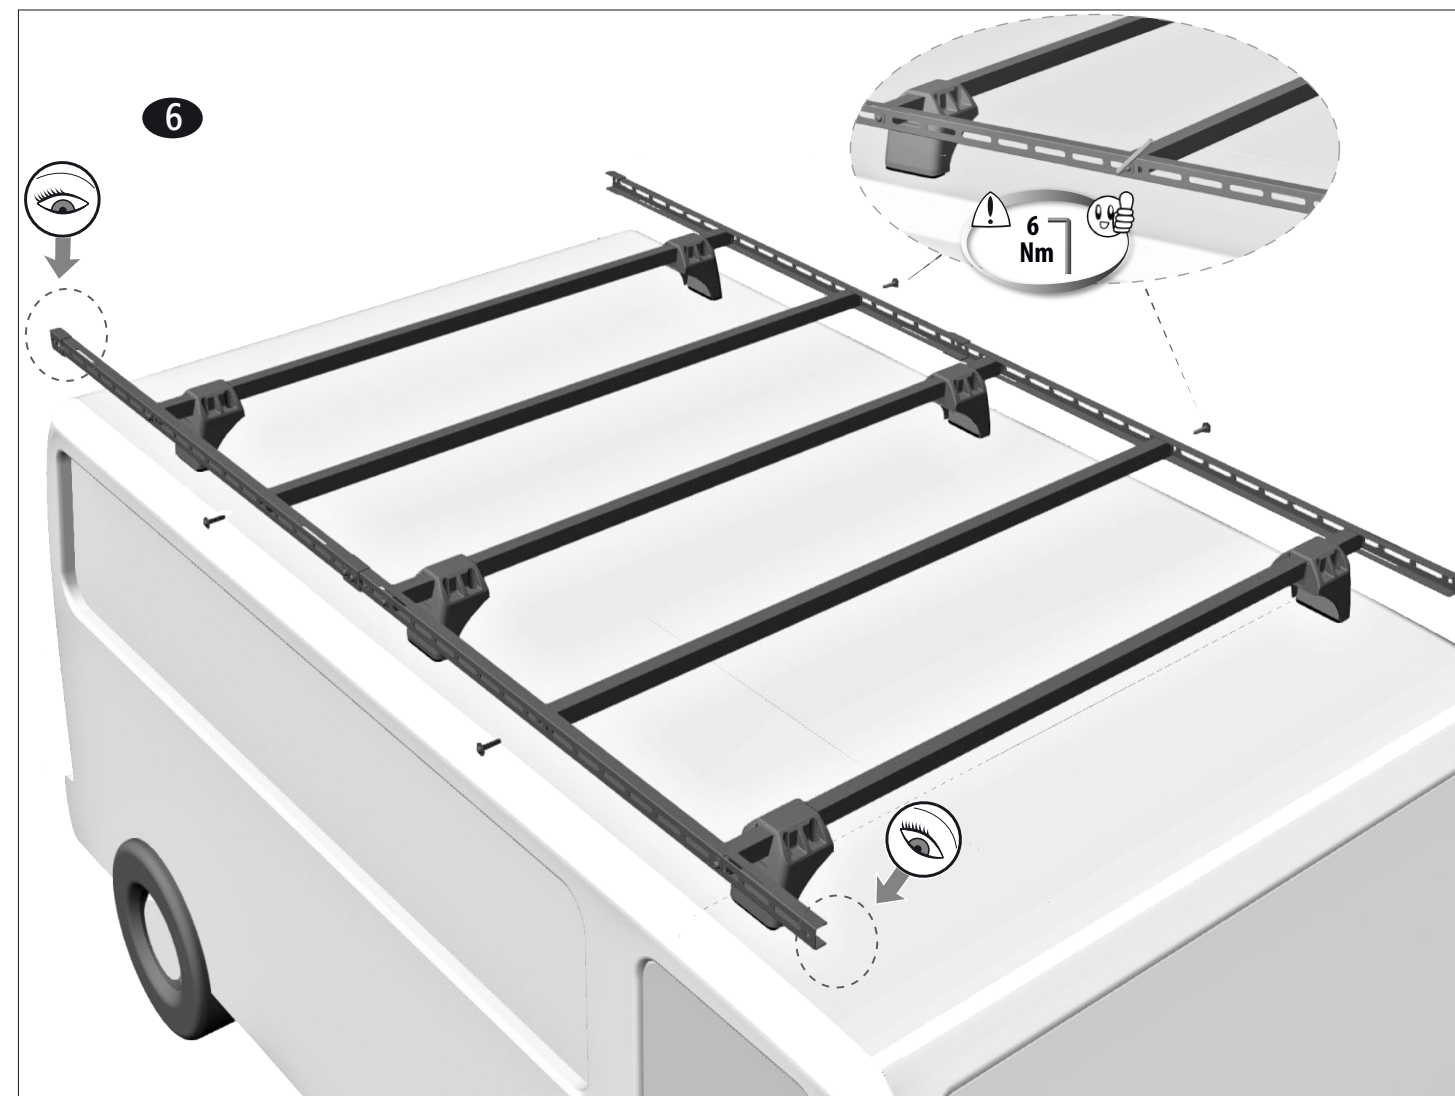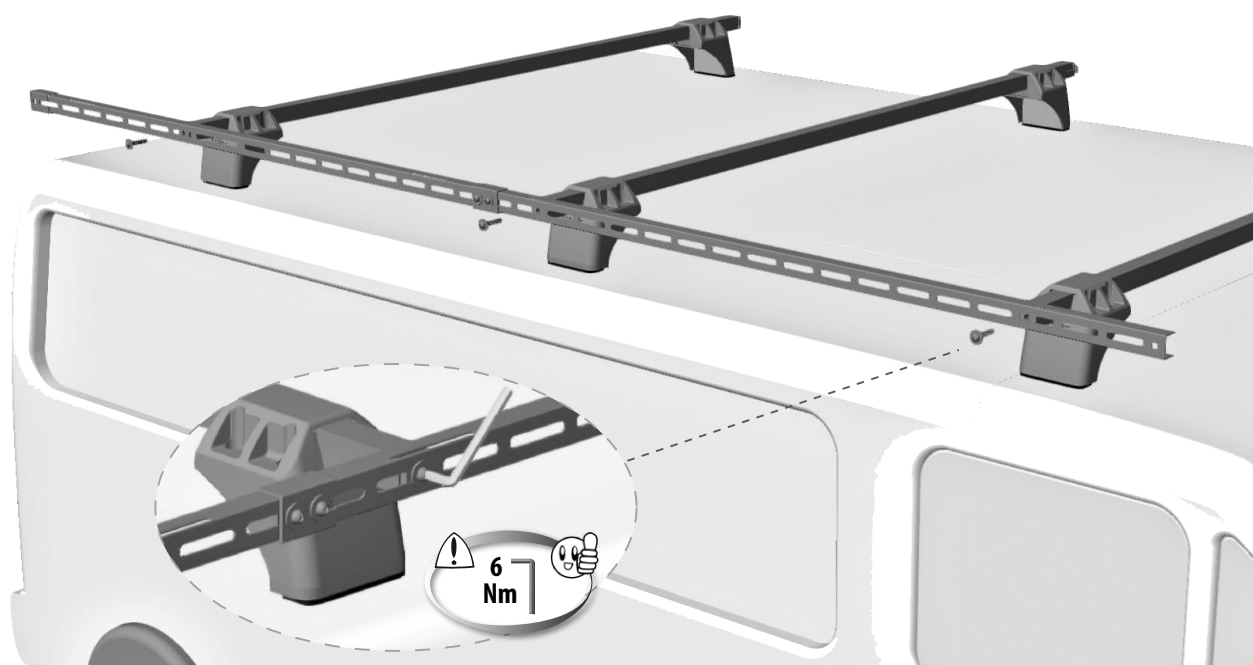



7




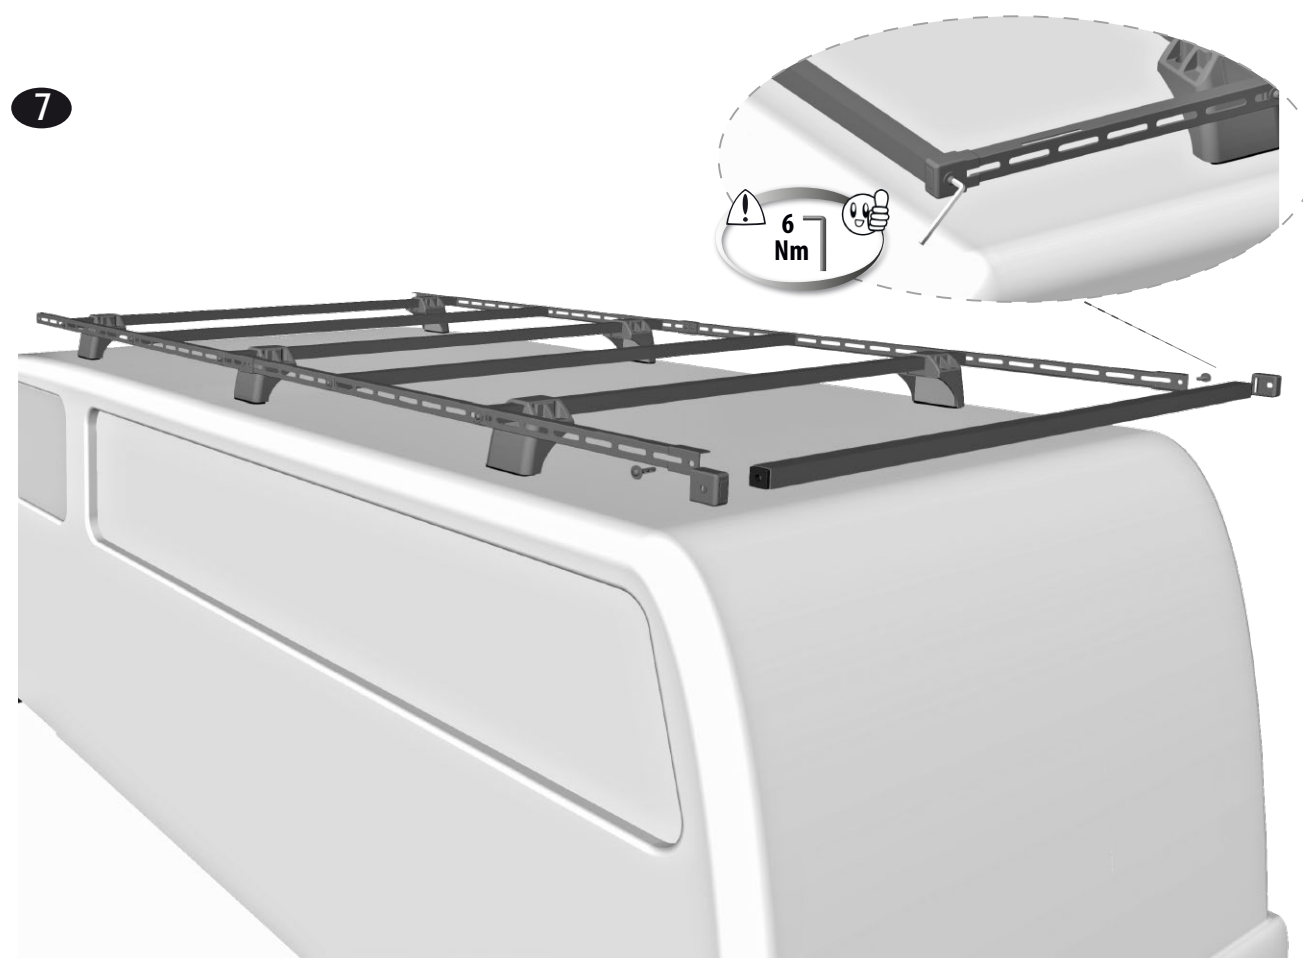



8

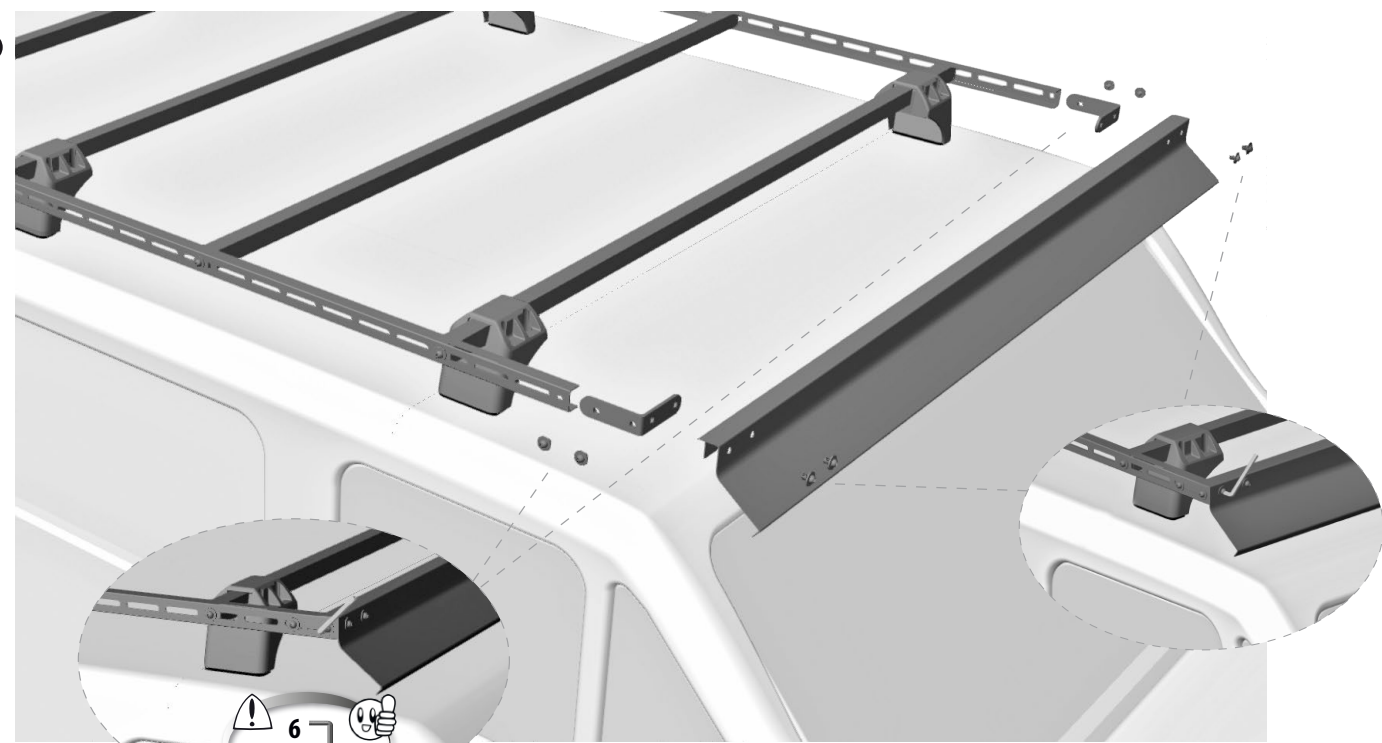


9

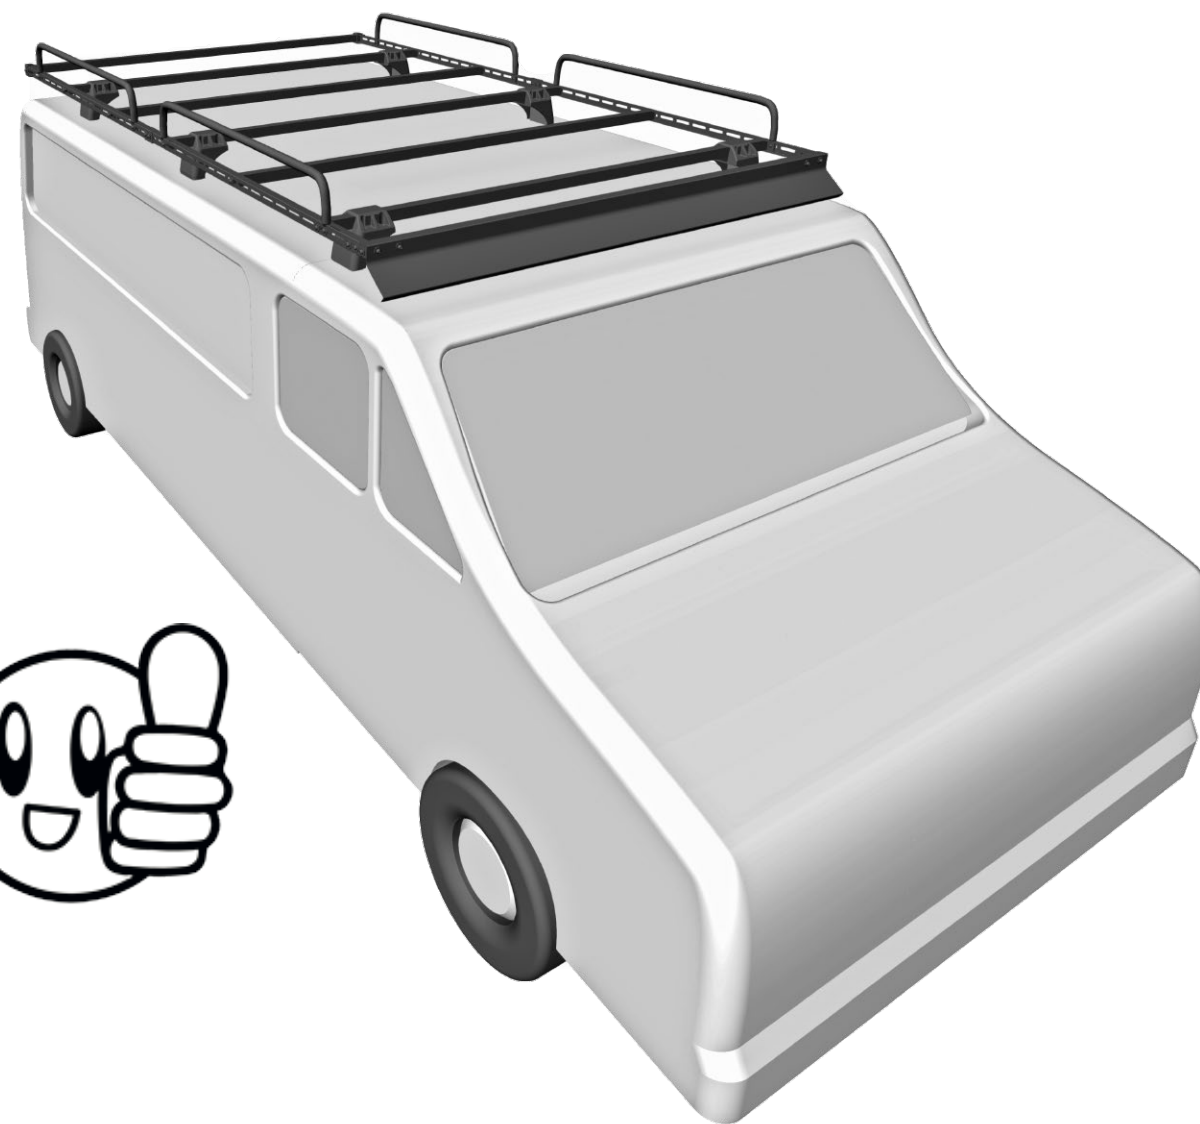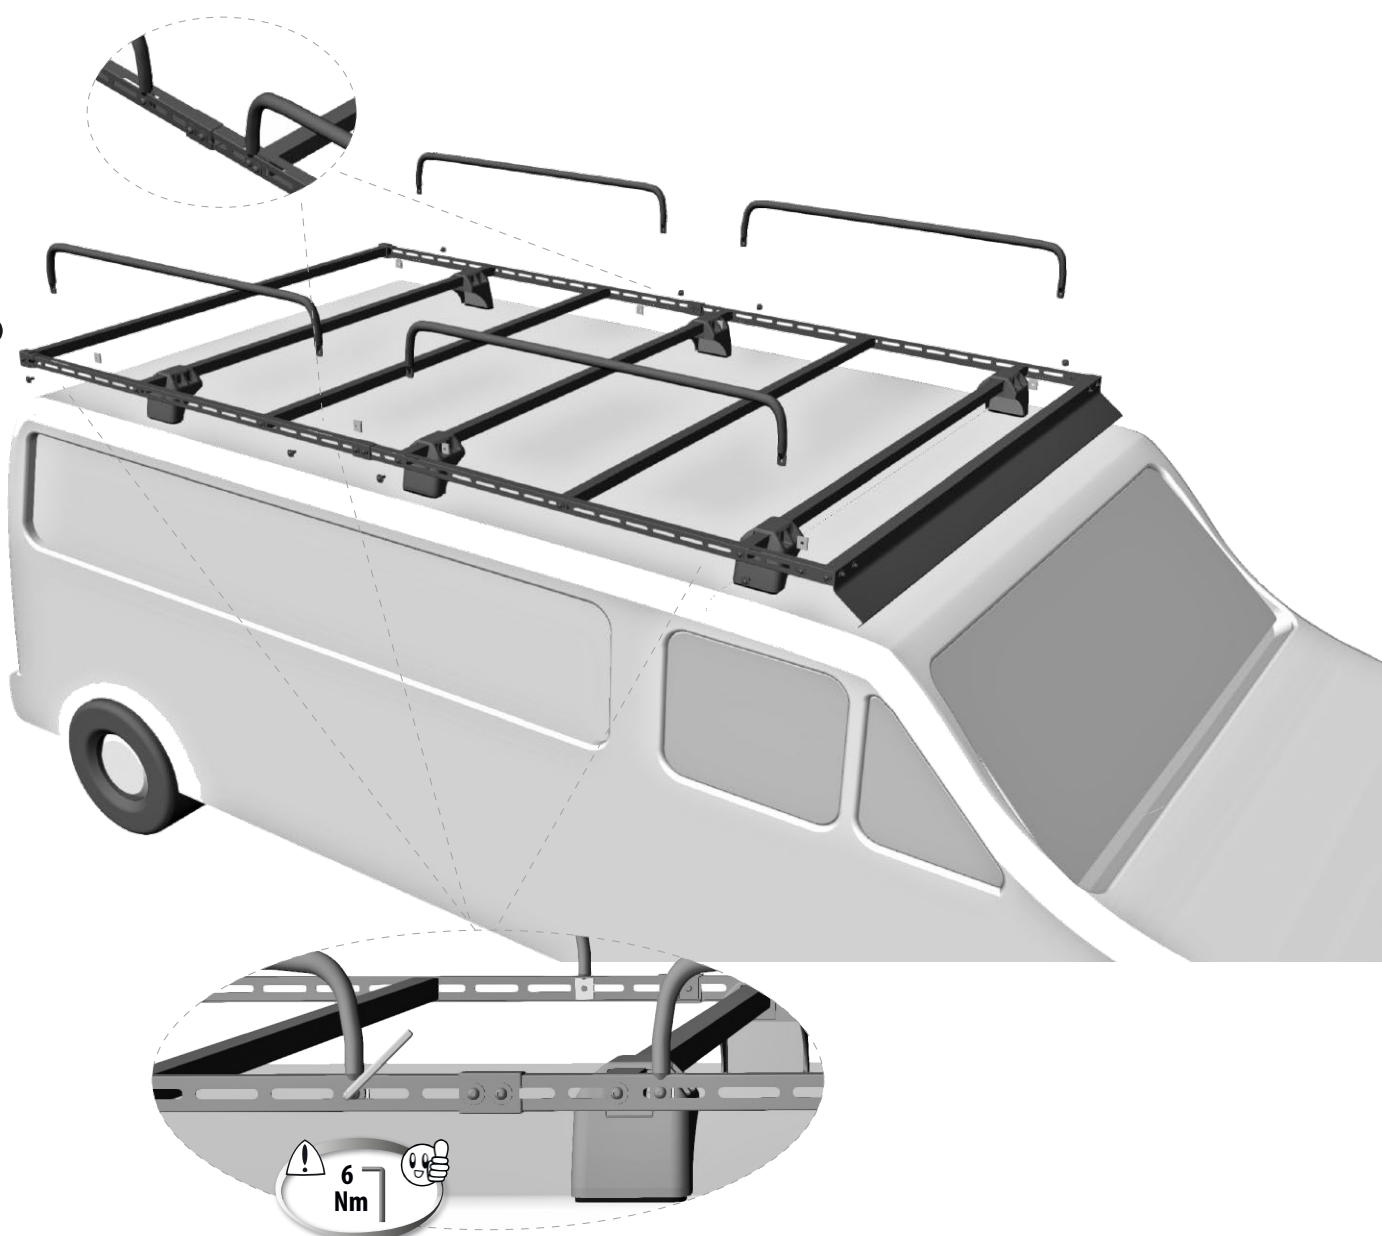

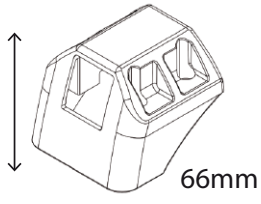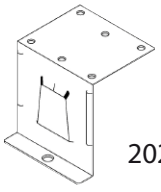
N		Q
1	 66mm	10
2	 202	10
3	 G3	10
4	 CH	10
5		1

N	BO0060	Q
8	 DIN912 M6x20	16
9	 DIN125 Ø6	16

N	BO0061	Q
8	 DIN912 M6x20	24
9	 DIN125 Ø6	24


N	BO0005 (x5)	Q
10	 DIN912 M6x20	10
11	 DIN9021 Ø6	10

E	Instrucciones de montaje	Kit de fijación
C	Instruccions de muntatge	Kit de fixació
GB	Assembly instrucctions	Fixation Kit
F	Instruction de montage	Kit fixation
D	Montageanleitung	Stützfuß-Kit
PT	Instruções de montagem	Kit fixação
I	Istruzioni di montaggio	Kit di fissaggio
PL	Instrukcja montażu	Element mocujacy
CZ	Montážní návod	Fixační kit
HU	Szerelési Utasítás	Rögzítő készlet
RO	Instrucțiuni de montaj	Kit de fixare
HR	Detaljne upute	Kit za montažu
TU	Öncelikle montaj	Montaj kiti

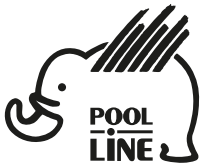





POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042



121001

Rv: 08/2025

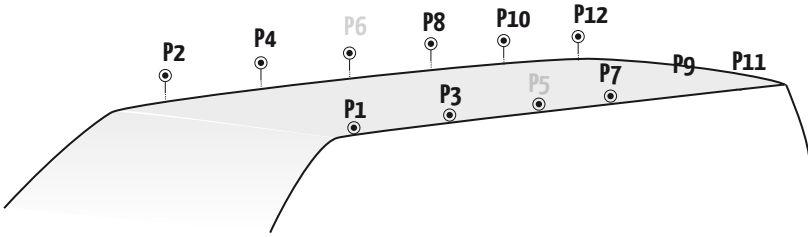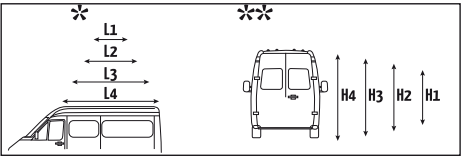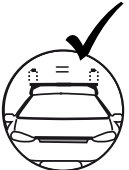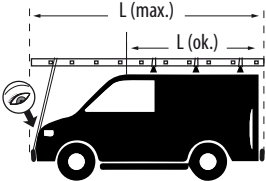

	L *	H **			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
Mercedes																
Sprinter II W906	L2	H1	06-	B00005	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH	202+CH	202+CH	202+CH	202+CH
Sprinter II W906	L2	H2	06-	B00005	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH	202+CH	202+CH	202+CH	202+CH
Sprinter II W906	L2	H3	06-	B00005	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH	202+CH	202+CH	202+CH	202+CH
Sprinter II W906	L3	H2	06-	B00005	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH	202+CH	202+CH	202+CH	202+CH
Sprinter II W906	L3	H3	06-	B00005	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH	202+CH	202+CH	202+CH	202+CH
Volkswagen																
Crafter	L2	H1	06-	B00005	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH	202+CH	202+CH	202+CH	202+CH
Crafter	L2	H2	06-	B00005	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH	202+CH	202+CH	202+CH	202+CH
Crafter	L3	H2	06-	B00005	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH	202+CH	202+CH	202+CH	202+CH
T5	L2	H1	03 - 15	B00005	202	202	202	202			202	202	202	202	202	202
T6	L2	H1	15 -	B00005	202	202	202	202			202	202	202	202	202	202

