

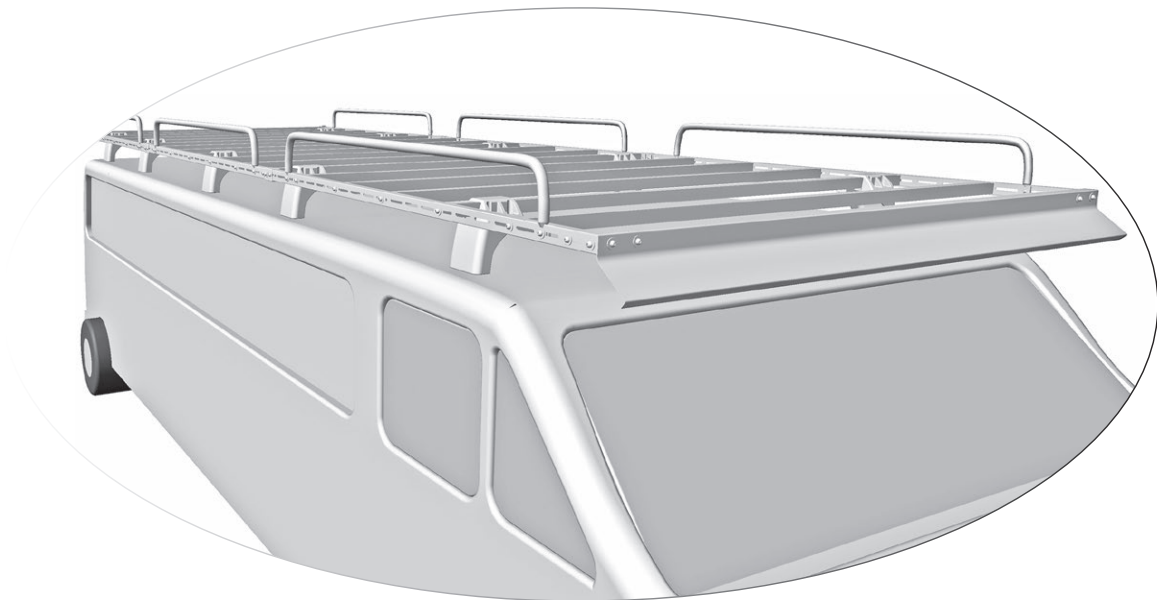


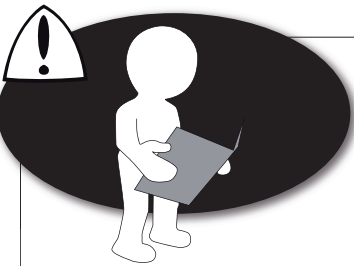


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikli montaj

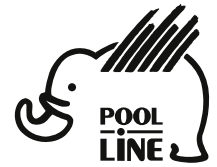



POOL-LINE ACCESORIOS, S.L.  
C. Esqueis, 19. P. I. Can Barri  
08415- Bigues i Riells. Barcelona (España)  
[www.pool-line.net](http://www.pool-line.net)

Nº HOMOLOGACIÓN: **E9** 26R-03.1042







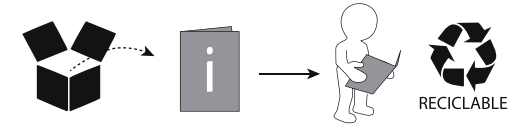





**123917**

Rv: 11/2023

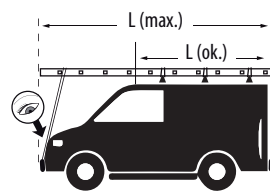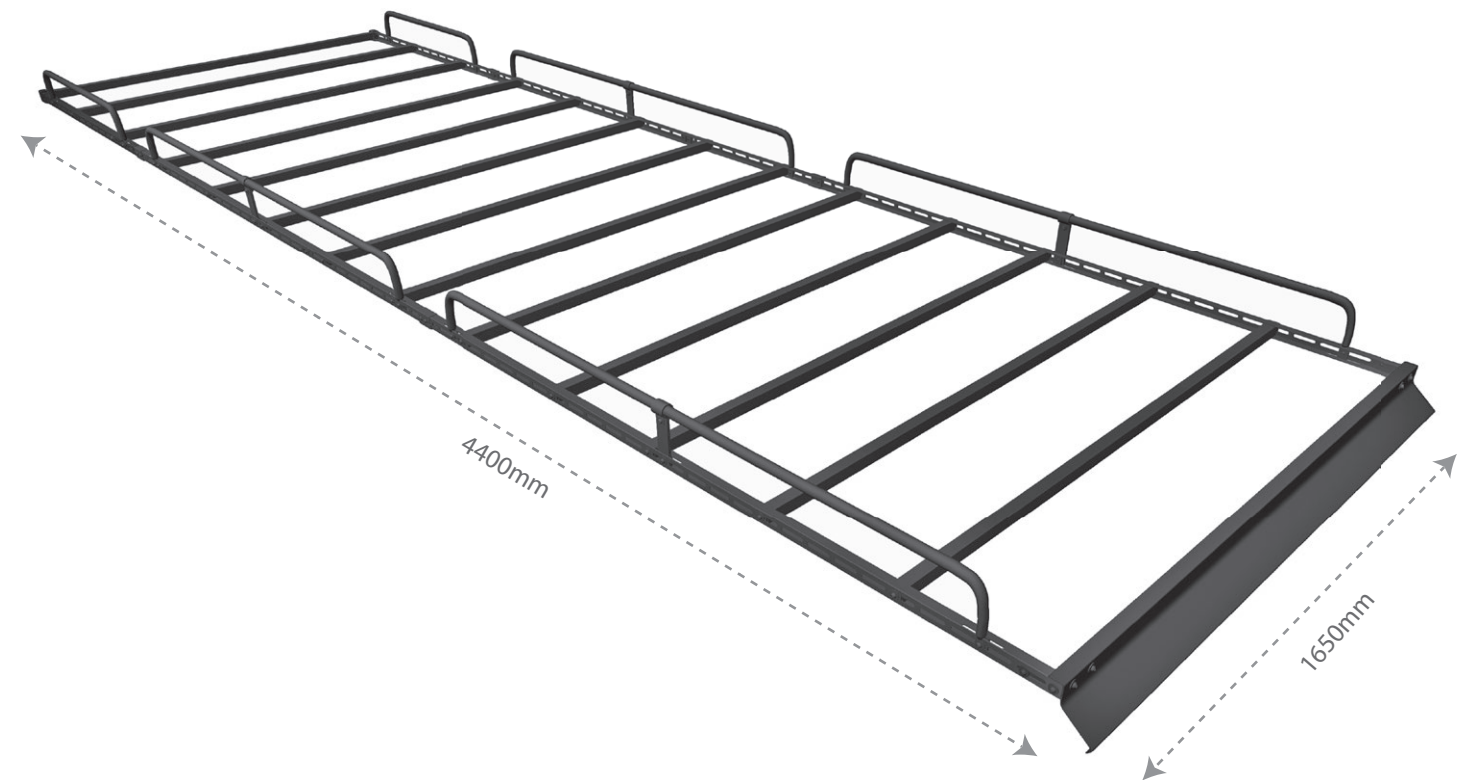




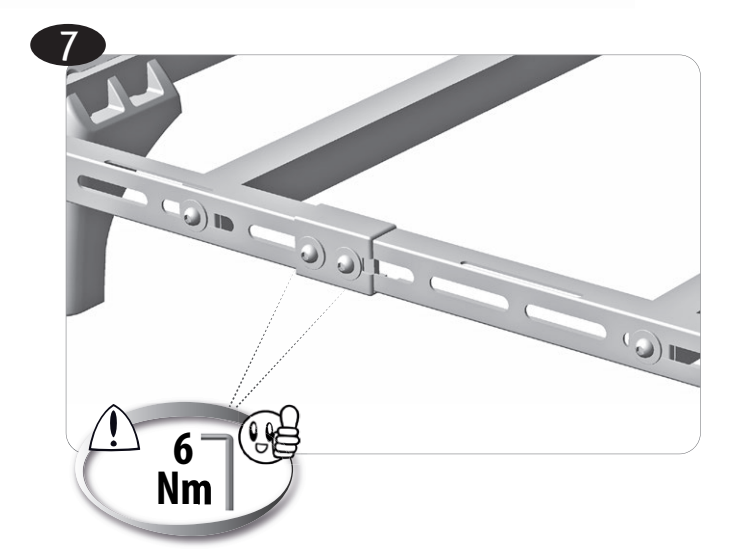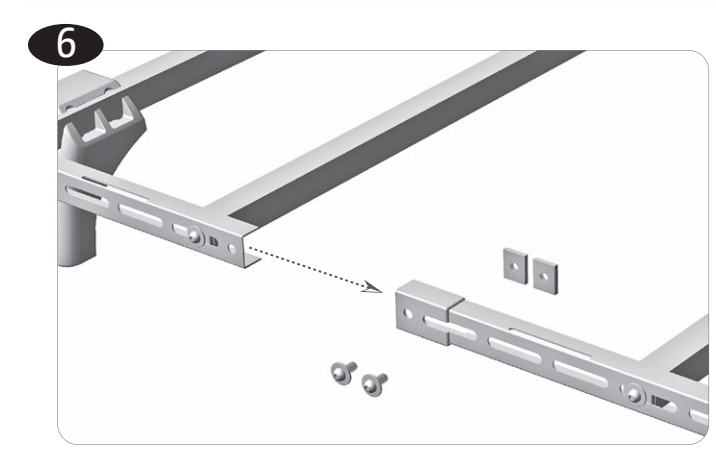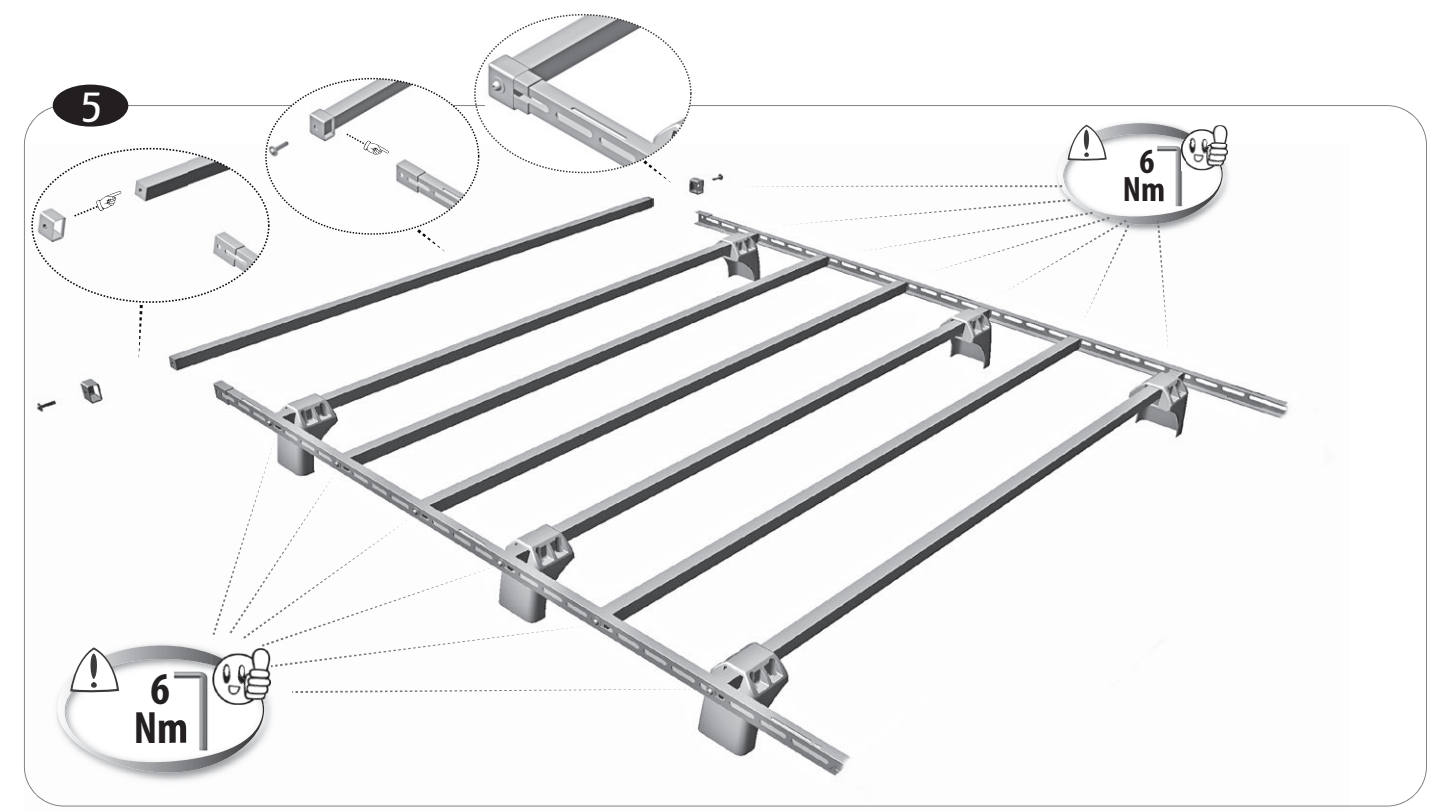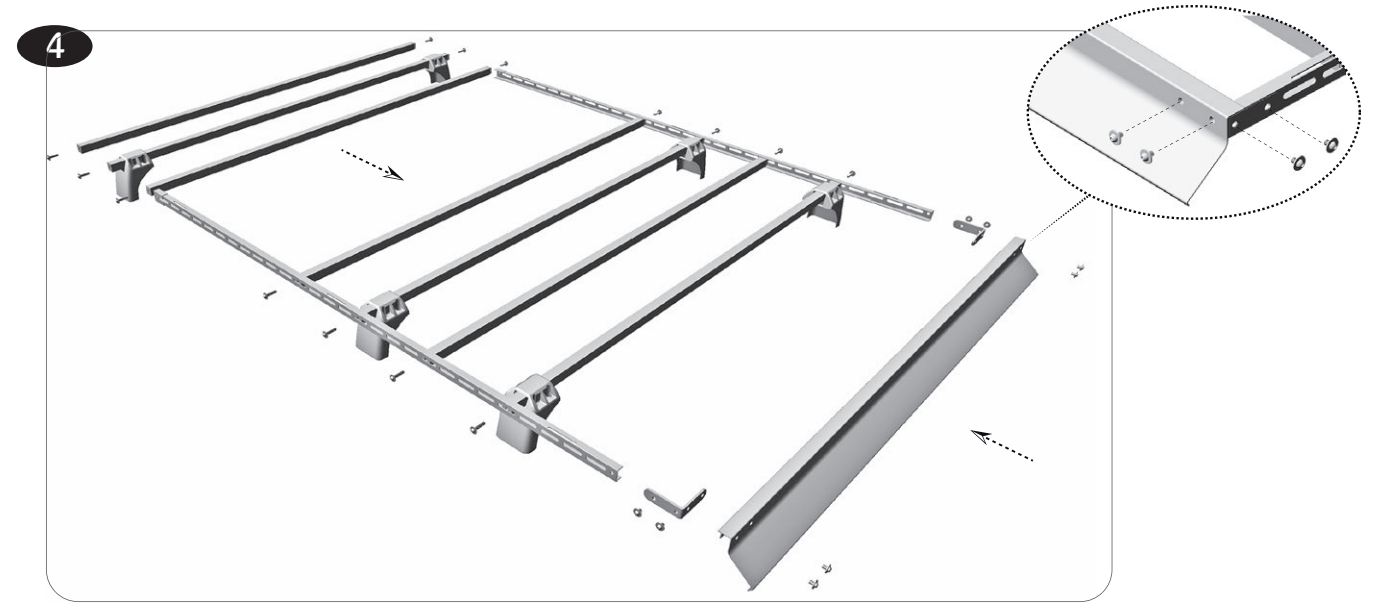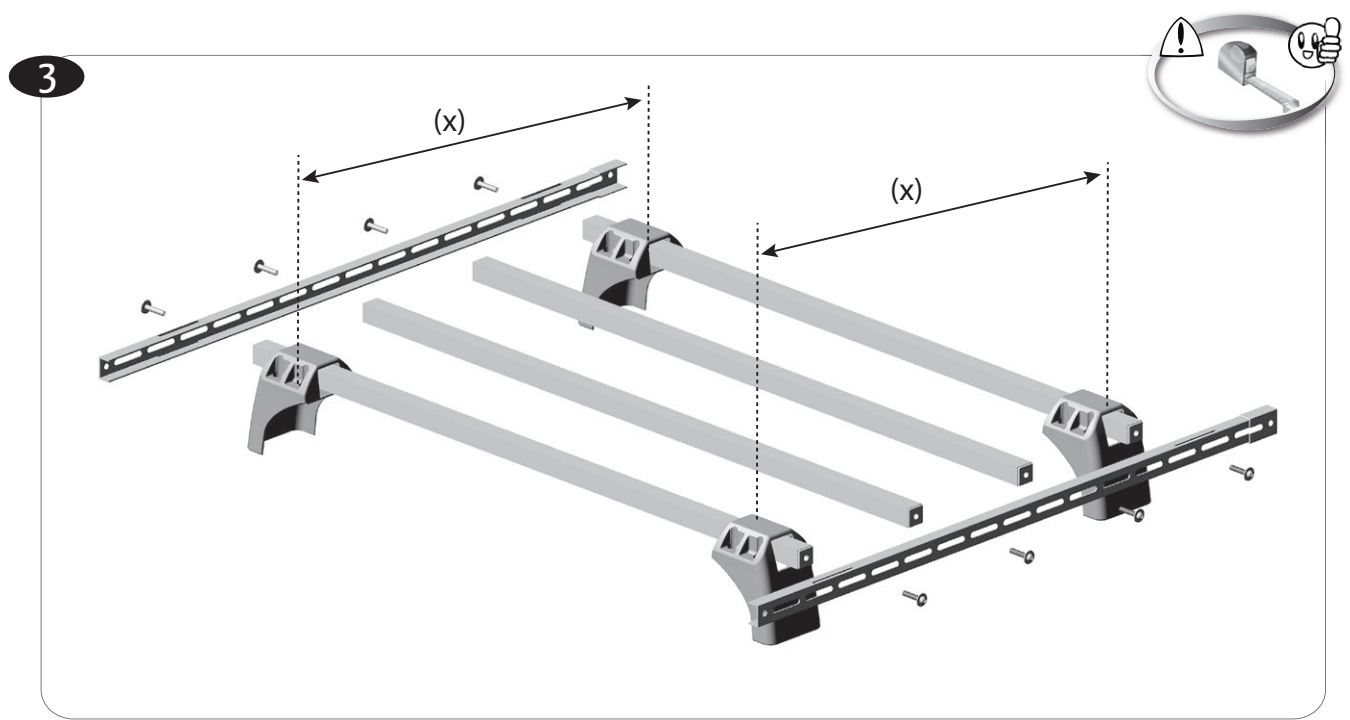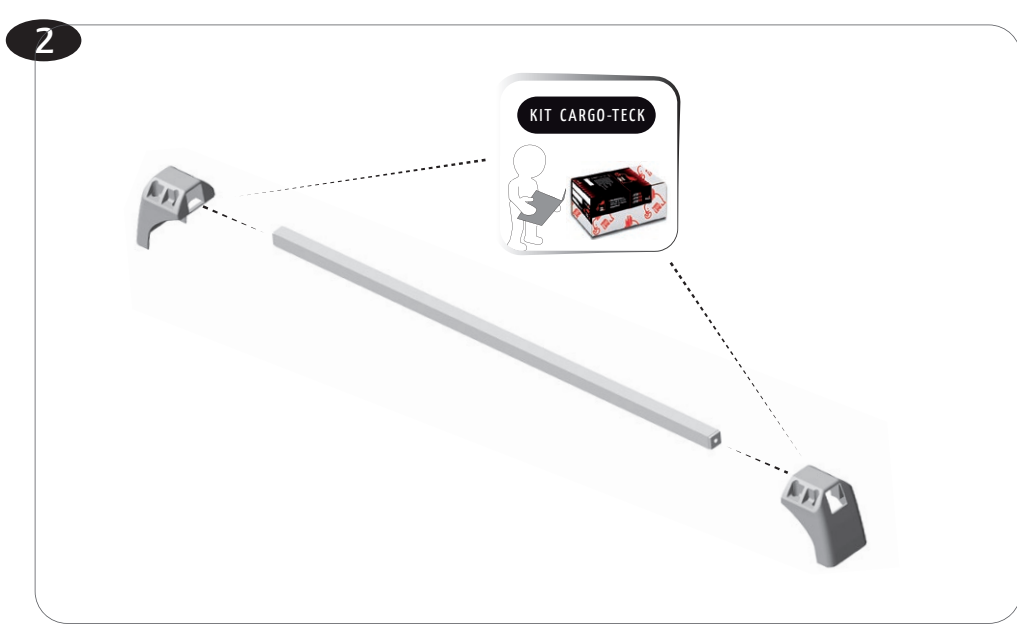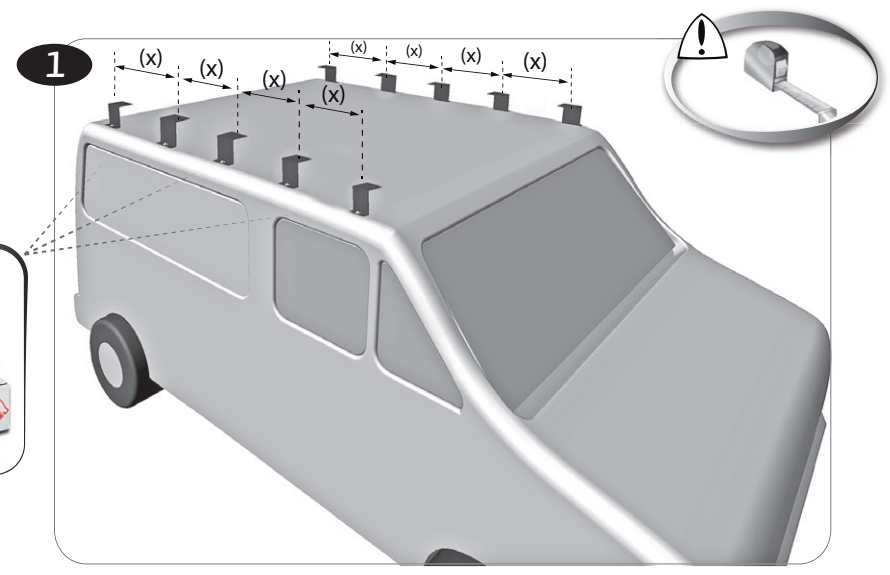

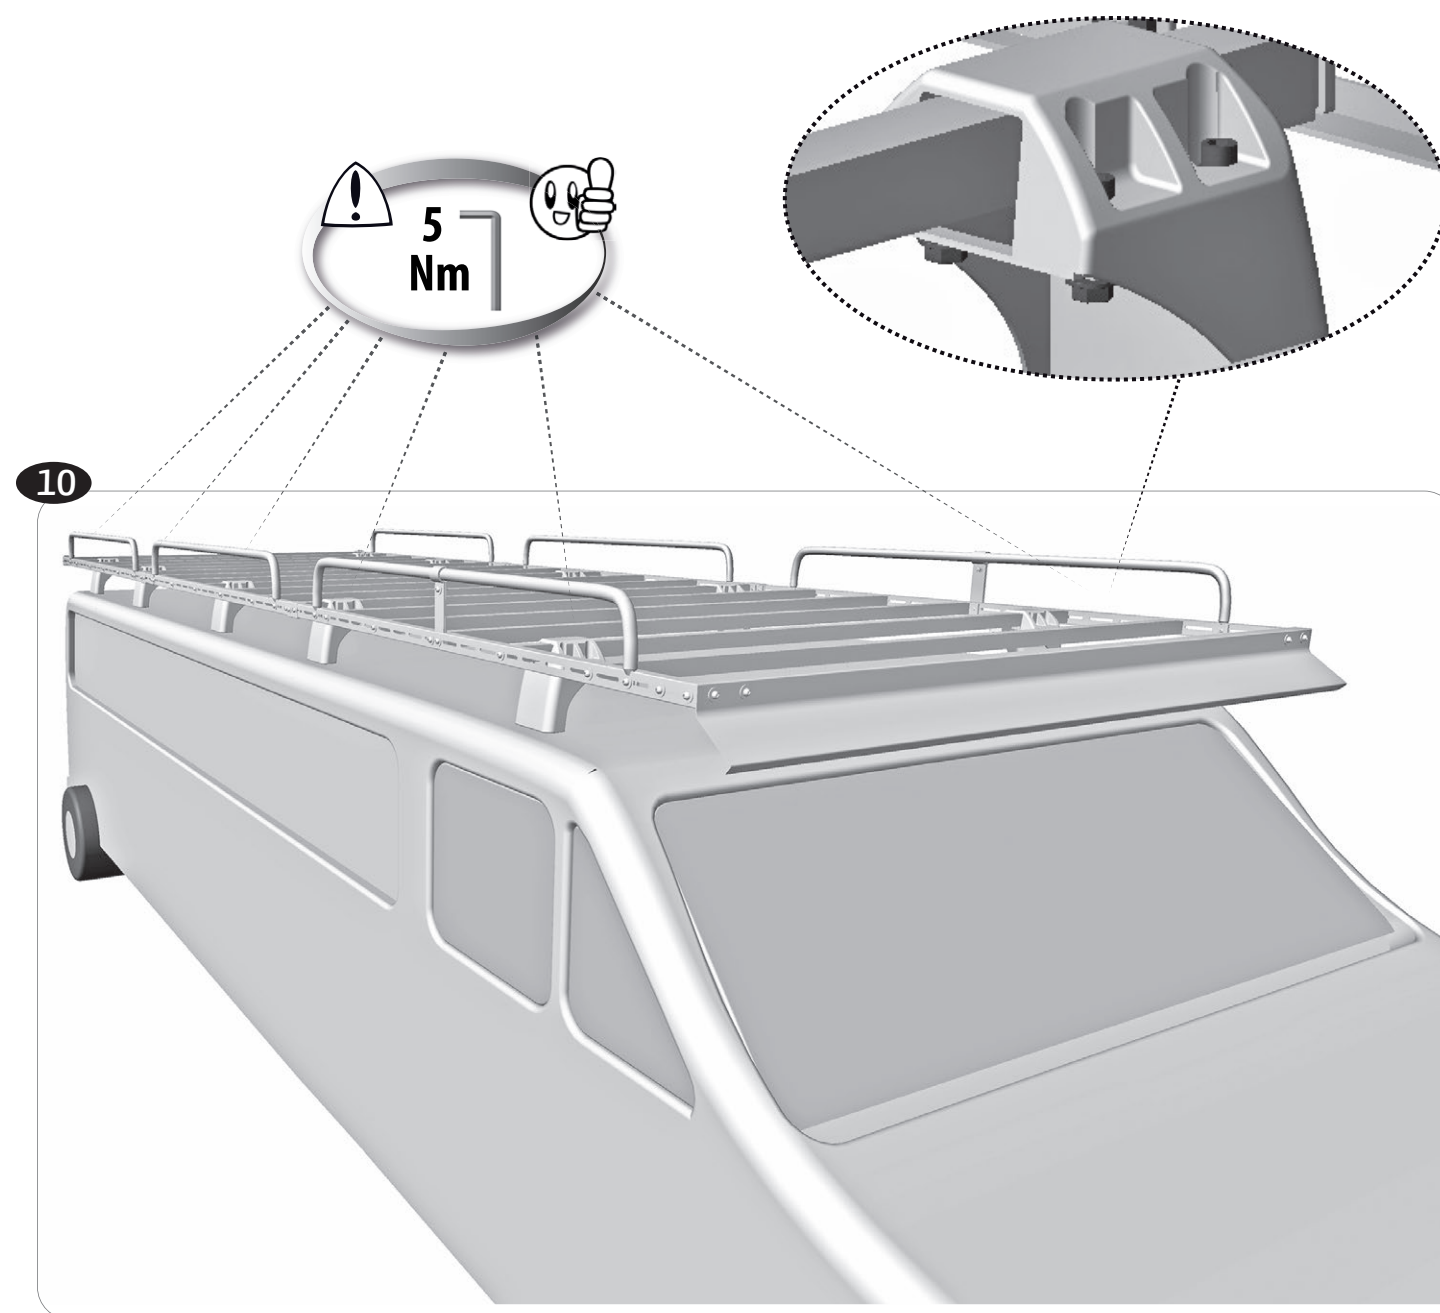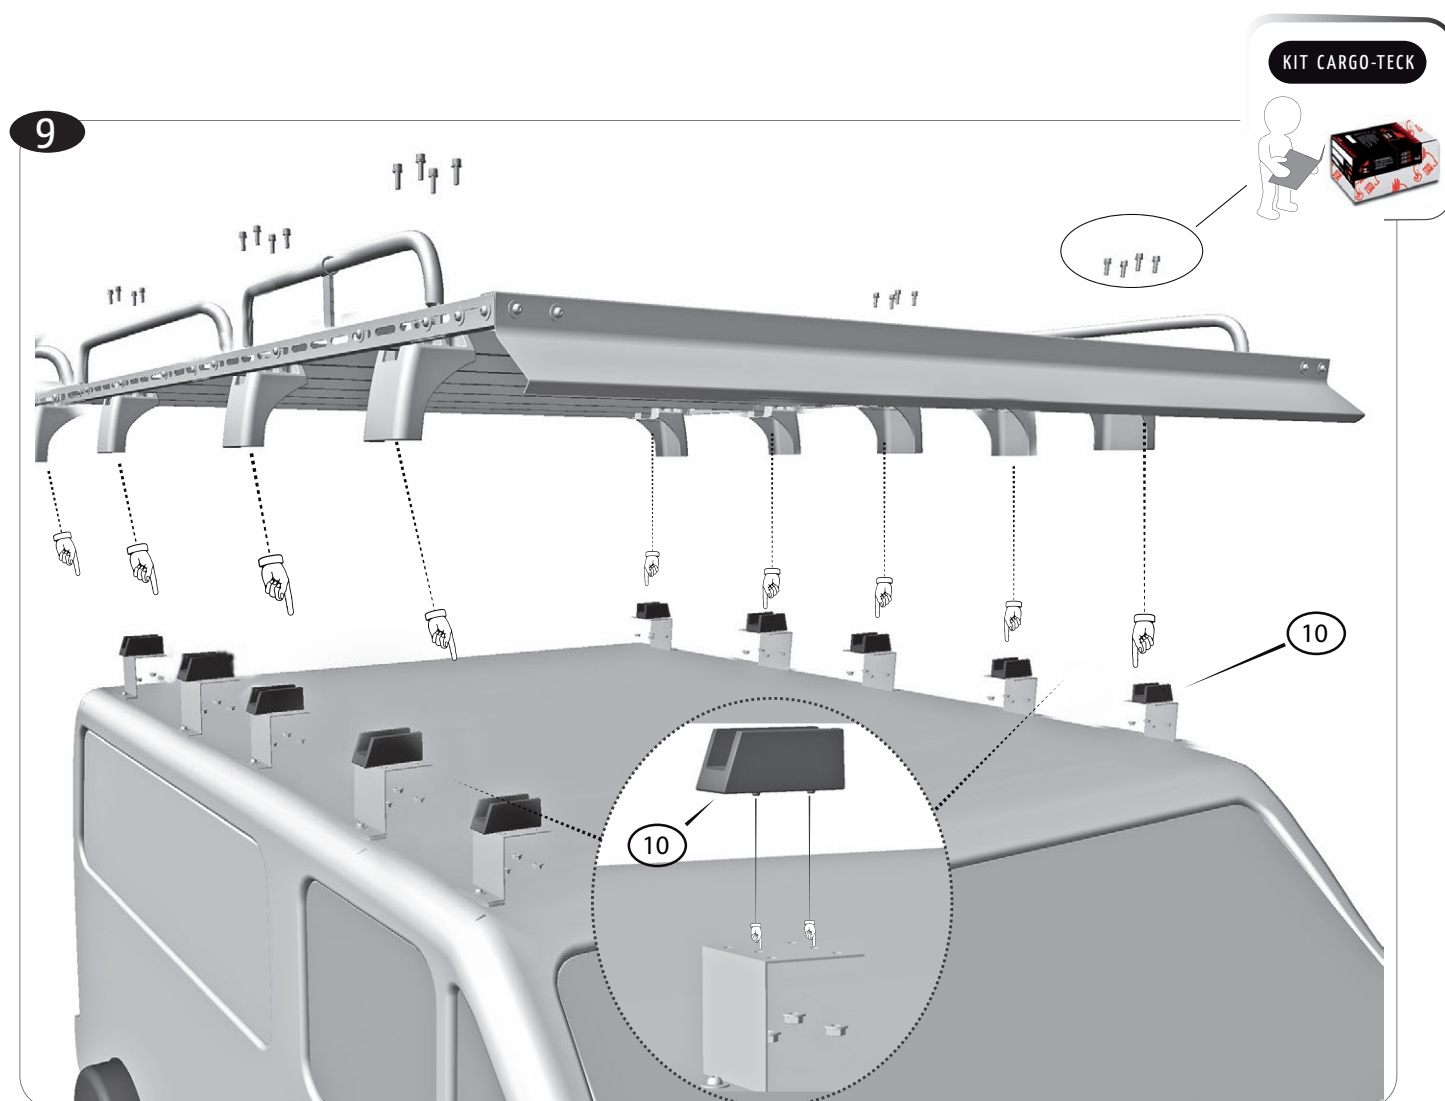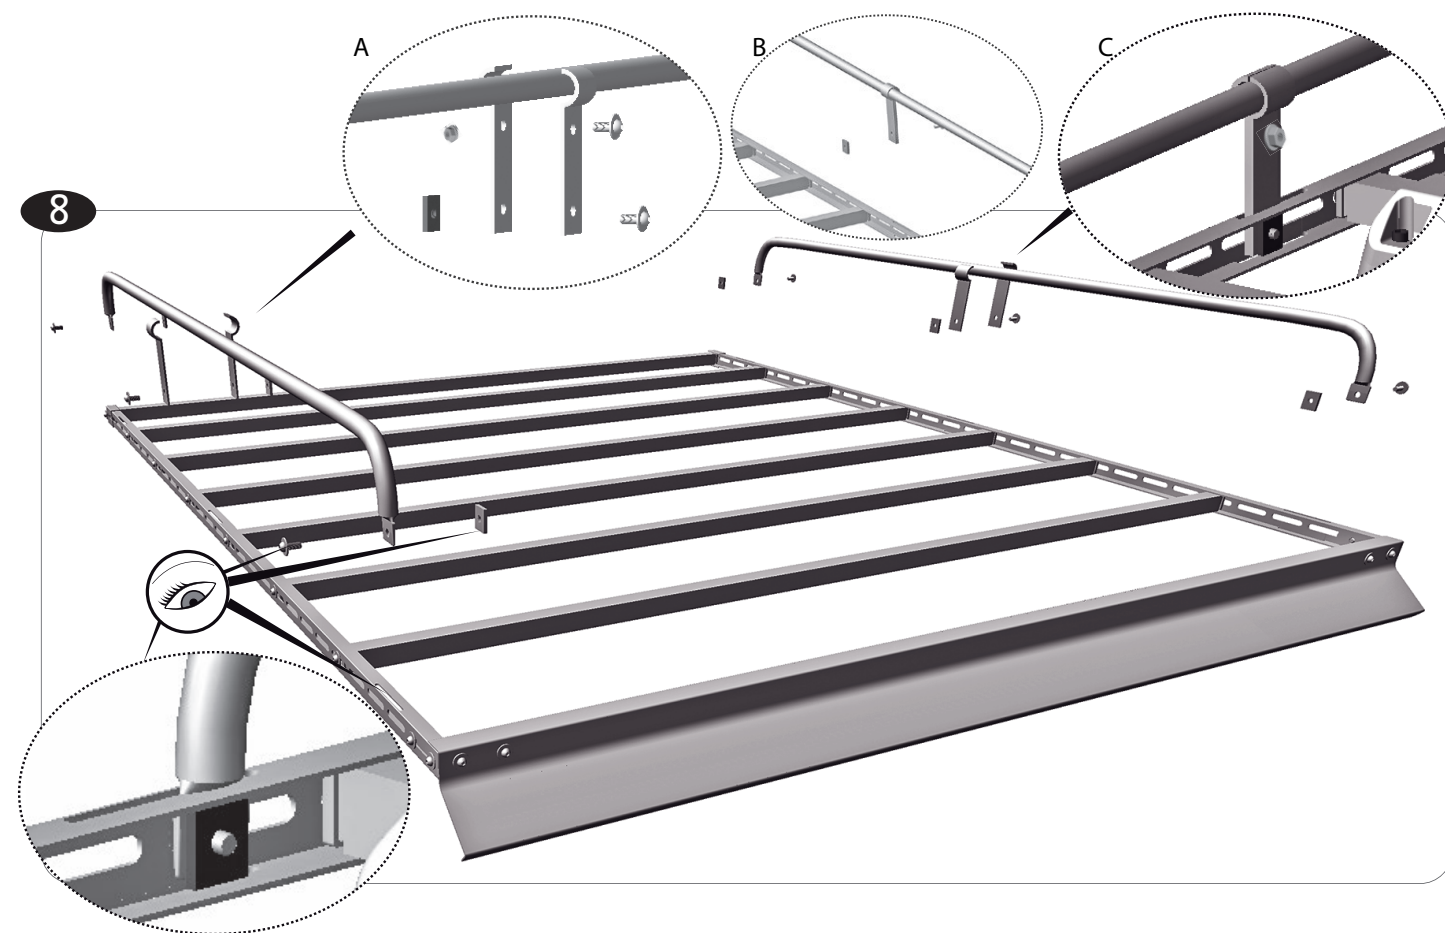


- MAN TGE L4 - H3 (2017->)
- VW. CRAFTER L4 - H3 (2017->)


Zona delantera  
Zone avant  
Front zone  
Zone anteriore  
Vorderzone




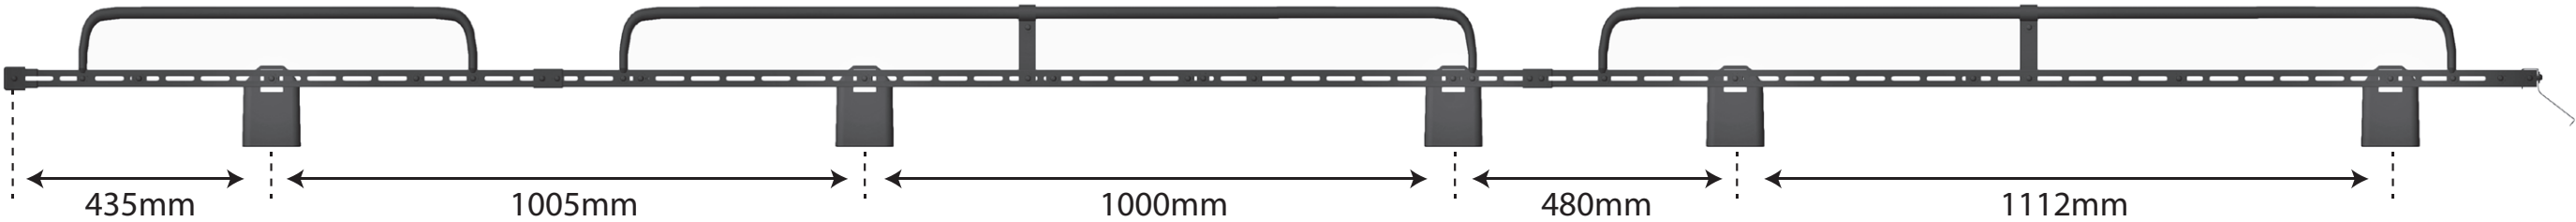



- NISSAN NV400 L4 - H2 (2010->)
- OPEL MOVANO B L4 - H2 (2010->)
- RENAULT MASTER III L4 - H2 (2010->)

Zona delantera  
Zone avant  
Front zone  
Zone anteriore  
Vorderzone

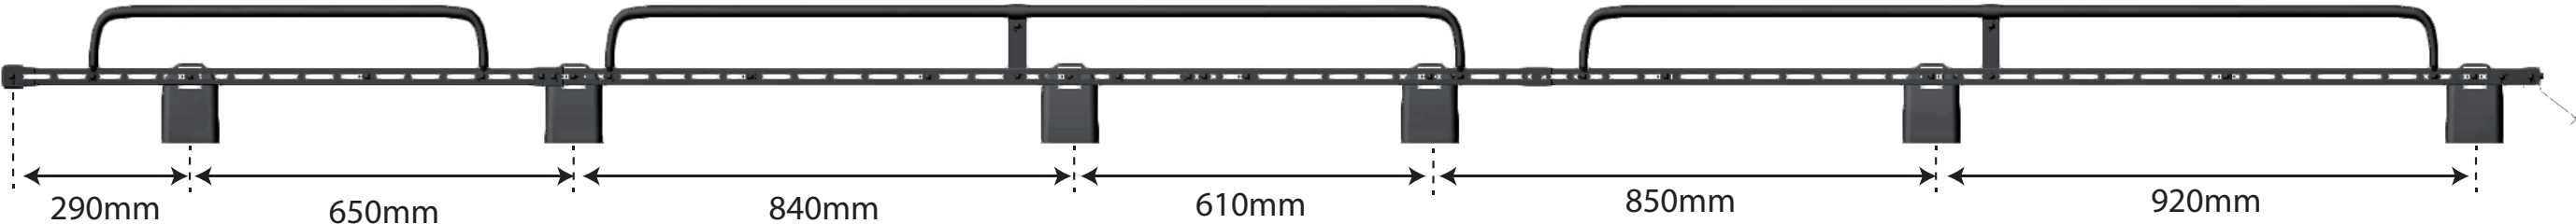


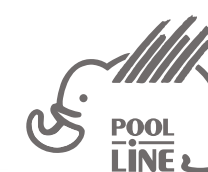

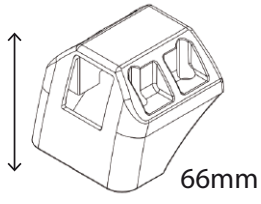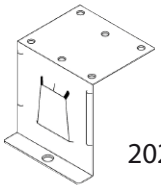
| N |                                                                                        | Q  |
|---|----------------------------------------------------------------------------------------|----|
| 1 |  66mm | 10 |
| 2 |  202  | 10 |
| 3 |  G3   | 10 |
| 4 |  CH   | 10 |
| 5 |       | 1  |

| N | BO0060                                                                                              | Q  |
|---|-----------------------------------------------------------------------------------------------------|----|
| 8 |  DIN912<br>M6x20 | 16 |
| 9 |  DIN125<br>Ø6    | 16 |

| N | BO0061                                                                                              | Q  |
|---|-----------------------------------------------------------------------------------------------------|----|
| 8 |  DIN912<br>M6x20 | 24 |
| 9 |  DIN125<br>Ø6    | 24 |


| N  | BO0005 (x5)                                                                                         | Q  |
|----|-----------------------------------------------------------------------------------------------------|----|
| 10 |  DIN912<br>M6x20 | 10 |
| 11 |  DIN9021<br>Ø6   | 10 |

|           |                          |                  |
|-----------|--------------------------|------------------|
| <b>E</b>  | Instrucciones de montaje | Kit de fijación  |
| <b>C</b>  | Instruccions de muntatge | Kit de fixació   |
| <b>GB</b> | Assembly instrucctions   | Fixation Kit     |
| <b>F</b>  | Instruction de montage   | Kit fixation     |
| <b>D</b>  | Montageanleitung         | Stützfuß-Kit     |
| <b>PT</b> | Instruções de montagem   | Kit fixação      |
| <b>I</b>  | Istruzioni di montaggio  | Kit di fissaggio |
| <b>PL</b> | Instrukcja montażu       | Element mocujacy |
| <b>CZ</b> | Montážní návod           | Fixační kit      |
| <b>HU</b> | Szerelési Utasítás       | Rögzítő készlet  |
| <b>RO</b> | Instrucțiuni de montaj   | Kit de fixare    |
| <b>HR</b> | Detaljne upute           | Kit za montažu   |
| <b>TU</b> | Öncelikle montaj         | Montaj kiti      |

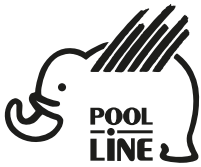




POOL-LINE ACCESORIOS, S.L.  
C. Esqueis, 19. P. I. Can Barri  
08415- Bigues i Riells. Barcelona (España)  
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042

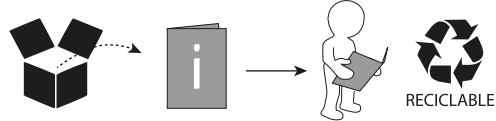

**121001**

Rv: 08/2025

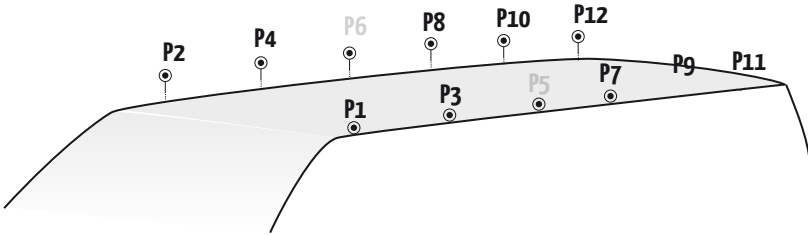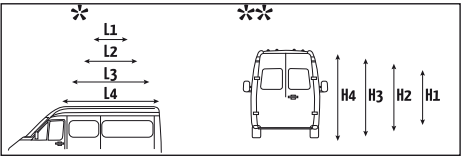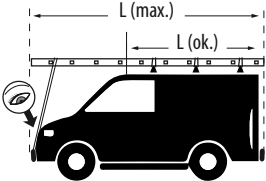

|                   | L * | H ** |         |        | P1     | P2     | P3     | P4     | P5 | P6 | P7     | P8     | P9     | P10    | P11    | P12    |
|-------------------|-----|------|---------|--------|--------|--------|--------|--------|----|----|--------|--------|--------|--------|--------|--------|
| <b>Mercedes</b>   |     |      |         |        |        |        |        |        |    |    |        |        |        |        |        |        |
| Sprinter II W906  | L2  | H1   | 06-     | B00005 | 202+CH | 202+CH | 202+CH | 202+CH |    |    | 202+CH | 202+CH | 202+CH | 202+CH | 202+CH | 202+CH |
| Sprinter II W906  | L2  | H2   | 06-     | B00005 | 202+CH | 202+CH | 202+CH | 202+CH |    |    | 202+CH | 202+CH | 202+CH | 202+CH | 202+CH | 202+CH |
| Sprinter II W906  | L2  | H3   | 06-     | B00005 | 202+CH | 202+CH | 202+CH | 202+CH |    |    | 202+CH | 202+CH | 202+CH | 202+CH | 202+CH | 202+CH |
| Sprinter II W906  | L3  | H2   | 06-     | B00005 | 202+CH | 202+CH | 202+CH | 202+CH |    |    | 202+CH | 202+CH | 202+CH | 202+CH | 202+CH | 202+CH |
| Sprinter II W906  | L3  | H3   | 06-     | B00005 | 202+CH | 202+CH | 202+CH | 202+CH |    |    | 202+CH | 202+CH | 202+CH | 202+CH | 202+CH | 202+CH |
| <b>Volkswagen</b> |     |      |         |        |        |        |        |        |    |    |        |        |        |        |        |        |
| Crafter           | L2  | H1   | 06-     | B00005 | 202+CH | 202+CH | 202+CH | 202+CH |    |    | 202+CH | 202+CH | 202+CH | 202+CH | 202+CH | 202+CH |
| Crafter           | L2  | H2   | 06-     | B00005 | 202+CH | 202+CH | 202+CH | 202+CH |    |    | 202+CH | 202+CH | 202+CH | 202+CH | 202+CH | 202+CH |
| Crafter           | L3  | H2   | 06-     | B00005 | 202+CH | 202+CH | 202+CH | 202+CH |    |    | 202+CH | 202+CH | 202+CH | 202+CH | 202+CH | 202+CH |
| T5                | L2  | H1   | 03 - 15 | B00005 | 202    | 202    | 202    | 202    |    |    | 202    | 202    | 202    | 202    | 202    | 202    |
| T6                | L2  | H1   | 15 -    | B00005 | 202    | 202    | 202    | 202    |    |    | 202    | 202    | 202    | 202    | 202    | 202    |

