


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

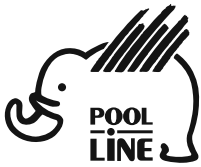

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net




200 **KG.**
MAX.

Nº HOMOLOGACIÓN: **E9**I26R-03.1042



123112


Rv: 01/2020

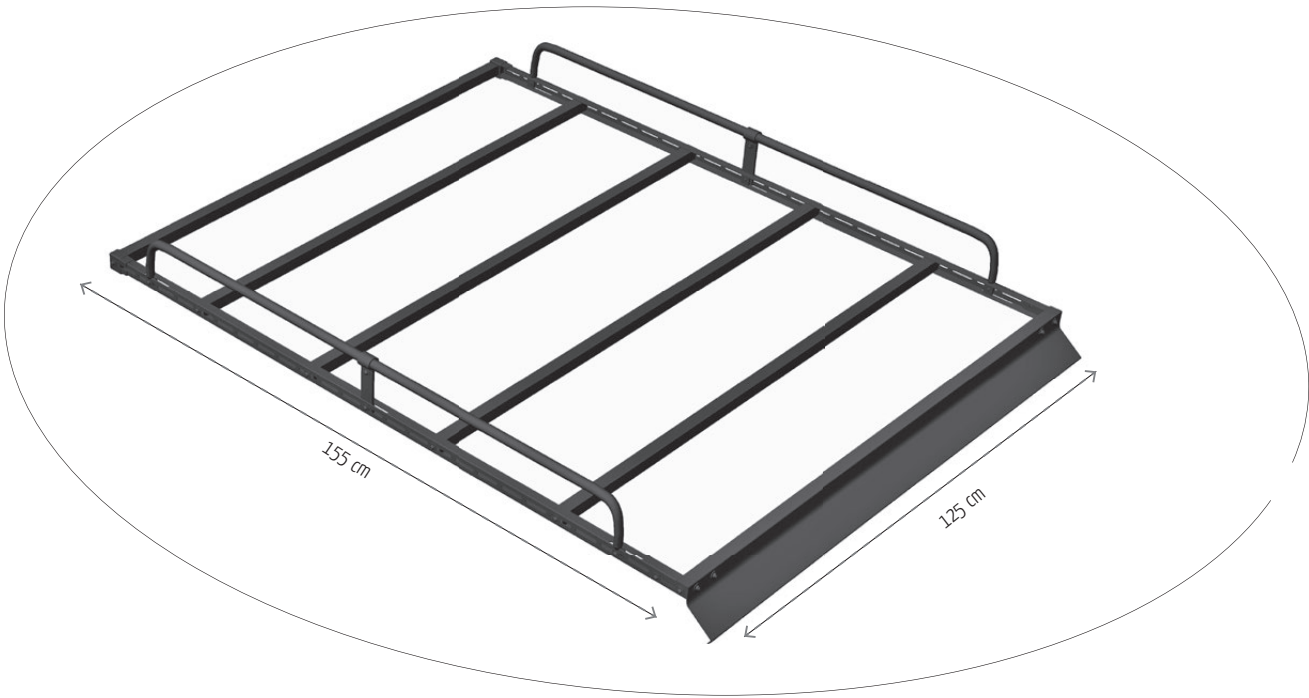

Limpieza pre-instalación



Pre-installation cleaning

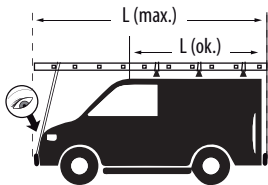


Revisar par de apriete



Check torque


N		Q
1	 S-1250	1
2	 L-1540	2
3	 B-1262	2
4	 T-1235	5
5		2
6		10
7		2
8		4
9		1
10	 CHA-M8	6
12	 ISO 7380 M8x40	10
13	 ISO 7380 M8x16	14
14	 DIN 125 Ø 8	24
15		4
16	 DIN 603 M6x12	2
17	 DIN 6923 M6	2

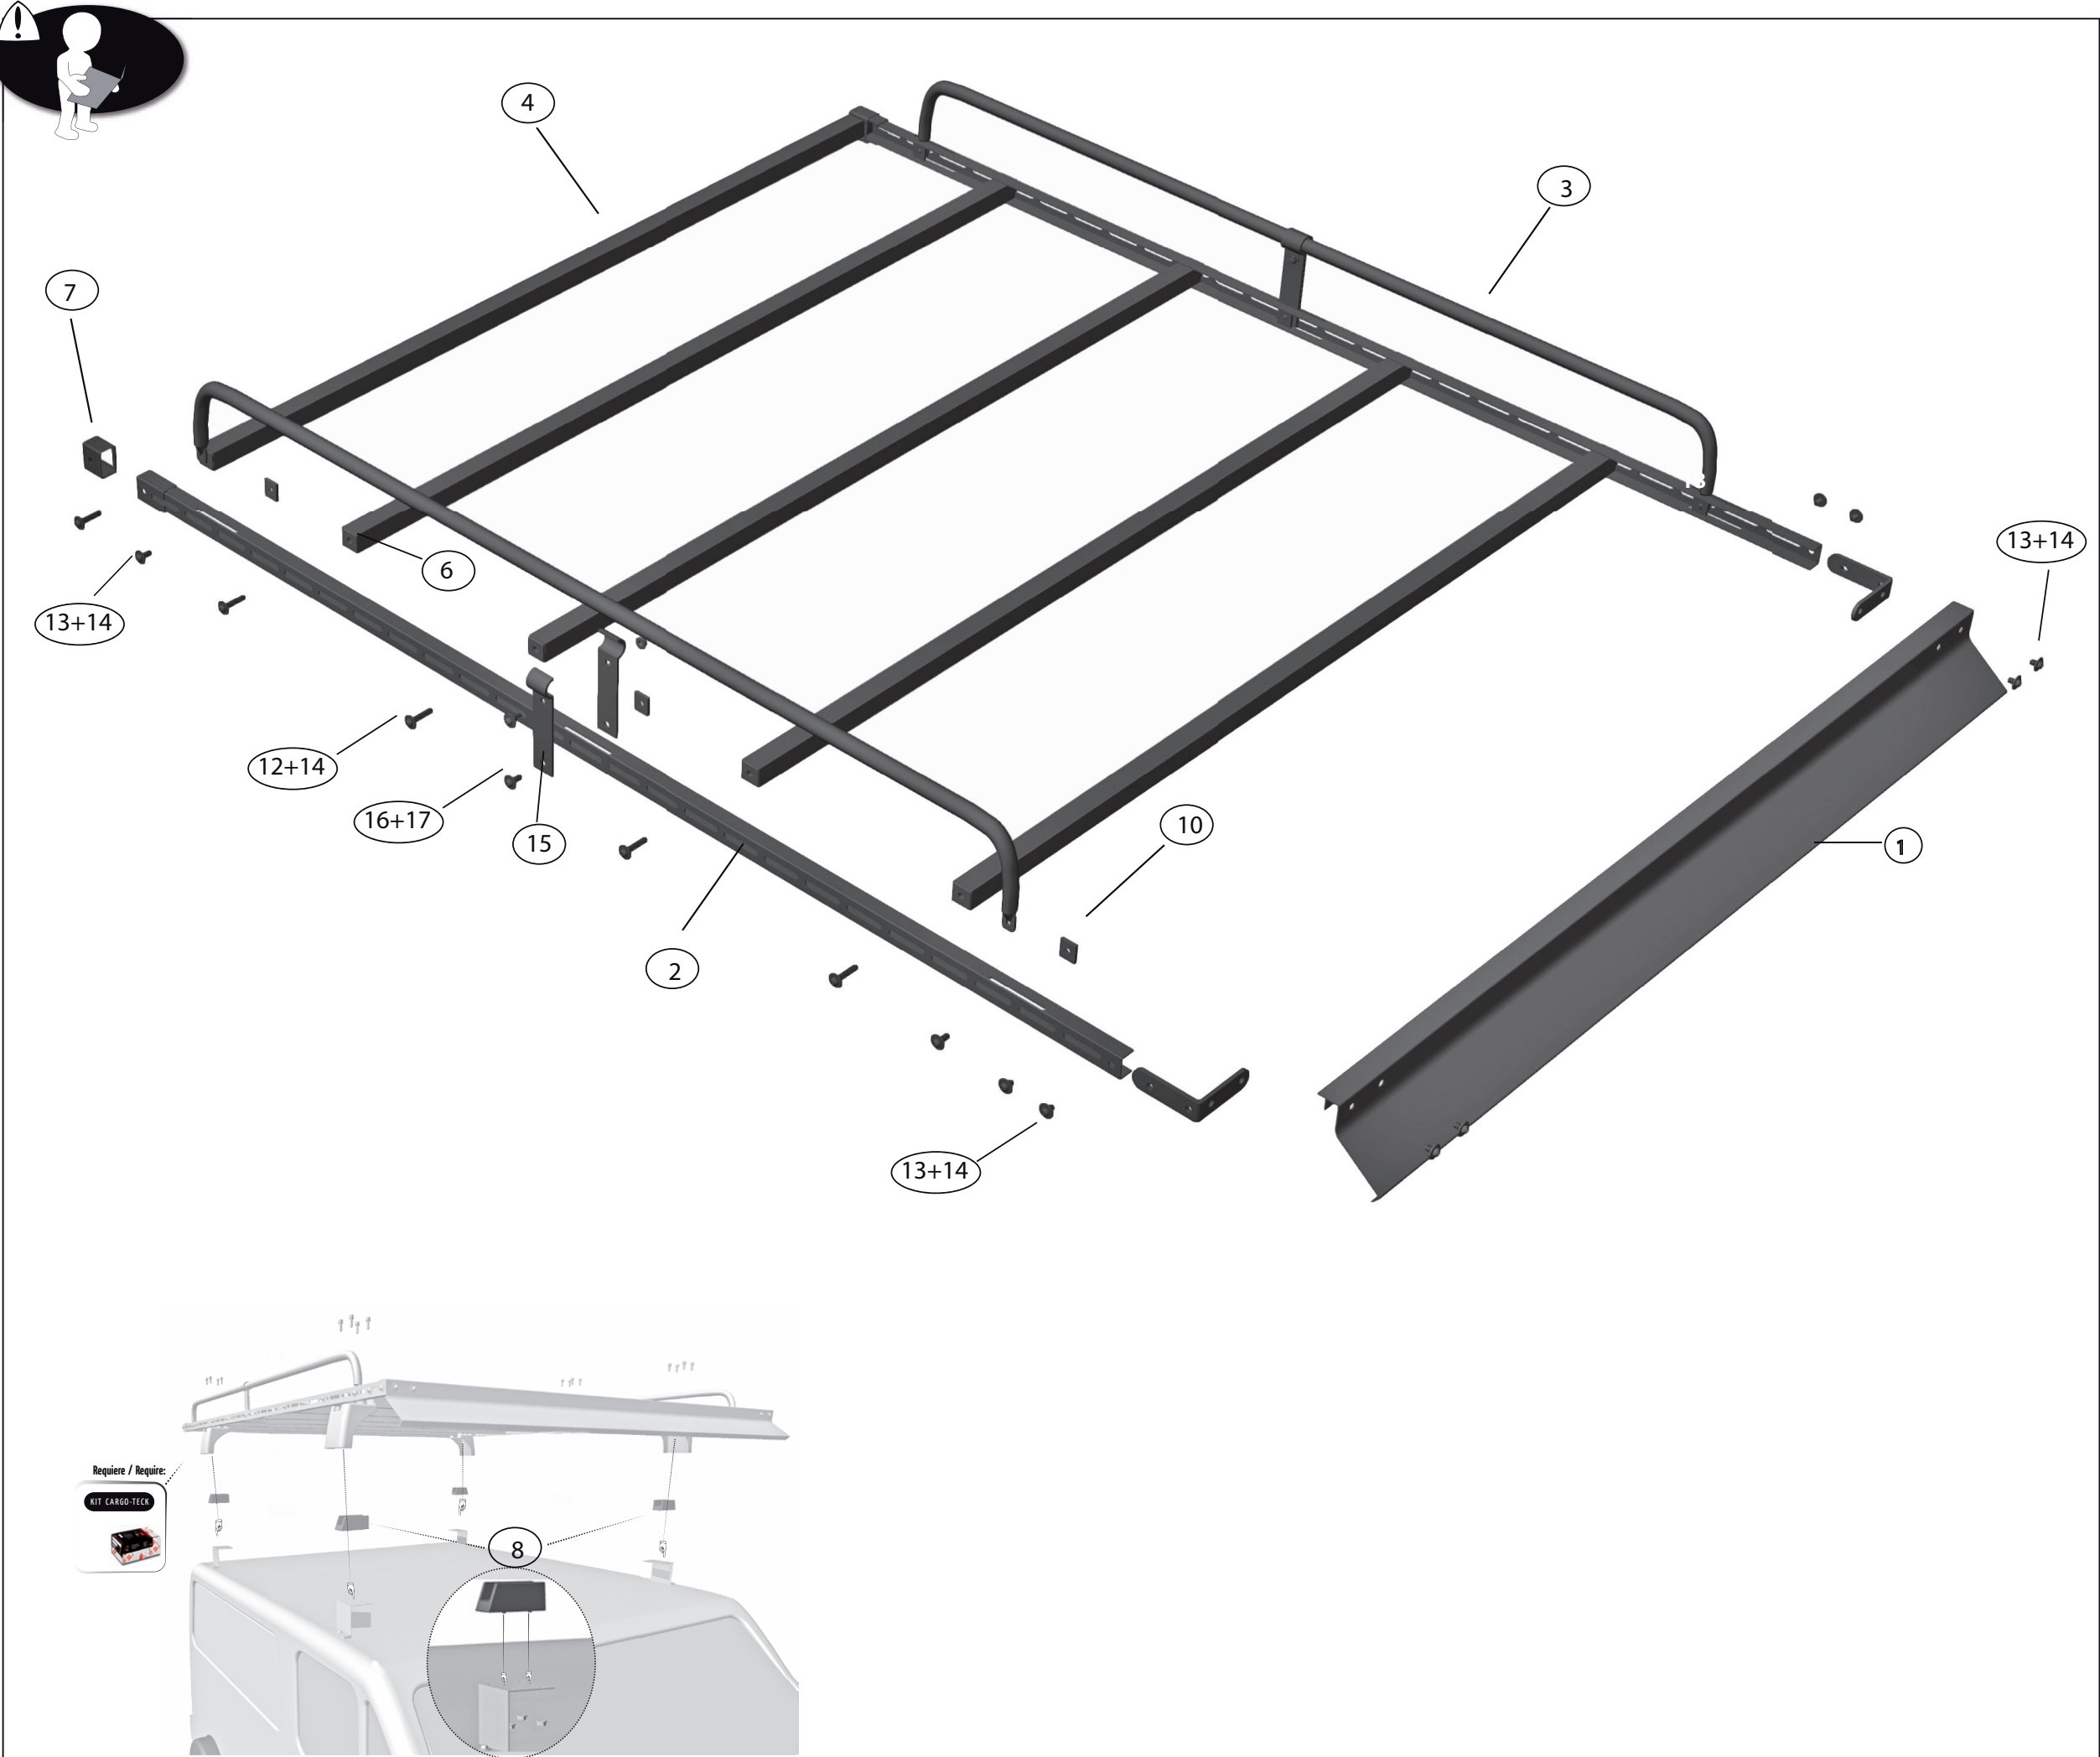




• CITROËN BERLINGO I / PEUGEOT PARTNER I (1996-2008)

Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone

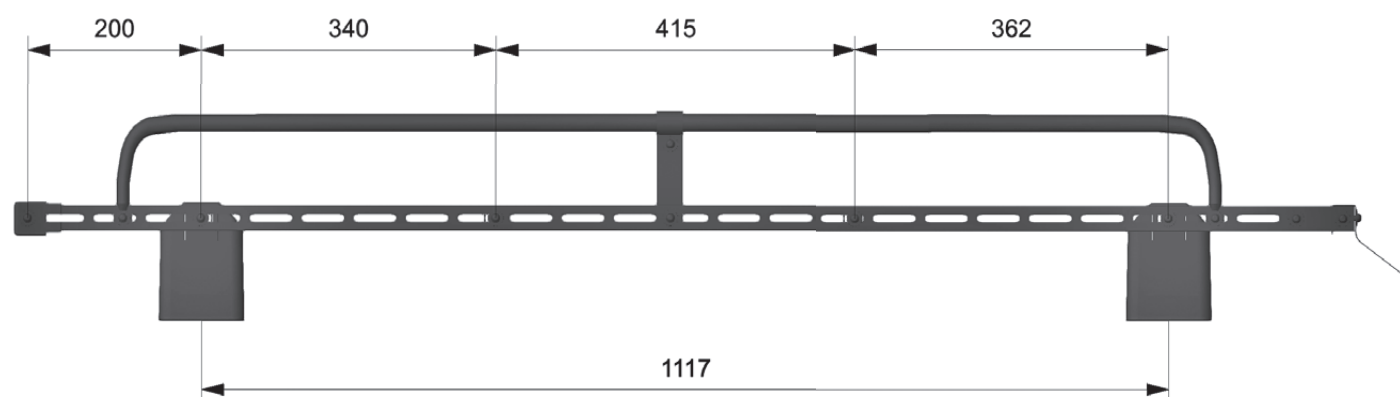


• MERCEDES CITAN L1 (2012->)
• RENAULT KANGOO II L1 (2008-2014)


Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone

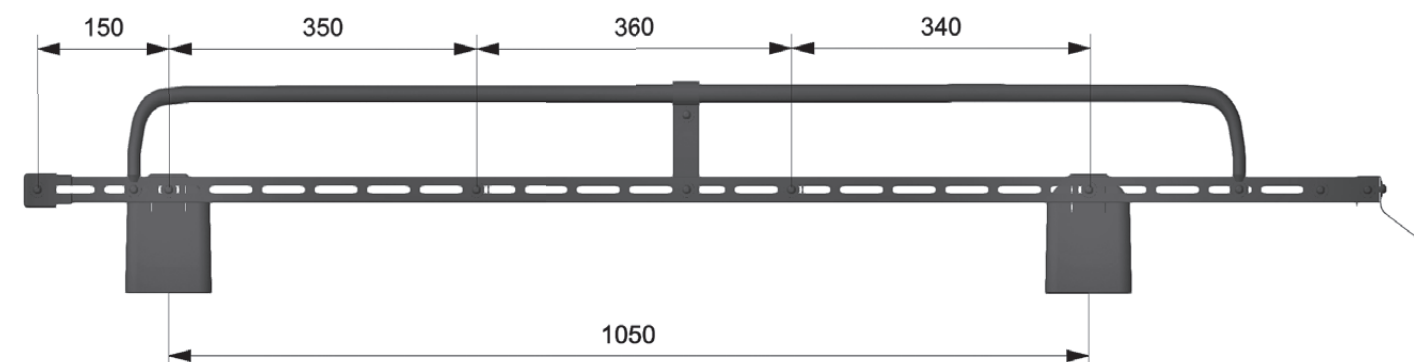

• FORD CONNECT I TRANSIT / TOURNEO (2004-2013)

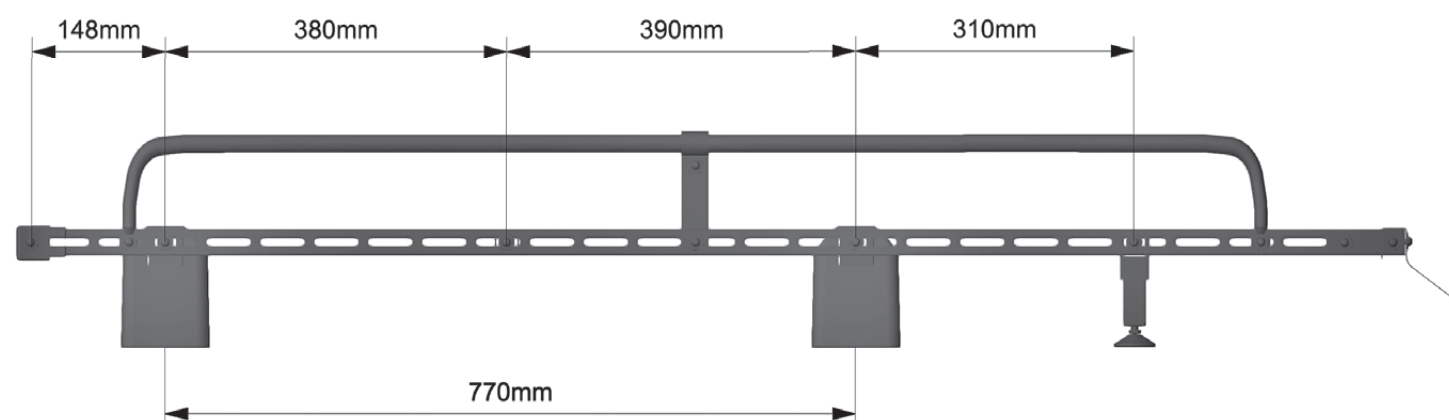


• RESTO MODELOS CON SISTEMA VIERTEAGUAS

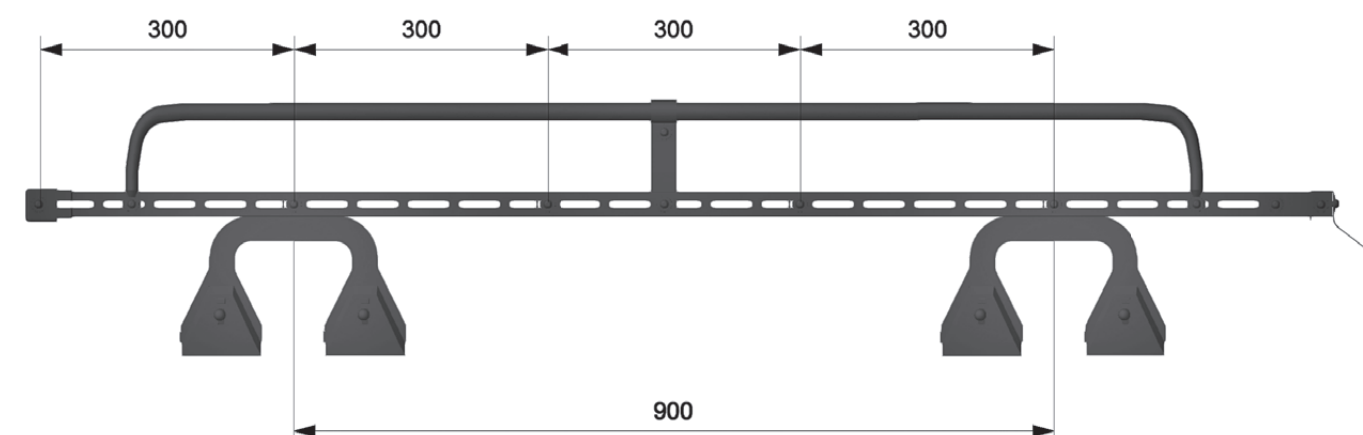





1

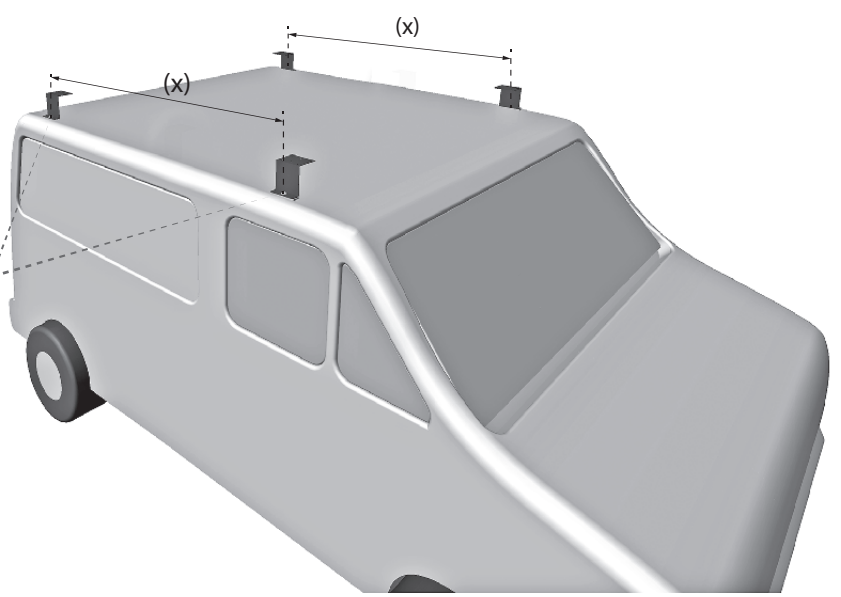


2

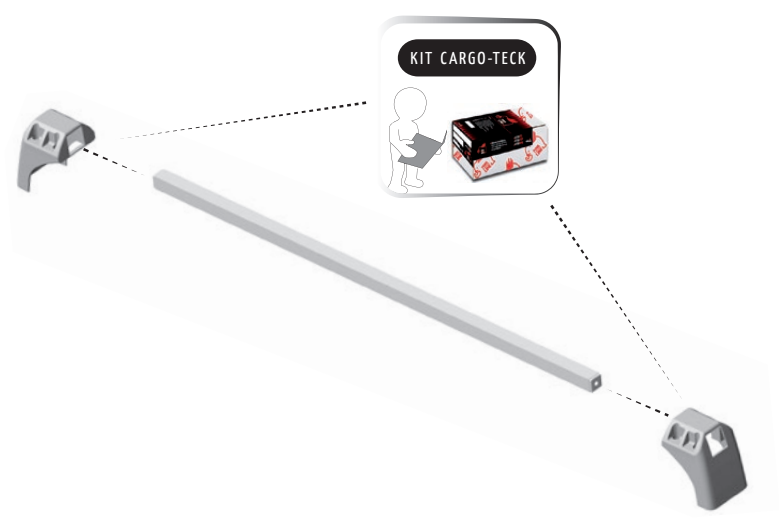


3




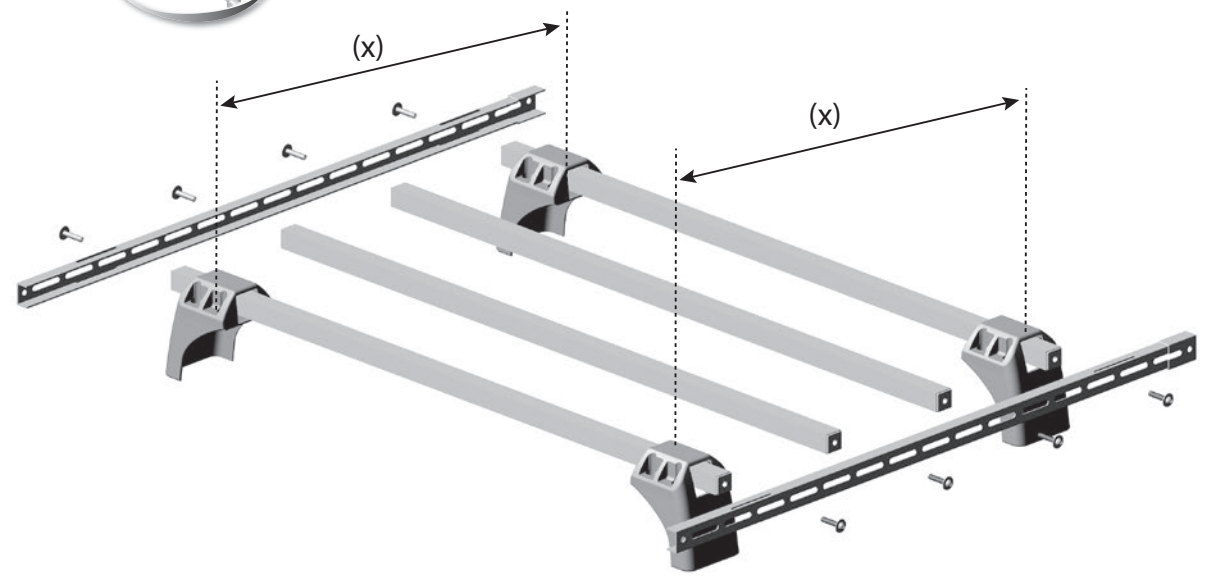



4



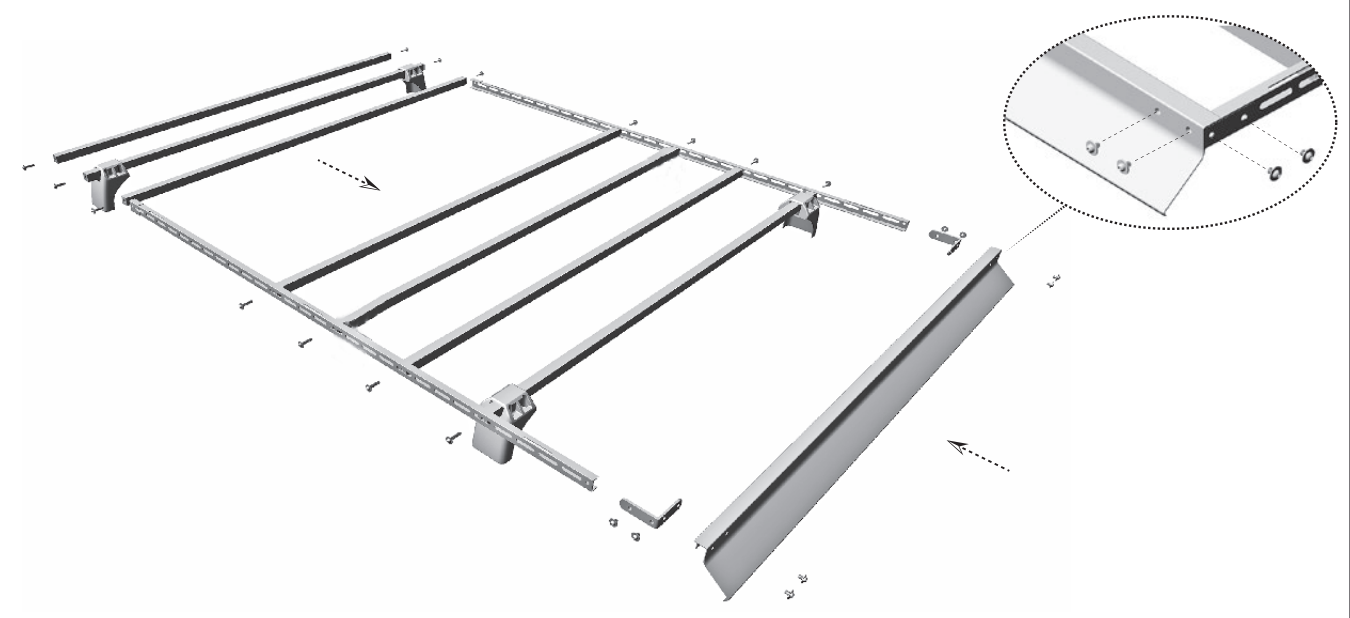



5

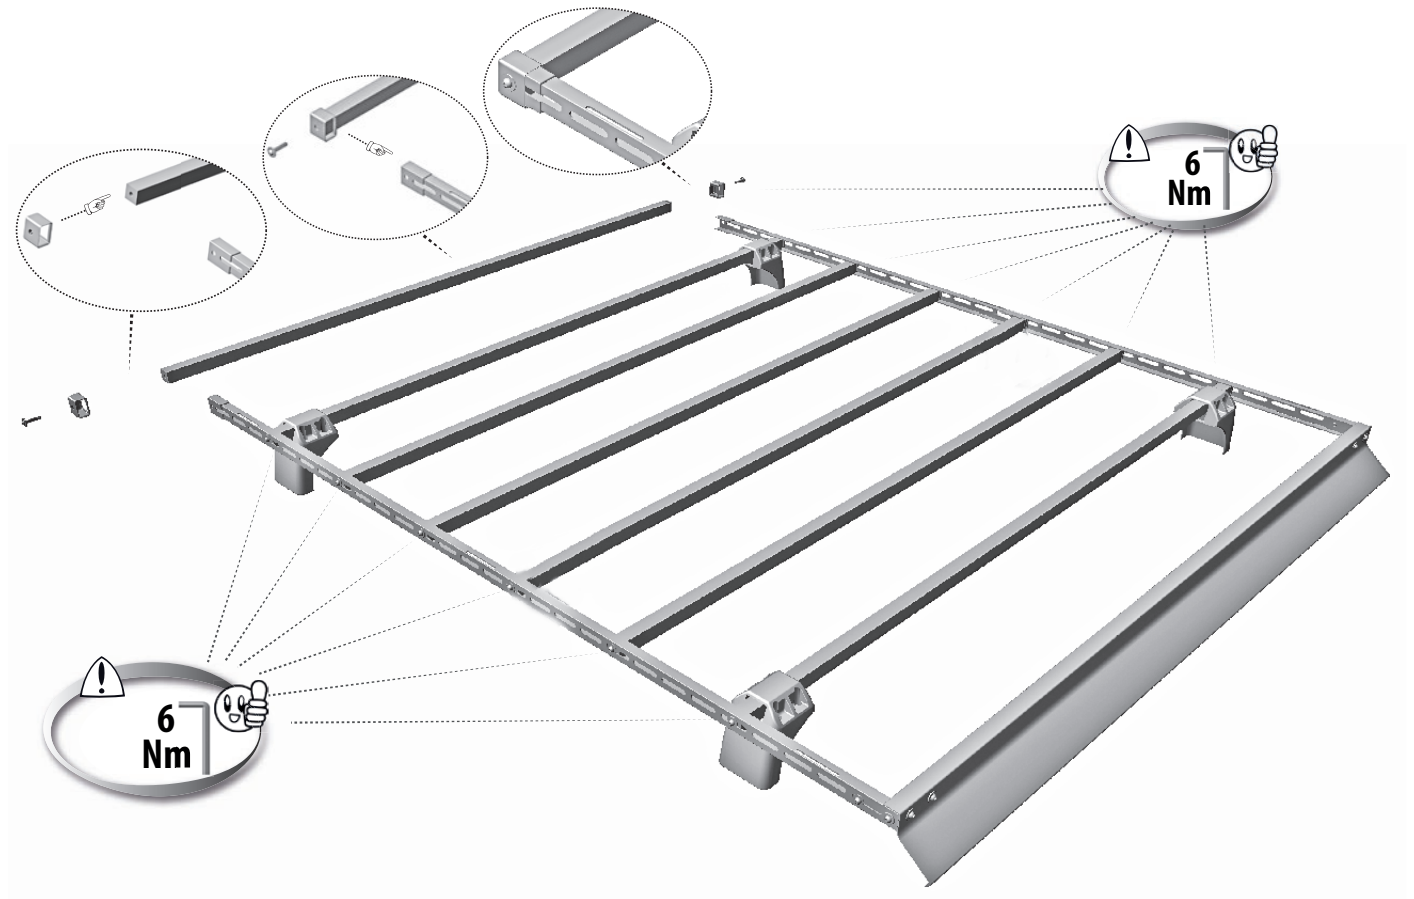


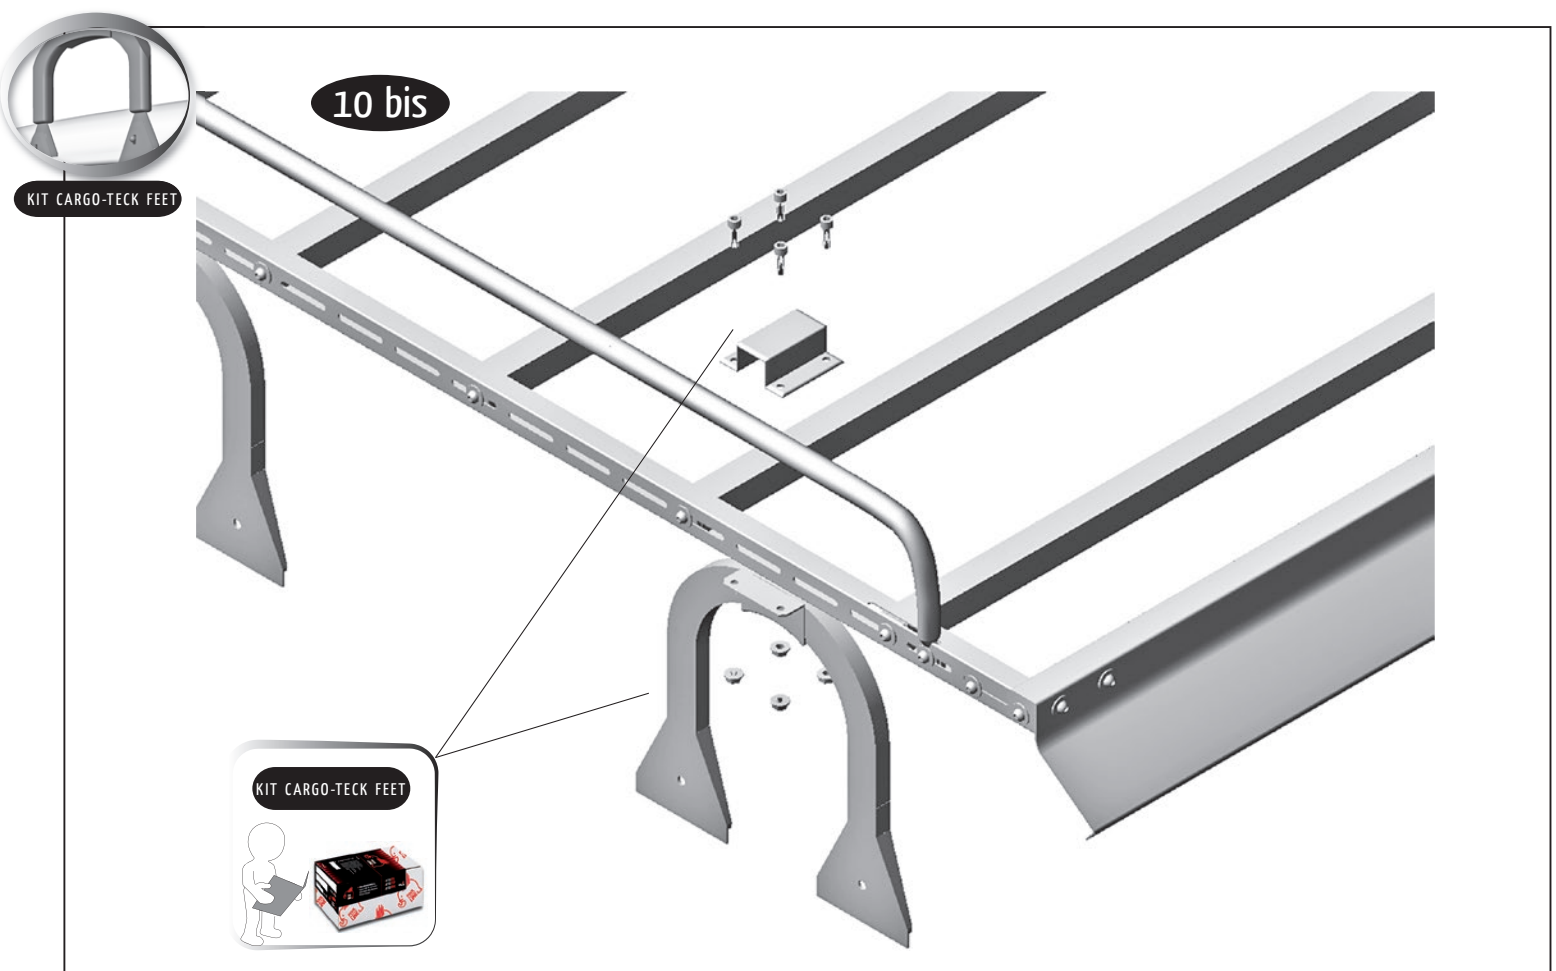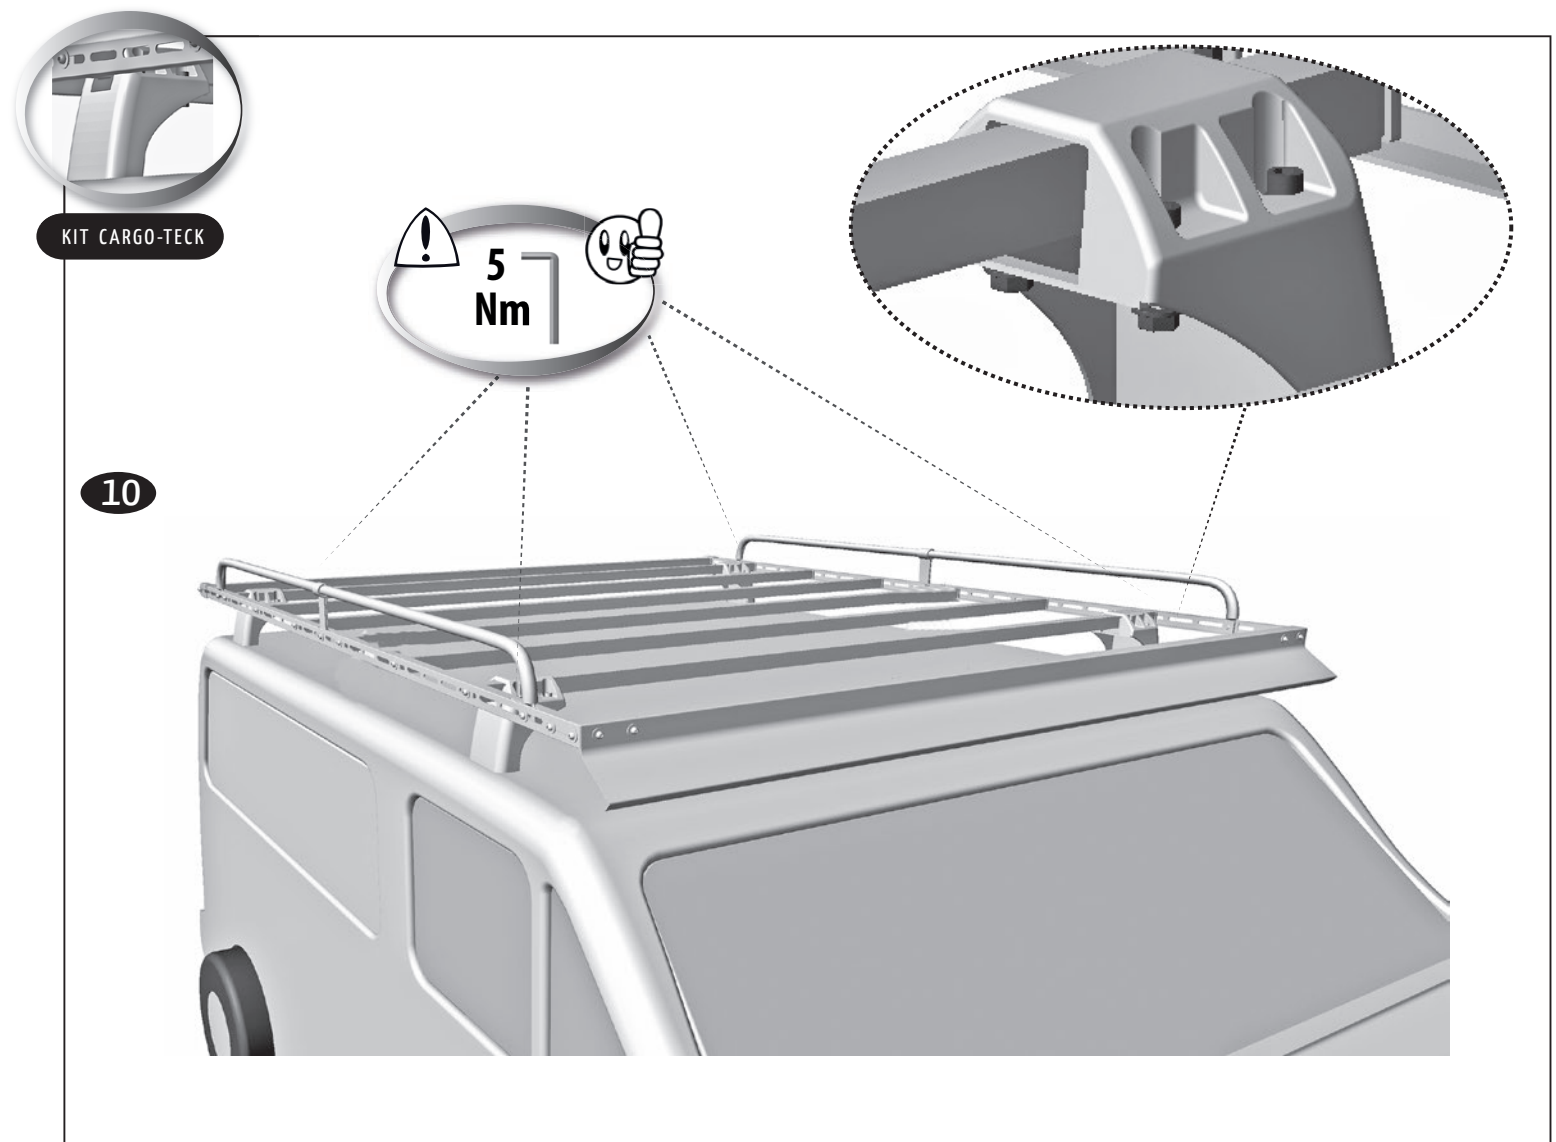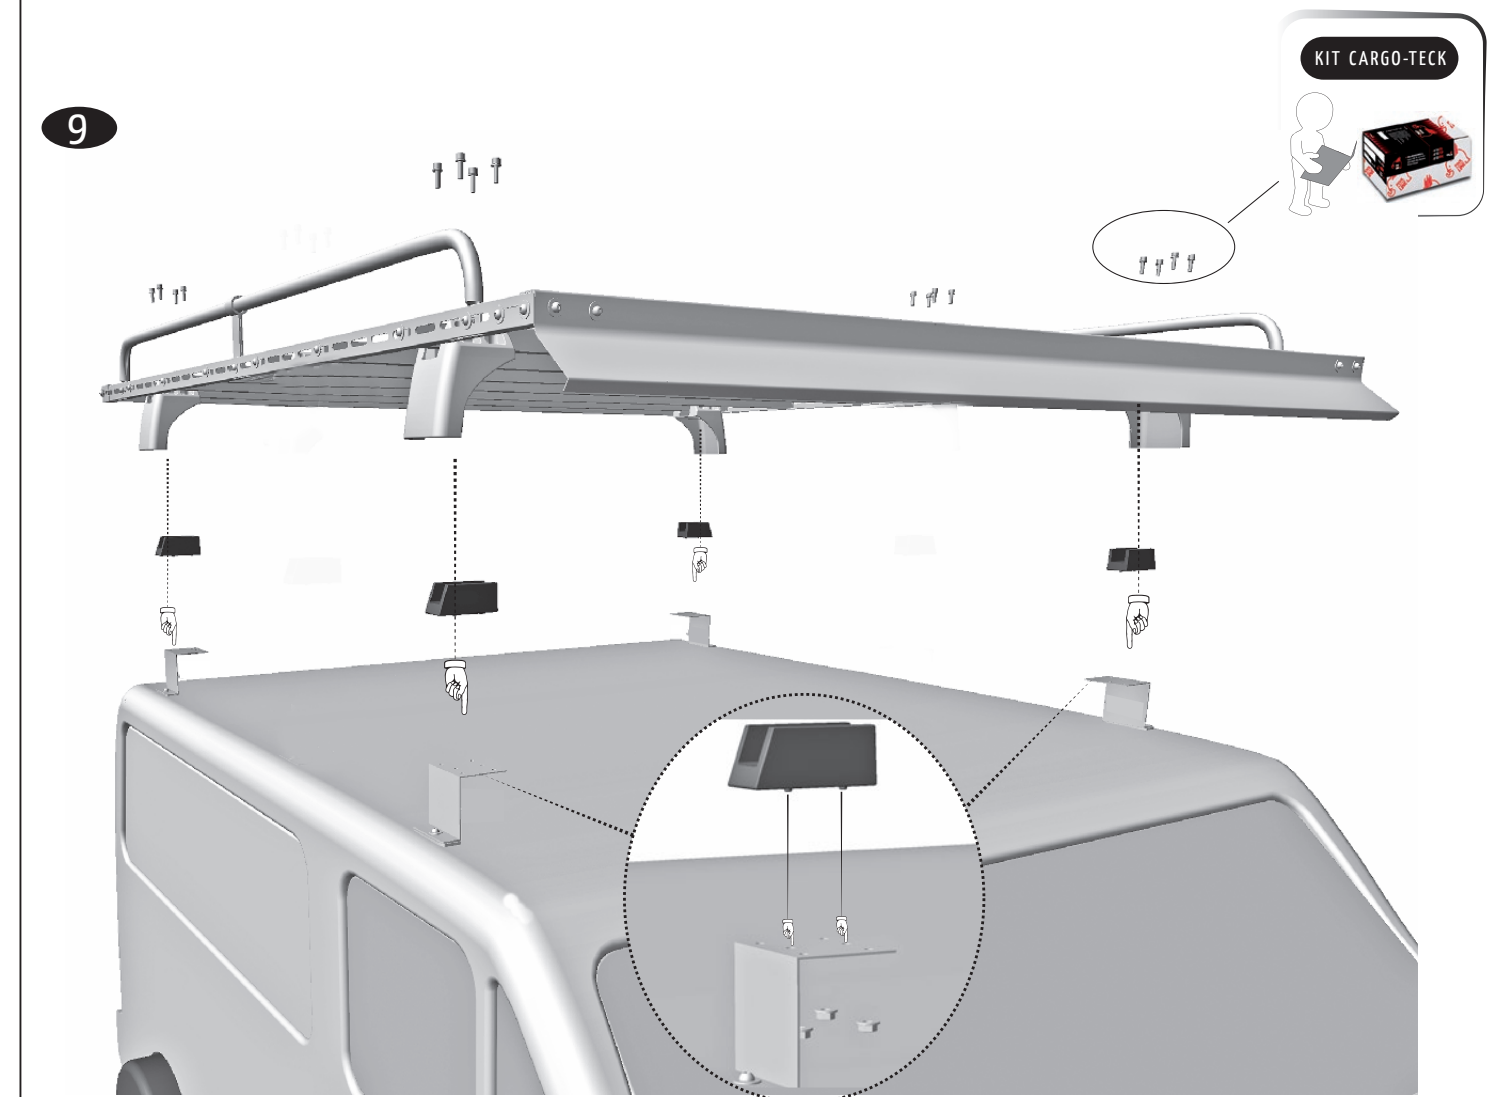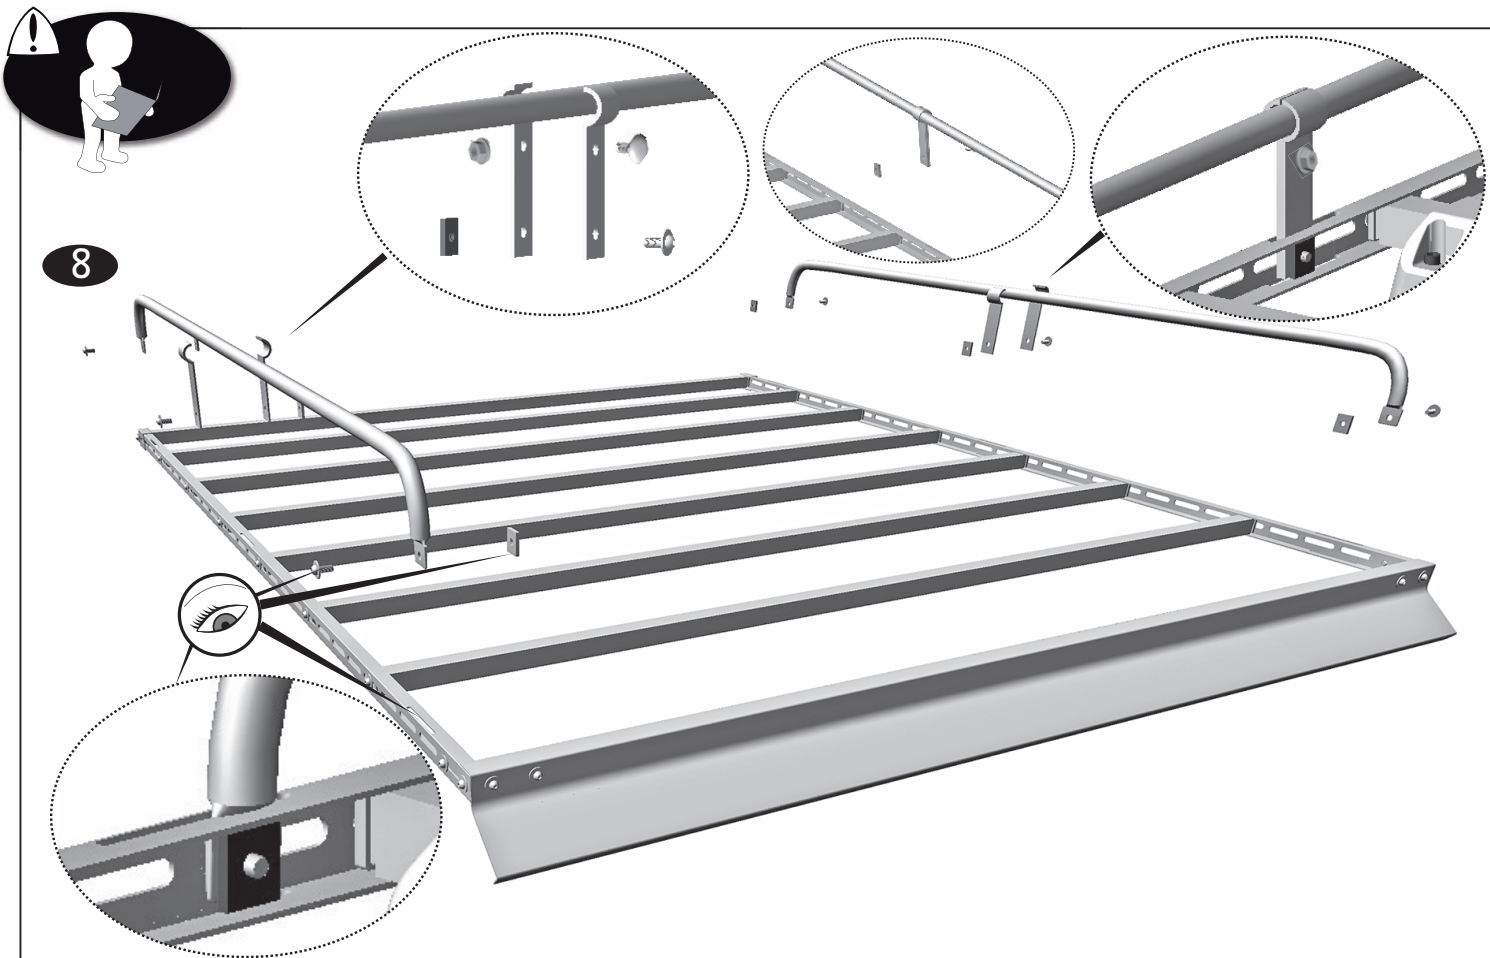

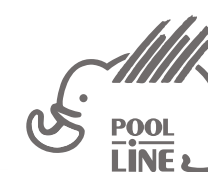

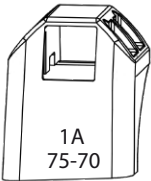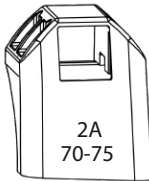N			Q
1			2+2
2			2+2
3			4
4			1

N	BO0060	Q
8	 DIN912 M6x20	16
9	 DIN125	16

N	BO0035	Q
10	 ISO 7380 M8x20	4

N	BO0032	Q
11	 Din125 Ø8	4

- E

Instrucciones de montaje

Kit de fijación
- C

Instruccions de muntatge

Kit de fixació
- GB

Assembly instrucctions

Fixation Kit
- F

Instruction de montage

Kit fixation
- D

Montageanleitung

Stützfuß-Kit
- PT

Instruções de montagem

Kit fixação
- I

Istruzioni di montaggio

Kit di fissaggio
- PL

Instrukcja montażu

Element mocujący
- CZ

Montážní návod

Fixační kit
- HU

Szerelési Utasítás

Rögzítő készlet
- RO

Instrucțiuni de montaj


Kit de fixare
- HR

Detaljne upute

Kit za montažu
- TU

Öncelikle montaj

Montaj kiti

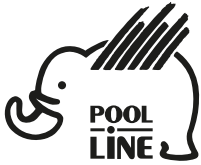

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN:




E9

26R-03.1043


RECYCLABLE

121071

Rv: 08/2024

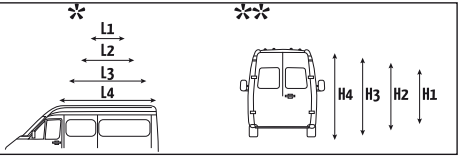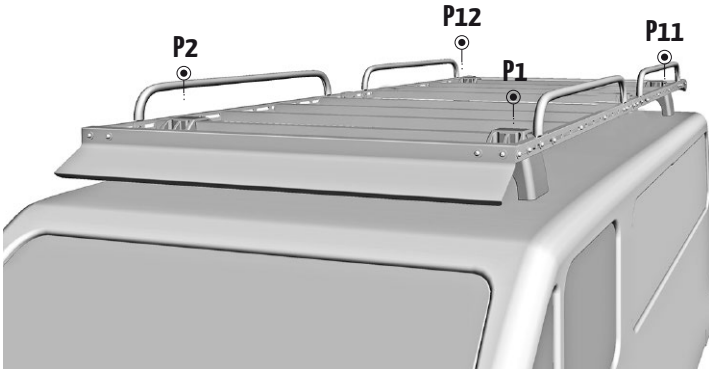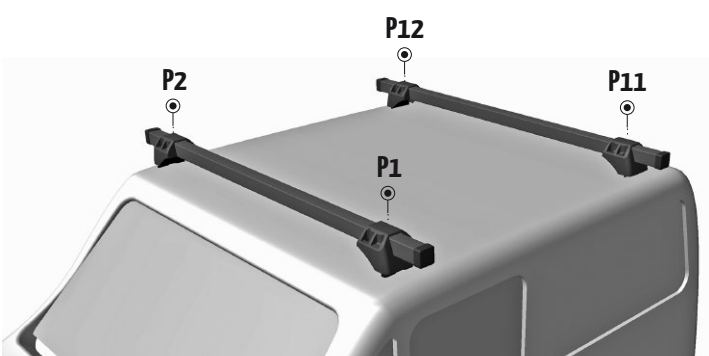

	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
MERCEDES																
CITAN W415	L1	H1	12-21	B00032 + B00035	225+1A	226+2A									226+2A	225+1A
CITAN W415	L2	H1	12-21	B00032 + B00035	225+1A	226+2A									226+2A	225+1A
NISSAN																
NV250	L2	H1	19-21	B00032 + B00035	225+1A	226+2A									226+2A	225+1A
RENAULT																
KANGOO II	L1	H1	08-21	B00032 + B00035	225+1A	226+2A									226+2A	225+1A
KANGOO II	L2	H1	08-21	B00032 + B00035	225+1A	226+2A									226+2A	225+1A

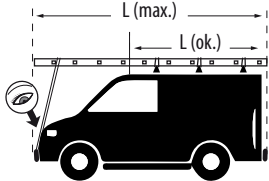

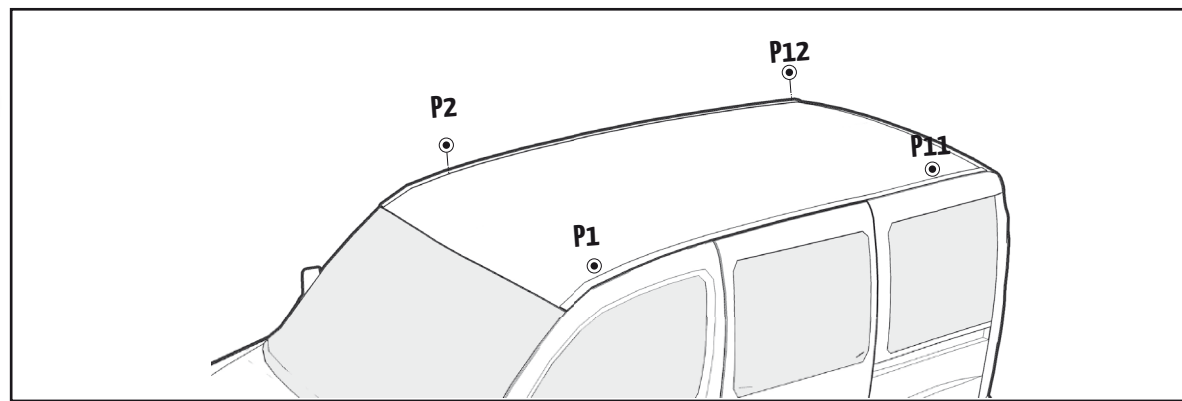


Diagram showing a table with a magnifying glass over it, and three components labeled 1, 2, and 3.

P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
xxx	xxx									xxx	xxx
xxx	xxx									xxx	xxx
xxx	xxx									xxx	xxx
xxx	xxx									xxx	xxx
xxx	xxx									xxx	xxx
xxx	xxx									xxx	xxx
xxx	xxx									xxx	xxx
xxx	xxx									xxx	xxx

Pag. 1

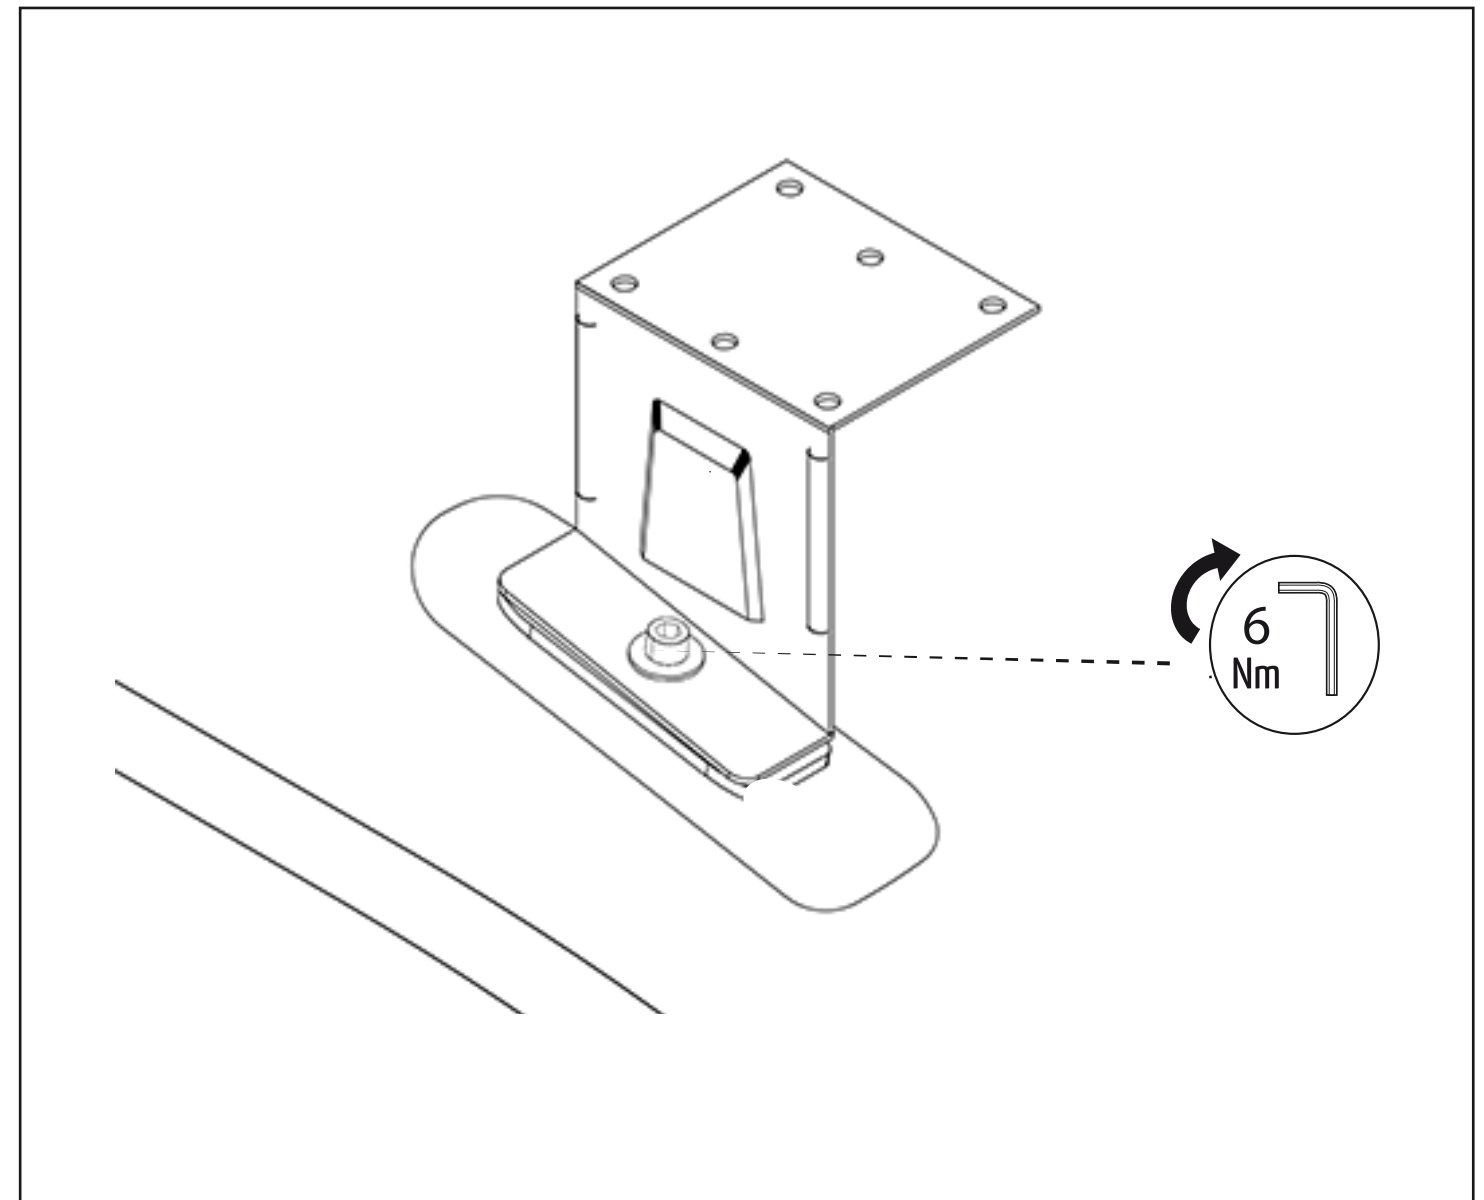


Diagram showing a component being tightened with a torque wrench, indicating 5 Nm.

Diagram showing a component being tightened with a torque wrench, indicating 5 Nm.

