

- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net



200



KG.
MAX.



Nº HOMOLOGACIÓN: E 9 26R-03.1042




RECICLABLE


123412

Rv: 05/2025

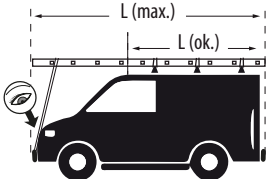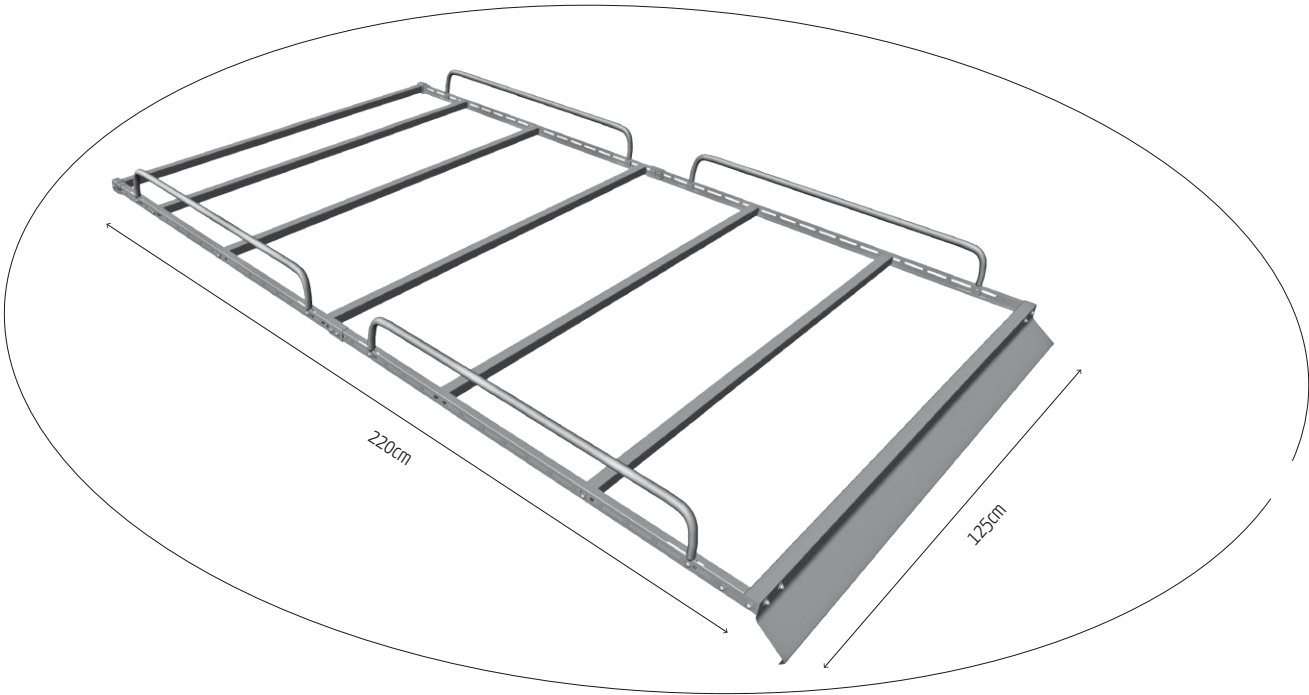

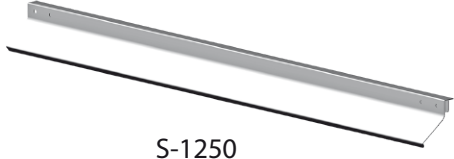N		Q
20	 S-1250	1
21		2
22	 L-1120	4
23	 B-842	4
24	 T-1235	6
25		14
26		2
27		8
28	 CHA-M8	12
29	 ISO 7380 M8x30	10
30	 ISO 7380 M8x16	20
31	 DIN 125 Ø 8	32
32	 ISO 7380 M8x40	2


N		Q
32		1

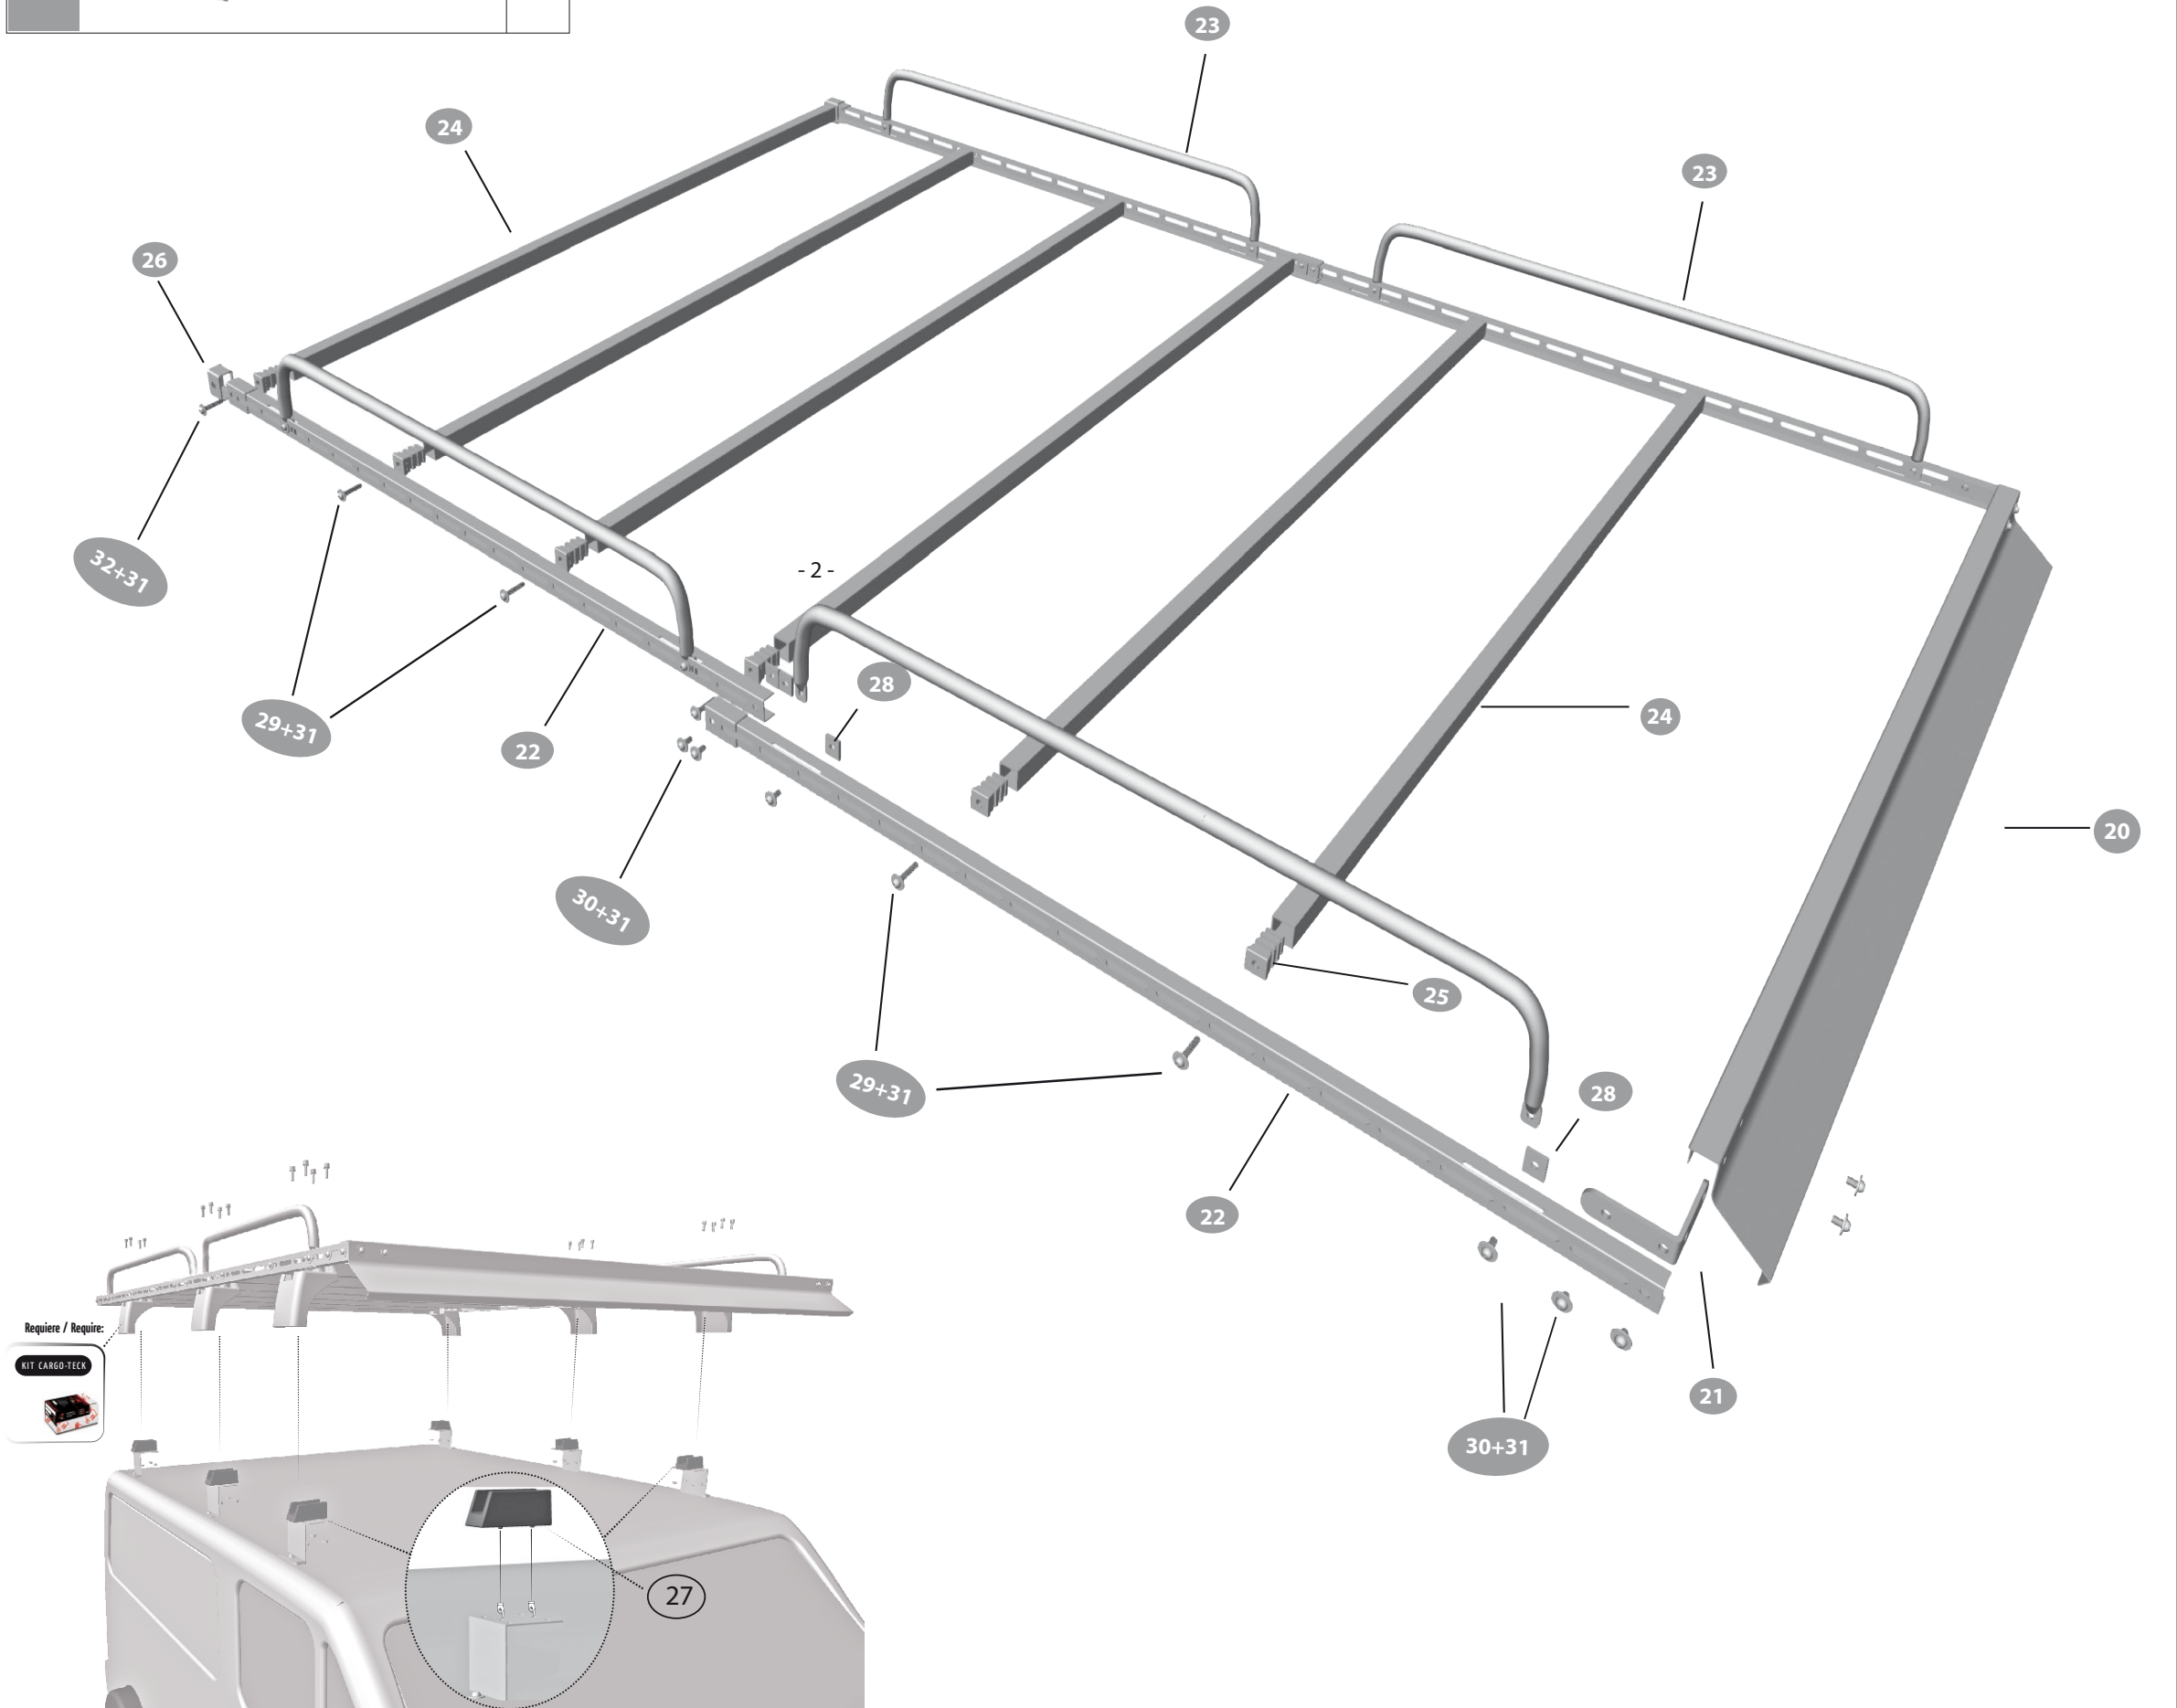



Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone


CITROËN C15

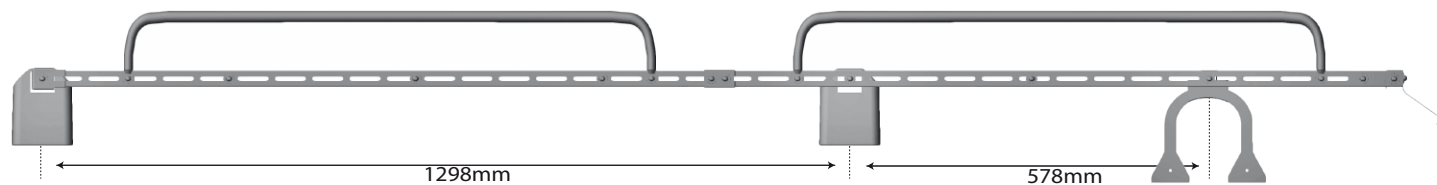



FORD CONNECT I L2 (04-13)




FORD CONNECT II L2 (13-)

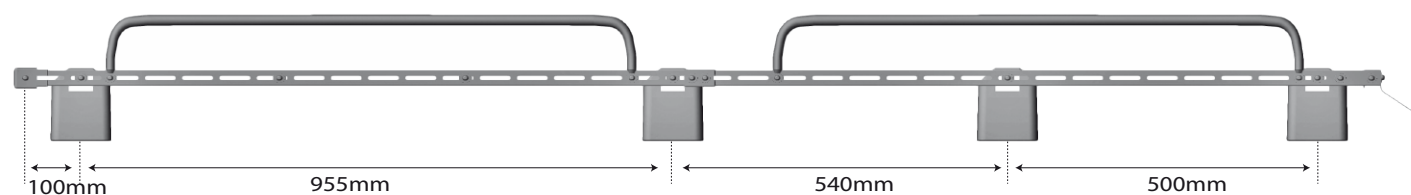

**FORD CONNECT III L1 (2022->)
VOLKSWAGEN CADDY V L1 (2021->)**

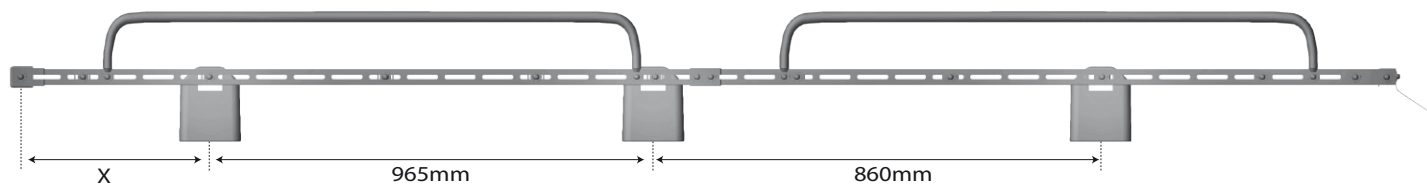


**MERCEDES CITAN L3
NISSAN NV250 L2
RENAULT KANGOO II L3**

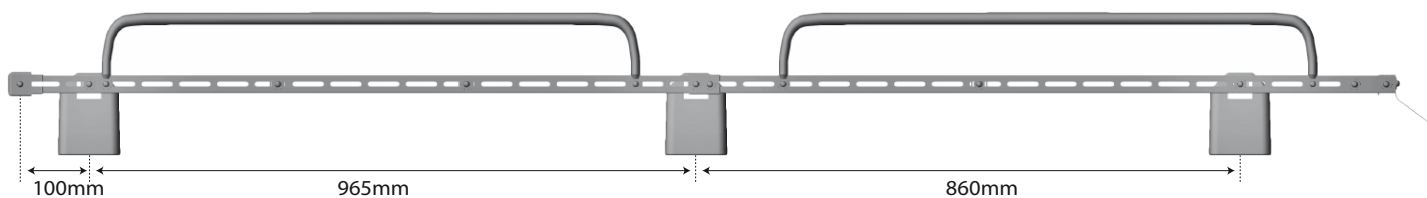


Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone


VOLKSWAGEN CADDY III L2 (04-13)

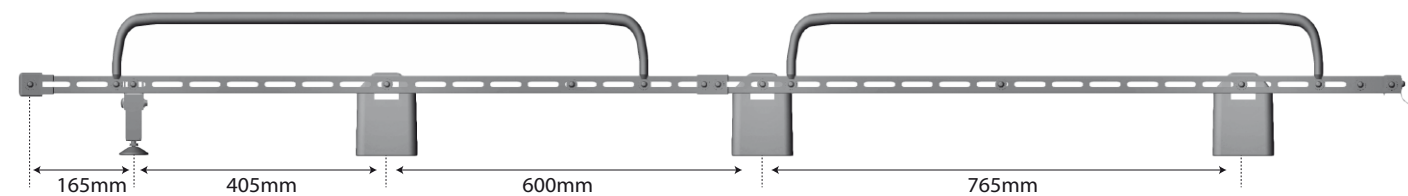


VOLKSWAGEN CADDY III.2 / IV L1 (2011-)

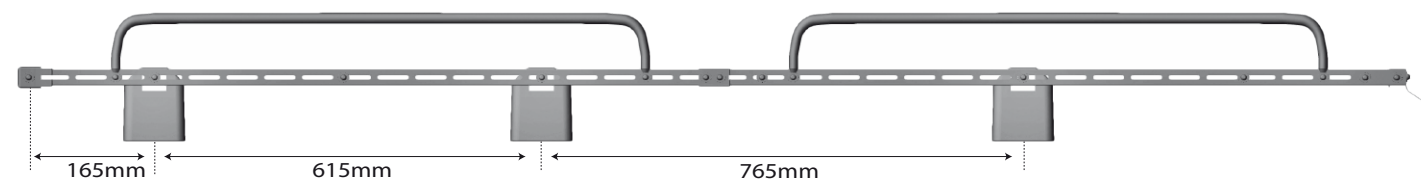


FORD COURIER II L1 (2024-)

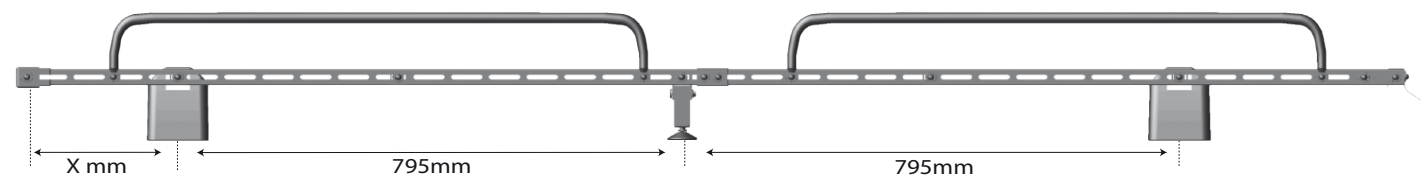


NISSAN KUBISTAR L2 / RENAULT KANGOO I L2 (97-09)

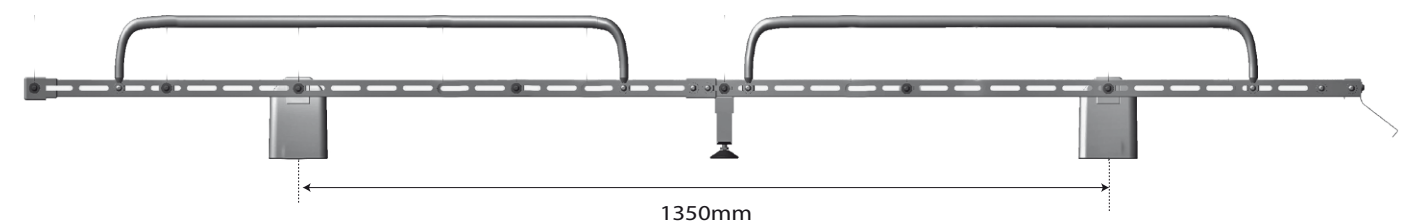


VOLKSWAGEN CADDY MAXI L2 (2011->)

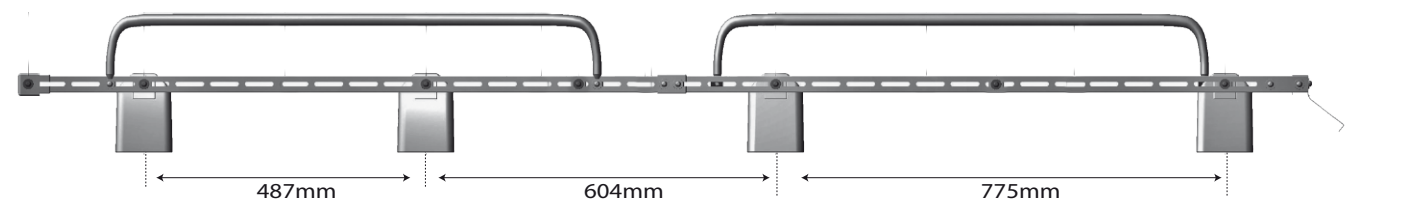


1

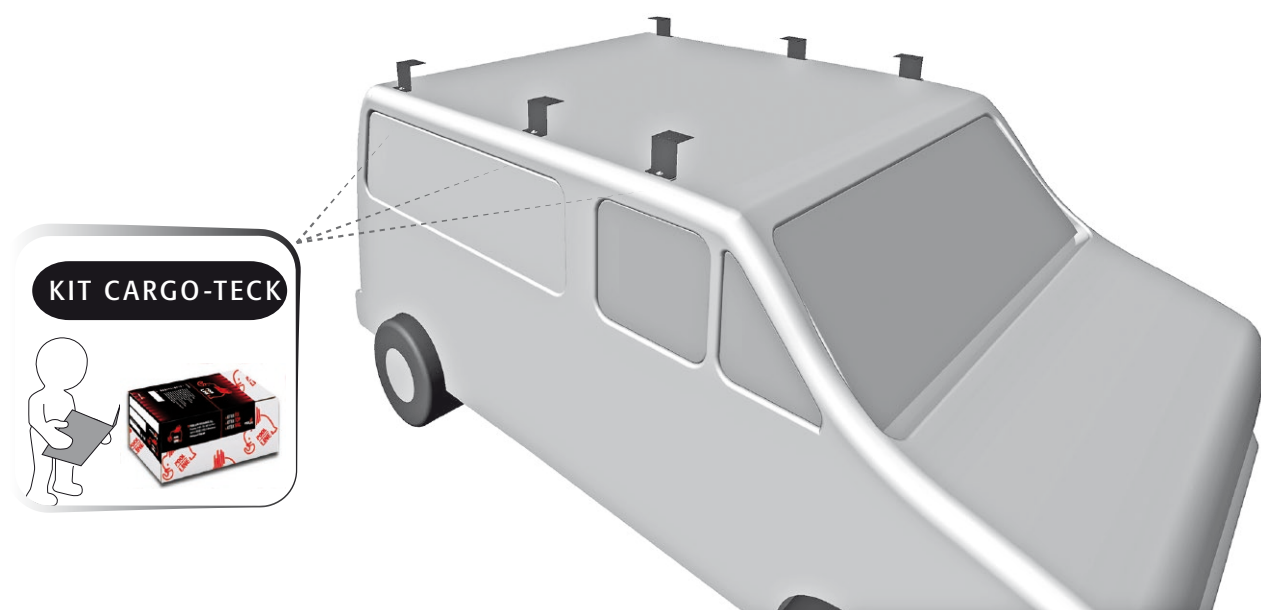


2


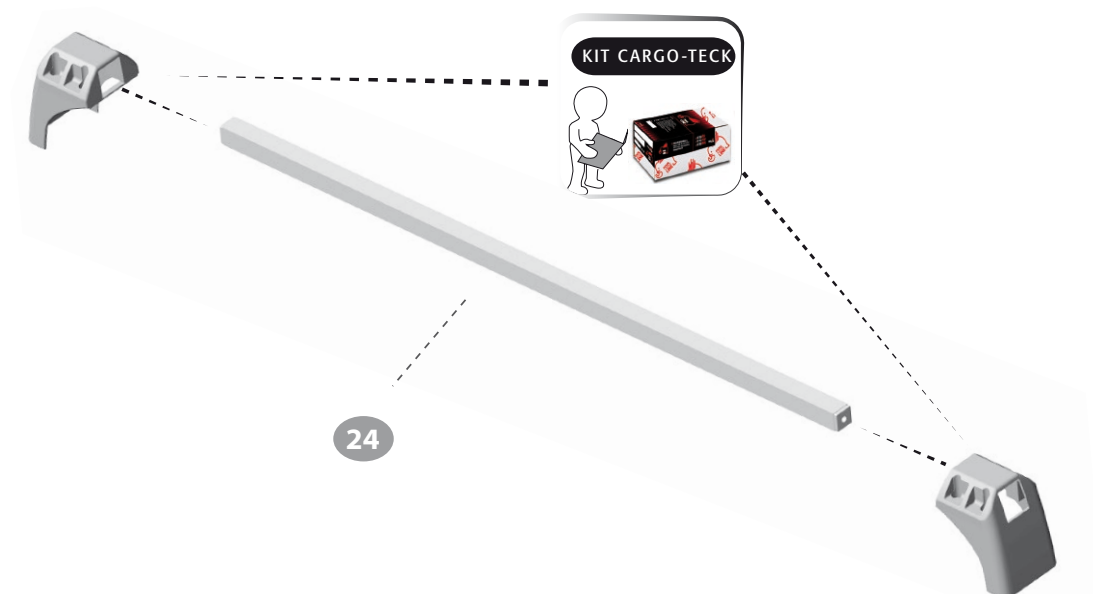


3

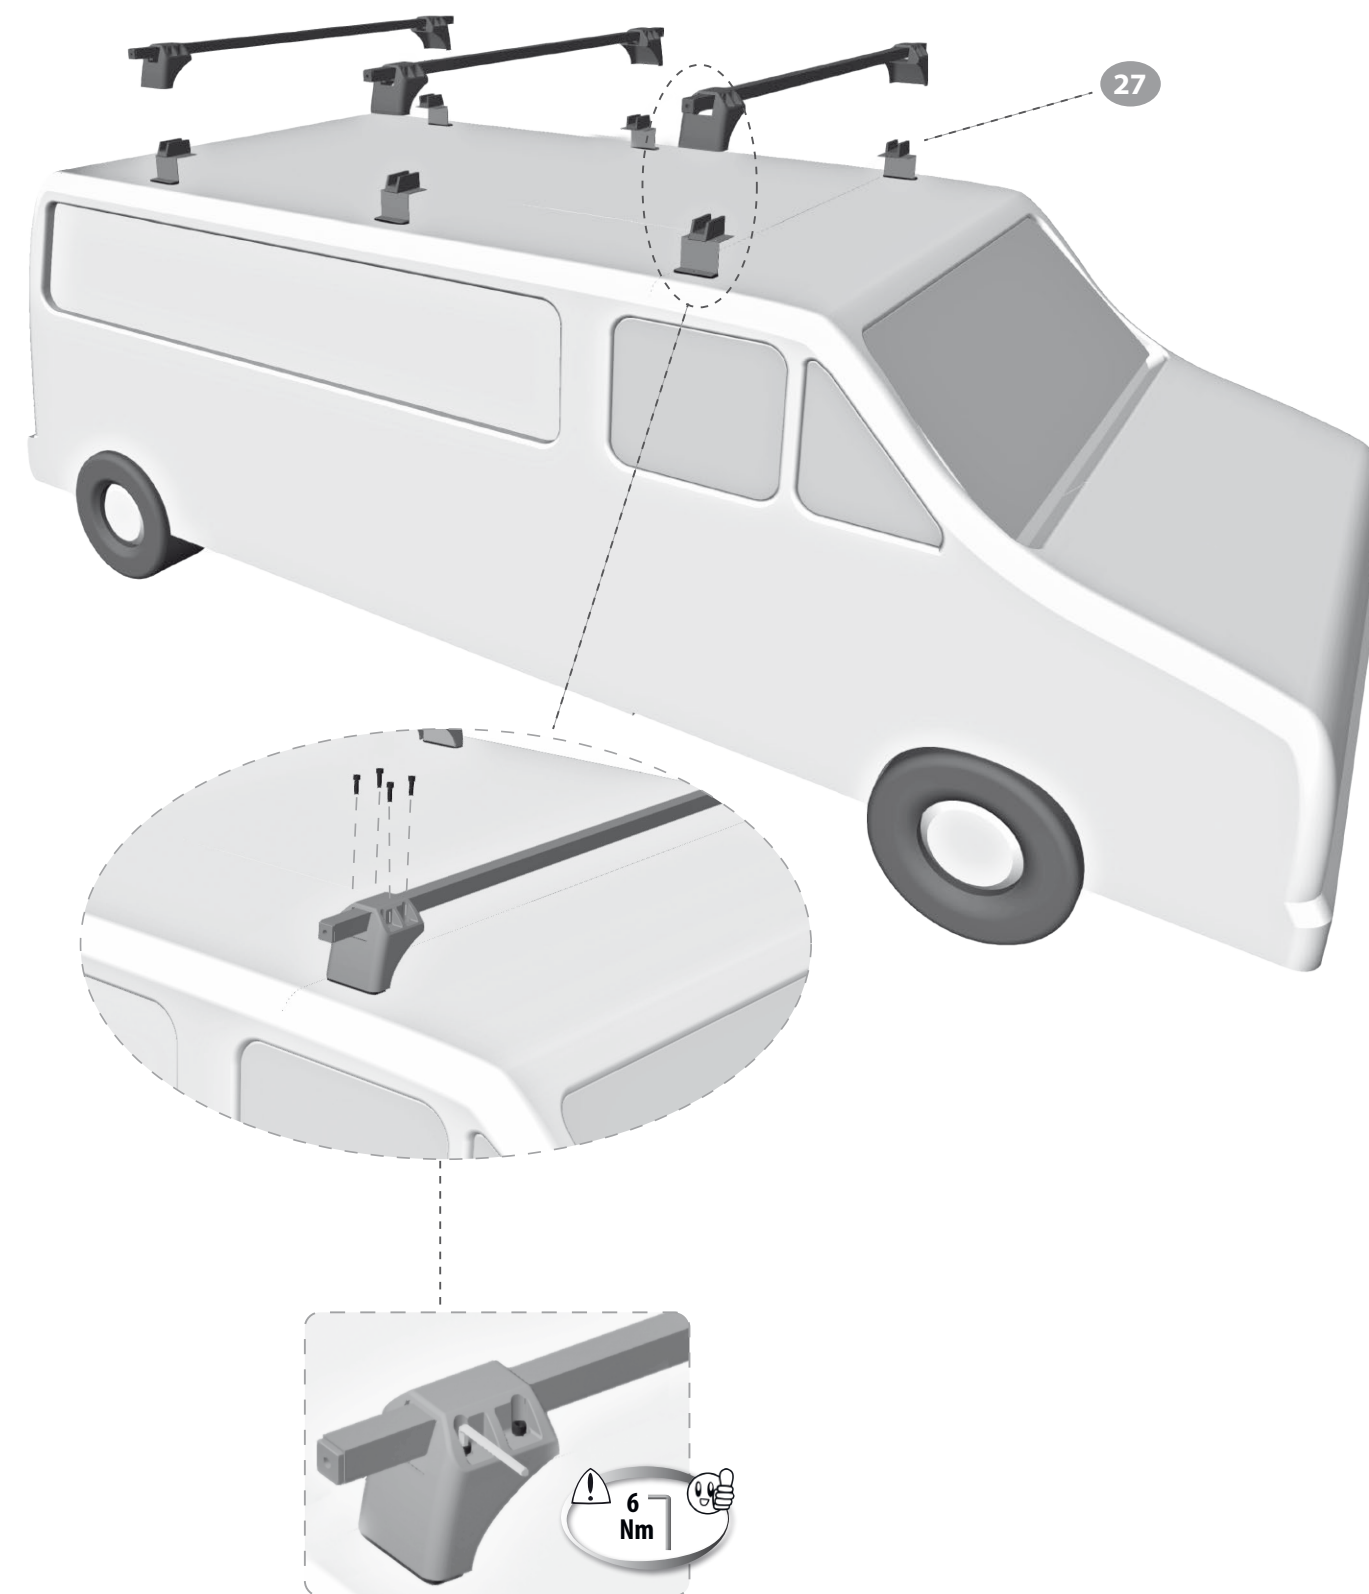


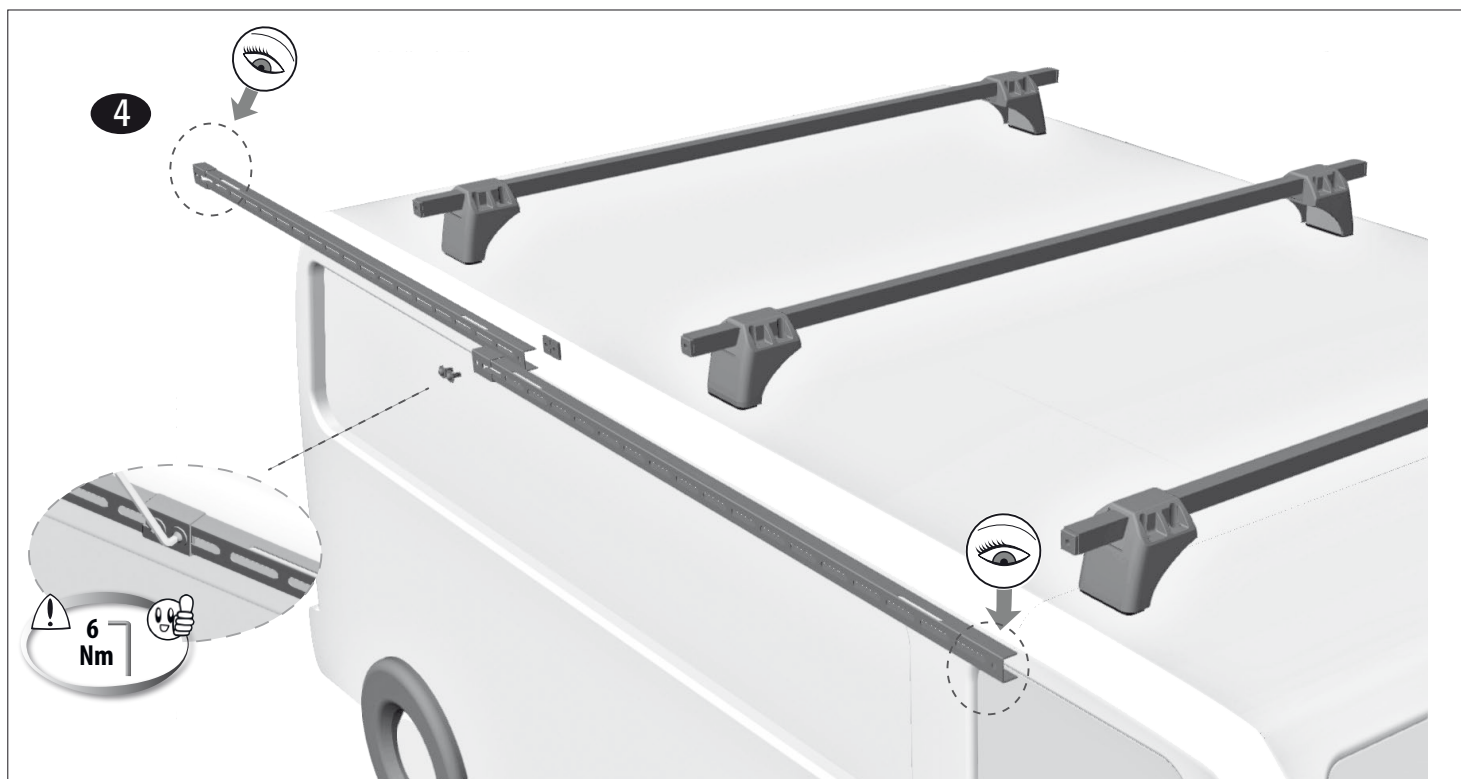


5

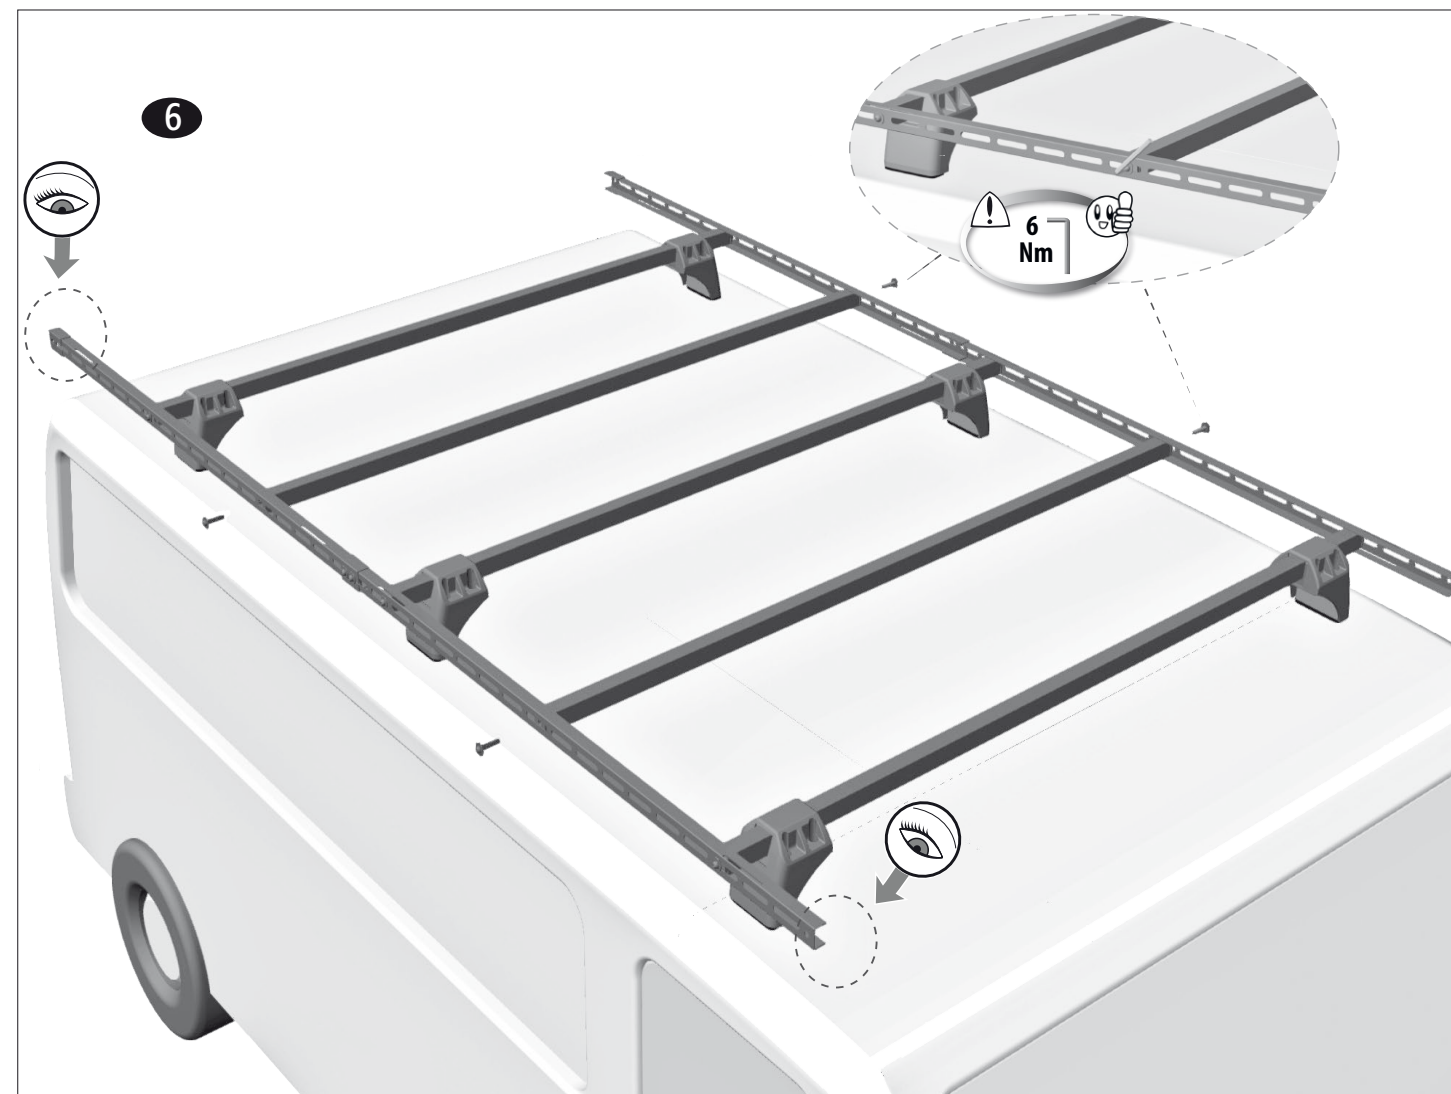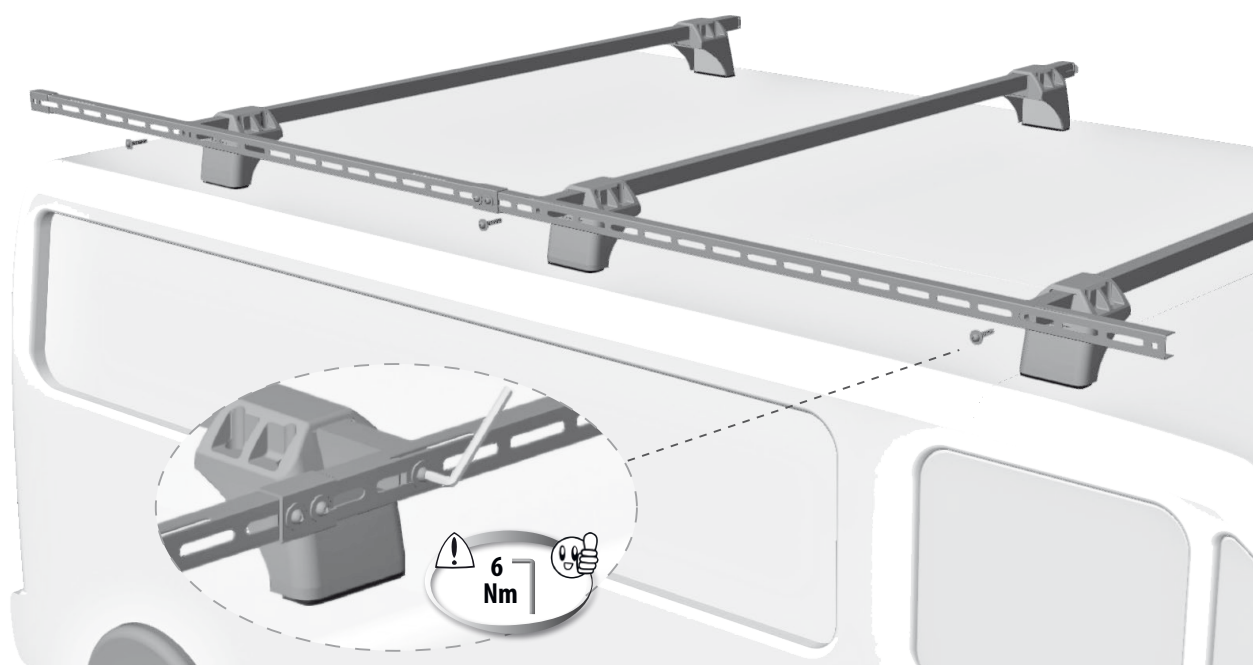



7





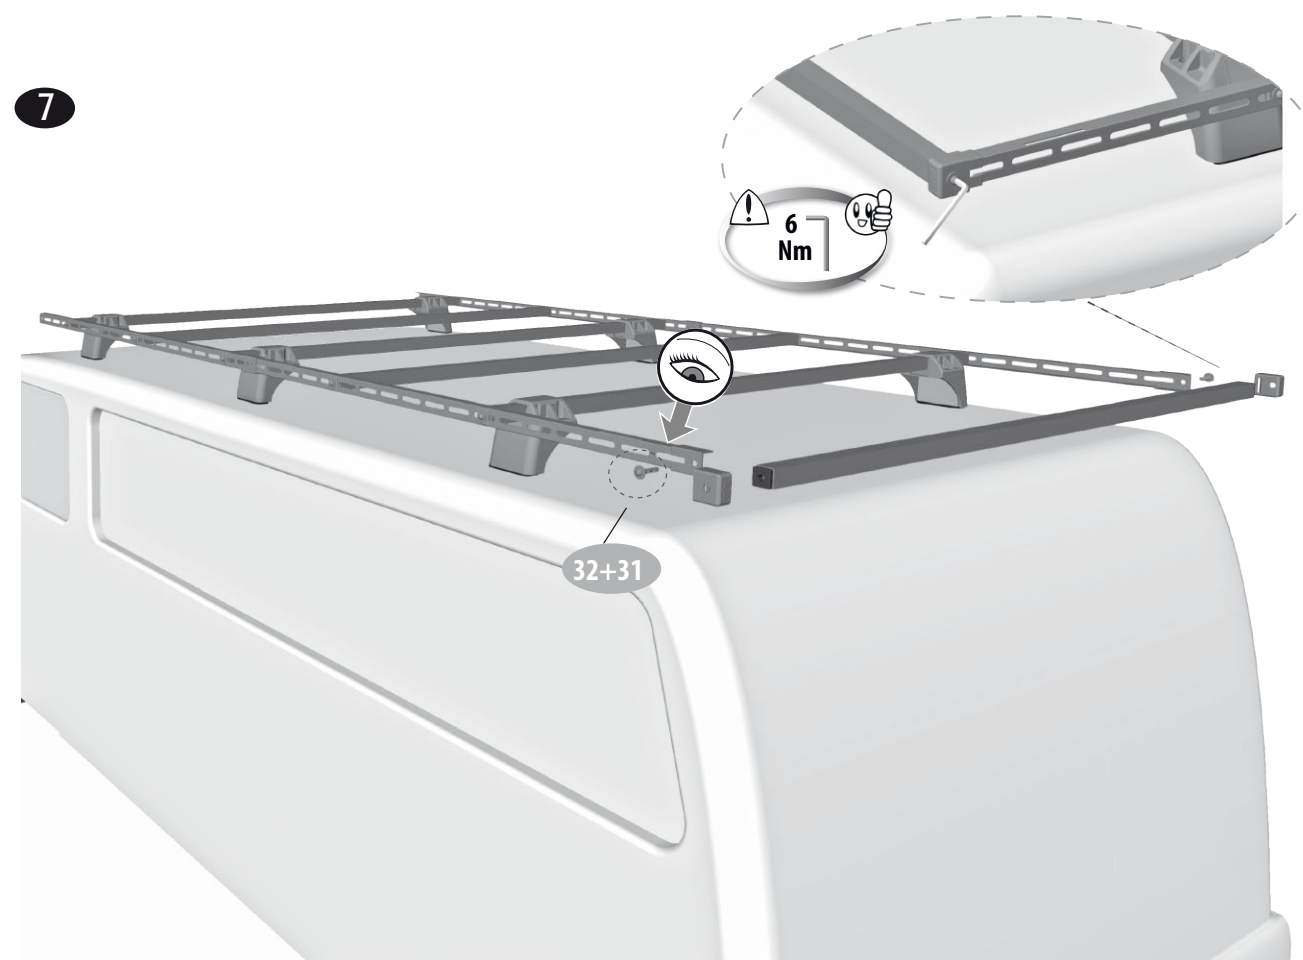



8

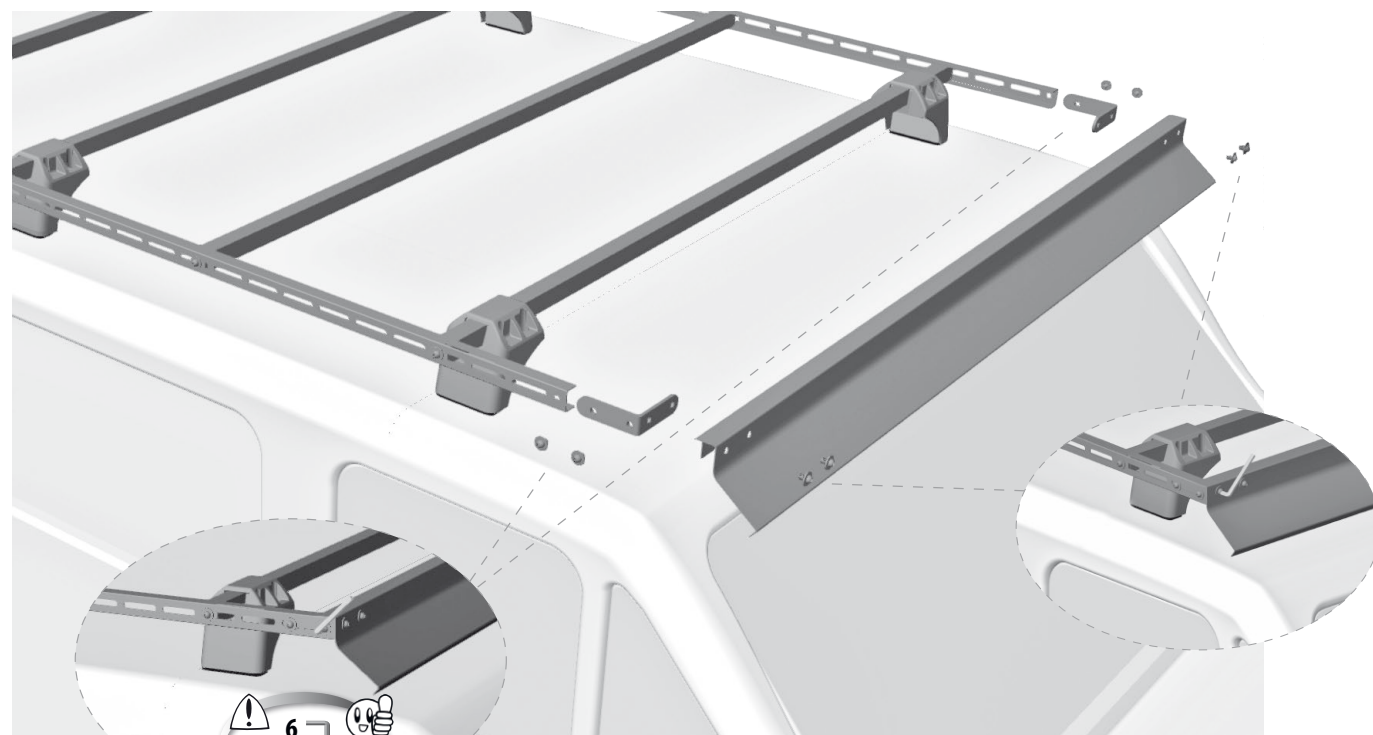



9

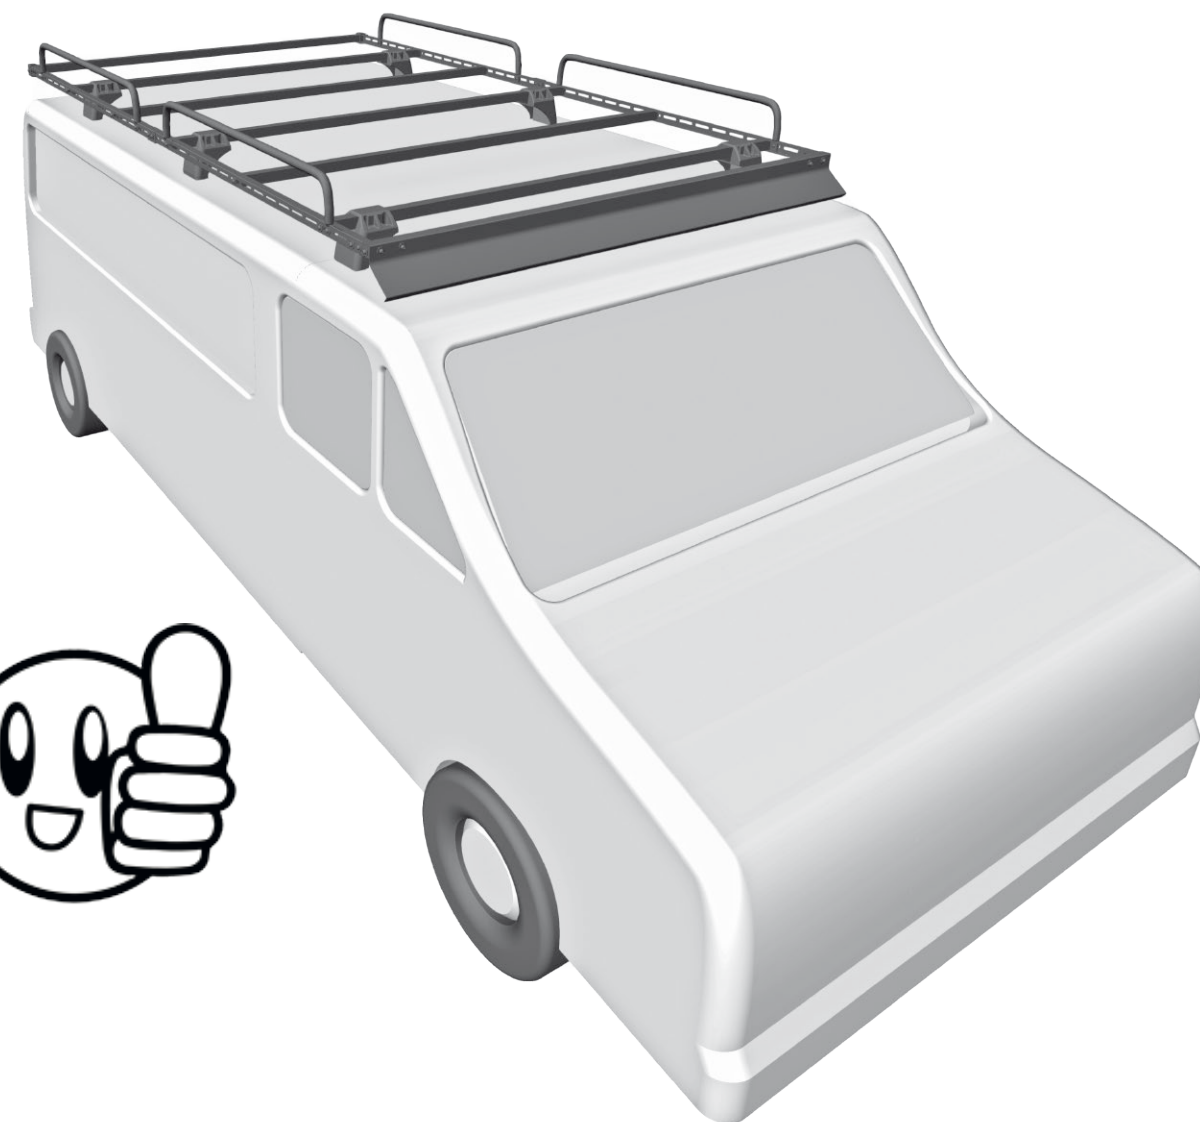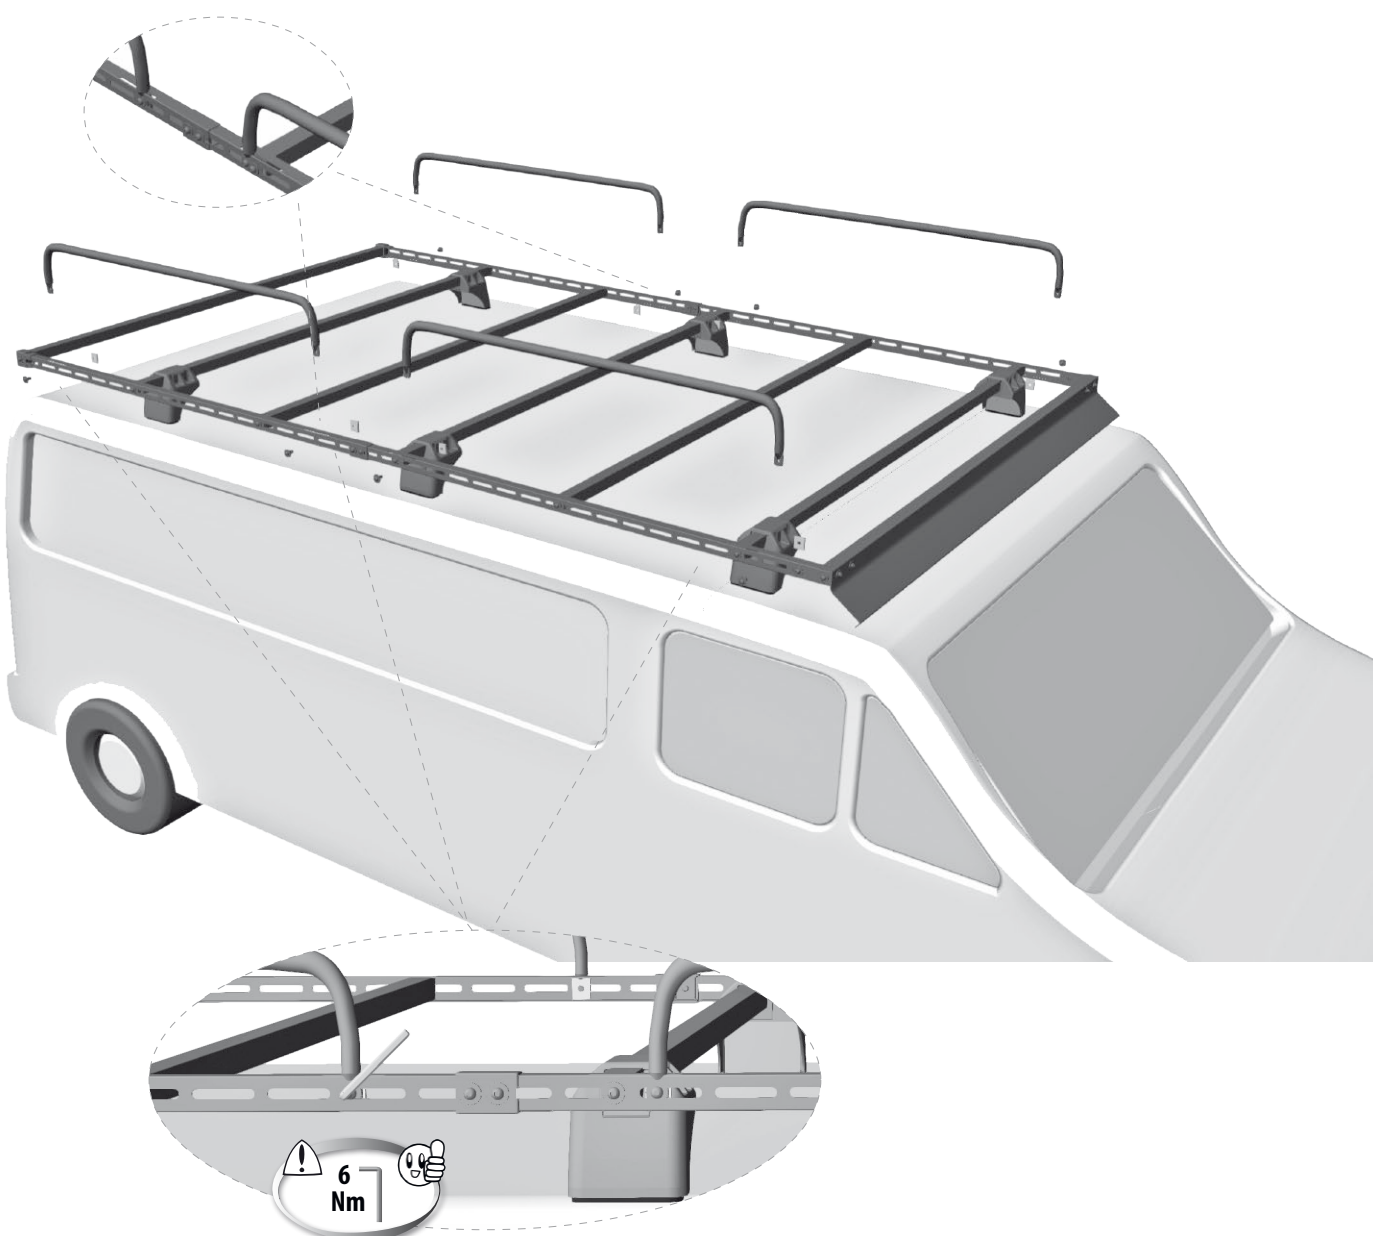


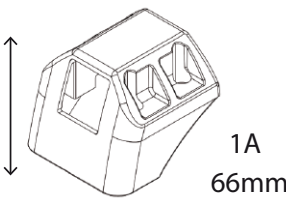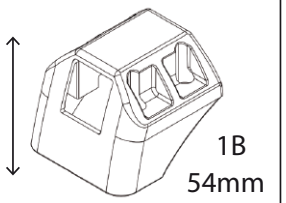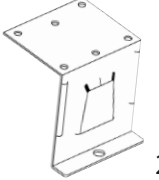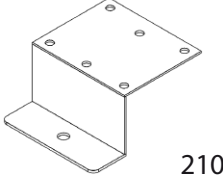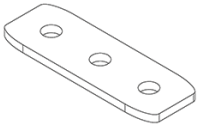N		Q		Q
1	 1A 66mm	4	 1B 54mm	2
2	 202	4	 210	2
3				6
4				1


N	BO0061	Q
8	 DIN912 M6x20	24
9	 DIN125	24

N	BO0010 x 3	Q
10	 ISO 7380 M8x20	6
11	 Din125 Ø8	6

N	BO0006 x 3	Q
10	 DIN912 M6x16	6
11	 DIN9021 Ø6	6

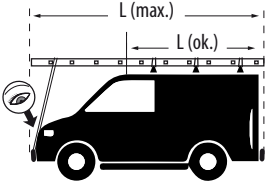


- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instrucctions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti


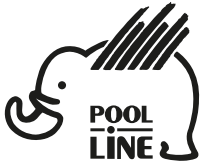


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net


Nº HOMOLOGACIÓN: **E9** 26R-03.1043



121751
Rv: 08/2025


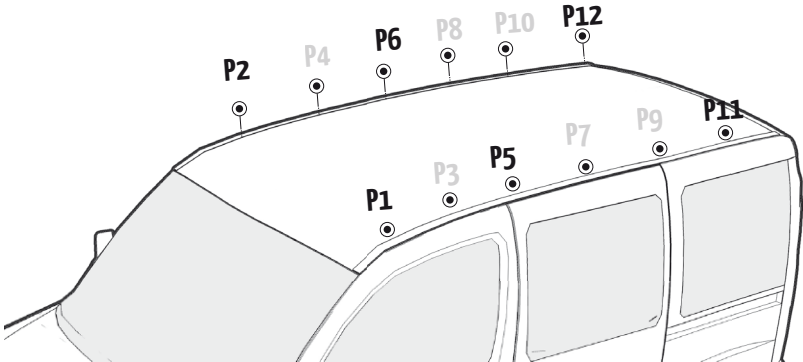
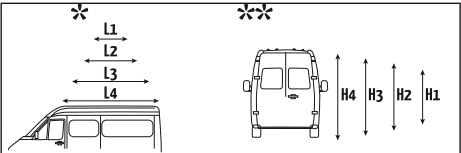


	L *	H **			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
FIAT DOBLO I	L1	H1	01-09	800006	202+1A	202+1A			210+1B	210+1B					202+1A	202+1A
MERCEDES CITAN W415	L3	H1	12-21	800010	202+1A	202+1A			210+1B	210+1B					202+1A	202+1A
NISSAN NV250	L2	H1	19-21	800010	202+1A	202+1A			210+1B	210+1B					202+1A	202+1A
RENAULT KANGOO II	L3	H1	10-21	800010	202+1A	202+1A			210+1B	210+1B					202+1A	202+1A

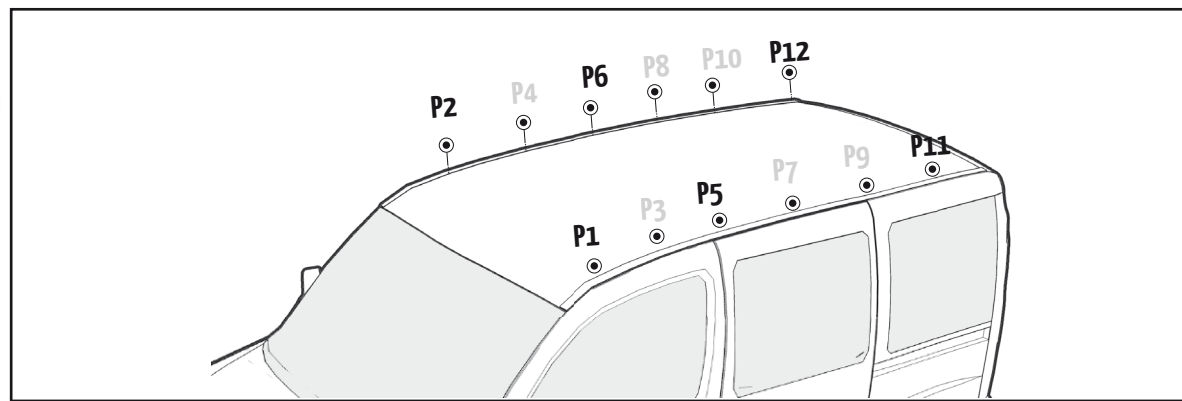

P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx

Pag. 1

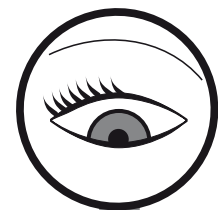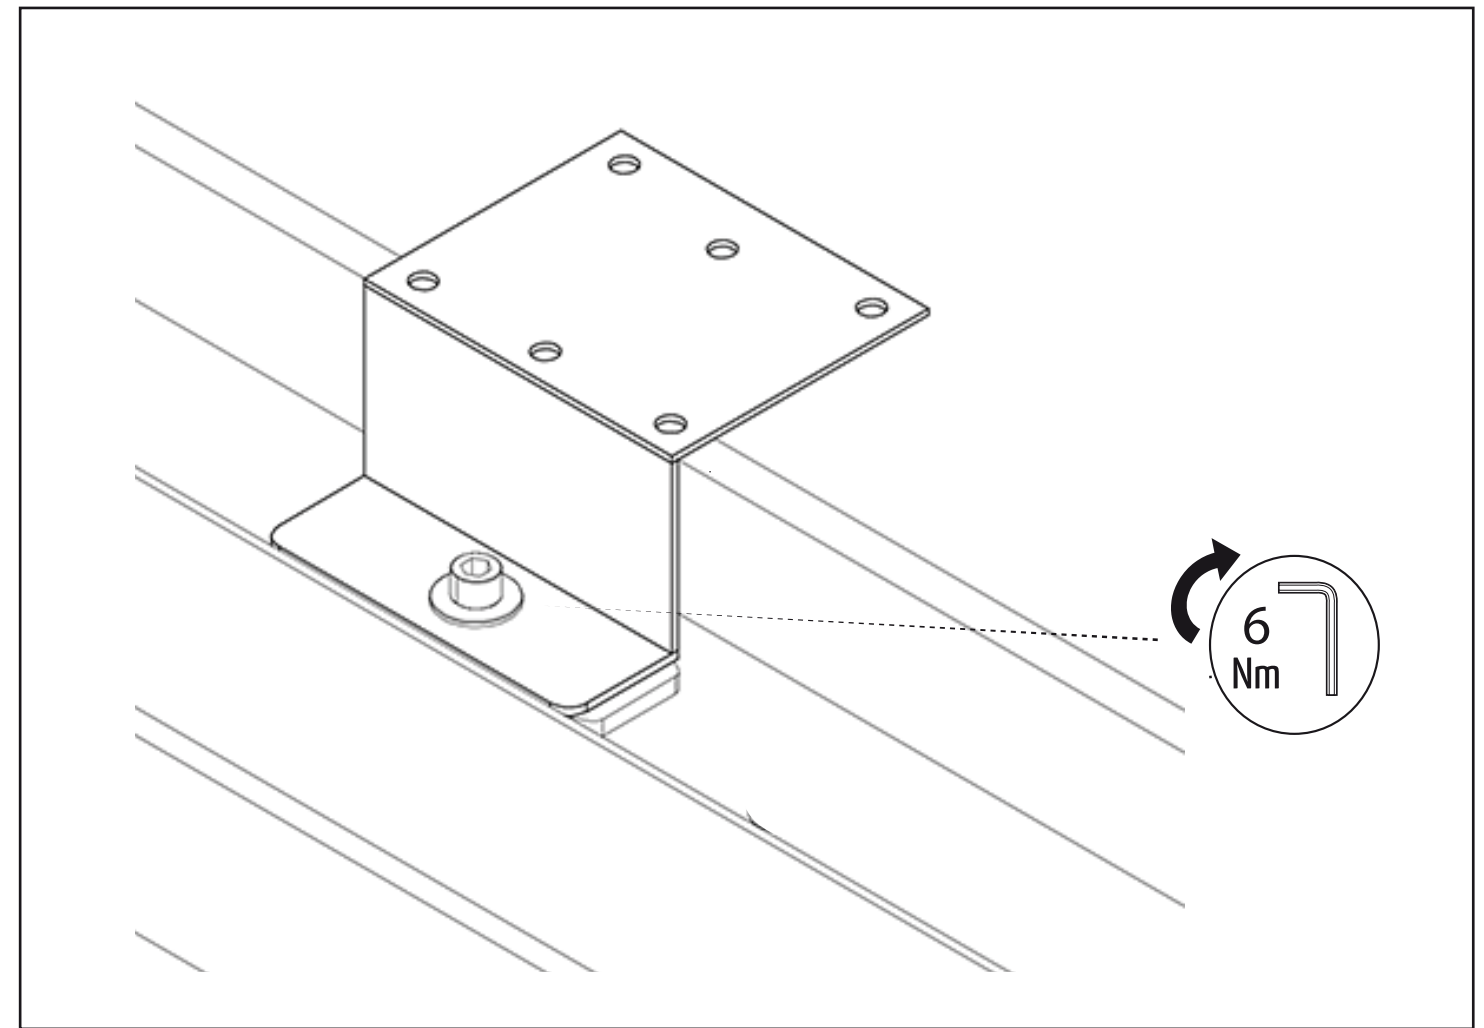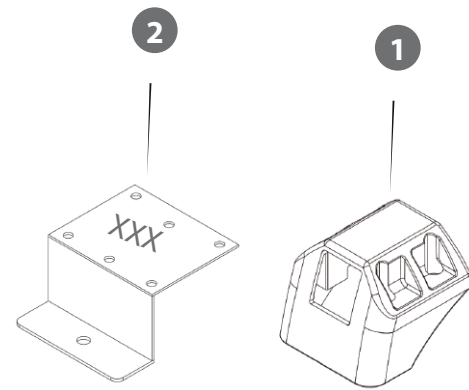

↺↻	10	P1	P2
0X	B0000XX		
0X-	B0000XX		
	B0000Y		

Pag. 1

