

- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net



200



KG.
MAX.



Nº HOMOLOGACIÓN: E9 26R-03.1042







RECICLABLE

123312

Rv: 10/2024

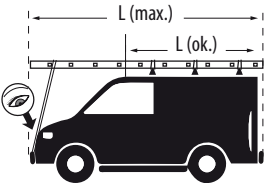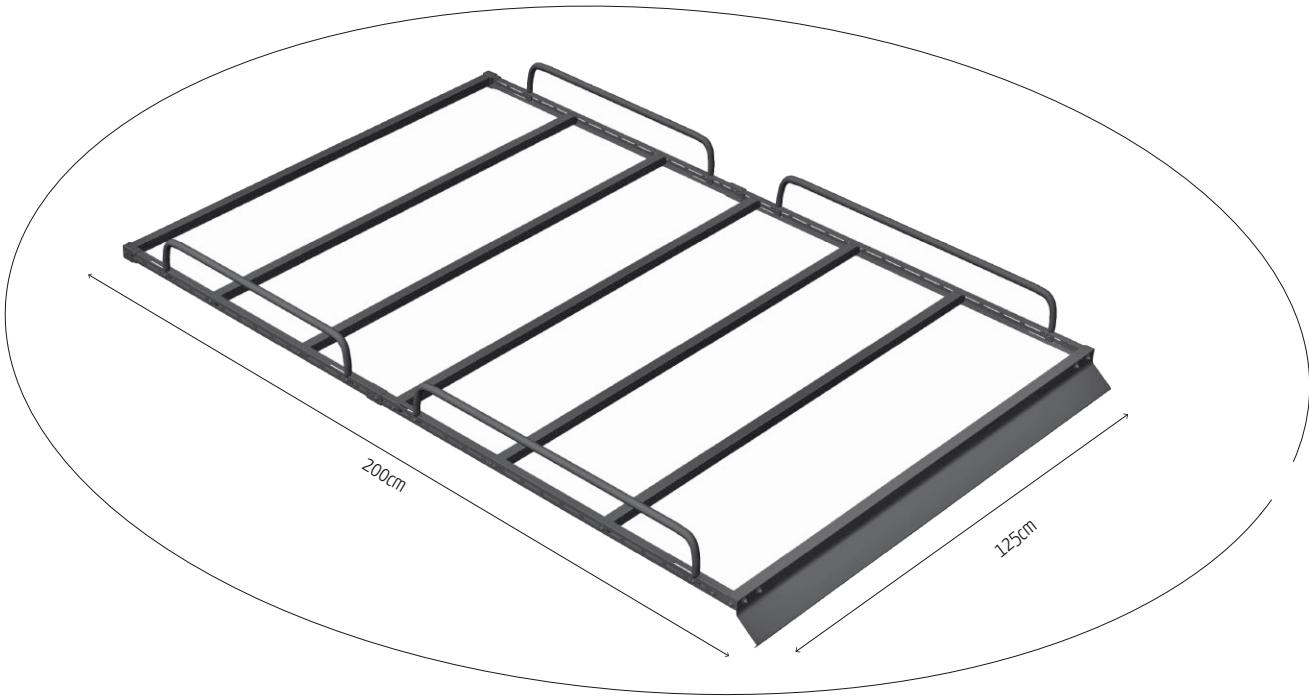


N		Q
1	 S-1250	1
2	 L-1120	2
3	 B-842	2
4	 L-943	2
5	 B-662	2
6	 T-1235	6
7	 CHA-M8	2
8		12
9		2
10		8
12		1
13		12
14		10
15		20
16		32
17		2

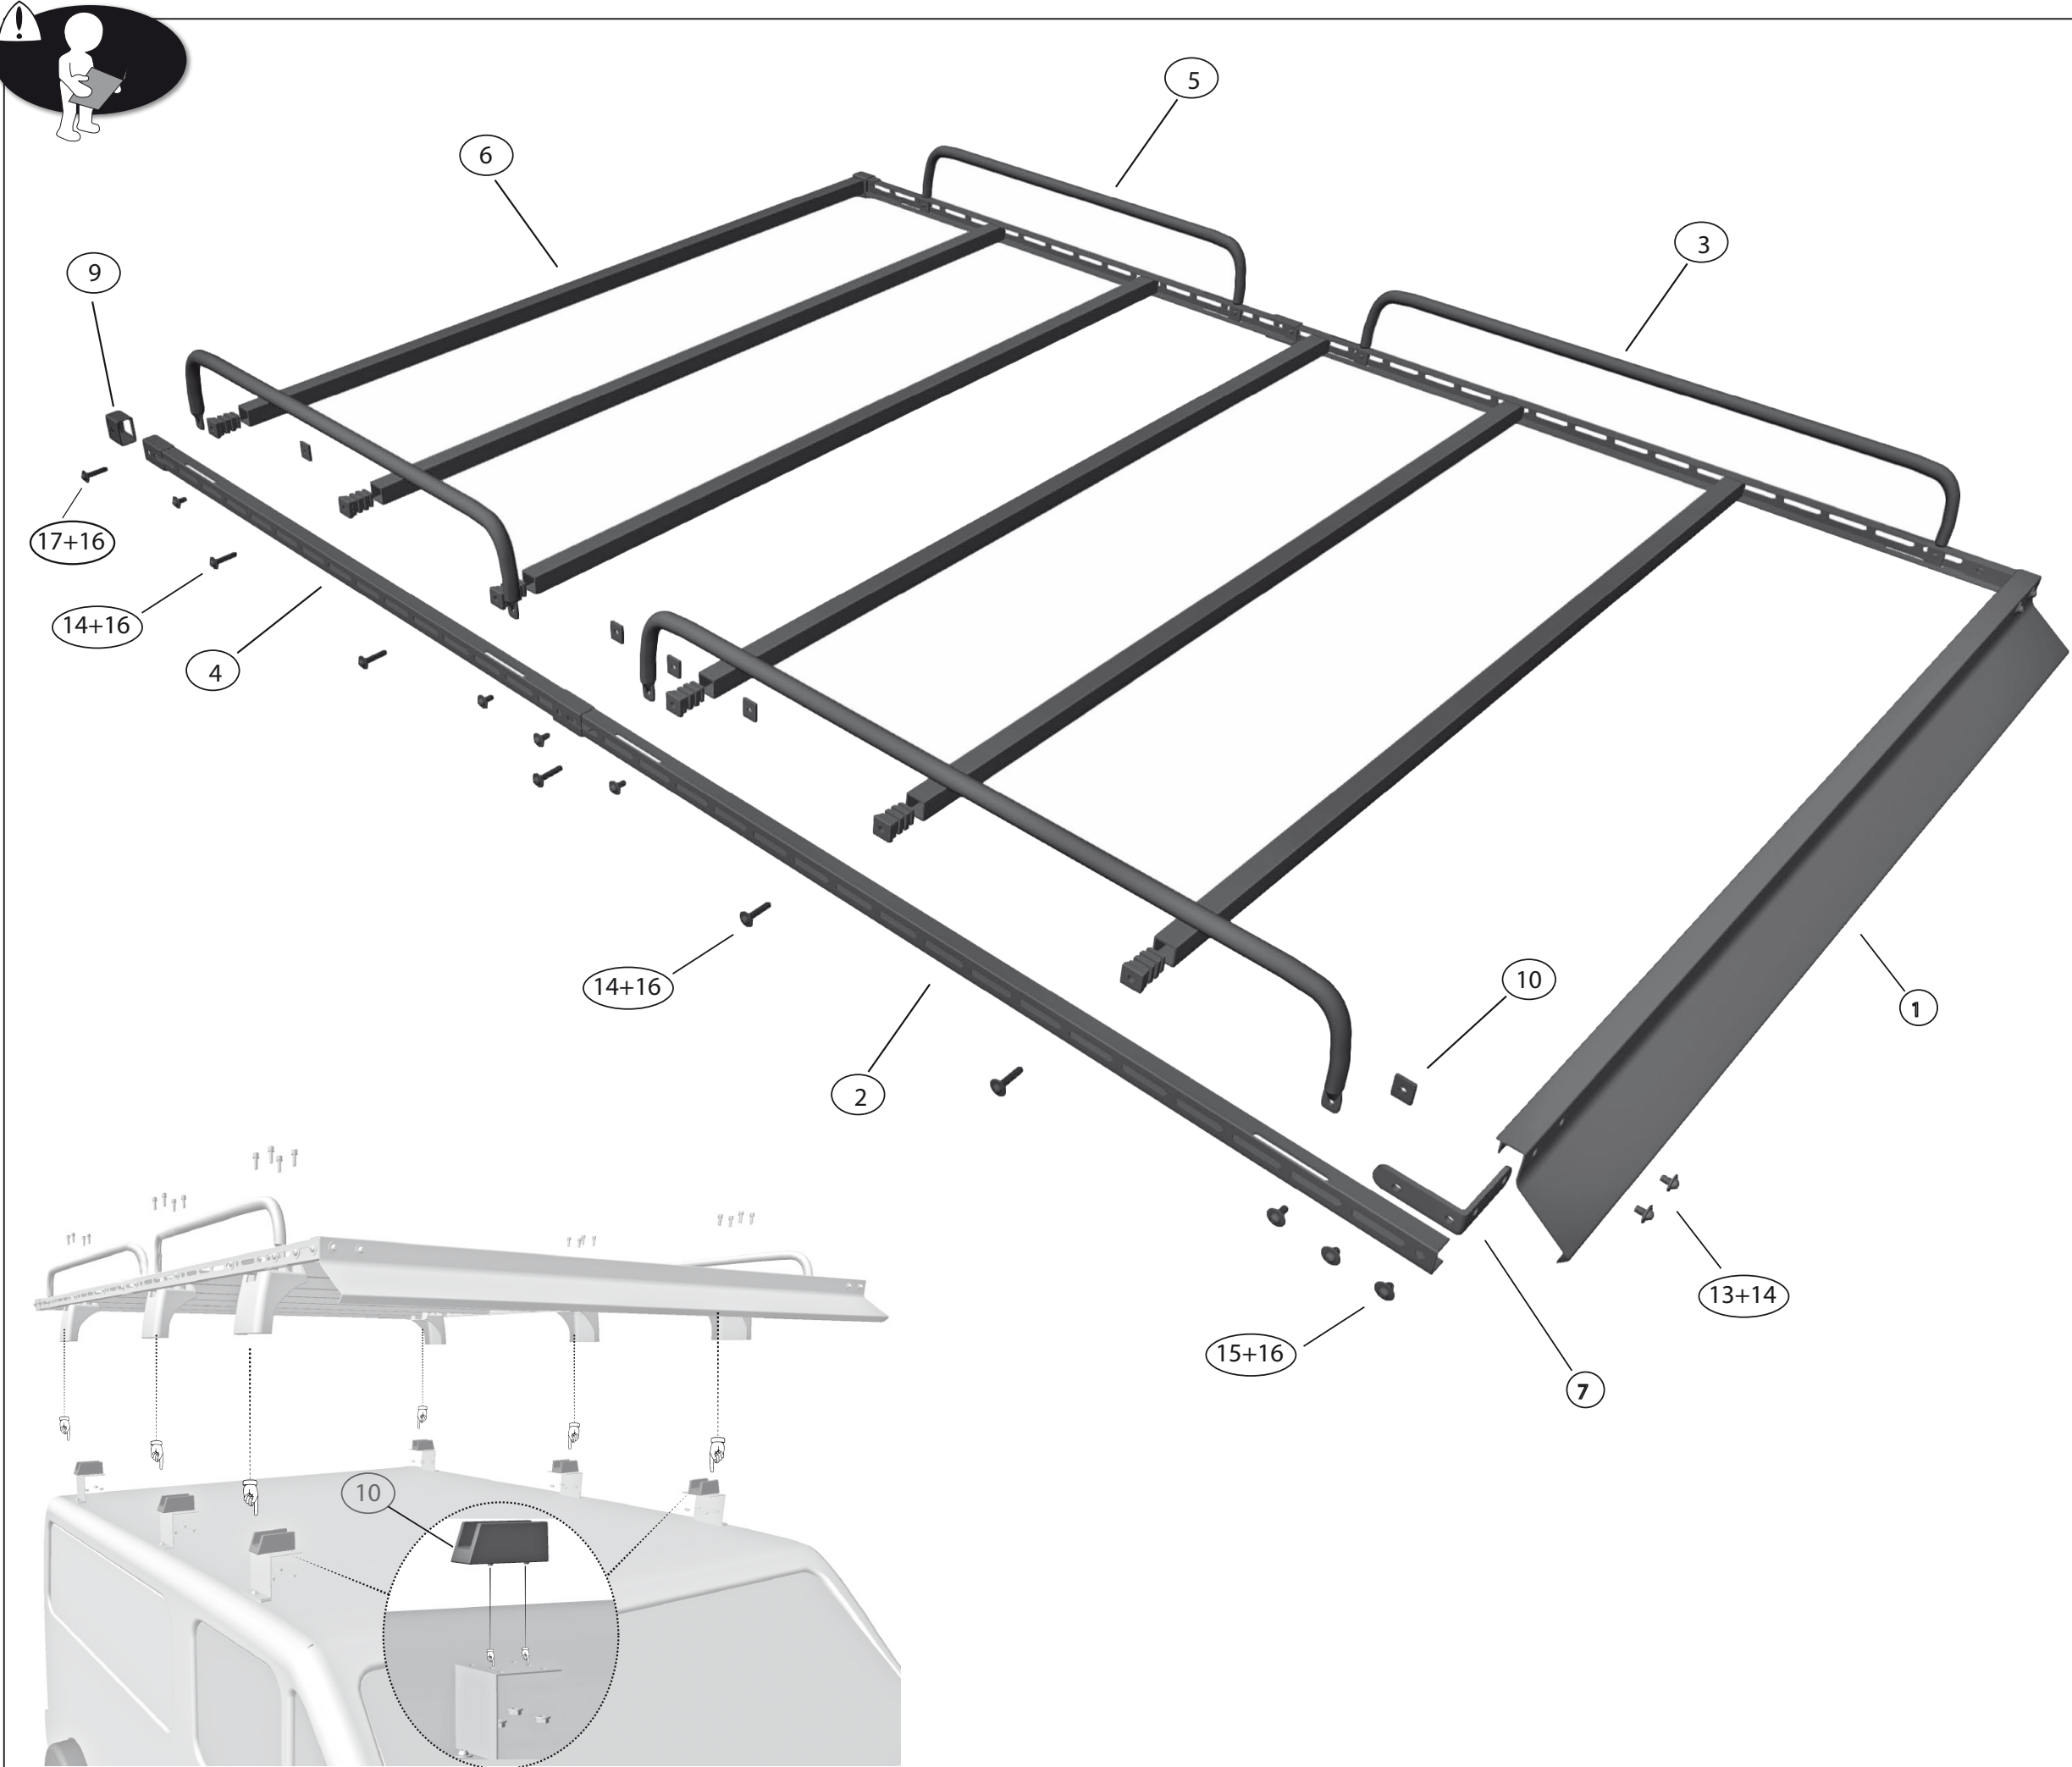




CITROËN BERLINGO I / PEUGEOT PARTENR I

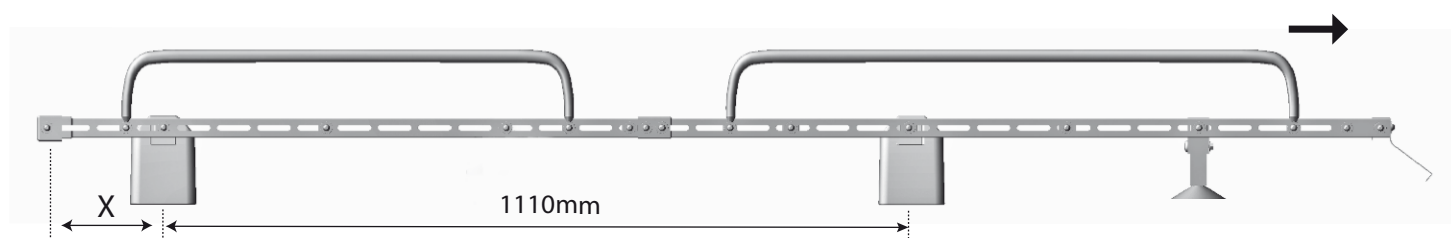


200mm = X

CITROËN JUMPY I / FIAT SCUDO I / PEUGEOT EXPERT I

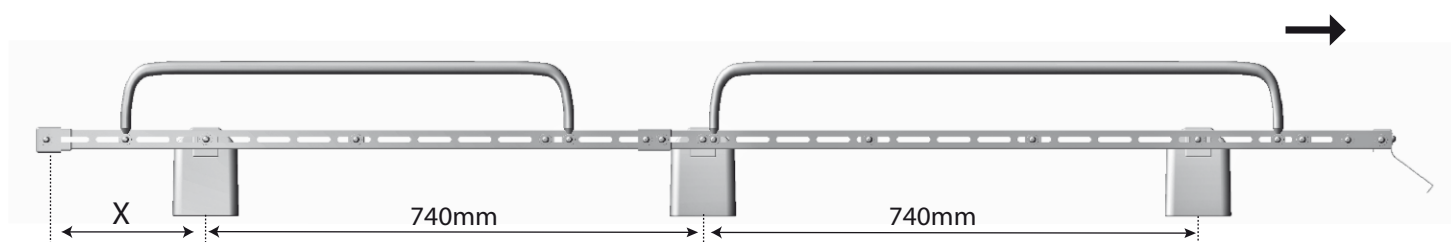


210mm = X

DACIA DOKKER VAN

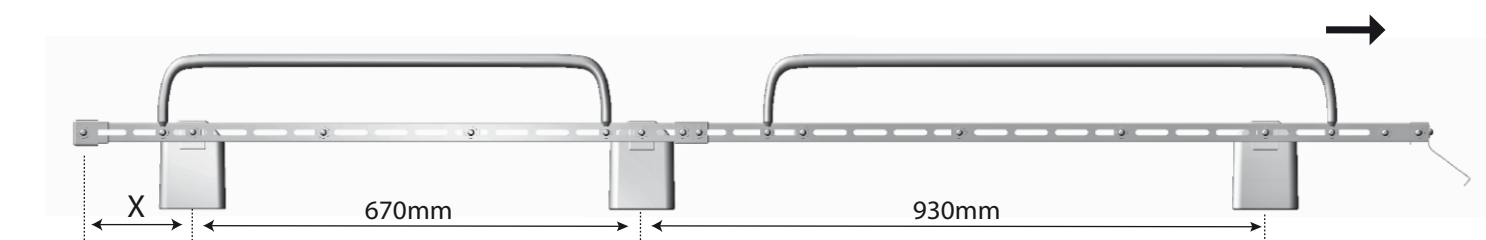


100mm = X 70mm = X

FORD TOURNEO CONNECT I L1 / FORD TRANSIT CONNEC I T L1

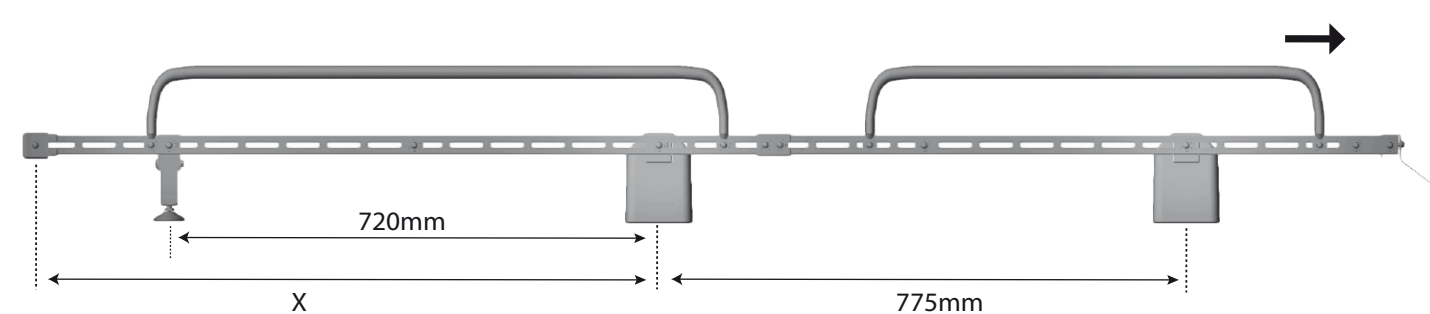


900mm = X

FORD TOURNEO CONNECT I L2 / FORD TRANSIT CONNEC I T L2

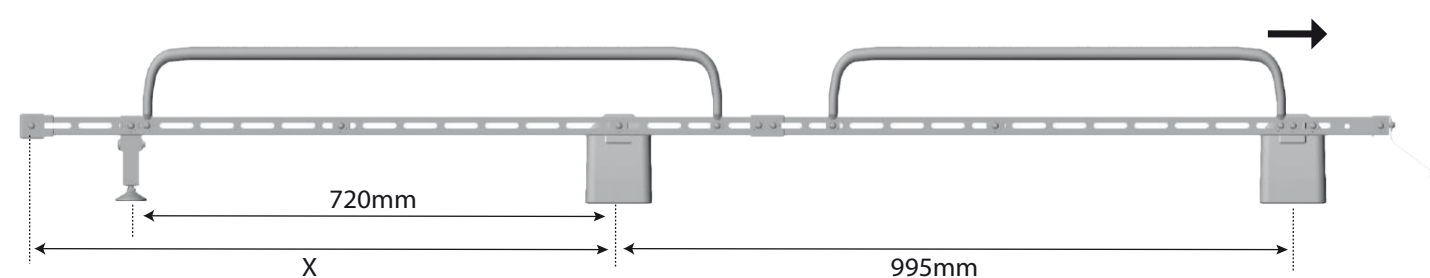

800mm = X


FORD TRANSIT CONNECT VAN II (2013->)

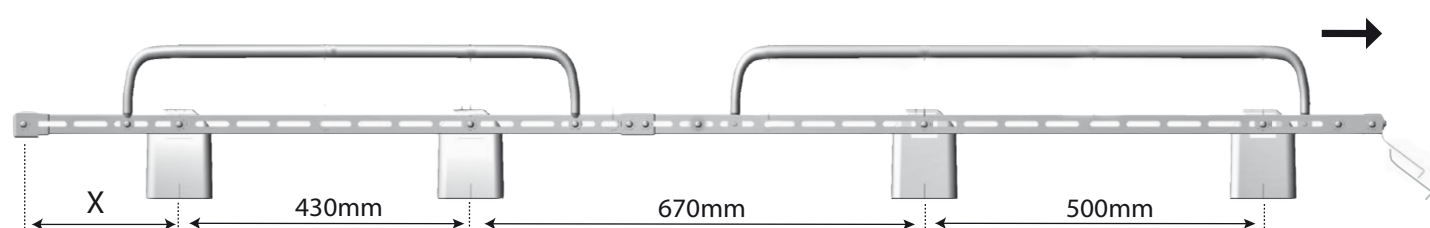

300mm = X




FORD COURIER II (2013->)

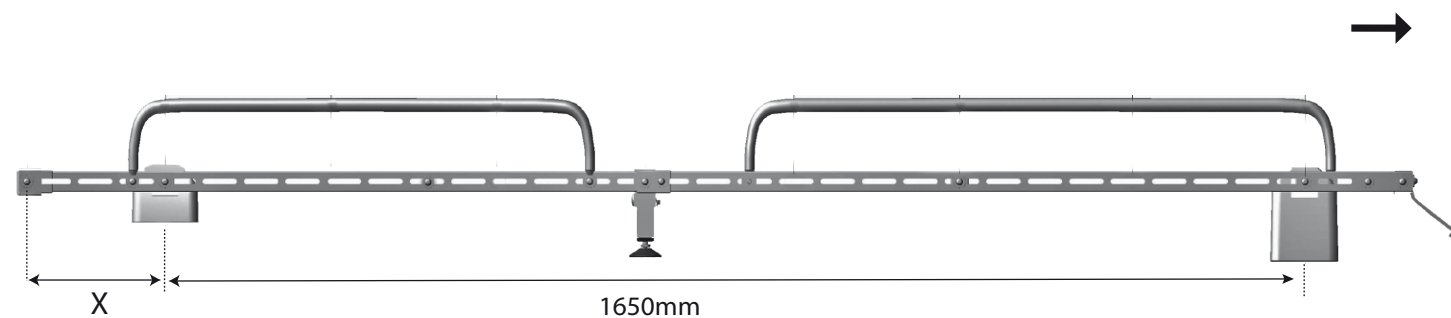


200mm = X

RENAULT EXPRESS (2021->)

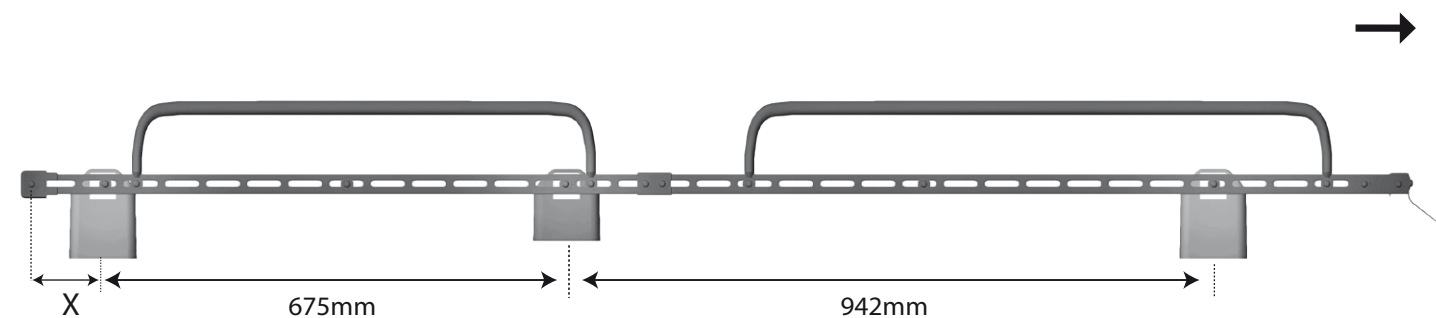


100mm = X

MERCEDES CITAN W415 L2 / NISSAN NV250 L1 / RENAULT KANGOO II L2

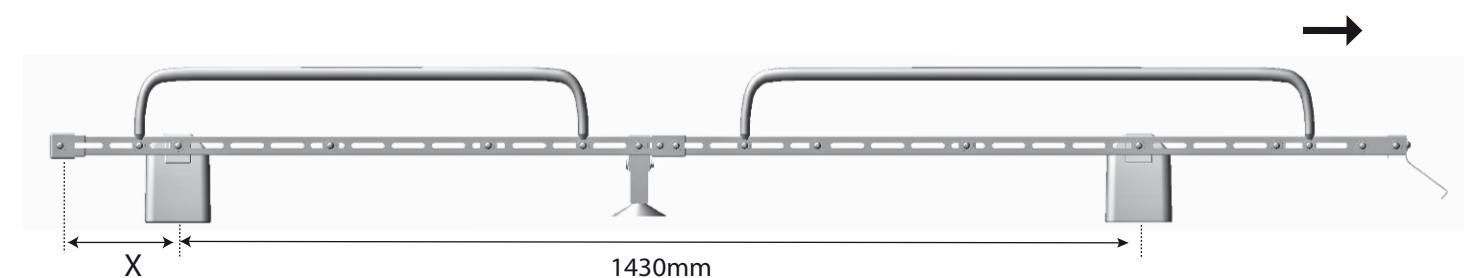


100mm = X

MERCEDES CITAN 420 L1 (2021->) / RENAULT KANGOO III (2021->)

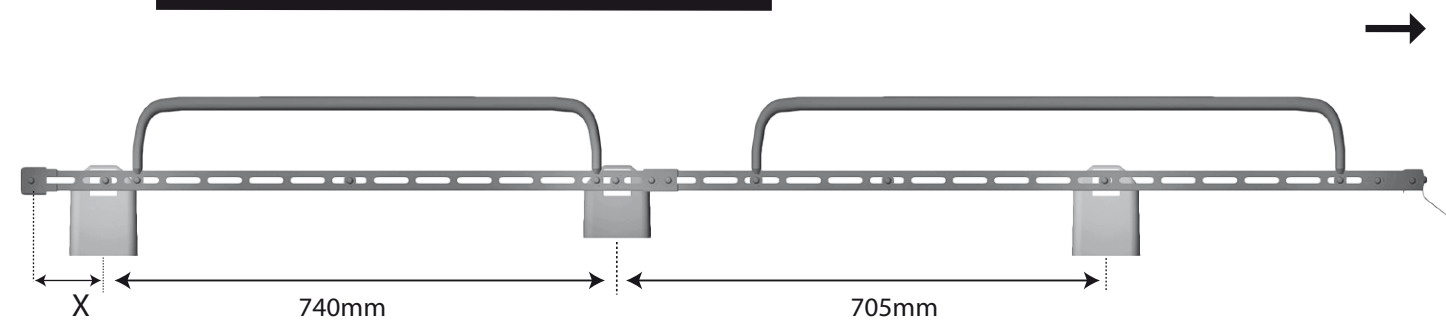


100mm = X

VOLKSWAGEN CADDY IV L1

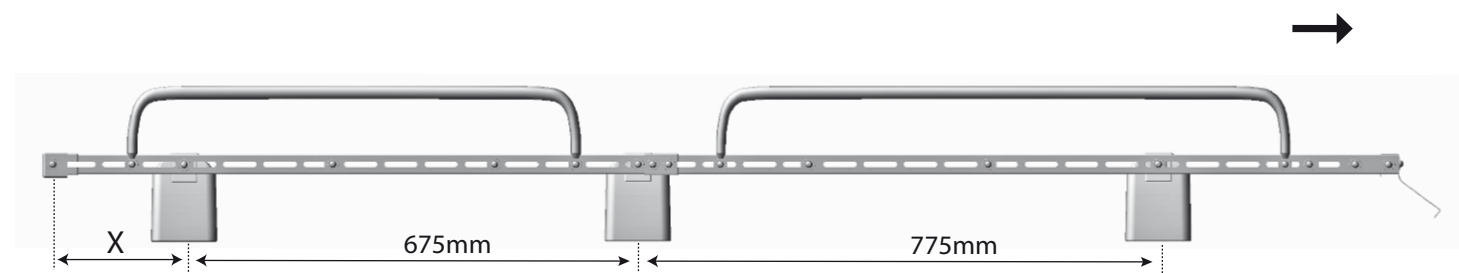


300mm = X



1




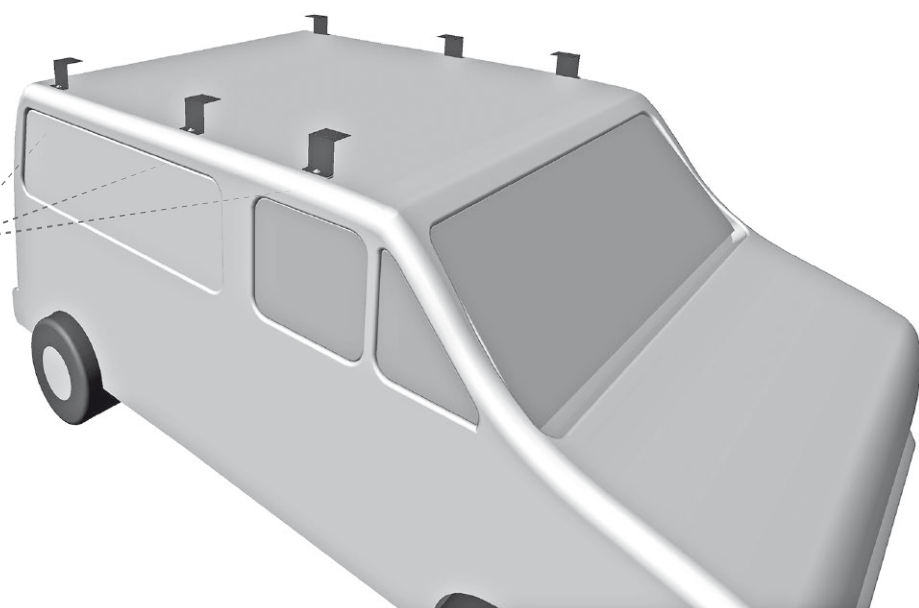


2

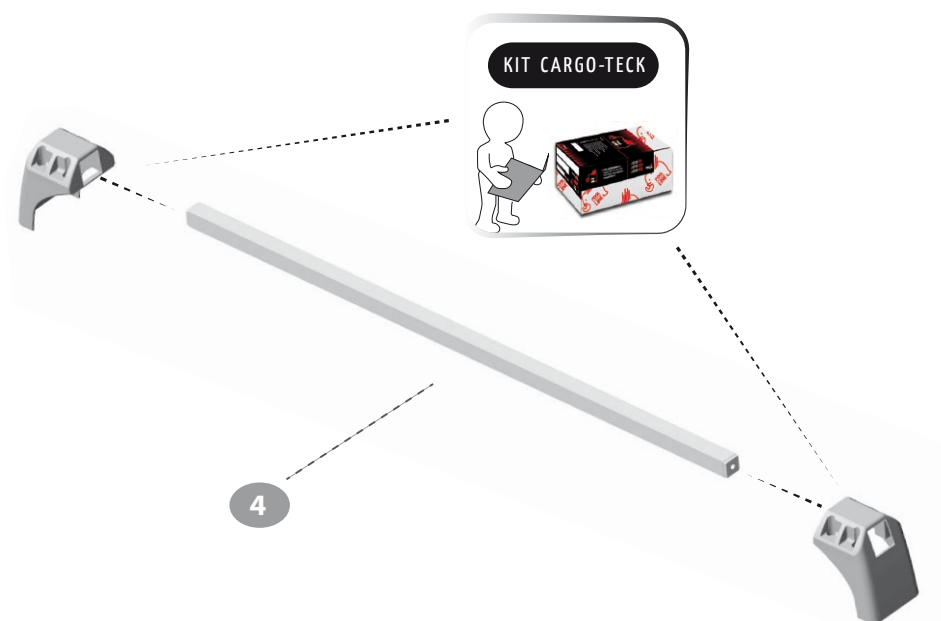


3

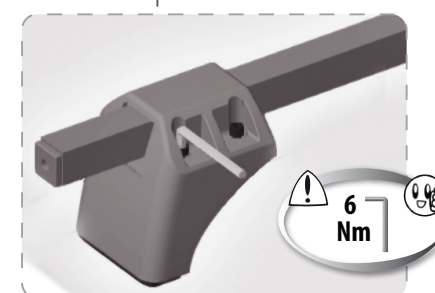
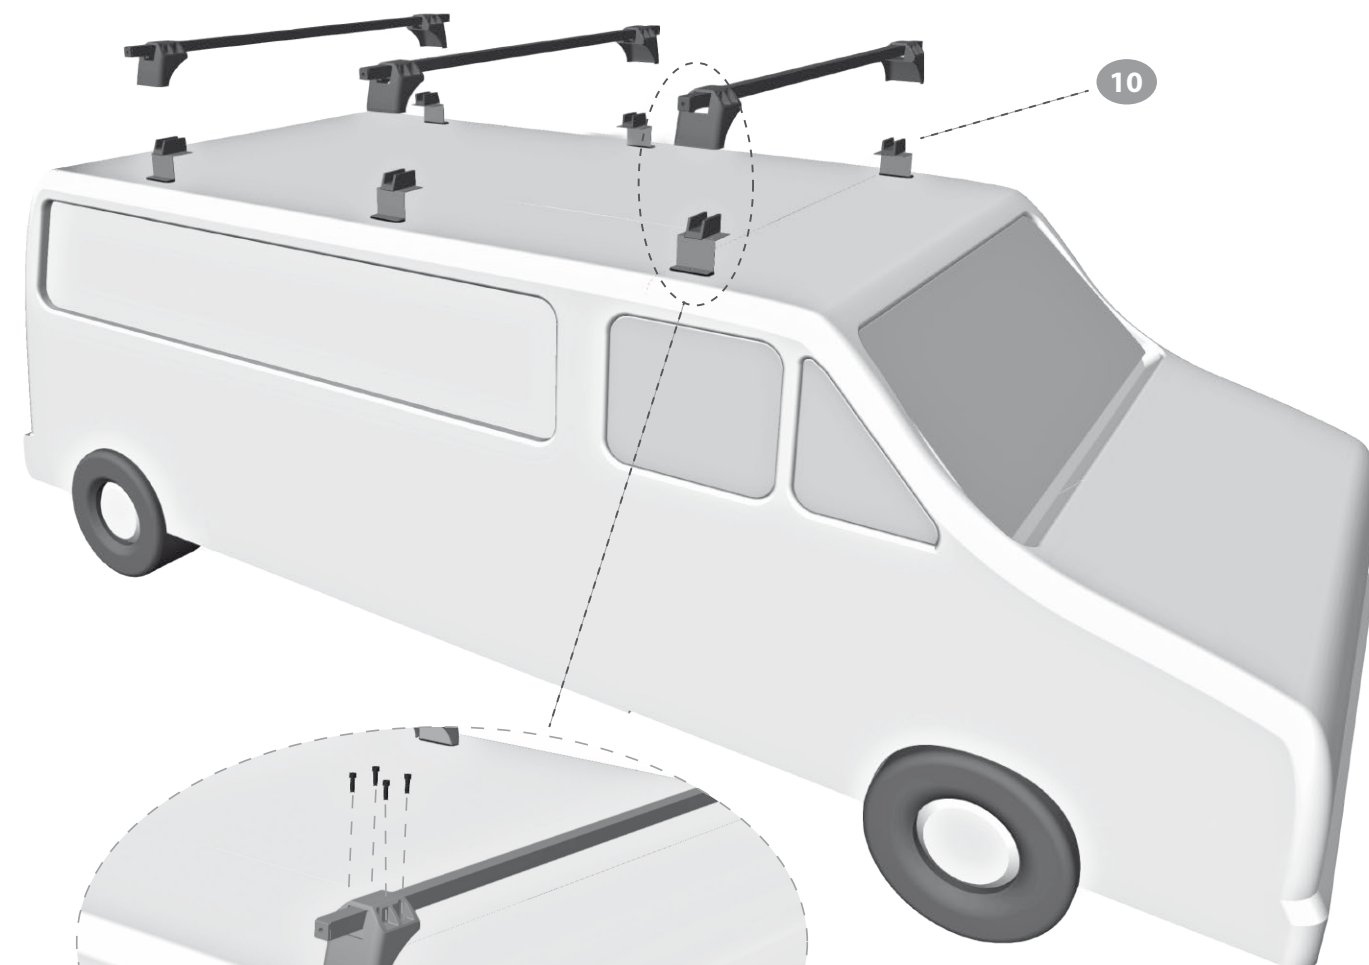


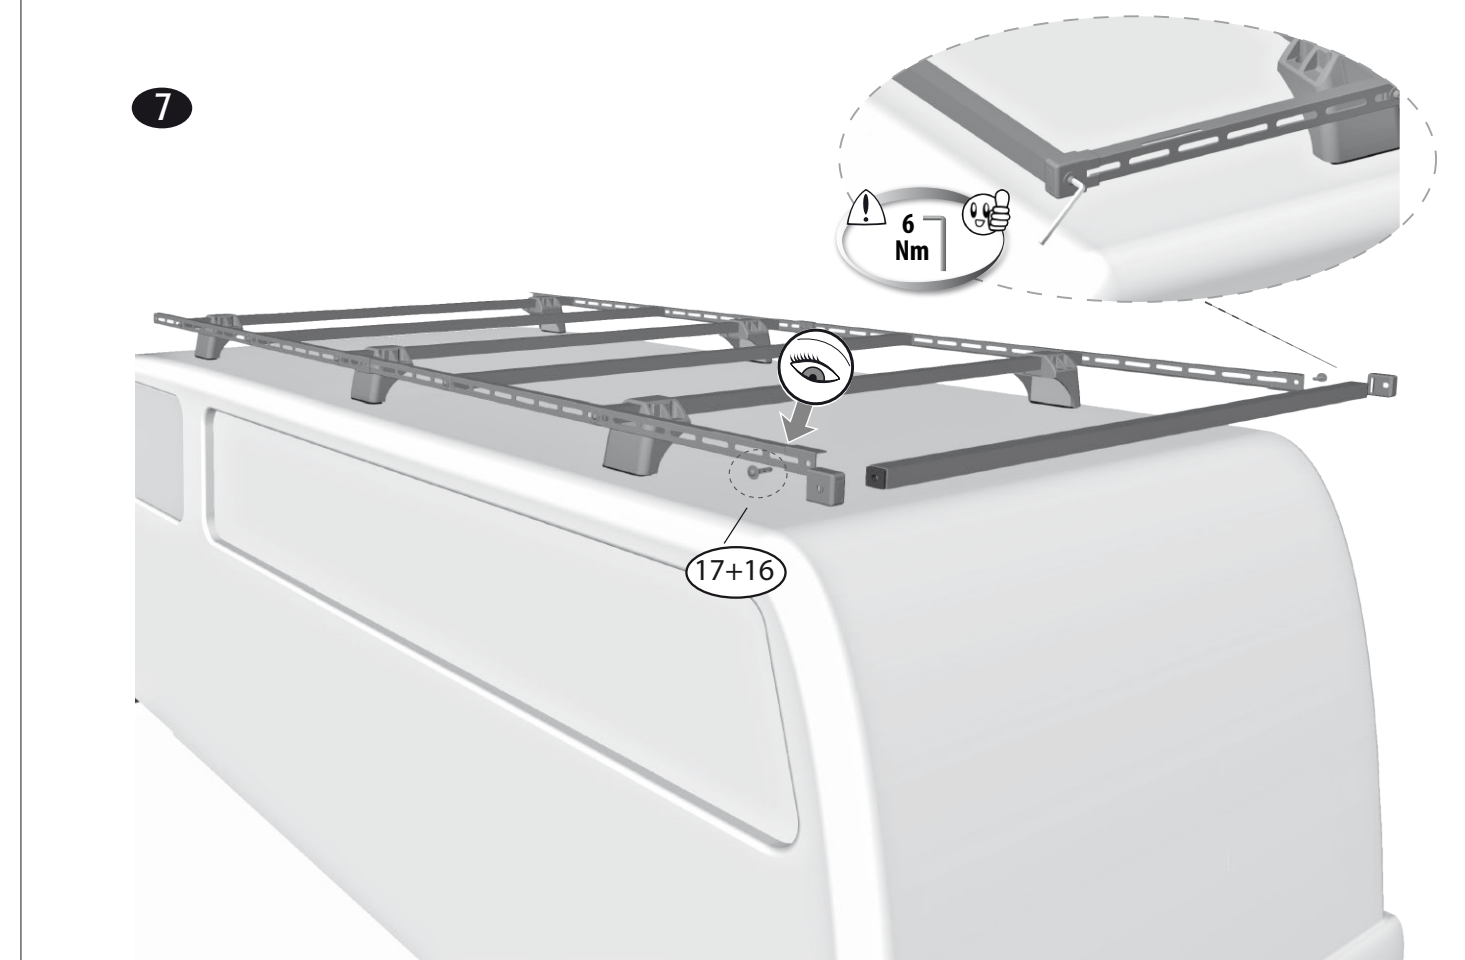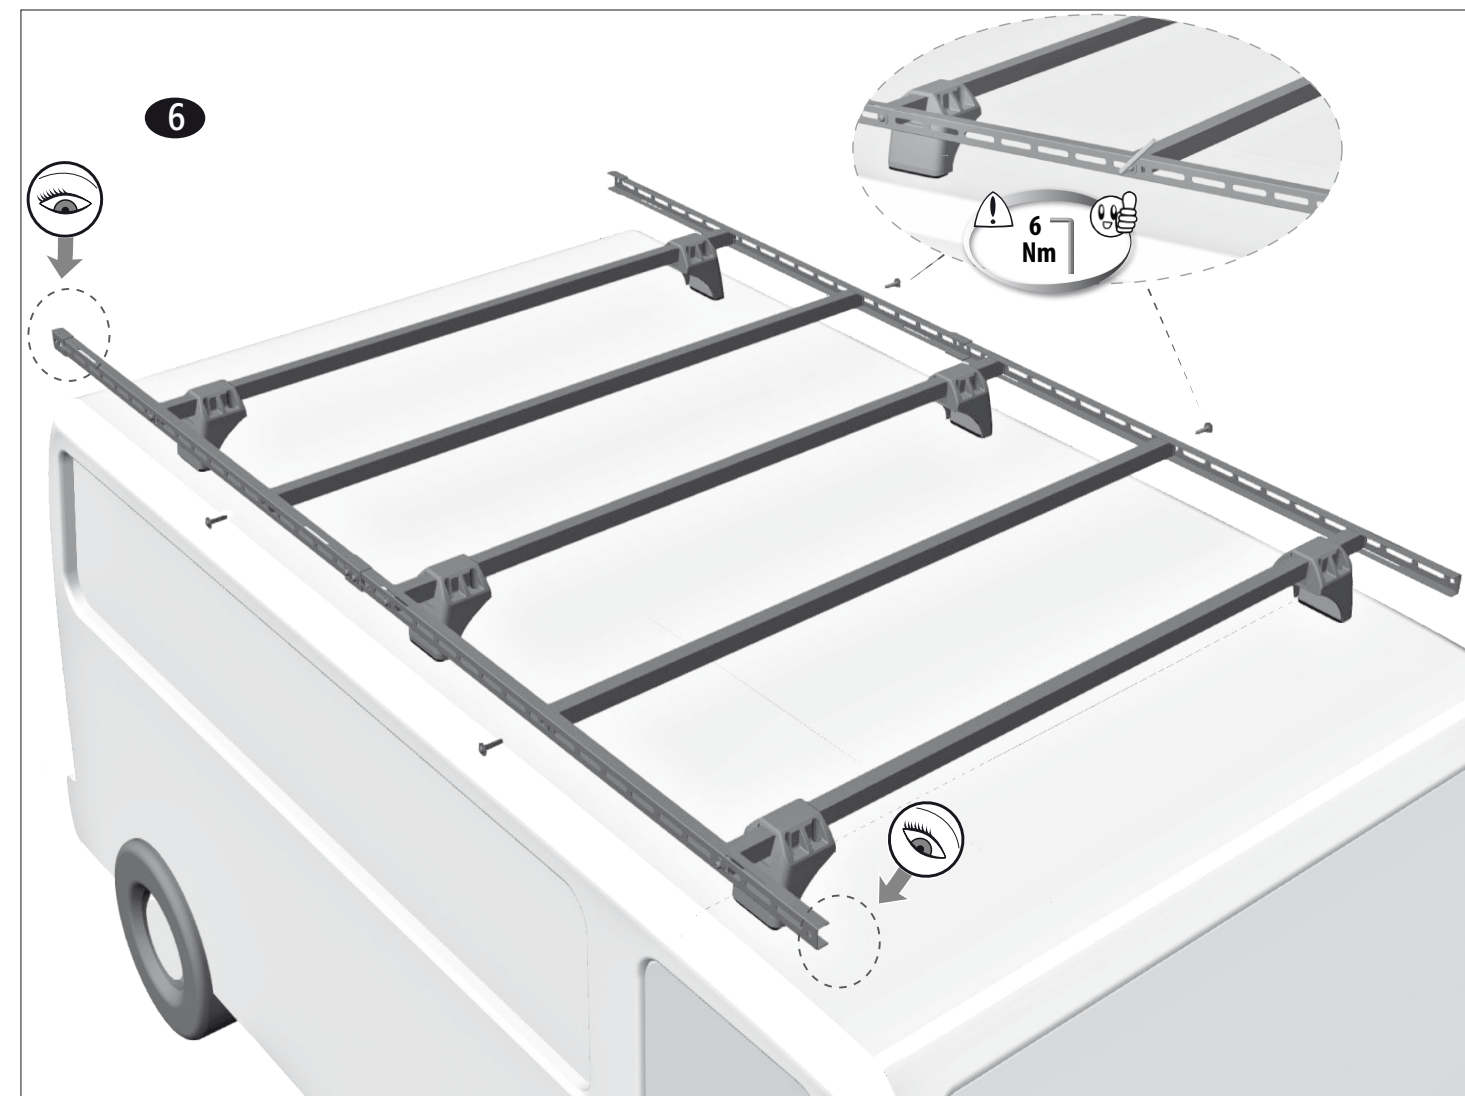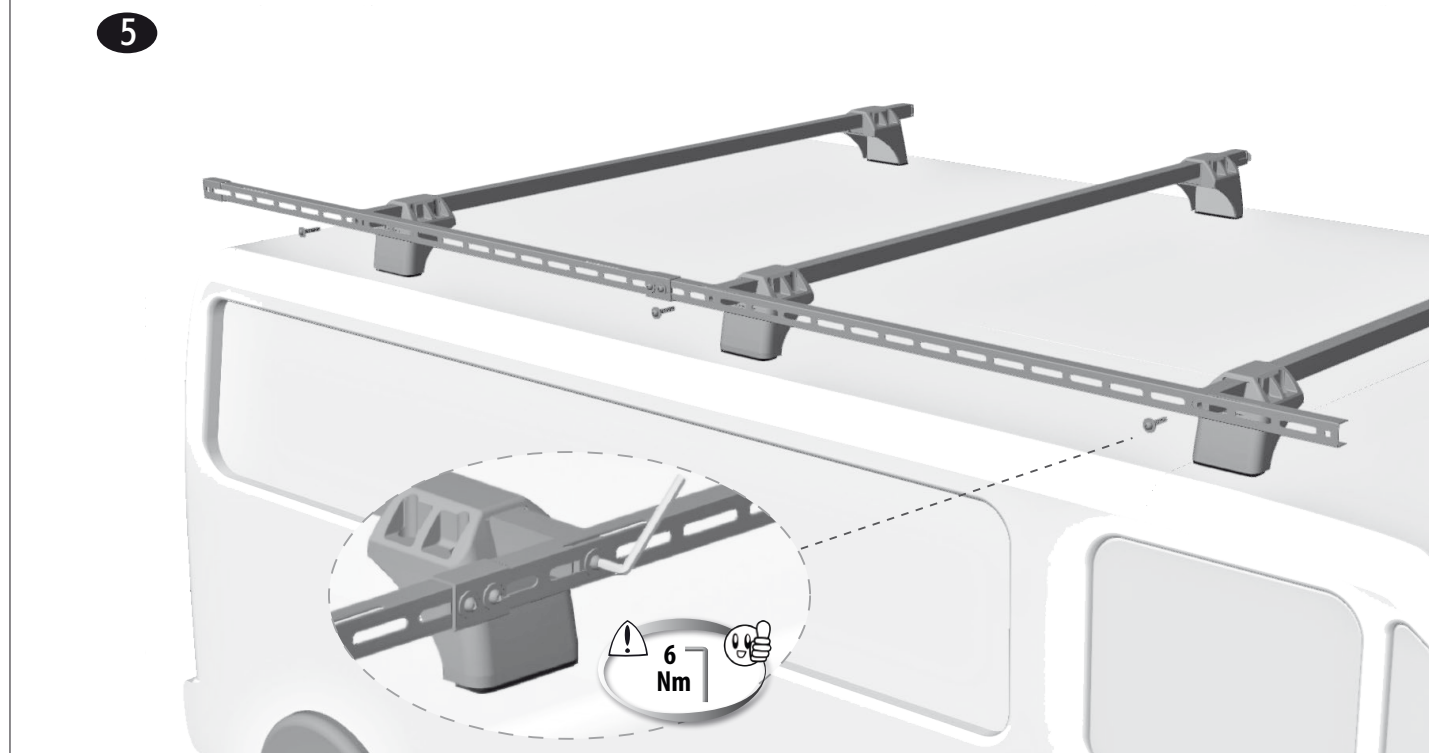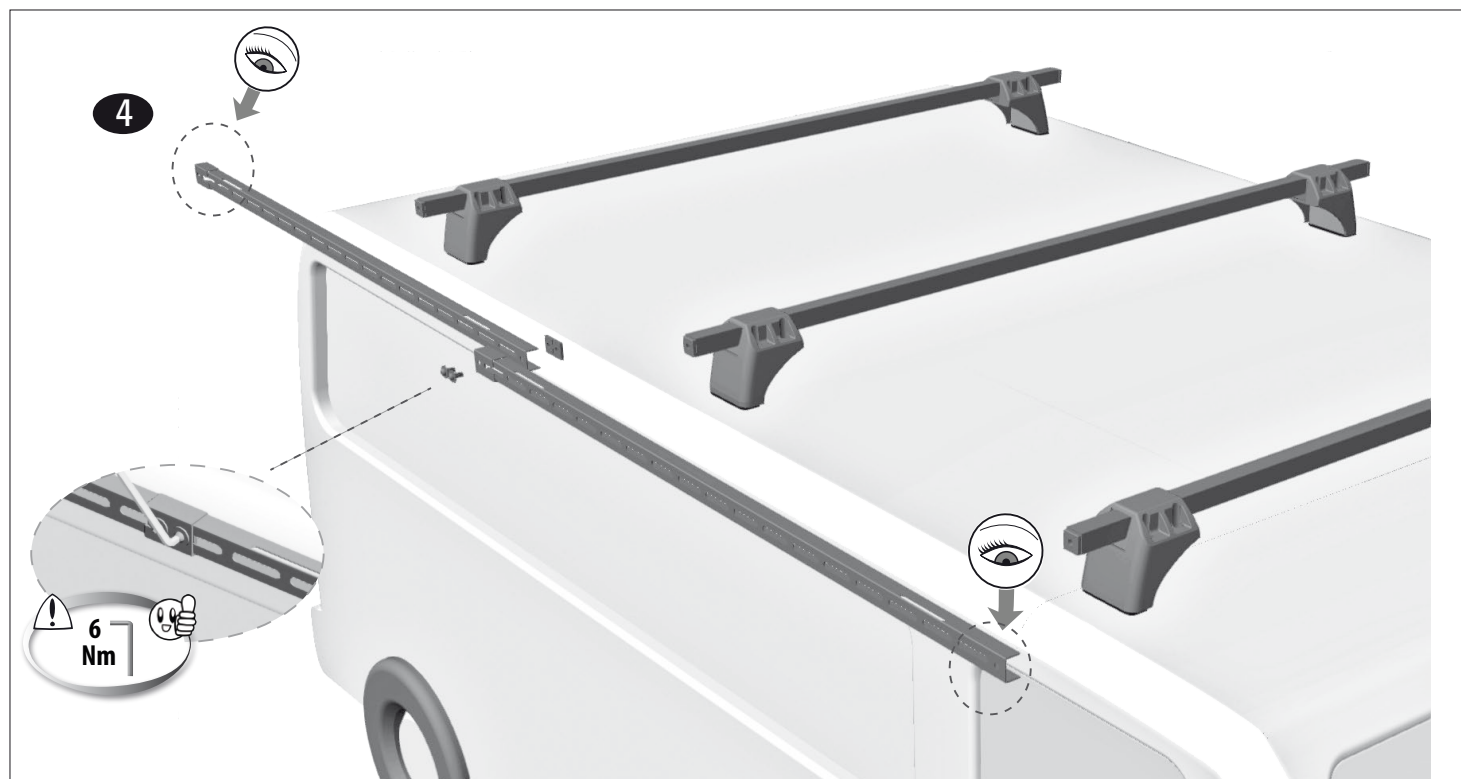






8

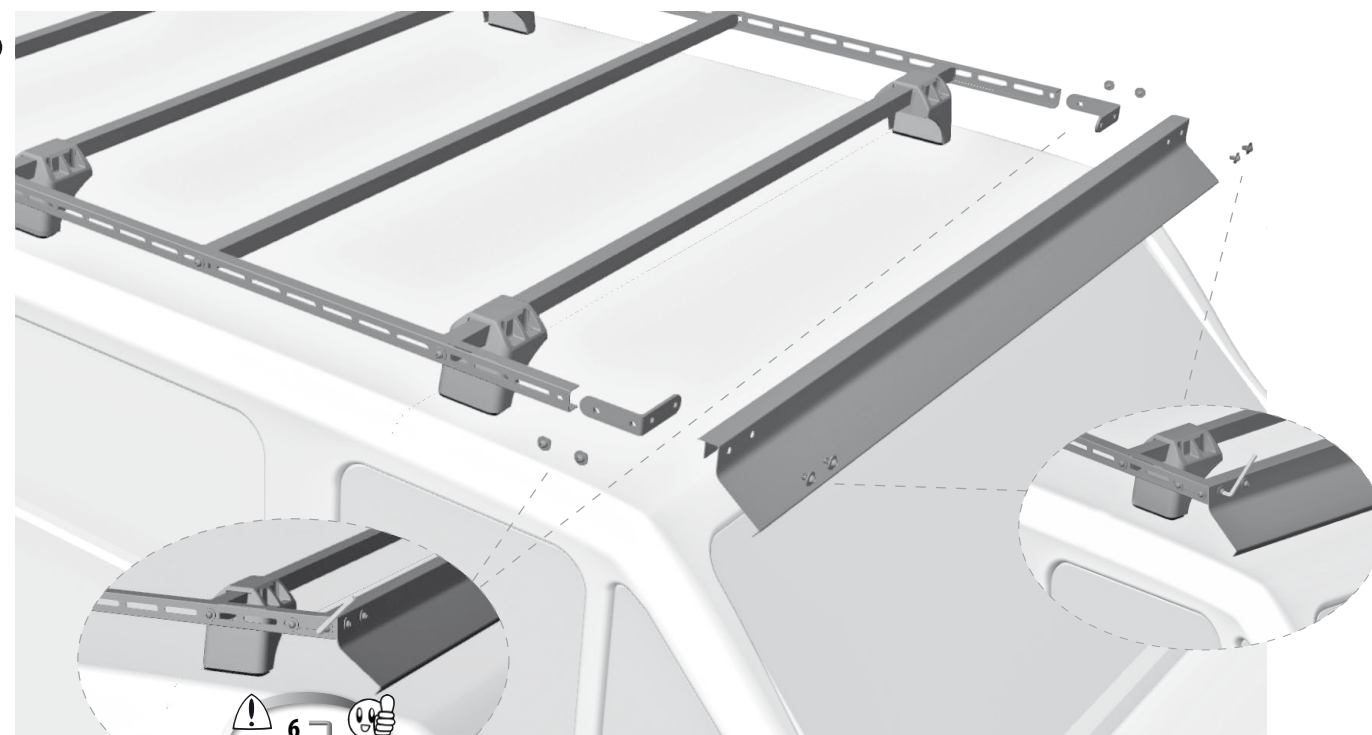


9


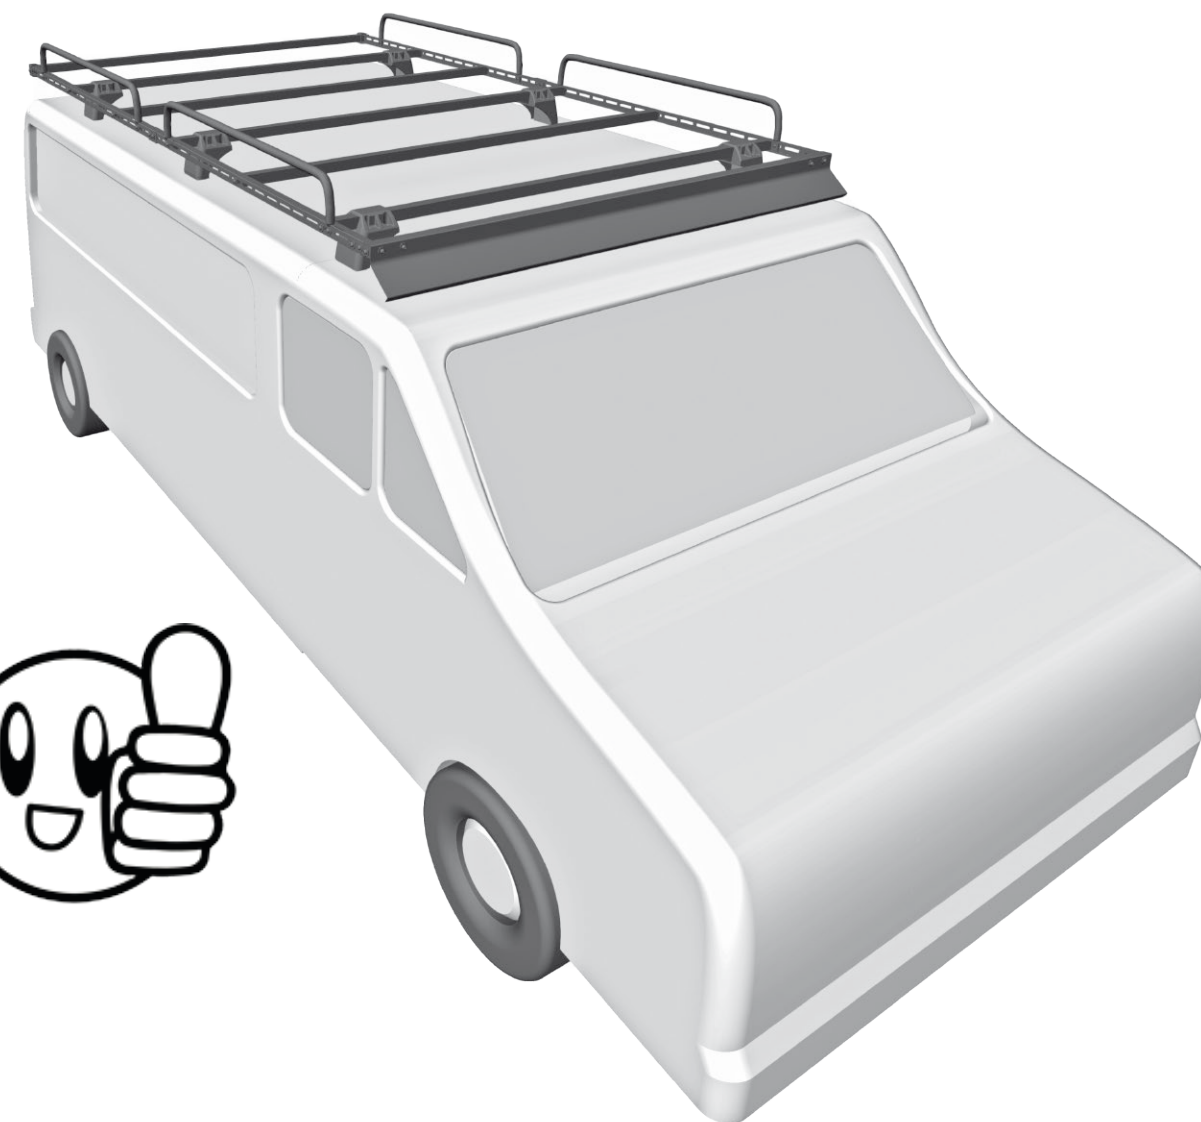
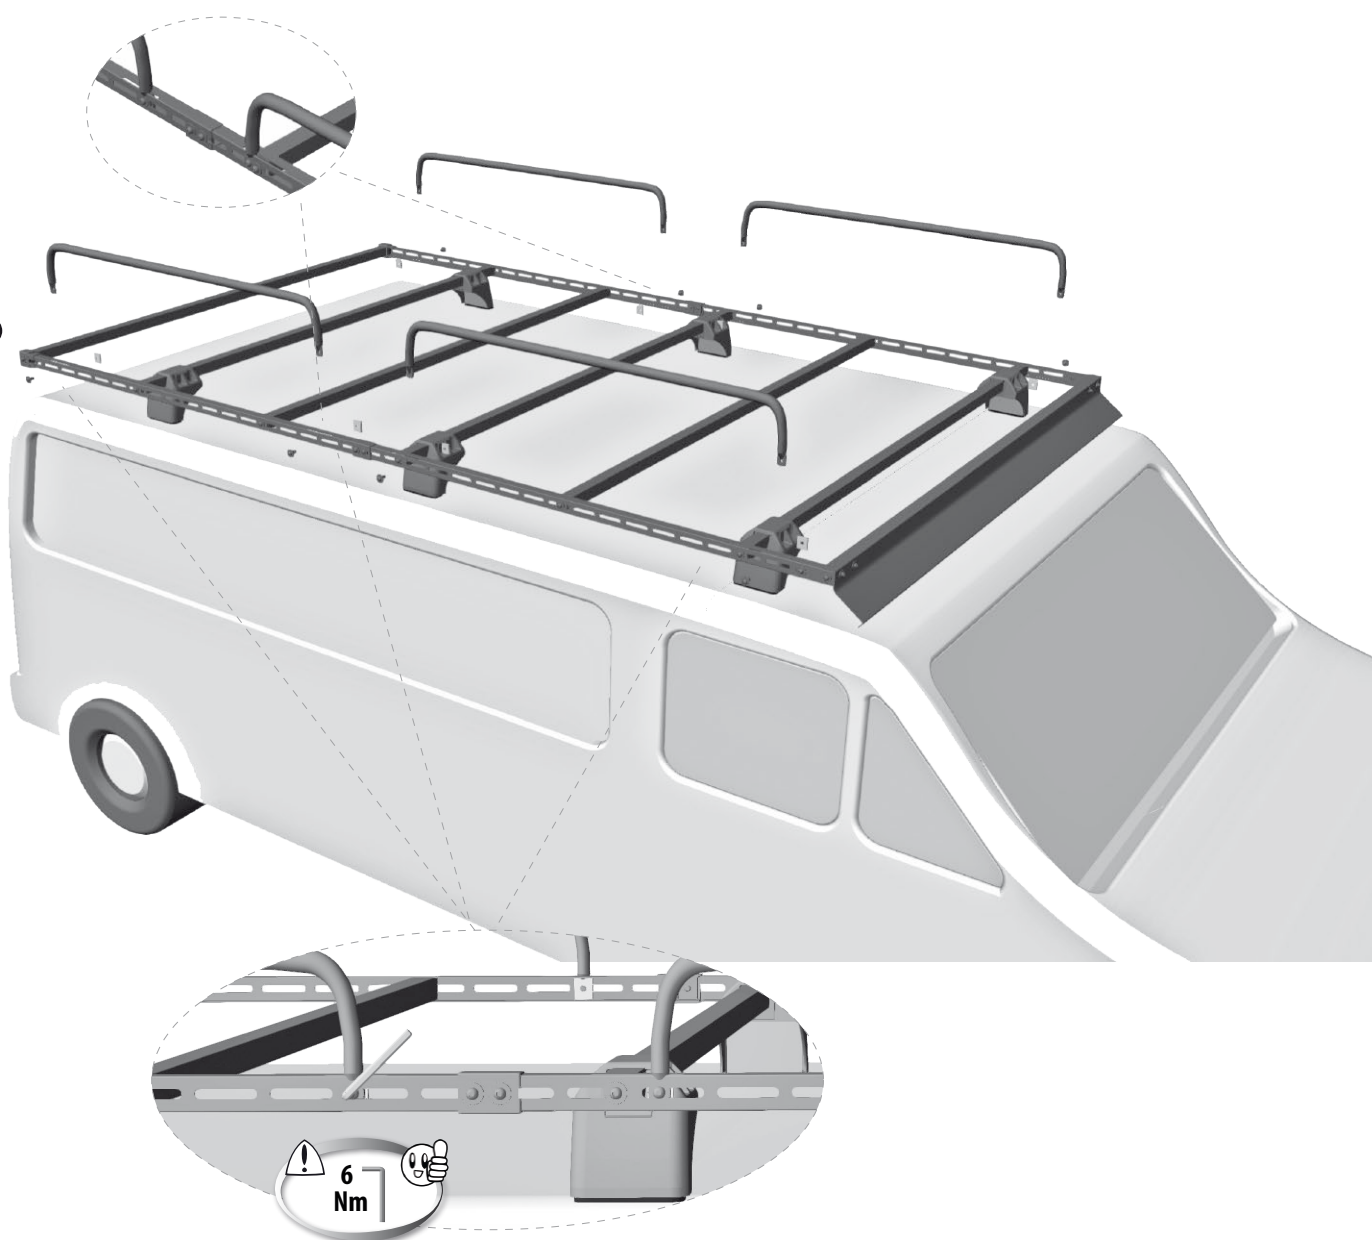


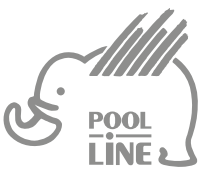

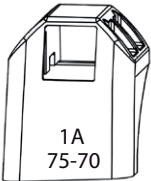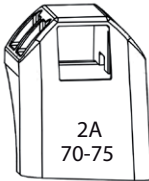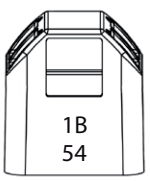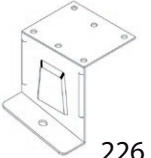
N			Q			Q
1	 1A 75-70	 2A 70-75	2+2	 1B 54		2
2	 225	 226	2+2	 210		2
3	 G					8
4						1

N	BO0061	Q
8	 DIN912 M6x20	24
9	 DIN125	24


N	BO0034 x 2	Q
10	 ISO 7380 M8x25	6
N	BO0032 x 2	Q
11	 Din125 Ø8	6

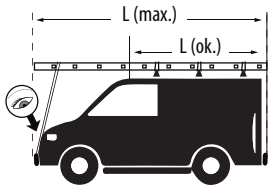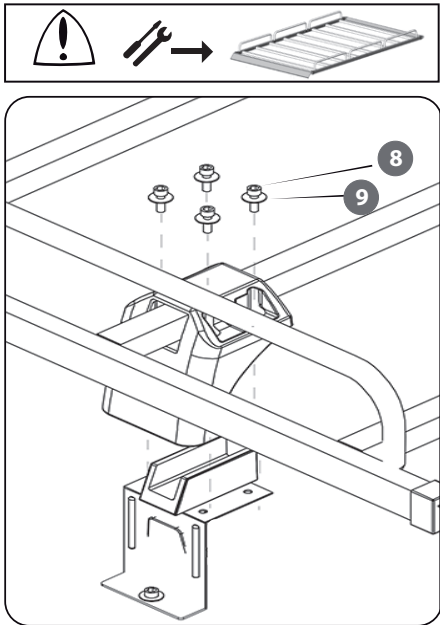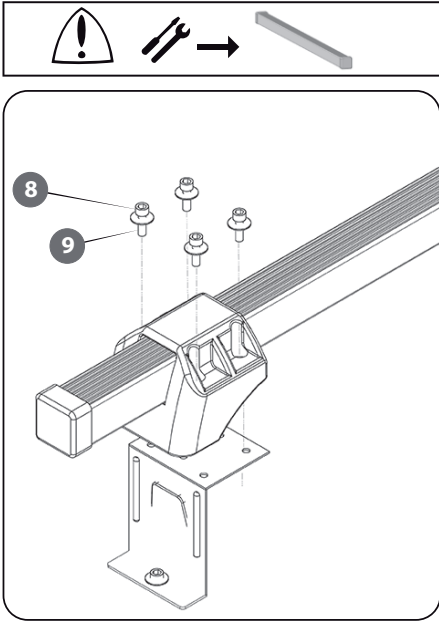

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instrucctions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

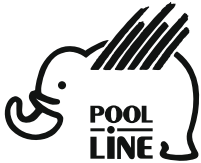


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net


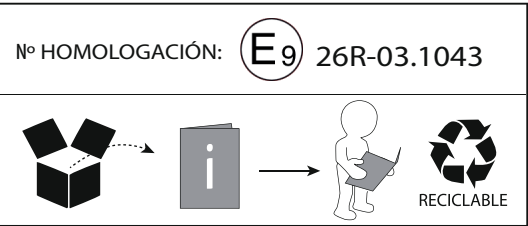


121085

Rv: 06/2023

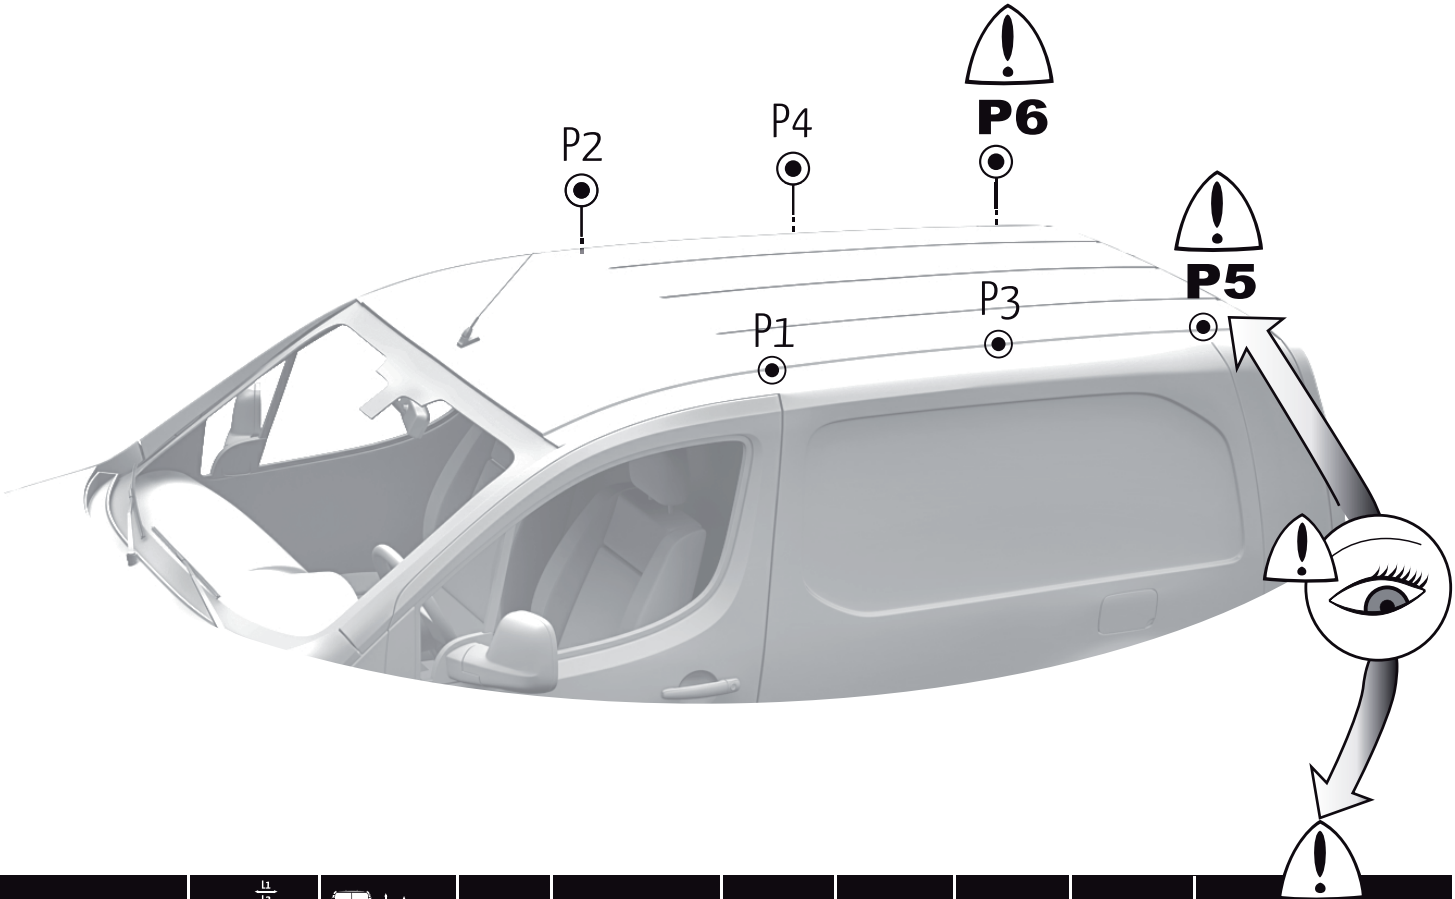


					P1	P2	P3	P4	P5	P6
MERCEDES										
CITAN W420	L1	H1	2021->	B00032 + B00034	225+1A+1G	226+1A+1G	210+1B+1G	210+1B+1G	226+1A+2G	225+1A++2G
RENAULT										
KANGOO III	L1	H1	2021->	B00032 + B00034	225+1A+1G	226+1A+1G	210+1B+1G	210+1B+1G	226+1A+2G	225+1A++2G

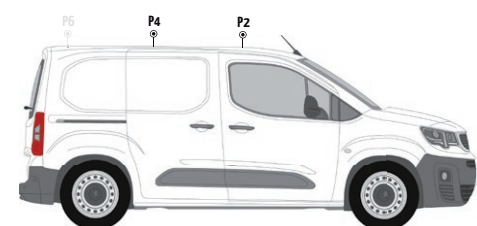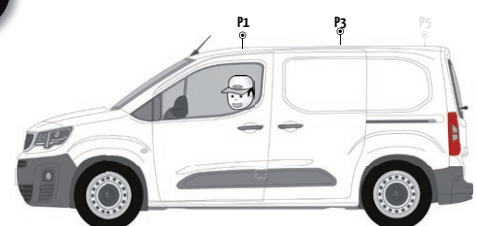

Eye icon pointing to a table.

P1	P2	P3	P4	P5	P6
225+1A+16	225+1A+16	210+1B+16	210+1B+16		
225+1A+16	225+1A+16	210+1B+16	210+1B+16	225+1A+26	225+1A+26
225+1A+16	225+1A+16	210+1B+16	210+1B+16		






Pag. 1

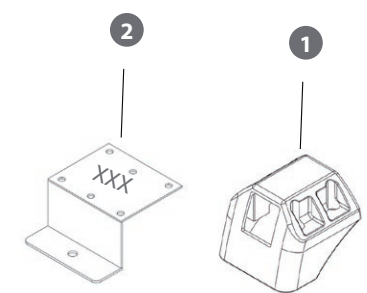

Eye icon pointing to a table.

	10	P1	P2
OX	B000032		
OX-	B000034		
	B000032		


Pag. 1

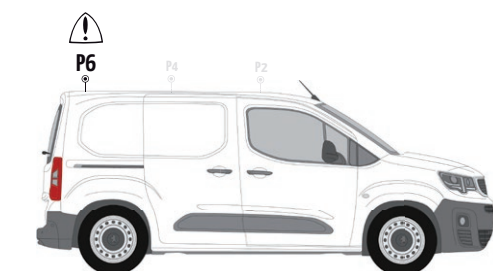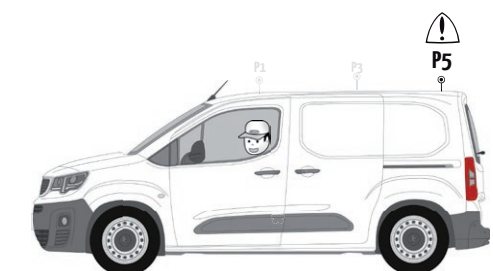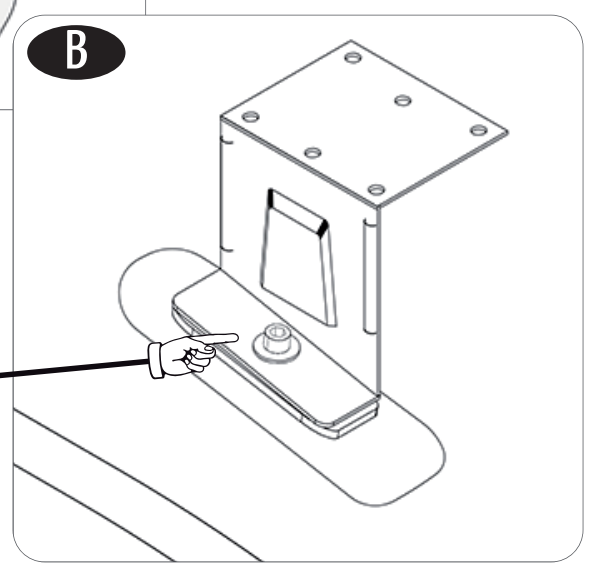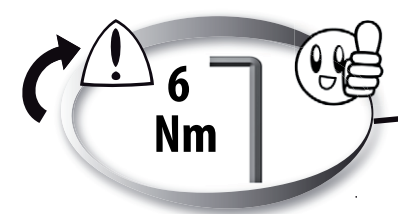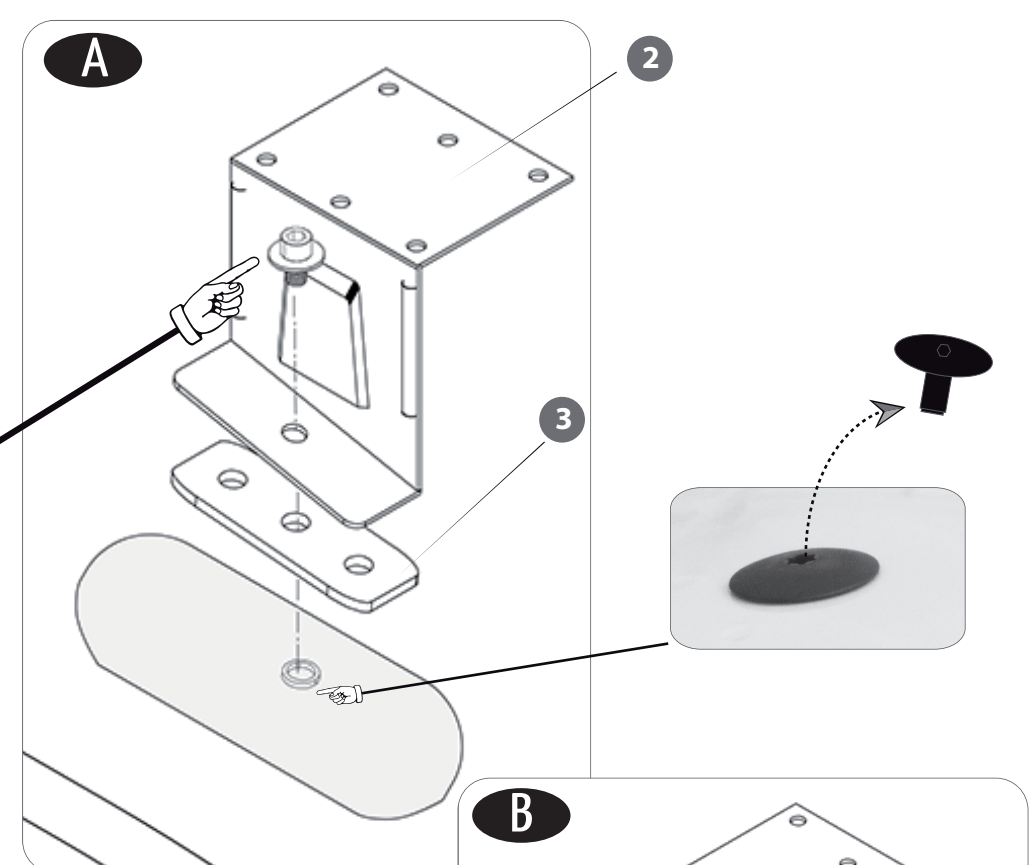

Eye icon pointing to a table.

P1	P2	P3	P4	P5	P6
				225+1A+26	225+1A+26
				225+1A+26	225+1A+26
				225+1A+26	225+1A+26

Pag. 1

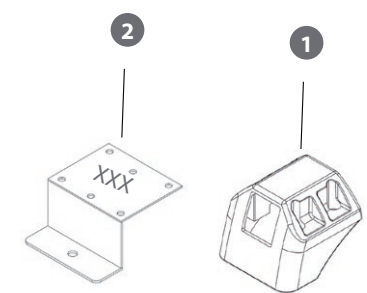

Eye icon pointing to a table.

	10	P1	P2
OX	B000032		
OX-	B000034		
	B000032		

Pag. 1

