


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

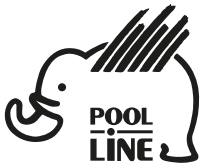

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net





200 KG.
MAX.


Nº HOMOLOGACIÓN: E9 26R-03.1042




123412

Rv: 05/2025

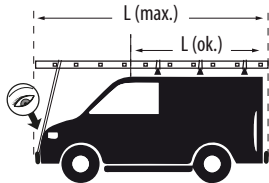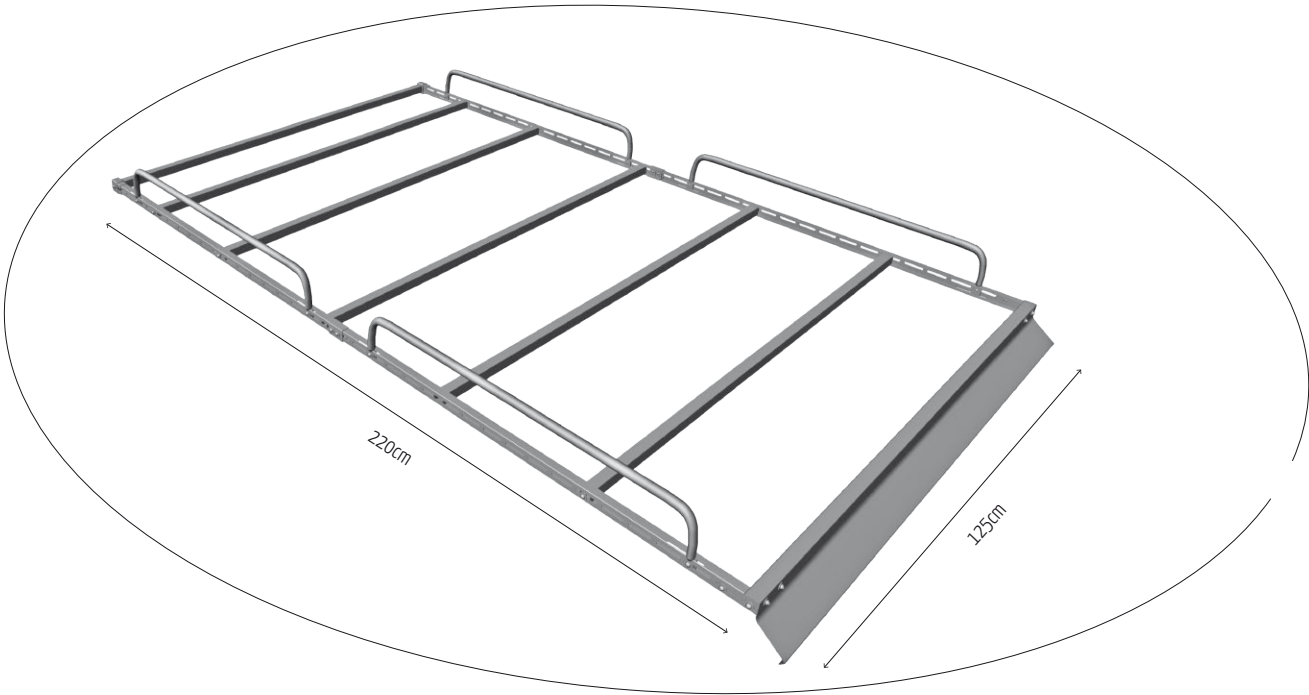

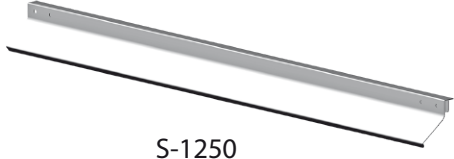N		Q
20	 S-1250	1
21		2
22	 L-1120	4
23	 B-842	4
24	 T- 1235	6
25		14
26		2
27		8
28	 CHA-M8	12
29	 ISO 7380 M8x30	10
30	 ISO 7380 M8x16	20
31	 DIN 125 Ø 8	32
32	 ISO 7380 M8x 40	2


N		Q
32		1

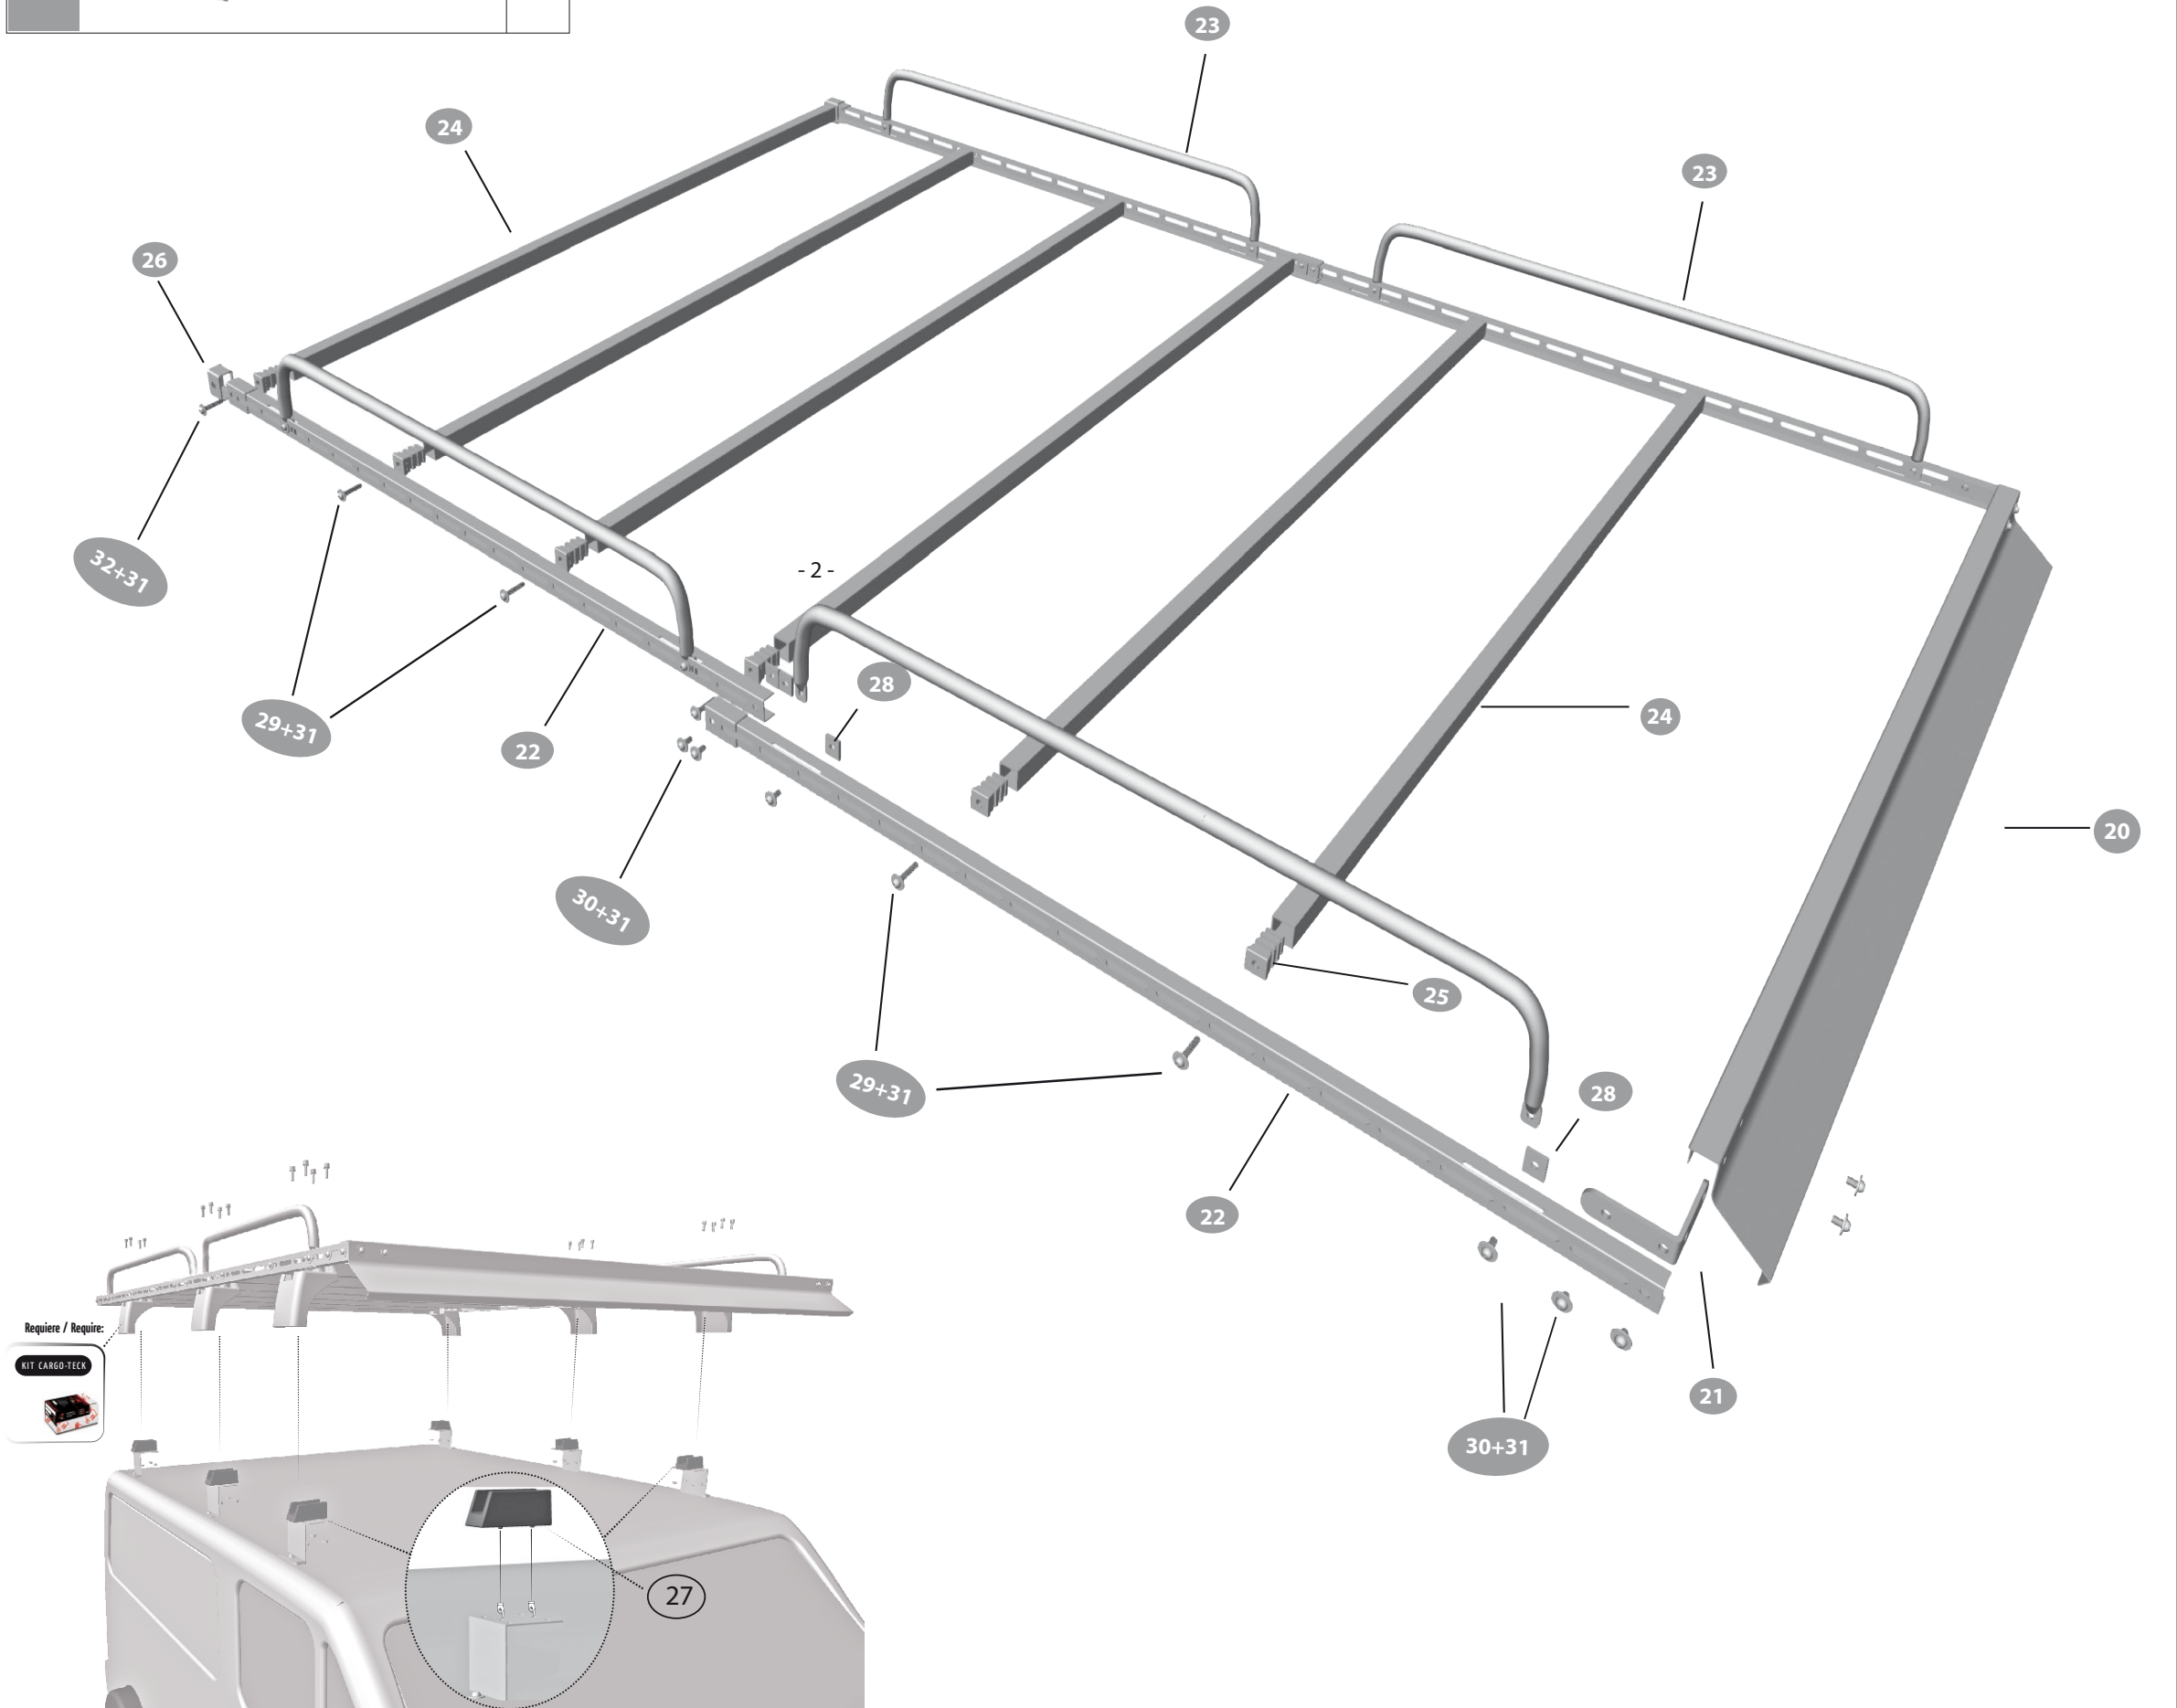




Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone


CITROËN C15

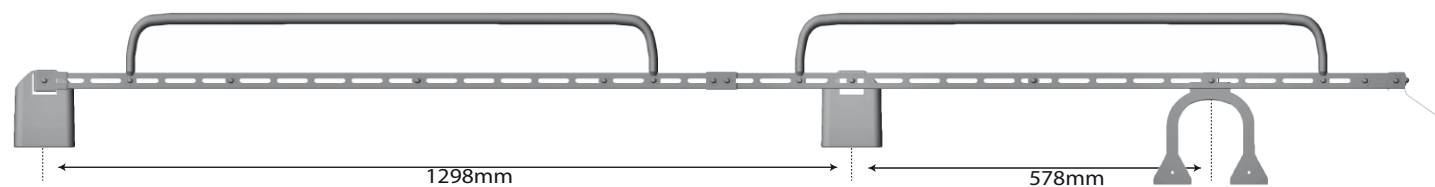



FORD CONNECT I L2 (04-13)

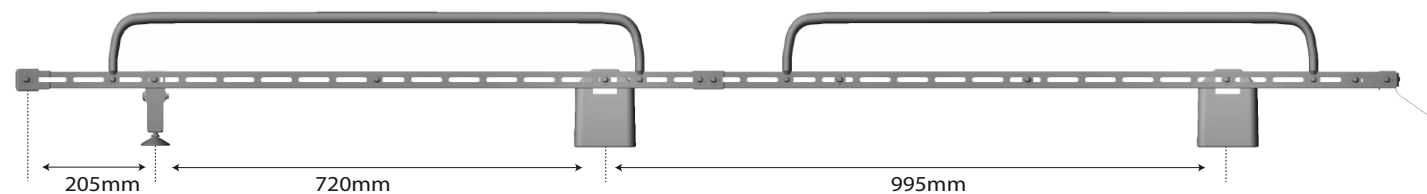



FORD CONNECT II L2 (13-)

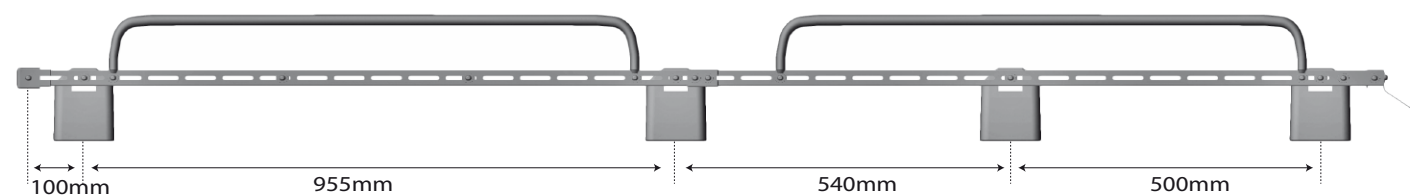

**FORD CONNECT III L1 (2022->)
VOLKSWAGEN CADDY V L1 (2021->)**

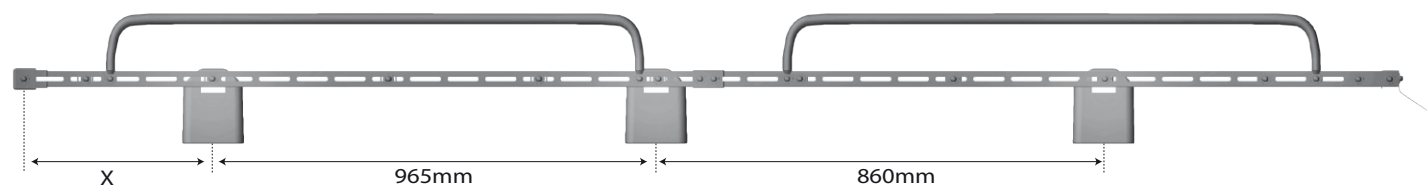


**MERCEDES CITAN L3
NISSAN NV250 L2
RENAULT KANGOO II L3**

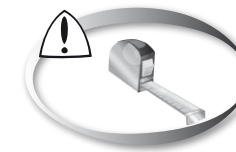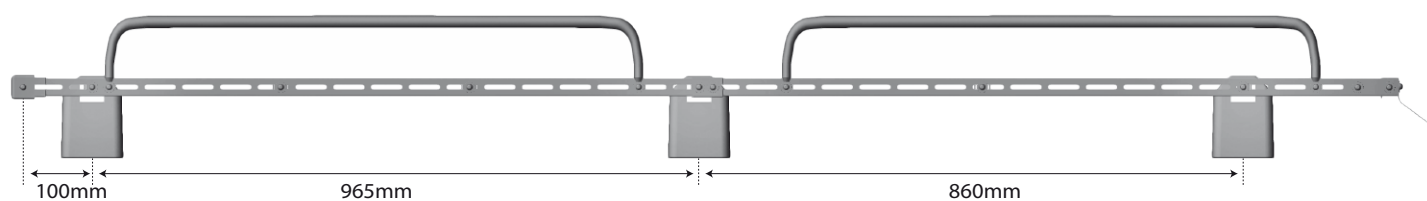


Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone


VOLKSWAGEN CADDY III L2 (04-13)

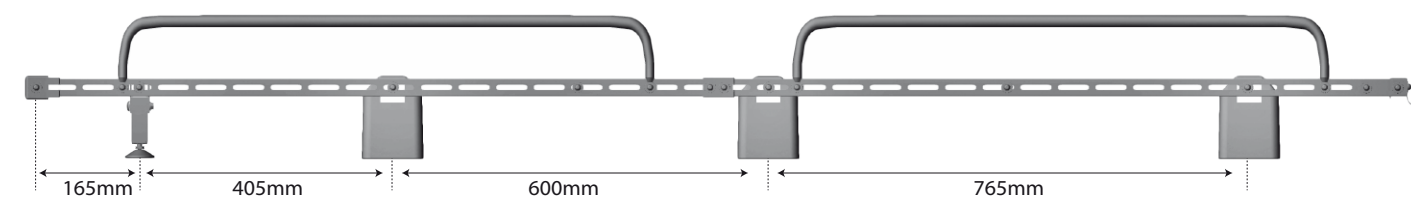


VOLKSWAGEN CADDY III.2 / IV L1 (2011-)

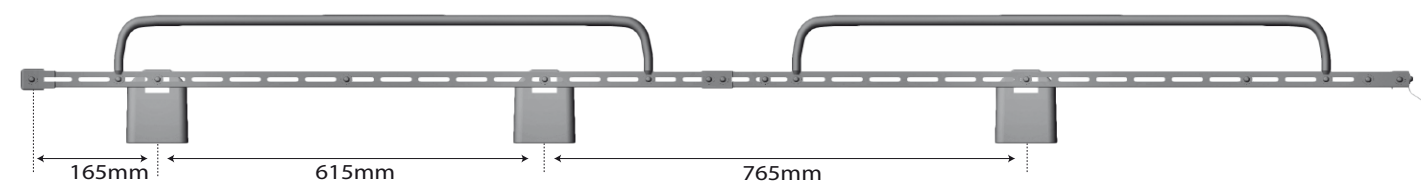


FORD COURIER II L1 (2024-)

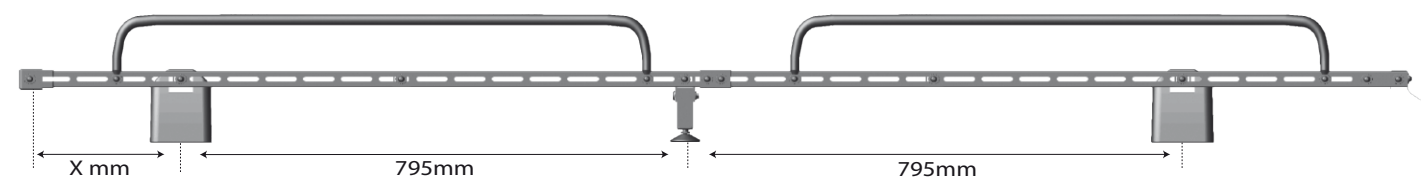


NISSAN KUBISTAR L2 / RENAULT KANGOO I L2 (97-09)

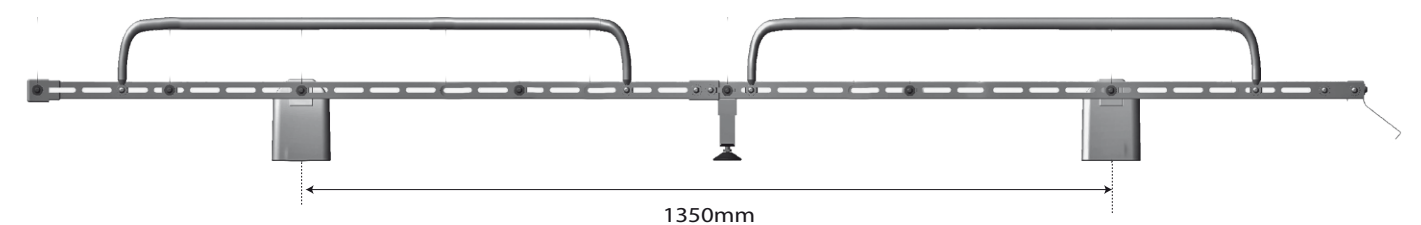


VOLKSWAGEN CADDY MAXI L2 (2011->)

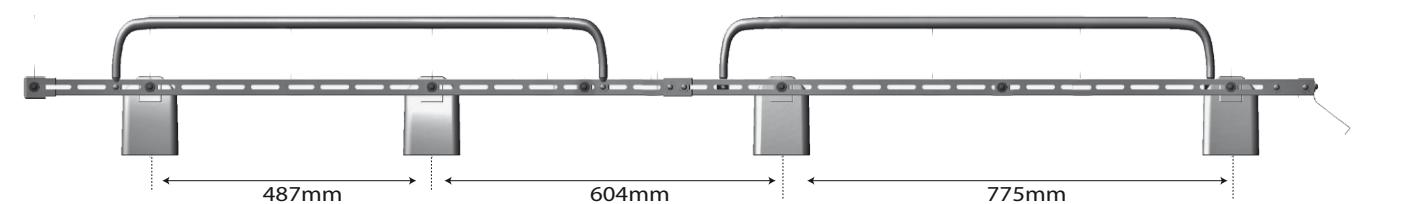



1




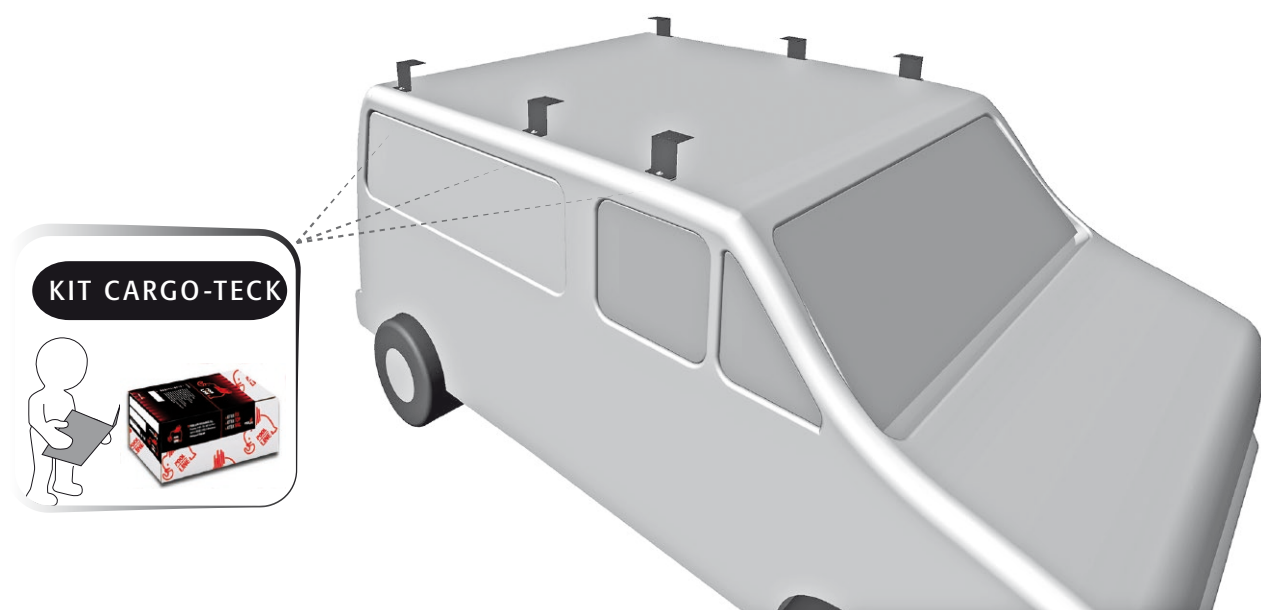


2

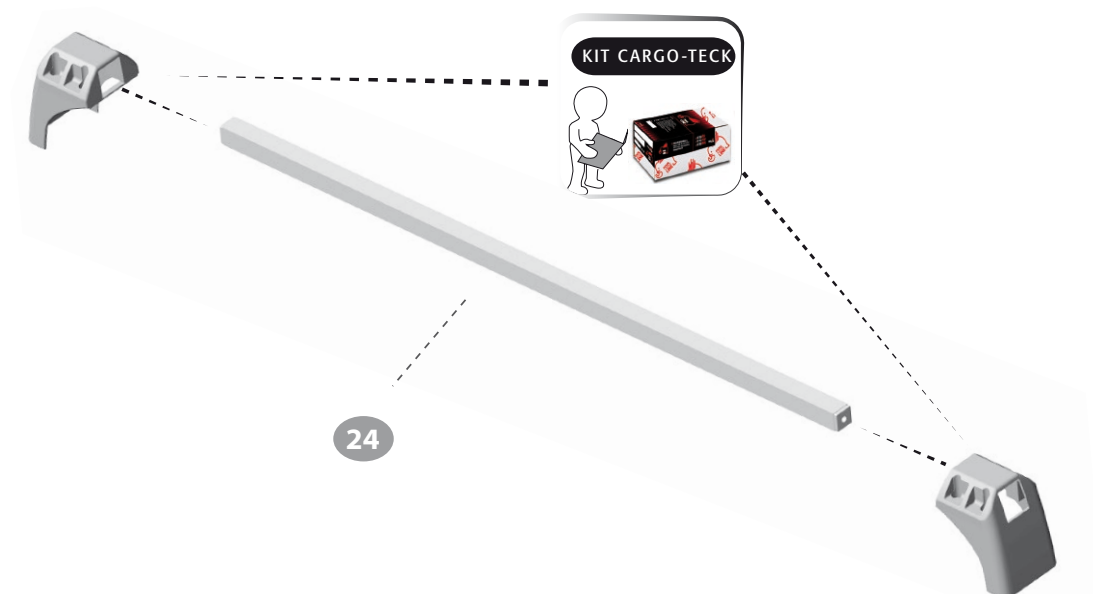


3

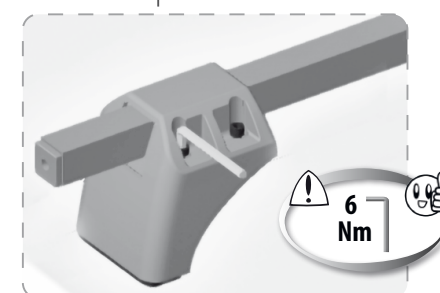
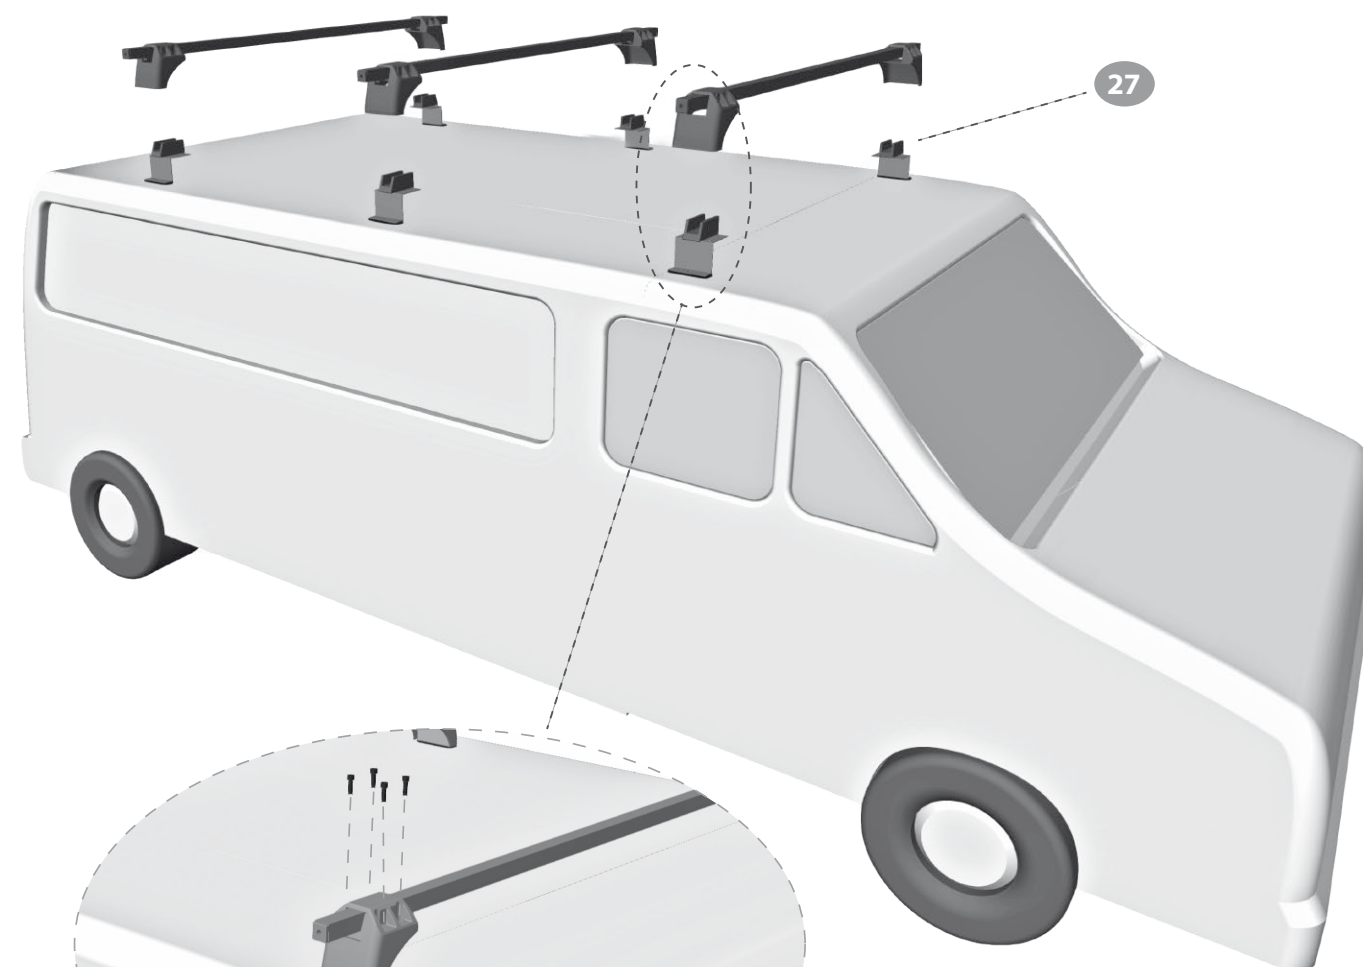


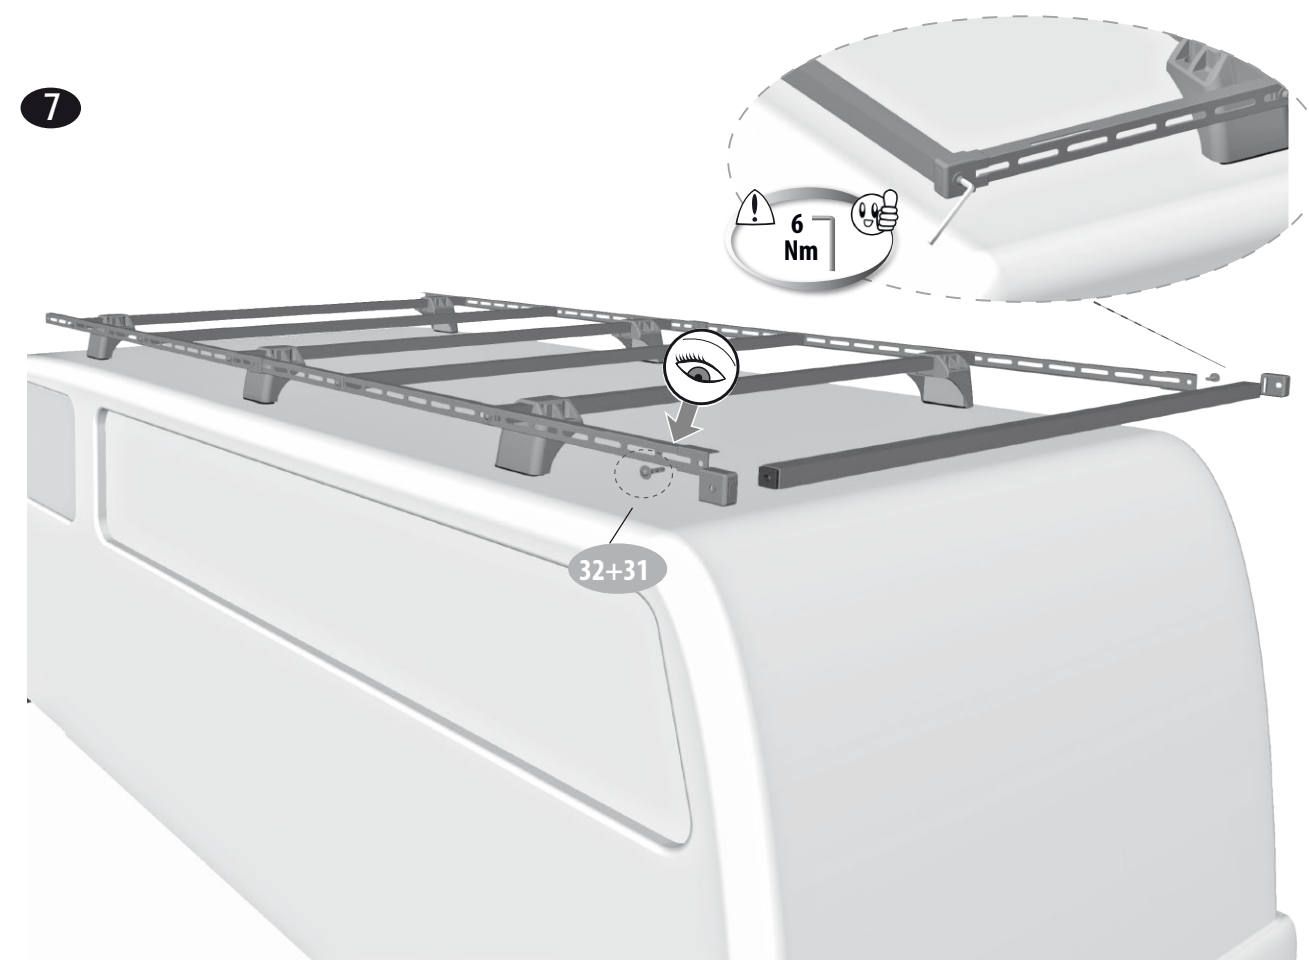
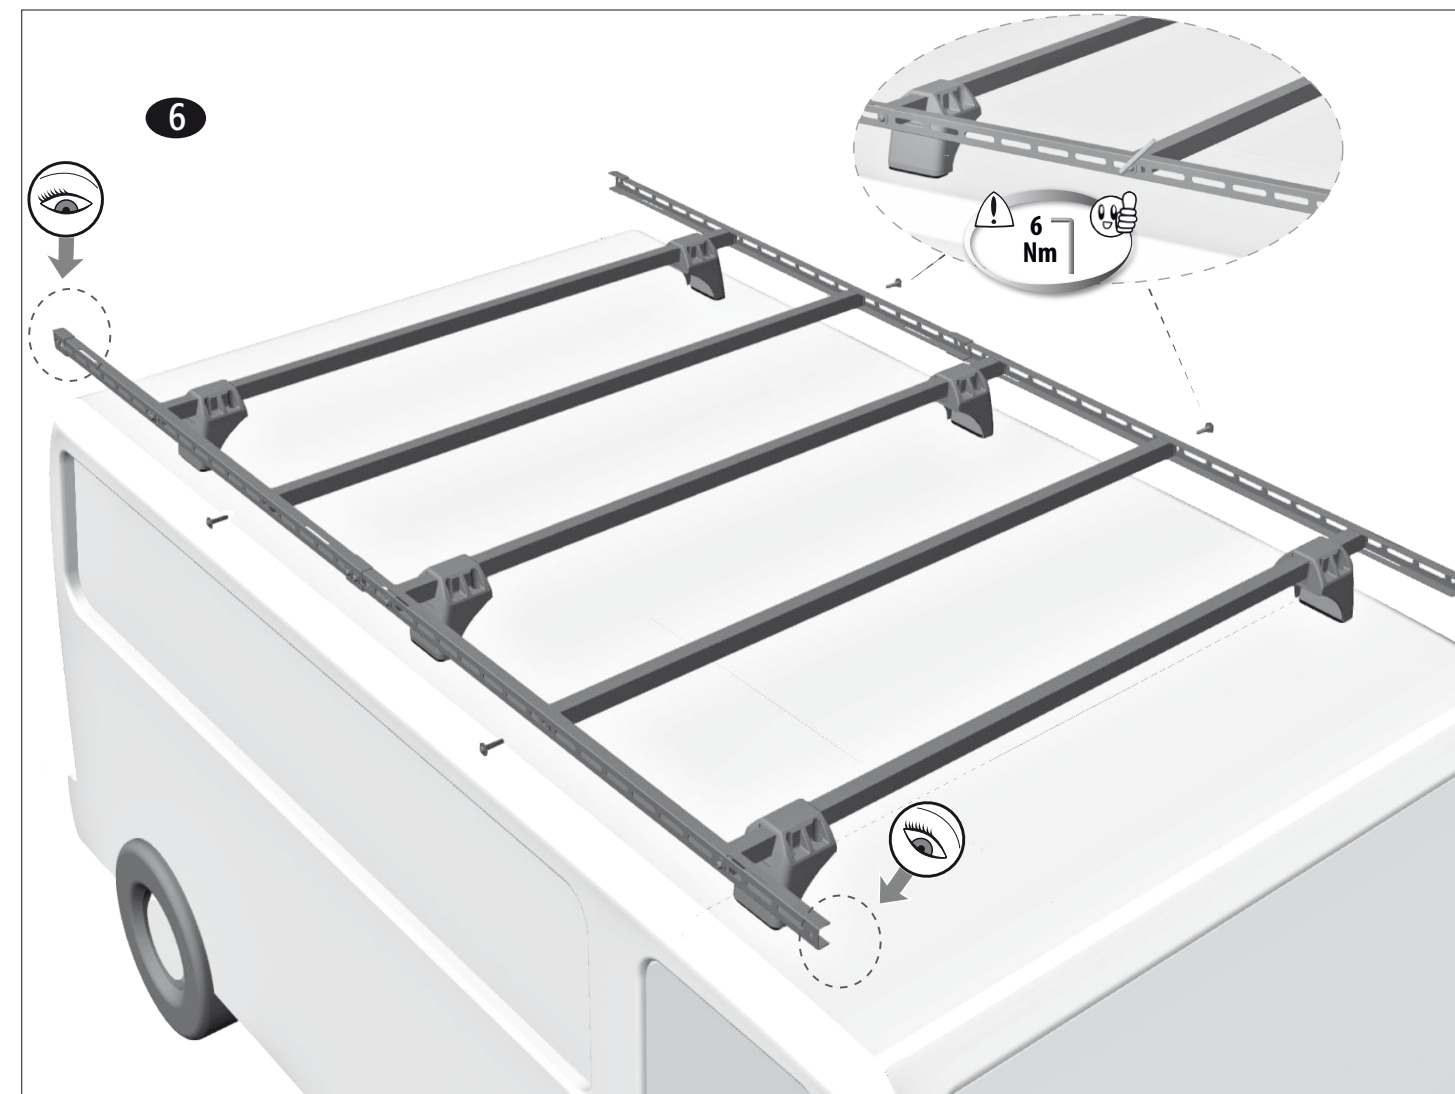
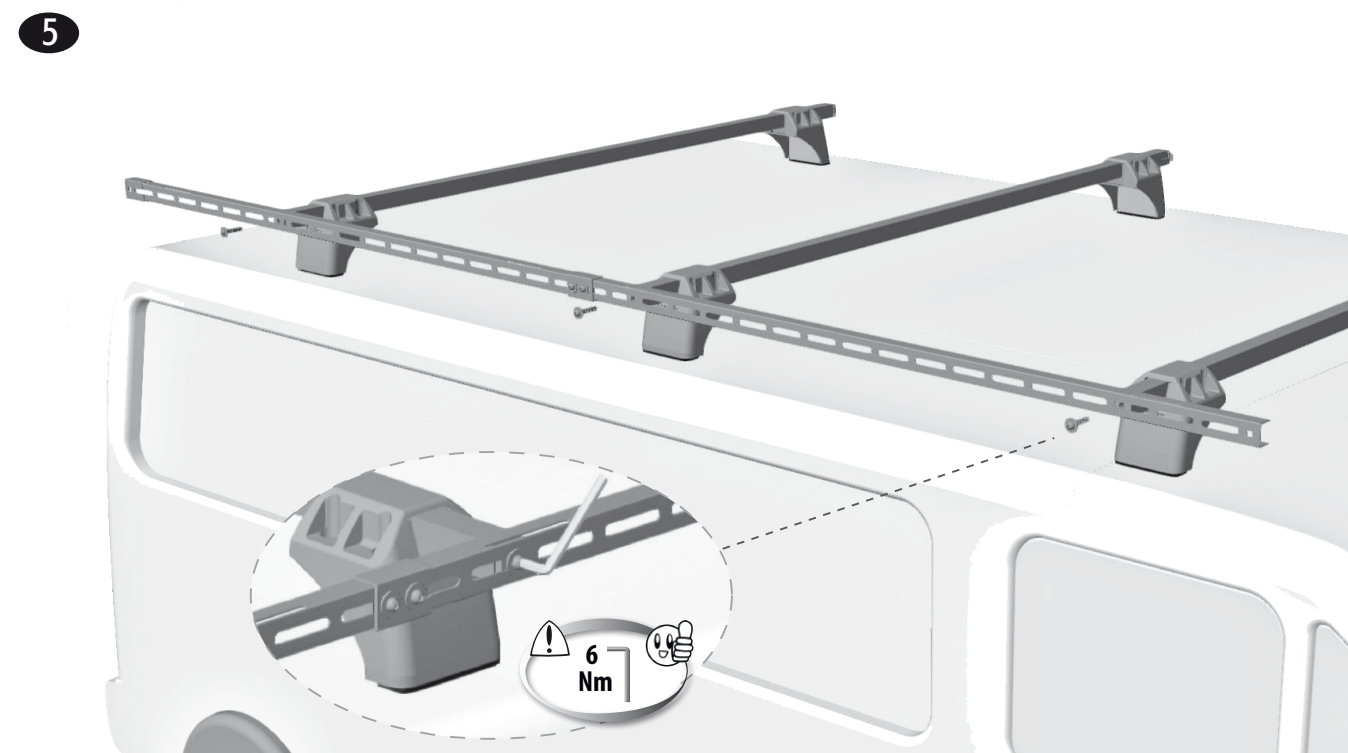
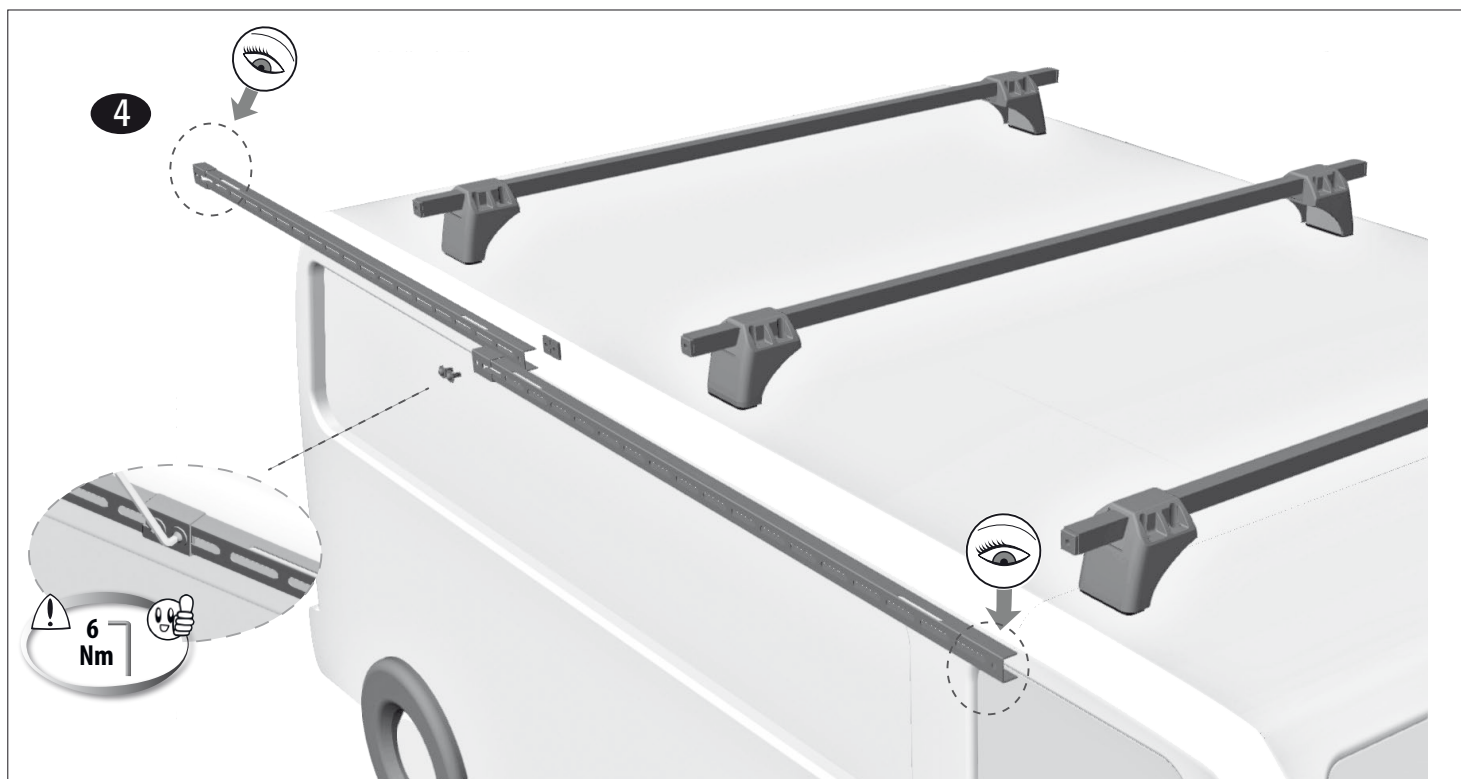


8

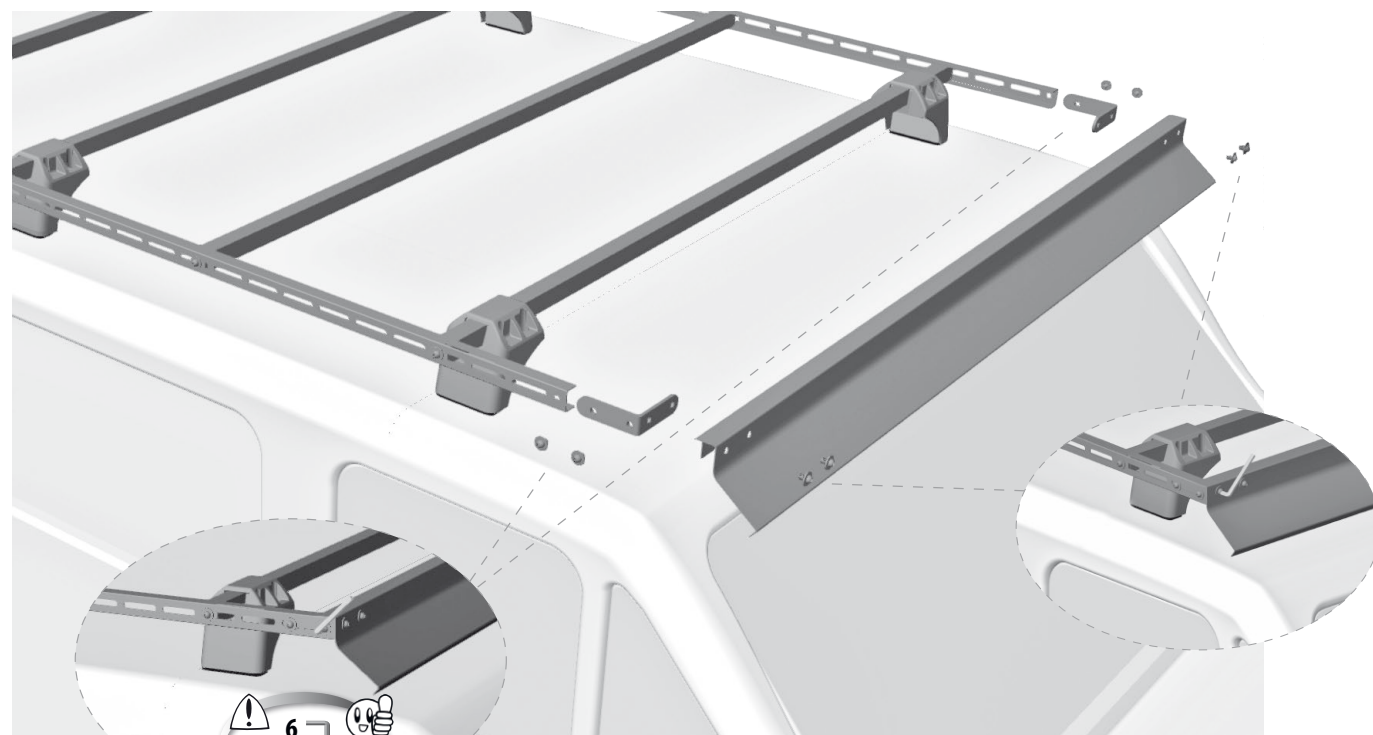





9

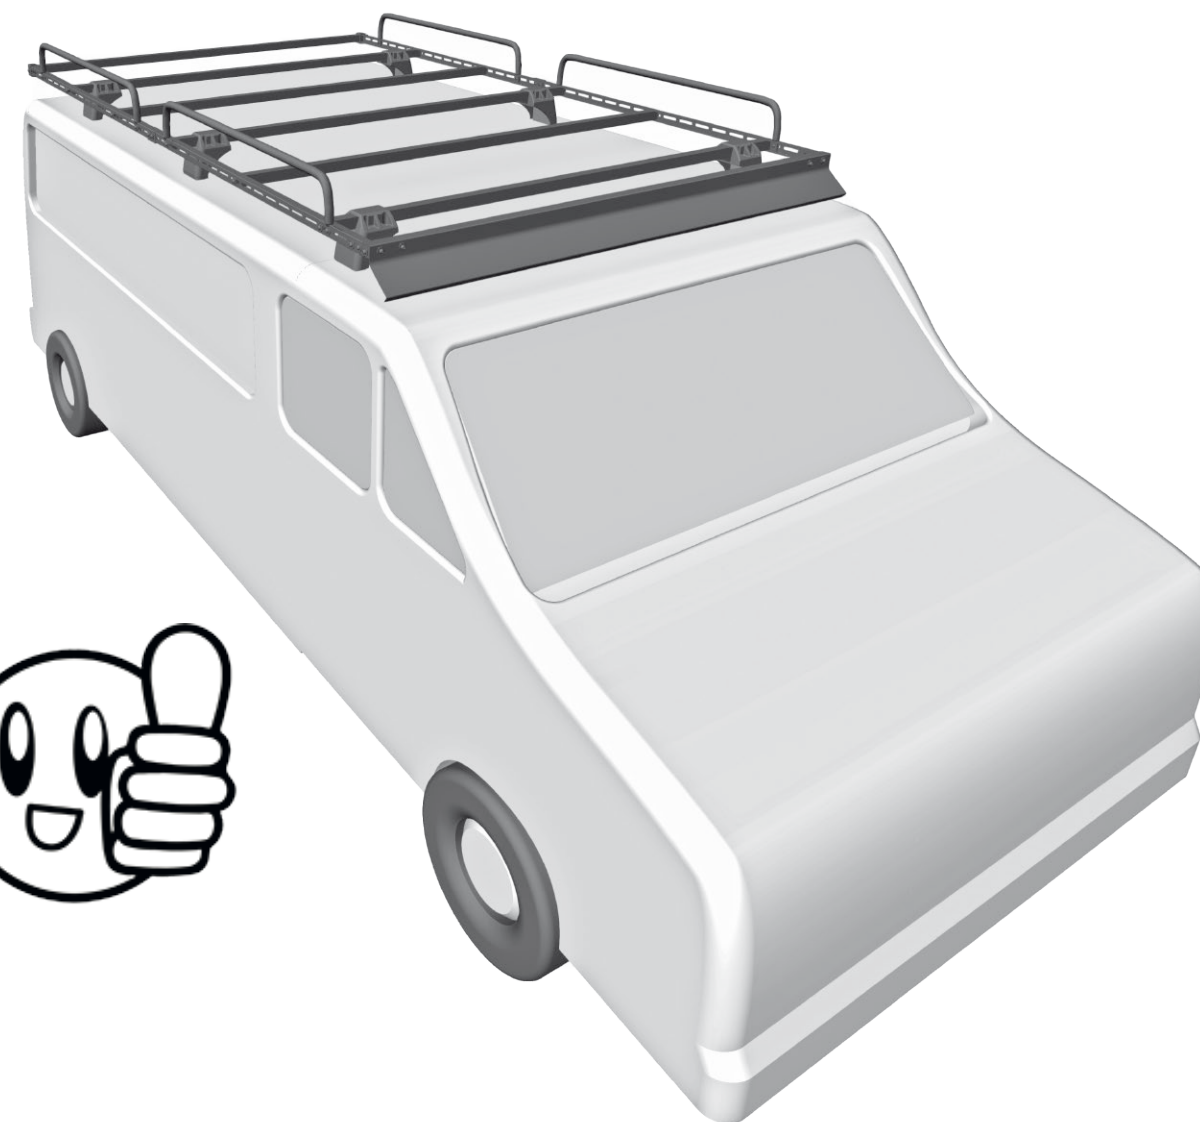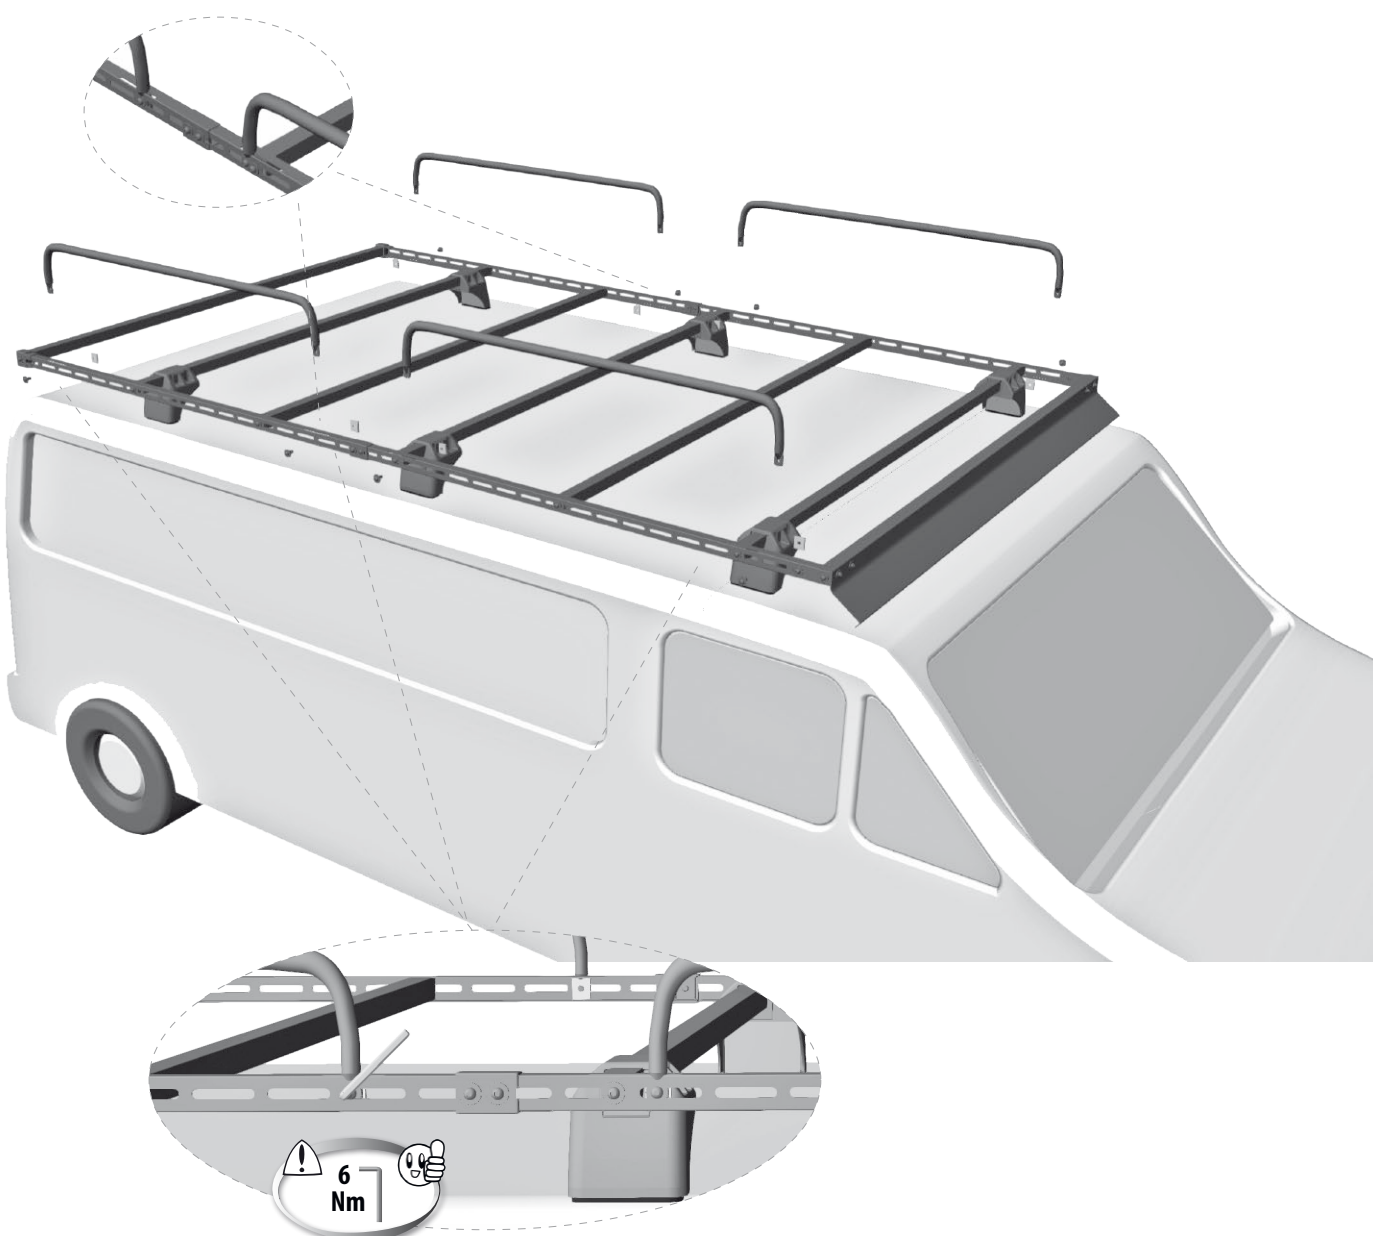

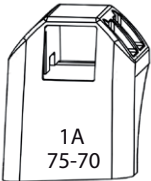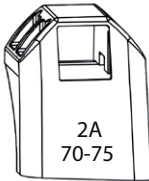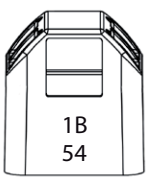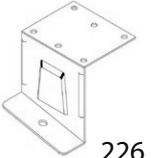
N			Q			Q
1	 1A 75-70	 2A 70-75	2+2	 1B 54		2
2	 225	 226	2+2	 210		2
3	 G					8
4						1

N	BO0061	Q
8	 DIN912 M6x20	24
9	 DIN125	24

N	BO0034 x 2	Q
10	 ISO 7380 M8x25	6
N	BO0032 x 2	Q
11	 Din125 Ø8	6

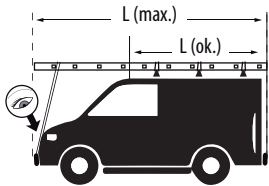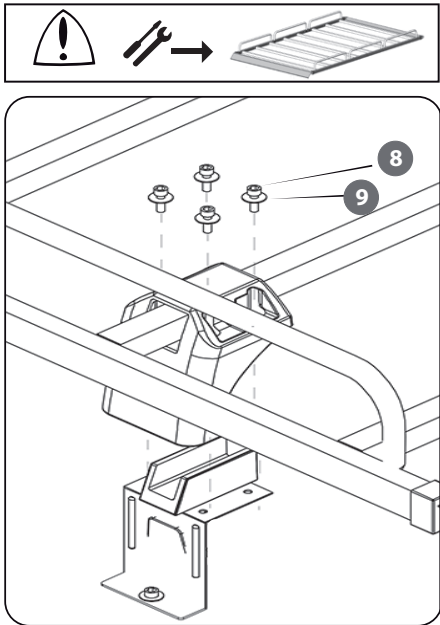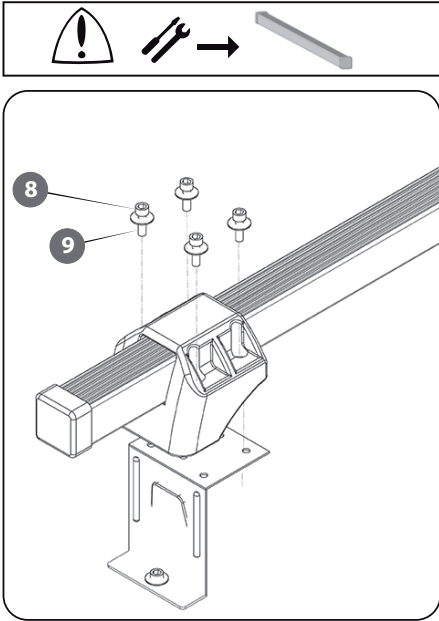


- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instrucctions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

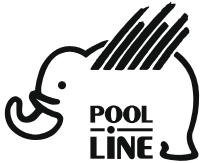


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1043





121085

Rv: 06/2023

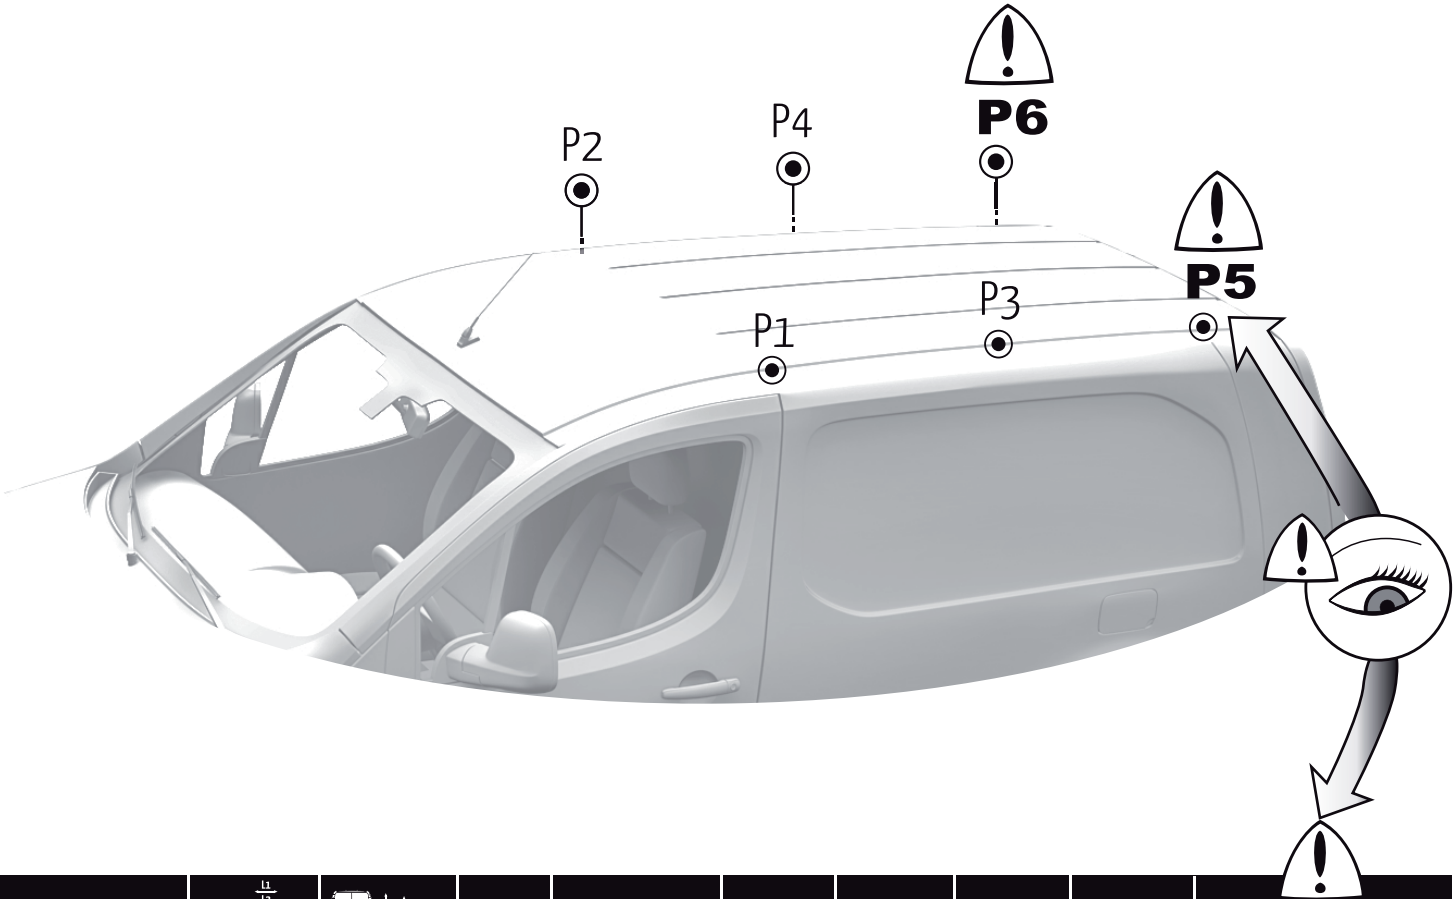

					P1	P2	P3	P4	P5	P6
MERCEDES										
CITAN W420	L1	H1	2021->	B00032 + B00034	225+1A+1G	226+1A+1G	210+1B+1G	210+1B+1G	226+1A+2G	225+1A++2G
RENAULT										
KANGOO III	L1	H1	2021->	B00032 + B00034	225+1A+1G	226+1A+1G	210+1B+1G	210+1B+1G	226+1A+2G	225+1A++2G

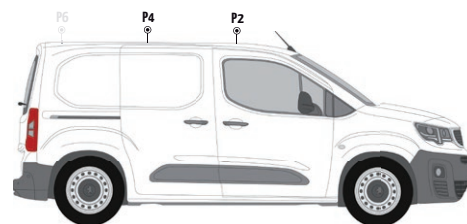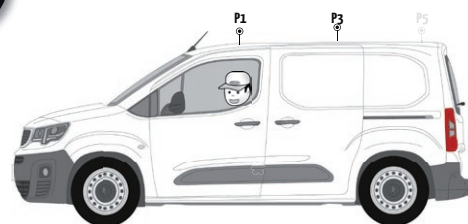

Eye icon pointing to a table.

P1	P2	P3	P4	P5	P6
225+1A+16	225+1A+16	210+1B+16	210+1B+16		
225+1A+16	225+1A+16	210+1B+16	210+1B+16	225+1A+26	225+1A+26
225+1A+16	225+1A+16	210+1B+16	210+1B+16		

Pag. 1







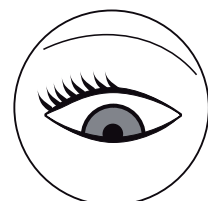


Table with a clock icon and a '10' in a circle.

	P1	P2
OX	B0000 32	
OX-	B0000 34	
	B0000 32	

Pag. 1

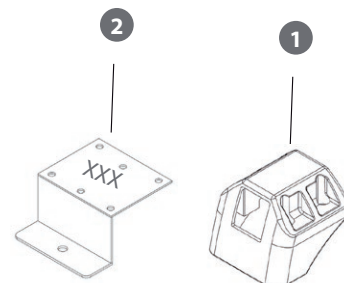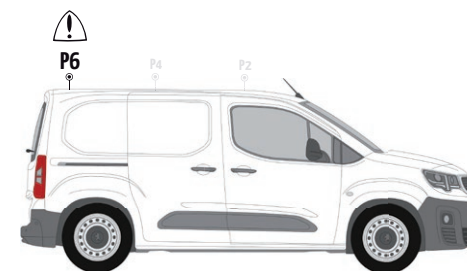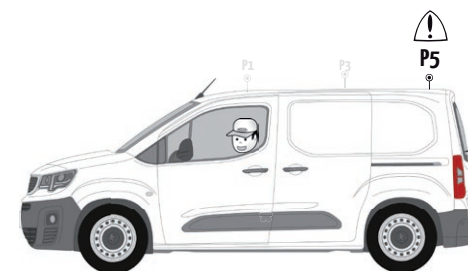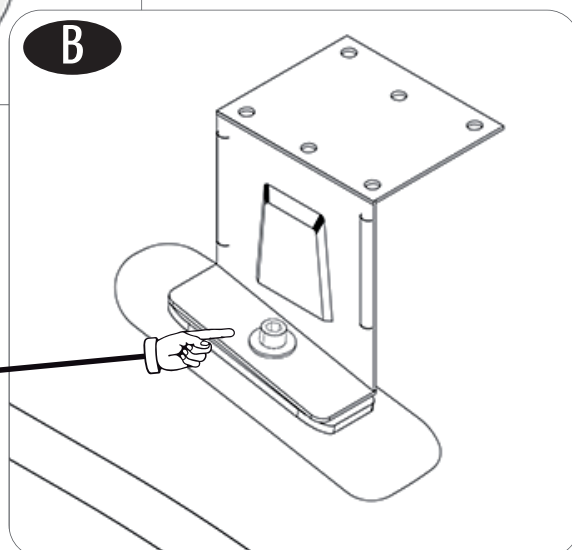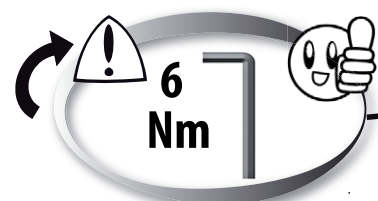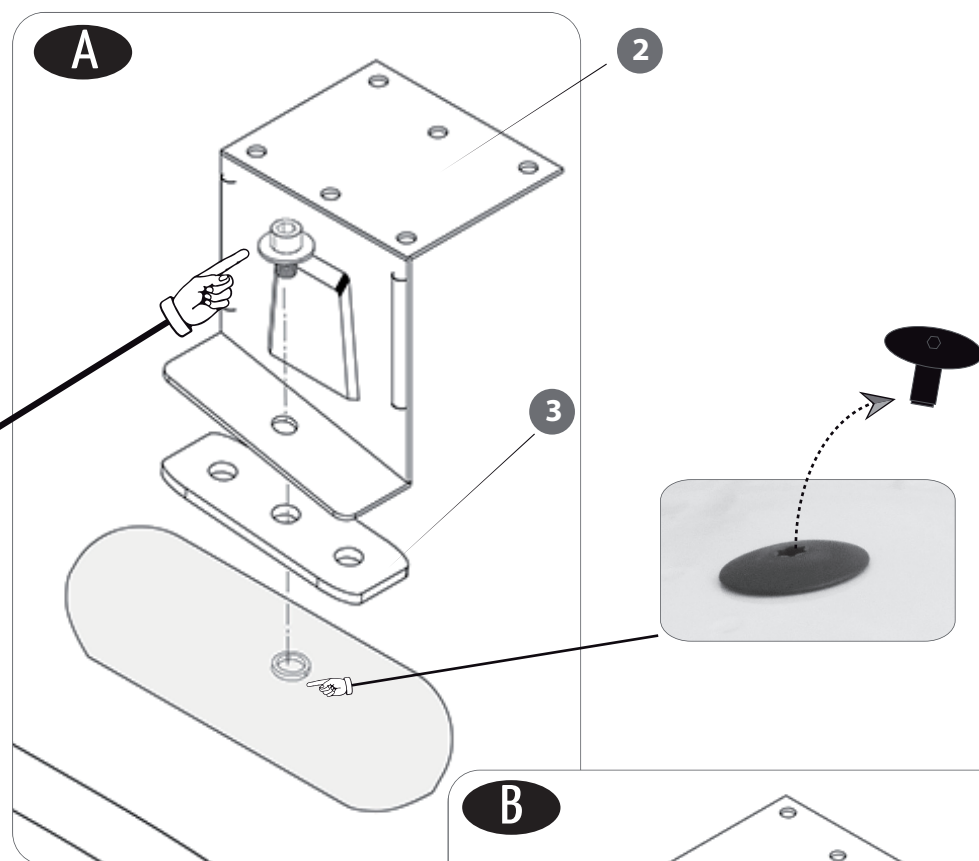

Eye icon pointing to a table.

P1	P2	P3	P4	P5	P6
				225+1A+26	225+1A+26
				225+1A+26	225+1A+26
				225+1A+26	225+1A+26

Pag. 1


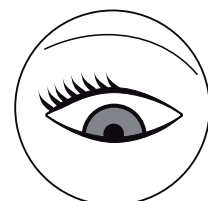


Table with a clock icon and a '10' in a circle.

	P1	P2
OX	B0000 32	
OX-	B0000 34	
	B0000 32	

Pag. 1

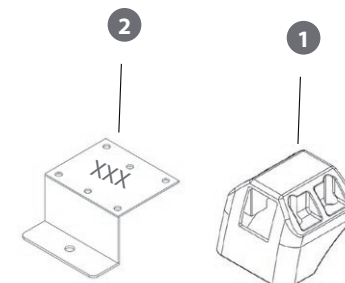