


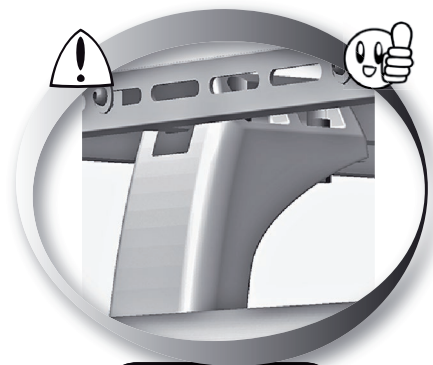


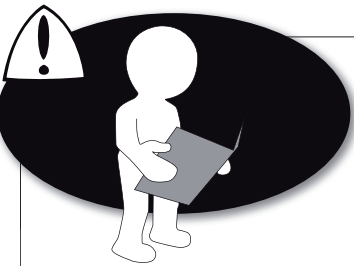


KIT CARGO-TECK

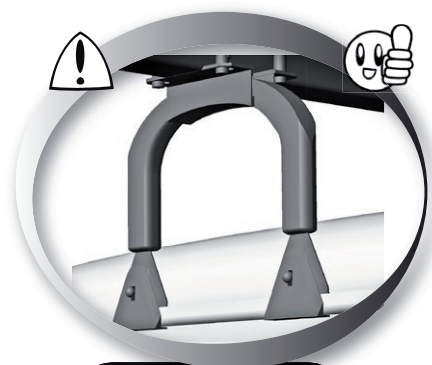

KIT CARGO-TECK FEET

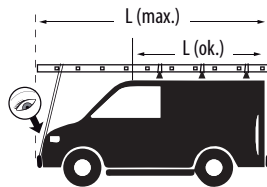

- E** Instrucciones de montaje
- C** Instruccions de muntatge
- GB** Assembly instructions
- F** Instruction de montage
- D** Montageanleitung
- PT** Instruções de montagem
- I** Istruzioni di montaggio
- PL** Instrukcja montażu
- CZ** Montážní návod
- HU** Szerelési Utasítás
- RO** Instrucțiuni de montaj
- HR** Detaljne upute
- TU** Öncelikle montaj

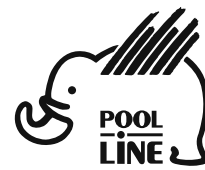

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net




200 **KG.**
MAX.


Nº HOMOLOGACIÓN: **E9** 26R-03.1042













123952

Rv: 06/2023

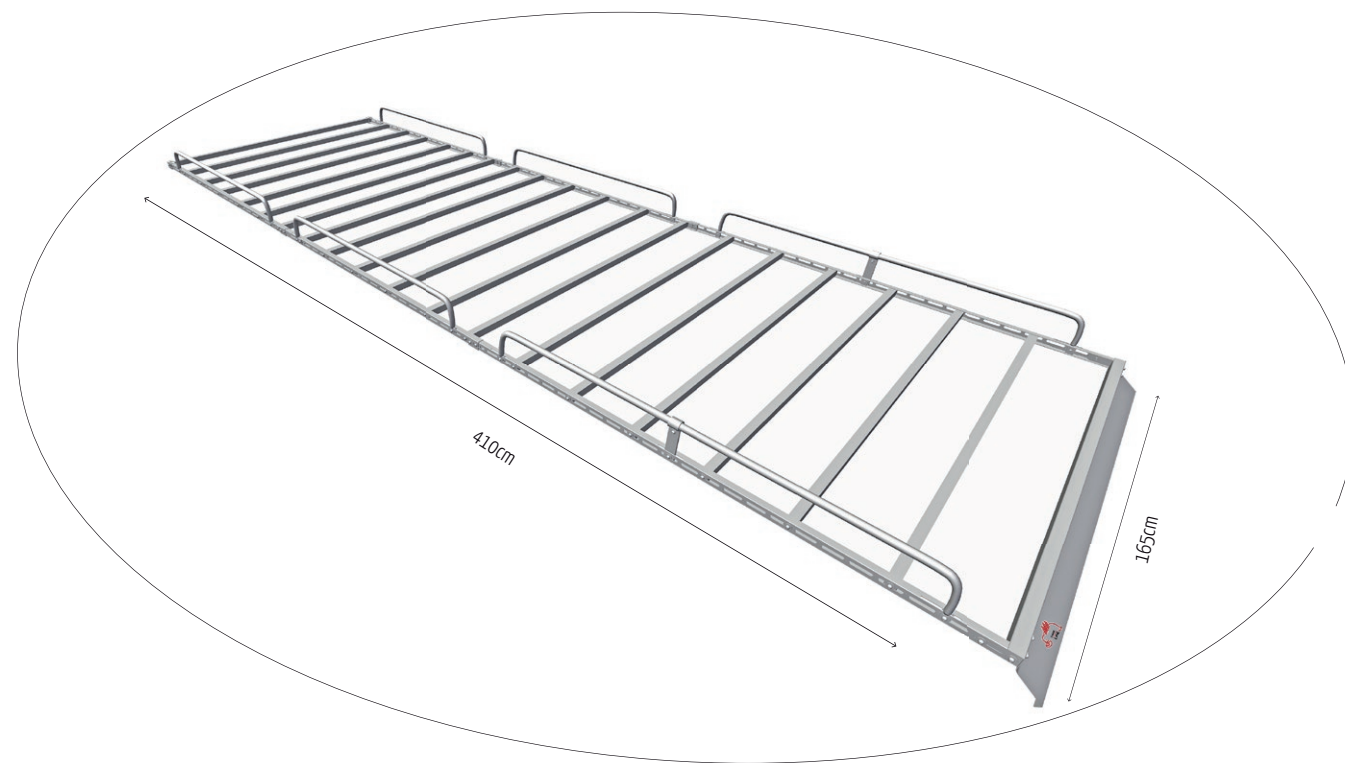


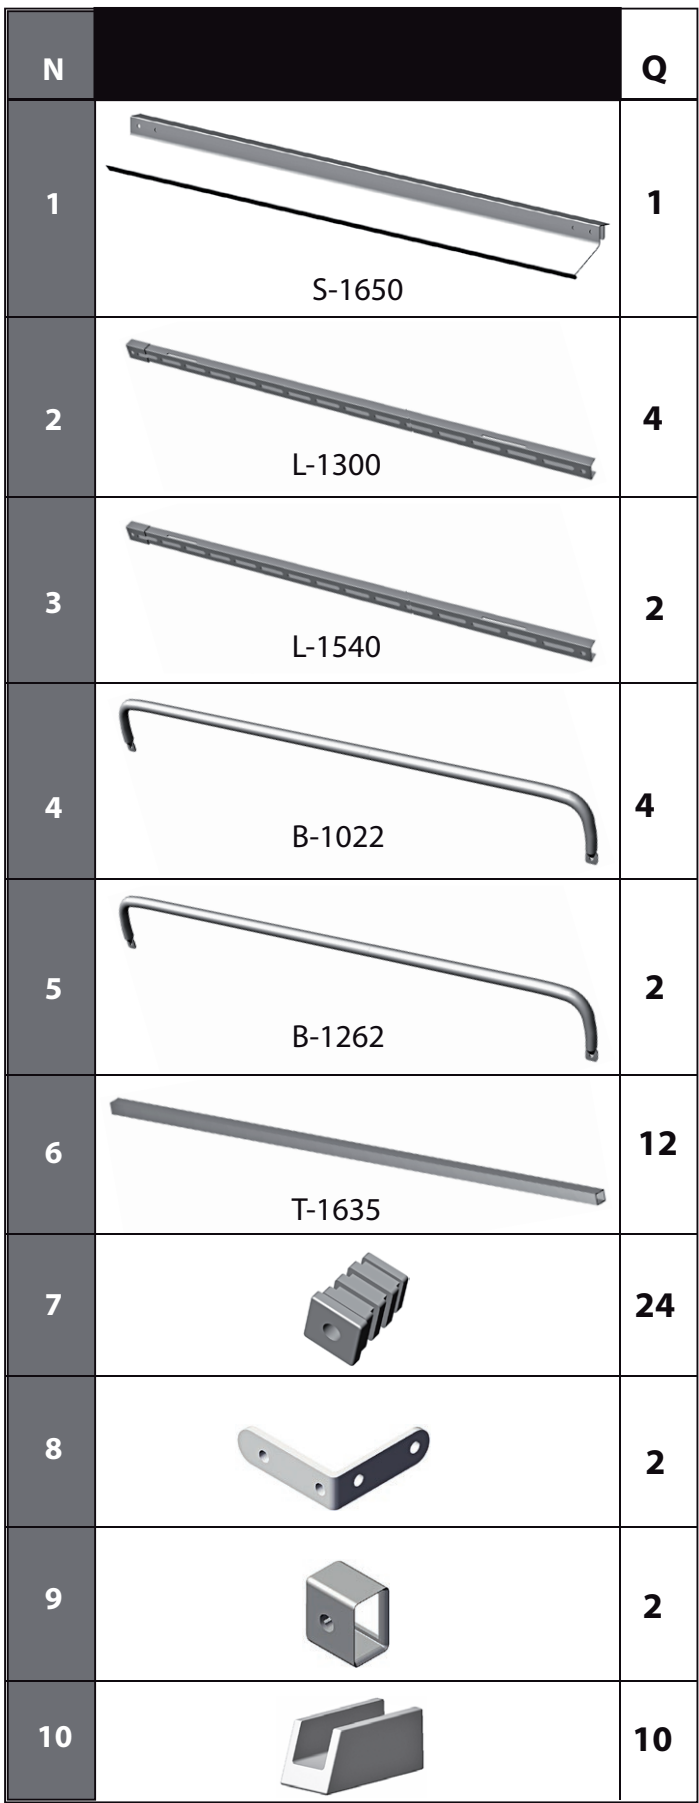
[illegible]

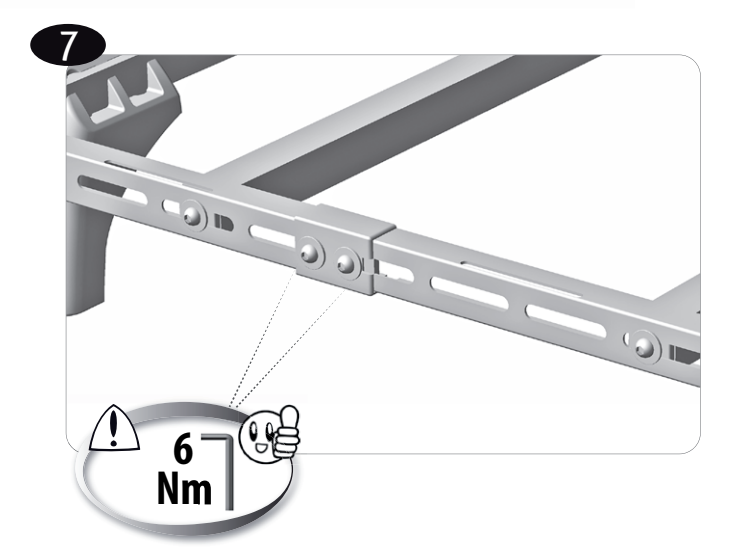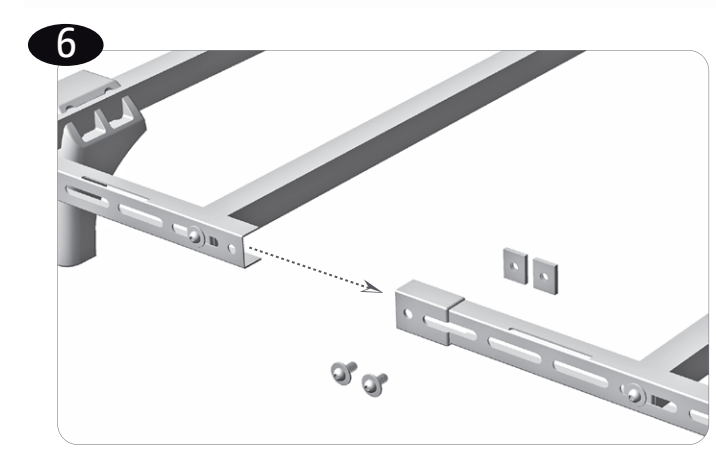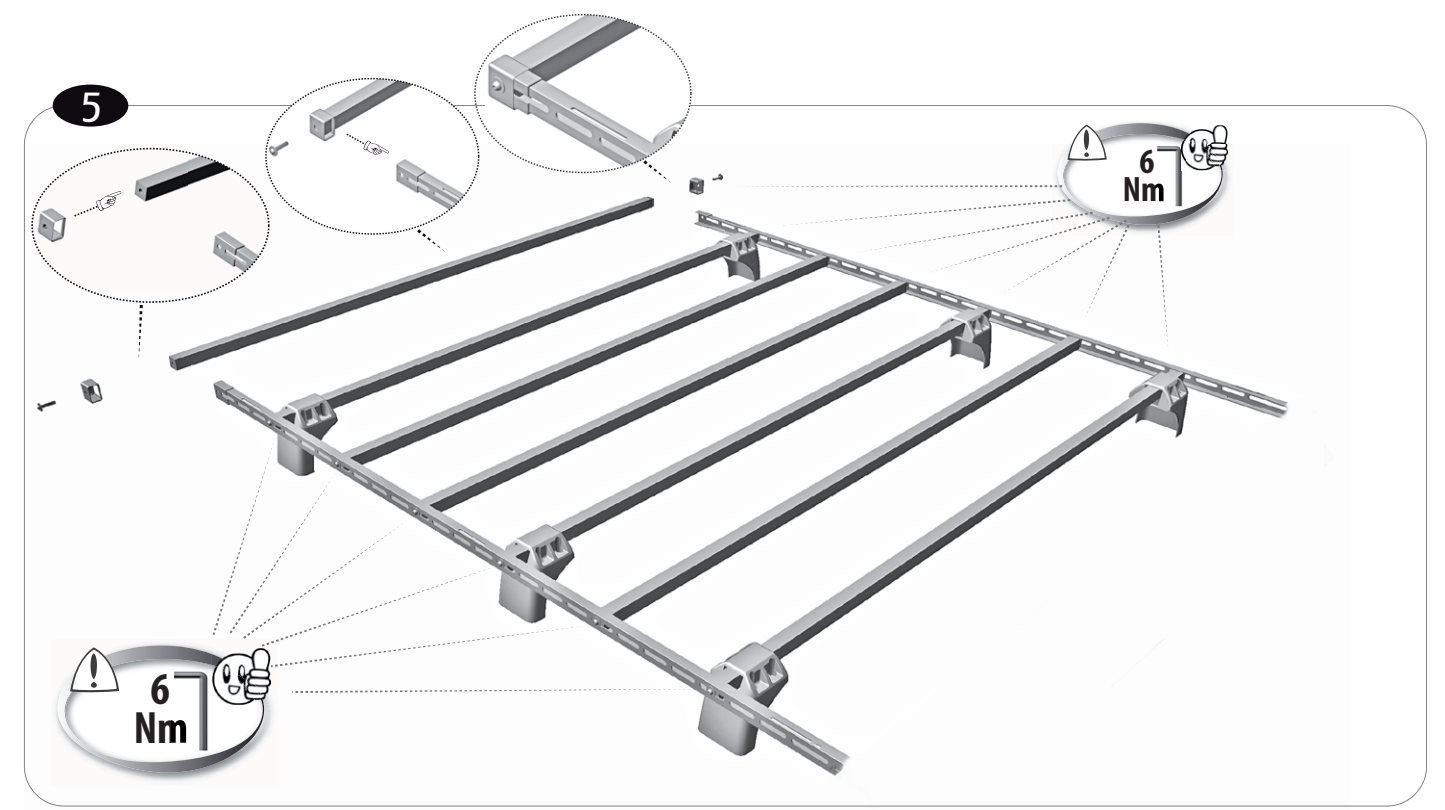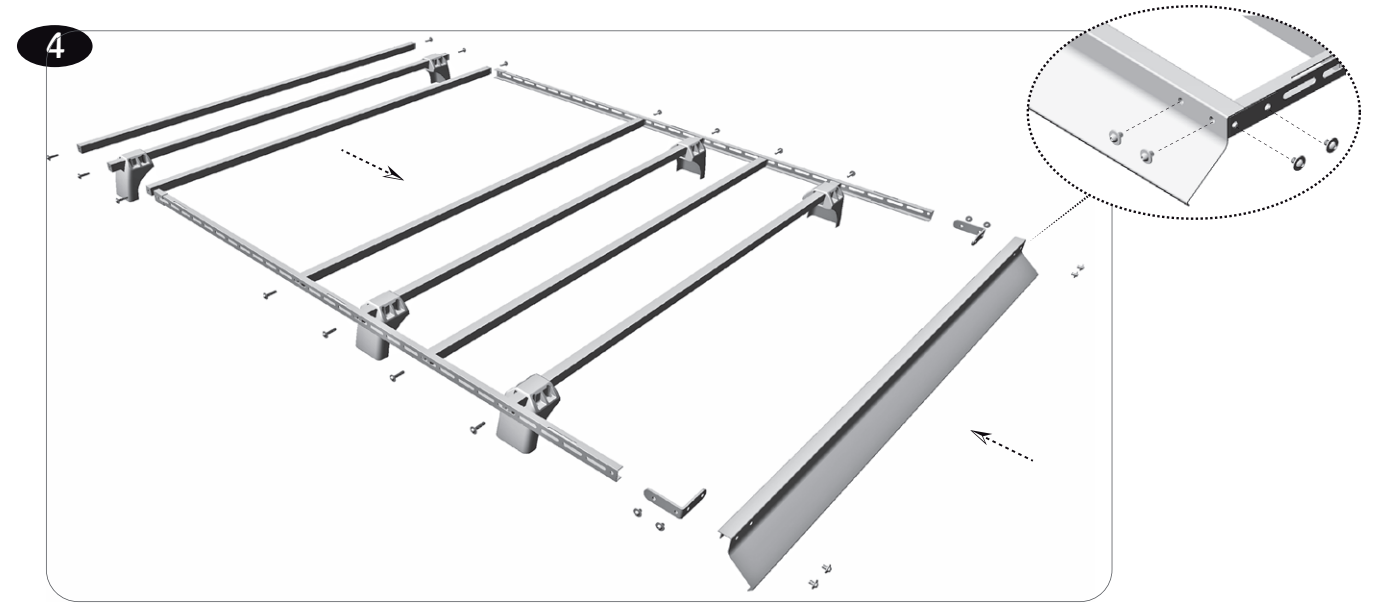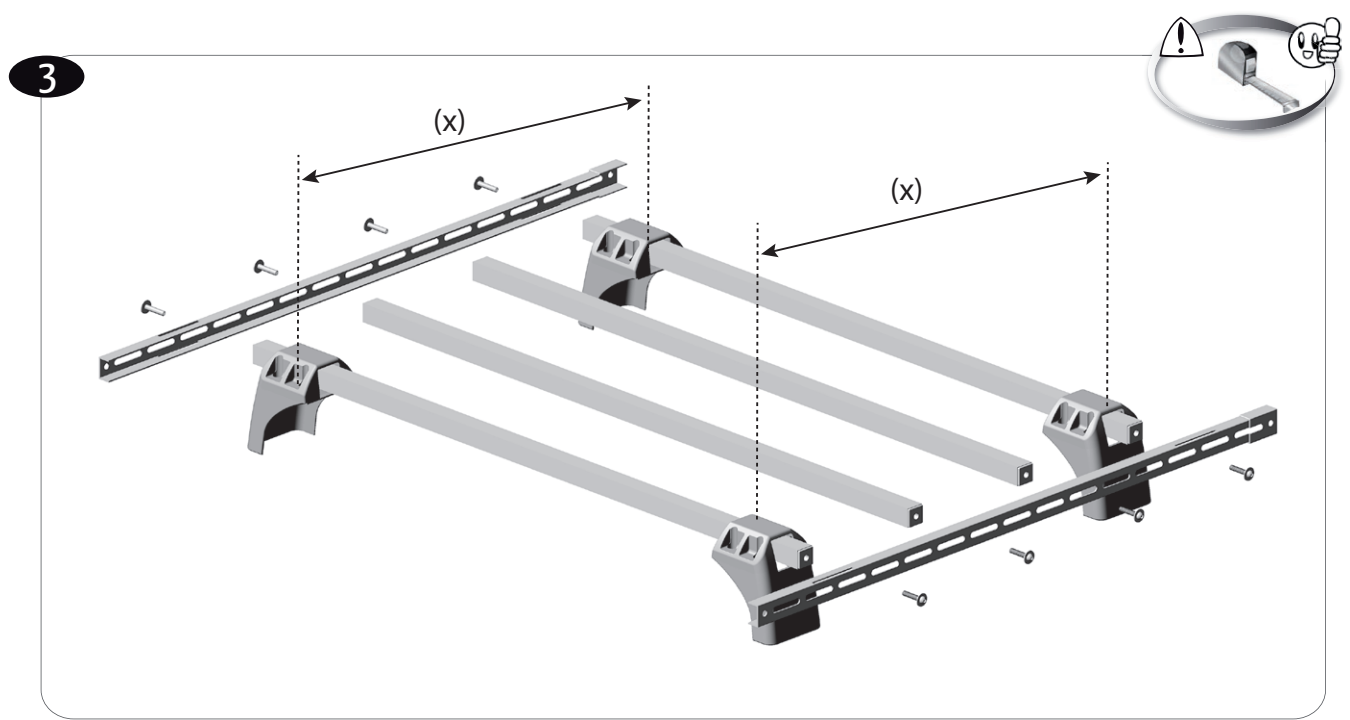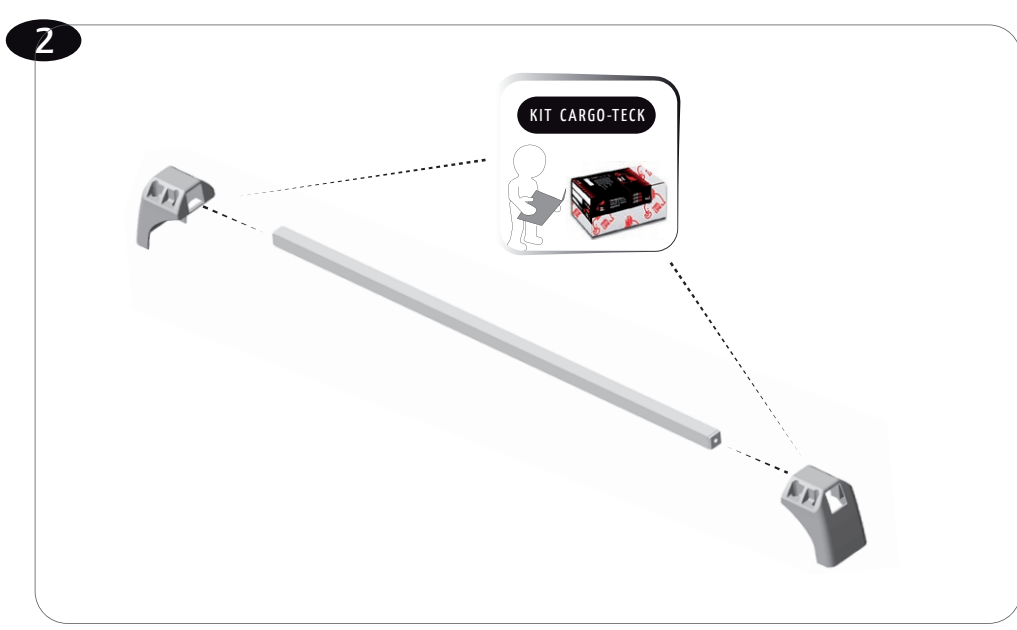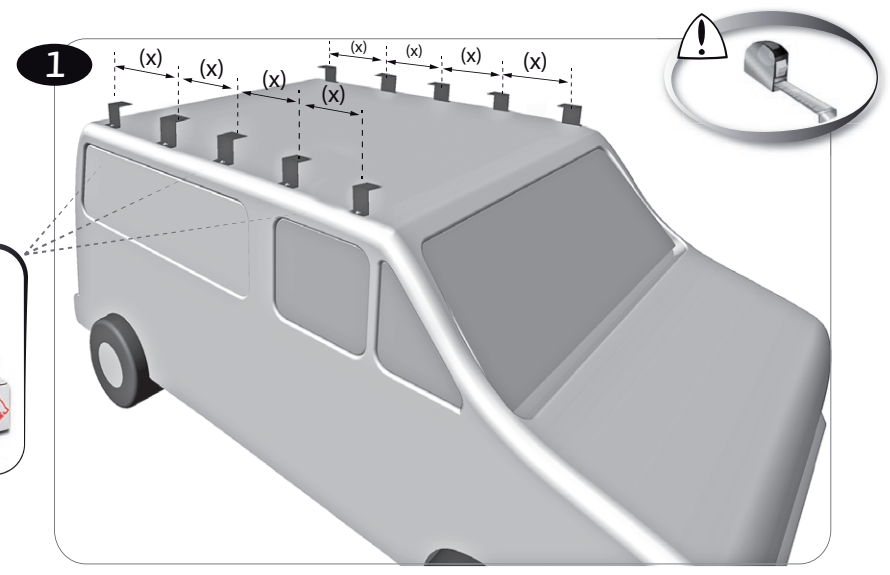

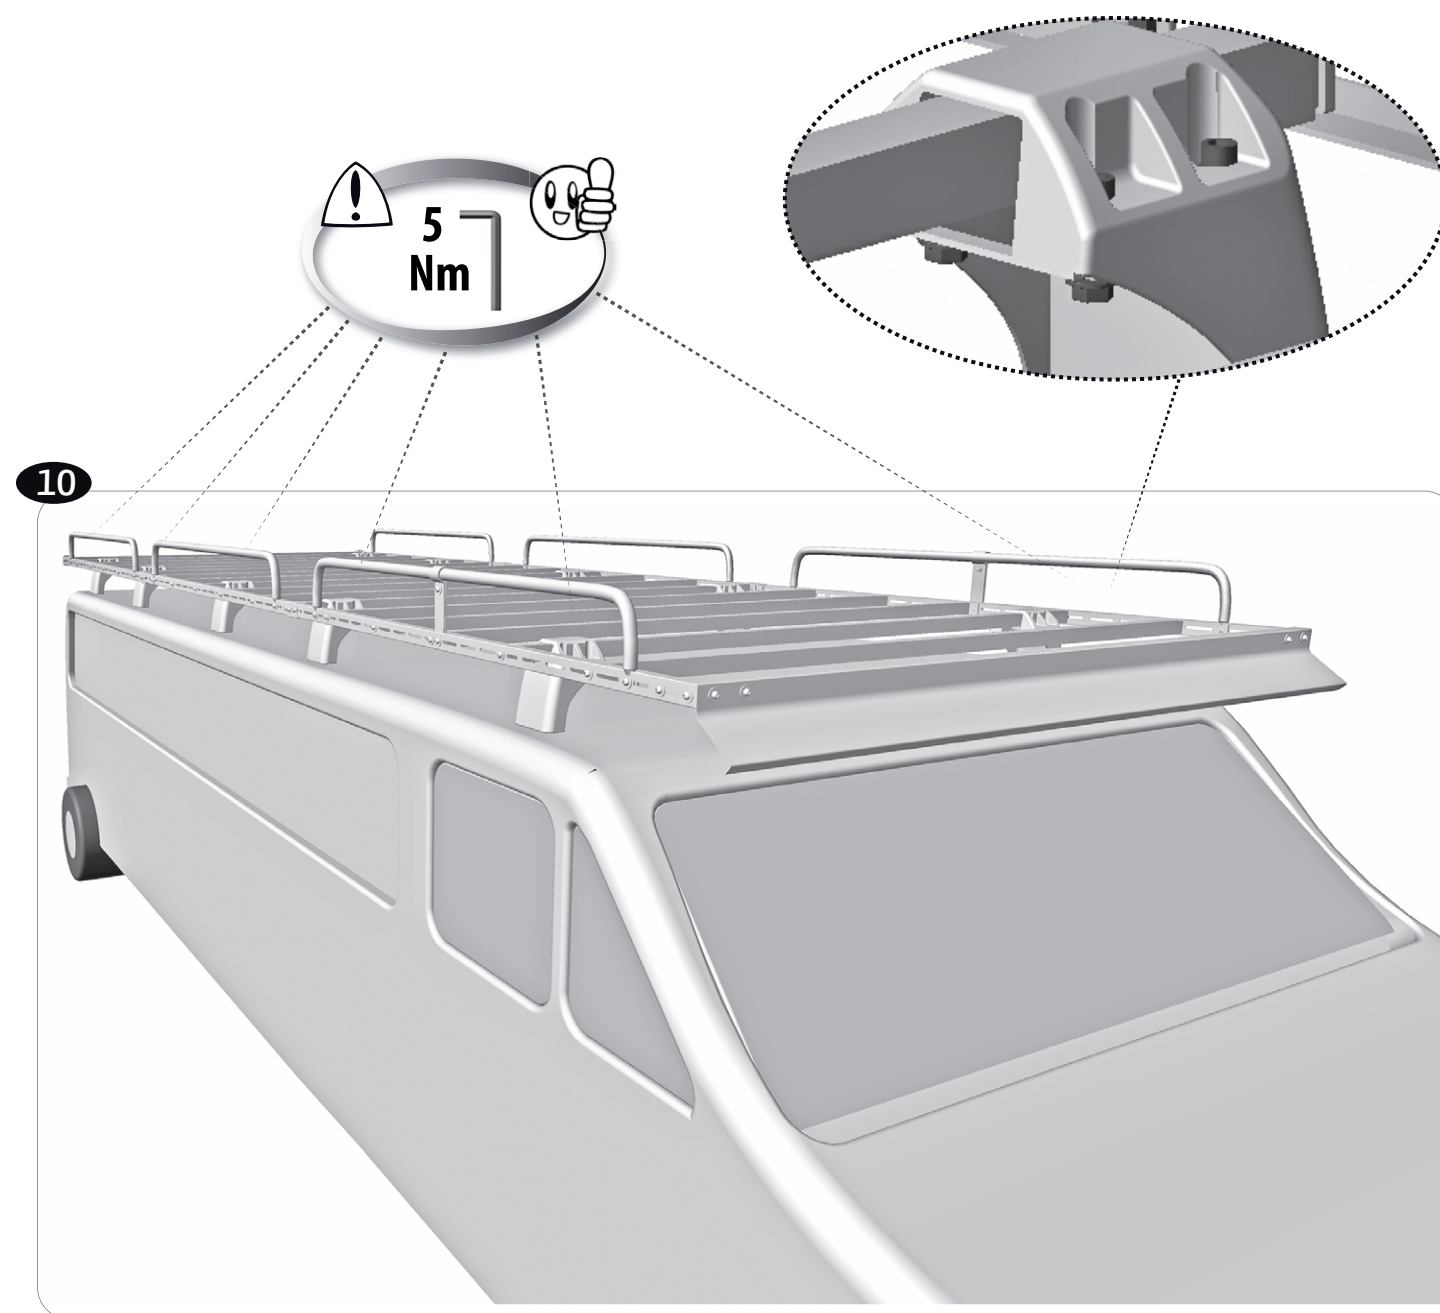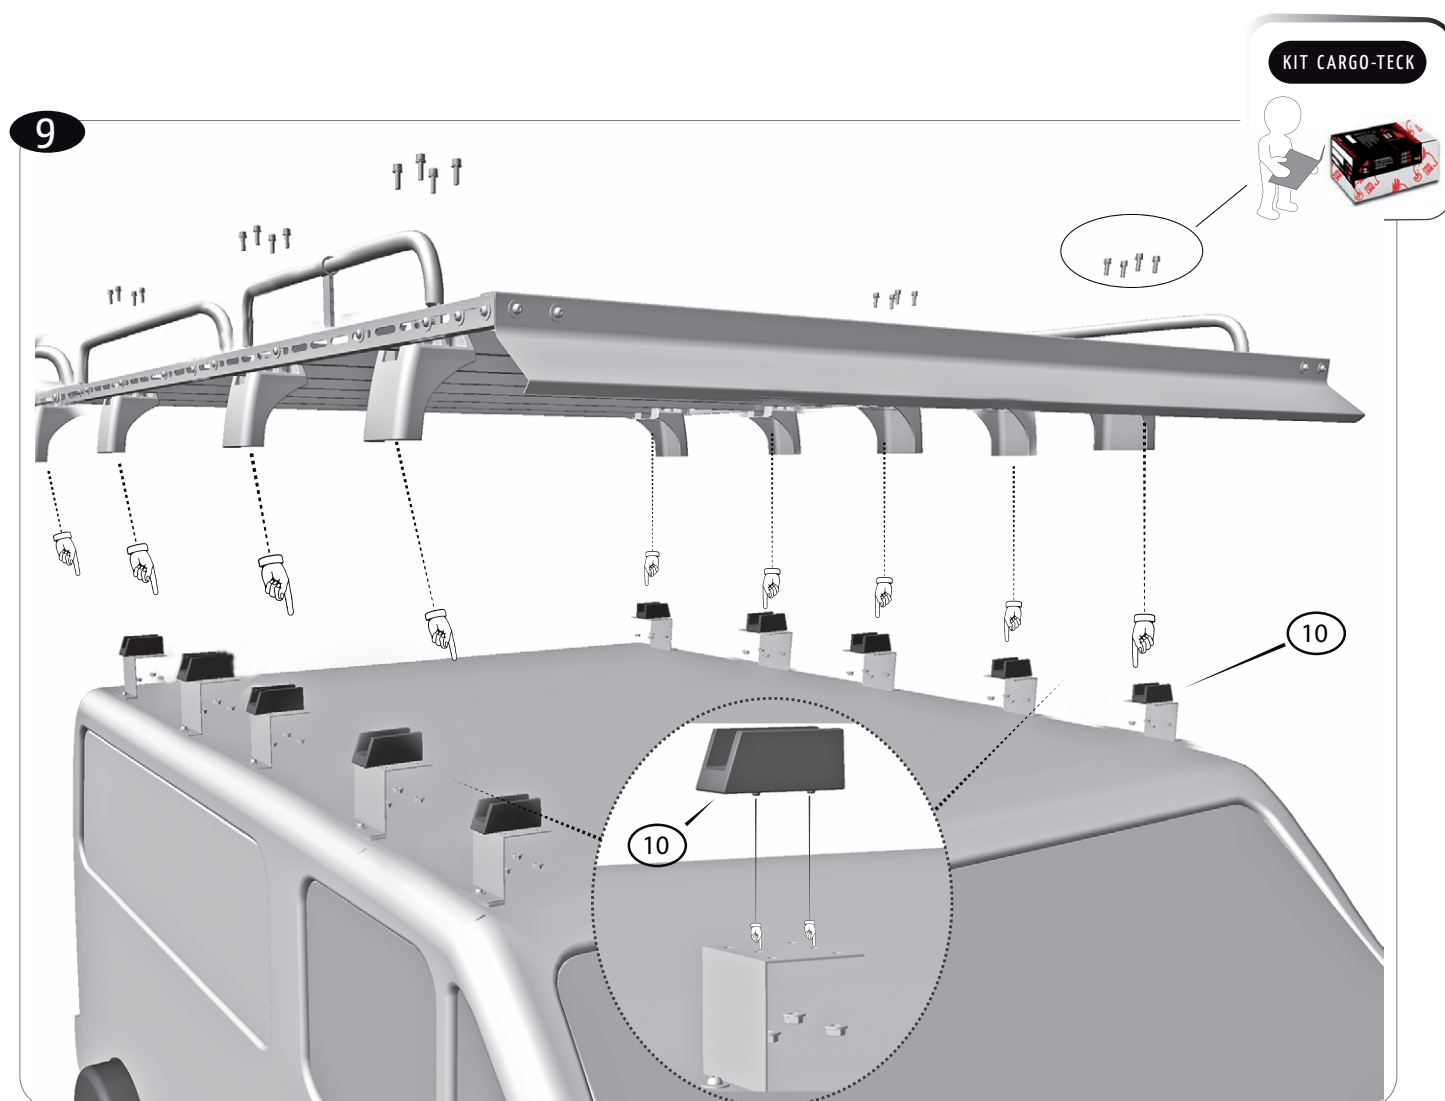
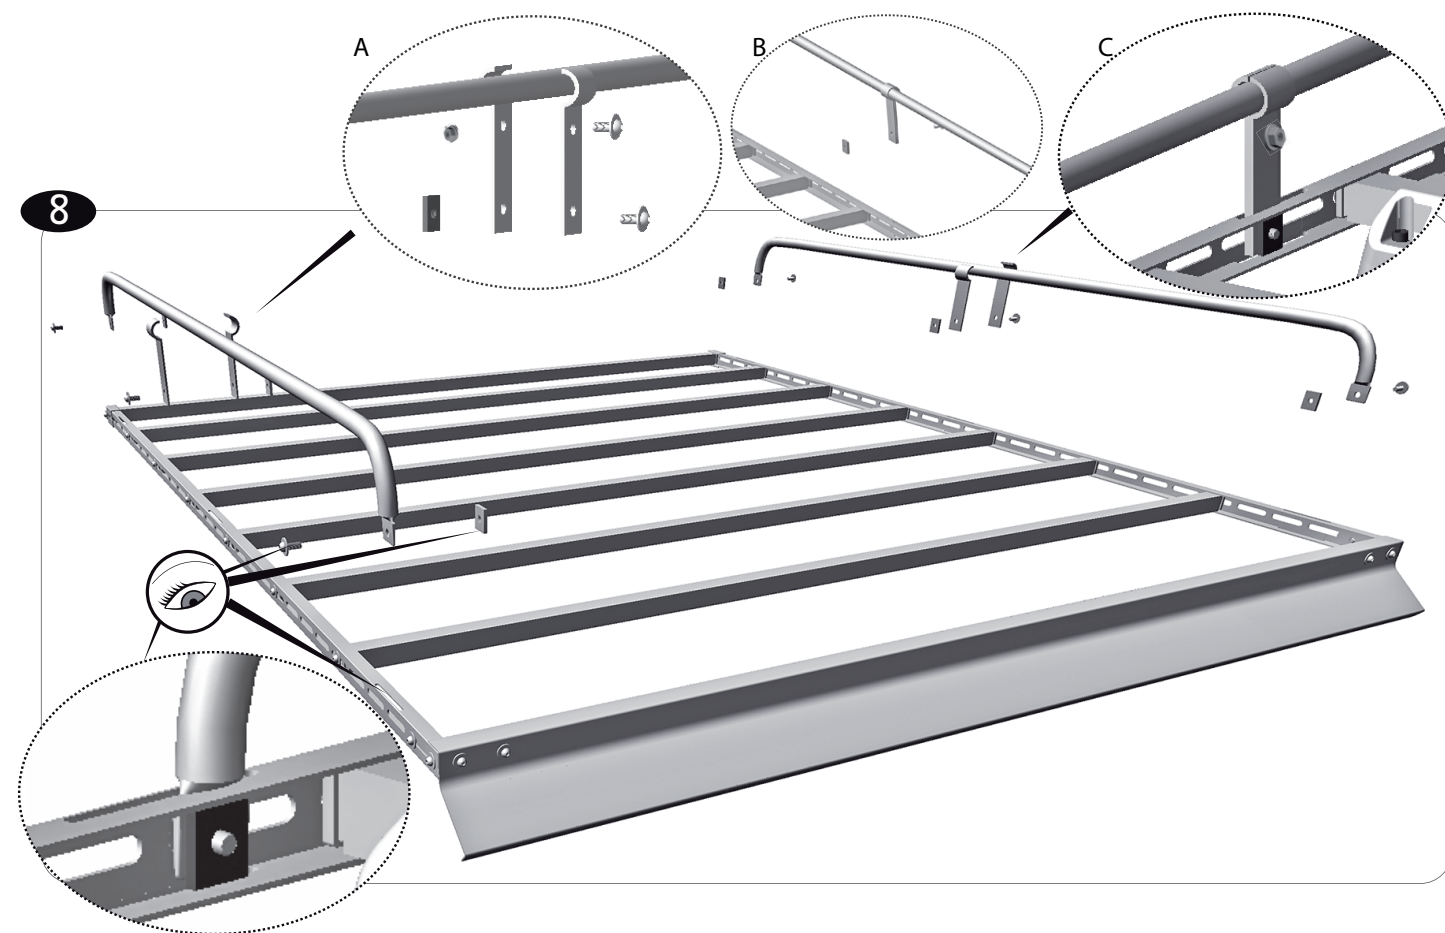




- CITROËN JUMPER II / III L4 / H2 (06->)
- FIAT DUCATO II / III L4 / H2 (06->)
- OPEL MOVANO C L4 / H2 (21->)
- PEUGEOT BOXER II / III L4 / H2 (06->)

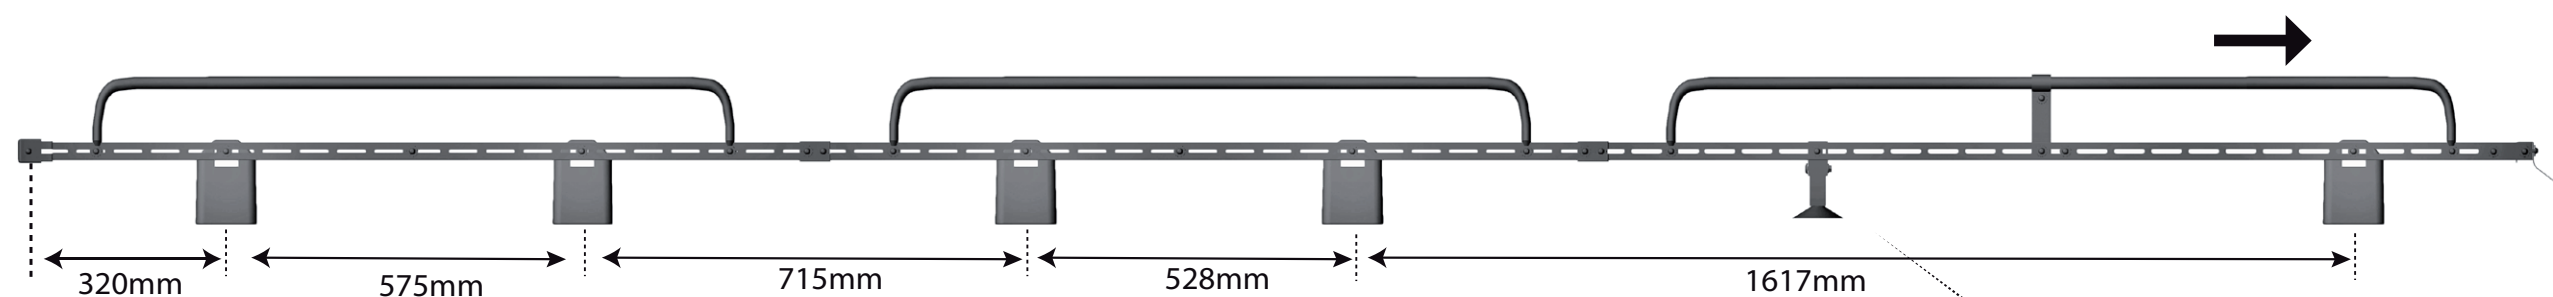
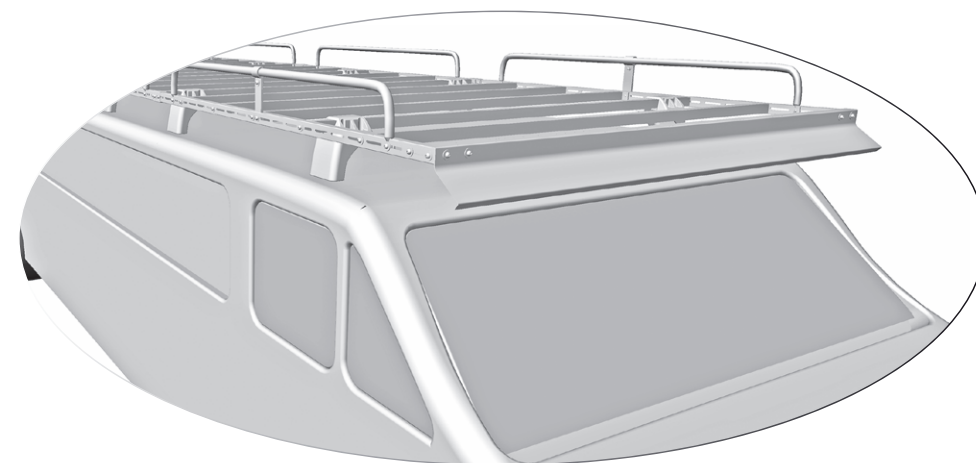






- CITROËN JUMPER II / III L4 / H3 (06->)
- FIAT DUCATO II / III L4 / H3 (06->)
- OPEL MOVANO C L4 / H3 (21->)
- PEUGEOT BOXER II / III L4 / H3 (06->)

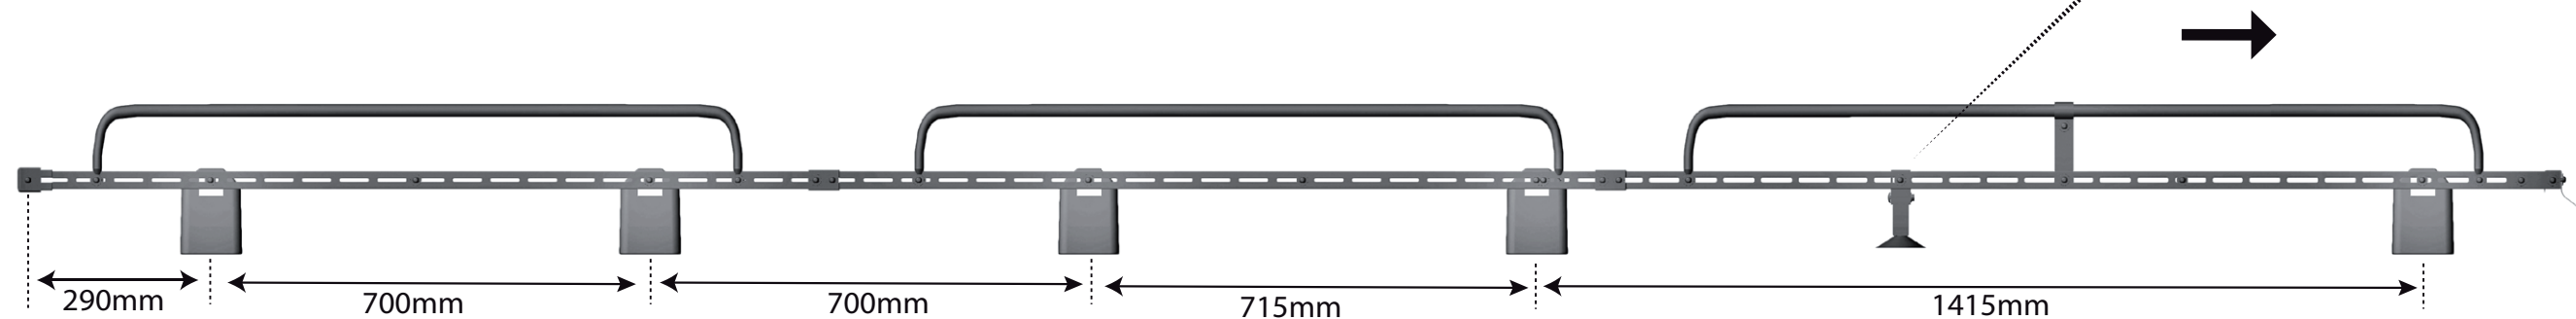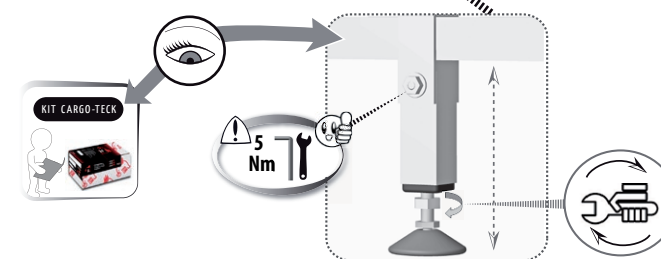




MERCEDES SPRINTER W906 L3 (06->)

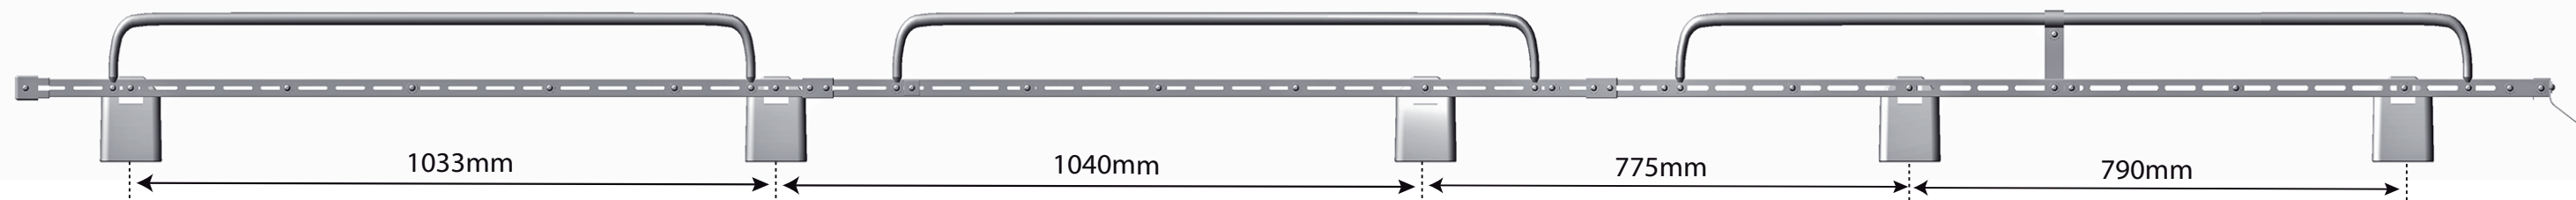
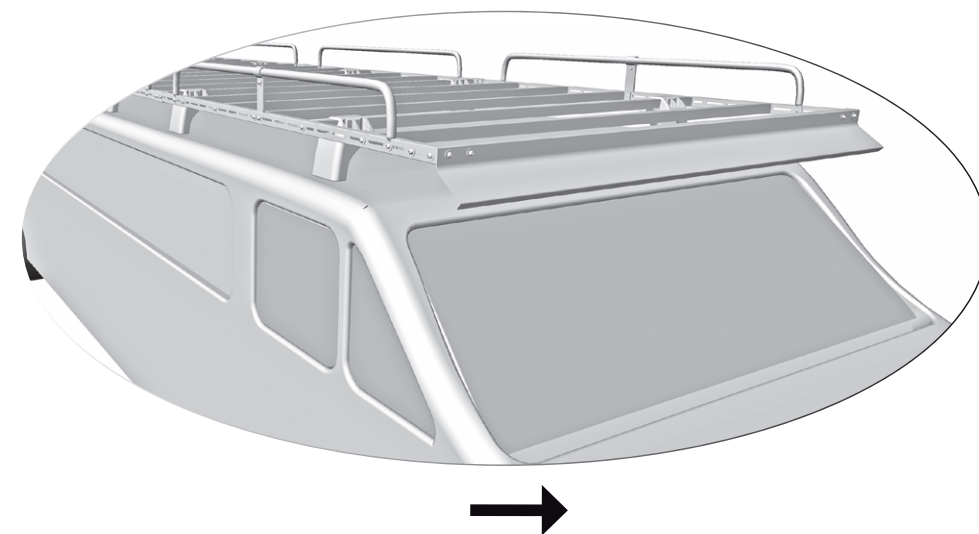


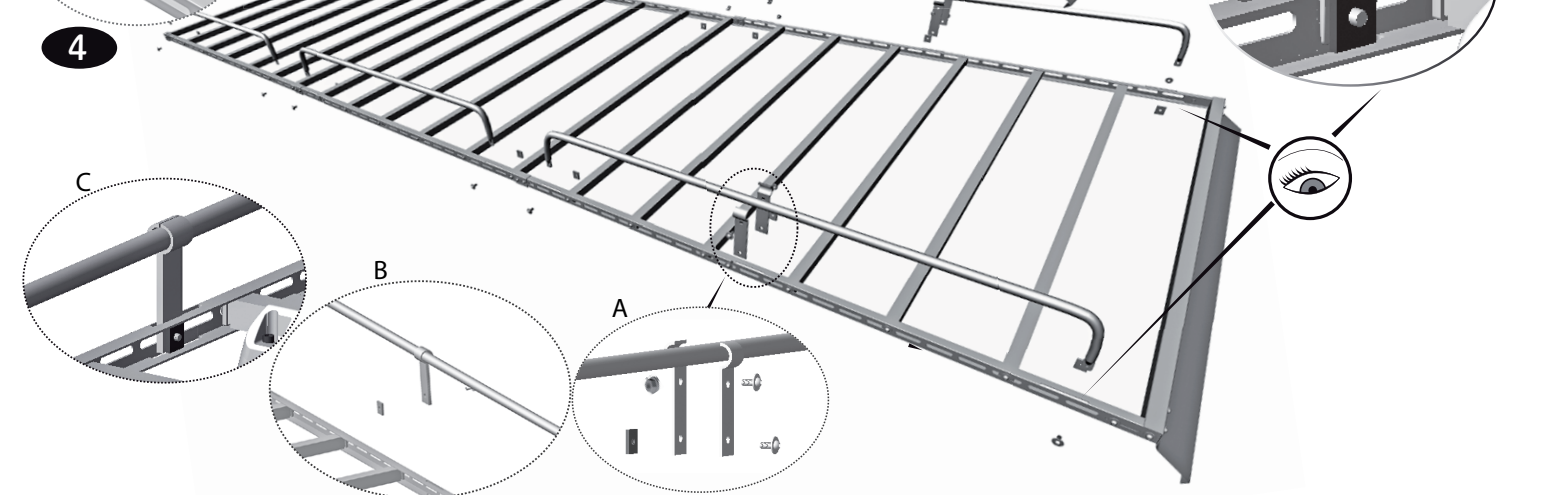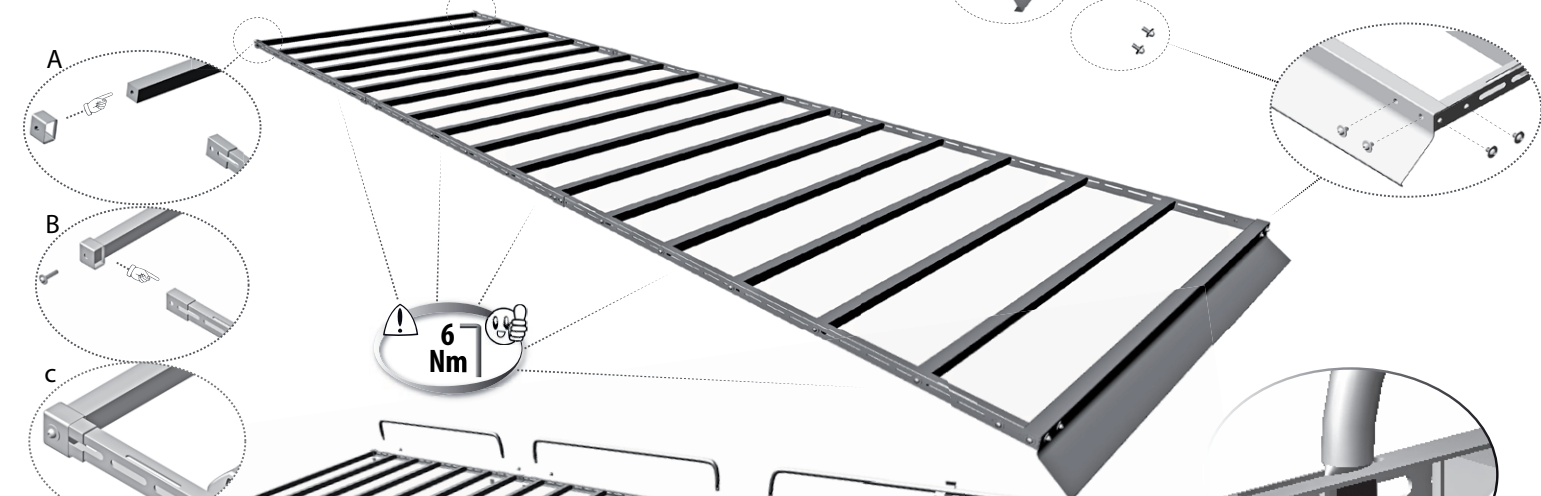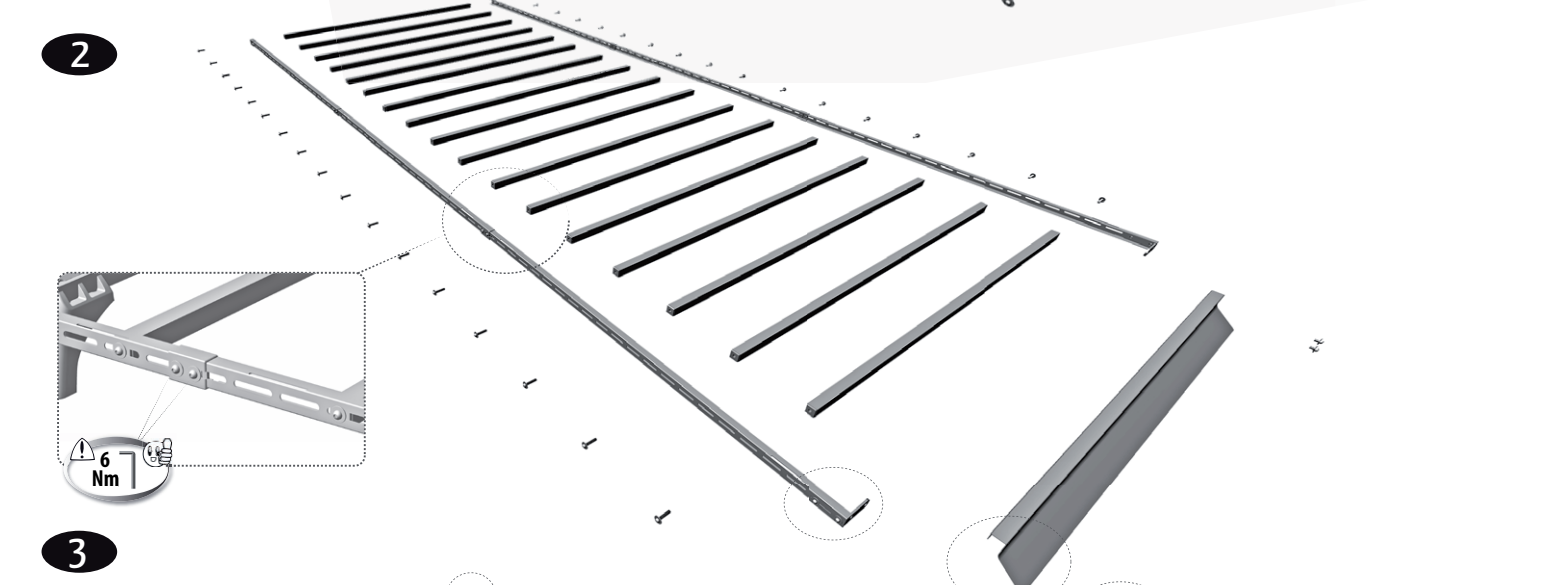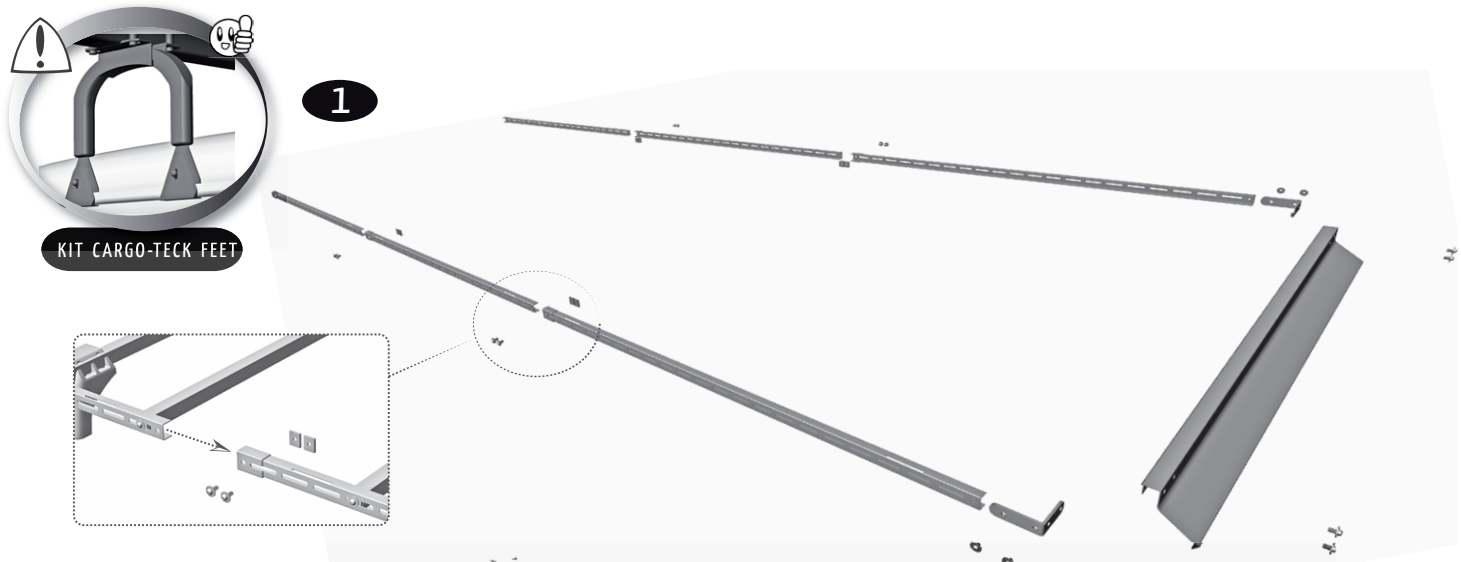

5

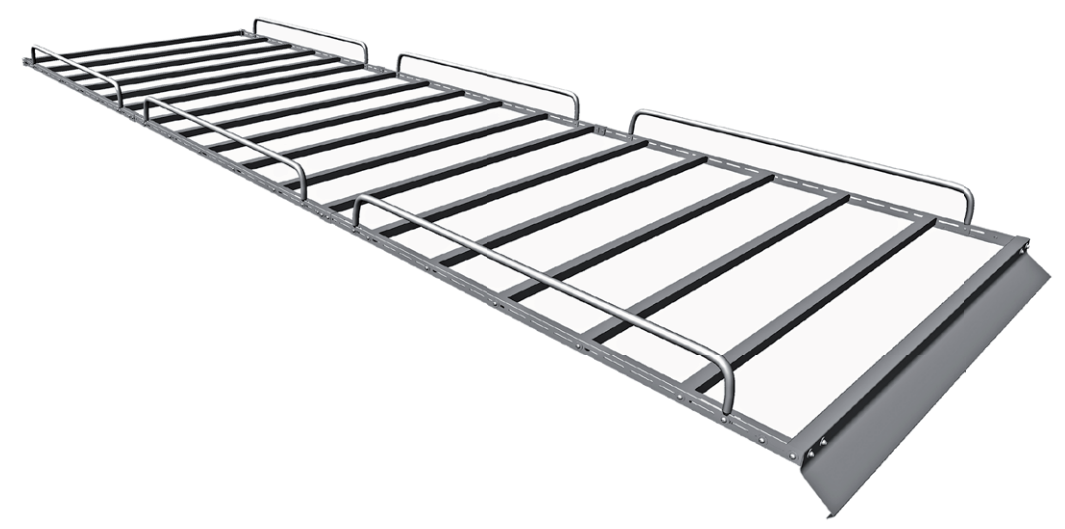





6

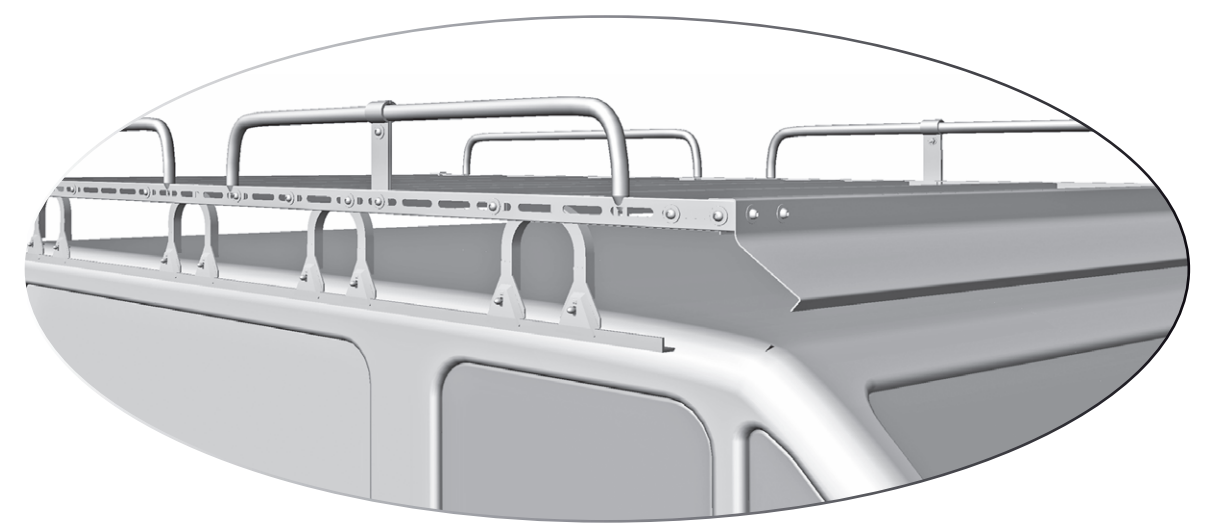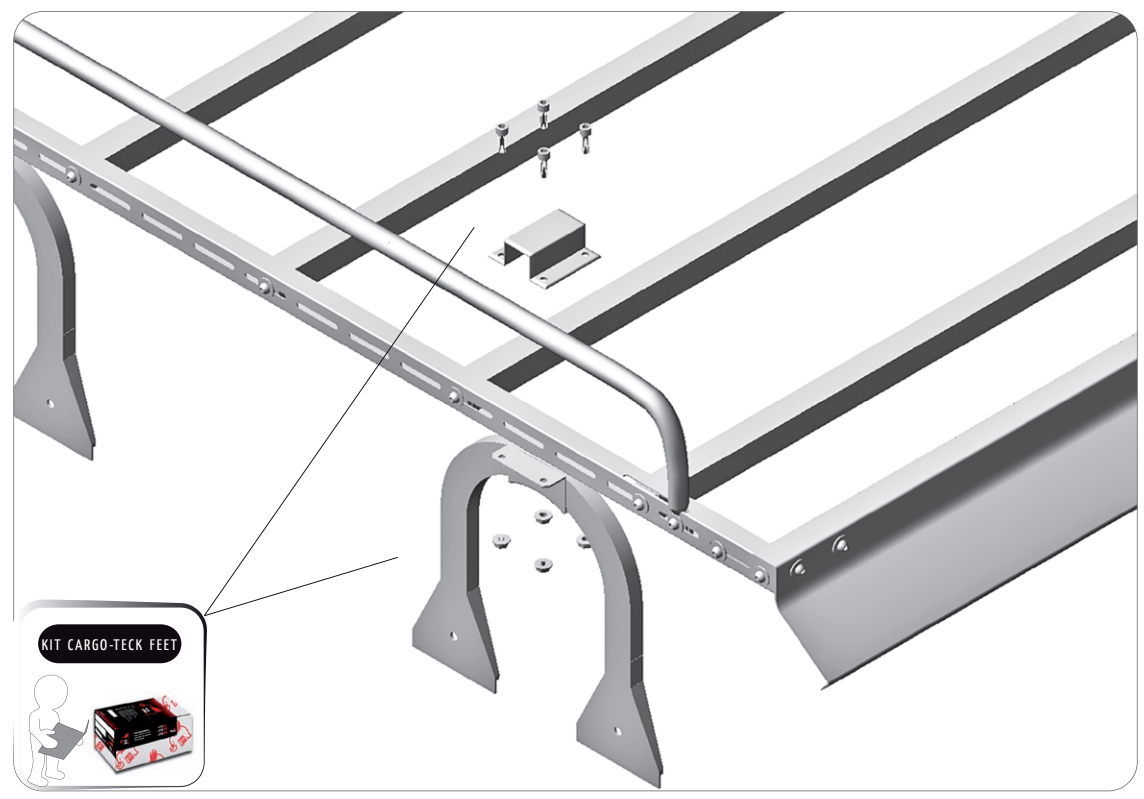





MERCEDES SPRINTER W901/909 L3 (95-06)

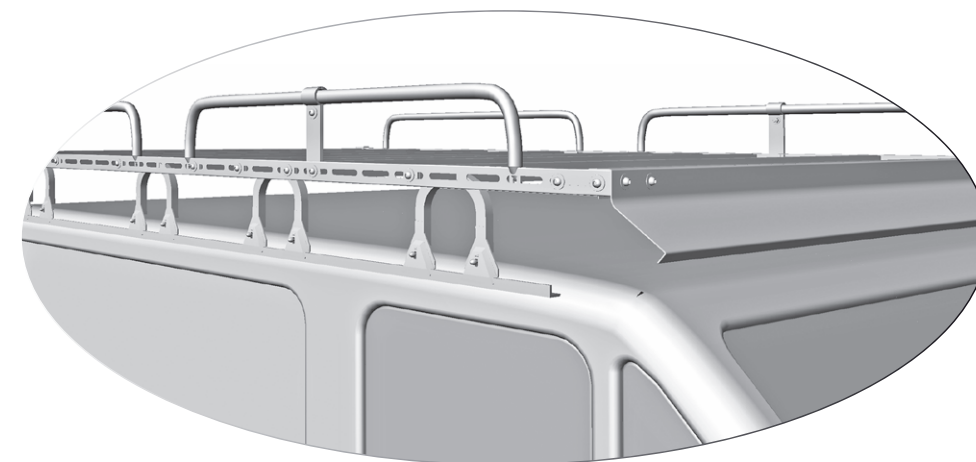

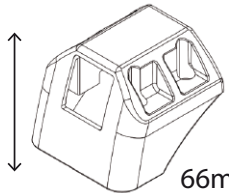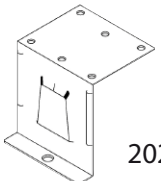
N		Q
1	 66mm	10
2	 202	10
3	 G3	10
4	 CH	10
5		1

N	BO0060	Q
8	 DIN912 M6x20	16
9	 DIN125 Ø6	16

N	BO0061	Q
8	 DIN912 M6x20	24
9	 DIN125 Ø6	24


N	BO0005 (x5)	Q
10	 DIN912 M6x20	10
11	 DIN9021 Ø6	10

E	Instrucciones de montaje	Kit de fijación
C	Instruccions de muntatge	Kit de fixació
GB	Assembly instrucctions	Fixation Kit
F	Instruction de montage	Kit fixation
D	Montageanleitung	Stützfuß-Kit
PT	Instruções de montagem	Kit fixação
I	Istruzioni di montaggio	Kit di fissaggio
PL	Instrukcja montażu	Element mocujący
CZ	Montážní návod	Fixační kit
HU	Szerelési Utasítás	Rögzítő készlet
RO	Instrucțiuni de montaj	Kit de fixare
HR	Detaljne upute	Kit za montažu
TU	Öncelikle montaj	Montaj kiti

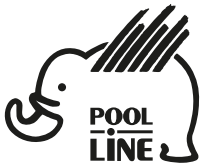





POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042



121001

Rv: 08/2025

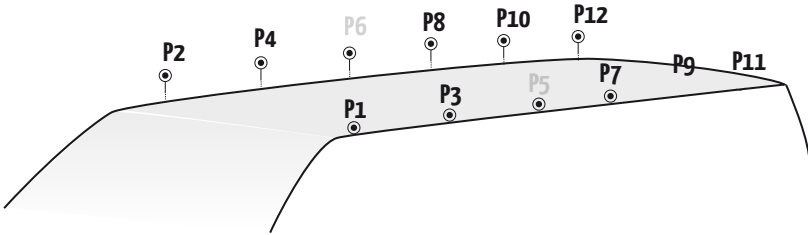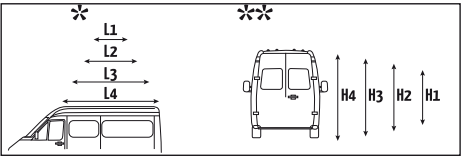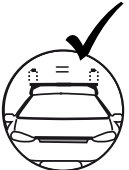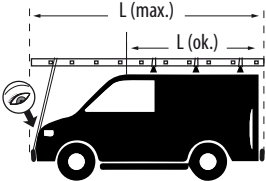

	L *	H **			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
Mercedes																
Sprinter II W906	L2	H1	06-	B00005	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH	202+CH	202+CH	202+CH	202+CH
Sprinter II W906	L2	H2	06-	B00005	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH	202+CH	202+CH	202+CH	202+CH
Sprinter II W906	L2	H3	06-	B00005	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH	202+CH	202+CH	202+CH	202+CH
Sprinter II W906	L3	H2	06-	B00005	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH	202+CH	202+CH	202+CH	202+CH
Sprinter II W906	L3	H3	06-	B00005	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH	202+CH	202+CH	202+CH	202+CH
Volkswagen																
Crafter	L2	H1	06-	B00005	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH	202+CH	202+CH	202+CH	202+CH
Crafter	L2	H2	06-	B00005	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH	202+CH	202+CH	202+CH	202+CH
Crafter	L3	H2	06-	B00005	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH	202+CH	202+CH	202+CH	202+CH
T5	L2	H1	03 - 15	B00005	202	202	202	202			202	202	202	202	202	202
T6	L2	H1	15 -	B00005	202	202	202	202			202	202	202	202	202	202

