

- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj




POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net





200 KG.
MAX.


Nº HOMOLOGACIÓN: E9 26R-03.1042





123516

Rv: 05/2024

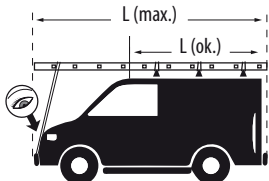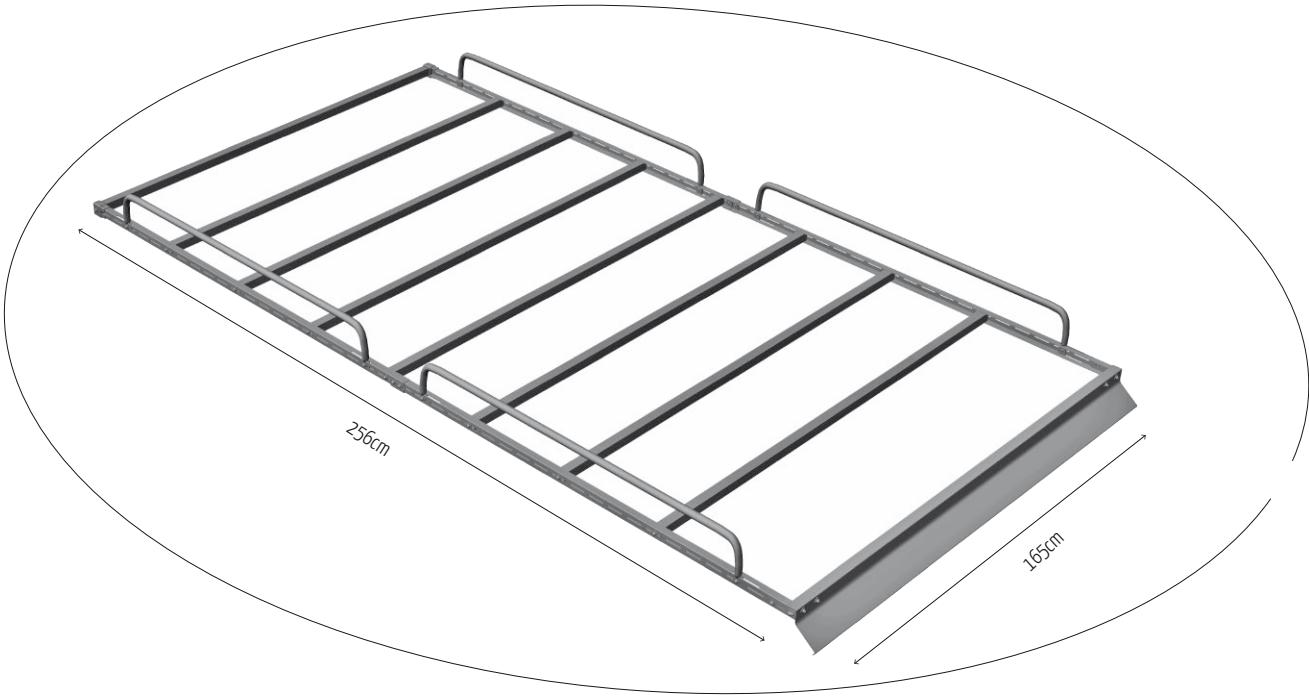


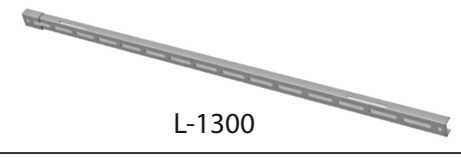
N		Q
1	 S-1650	1
2	 L-1300	4
3	 B-1022	4
4	 T-1635	8
5	 CHA-M8	16
6		2
7		2
8		8
11		1
12	 CHA-M8	12
13	 ISO 7380 M8x30	16
14	 ISO 7380 M8x16	20
15	 DIN 125 Ø 8	36

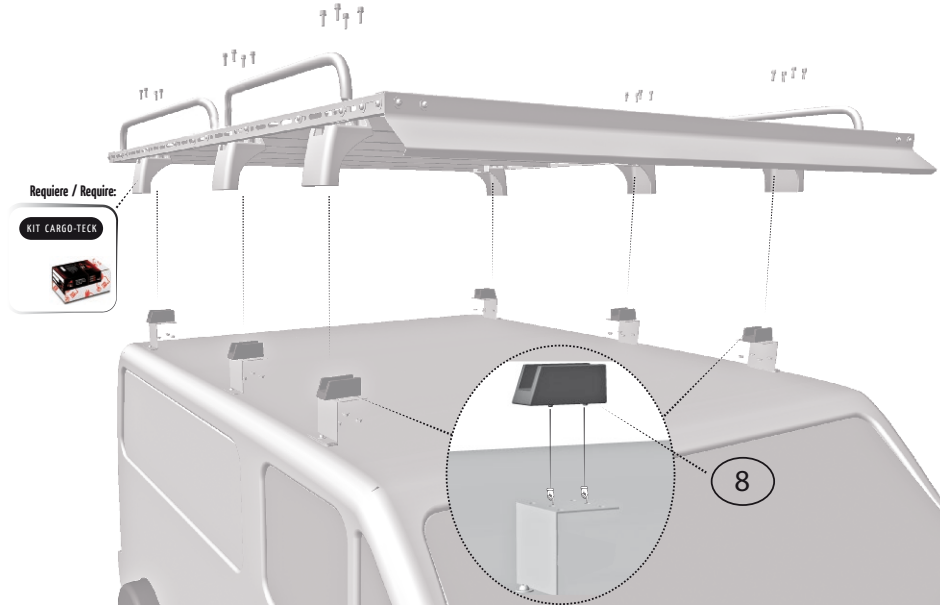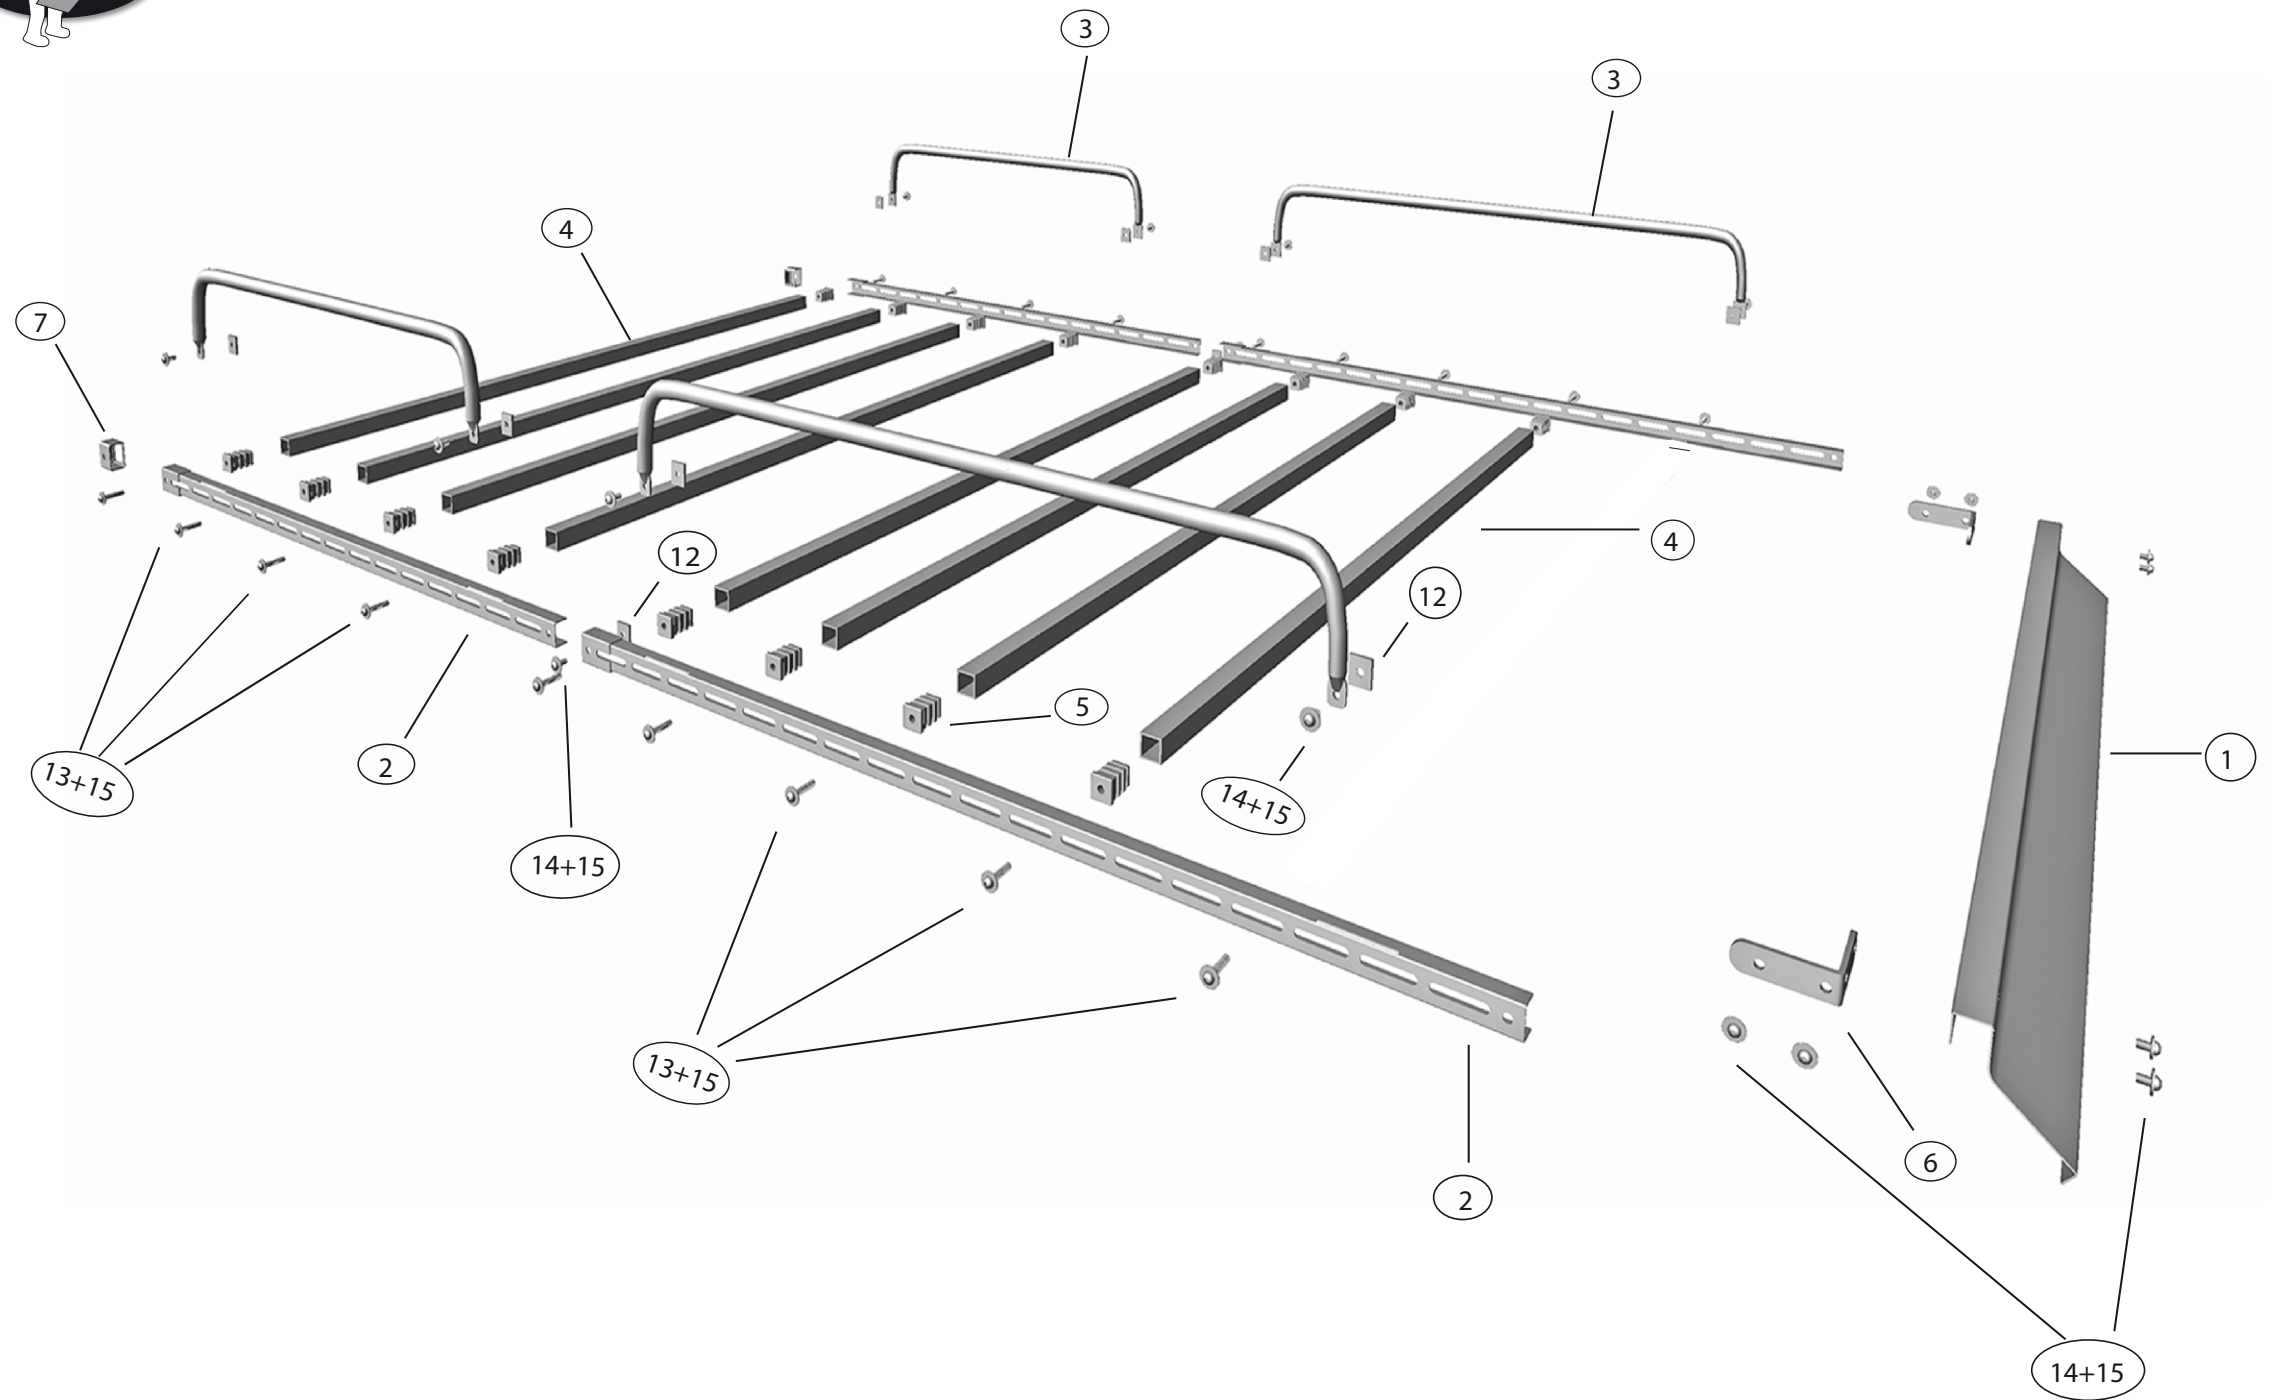




- CITROËN JUMPER I L1 (94-06)
- FIAT DUCATO II L1 (94-06)
- PEUGEOOT BOXER I (94-06)

X=250mm

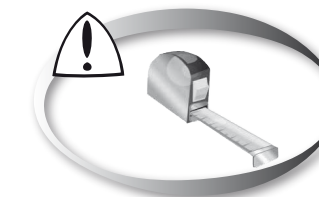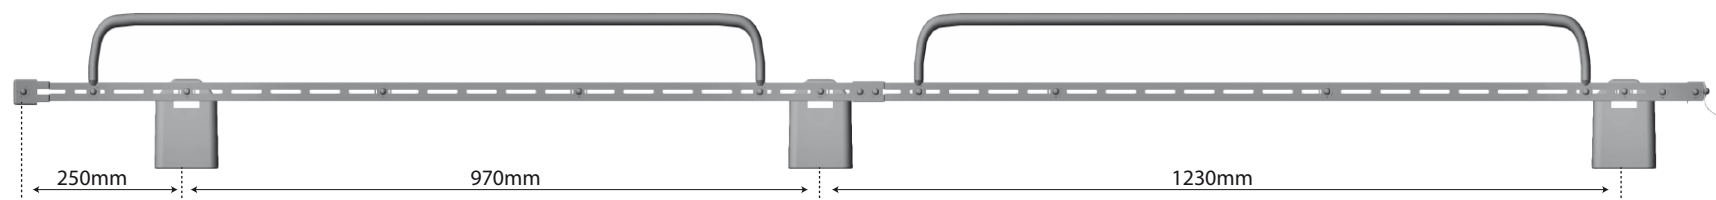

- IVECO DAILY 2000-2014 (V/C)

X=445mm

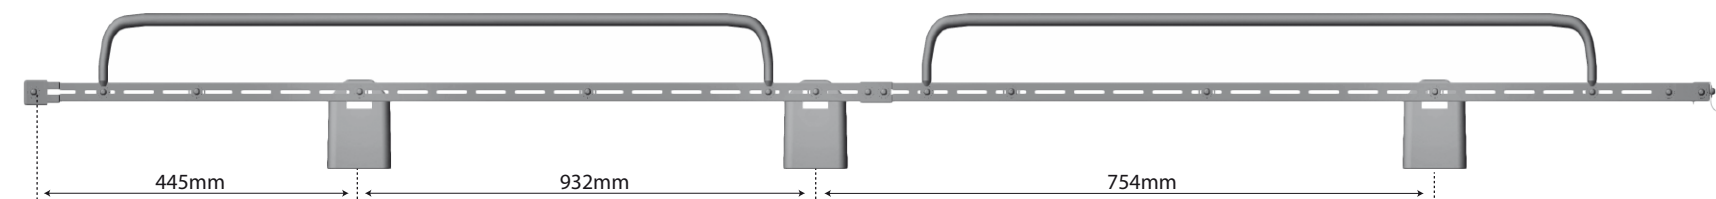


- NISSAN NV400 L1H1 10->
- OPEL MOVANO B L1H1 10->
- RENAULT MASTER III L1H1 10->

X=370mm




X=180mm

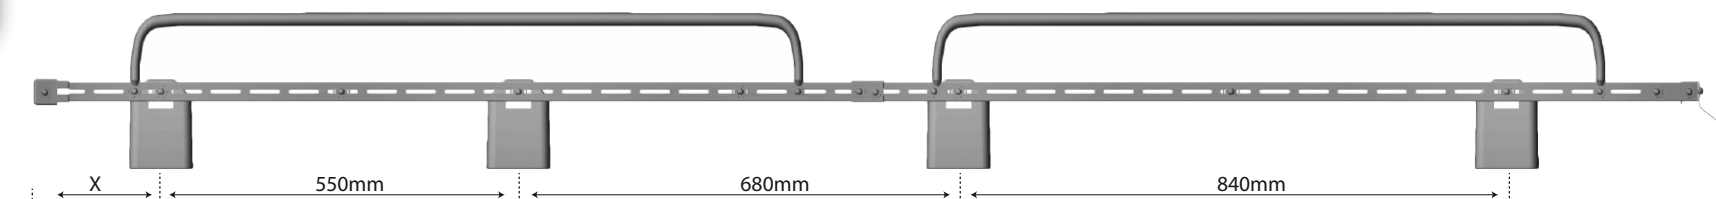

Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone


- CITROËN JUMPER II L1 (94-06)
- FIAT DUCATO III L1 (94-06)
- PEUGEOOT BOXER II (94-06)

X=250mm

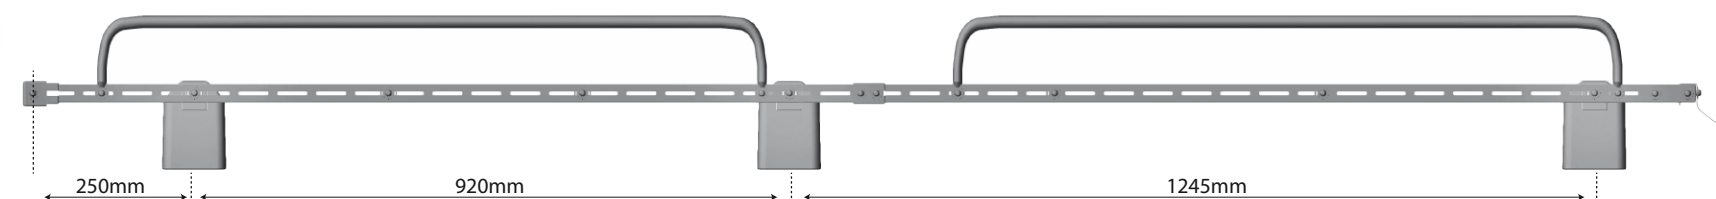


- NISSAN INTERSTAR (97-10)
- OPEL MOVANO A (97-10)
- RENAULT MASTER II (97-10)


X=500mm

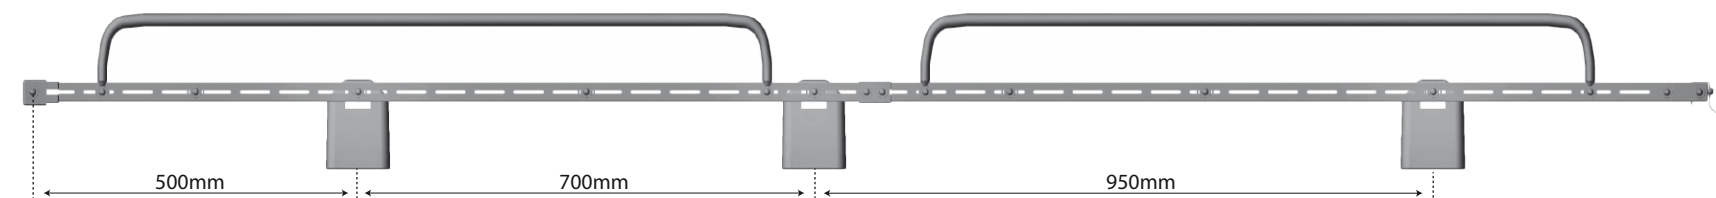


1

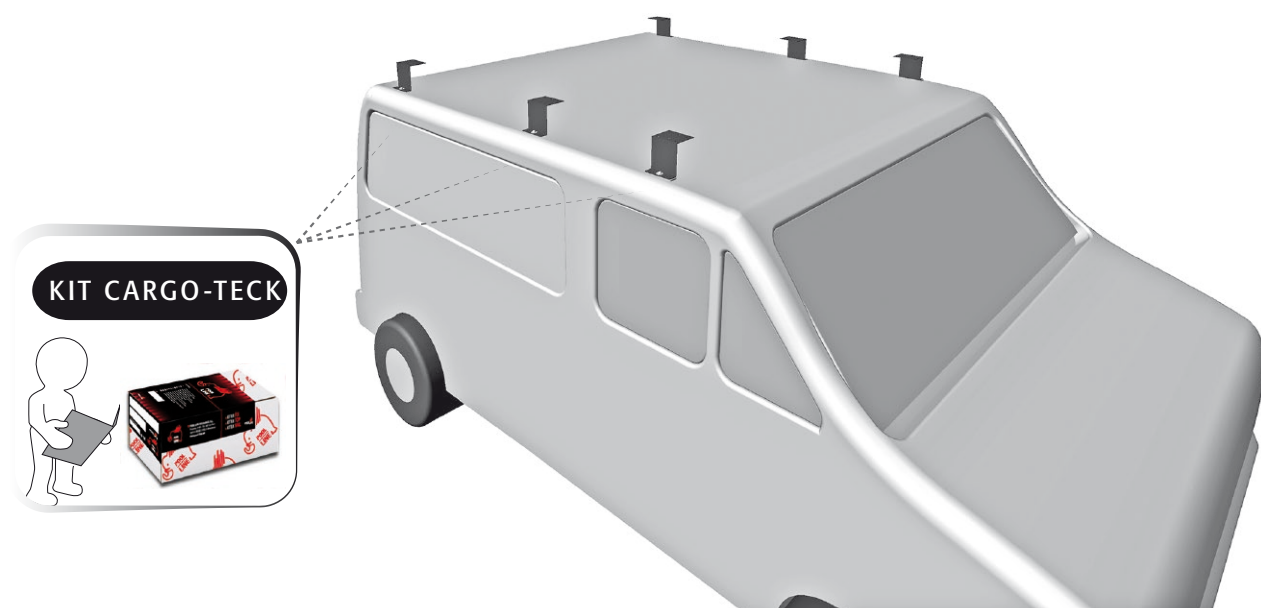


2

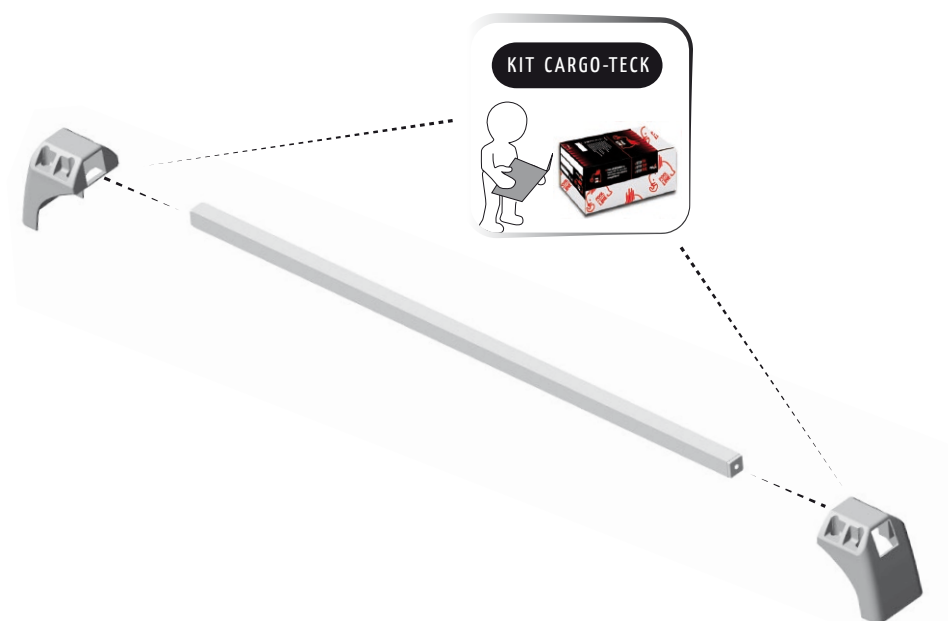


3

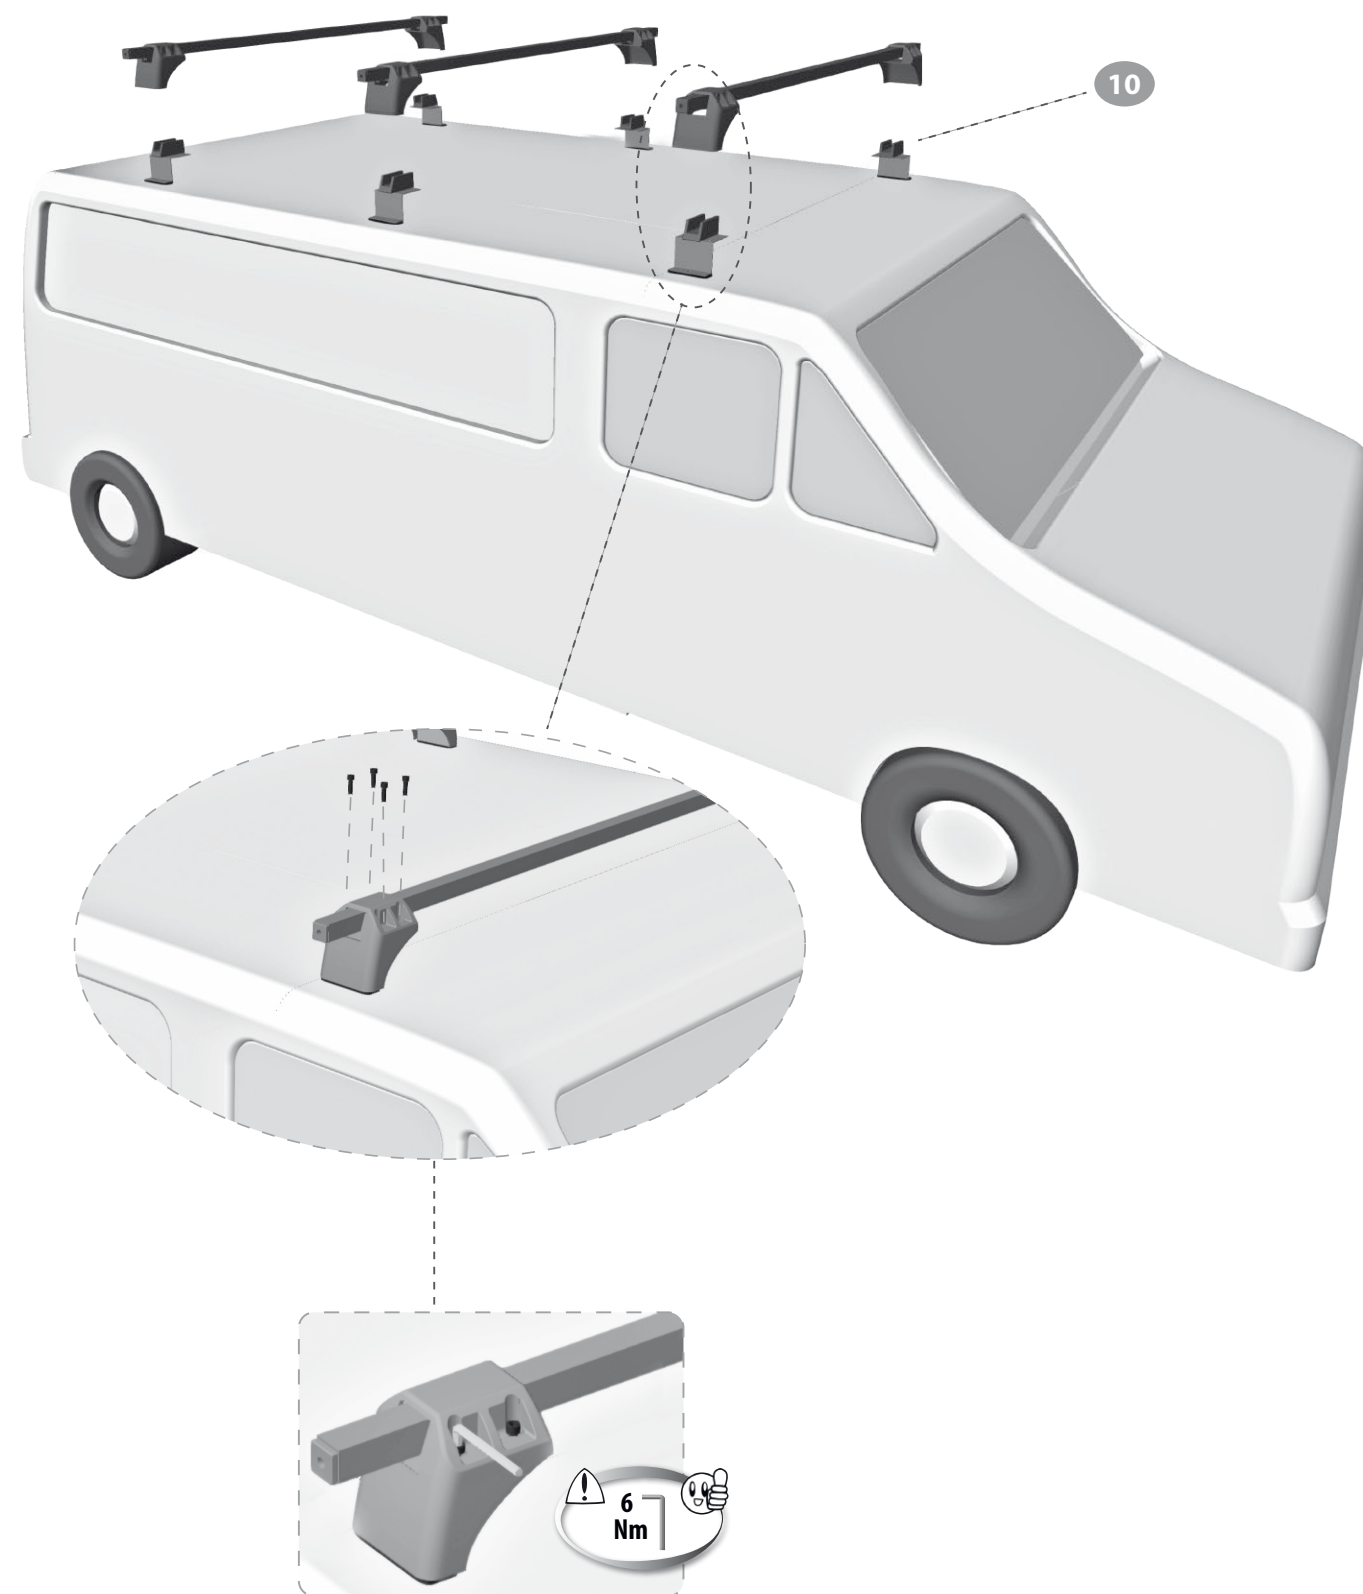


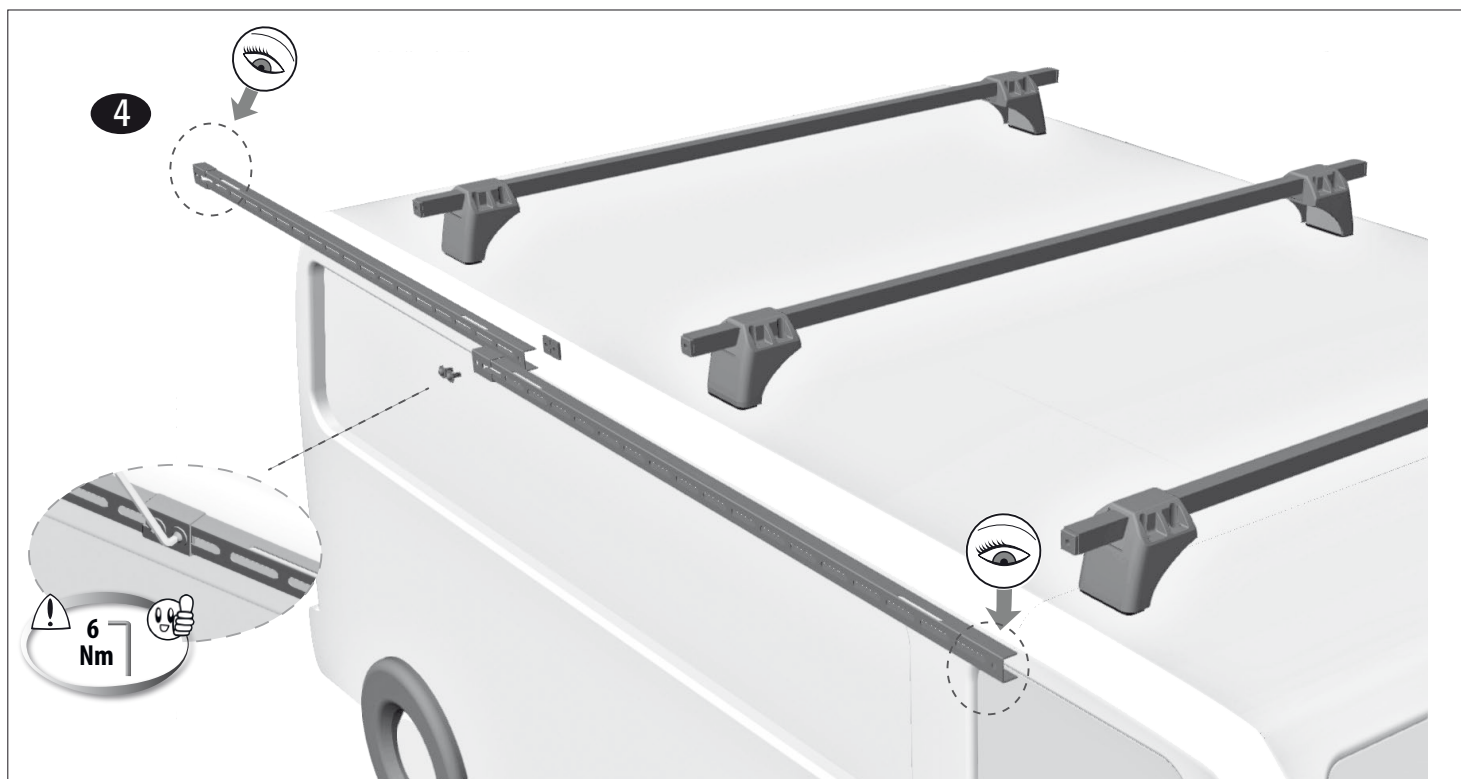


5

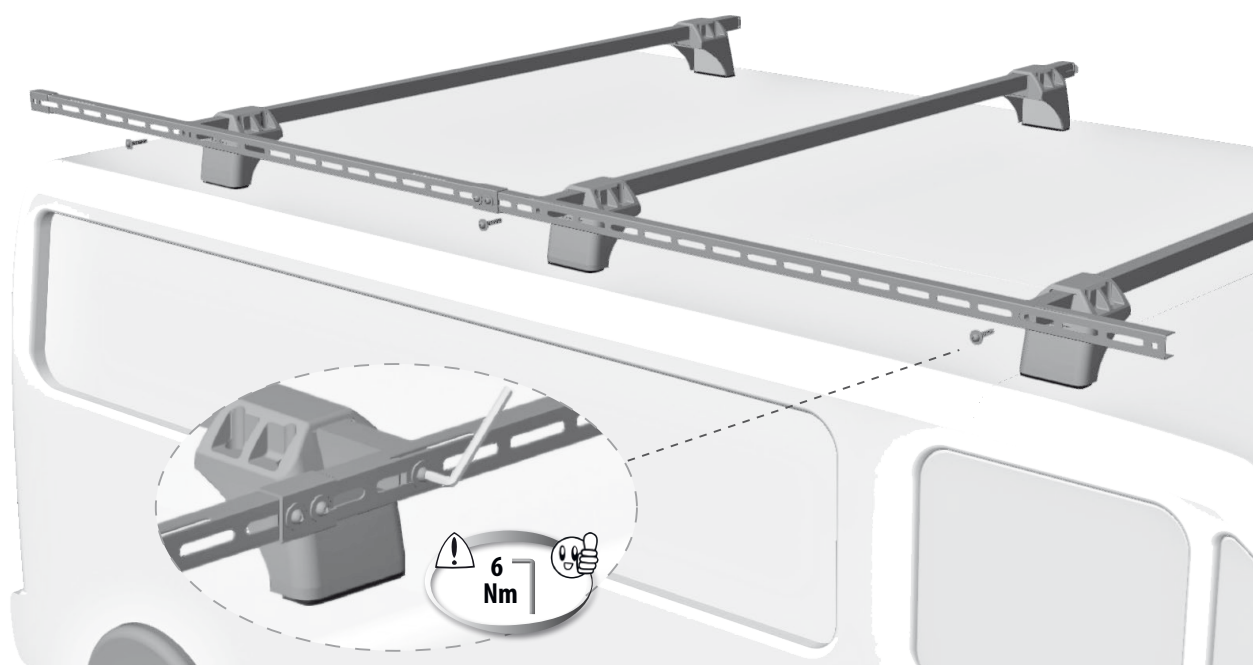


6

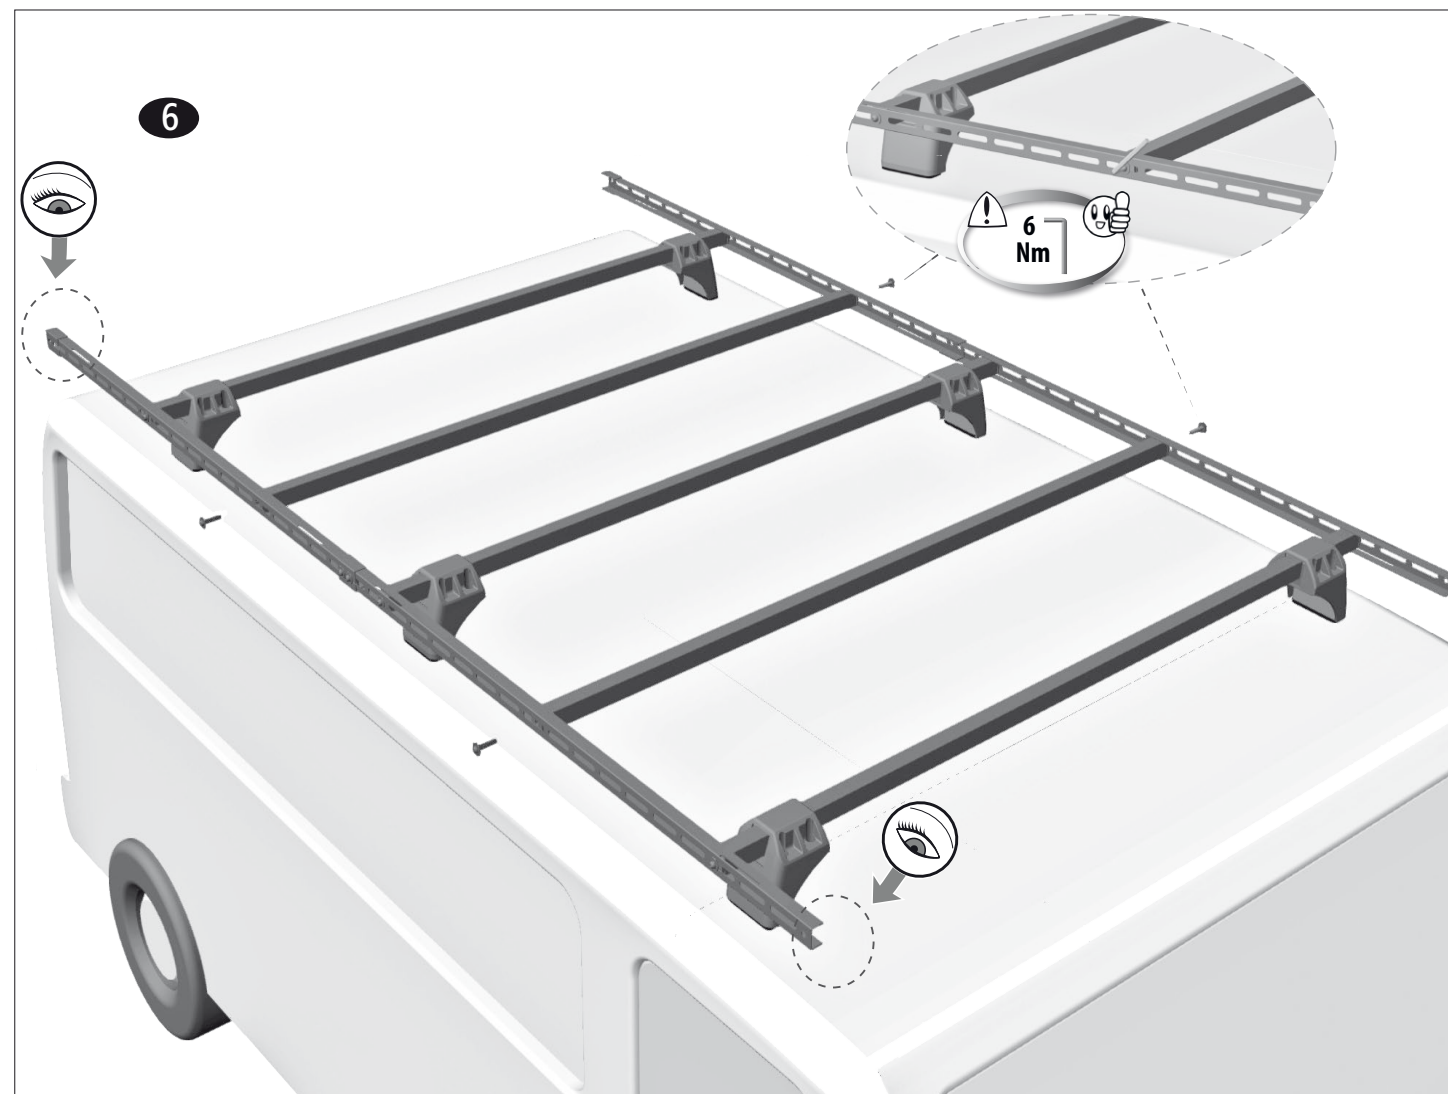



7



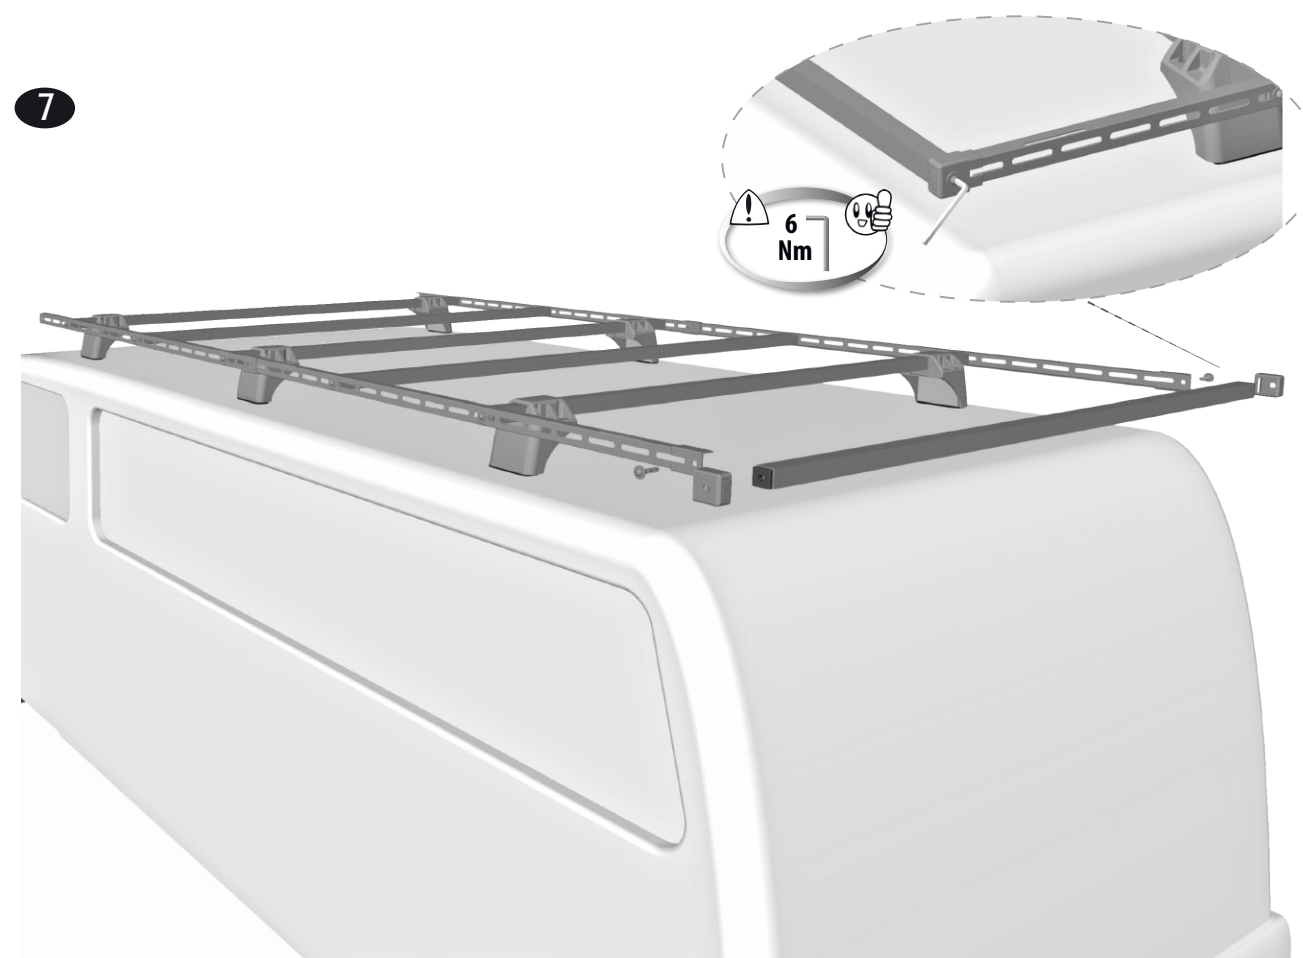





8

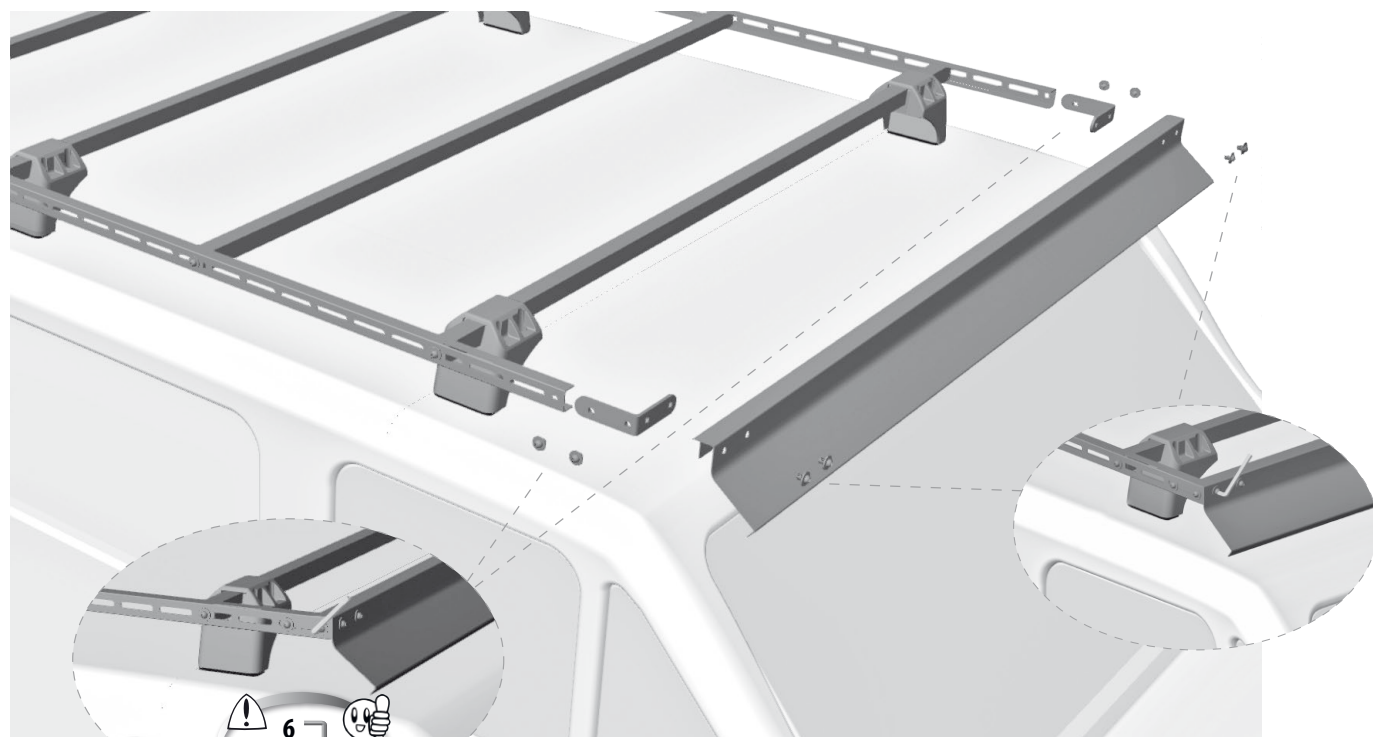


9

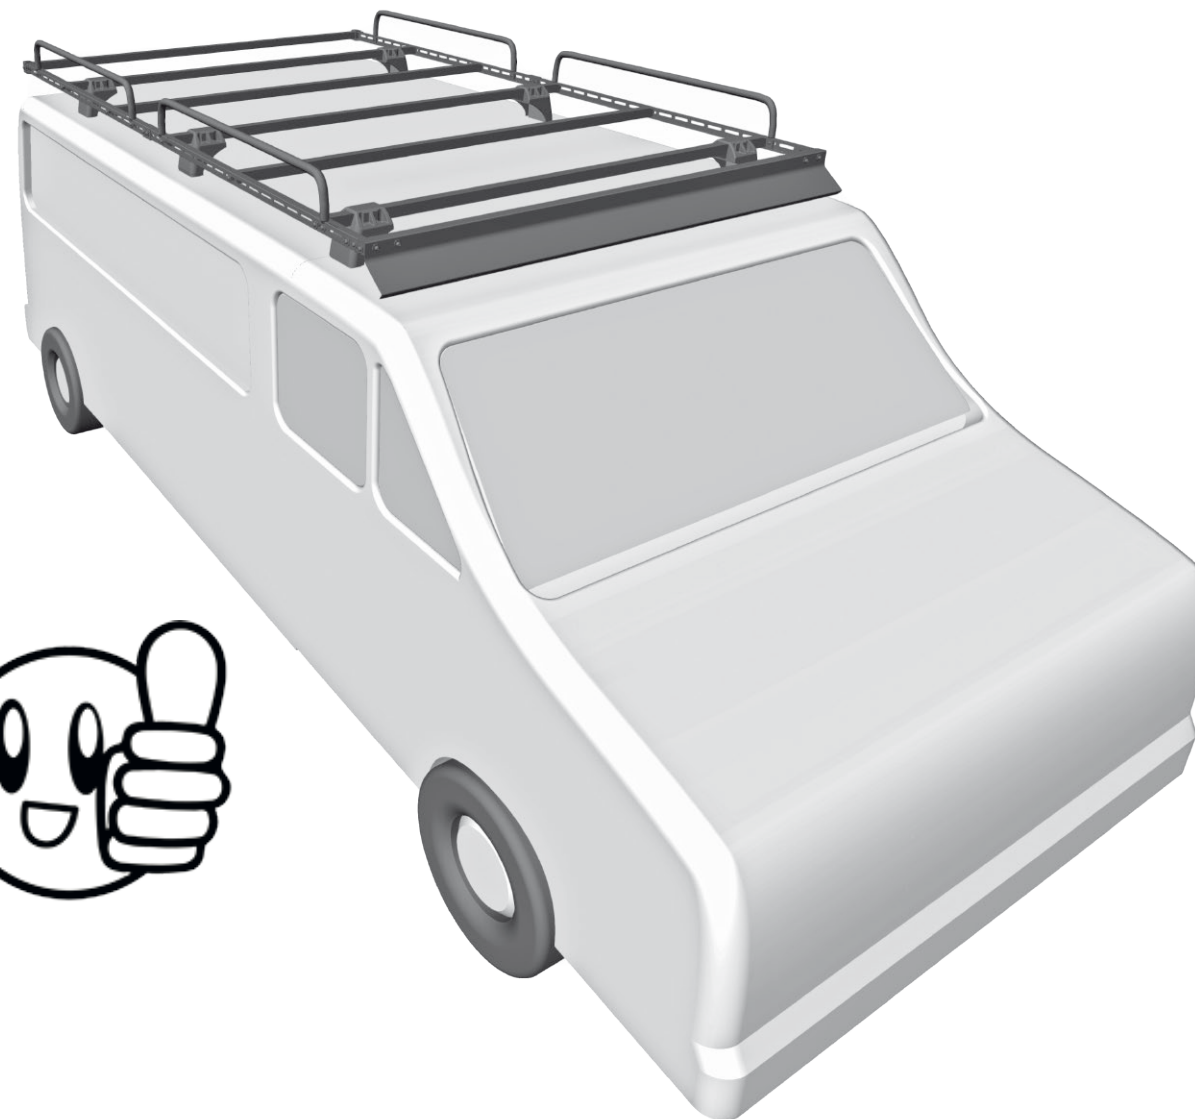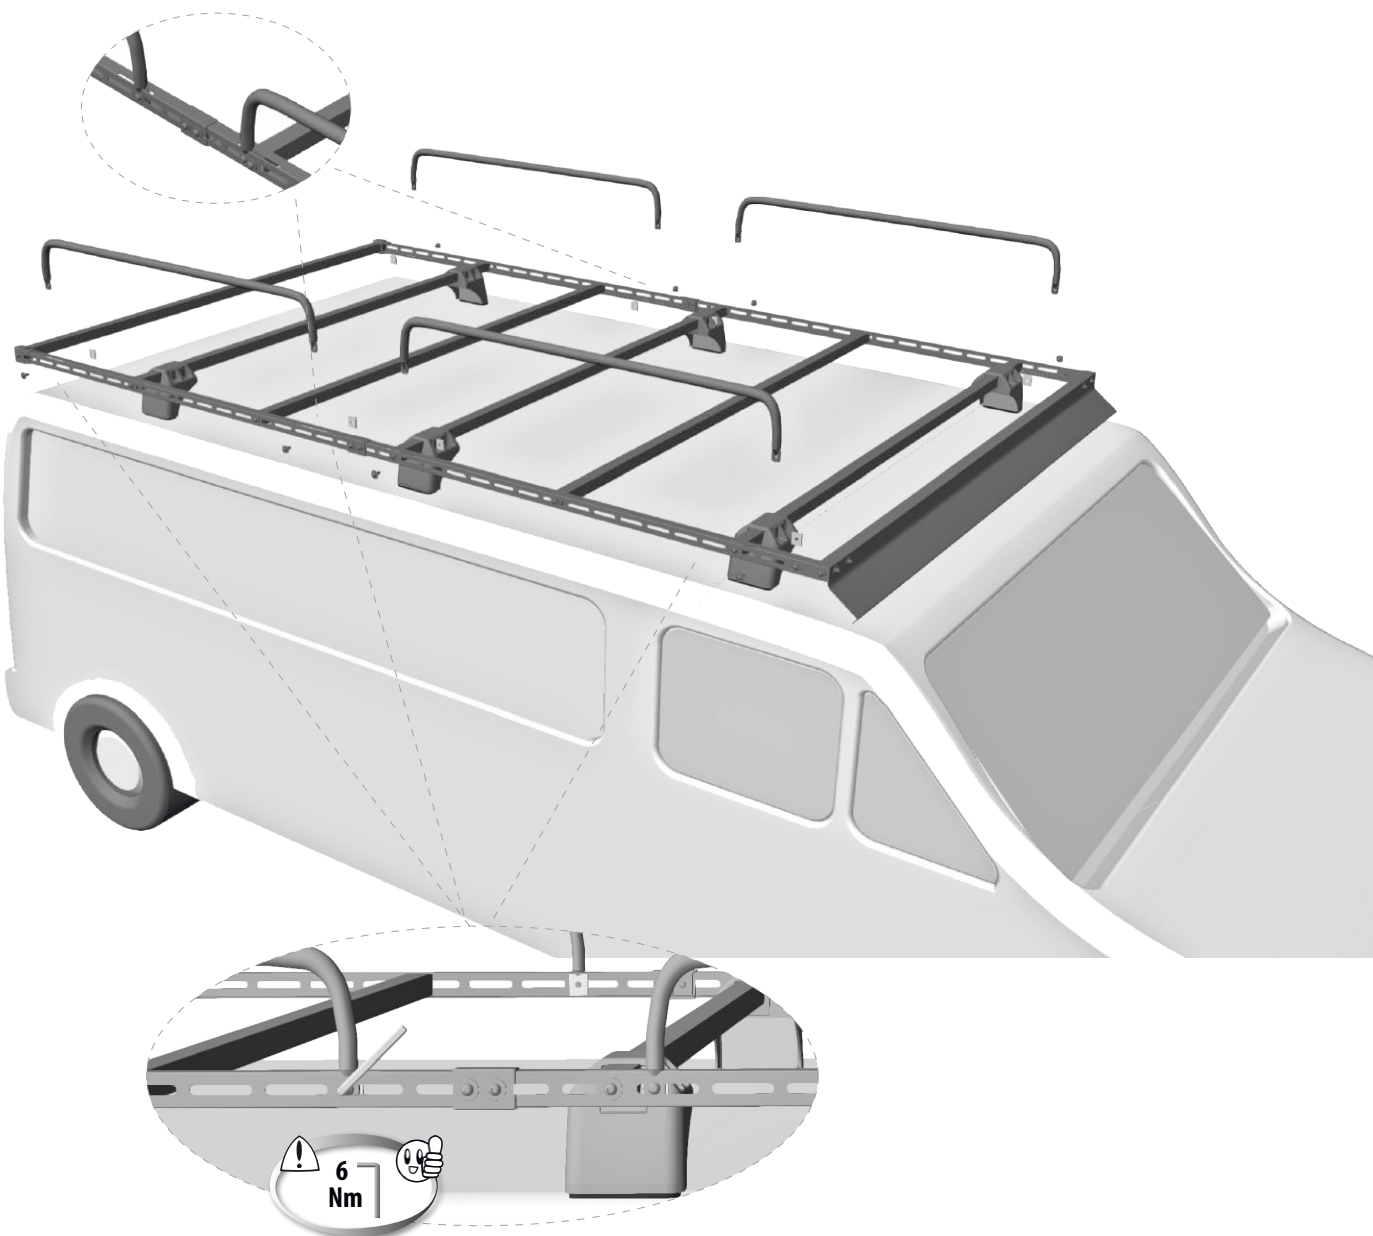

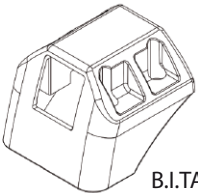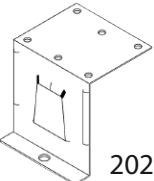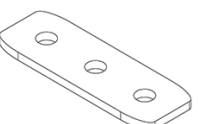N		Q
1	 B.I.TAP66	8
2	 202	8
3	 G3	8
4	 CH	8
5		1


N	BO0060 x2	Q
8	 DIN912 M6x20	32
9	 DIN125 Ø6	32
N	BO0020 x2	Q
10	 DIN9021 Ø6	8
N	BO0017 x2	Q
11	 DIN912 M6x20	8
N	BO0035 x2	Q
14	 DIN912 M6x30	8
N	BO0032 x2	Q
10	 DIN125 Ø8	8

E	Instrucciones de montaje	Kit de fijación
C	Instruccions de muntatge	Kit de fixació
GB	Assembly instrucctions	Fixation Kit
F	Instruction de montage	Kit fixation
D	Montageanleitung	Stützfuß-Kit
PT	Instruções de montagem	Kit fixação
I	Istruzioni di montaggio	Kit di fissaggio
PL	Instrukcja montażu	Element mocujący
CZ	Montážní návod	Fixační kit
HU	Szerelési Utasítás	Rögzítő készlet
RO	Instrucțiuni de montaj	Kit de fixare
HR	Detaljne upute	Kit za montažu
TU	Öncelikle montaj	Montaj kiti

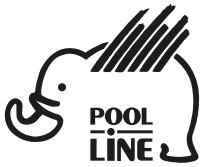




POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042

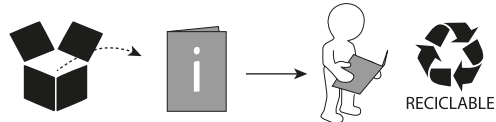

121911

Rv: 06/2024

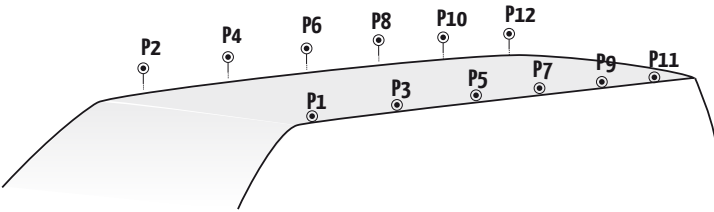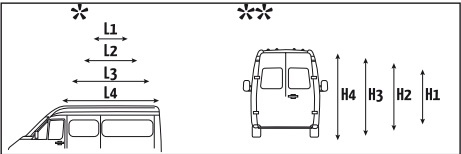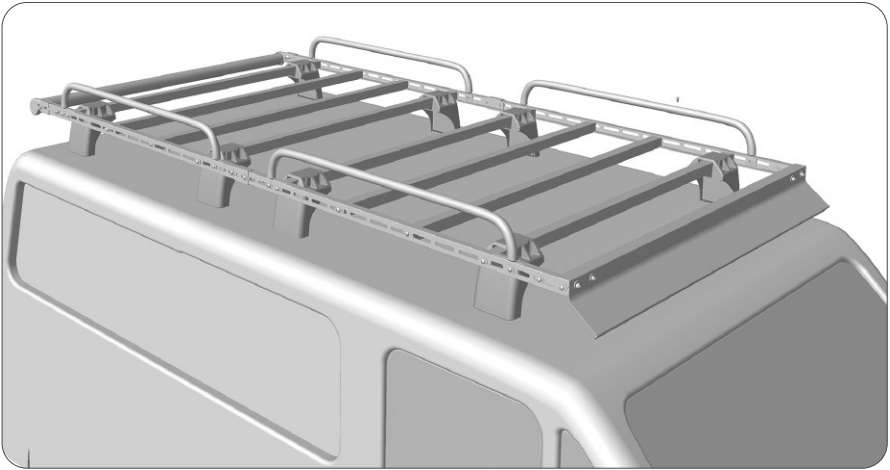

	L *	H **			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
FIAT																
Talento II	L1	H1	2016-	B00017 + B00020	202	202			202	202			202	202	202	202
Talento II	L2	H2	2016-	B00017 + B00020	202	202			202	202			202	202	202	202
FORD																
Transit VI	L3	H2	2014-	B00035 + B00032	202	202	202	202			202	202			202	202
Transit VI	L3	H3	2014-	B00035 + B00032	202	202	202	202			202	202			202	202
MERCEDES																
Sprinter II (W906/W907)	L1	H1	2006-	B00017 + B00020	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH			202+CH	202+CH
Sprinter II (W906/W907)	L1	H2	2006-	B00017 + B00020	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH			202+CH	202+CH
NISSAN																
NV300 (X82)	L1	H1	16 - 22	B00017 + B00020	202	202			202	202			202	202	202	202
NV300 (X82)	L2	H1	16 - 22	B00017 + B00020	202	202			202	202			202	202	202	202
Primastar (X82)	L1	H1	2022-	B00017 + B00020	202	202			202	202			202	202	202	202
Primastar (X82)	L2	H1	2022-	B00017 + B00020	202	202			202	202			202	202	202	202
OPEL																
Vivaro B	L1	H1	14- 19	B00017 + B00020	202	202			202	202			202	202	202	202
Vivaro B	L2	H1	14- 19	B00017 + B00020	202	202			202	202			202	202	202	202
RENAULT																
Trafic III	L1	H1	2014-	B00017 + B00020	202	202			202	202			202	202	202	202
Trafic III	L2	H1	2014-	B00017 + B00020	202	202			202	202			202	202	202	202
VOLKSWAGEN																
Crafter	L1	H1	06 - 17	B00017 + B00020	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH			202+CH	202+CH
Crafter	L1	H2	06 - 17	B00017 + B00020	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH			202+CH	202+CH
T5 (con rail opcional)	L1	H1	03 - 15	B00017 + B00020	202+CH	202+CH	202+CH	202+CH			202+CH	202+CH			202+CH	202+CH
T5	L1	H1	03 - 15	B00017 + B00020	202	202	202	202	202	202	202	202	202	202	202	202
T6 (con rail opcional)	L1	H1	2015-	B00017 + B00020	202+CH	202+CH	202+CH	202+CH	202+CH	202+CH	202+CH	202+CH	202+CH	202+CH	202+CH	202+CH
T6	L1	H1	2015-	B00017 + B00020	202	202	202	202	202	202	202	202	202	202	202	202

