



- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net



200  KG.
MAX.



Nº HOMOLOGACIÓN:  26R-03.1042




RECICLABLE

123814

Rv: 05/2024

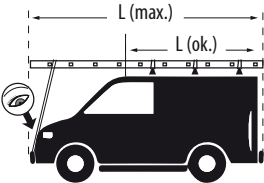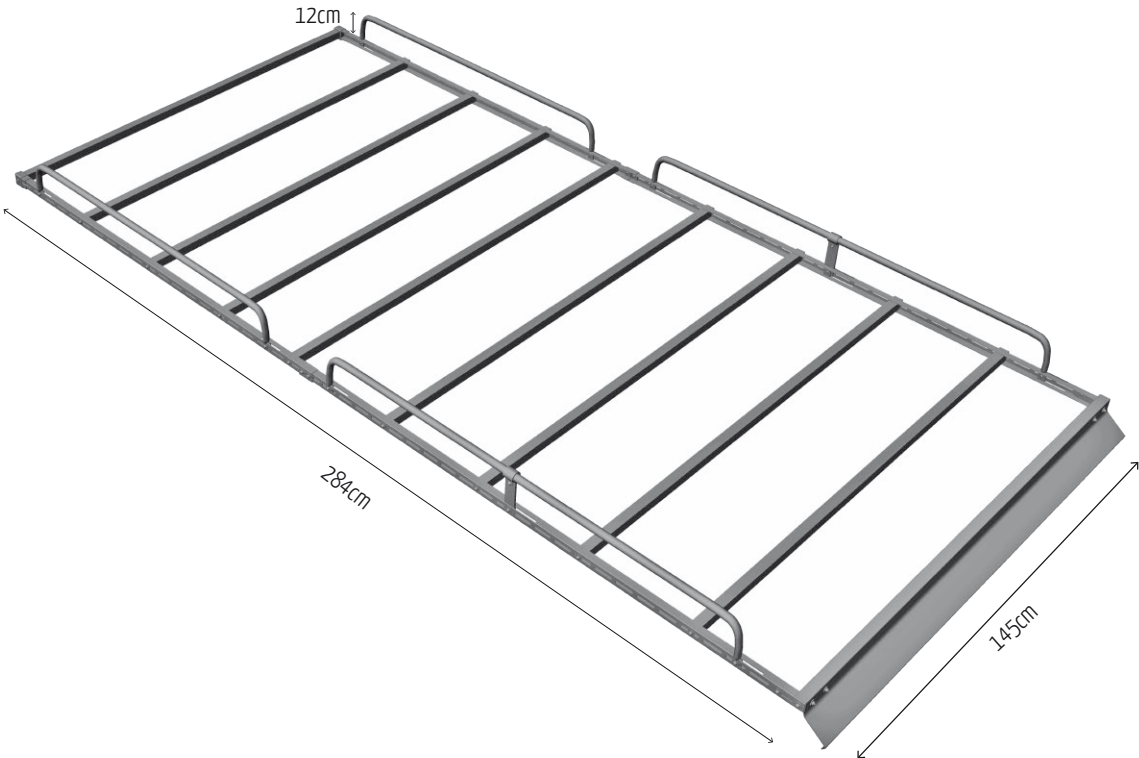


N		Q
1	 S-1450	1
2	 L-1540	2
3	 L-1300	2
4	 T-1435	9
5	 B-1262	2
6	 B-1022	2
7	 CHA-M8	18
8	 L-Bracket	2
9	 U-Bracket	2
10	 L-Bracket	8
12	 L-Bracket	1
13	 CHA-M8	14
14	 ISO 7380 M8x30	18
15	 ISO 7380 M8x16	22
16	 DIN 125 Ø 8	38
17	 L-Bracket	4
19	 DIN 603 M6x12	2
20	 DIN 6923 M6	2

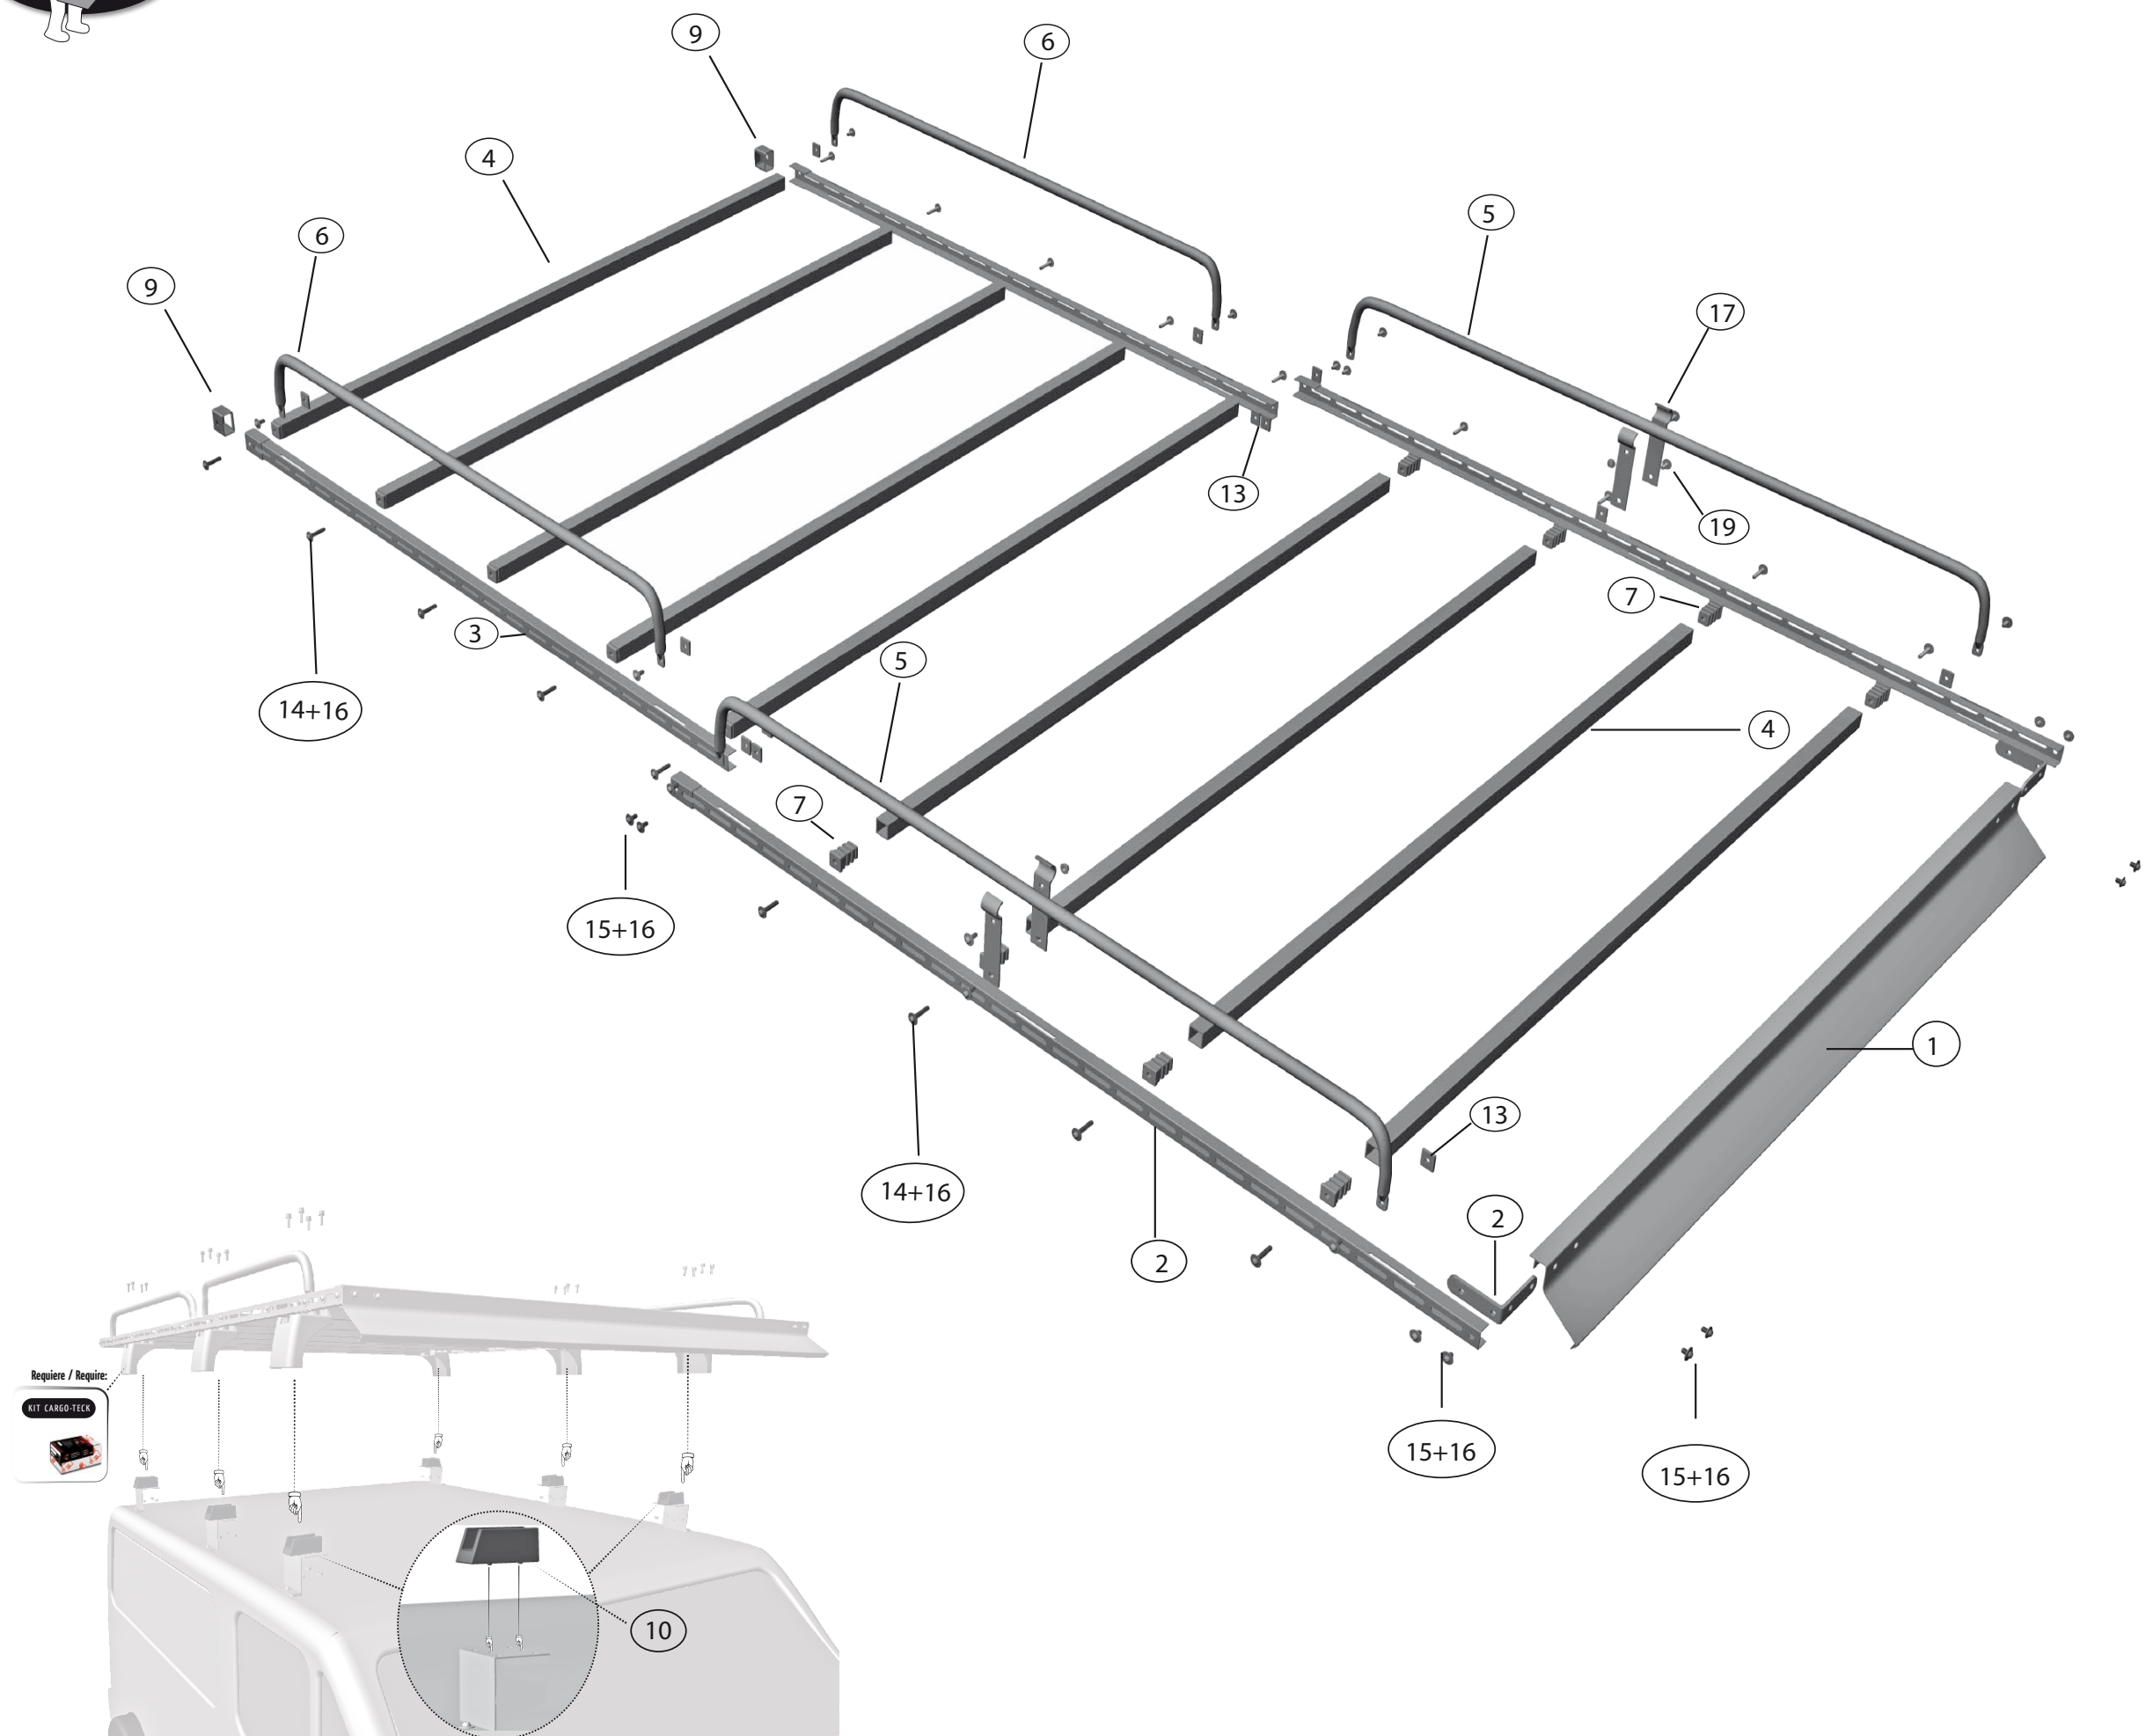




• FORD CUSTOM L1H1 (2013->)

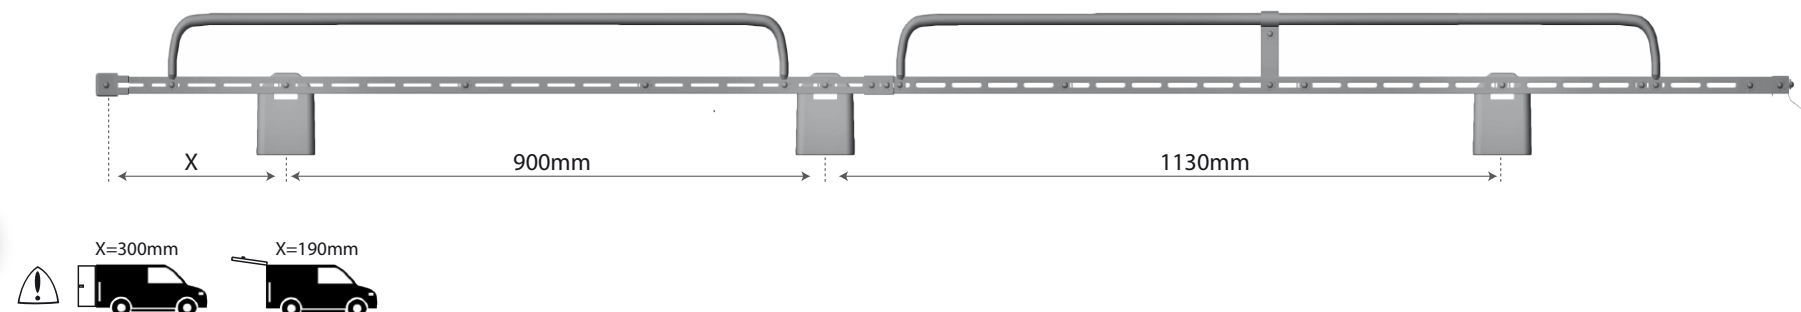

• IVECO DAILY L2H2 (2000-2014)




• CITROËN JUMPY III L3 (XL) 2016 ->
• FIAT SCUDO L3 (XL) 2022->
• OPEL VIVARO C L3 (XL) 2019->
• PEUGEOT EXPERT III L3 (XL) 2016 ->
• TOYOTA PROACE II (XL) 2016 ->

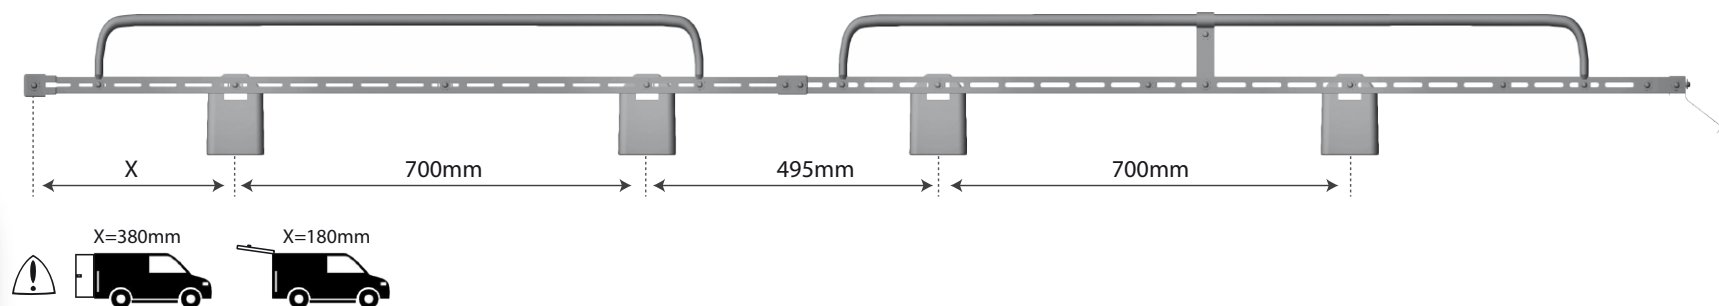


Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone




• MERCEDES VITO W639 L1H1 (2003-2014)
• MERCEDES VITO W447 L1H1 (2014->)

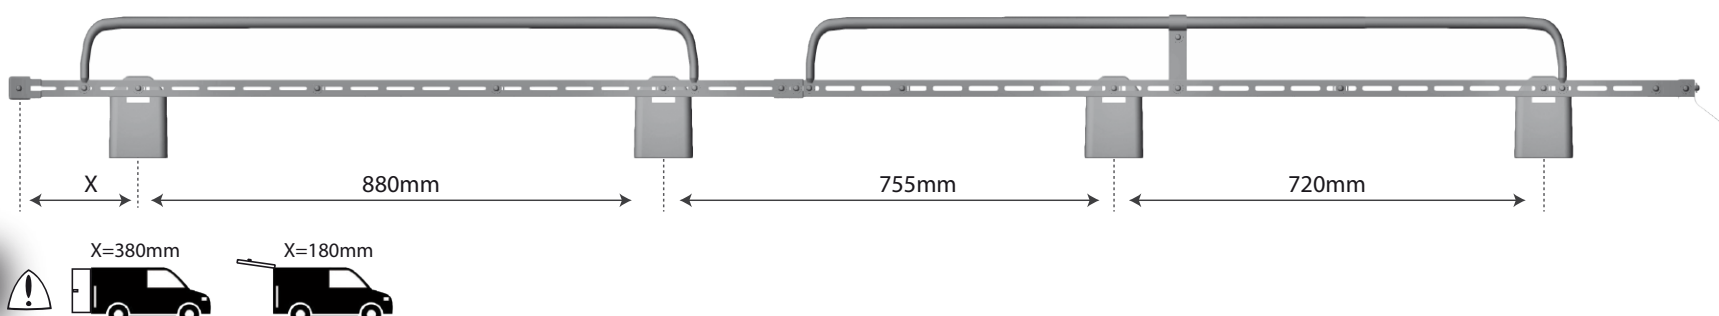


• VOLKSWAGEN T5 L1H1 (2003 - 2014)
• VOLKSWAGEN T6 L1H1 (2015->)

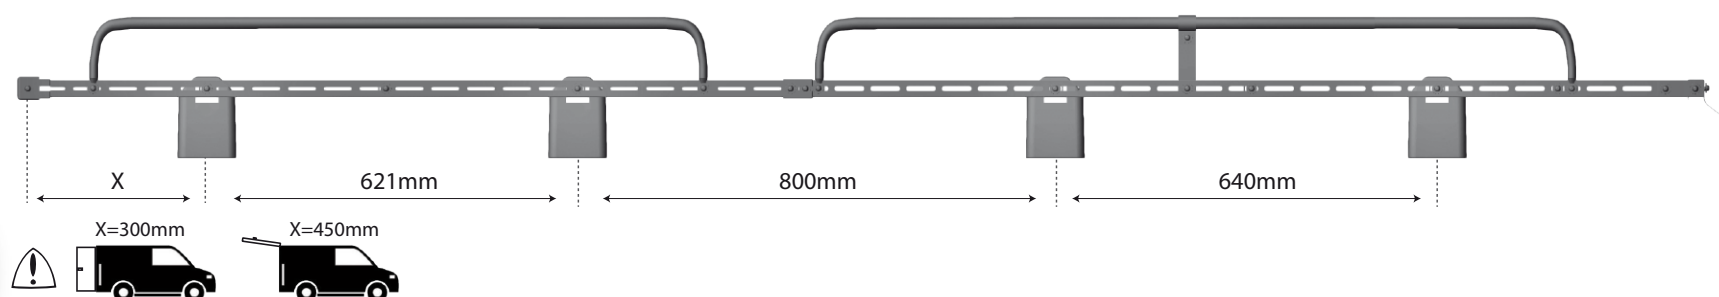


1




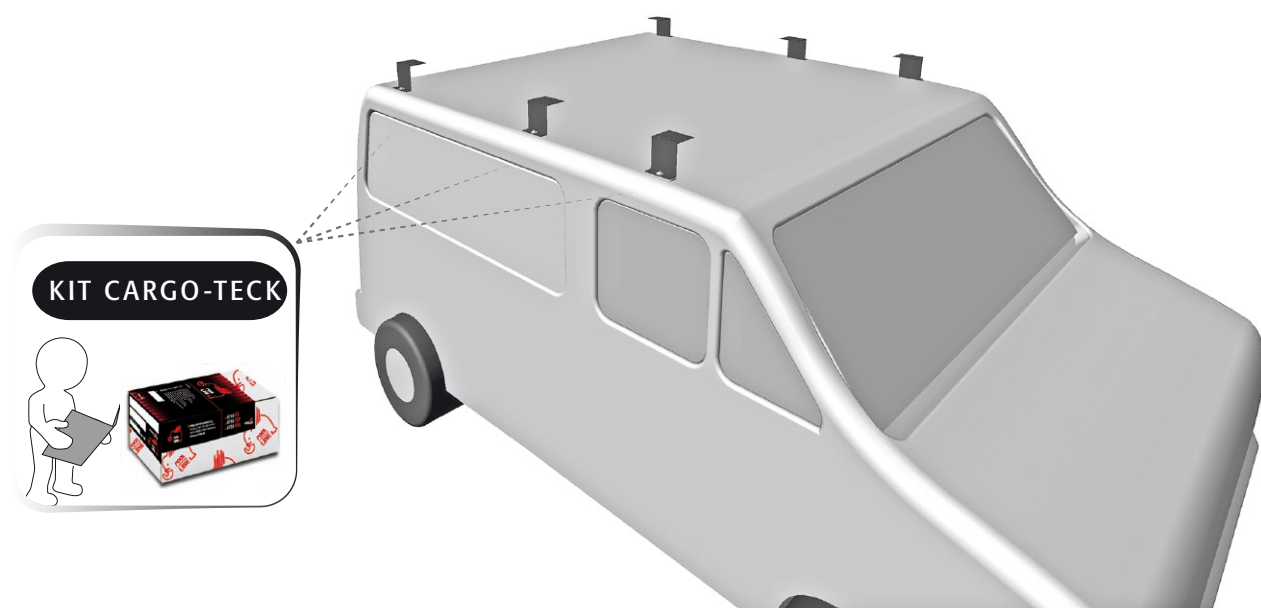


2

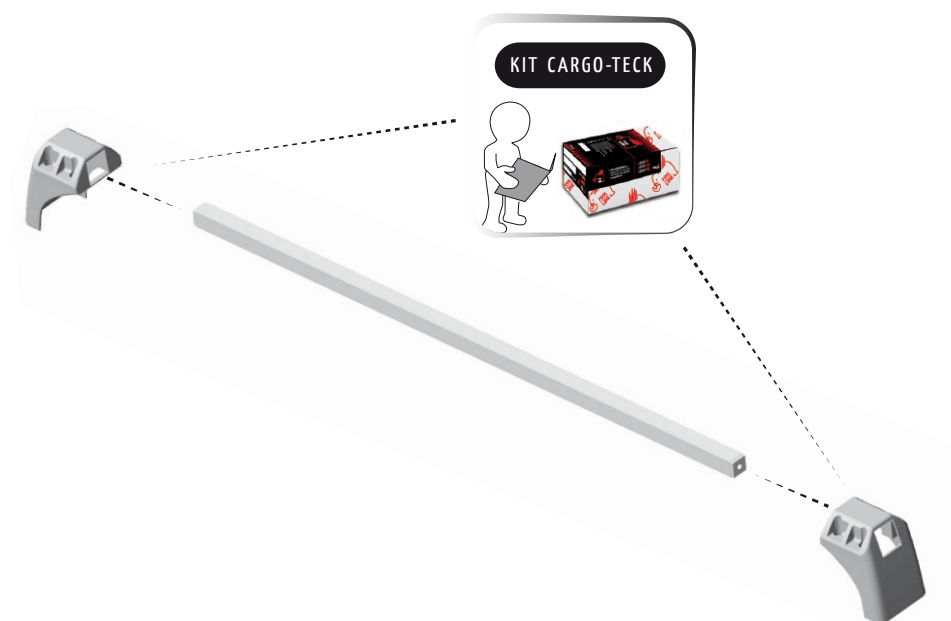


3


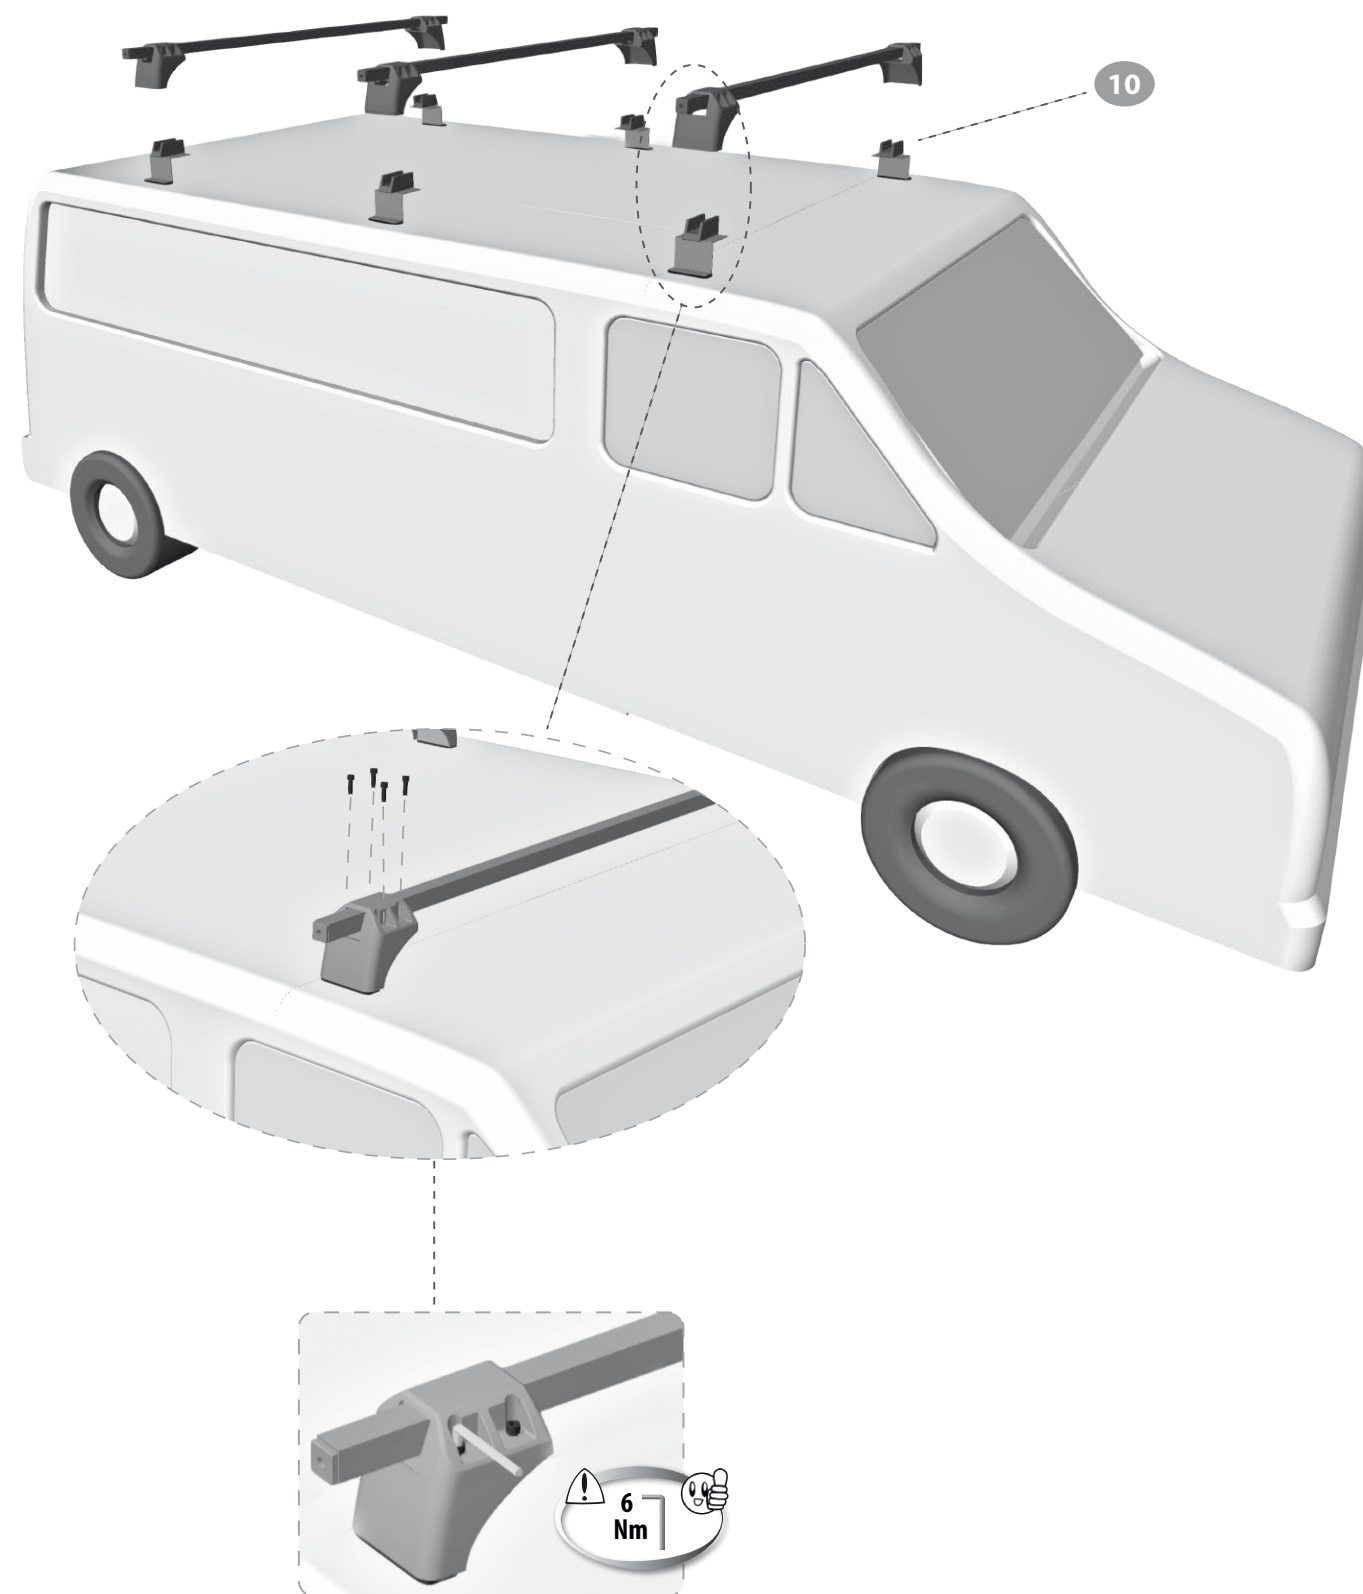




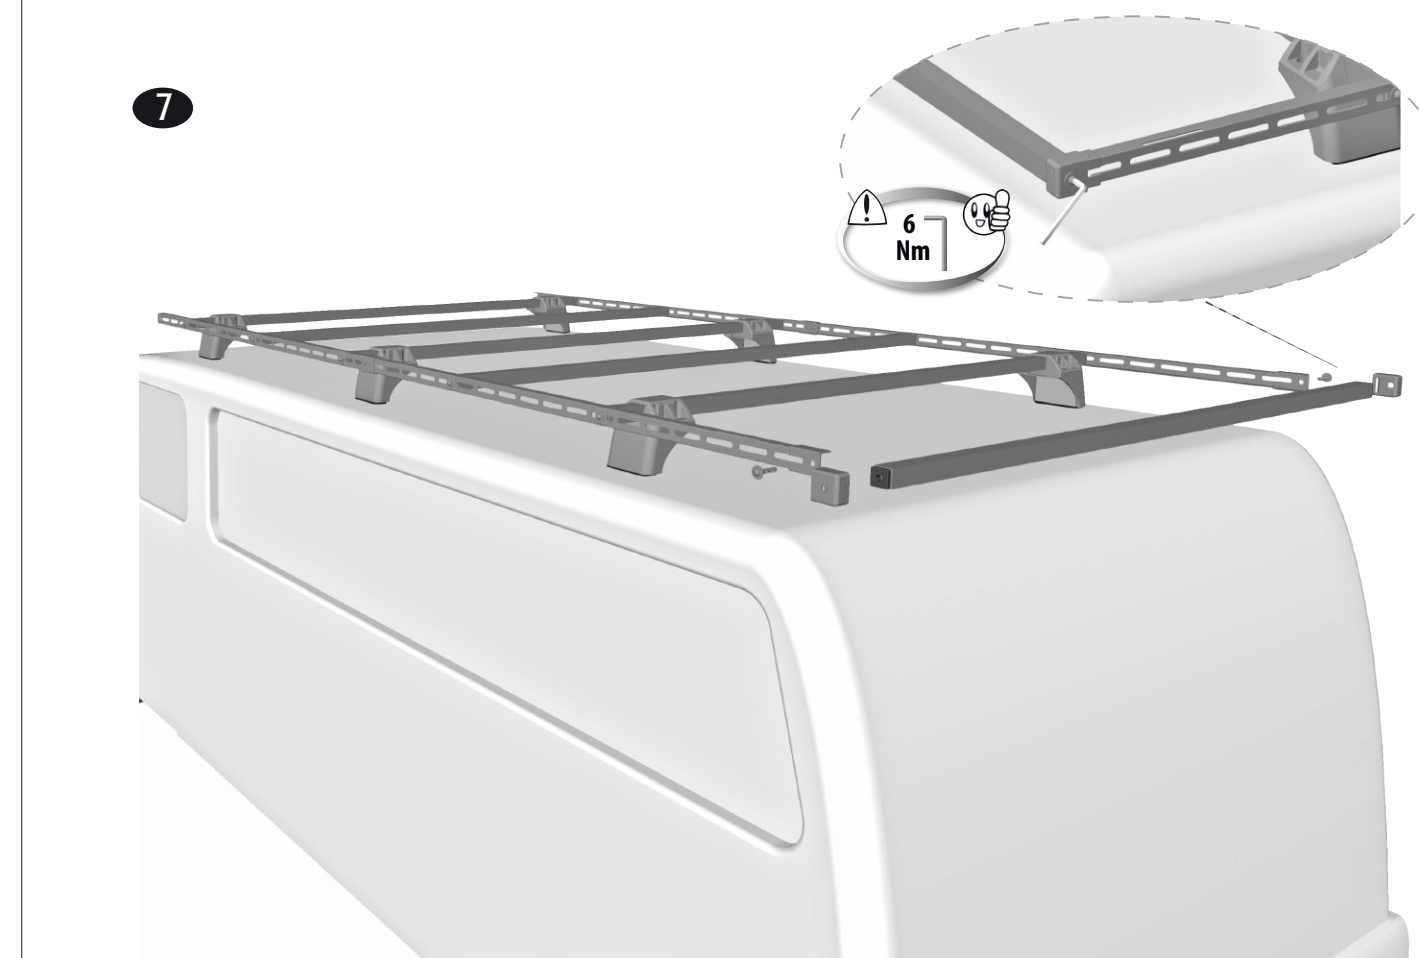
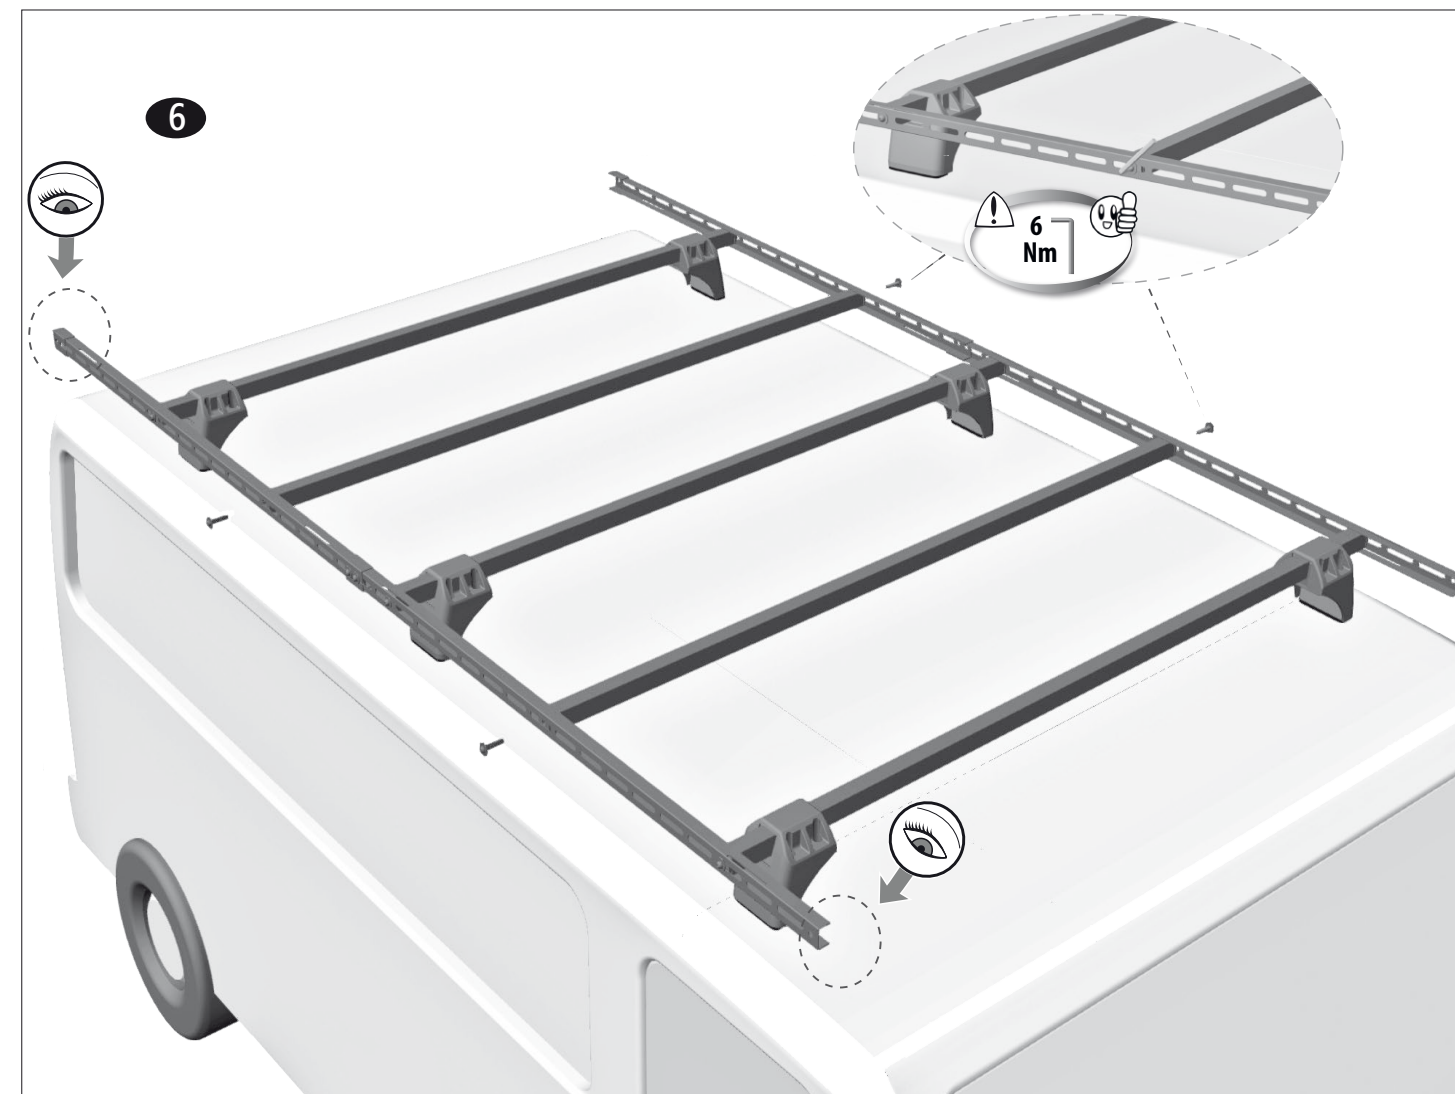
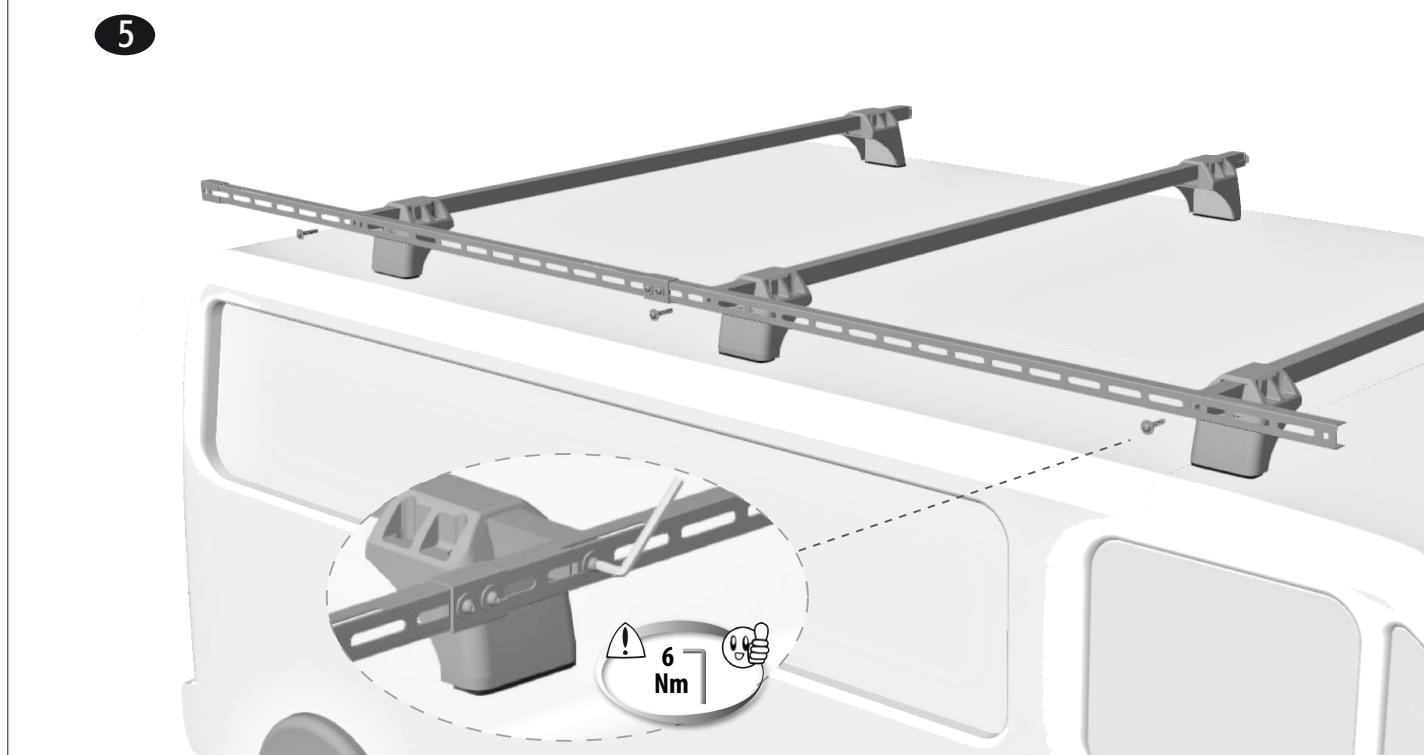
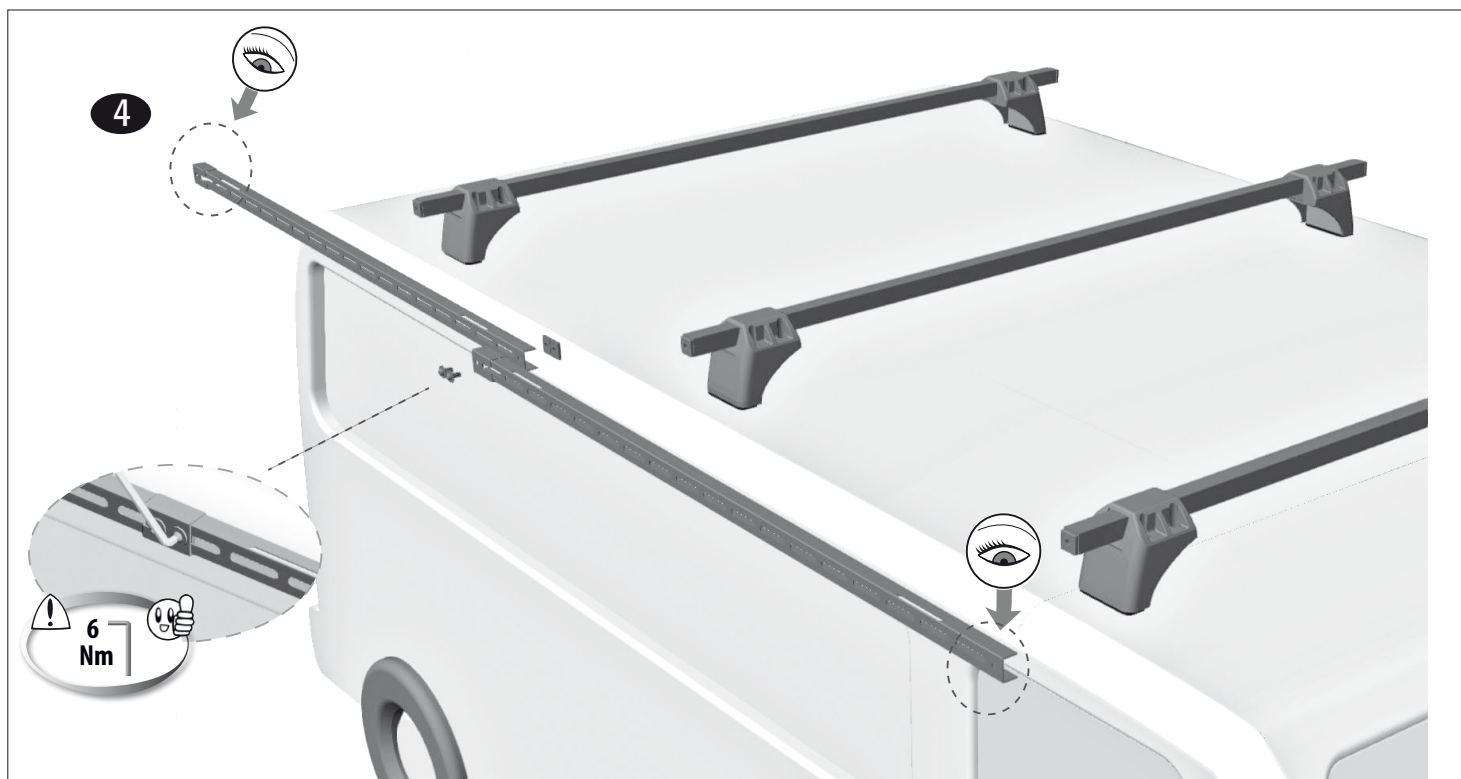



8

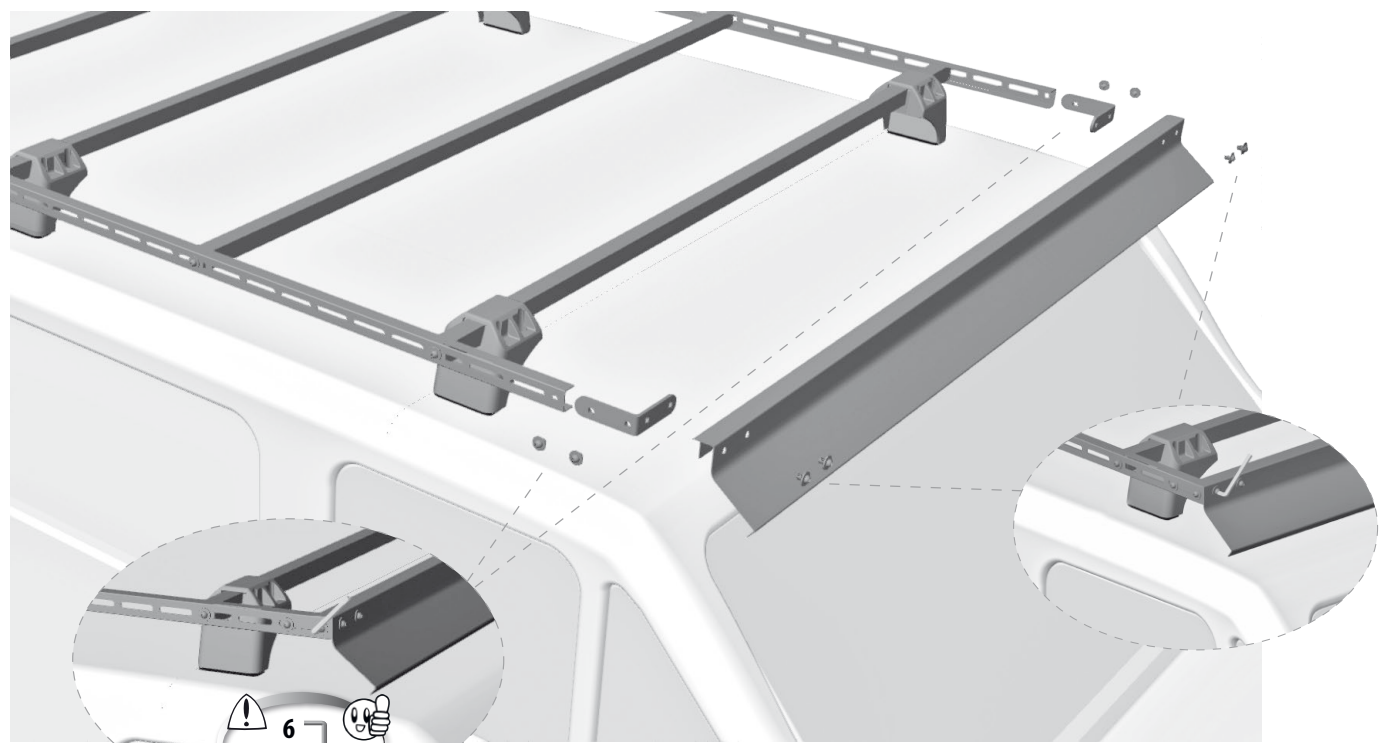


9

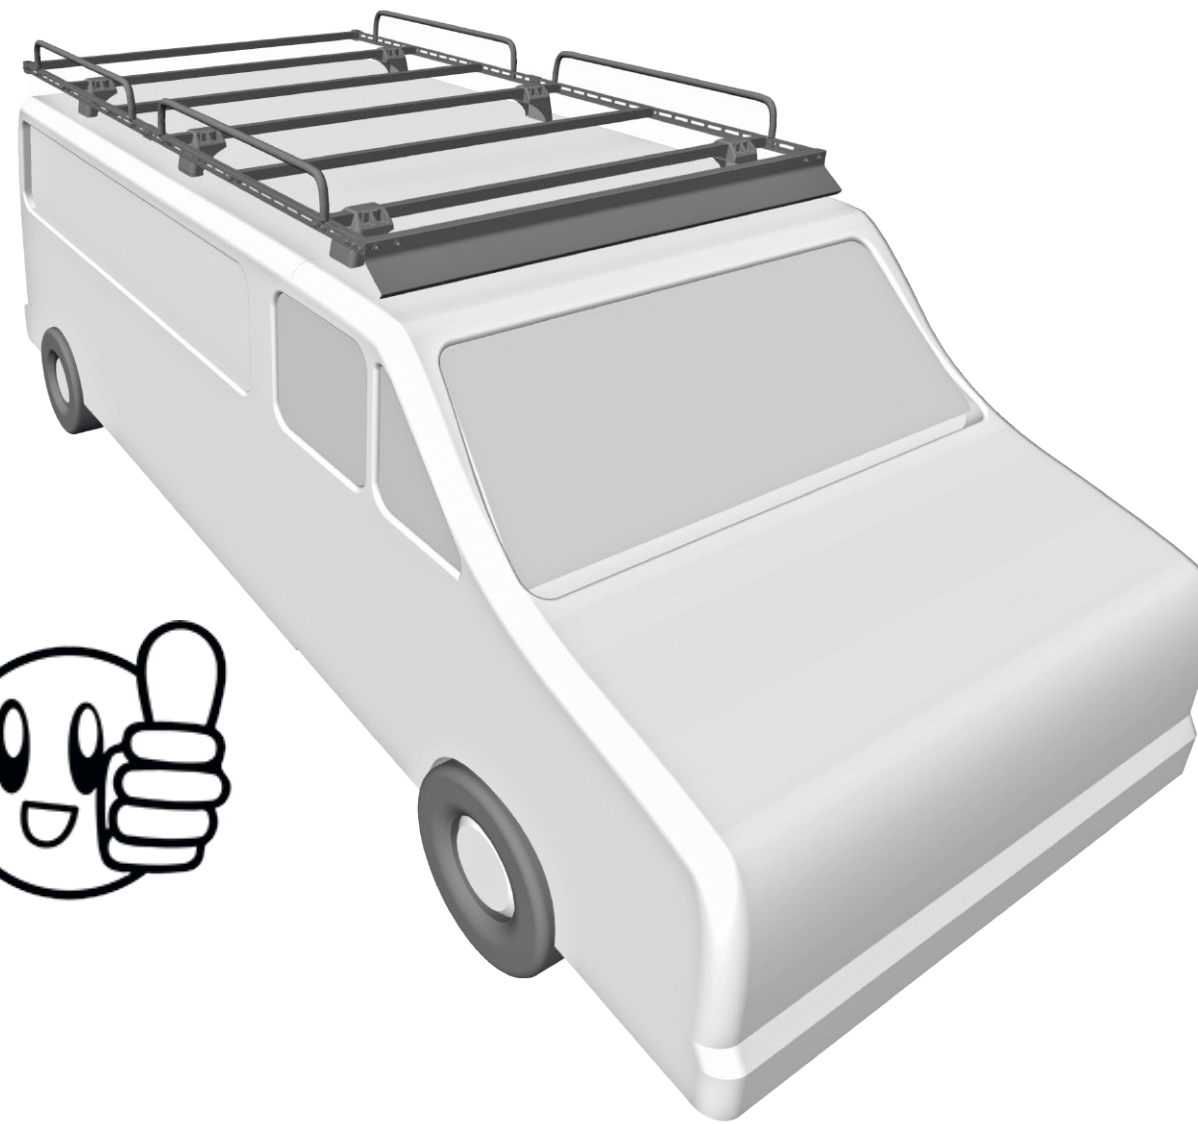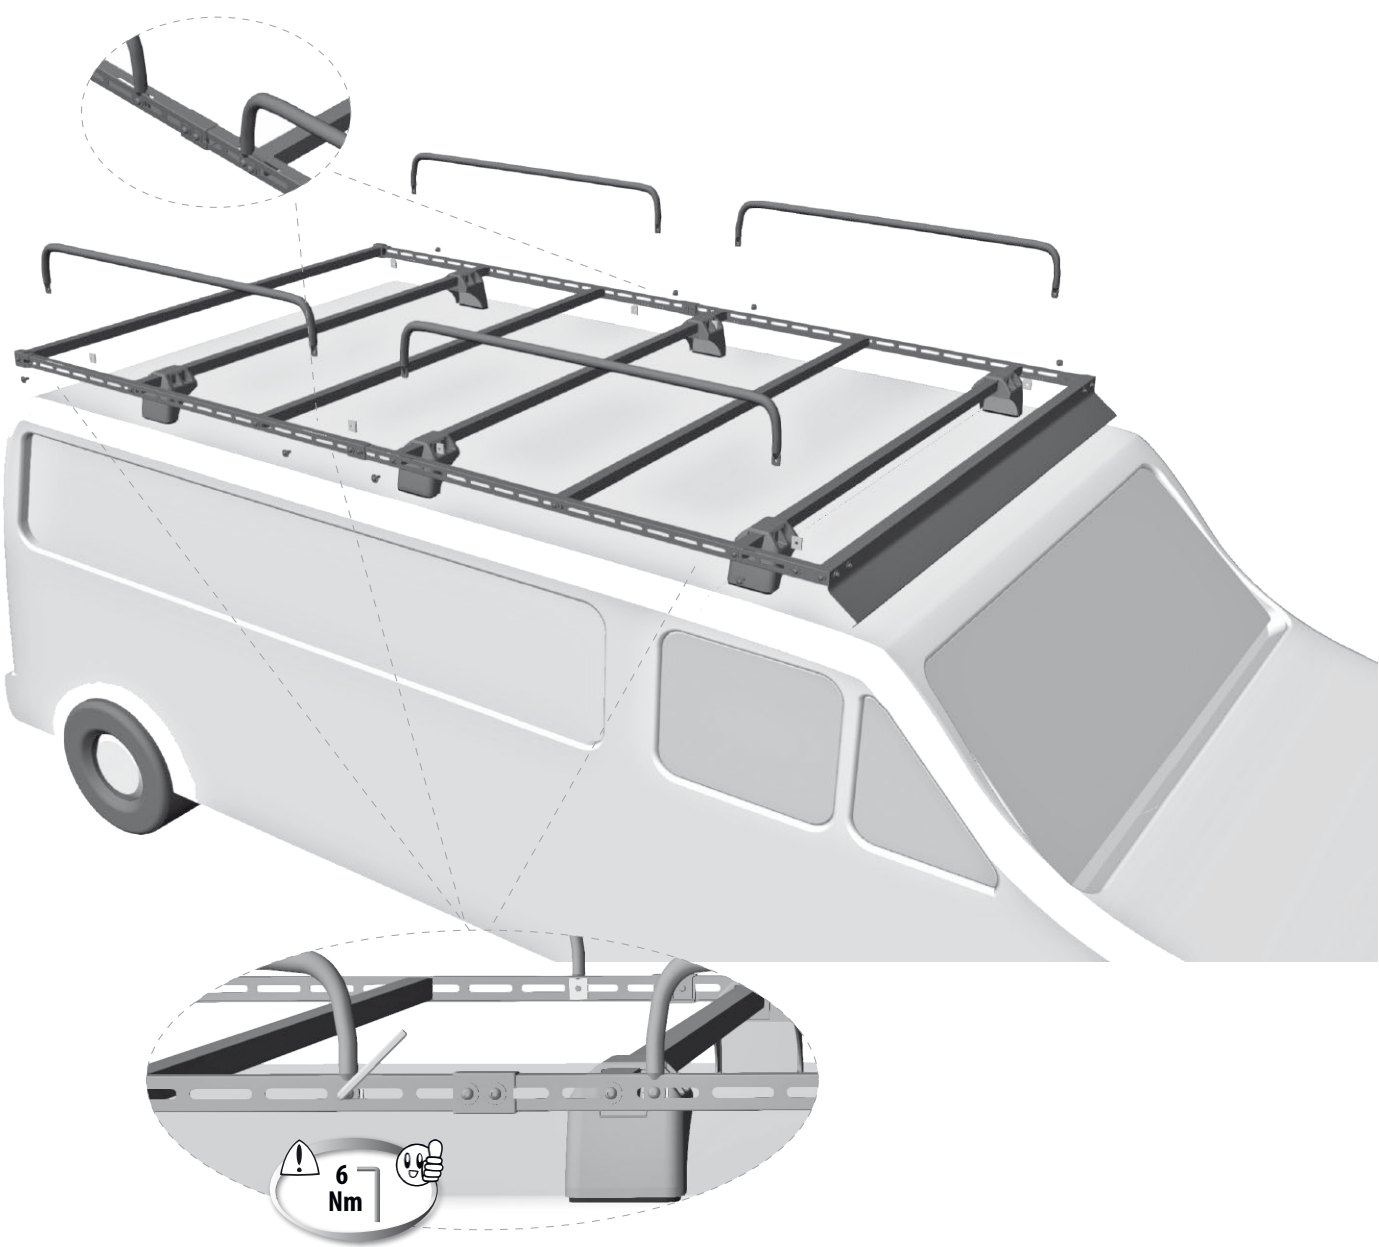

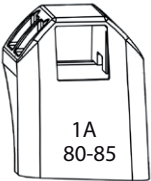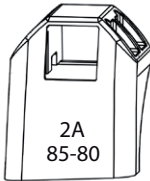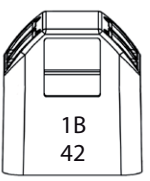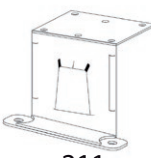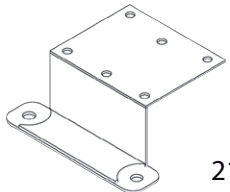
N			Q			Q
1	 1A 80-85	 2A 85-80	2+2	 1B 42		4
2	 211	 212	2+2	 213		4
3						16
4						1

N	BO0060 x2	Q
8	 DIN912 M6x20	32
9	 DIN125 Ø6	32

N	BO0006 x 8	Q
10	 DIN912 M6x16	16
11	 DIN9021Ø6	16

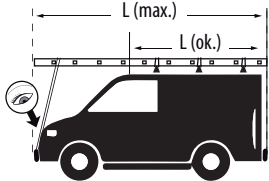

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instrucctions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

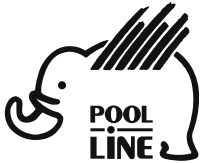

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN:

E9

26R-03.1042











RECLICLABLE

121971

Rv: 07/2023

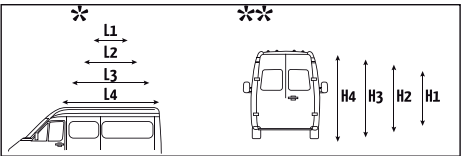
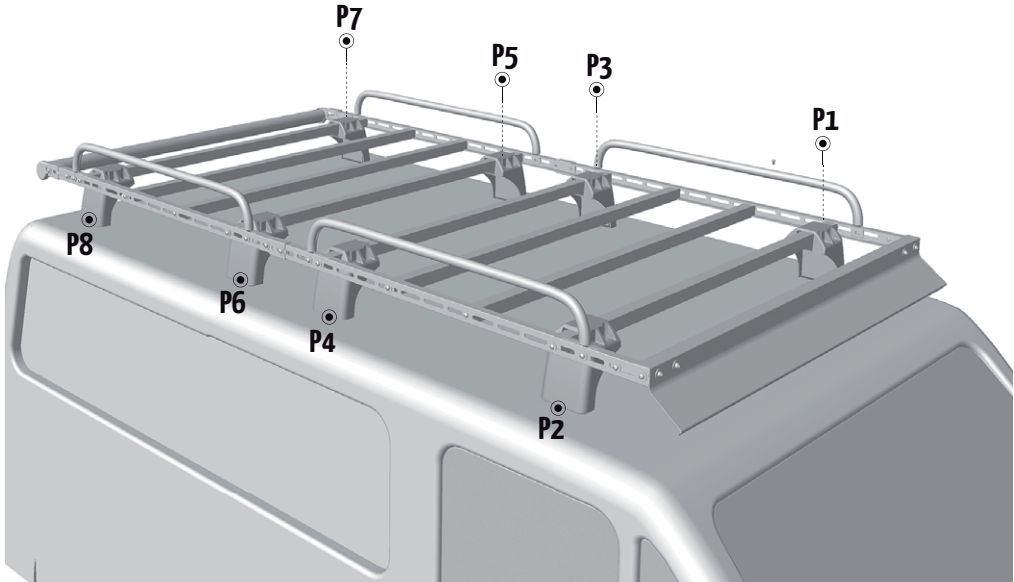


	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8
MERCEDES												
Vito W639	L1	H1	03-14	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A
Vito W639	L2	H1	03-14	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A
Vito W639	L3	H1	03-14	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A
Vito W447	L1	H1	14-	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A
Vito W447	L2	H1	14-	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A
Vito W447	L3	H1	14-	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A

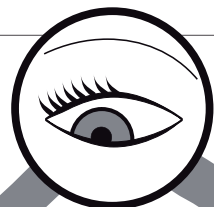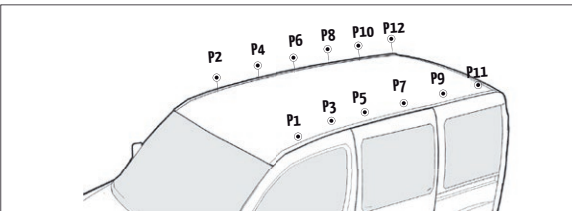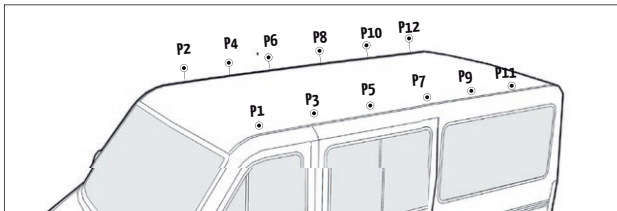




P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
XXX	XXX			XXX	XXX					XXX	XXX
XXX	XXX			XXX	XXX					XXX	XXX
XXX	XXX			XXX	XXX					XXX	XXX
XXX	XXX			XXX	XXX					XXX	XXX
XXX	XXX			XXX	XXX					XXX	XXX
XXX	XXX			XXX	XXX					XXX	XXX
XXX	XXX			XXX	XXX					XXX	XXX
XXX	XXX			XXX	XXX					XXX	XXX
XXX	XXX			XXX	XXX					XXX	XXX

Pag. 1

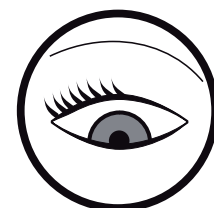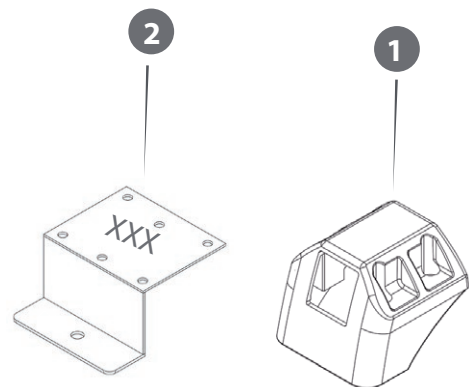

	10	P1	P12
0X	B0000XX		
0X-	B0000XX		
	B0000X		

Pag. 1

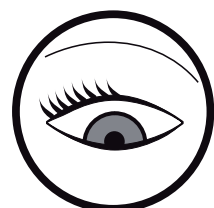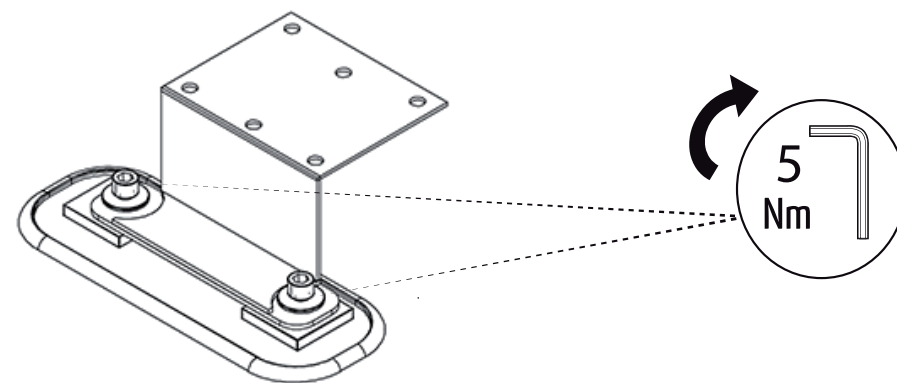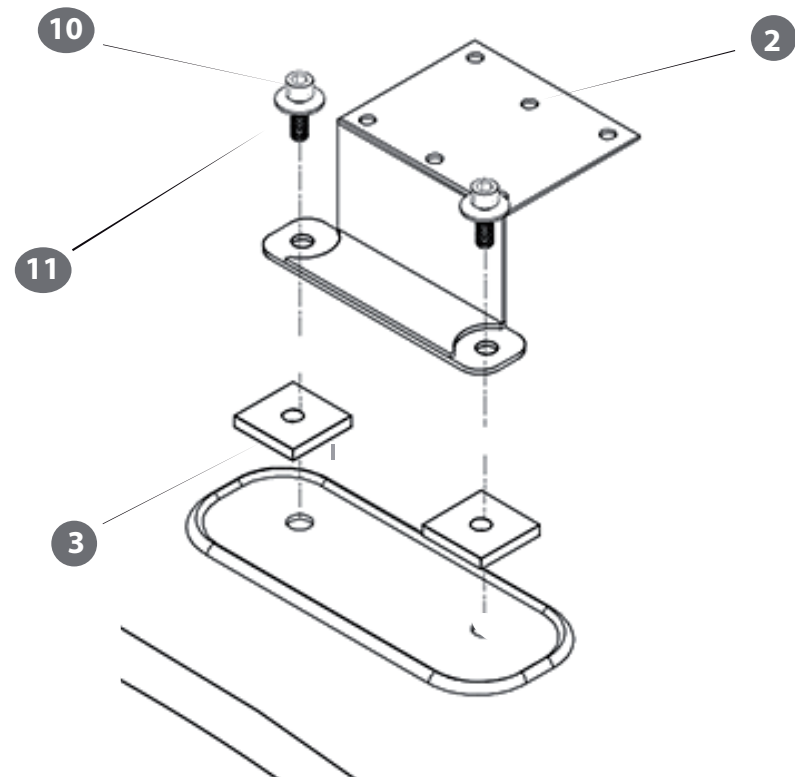

	10	P1	P12
0X	B0000XX		
0X-	B0000XX		
	B0000X		

Pag. 1

