


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

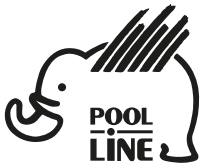

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net





200 KG.
MAX.



Nº HOMOLOGACIÓN: E9 26R-03.1042





123614

Rv: 06/2024

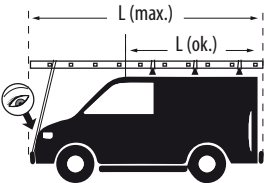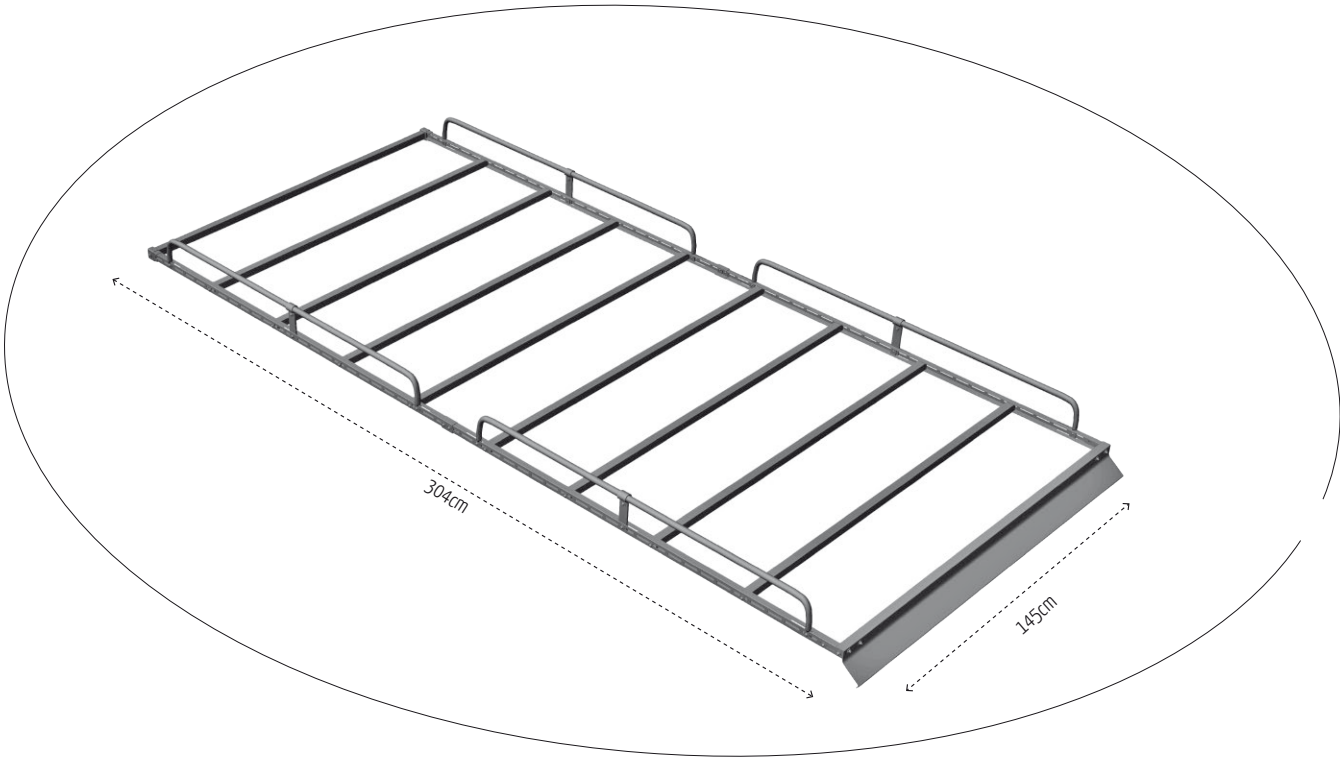


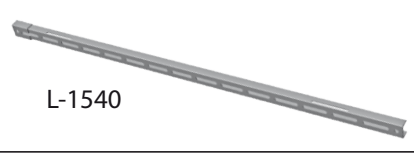N		Q
1	 S-1450	1
2	 L-1540	4
3	 B-1262	4
4	 T-1435	9
7		18
8		2
9		2
10		8
11		1
12	 CHA-M8	16
13	 ISO 7380 M8x30	18
14	 ISO 7380 M8x16	24
15	 DIN 125 Ø 8	42
16		8
17	 DIN 603 M6x12	4
18	 DIN 6923 M6	4

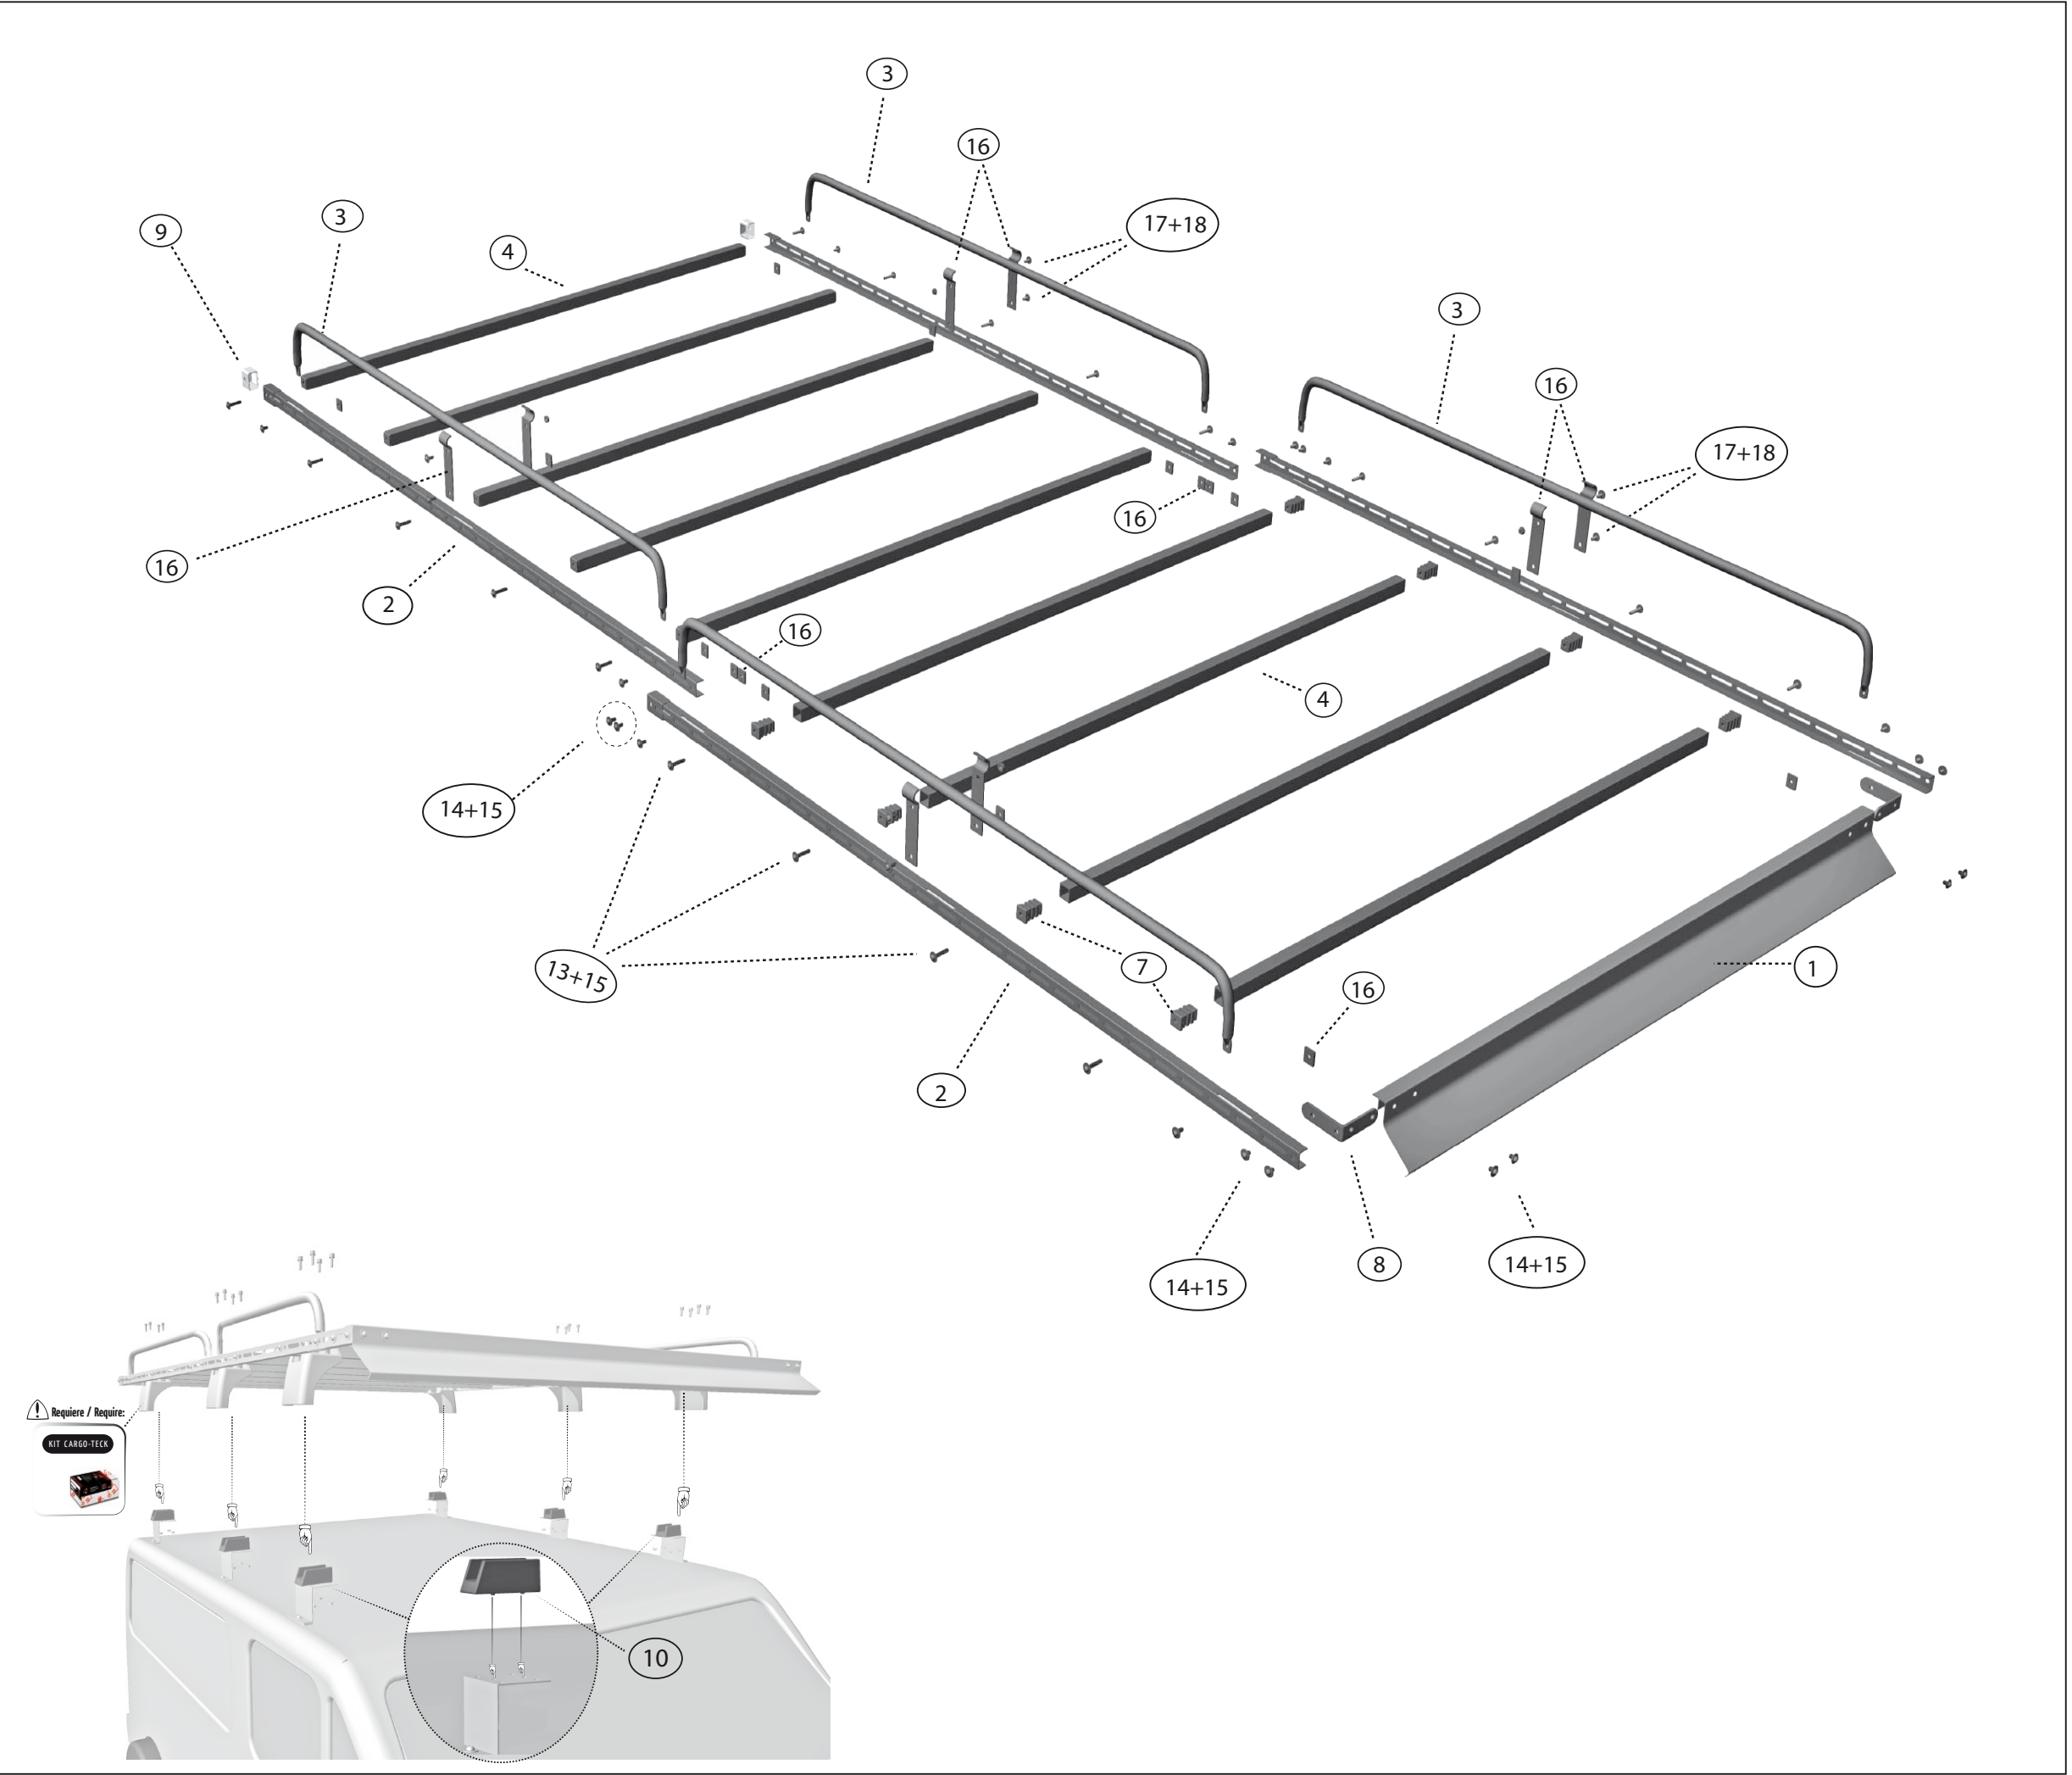


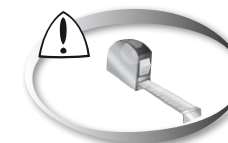


• IVECO DAILY VI (10,8m³) 3520 - H2
3 fijaciones (2014->)

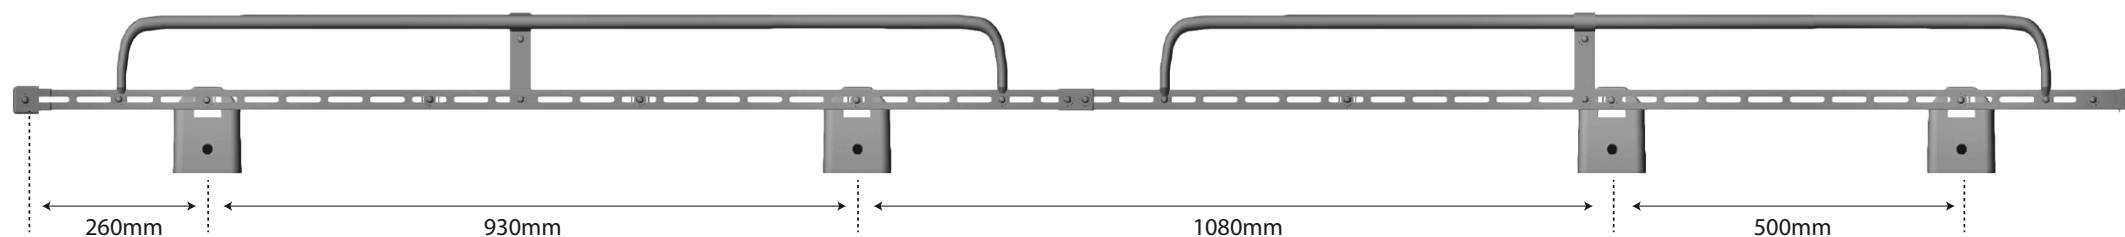


• IVECO DAILY VI (10,8m³) 3520 - H2
2 fijaciones (2014->)

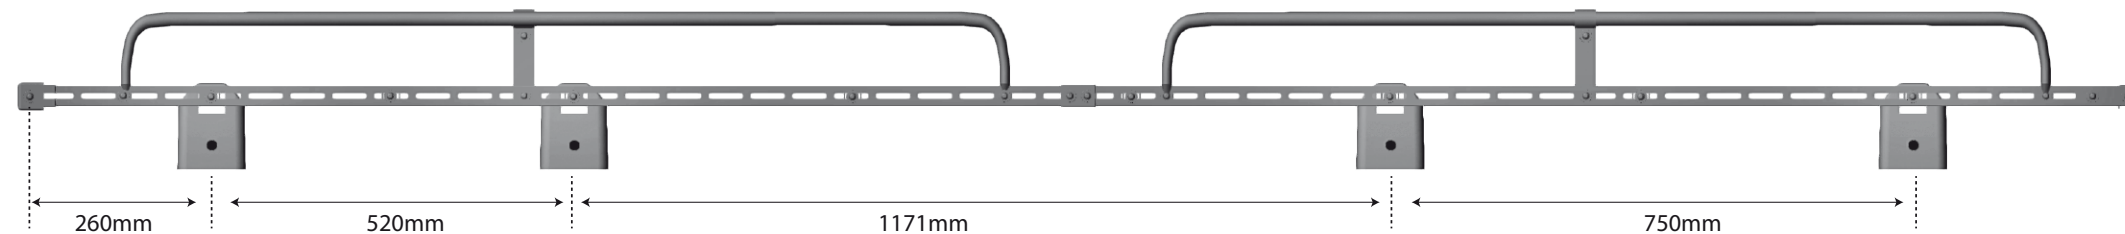


• FORD CUSTOM II TOURNEO L1-H1 (23->)
• FORD CUSTOM II TRANSIT L1-H1 (23->)

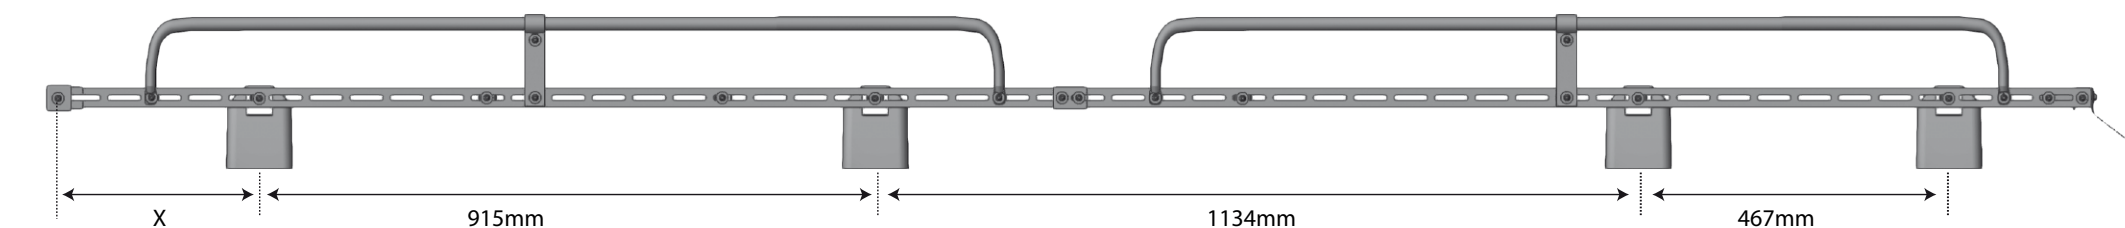

• MERCEDES VITO W639 L1 (2003 - 2014)
• MERCEDES VITO W447 L1 (2014->)

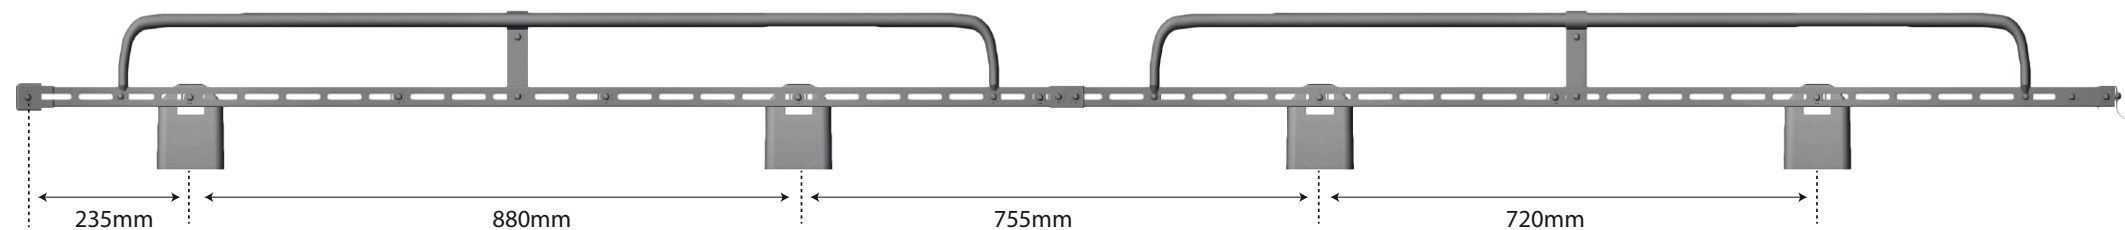

• MERCEDES VITO W639 L2 (2003 - 2014)
• MERCEDES VITO W447 L2 (2014->)

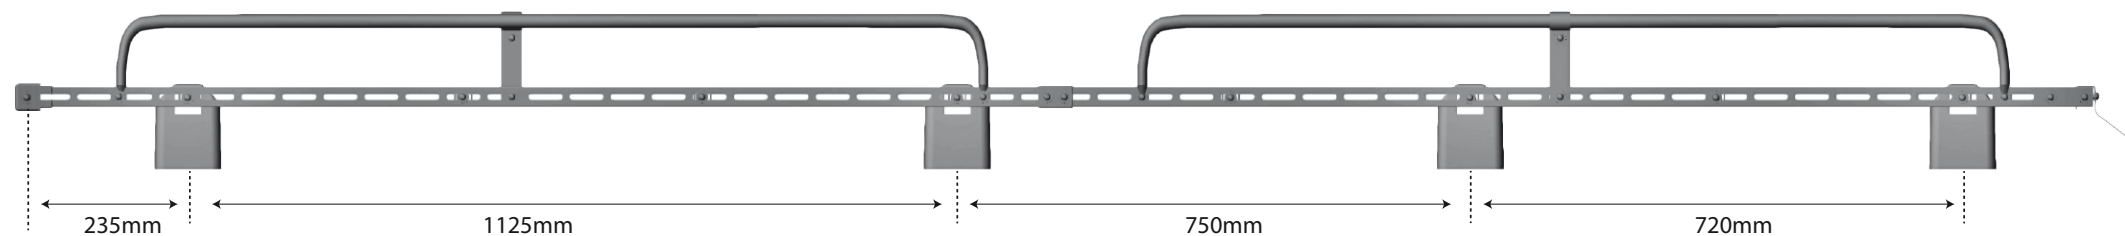


• HYUNDAI
• LDV
• DFSK




Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone


1




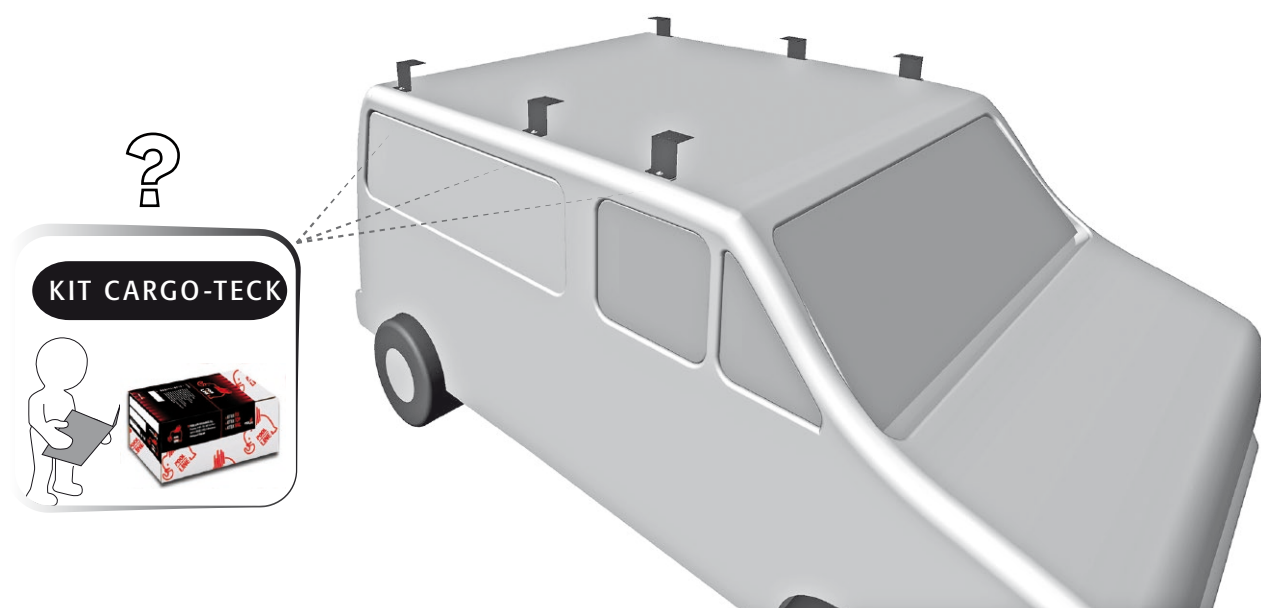


2

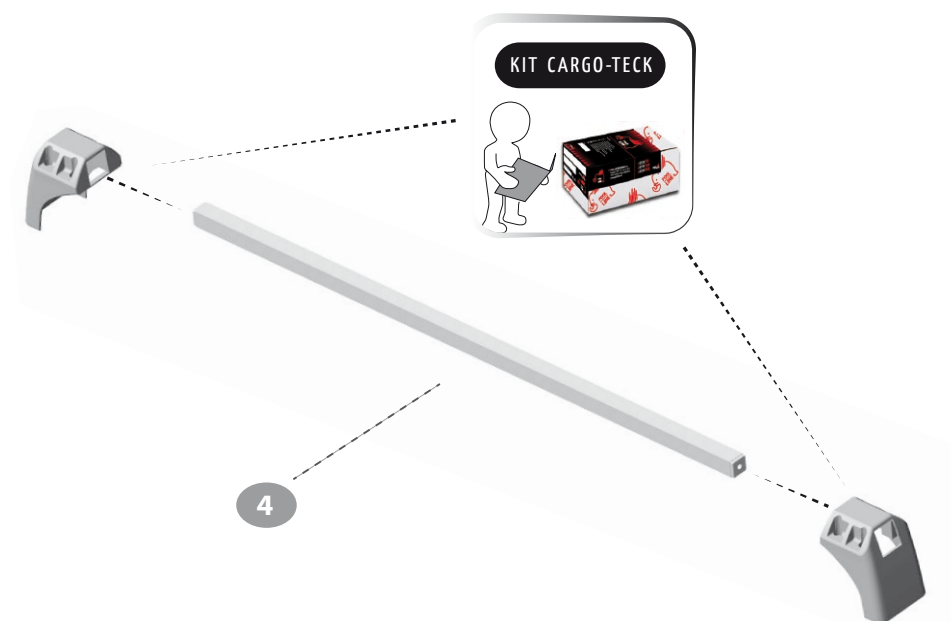


3


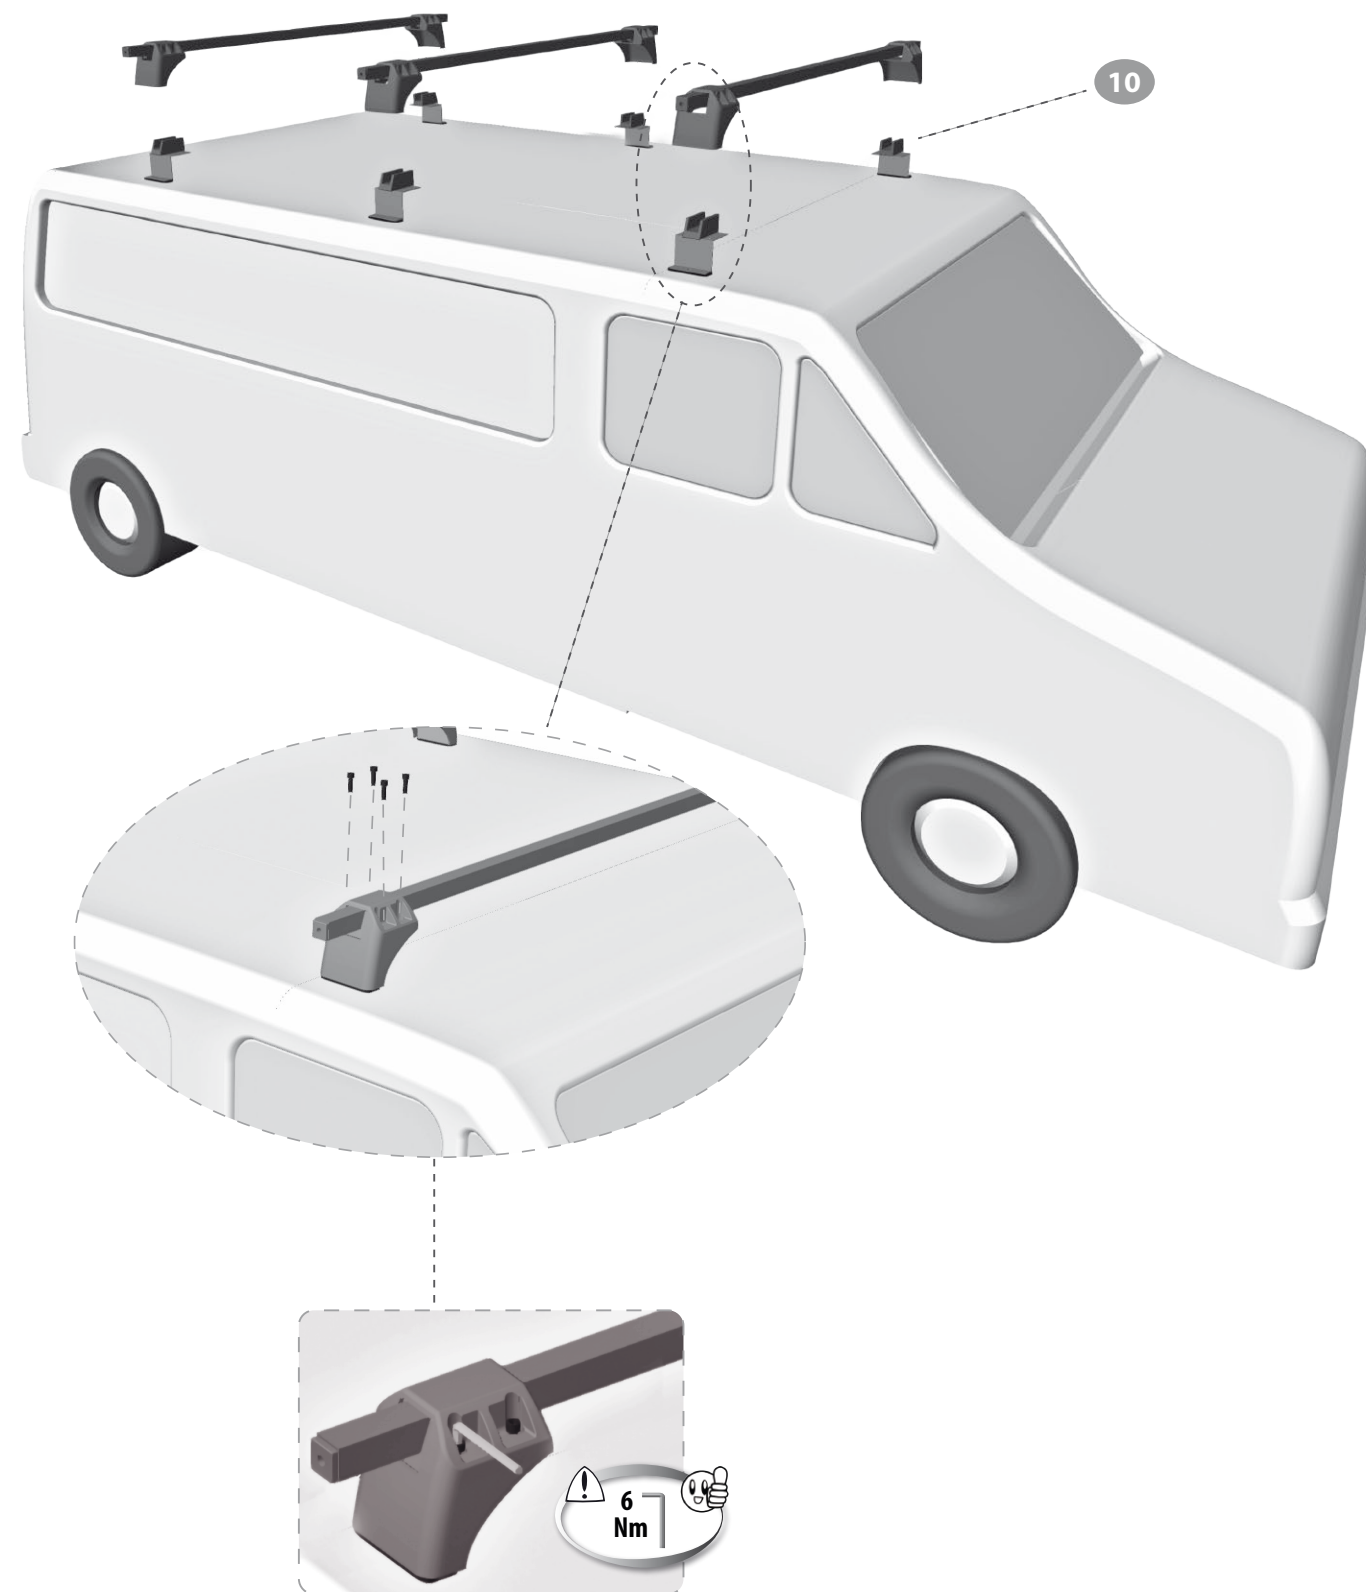




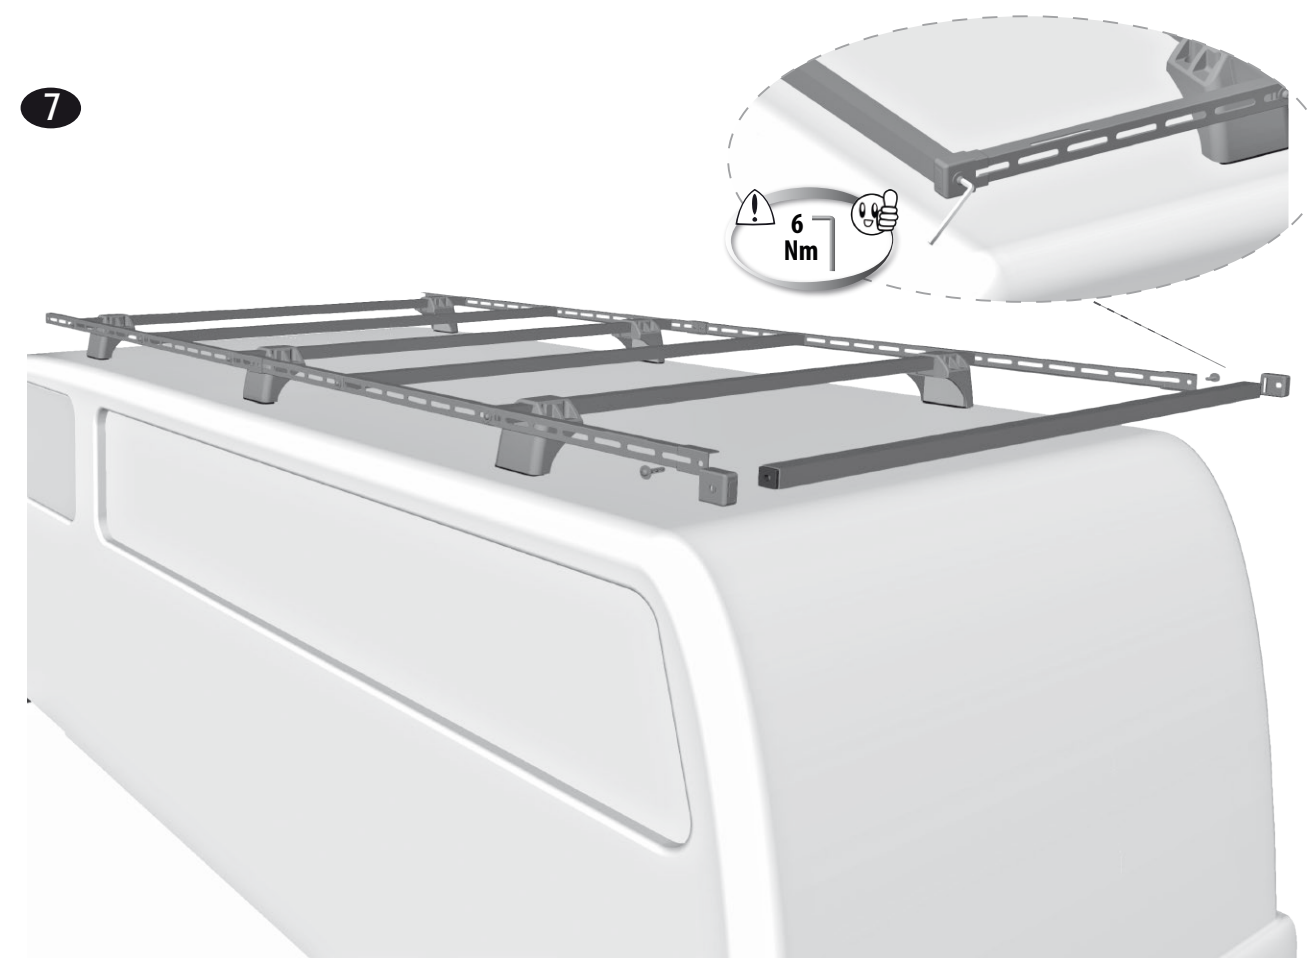
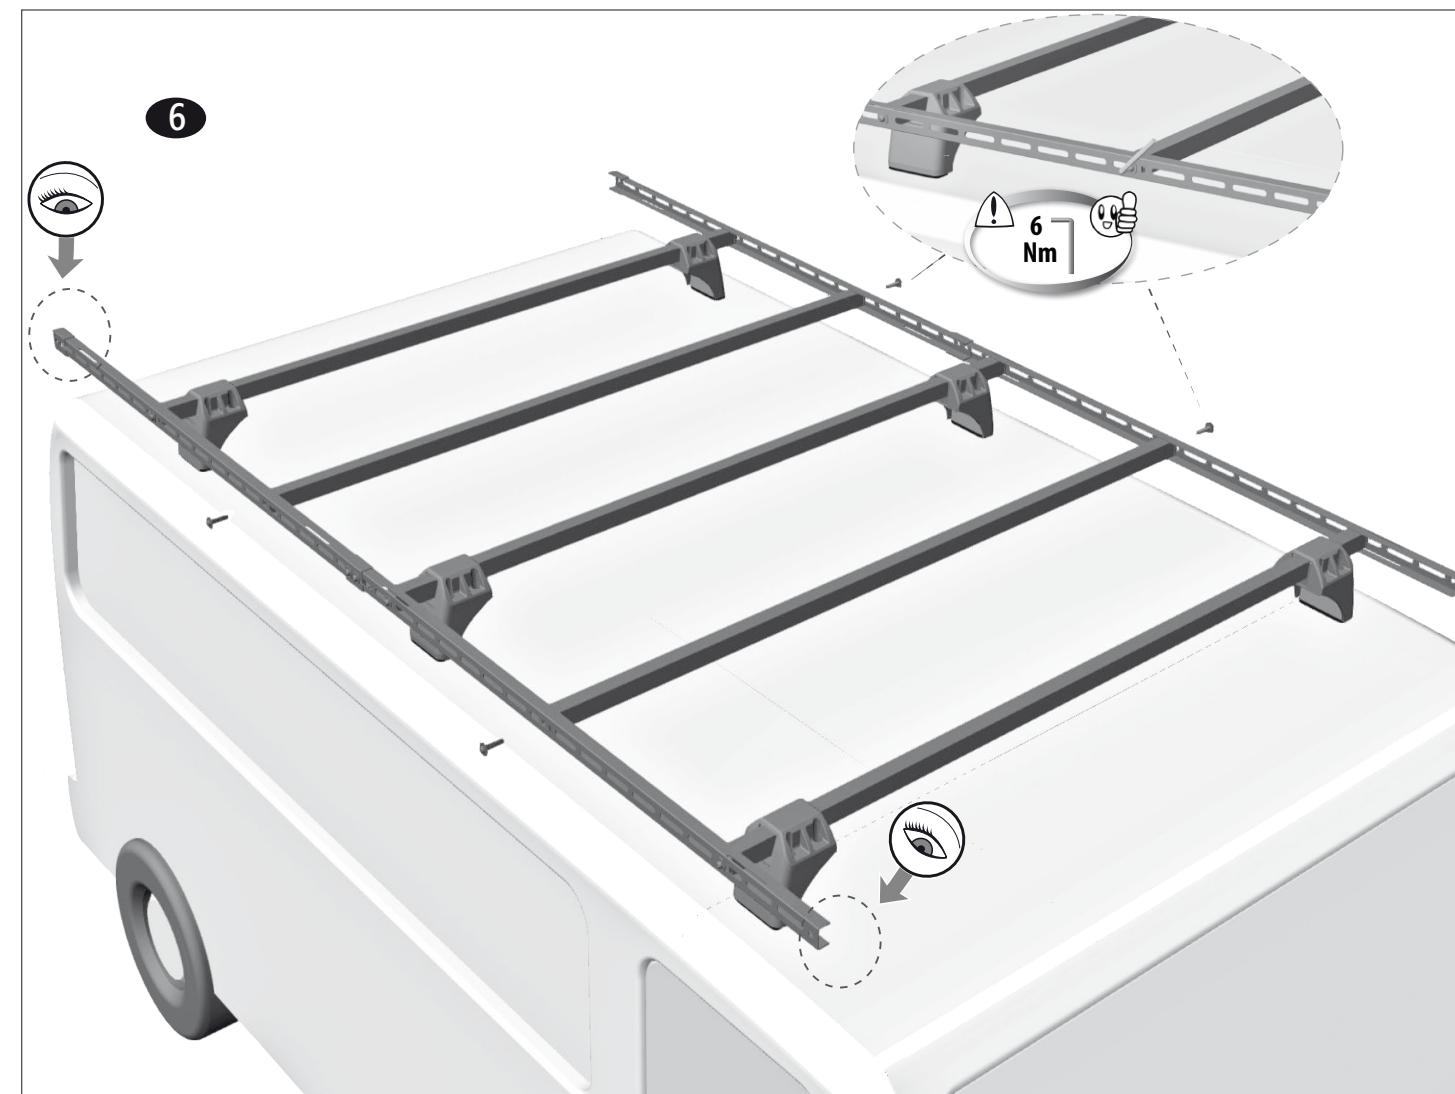
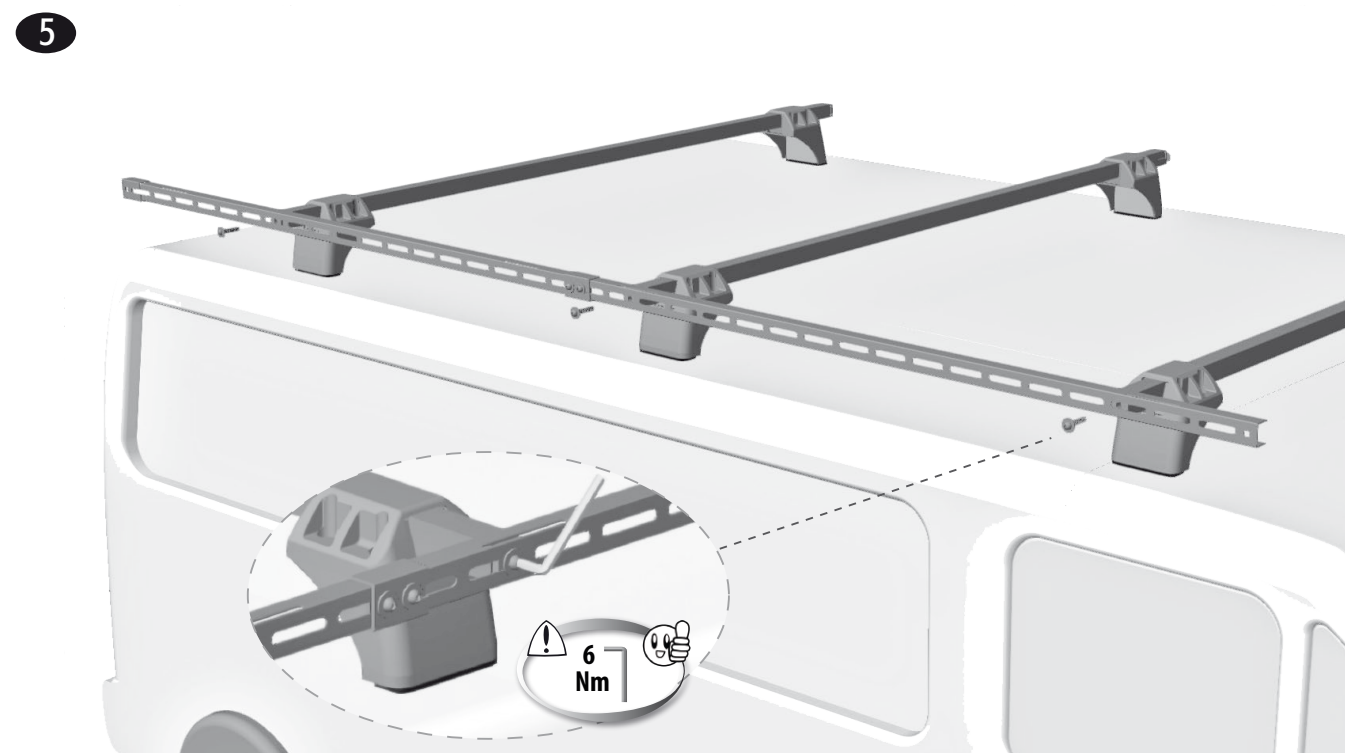
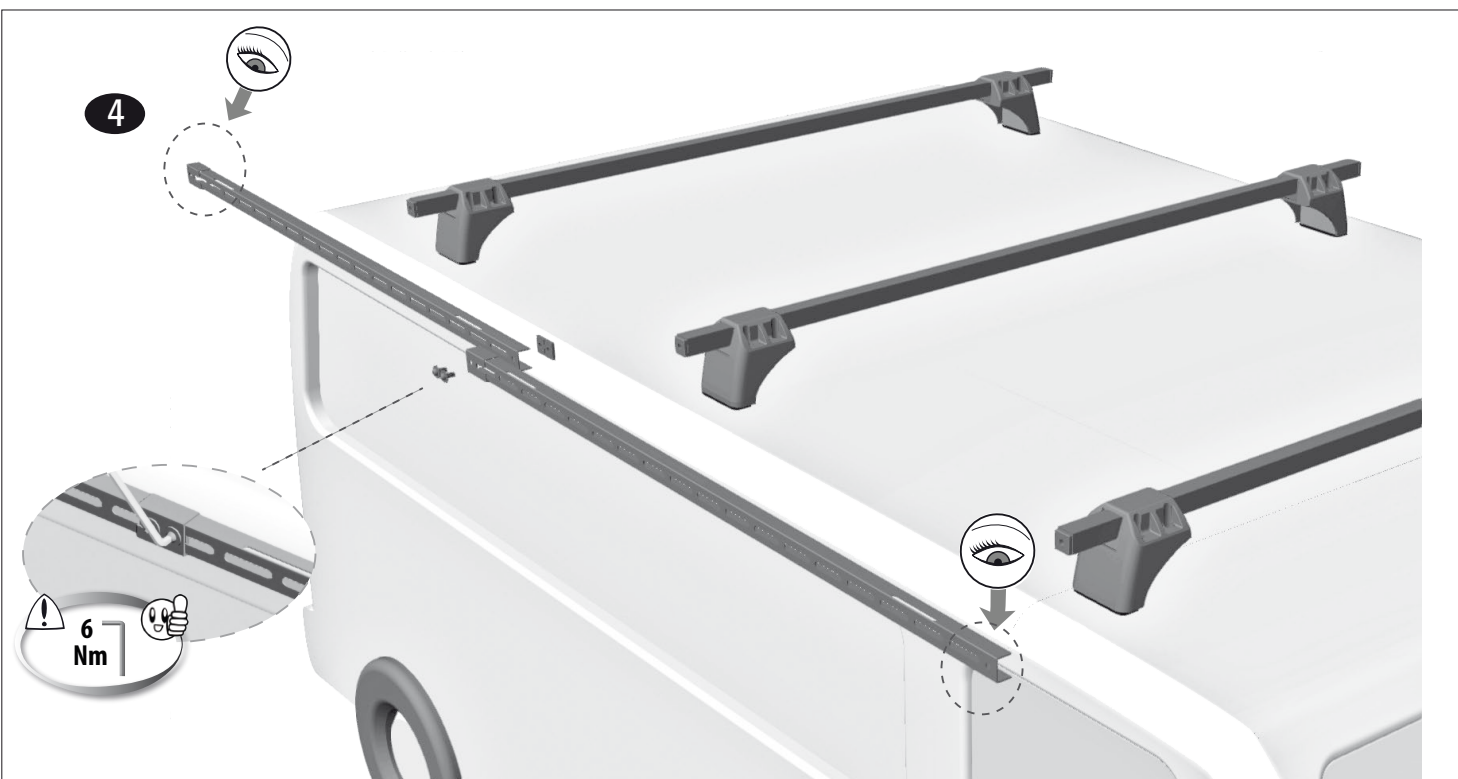



8

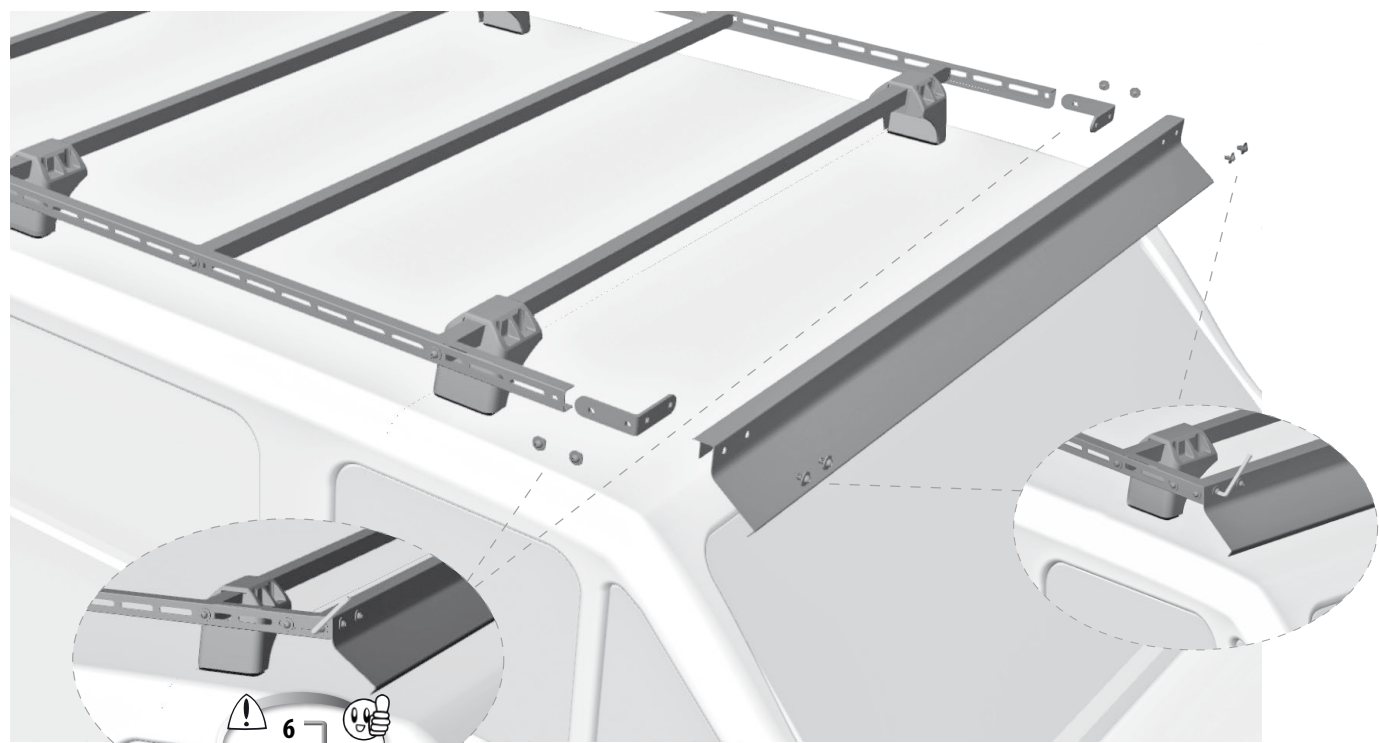


9

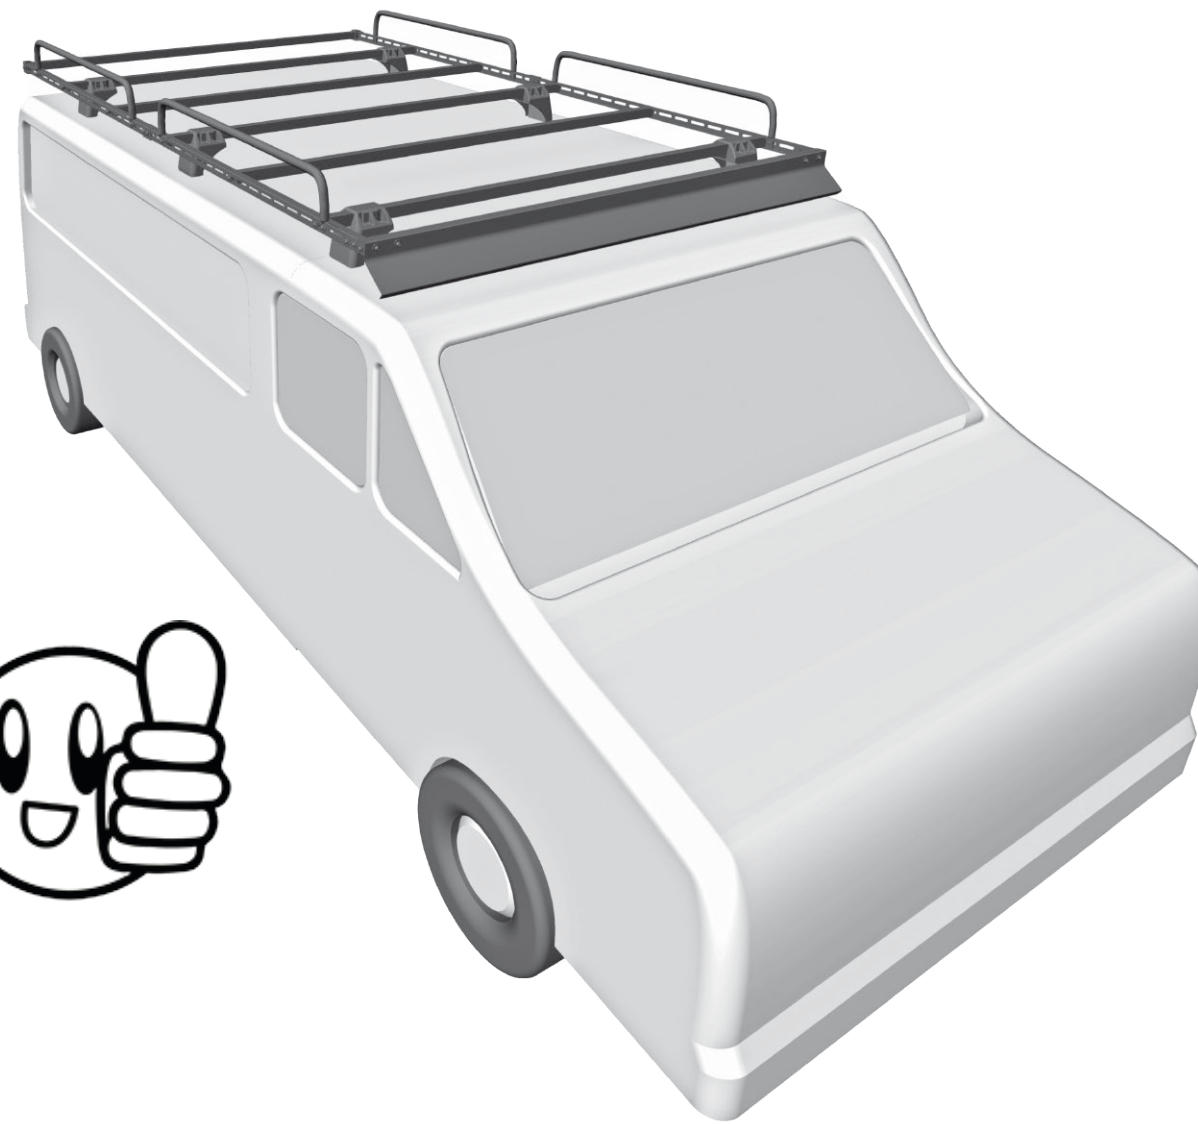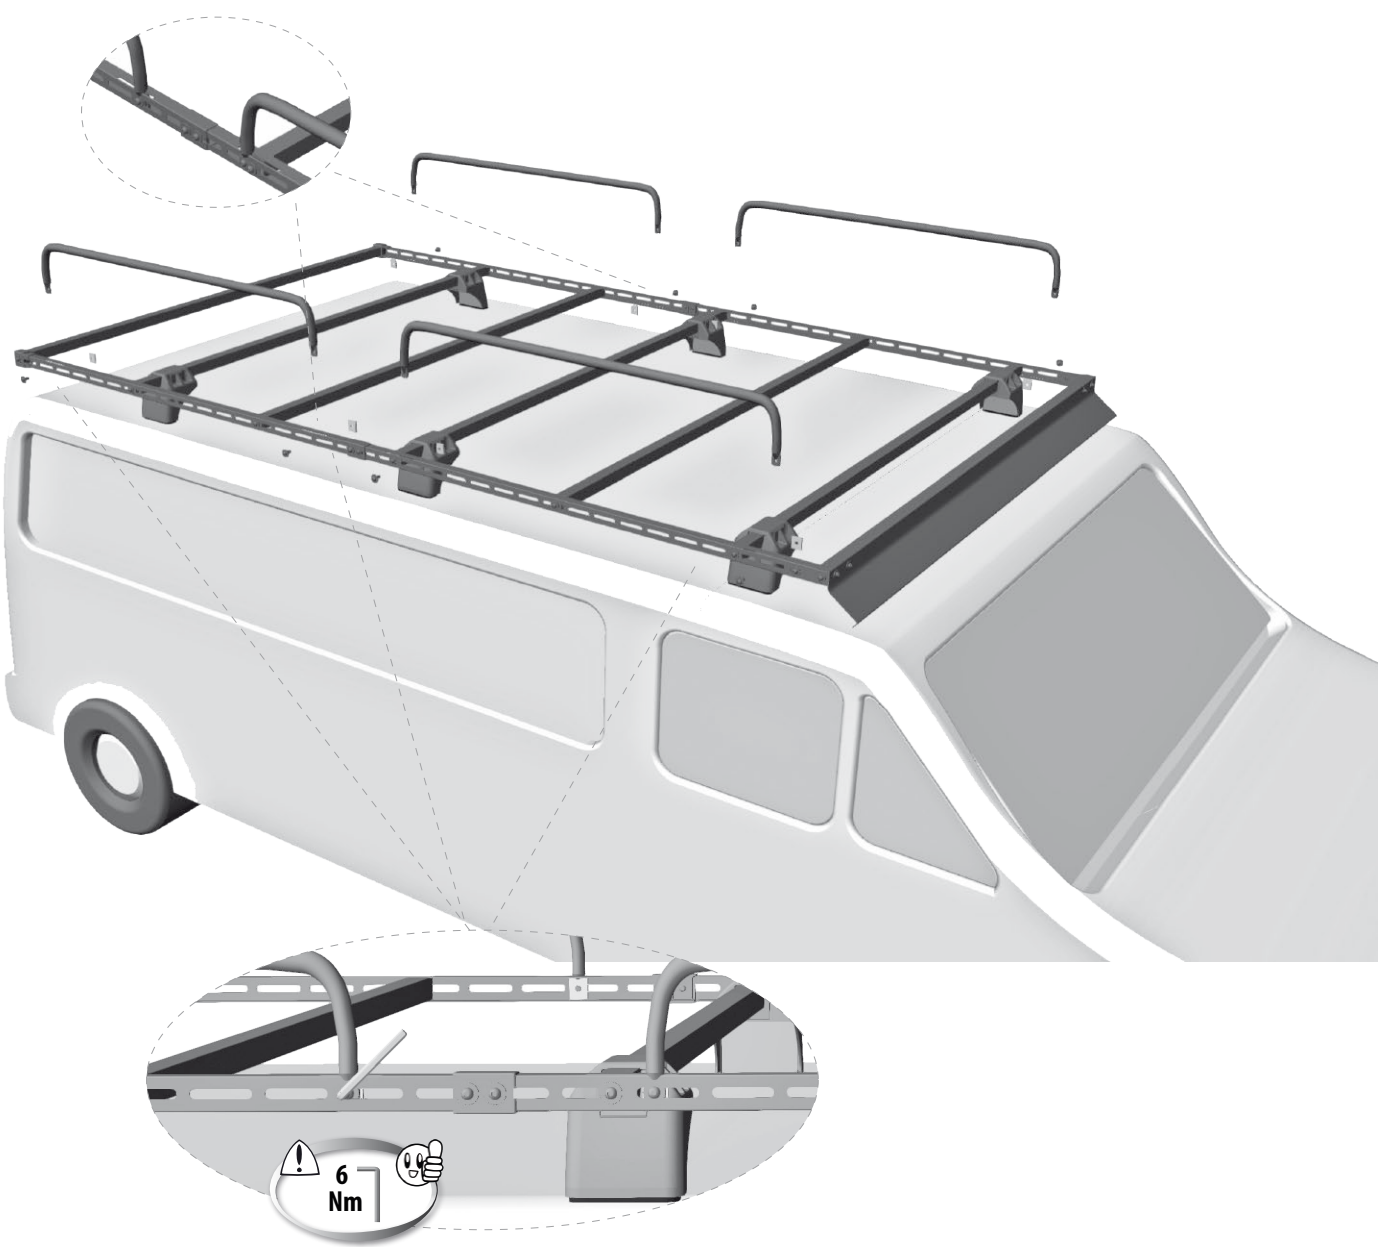

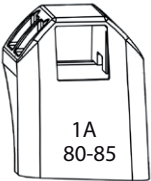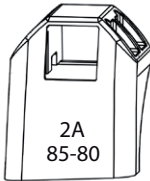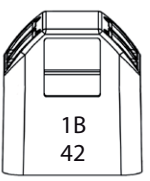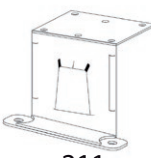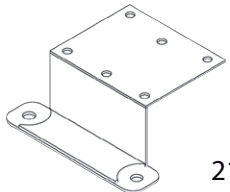
N			Q			Q
1	 1A 80-85	 2A 85-80	2+2	 1B 42		4
2	 211	 212	2+2	 213		4
3						16
4						1

N	BO0060 x2	Q
8	 DIN912 M6x20	32
9	 DIN125 Ø6	32

N	BO0006 x 8	Q
10	 DIN912 M6x16	16
11	 DIN9021Ø6	16

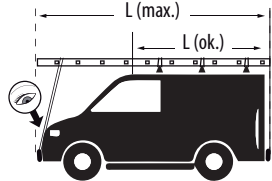

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instrucctions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

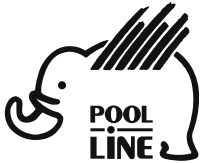

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN:

E9

26R-03.1042








RECLICLABLE




121971

Rv: 07/2023

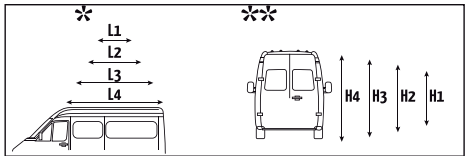

	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8
MERCEDES												
Vito W639	L1	H1	03-14	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A
Vito W639	L2	H1	03-14	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A
Vito W639	L3	H1	03-14	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A
Vito W447	L1	H1	14-	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A
Vito W447	L2	H1	14-	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A
Vito W447	L3	H1	14-	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A

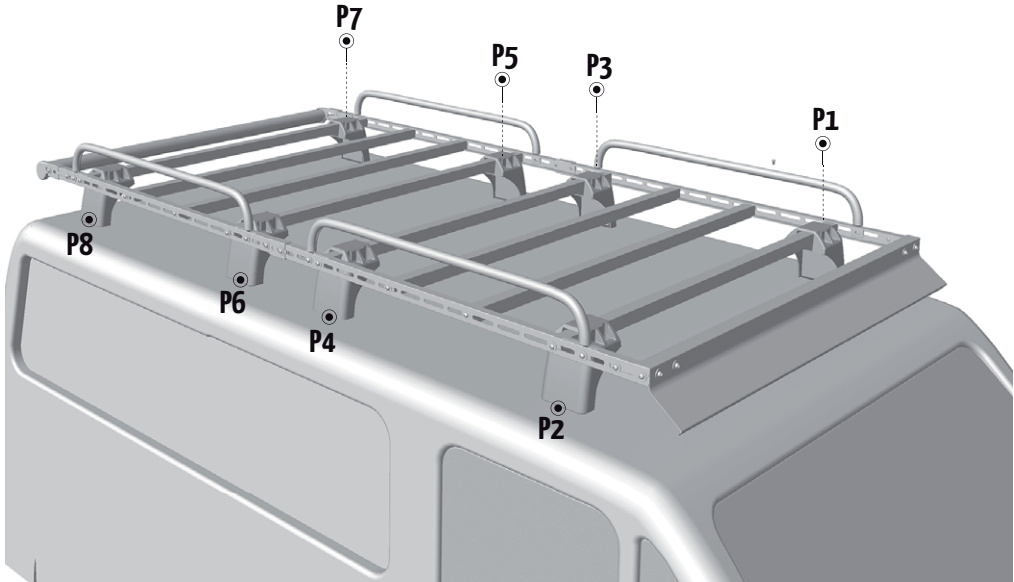

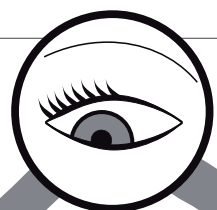
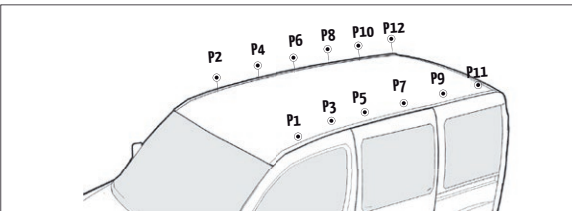
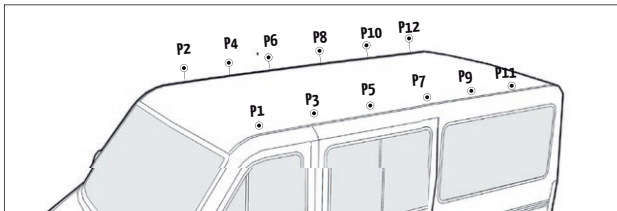


P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx

Pag. 1

2

1

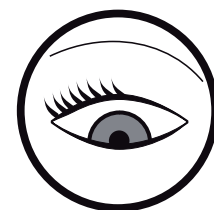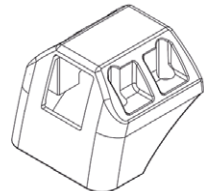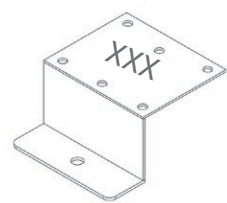

	10	P1	P1
0X	B0000XX		
0X-	B0000XX		
	B0000X		




Pag. 1

10

2

11

3

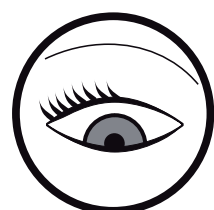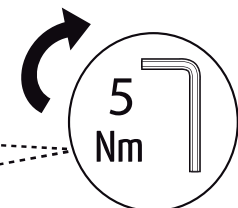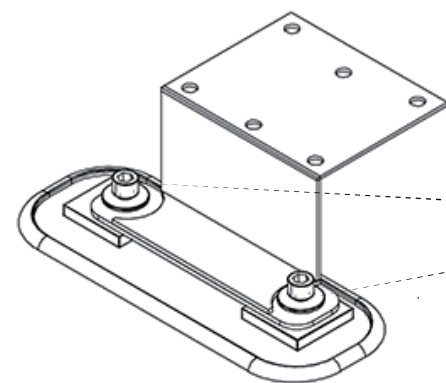

	10	P1	P1
0X	B0000XX		
0X-	B0000XX		
	B0000X		





Pag. 1

10

2

11

3

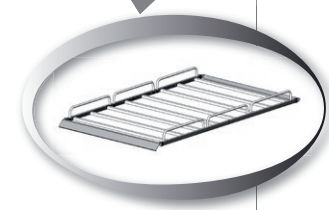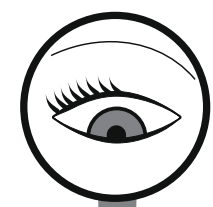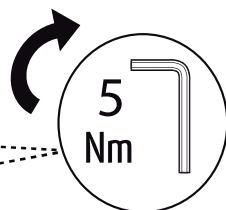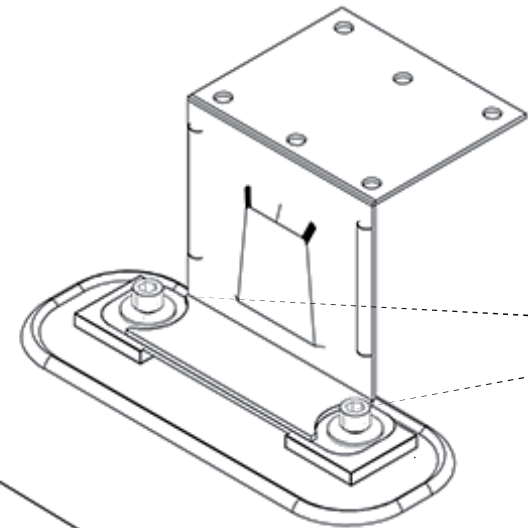

8

9

1

2

