



- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net





200 KG.
MAX.



Nº HOMOLOGACIÓN: E9 26R-03.1042









123714

Rv: 06/2024

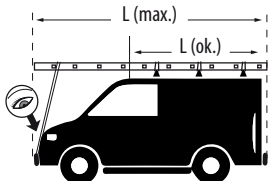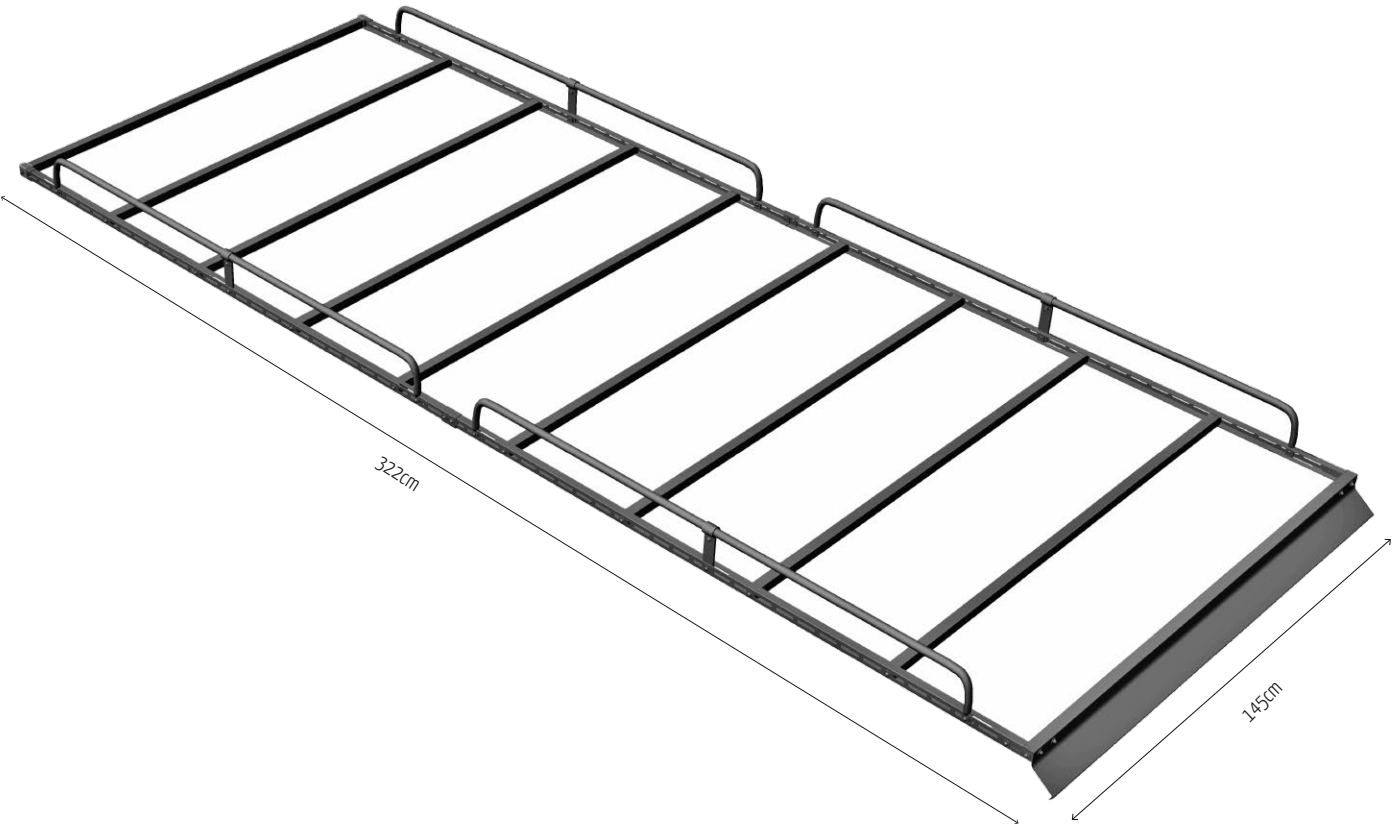

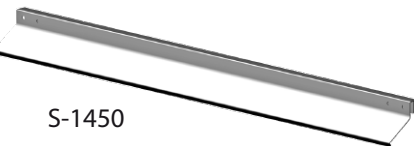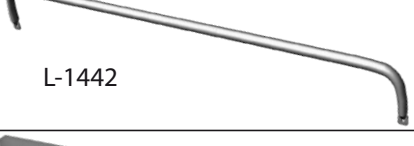
N		Q
1	 S-1450	1
2A	 L-1540	2
3A	 B-1262	2
2B	 T-1730	2
3B	 L-1442	2
4	 T-1435	9
7		18
8		2
9		2
10		10
11		1
12	 CHA-M8	16
13	 ISO 7380 M8x30	18
14	 ISO 7380 M8x16	24
15	 DIN 125 Ø 8	42
16		8
17	 DIN 603 M6x12	4
18	 DIN 6923 M6	4

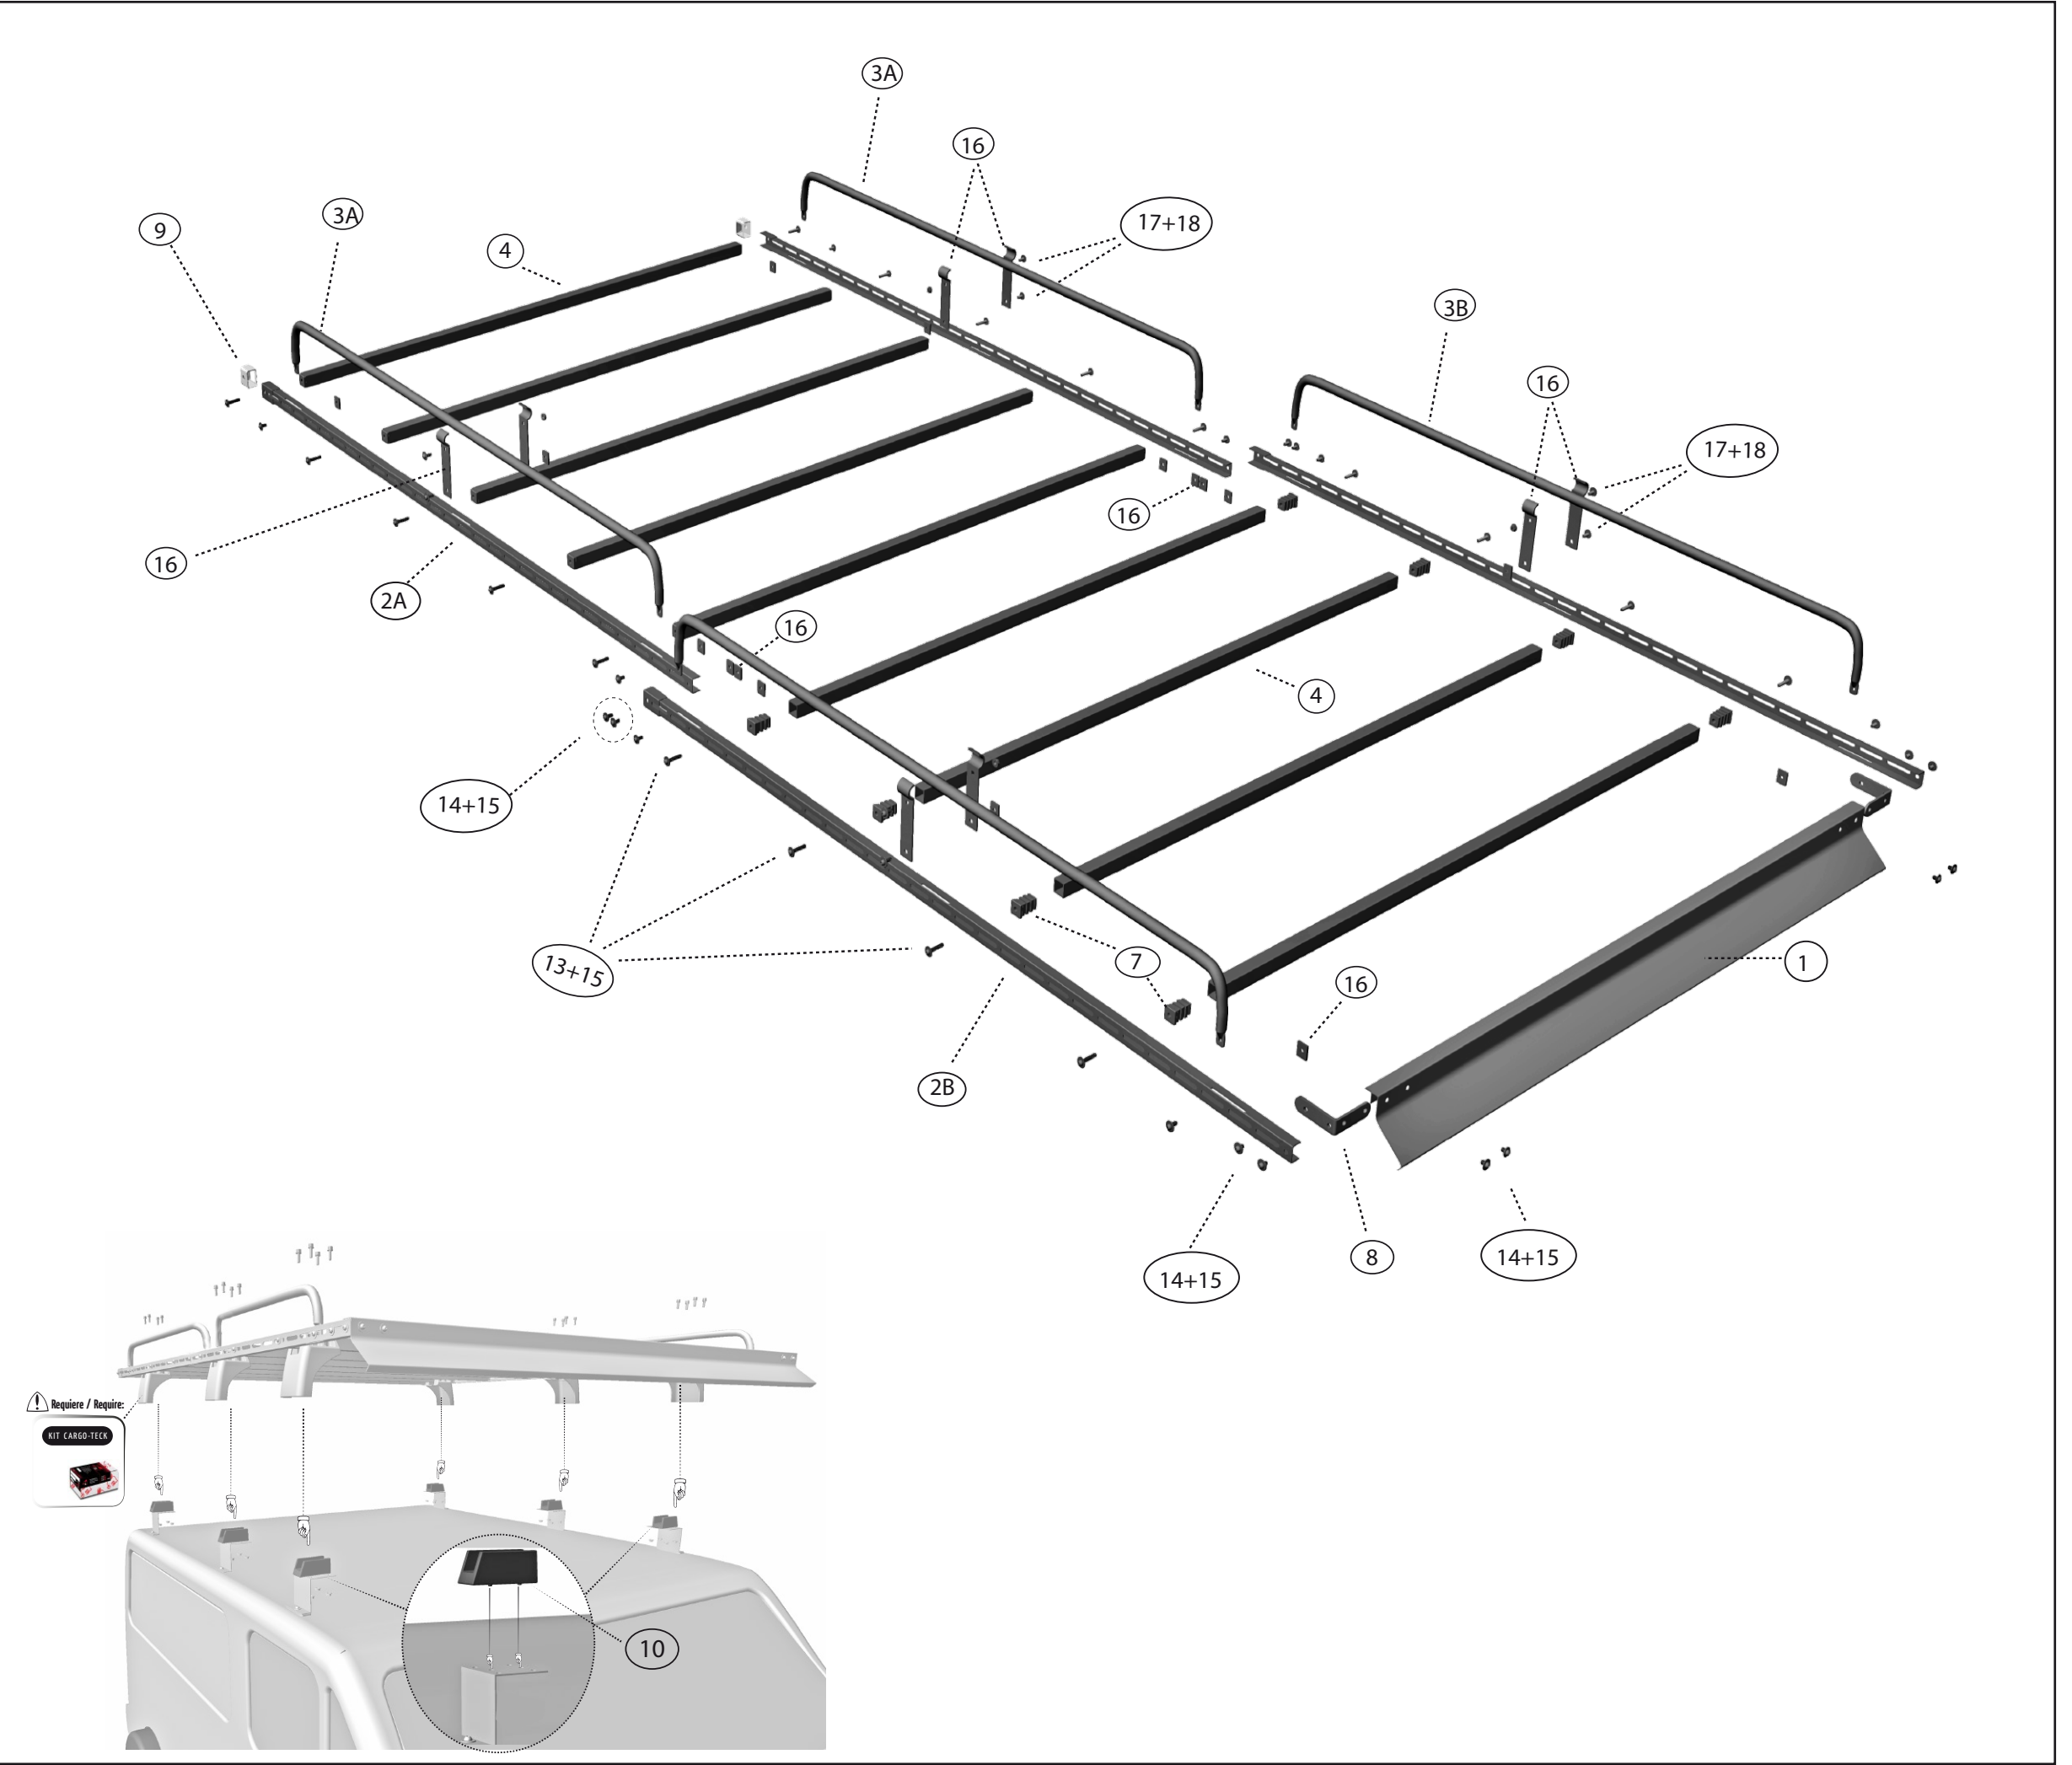

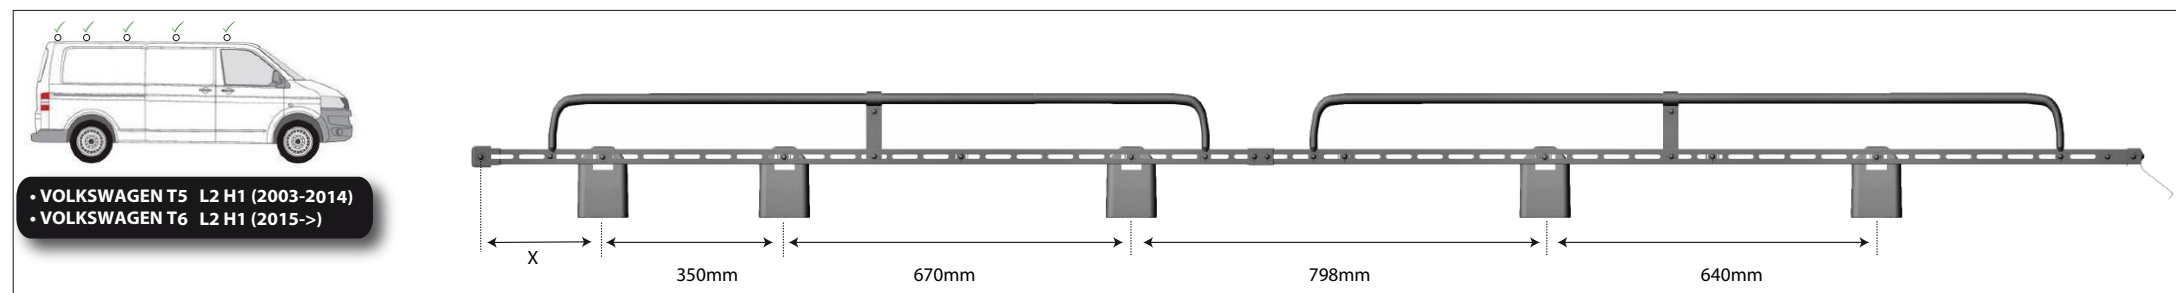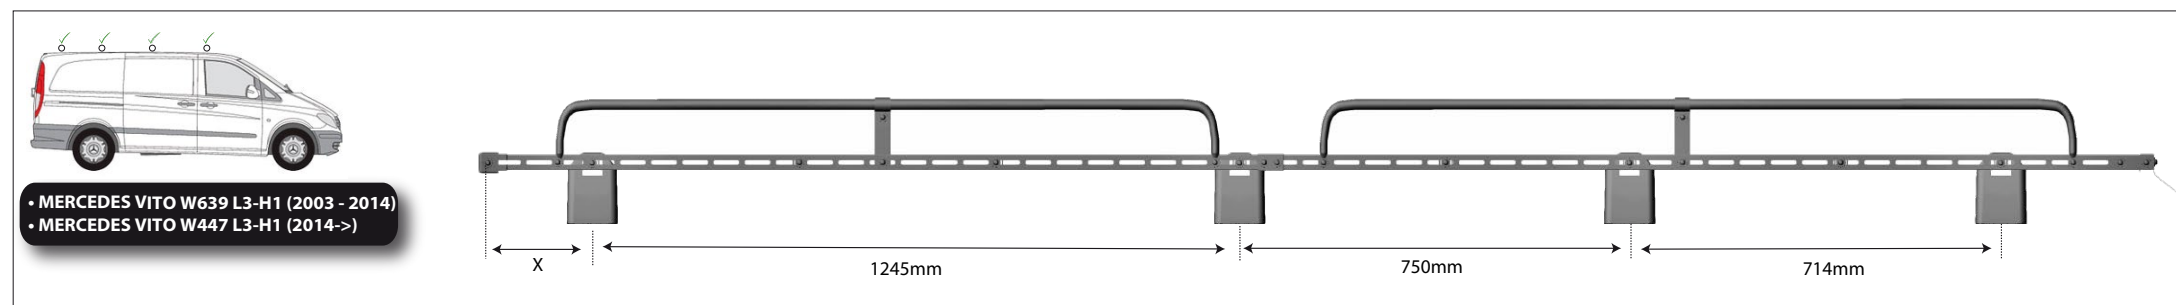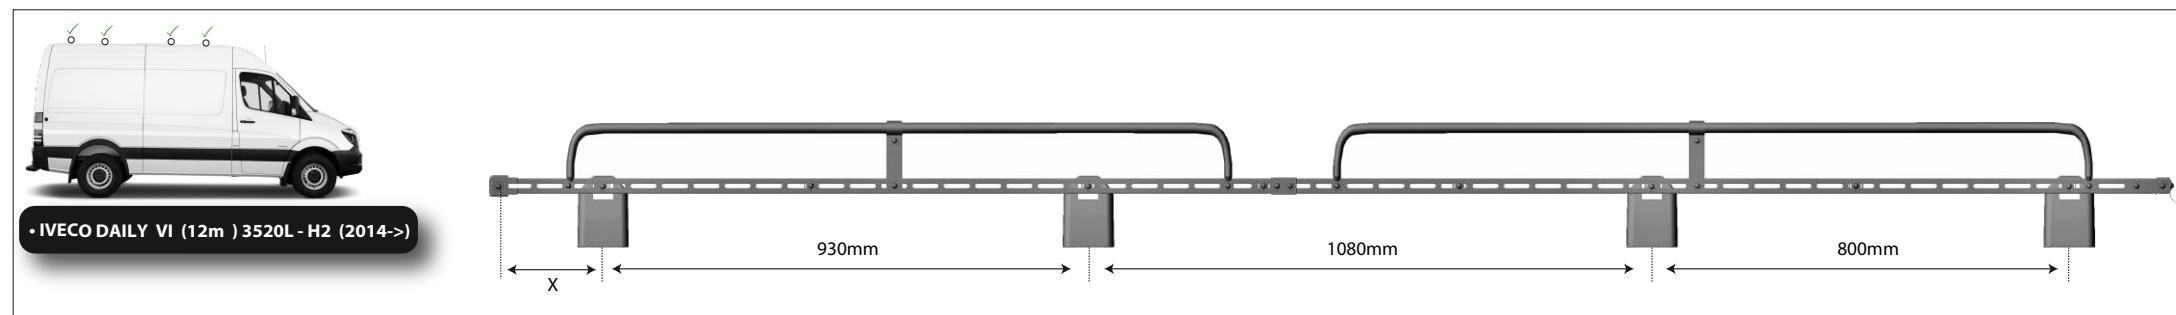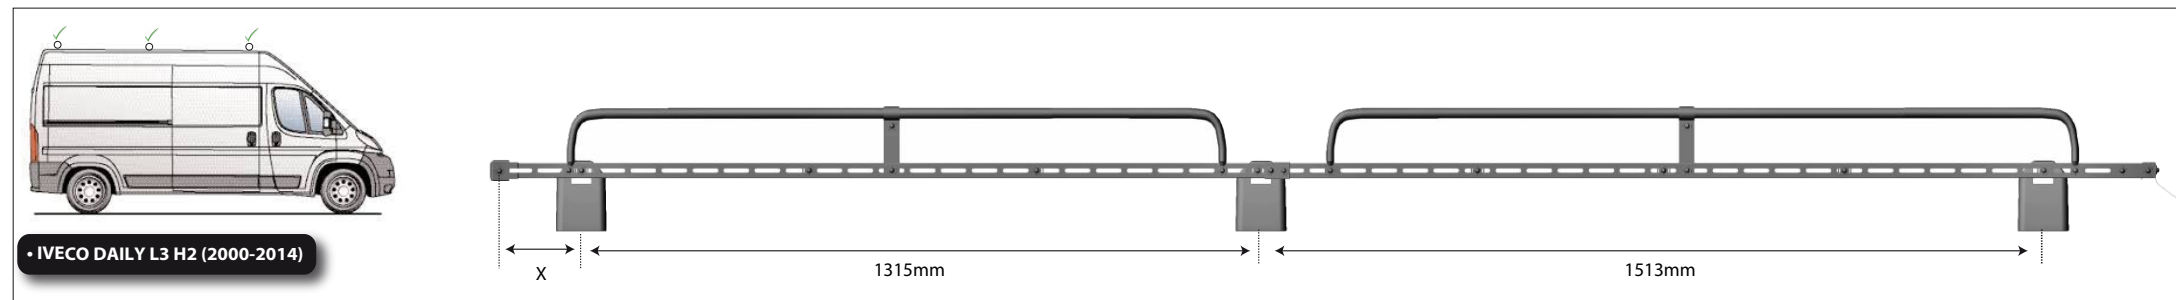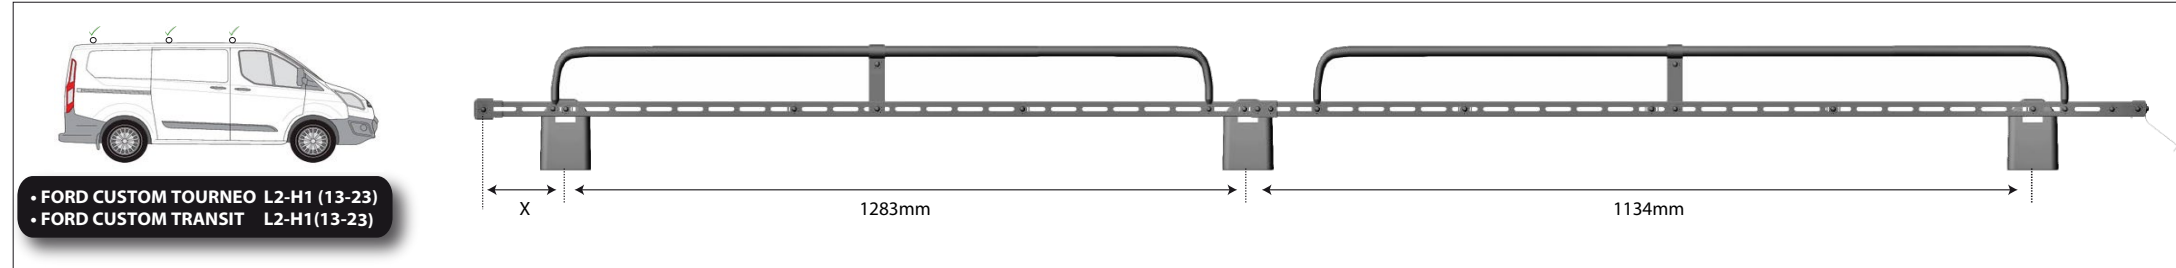


→
Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone



1

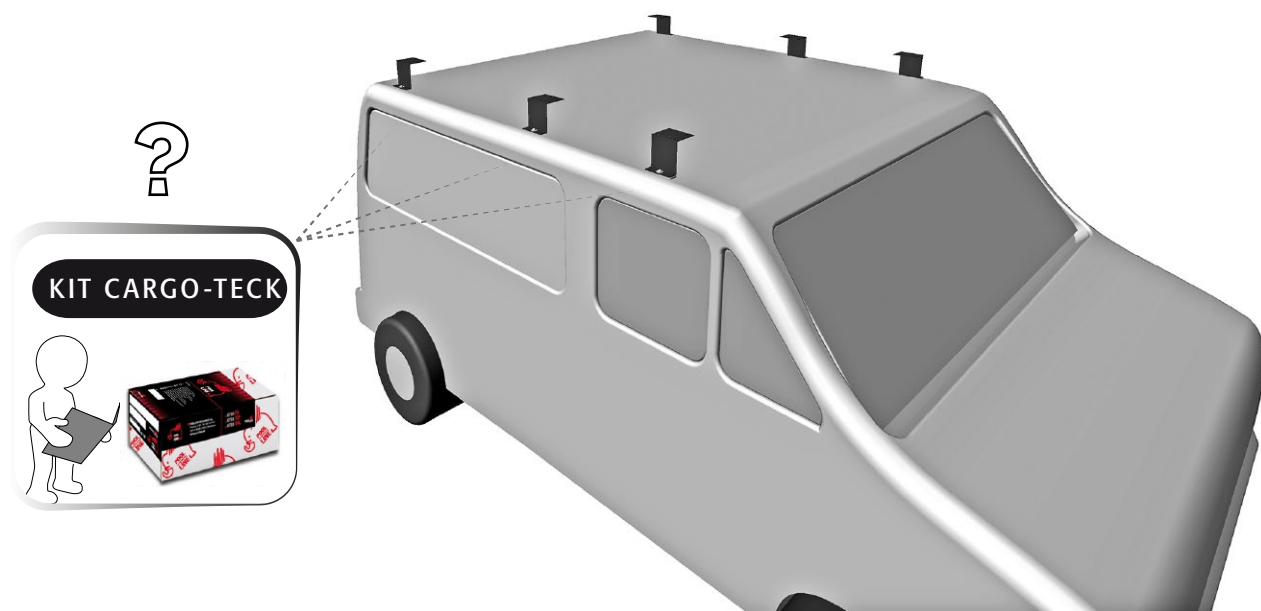


2

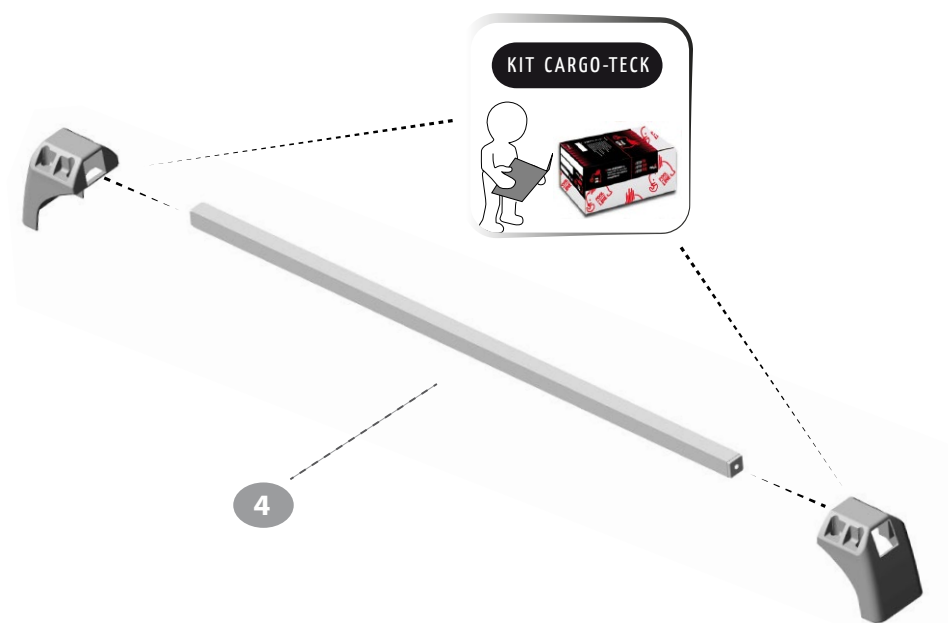


3

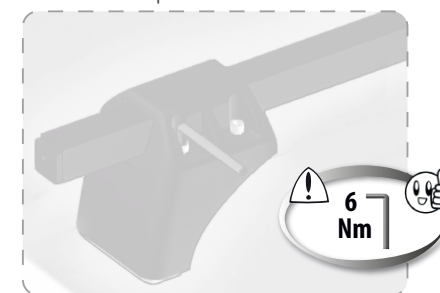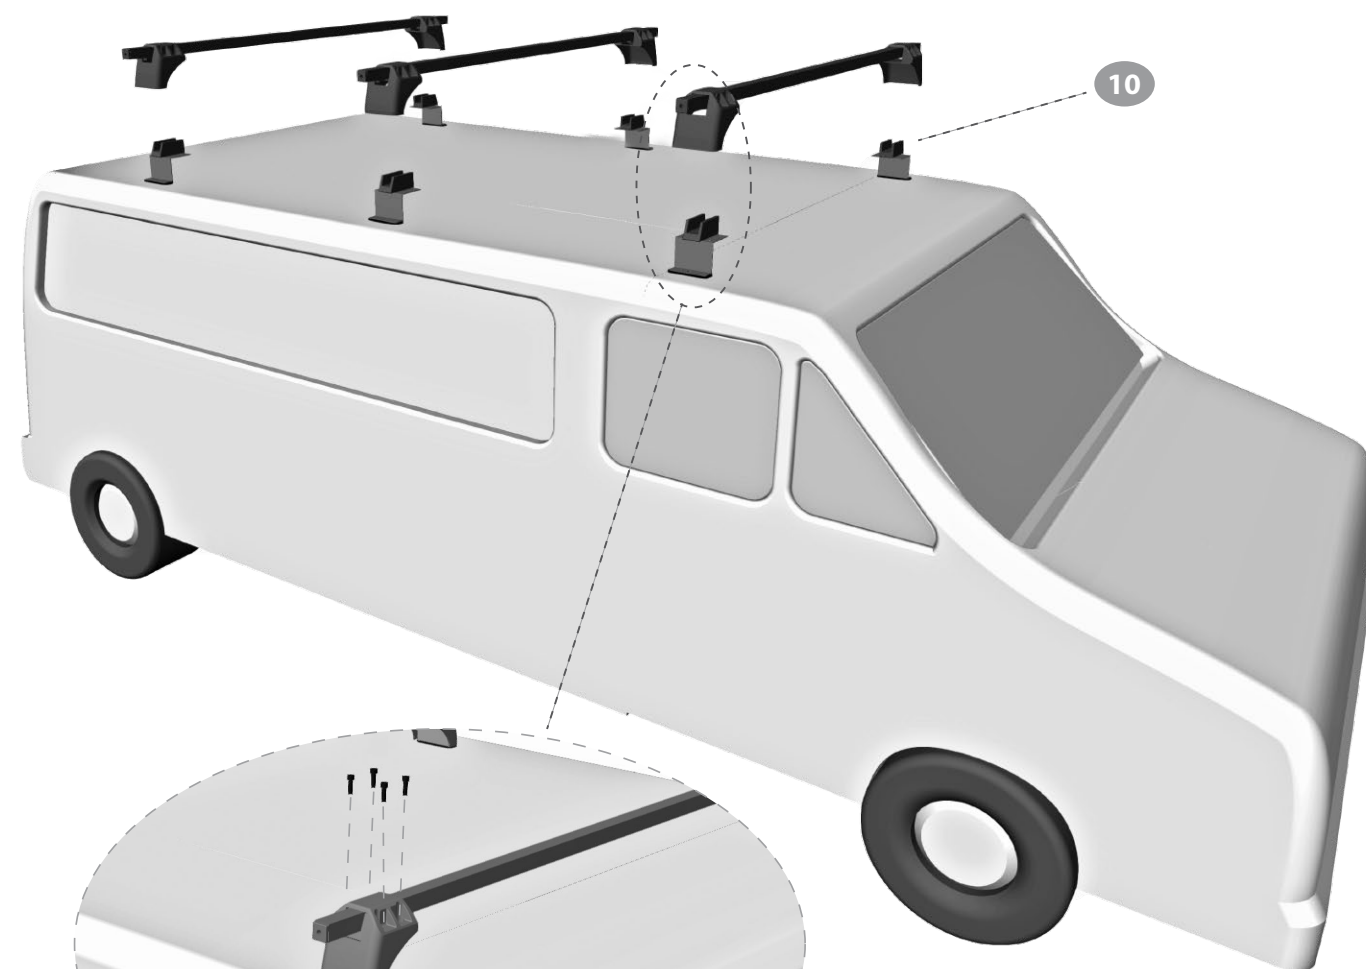


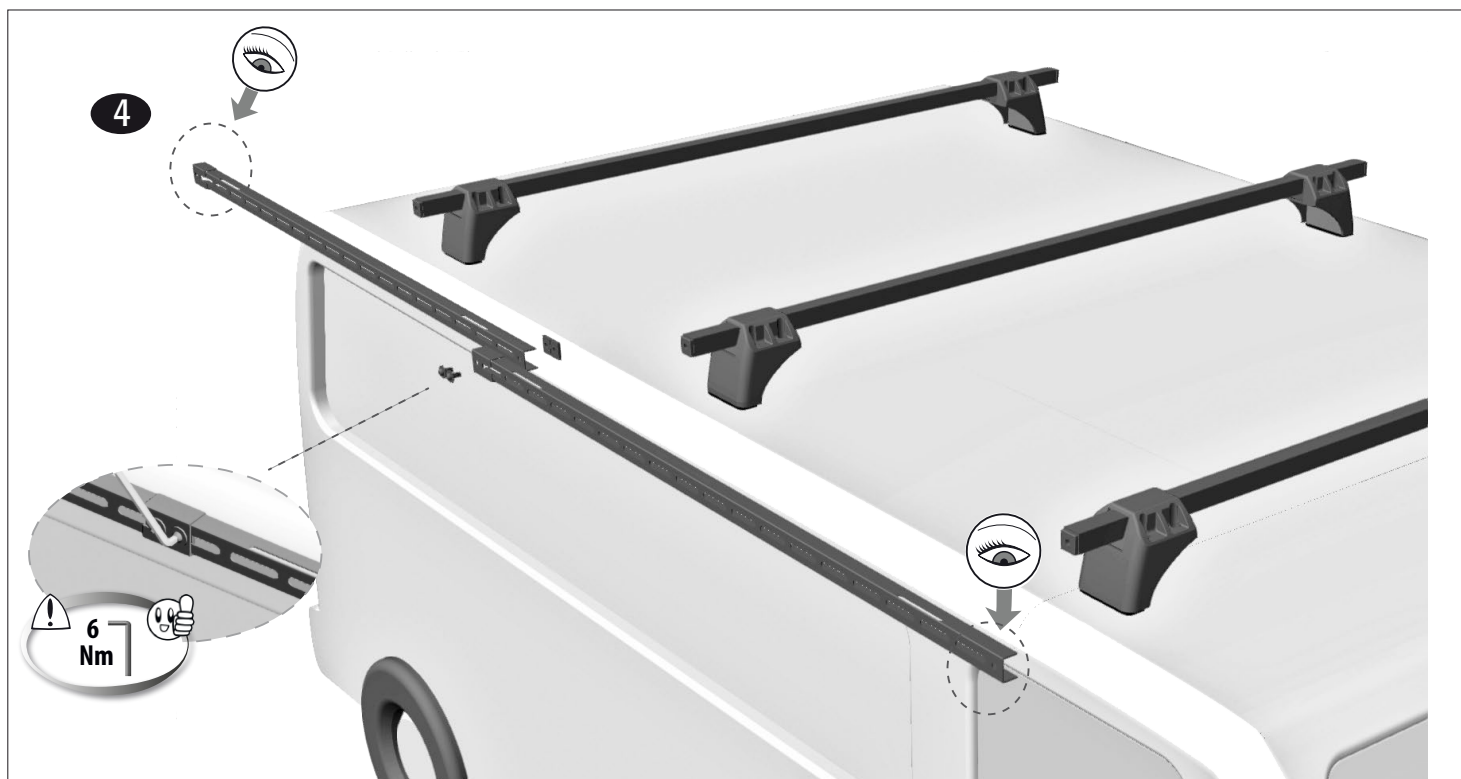


5

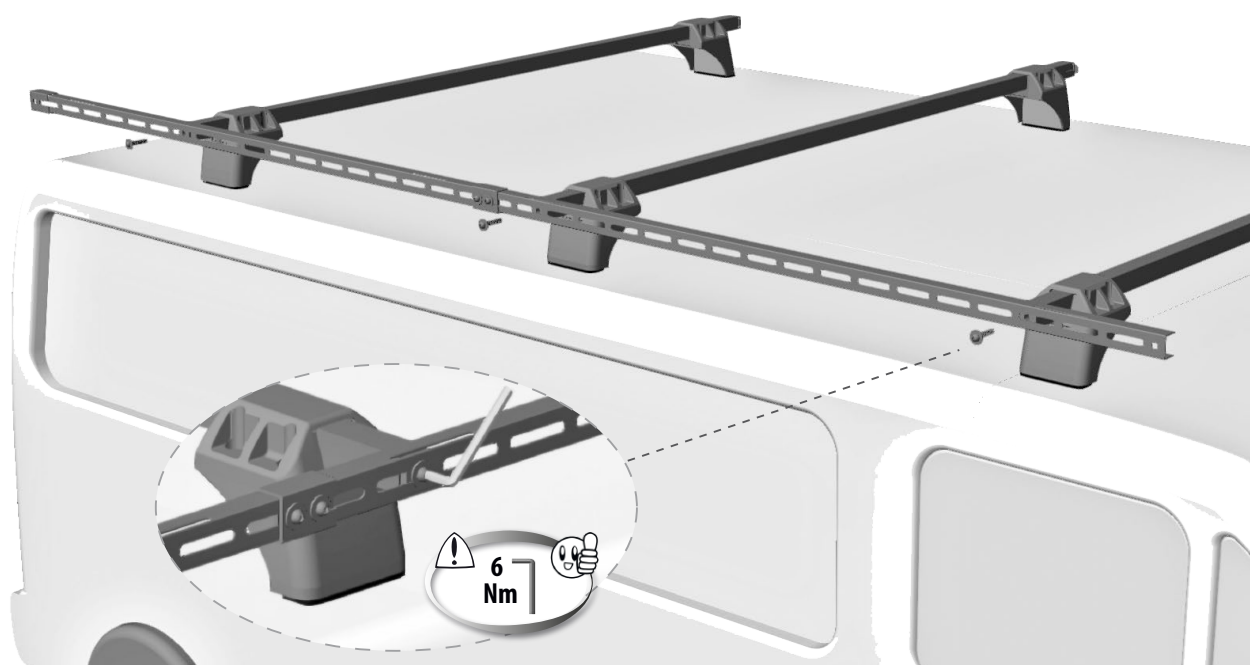


6

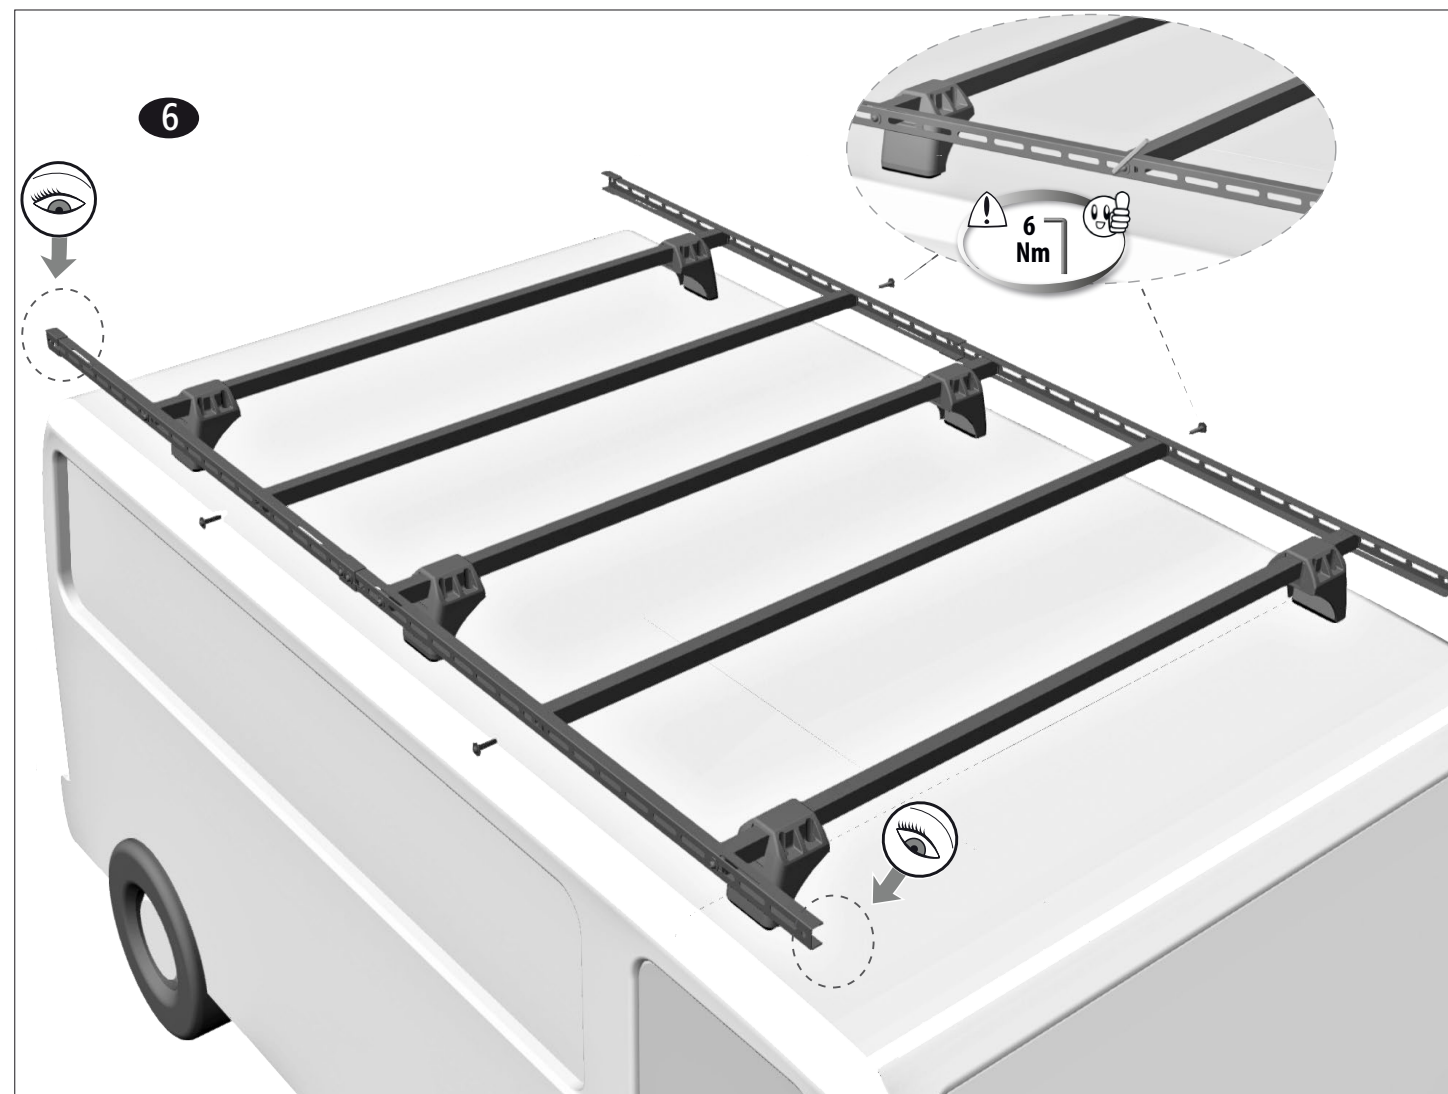



7






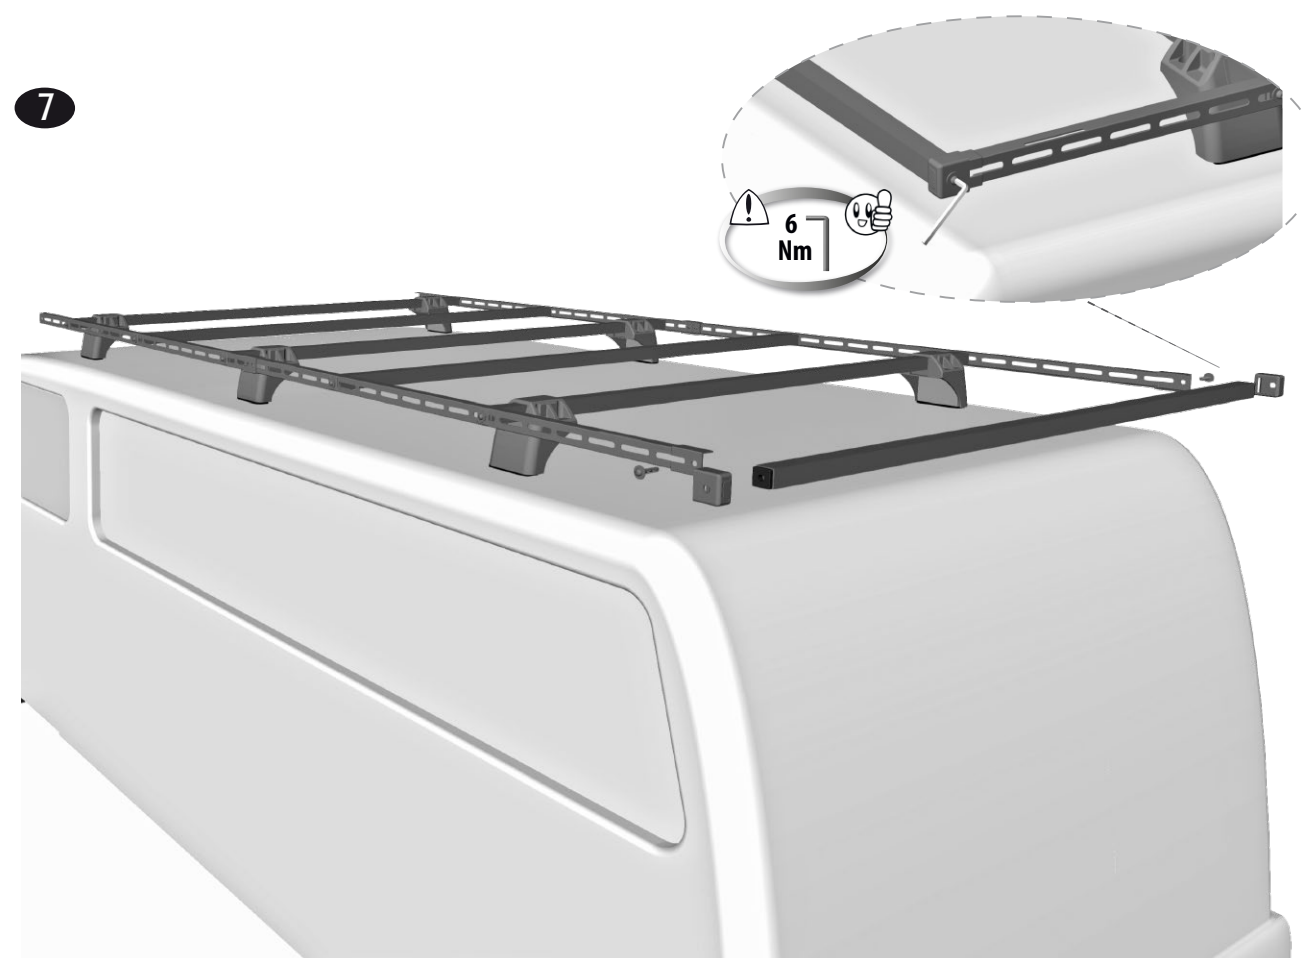



8

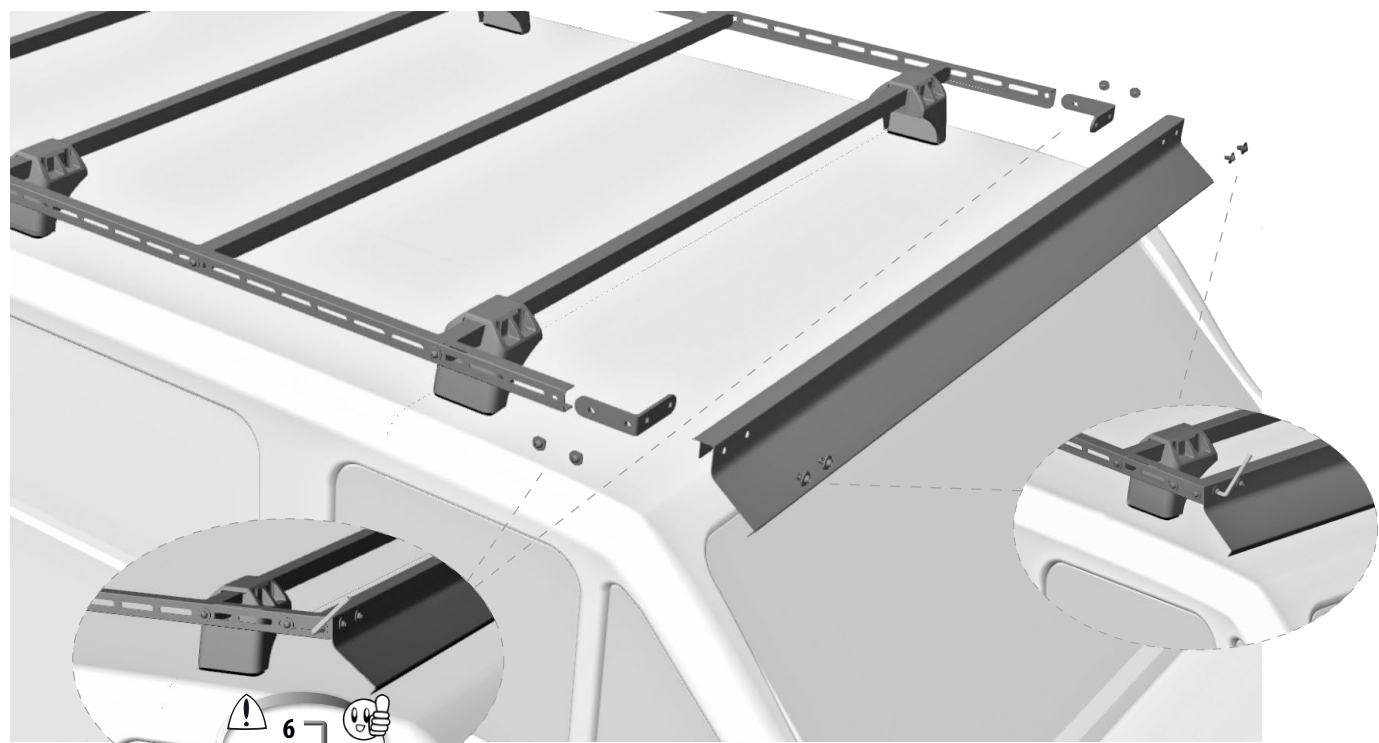


9

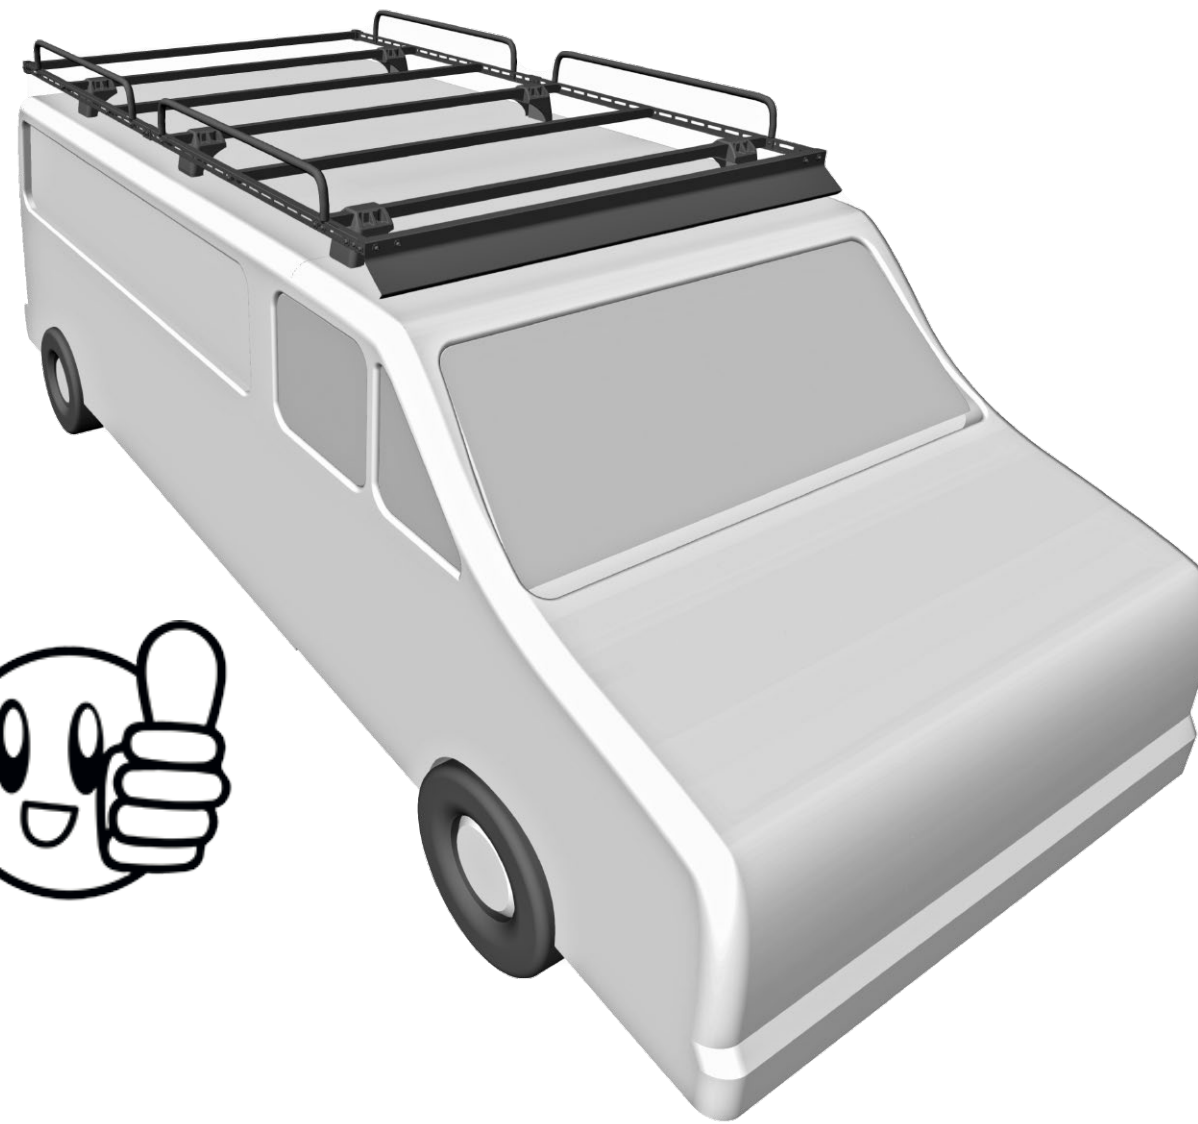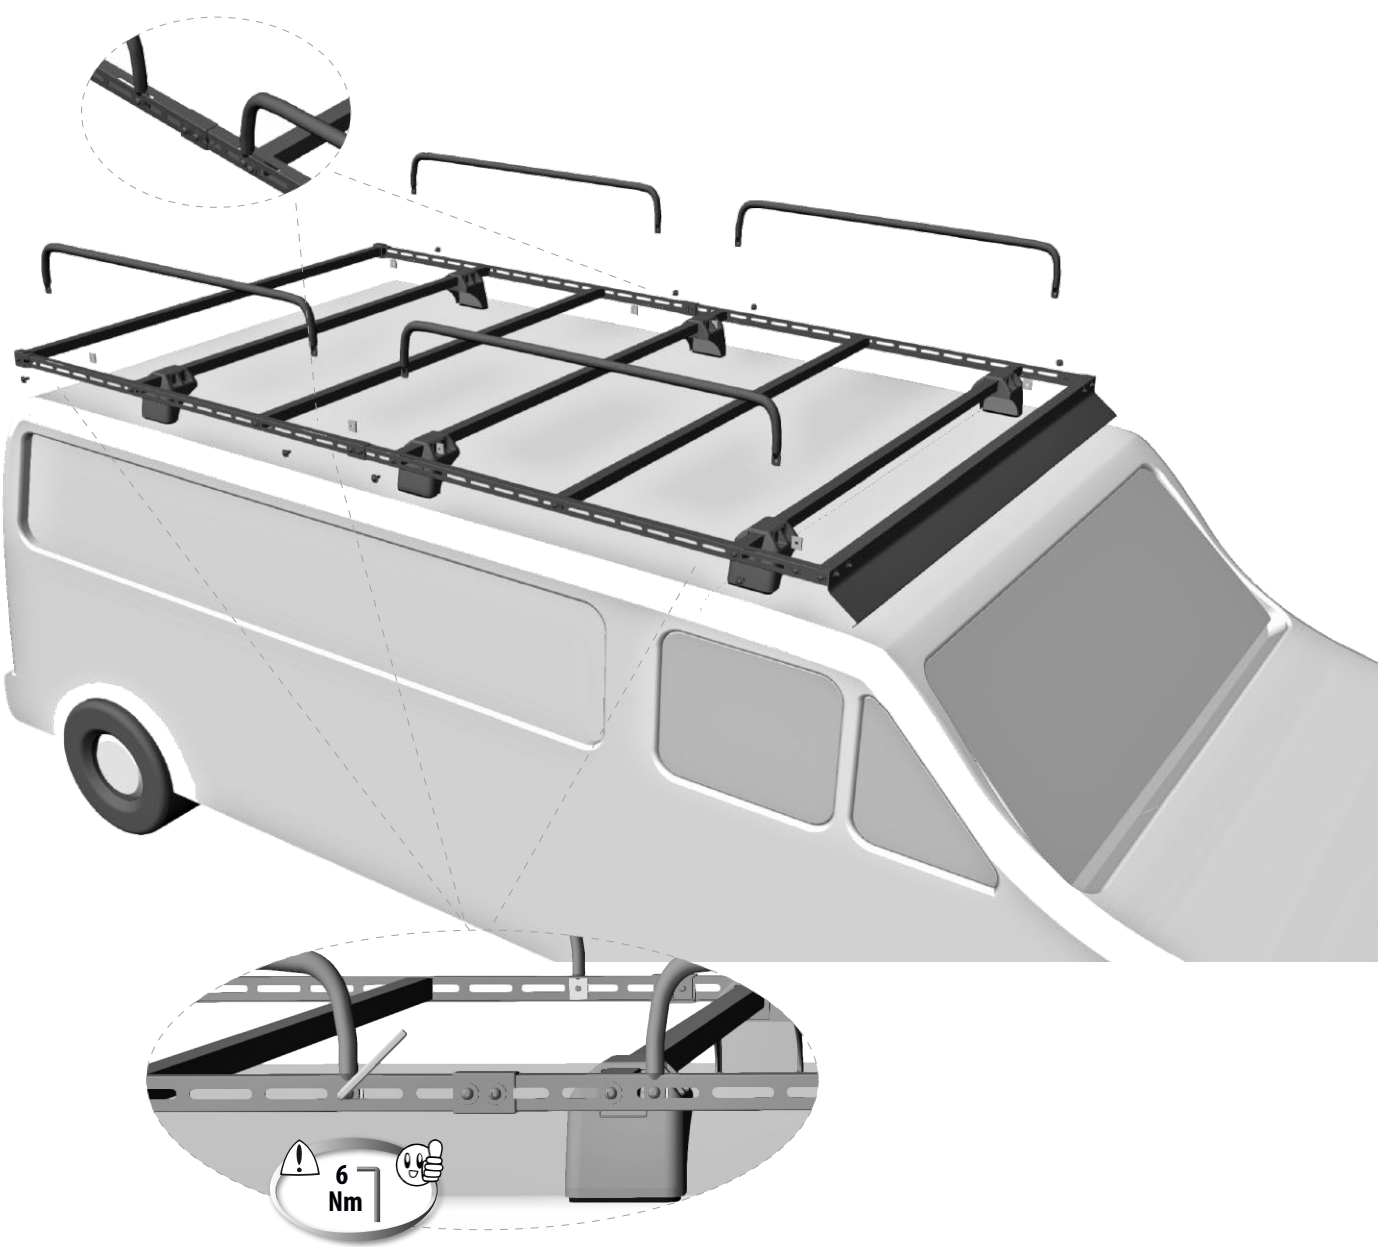

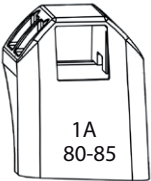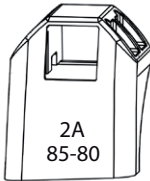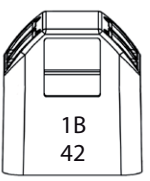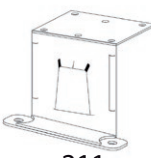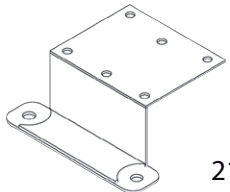N			Q			Q
1	 1A 80-85	 2A 85-80	2+2	 1B 42		4
2	 211	 212	2+2	 213		4
3						16
4						1

N	BO0060 x2	Q
8	 DIN912 M6x20	32
9	 DIN125 Ø6	32

N	BO0006 x 8	Q
10	 DIN912 M6x16	16
11	 DIN9021Ø6	16

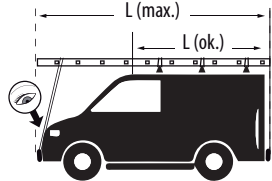

- E

Instrucciones de montaje

Kit de fijación
- C

Instruccions de muntatge

Kit de fixació
- GB

Assembly instrucctions

Fixation Kit
- F

Instruction de montage

Kit fixation
- D

Montageanleitung

Stützfuß-Kit
- PT

Instruções de montagem

Kit fixação
- I

Istruzioni di montaggio

Kit di fissaggio
- PL

Instrukcja montażu

Element mocujący
- CZ

Montážní návod

Fixační kit
- HU

Szerelési Utasítás

Rögzítő készlet
- RO

Instrucțiuni de montaj


Kit de fixare
- HR

Detaljne upute

Kit za montažu
- TU


Öncelikli montaj

Montaj kiti

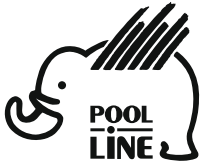



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042



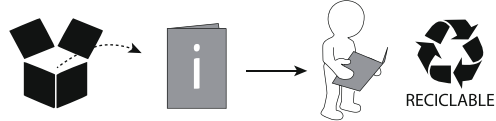


121971

Rv: 07/2023

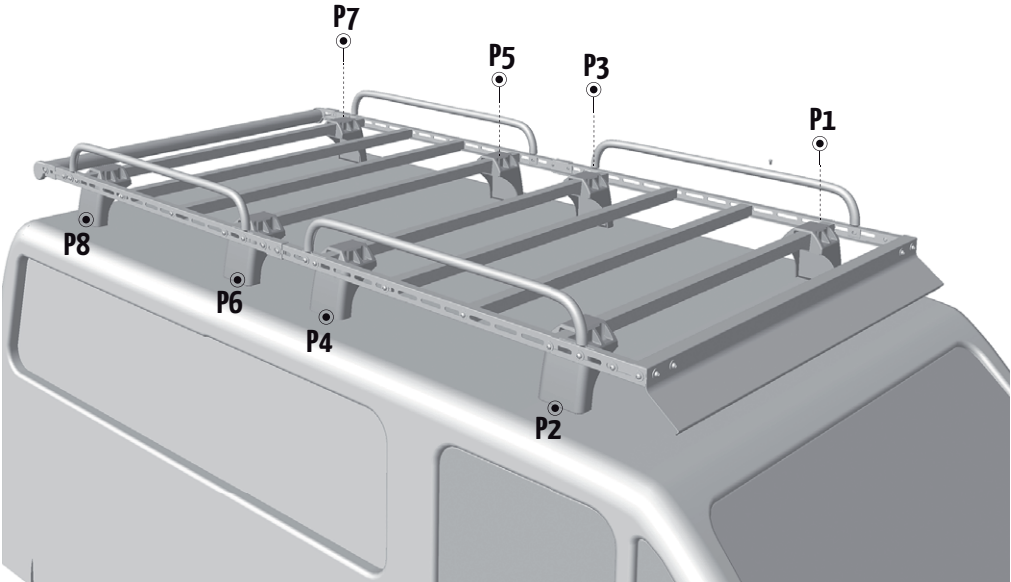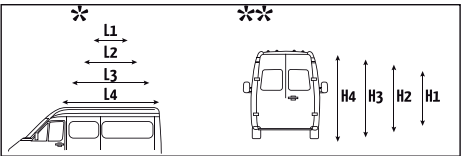

	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8
MERCEDES												
Vito W639	L1	H1	03-14	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A
Vito W639	L2	H1	03-14	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A
Vito W639	L3	H1	03-14	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A
Vito W447	L1	H1	14-	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A
Vito W447	L2	H1	14-	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A
Vito W447	L3	H1	14-	B00006	212+1A	211+1A	213+1B	213+1B	213+1B	213+1B	211+1A	212+1A

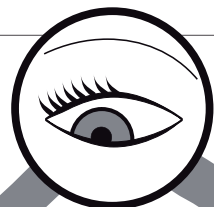
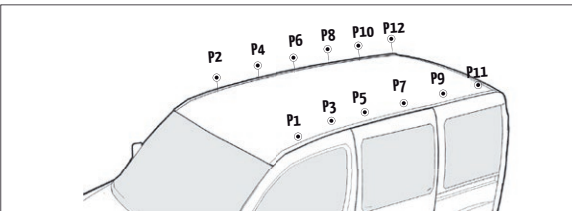
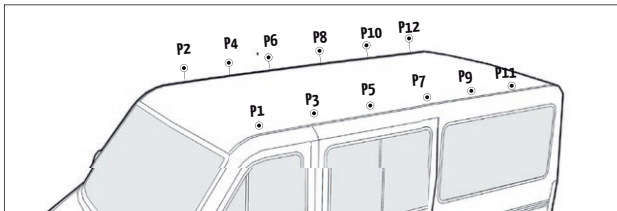


P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
XXX	XXX			XXX	XXX					XXX	XXX
XXX	XXX			XXX	XXX					XXX	XXX
XXX	XXX			XXX	XXX					XXX	XXX
XXX	XXX			XXX	XXX					XXX	XXX
XXX	XXX			XXX	XXX					XXX	XXX
XXX	XXX			XXX	XXX					XXX	XXX
XXX	XXX			XXX	XXX					XXX	XXX
XXX	XXX			XXX	XXX					XXX	XXX
XXX	XXX			XXX	XXX					XXX	XXX
XXX	XXX			XXX	XXX					XXX	XXX

Pag. 1

2

1

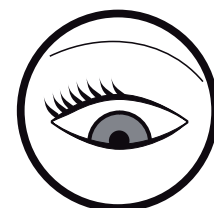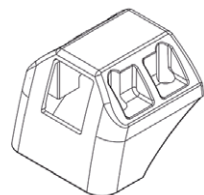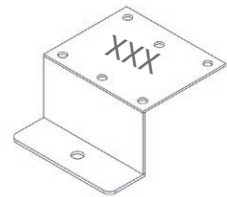

	10	P1	P1
OX	B0000XX		
OX-	B0000XX		
	B0000X		




Pag. 1

10

2

11

3

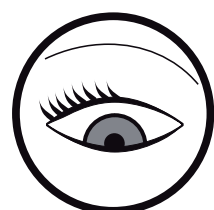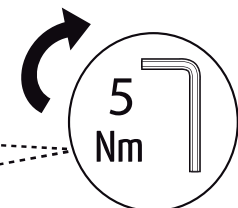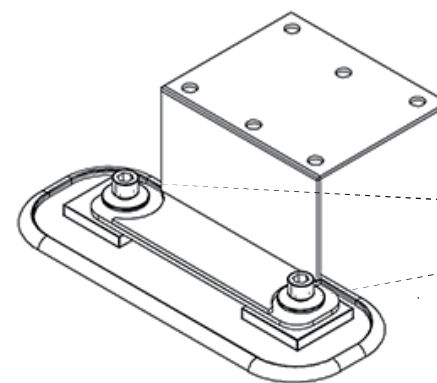

	10	P1	P1
OX	B0000XX		
OX-	B0000XX		
	B0000X		





Pag. 1

10

2

11

3

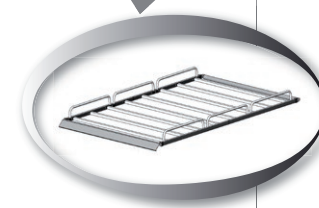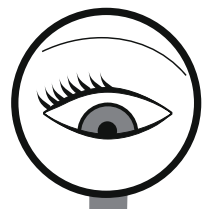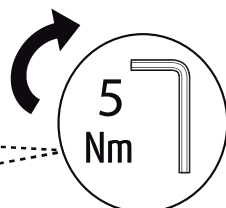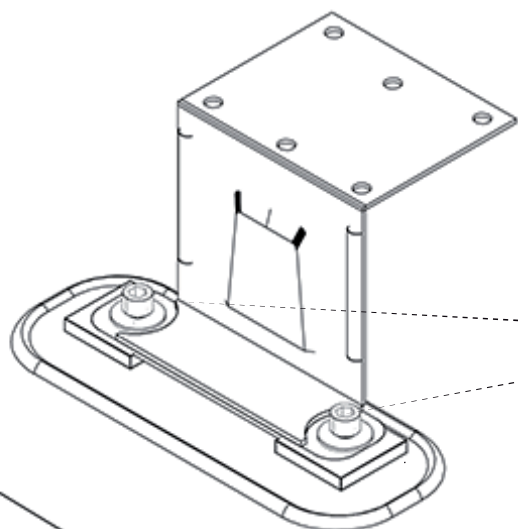

8

9

1

2

