


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

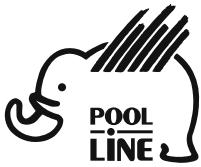


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net





200 KG.
MAX.

Nº HOMOLOGACIÓN: E9 26R-03.1042




123615

Rv: 06/2020

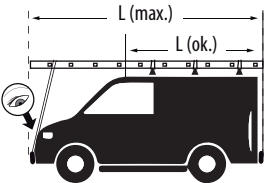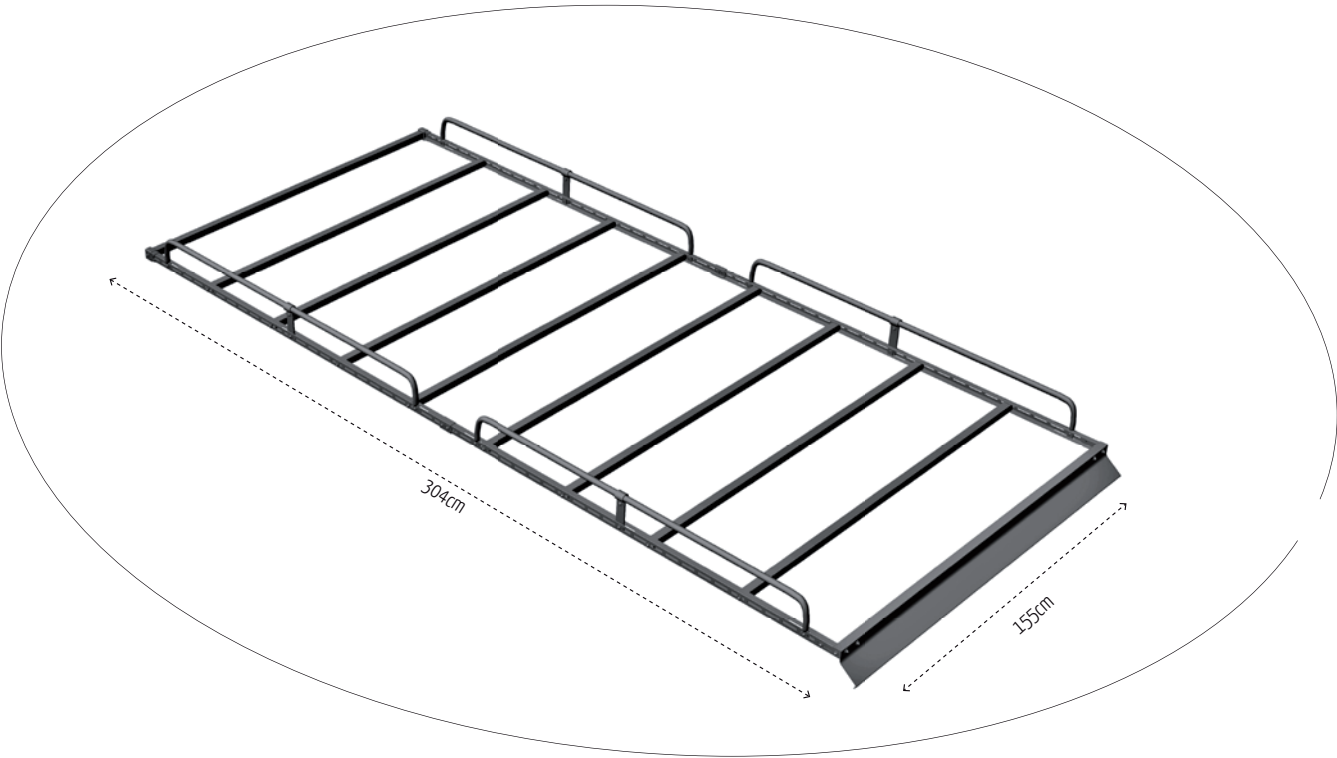

N		Q
1	 S-150	1
2	 L-1540	4
3	 B-1262	4
4	 T-1535	9
7		18
8		2
9		2
10		8
11		1
12	 CHA-M8	16
13	 ISO 7380 M8x40	18
14	 ISO 7380 M8x16	24
15	 DIN 125 Ø 8	42
16		8
17	 DIN 603 M6x12	4
18	 DIN 6923 M6	4

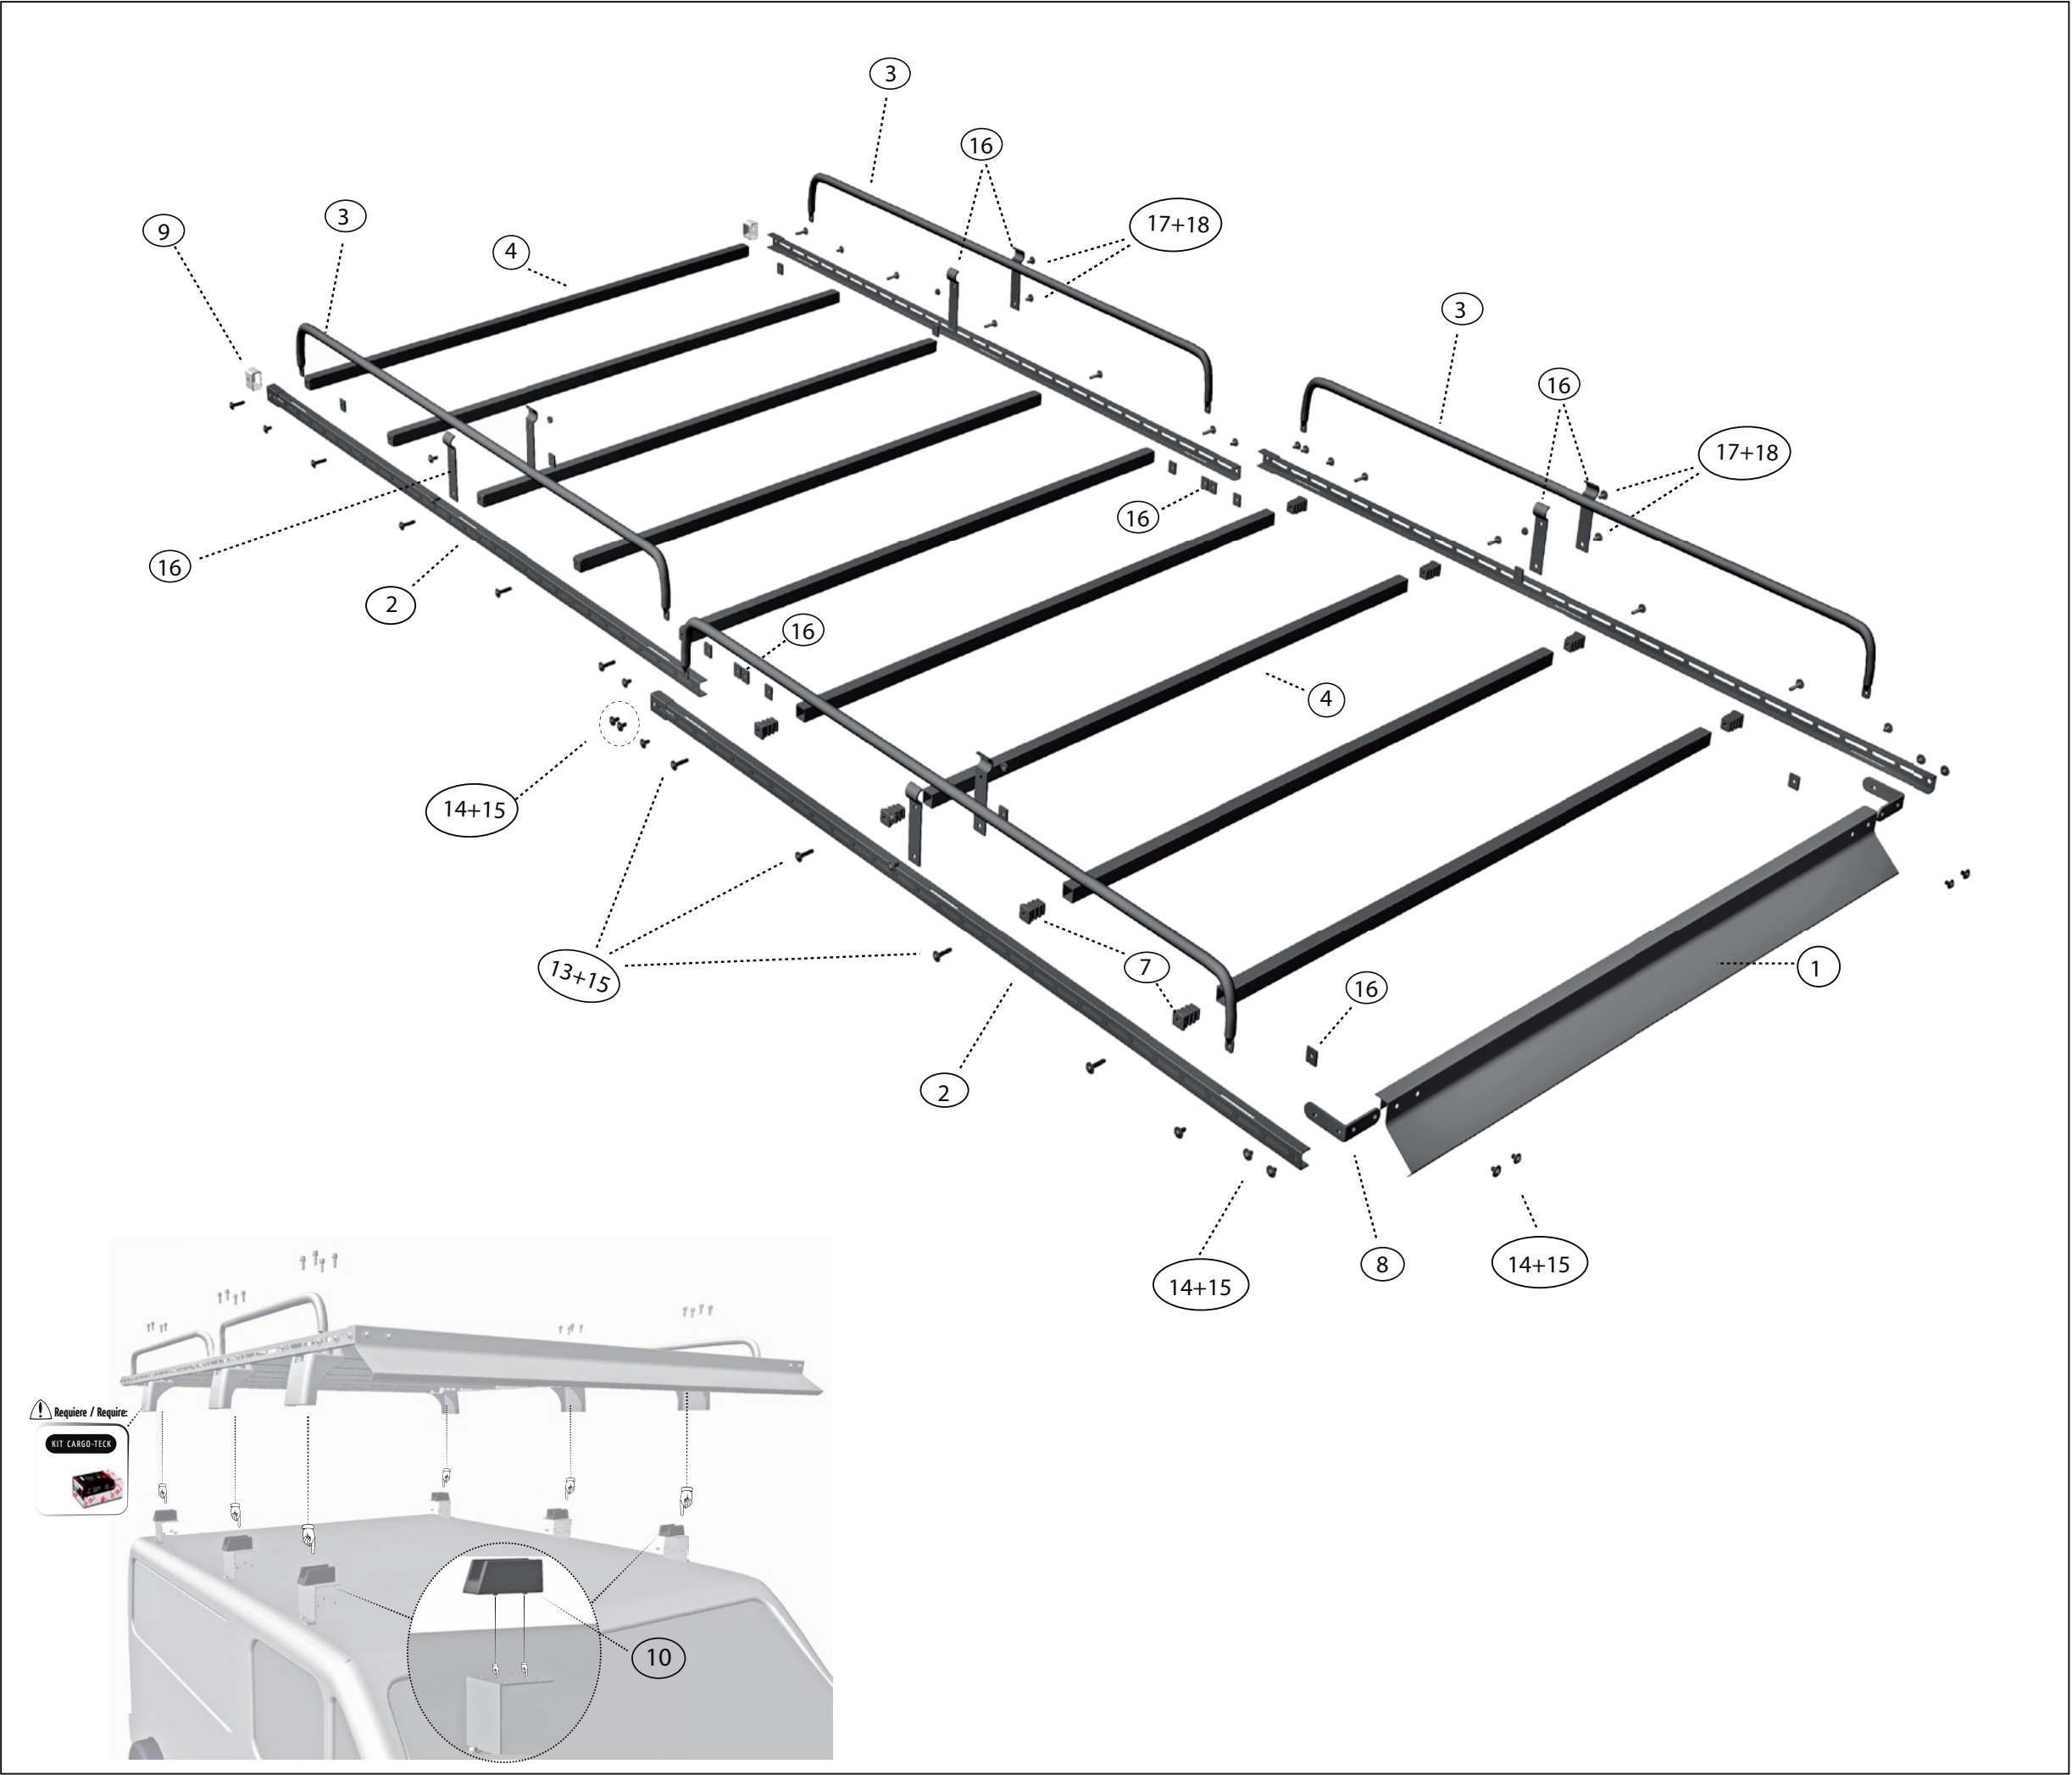




KIT CARGO-TECK




1



(x) (x) (x) (x) (x) (x) (x)

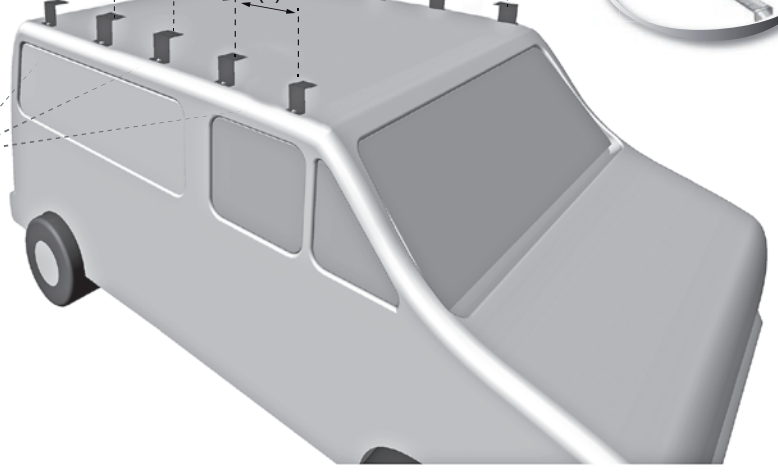



2

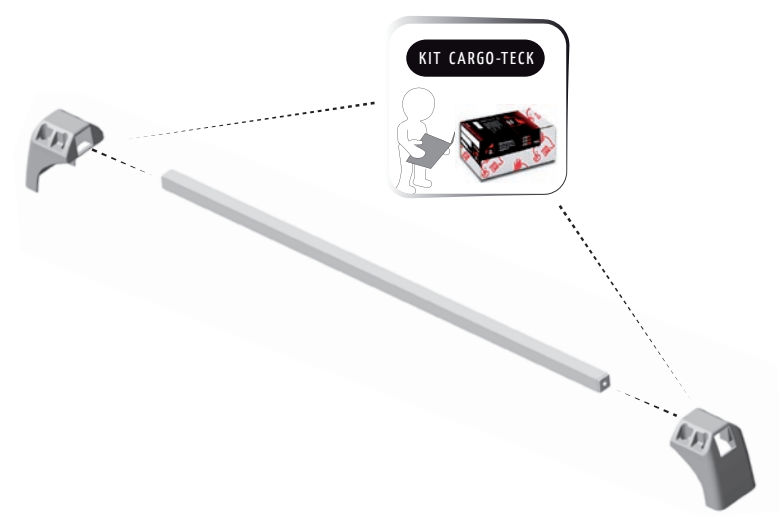


3

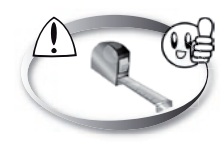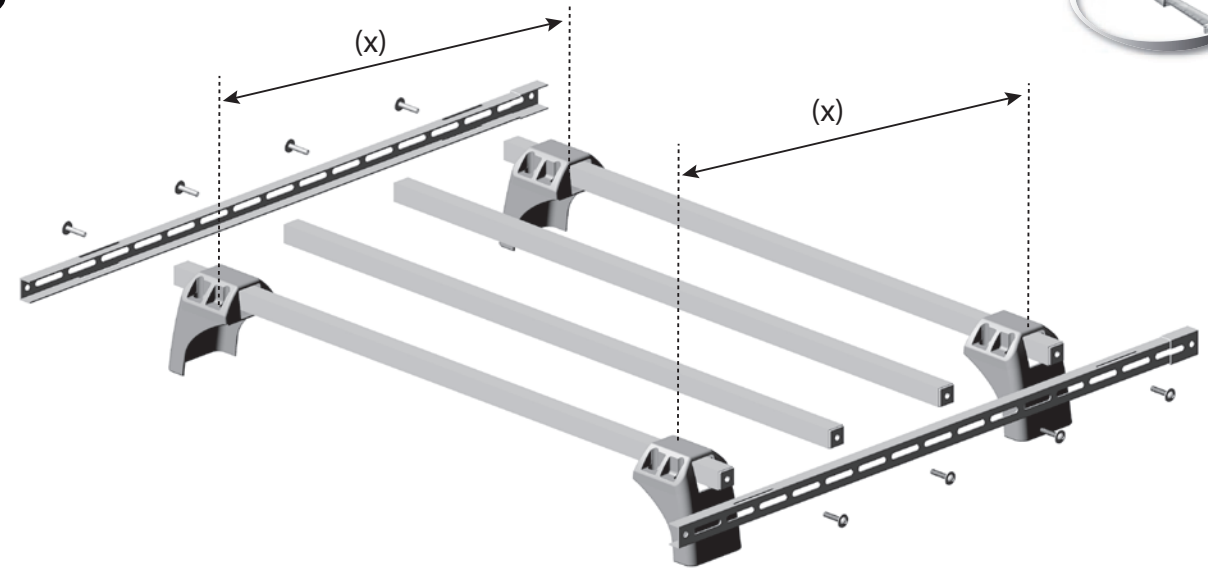

4

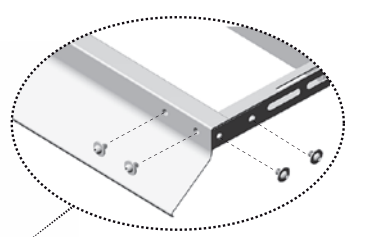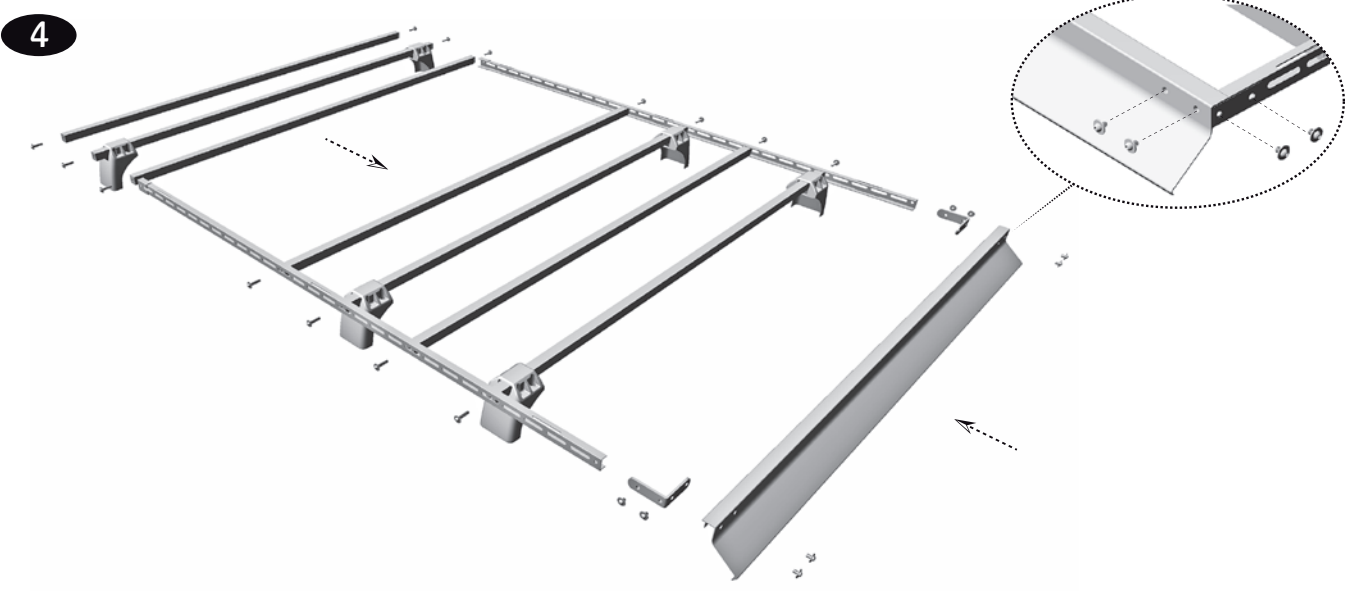


5

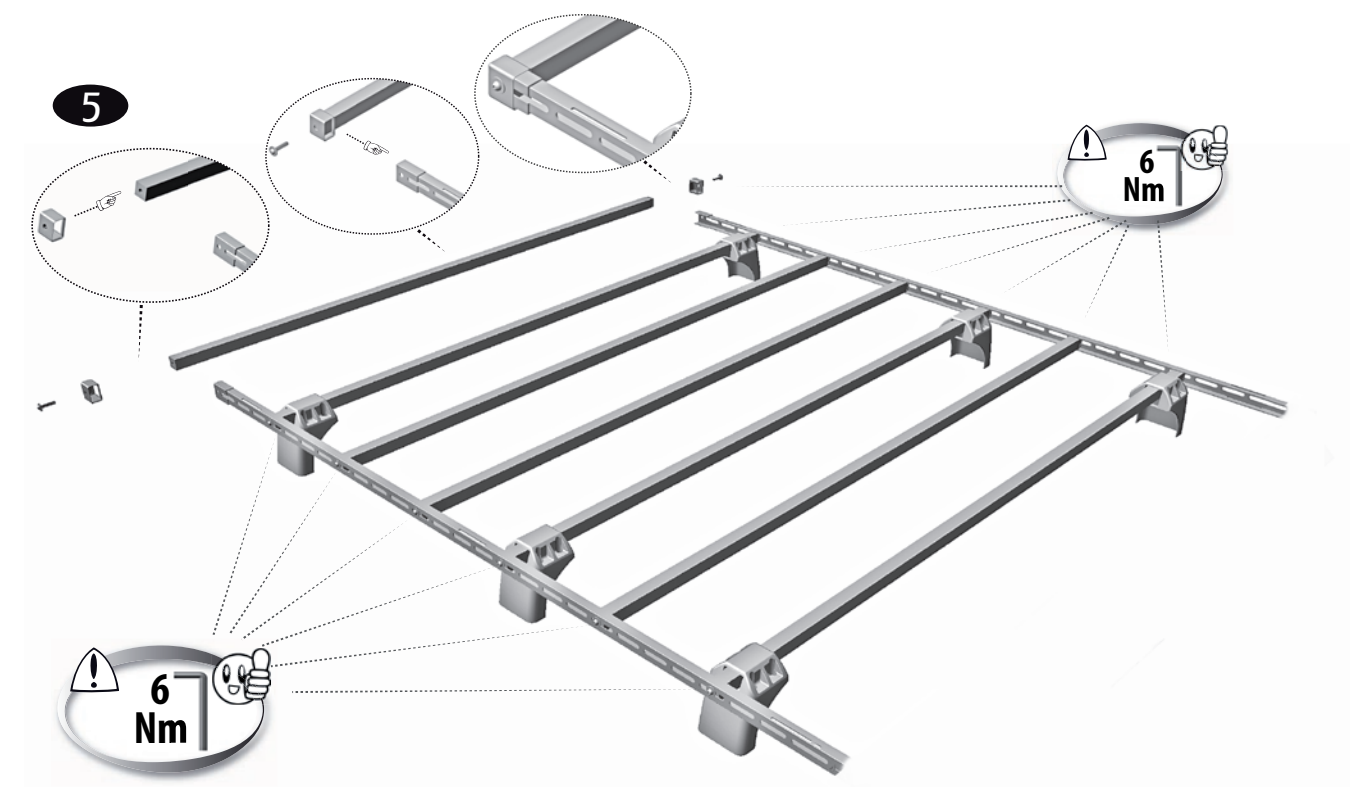


6 Nm

6 Nm




6

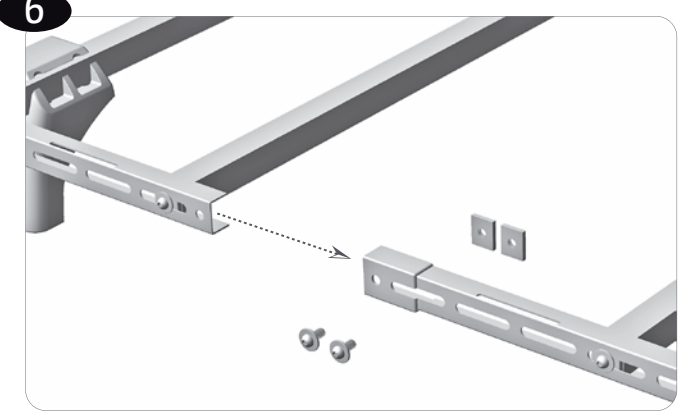

7


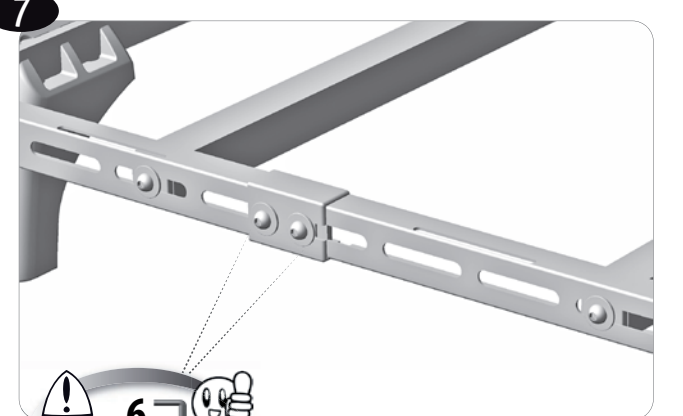


6 Nm

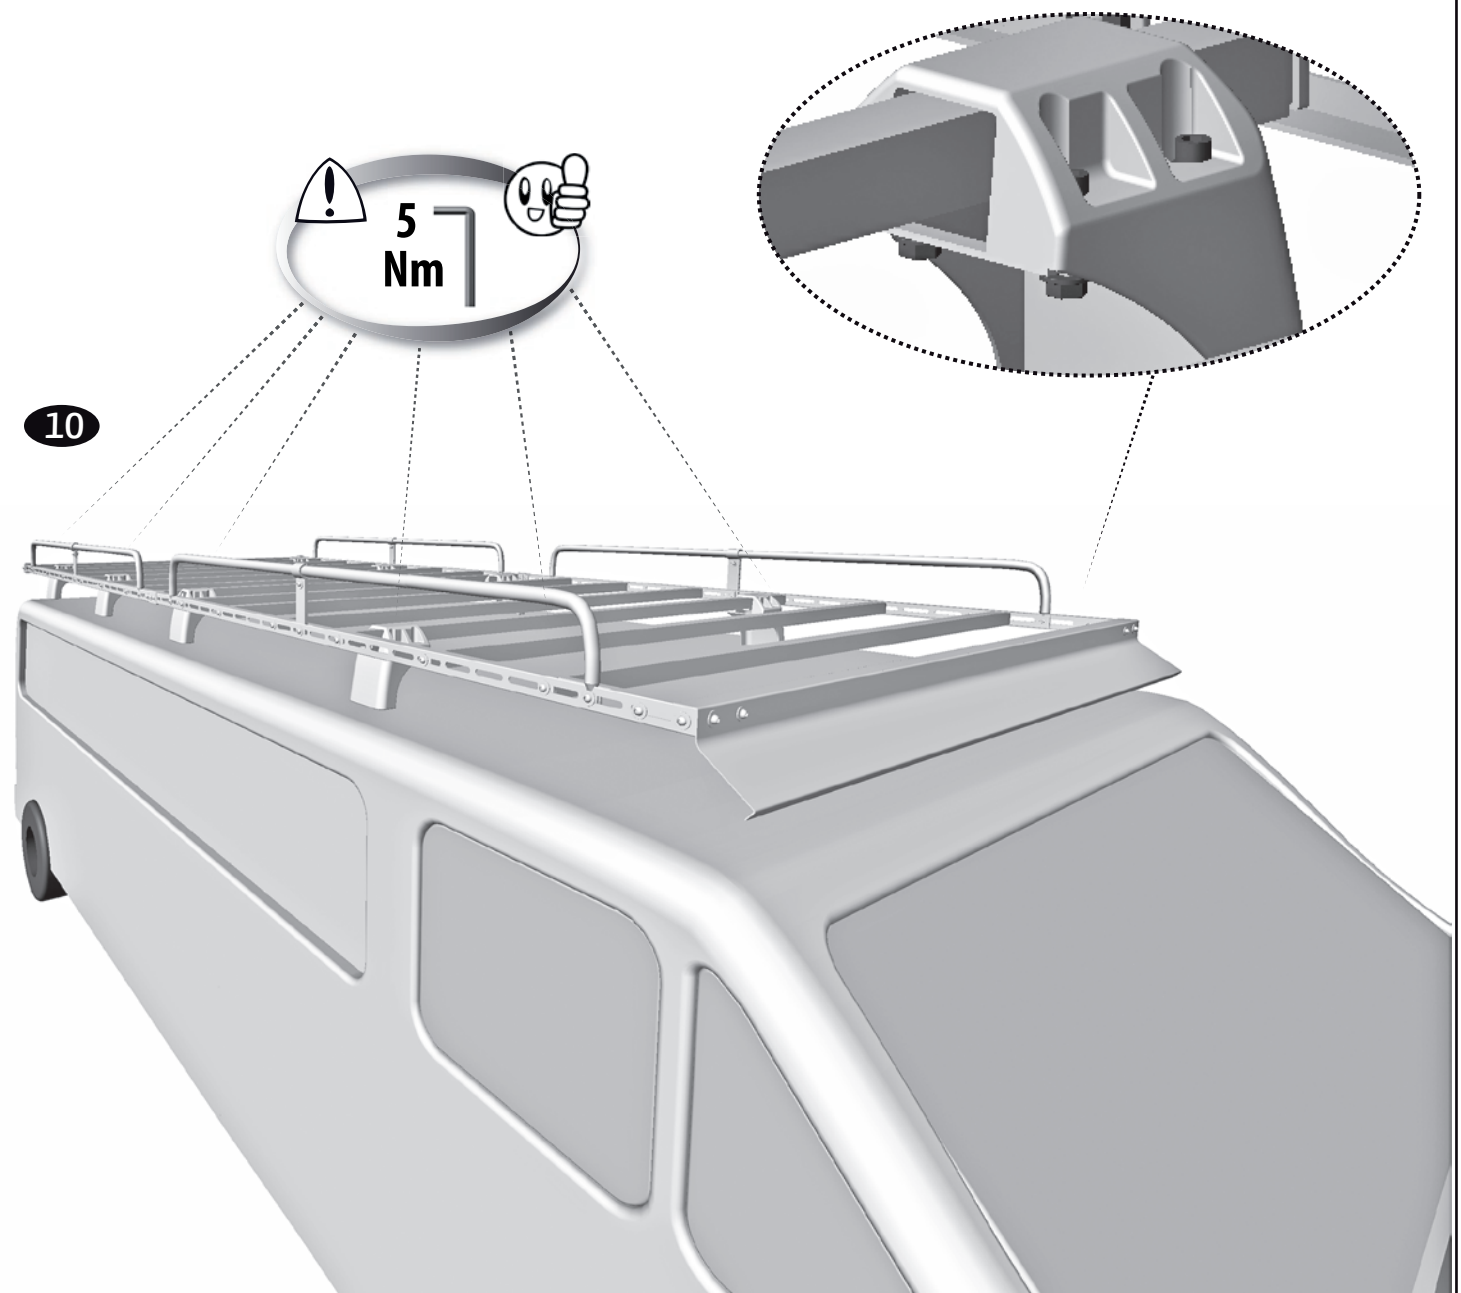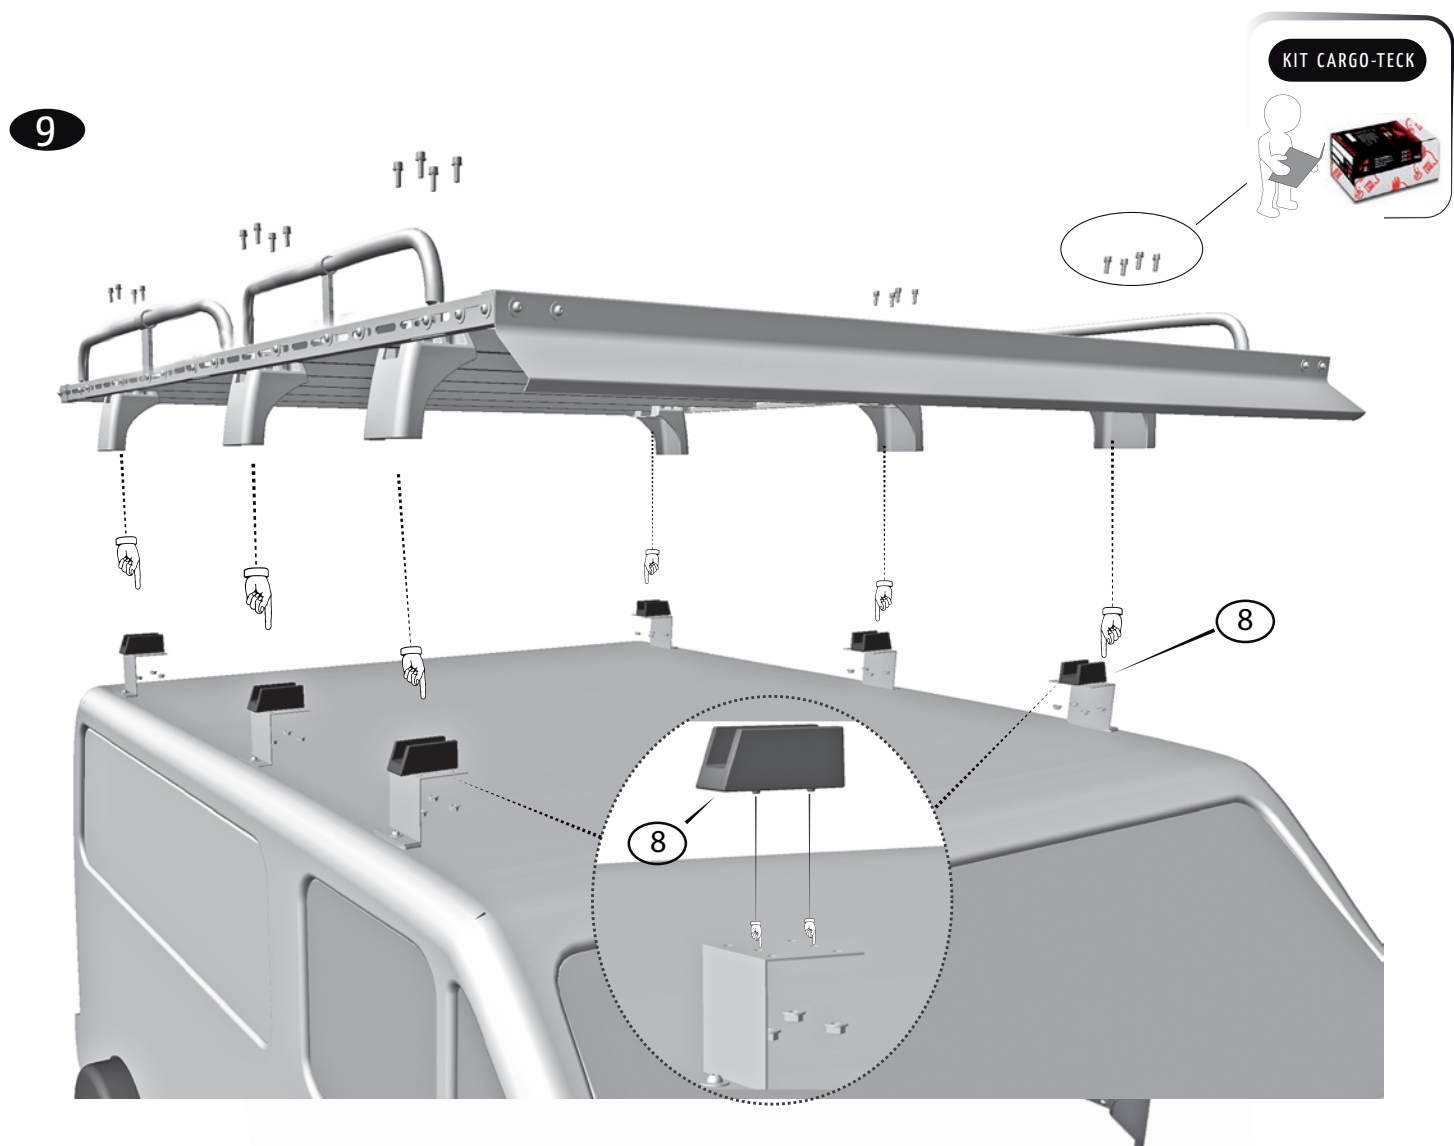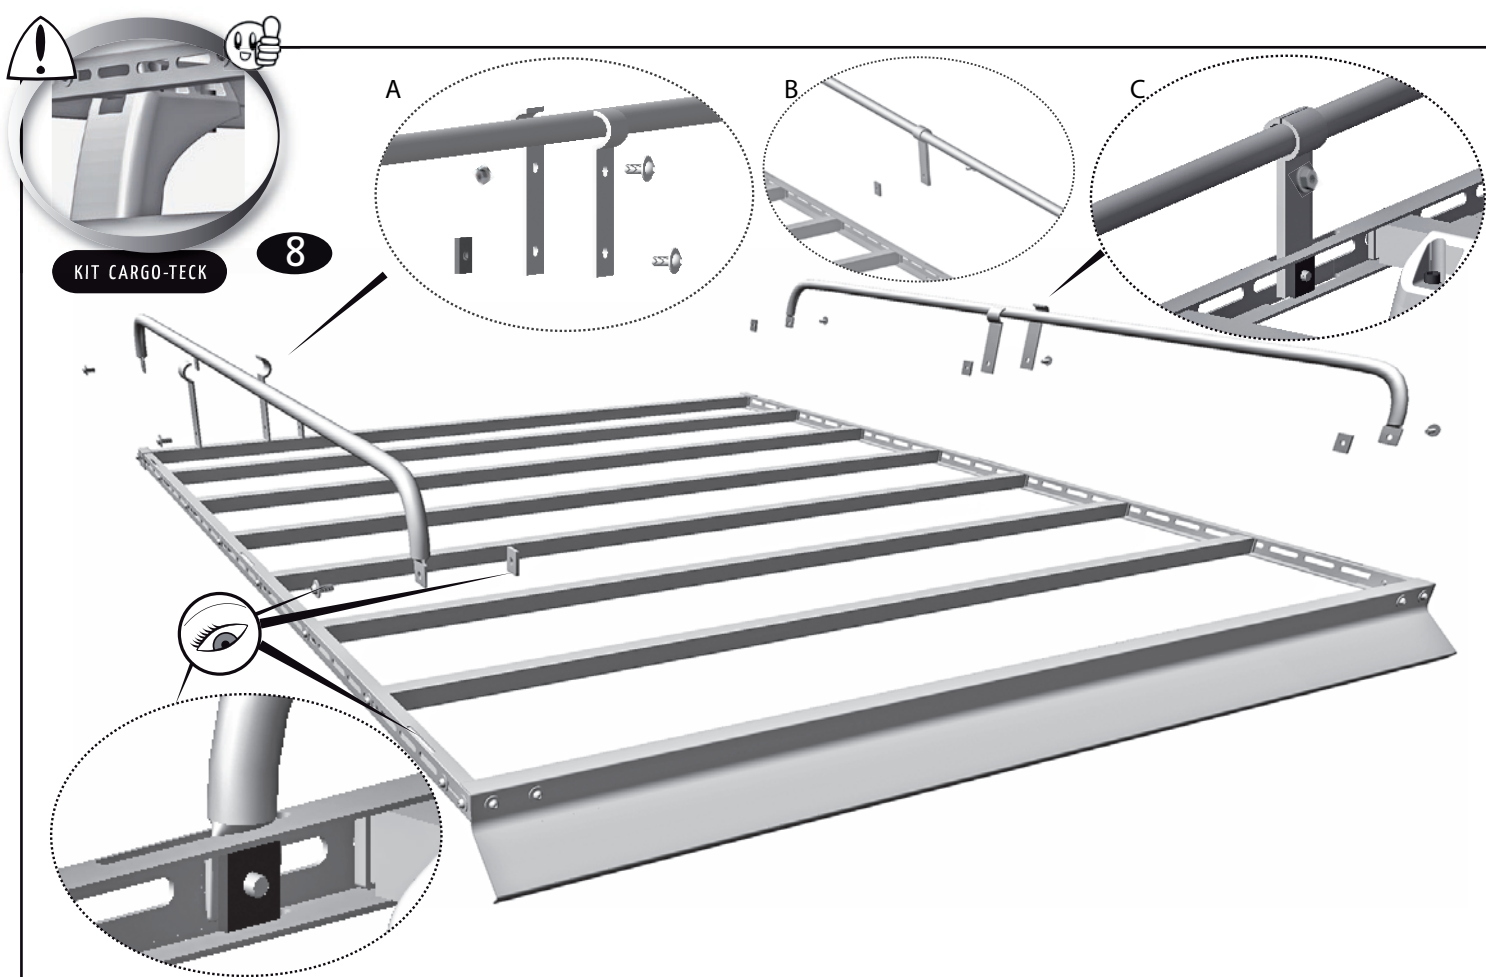




- CITOËN JUMPER I (1994- 2006)
- FIAT DUCATO II (1994 - 2006)
- PEUGEOT BOXER I (1994 - 2006)

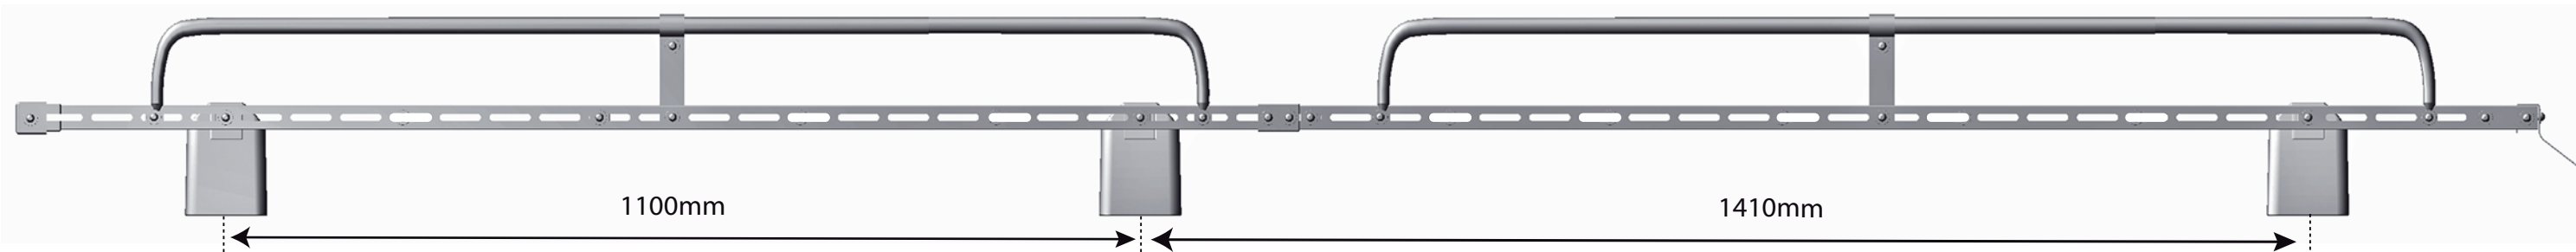
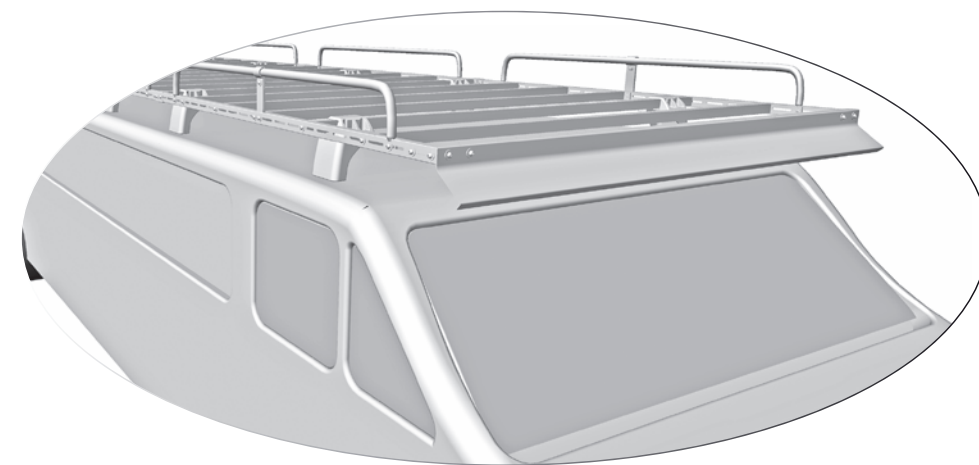


- NISSAN INTERSTAR (1997- 2010)
- OPEL MOVANO A (1997 - 2010)
- RENAULT MASTER II (1997 - 2010)

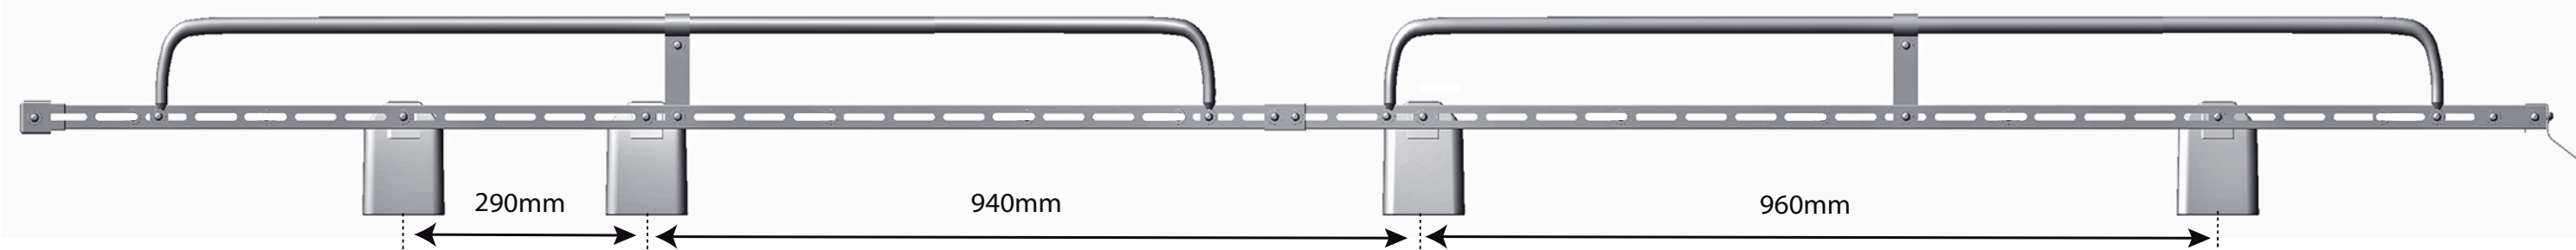





- NISSAN NV400 L2 H2 (2010->)
- OPEL MOVANO B L2 H2 (2010->)
- RENAULT MASTER III L2 H2 (2010->)

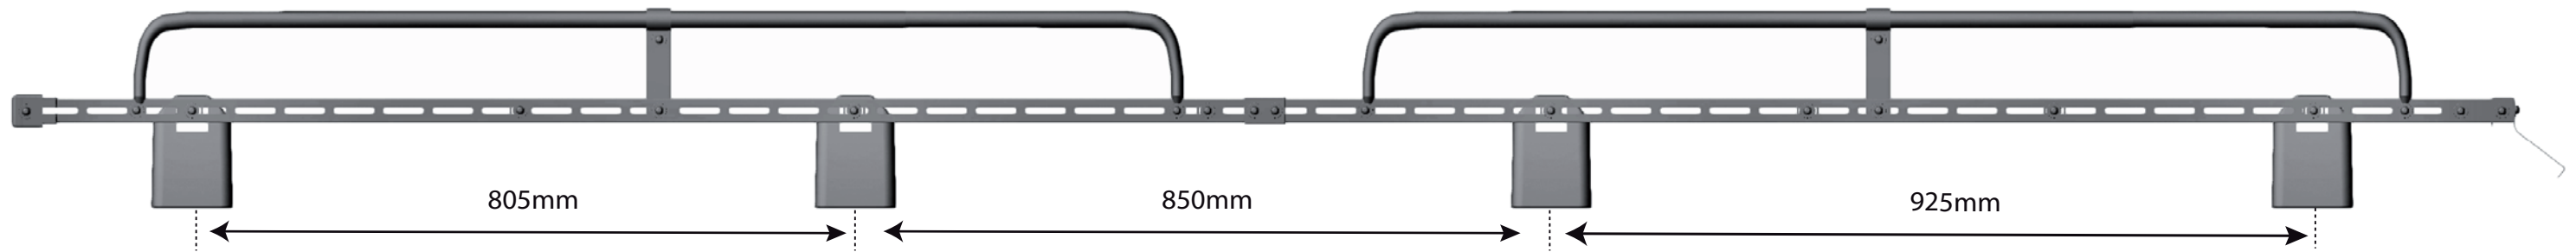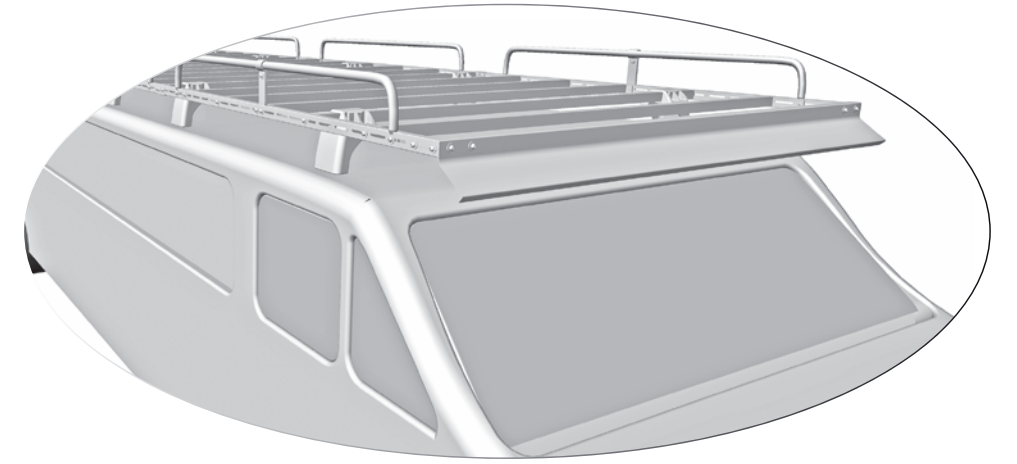






KIT CARGO-TECK FEET

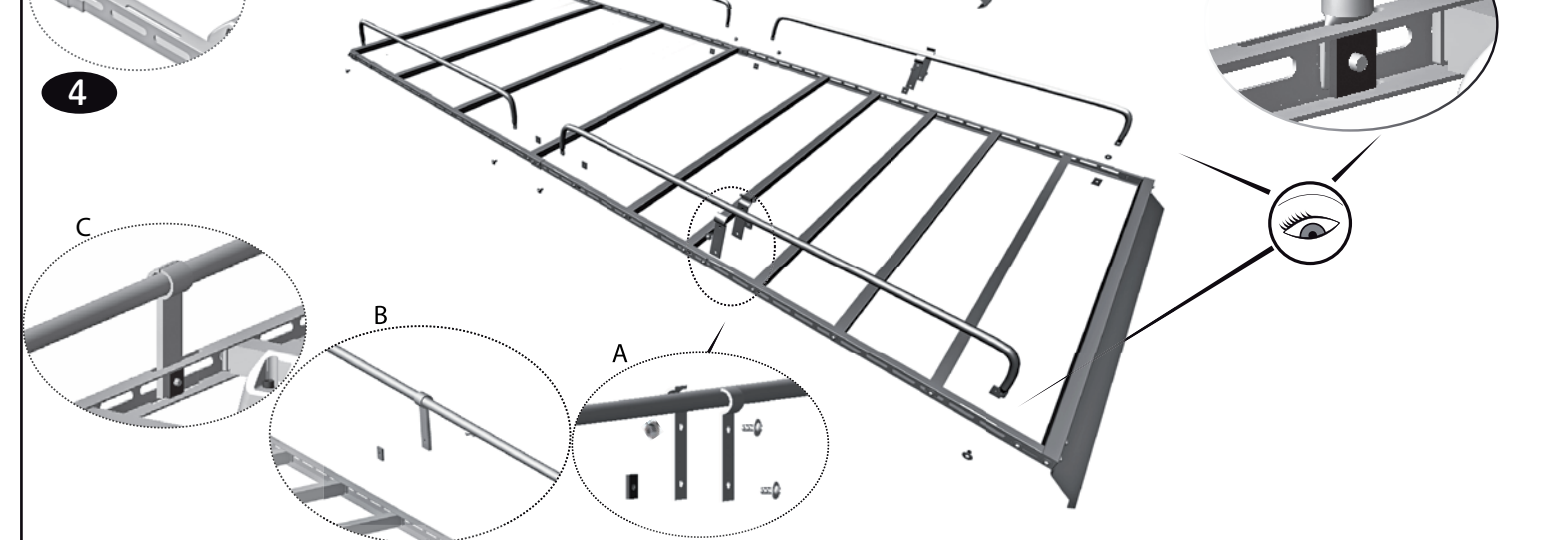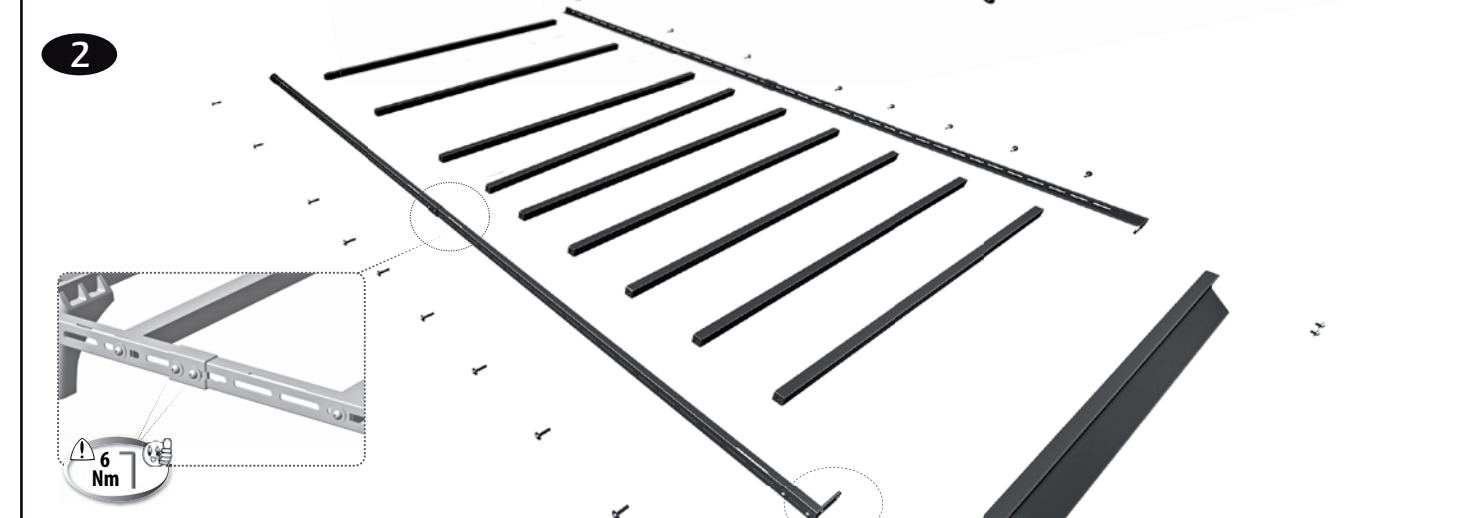

5

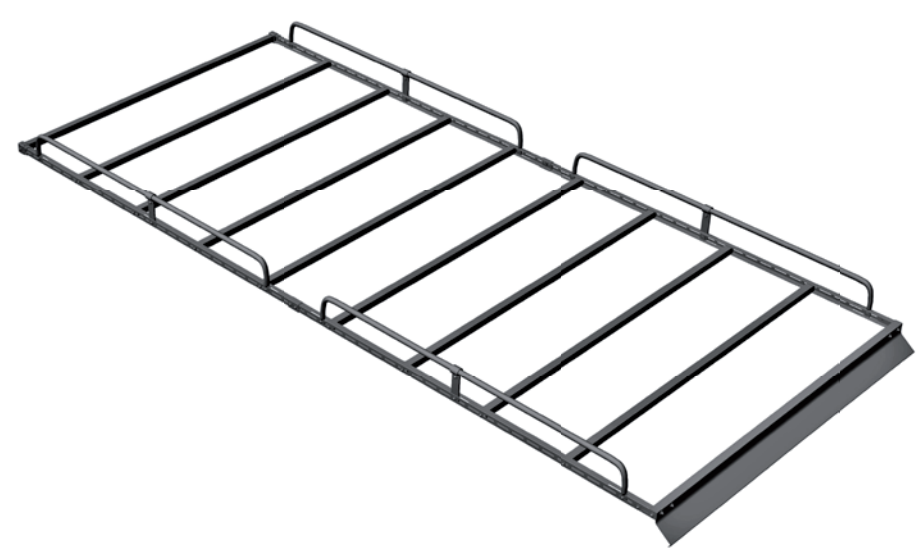






6

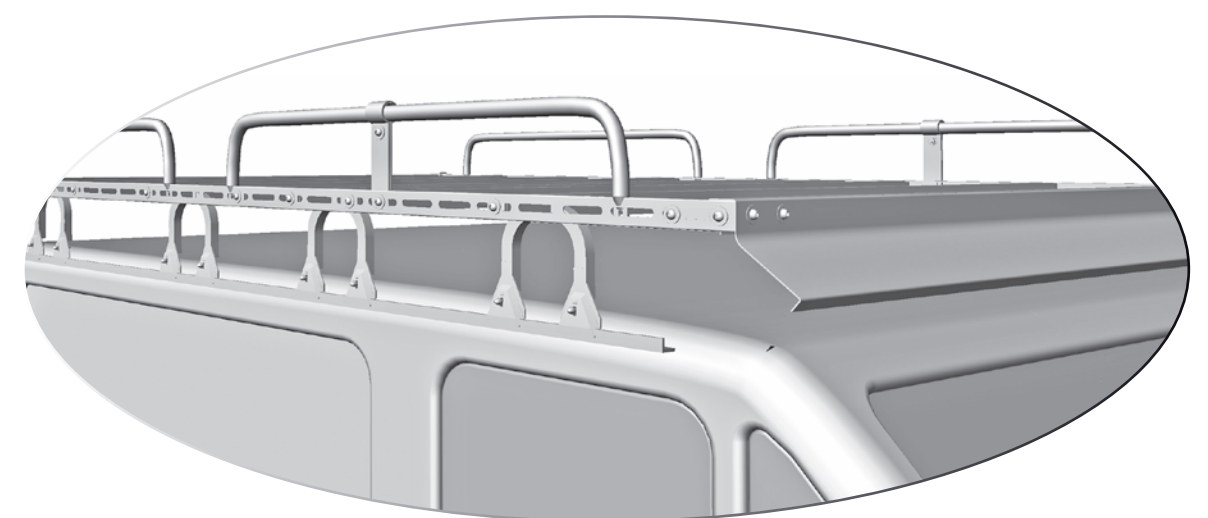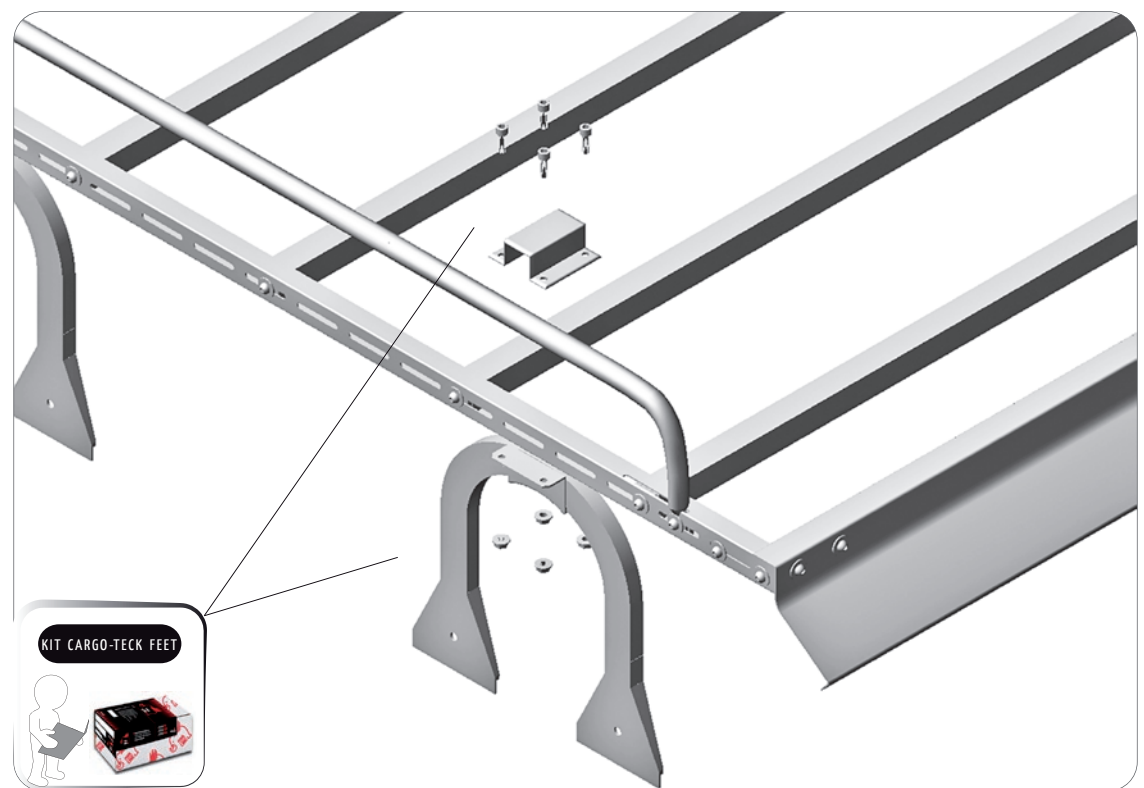





- TOYOTA HIACE
- VOLKSWAGEN T3

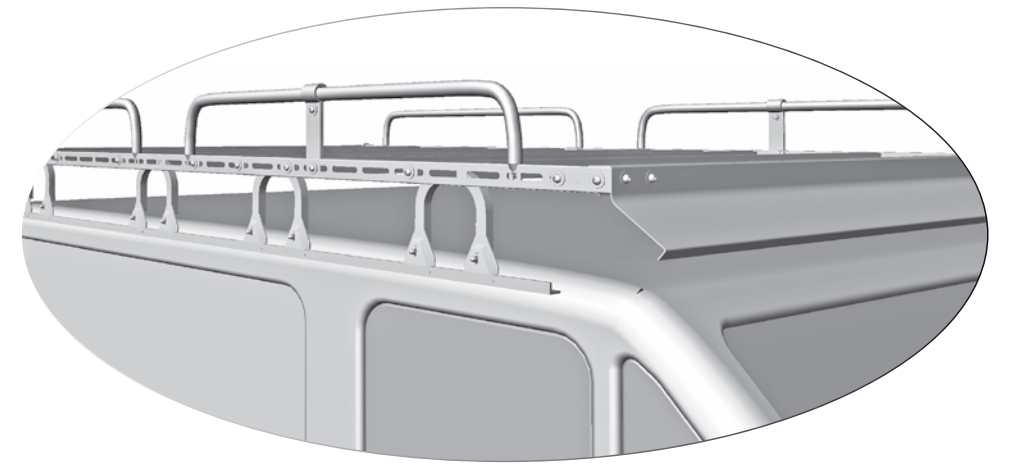

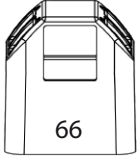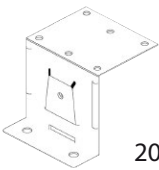N		Q
1		8
2		8
3		8
4		8
5		16
6		1


N	BO0060 x2	Q
8	 DIN912 M6x20	32
9	 DIN125 Ø6	32

N	BO0014 x8	Q
10	 DIN912 M6x30	16
11	 DIN9021 Ø6	16

- E
C
GB
F
D
PT
I
PL
CZ
HU
RO
HR
TU


Instrucciones de montaje
Instruccions de muntatge
Assembly instrucctions
Instruction de montage
Montageanleitung
Instruções de montagem
Istruzioni di montaggio
Instrukcja montażu
Montážni návod
Szerelési Utasítás
Instrucțiuni de montaj
Detaljne upute
Öncelikli montaj

Kit de fijación
Kit de fixació
Fixation Kit
Kit fixation
Stützfuß-Kit
Kit fixaçao
Kit di fissaggio
Element mocujacy
Fixační kit
Rögzítő készlet
Kit de fixare
Kit za montažu
Montaj kiti

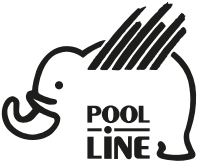





POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN:
E9
26R-03.1042






121931

Rv: 08/2025

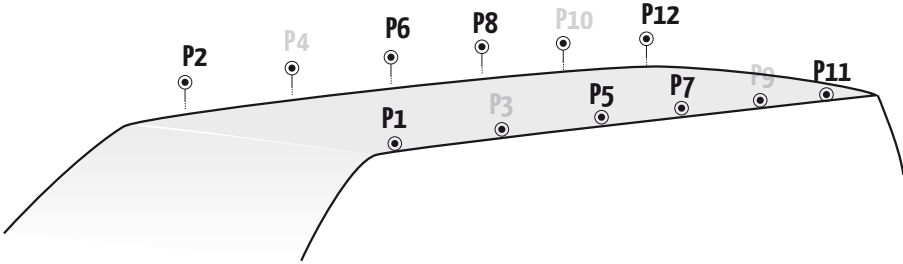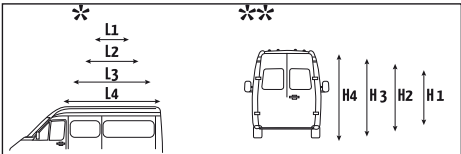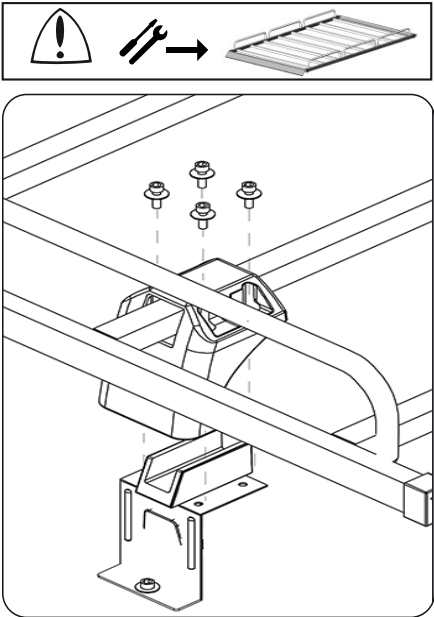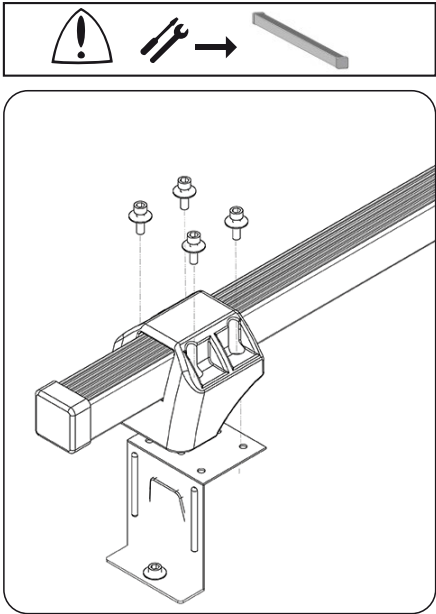

	L*	H**		10	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
Nissan																
Interstar	L2	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Interstar	L2	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
Interstar	L3	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Interstar	L3	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
NV400	L1	H1	10 - 24	B00014	207	207			207	207	207	207			207	207
NV400	L2	H2	10 - 24	B00014	207	207			207	207	207	207			207	207
NV400	L3	H2	10 - 24	B00014	207	207			207	207	207	207			207	207
Opel																
Movano	L2	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Movano	L2	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
Movano	L3	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Movano	L3	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
Movano	L1	H1	10 - 24	B00014	207	207			207	207	207	207			207	207
Movano	L2	H2	10 - 24	B00014	207	207			207	207	207	207			207	207
Movano	L3	H2	10 - 24	B00014	207	207			207	207	207	207			207	207
Renault																
Master	L2	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Master	L2	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
Master	L3	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Master	L3	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
Master	L1	H1	10 - 24	B00014	207	207			207	207	207	207			207	207
Master	L2	H2	10 - 24	B00014	207	207			207	207	207	207			207	207
Master	L3	H2	10 - 24	B00014	207	207			207	207	207	207			207	207

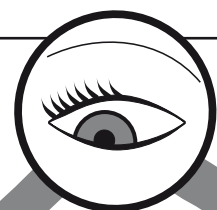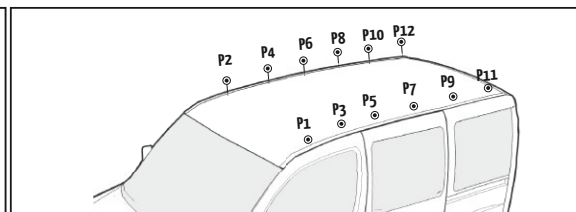
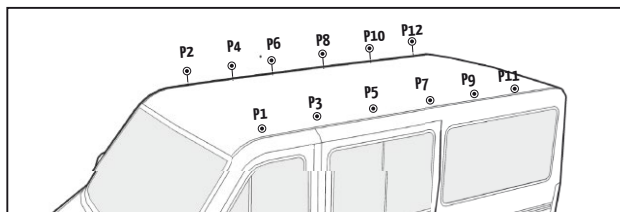


P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx


Pag. 1

2

1

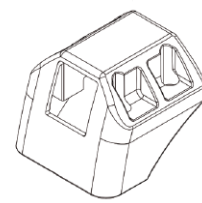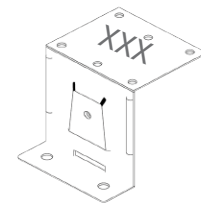

A

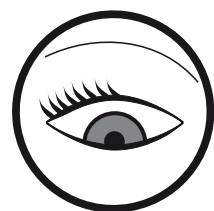

←	10	P1	P2
0X	B0000XX		
0X	B0000XX		
	B0000X		

Pag. 1

10



11

2

3



4

5

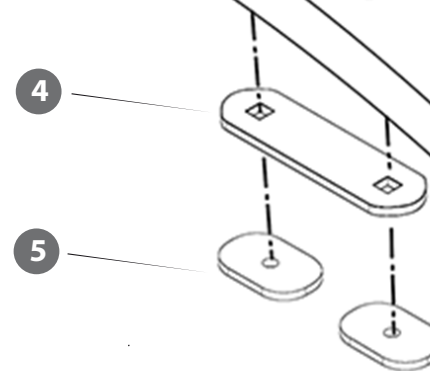
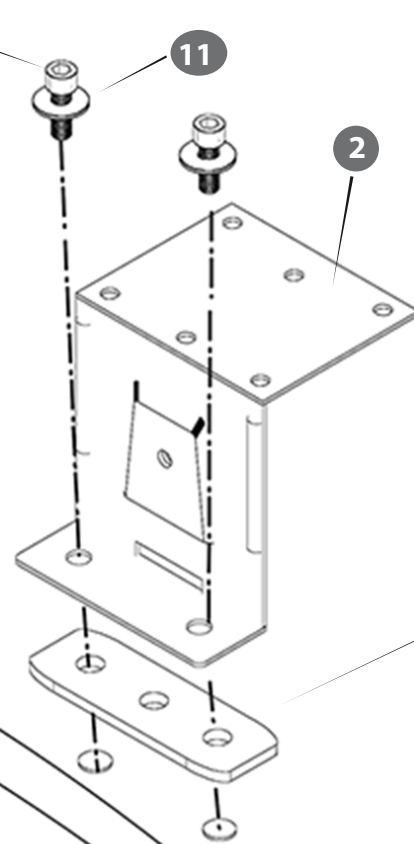


B

6

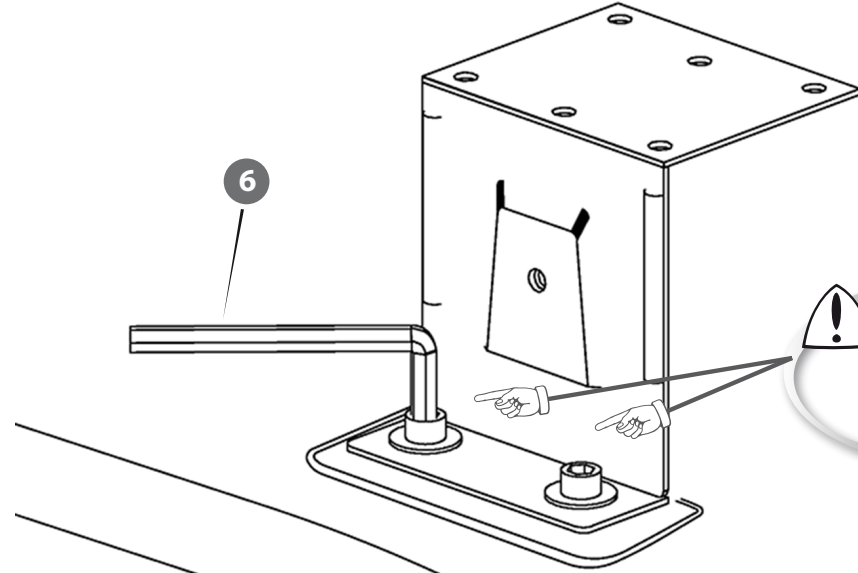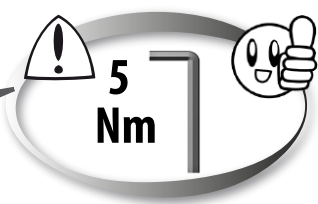


C

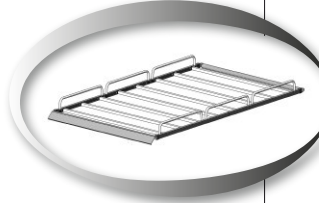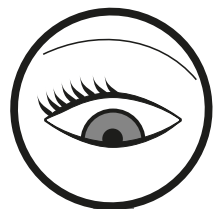

8

9

5 Nm

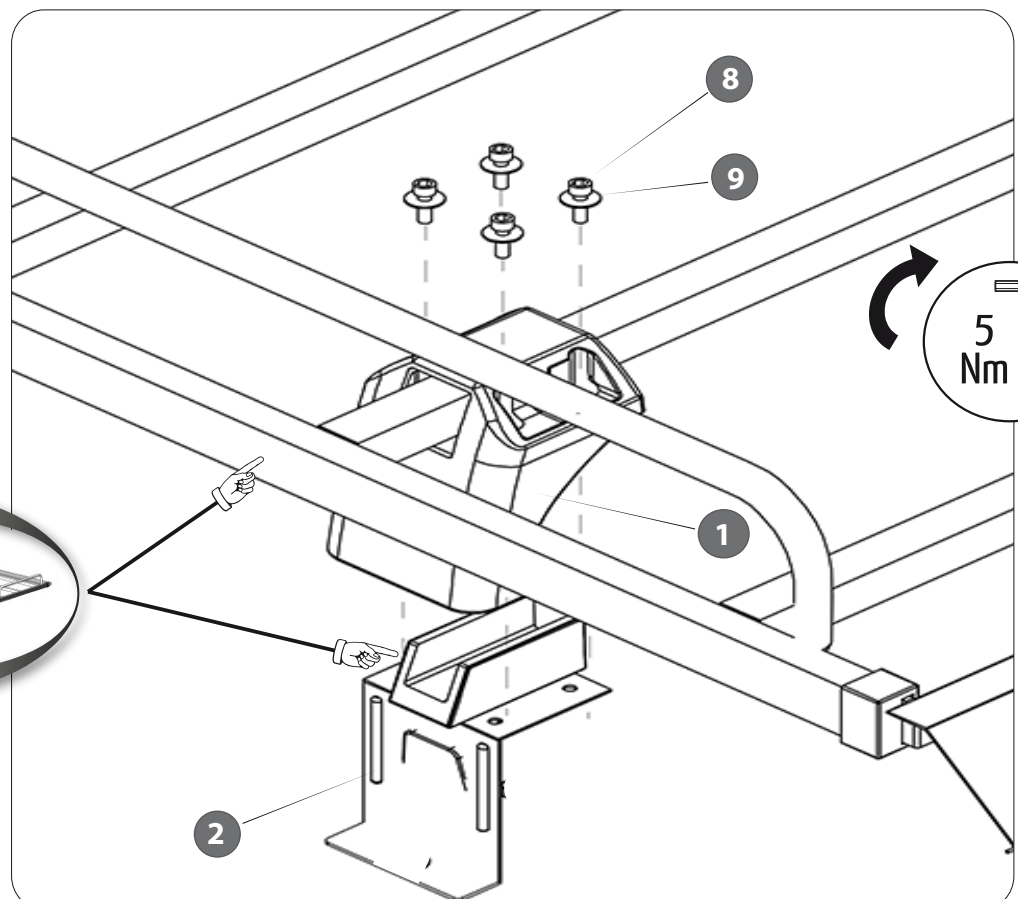

2