



- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net





200 KG.
MAX.


Nº HOMOLOGACIÓN: E9 26R-03.1042




123816

Rv: 06/2024

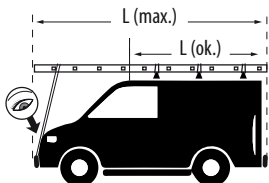
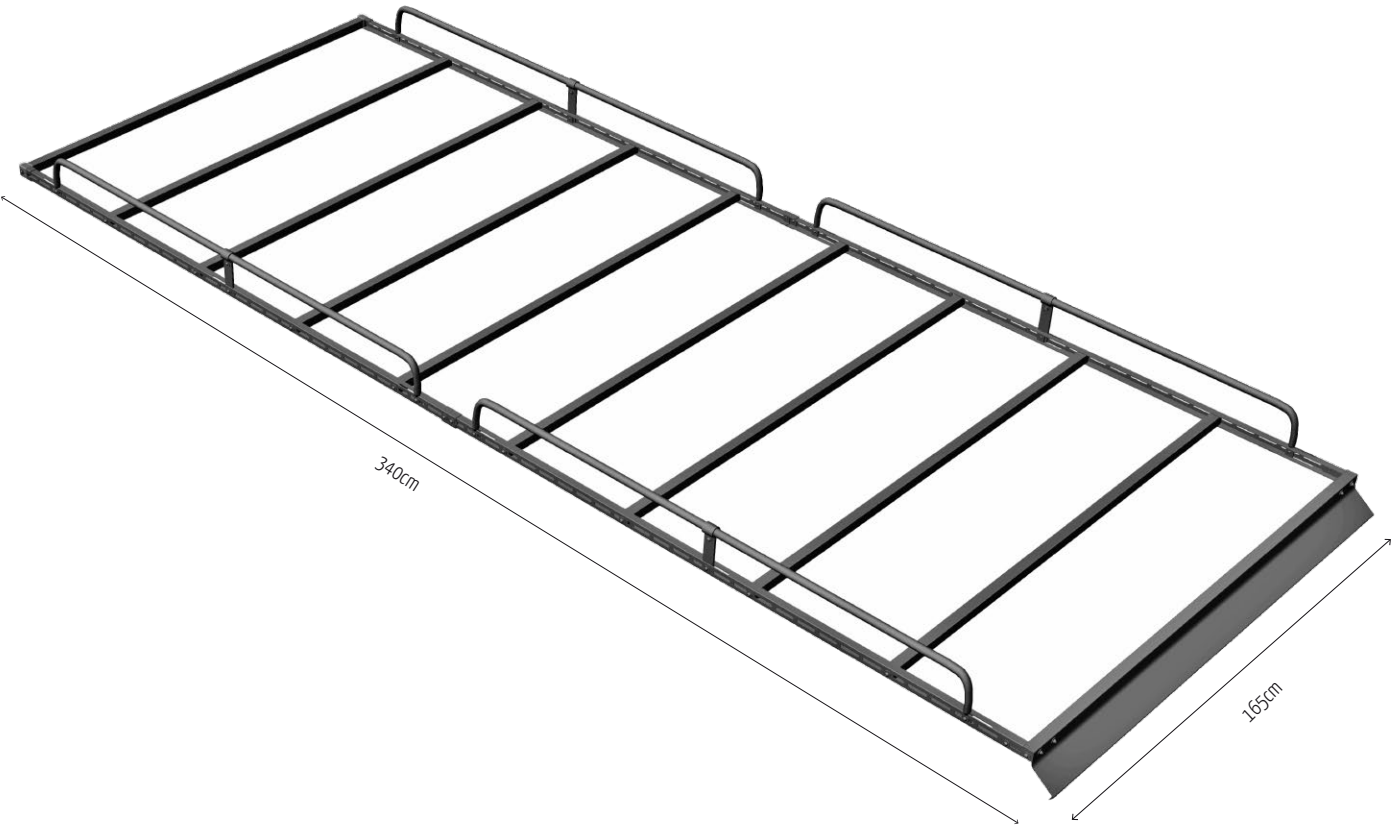


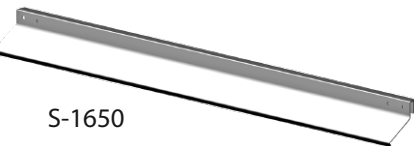N		Q
1	 S-1650	1
2	 L-1730	4
3	 B-1442	4
4	 T-1635	9
7		18
8		2
9		2
10		10
11		1
12	 CHA-M8	16
13	 ISO 7380 M8x30	18
14	 ISO 7380 M8x16	24
15	 DIN 125 Ø 8	42
16		8
17	 DIN 603 M6x12	4
18	 DIN 6923 M6	4


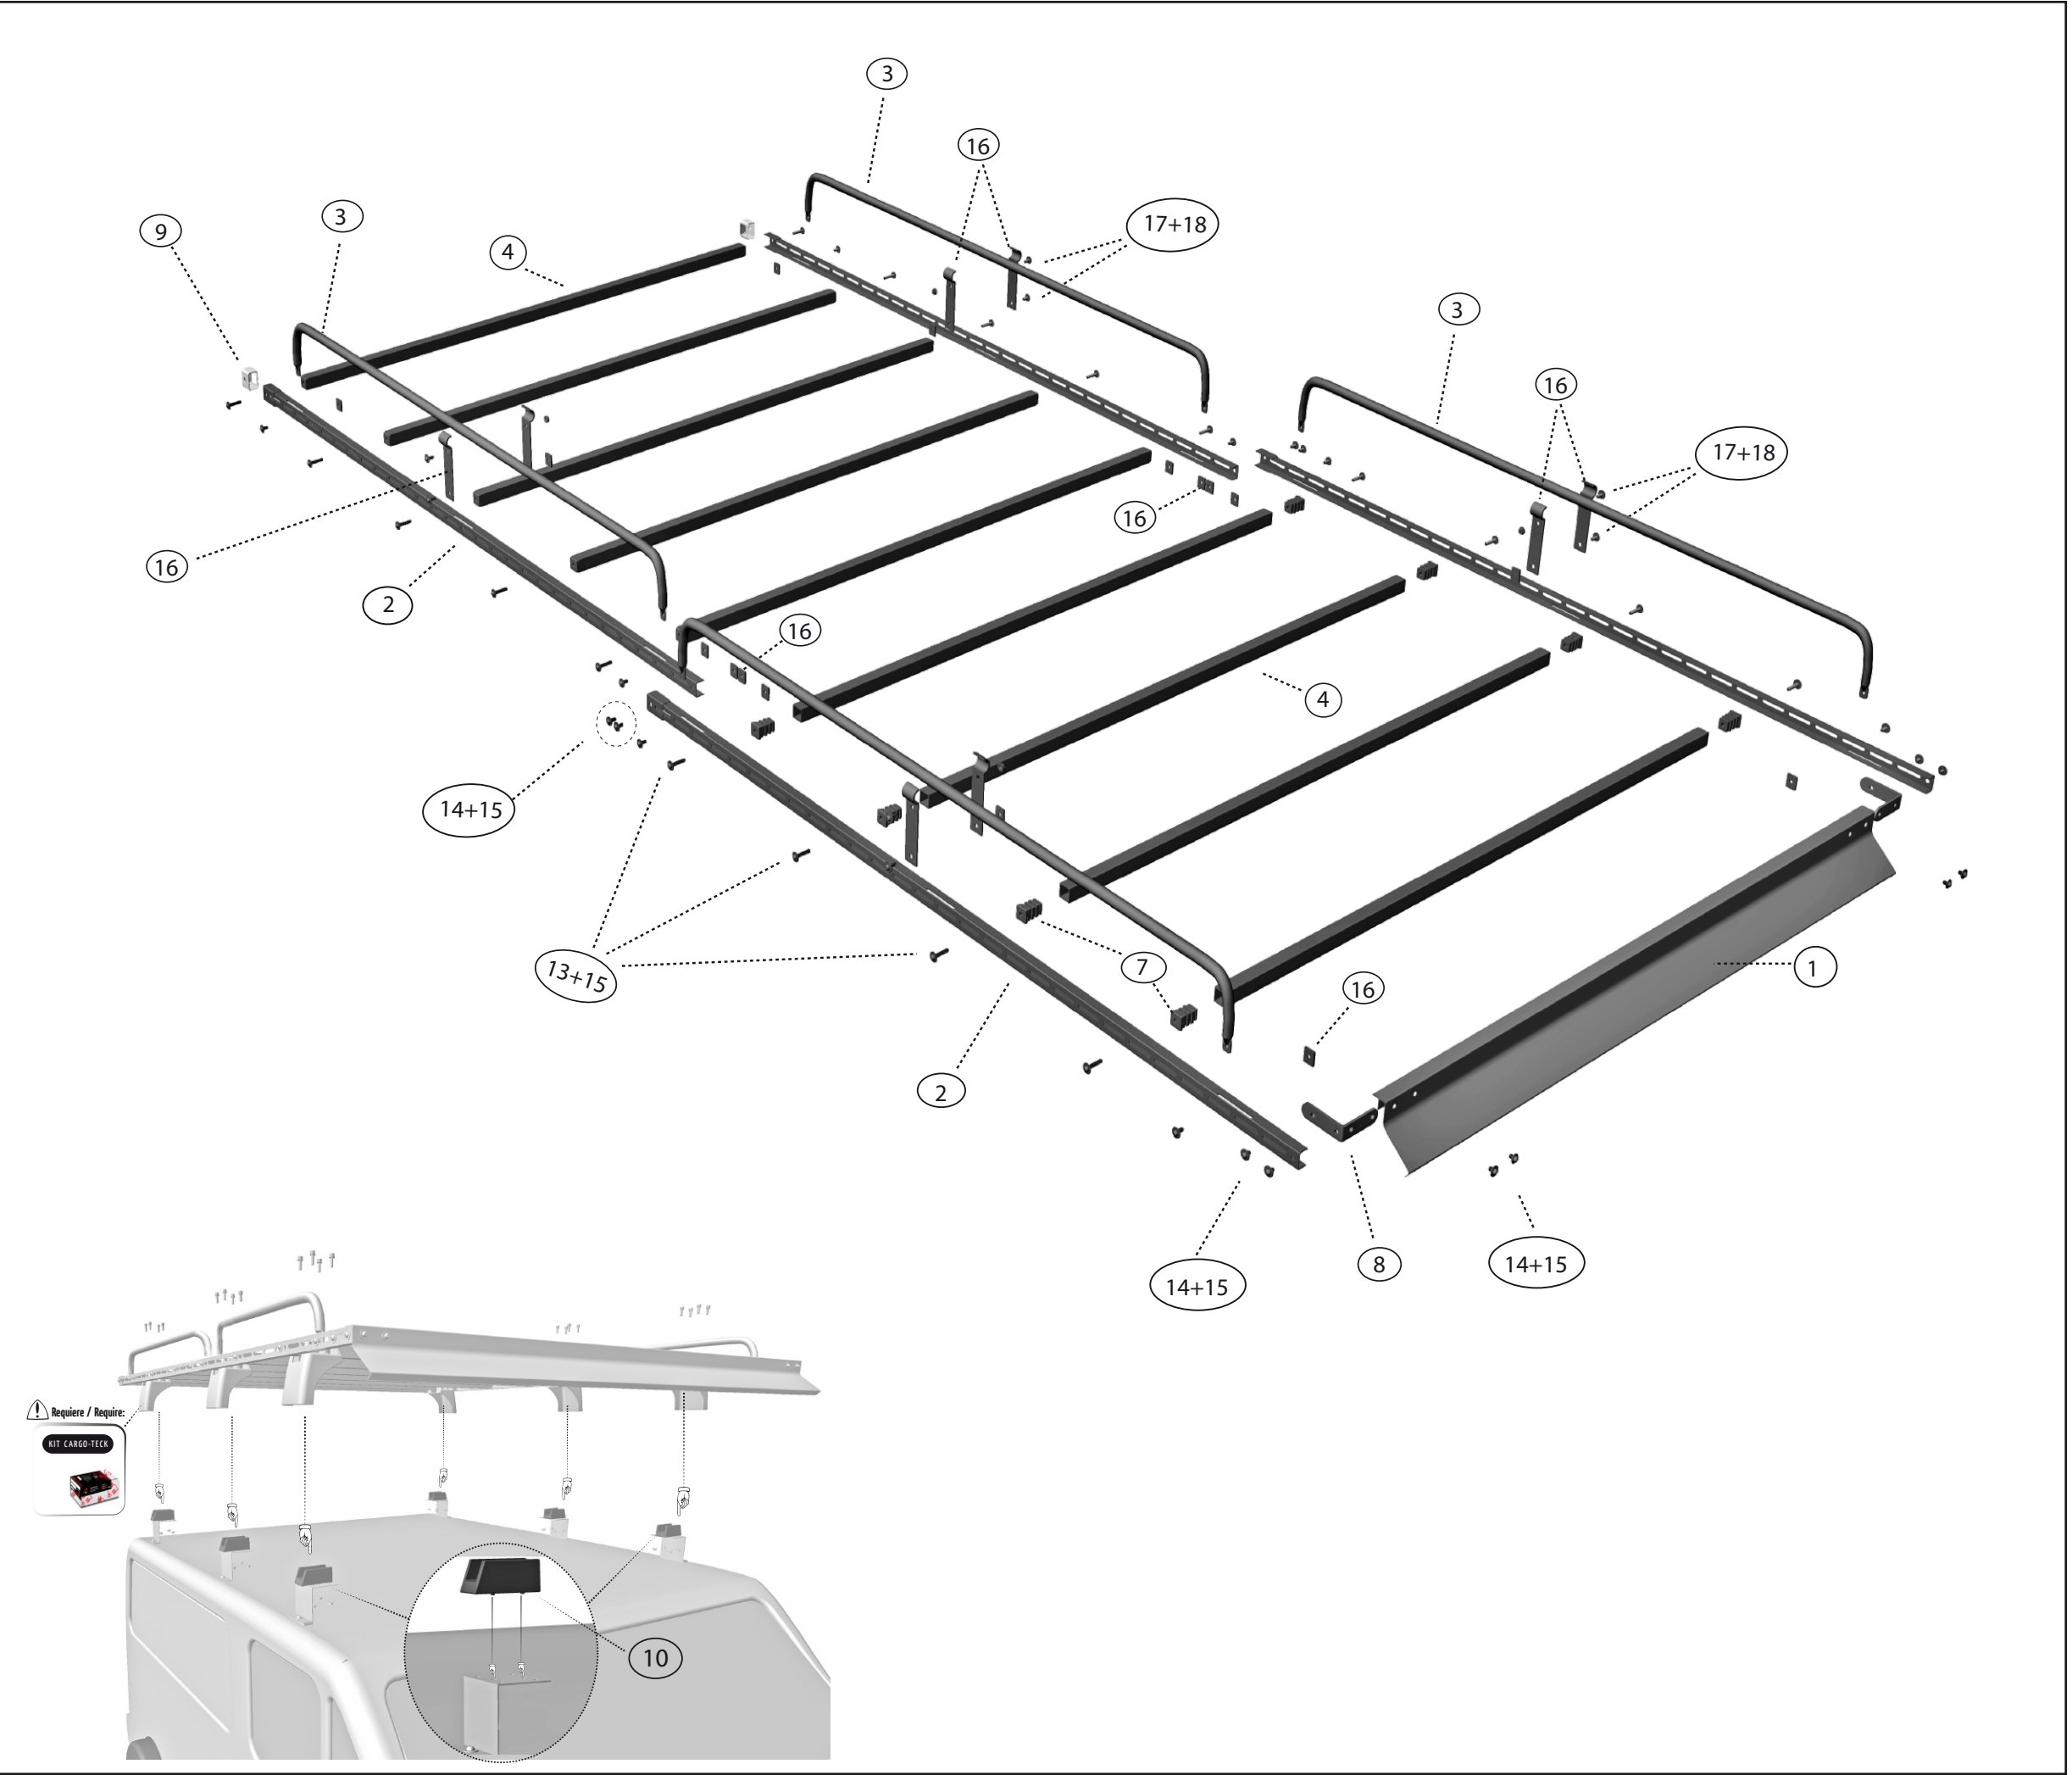




• IVECO DAILY VI (9m) 3520 - H1 (2014->)

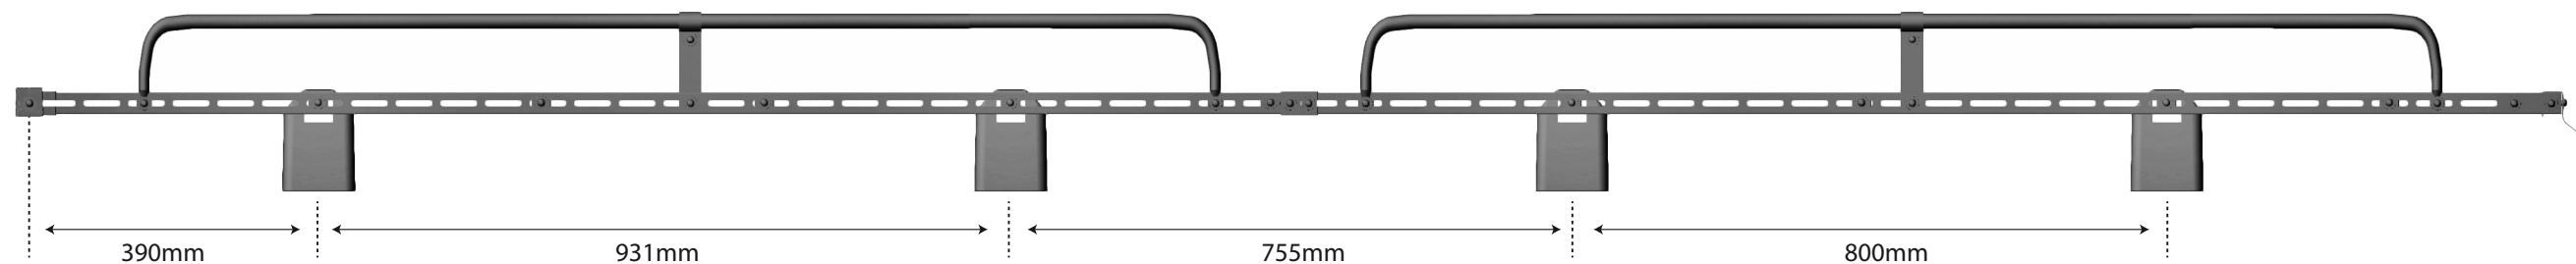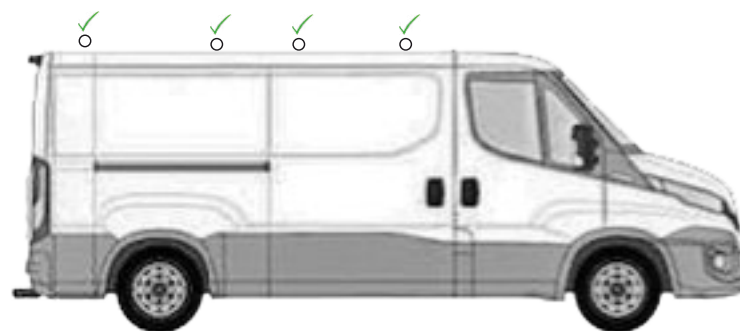


• CITROËN JUMPER L2 H1 (2006->)
• FIAT DUCATO L2 H1 (2006->)
• OPEL MOVANO C L2 H1 (2021->)
• PEUGEOT BOXER L2 H1 (2006->)

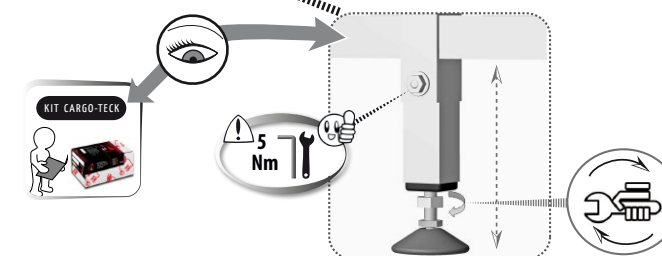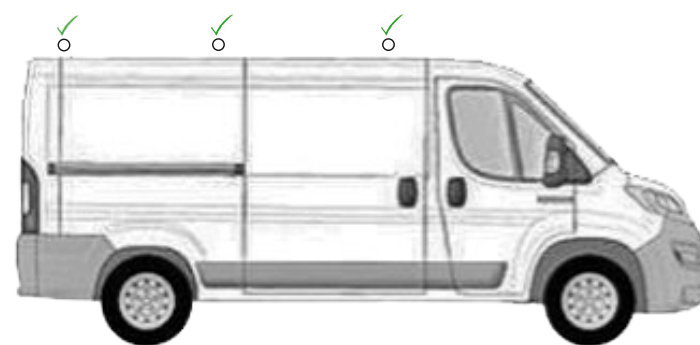






- NISSAN NV300 L2H1 (2016->)
- FIAT TALENTO II L2H1 (2016->)
- OPEL VIVARO B L2 H1 (2014->)
- RENAULT TRAFIC III L2 H1 (2014->)

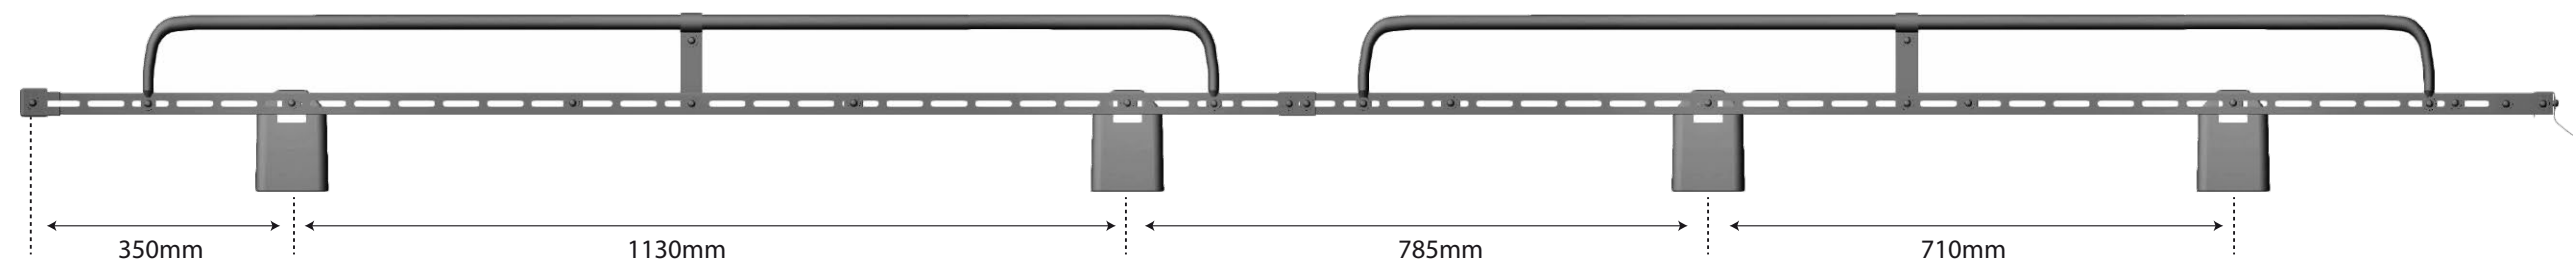

- NISSAN PRIMASTAR L2 H1 (02 - 14)
- OPEL VIVARO A L2 H1 (02 - 14)
- RENAULT TRAFIC II L2 H1 (02 - 14)

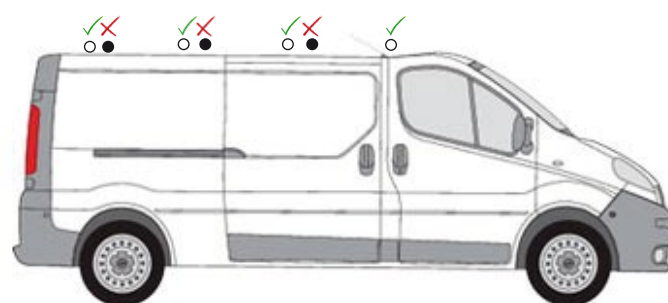


- NISSAN INTERSTAR L3 H2/H3 (1997 - 2010)
- OPEL MOVANO A L3 H2/H3 (1997 - 2010)
- RENAULT TRAFIC II L3 H2/H3 (1997 - 2010)

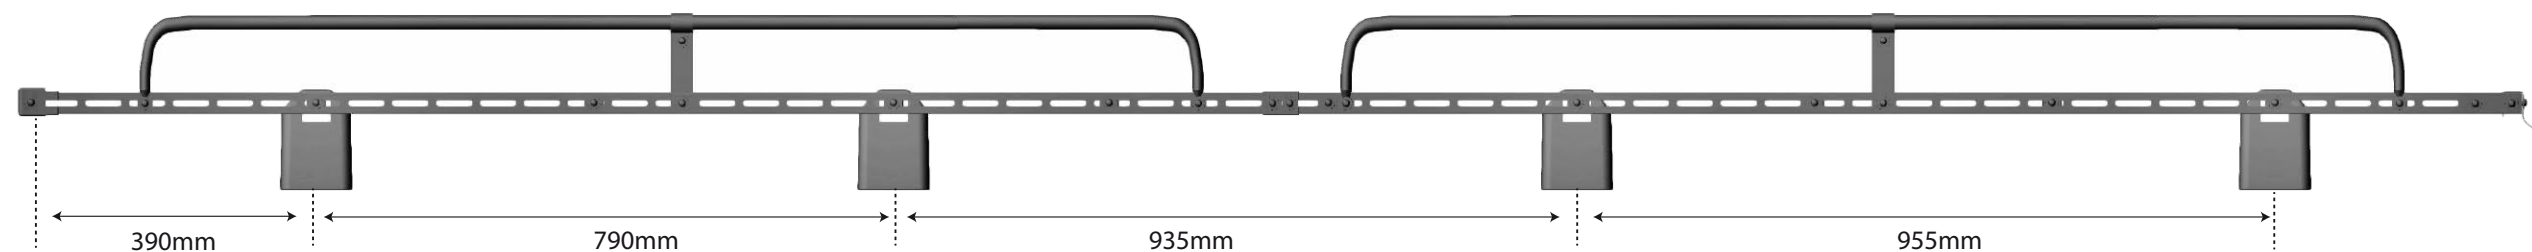
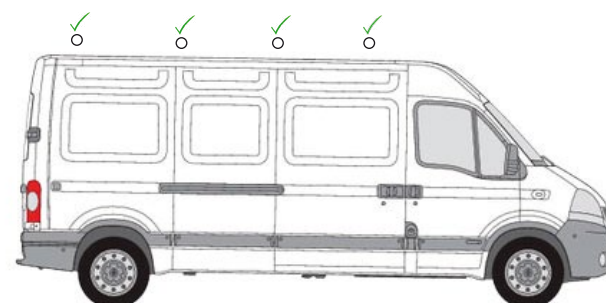





- MERCEDES SPRINTER II L2 W906 / W907
- VOLKSWAGEN CRAFTER L2 / L3 (2006->)

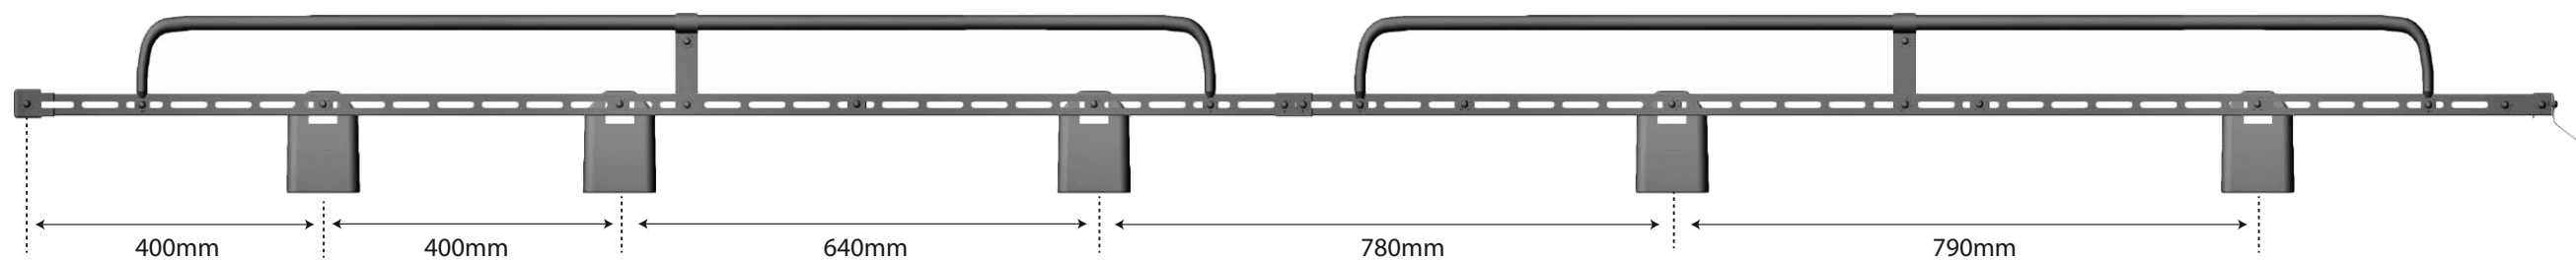


- FIAT DUCATO I L2-H2 (81-94)
- NISSAN TRADE L2-H2 (87-01)
- TOYOTA HIACE L2-H1 (JP-h200) (2013->)

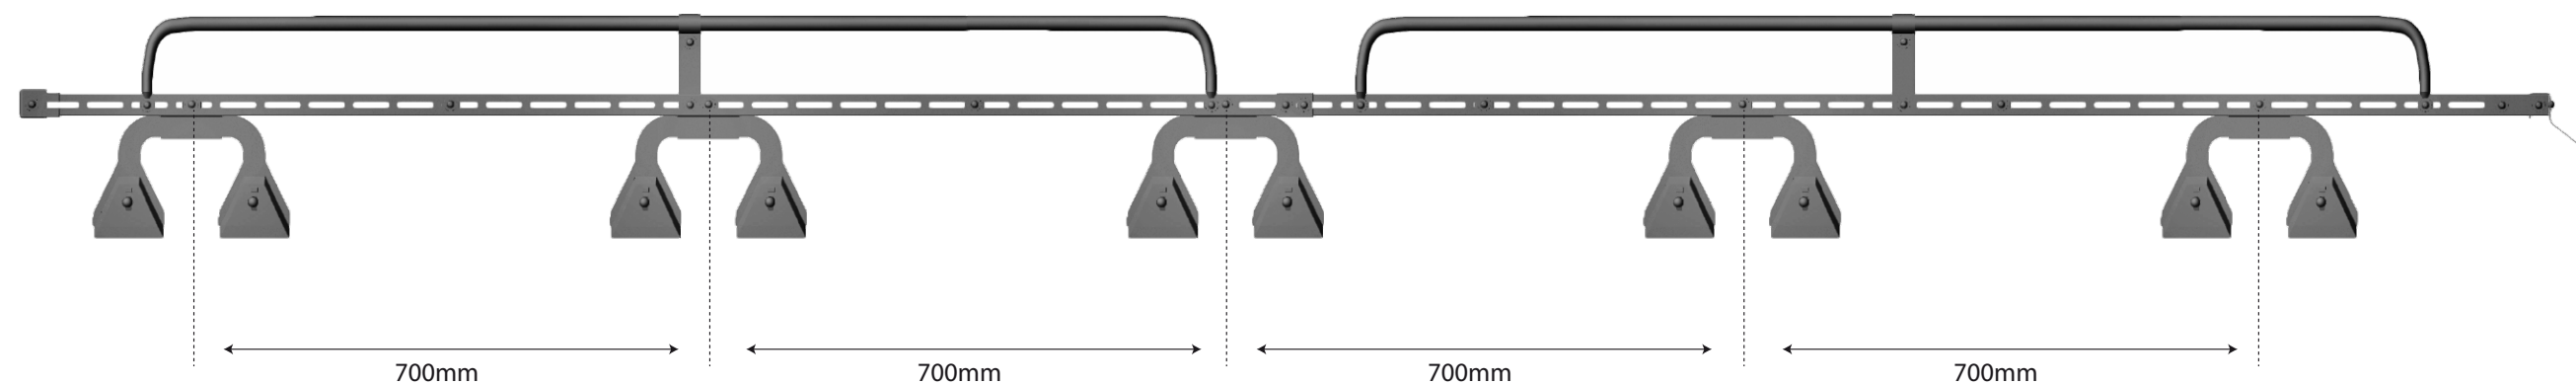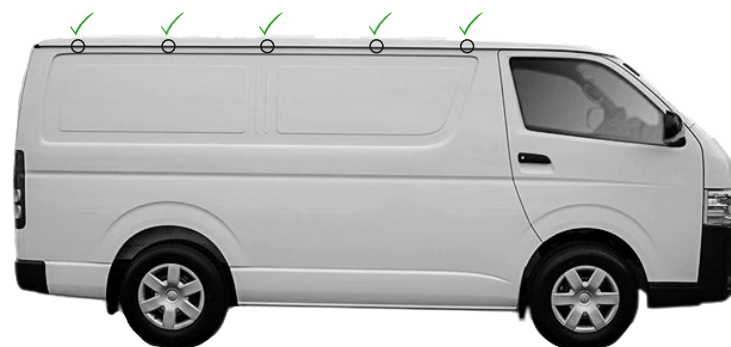


1

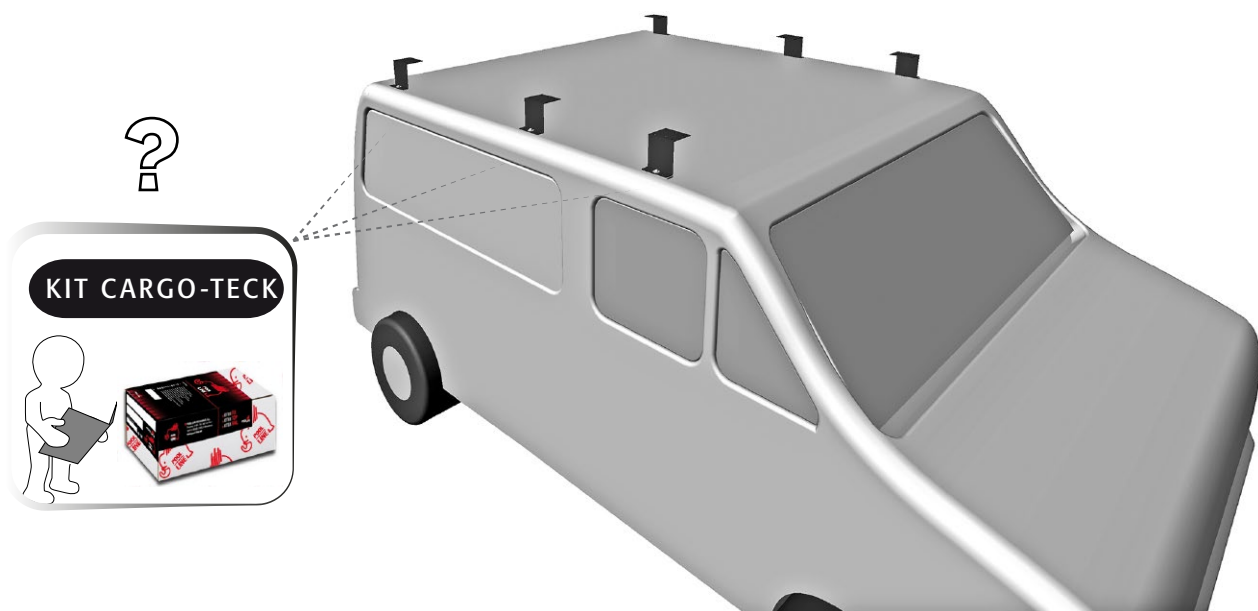

2

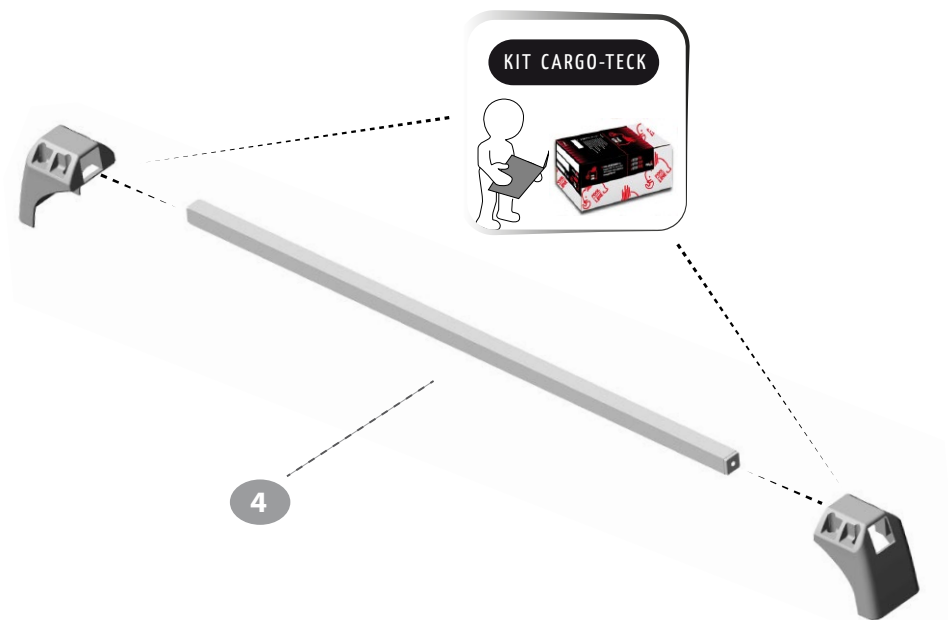


3

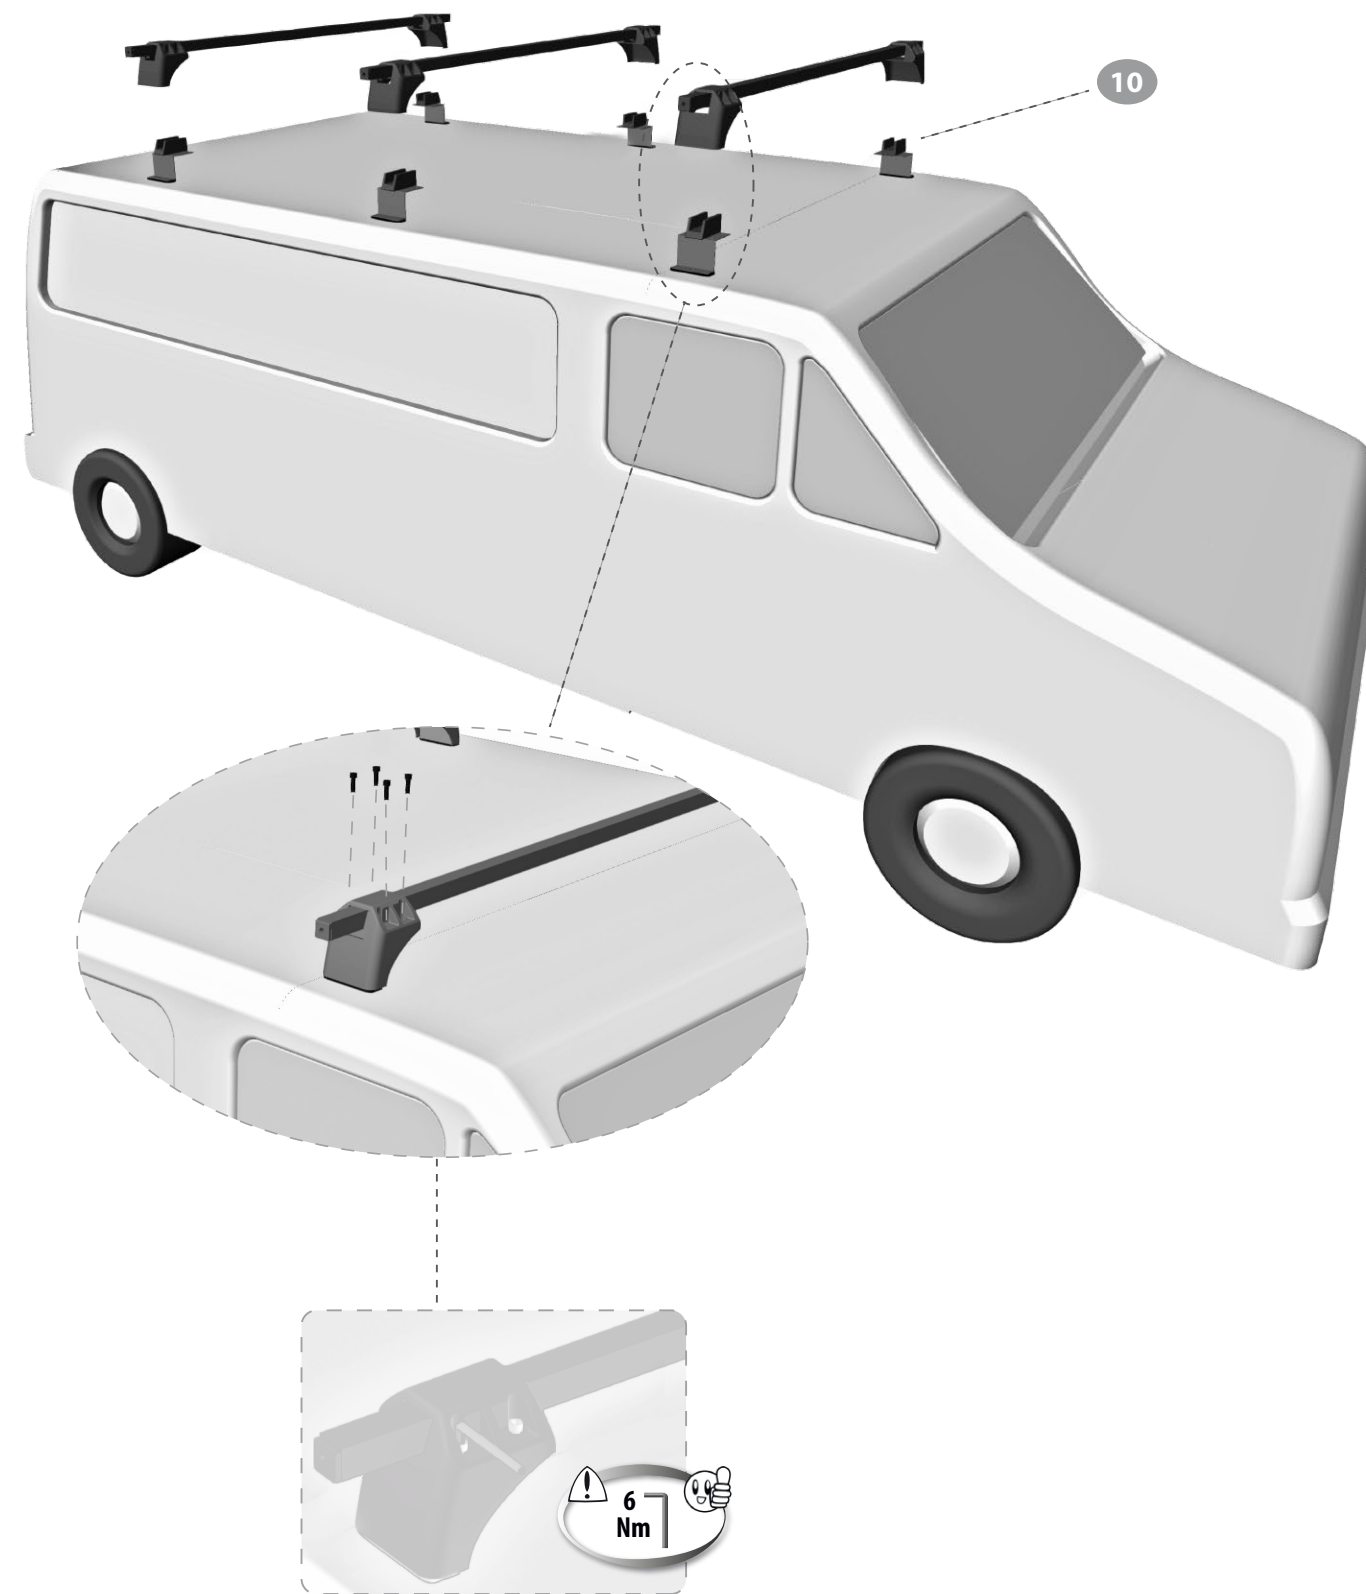





5

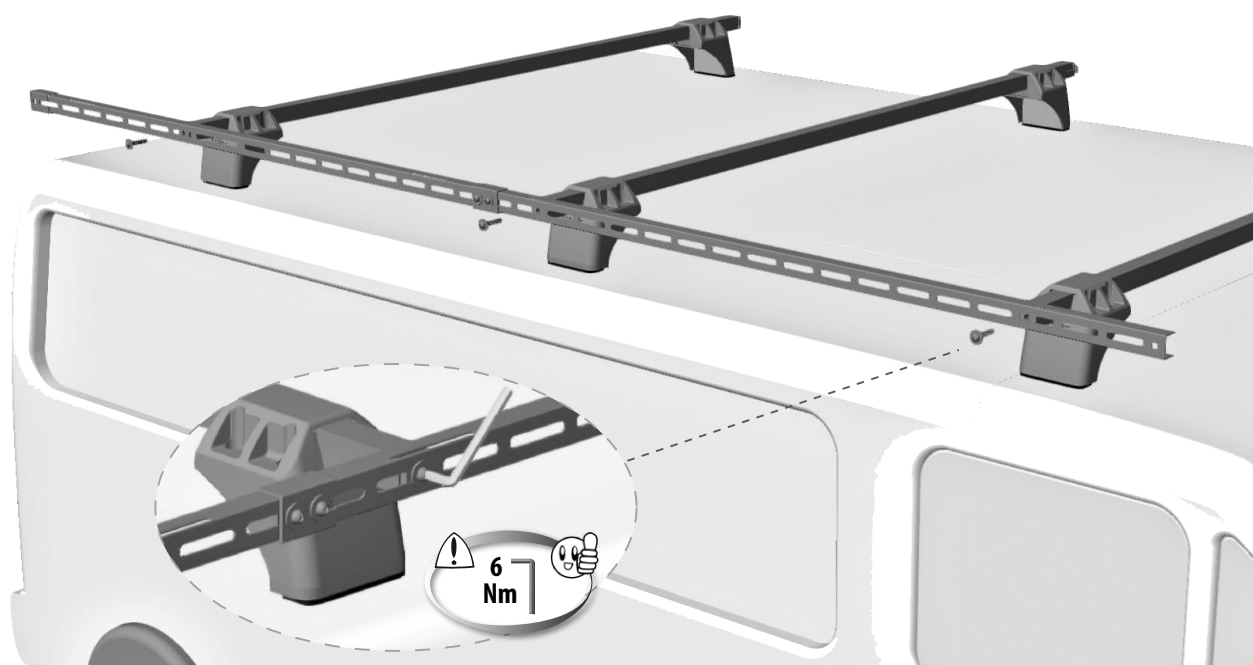


6

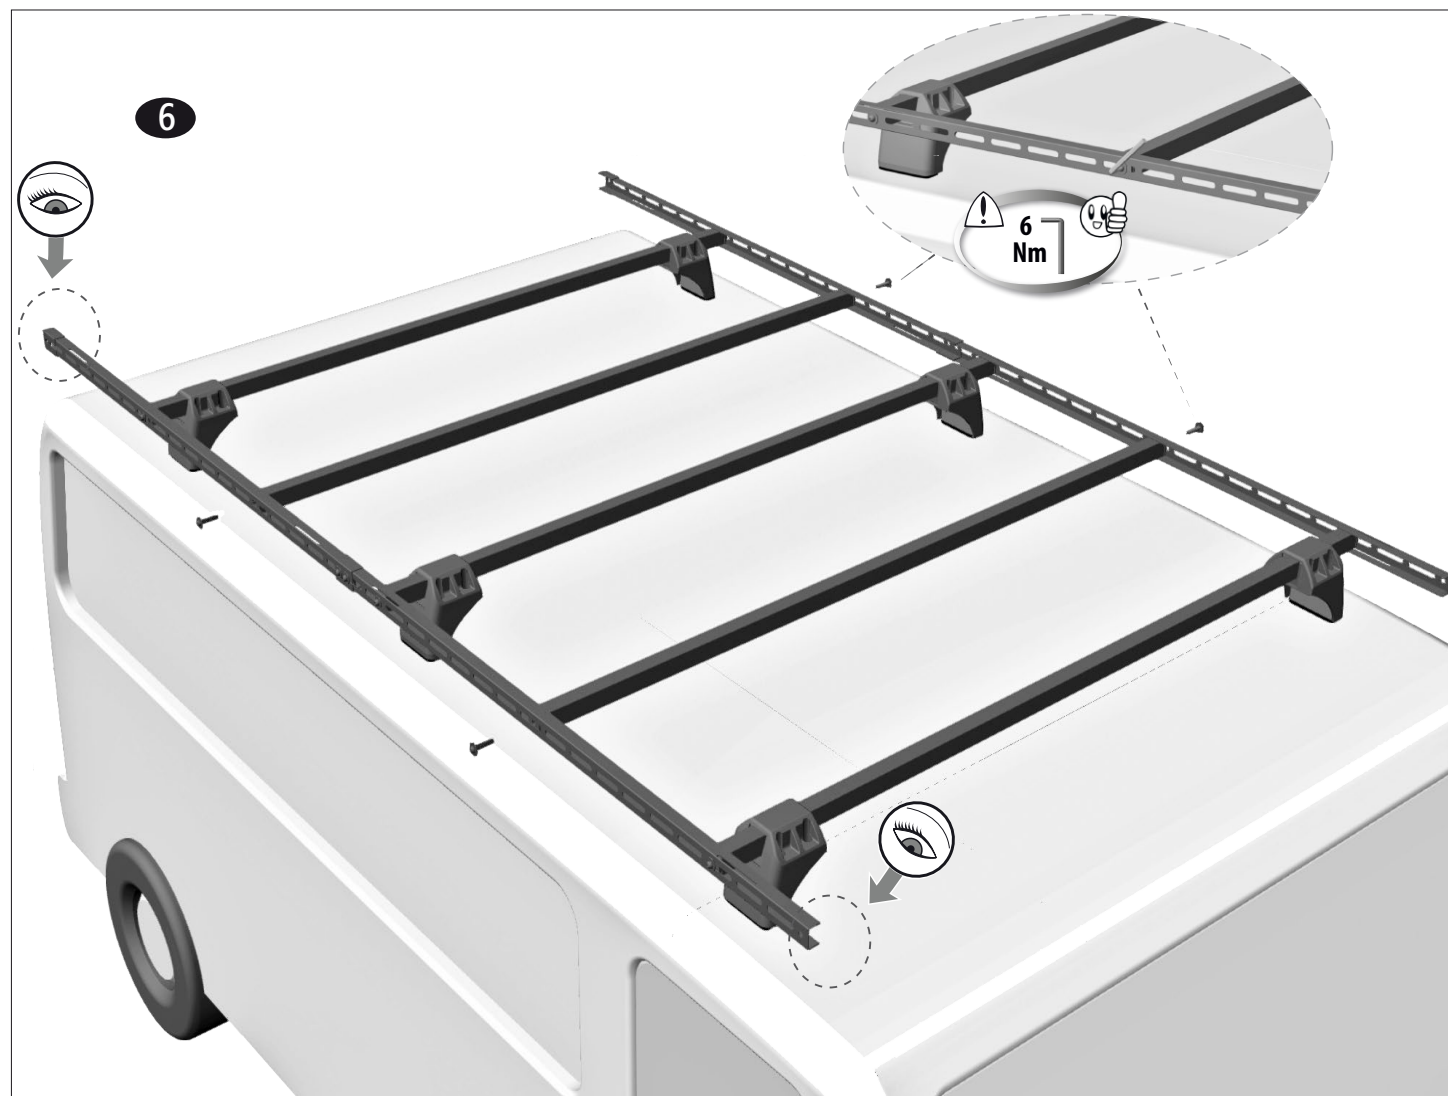



7




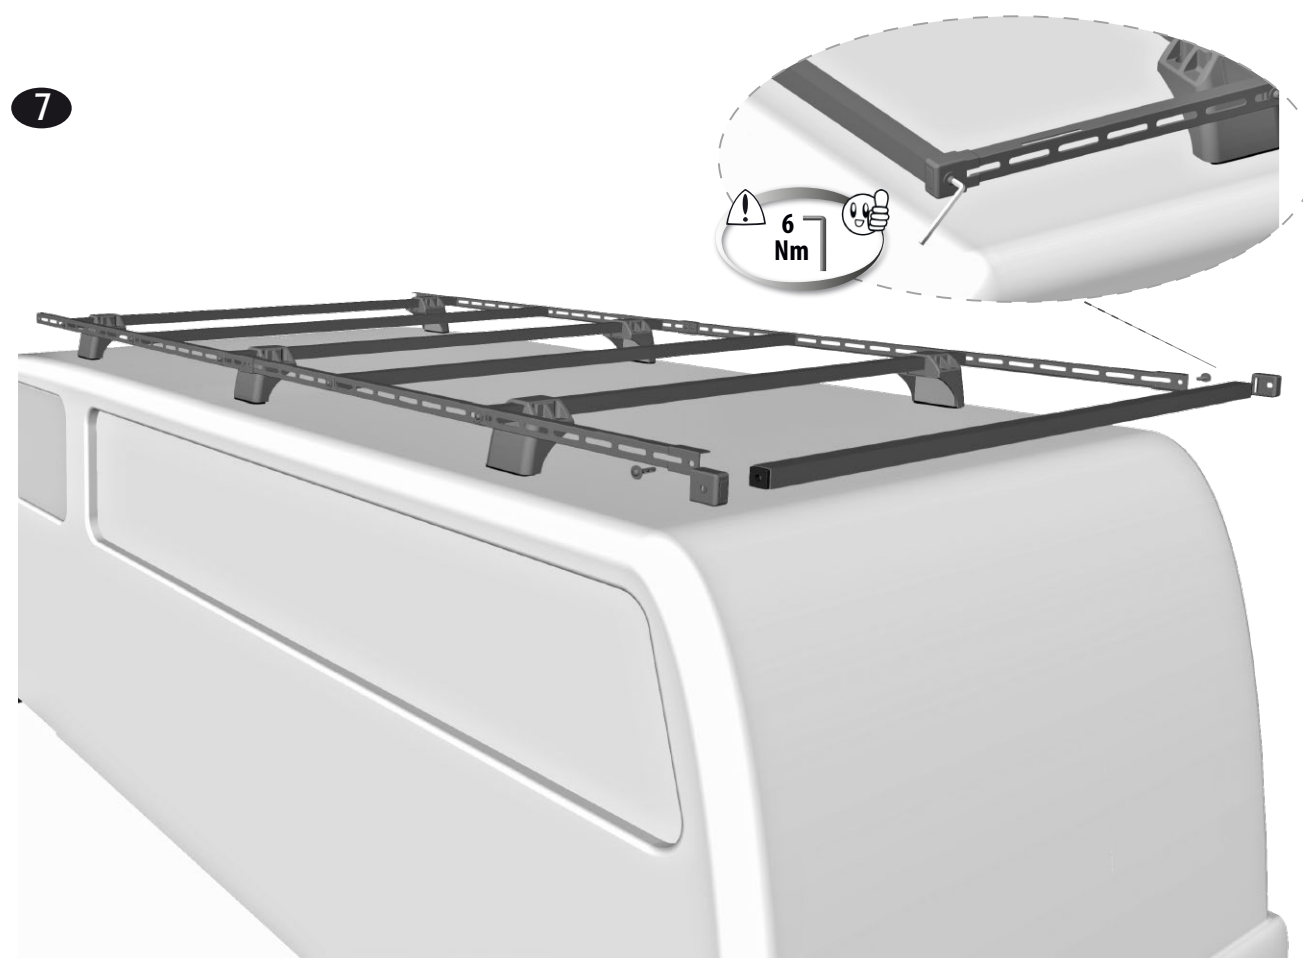



8

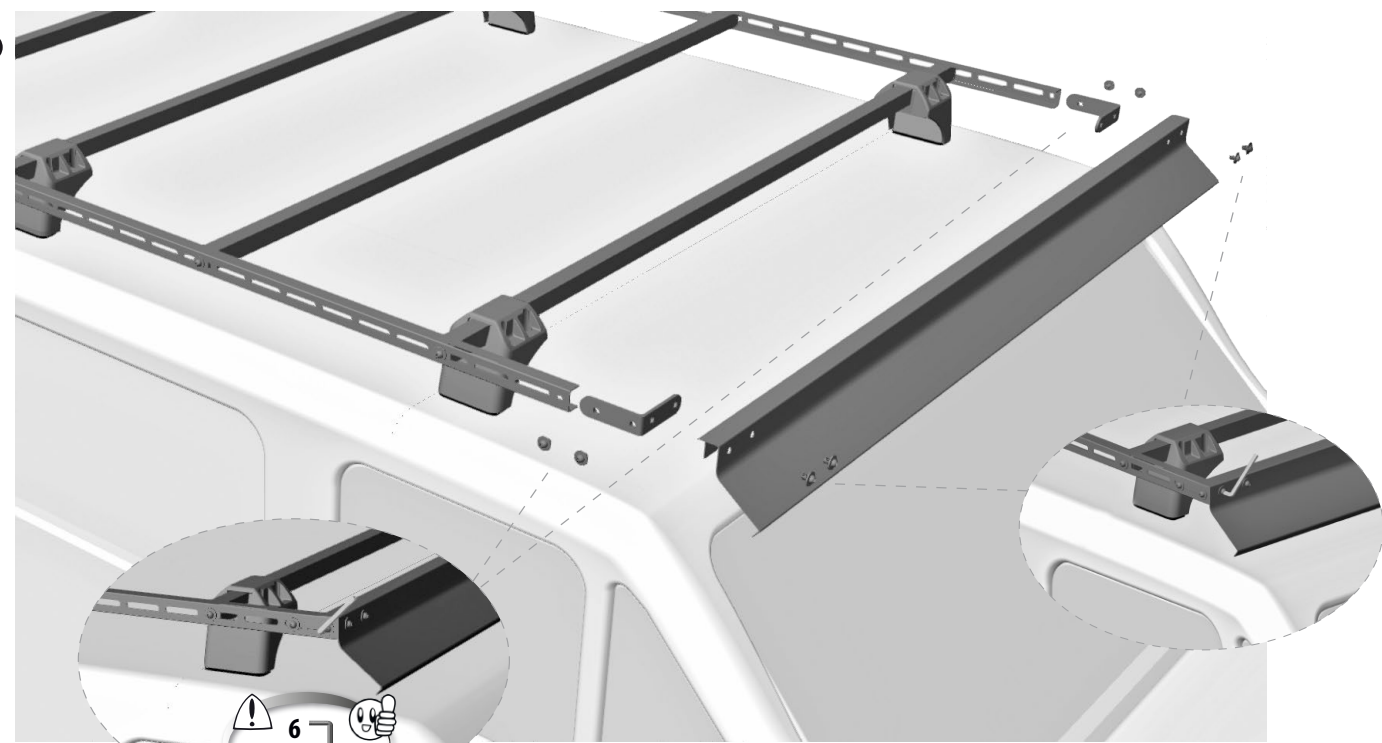


9

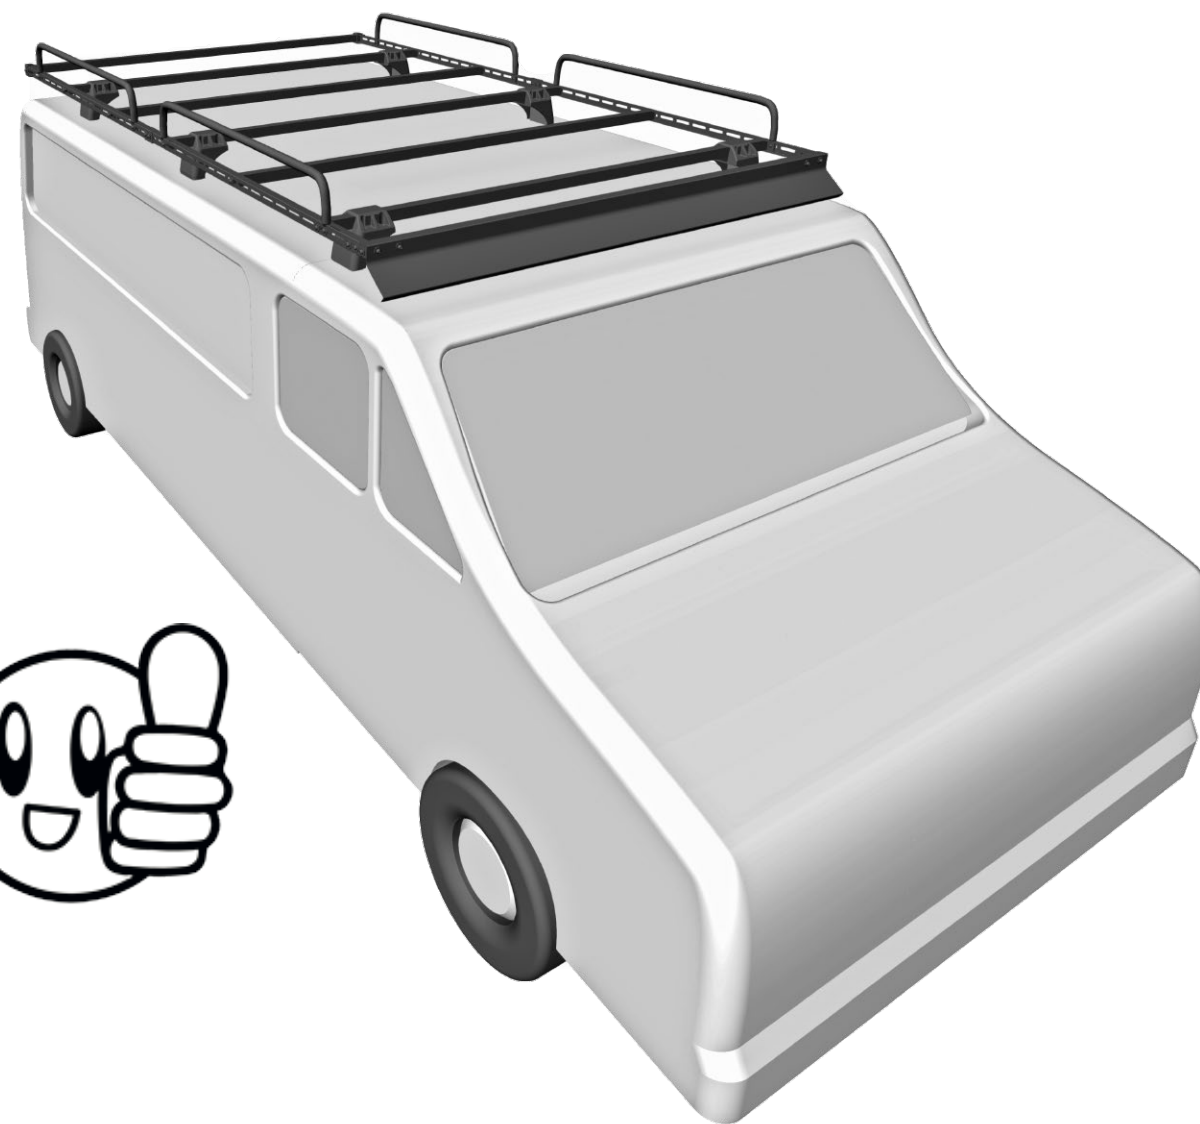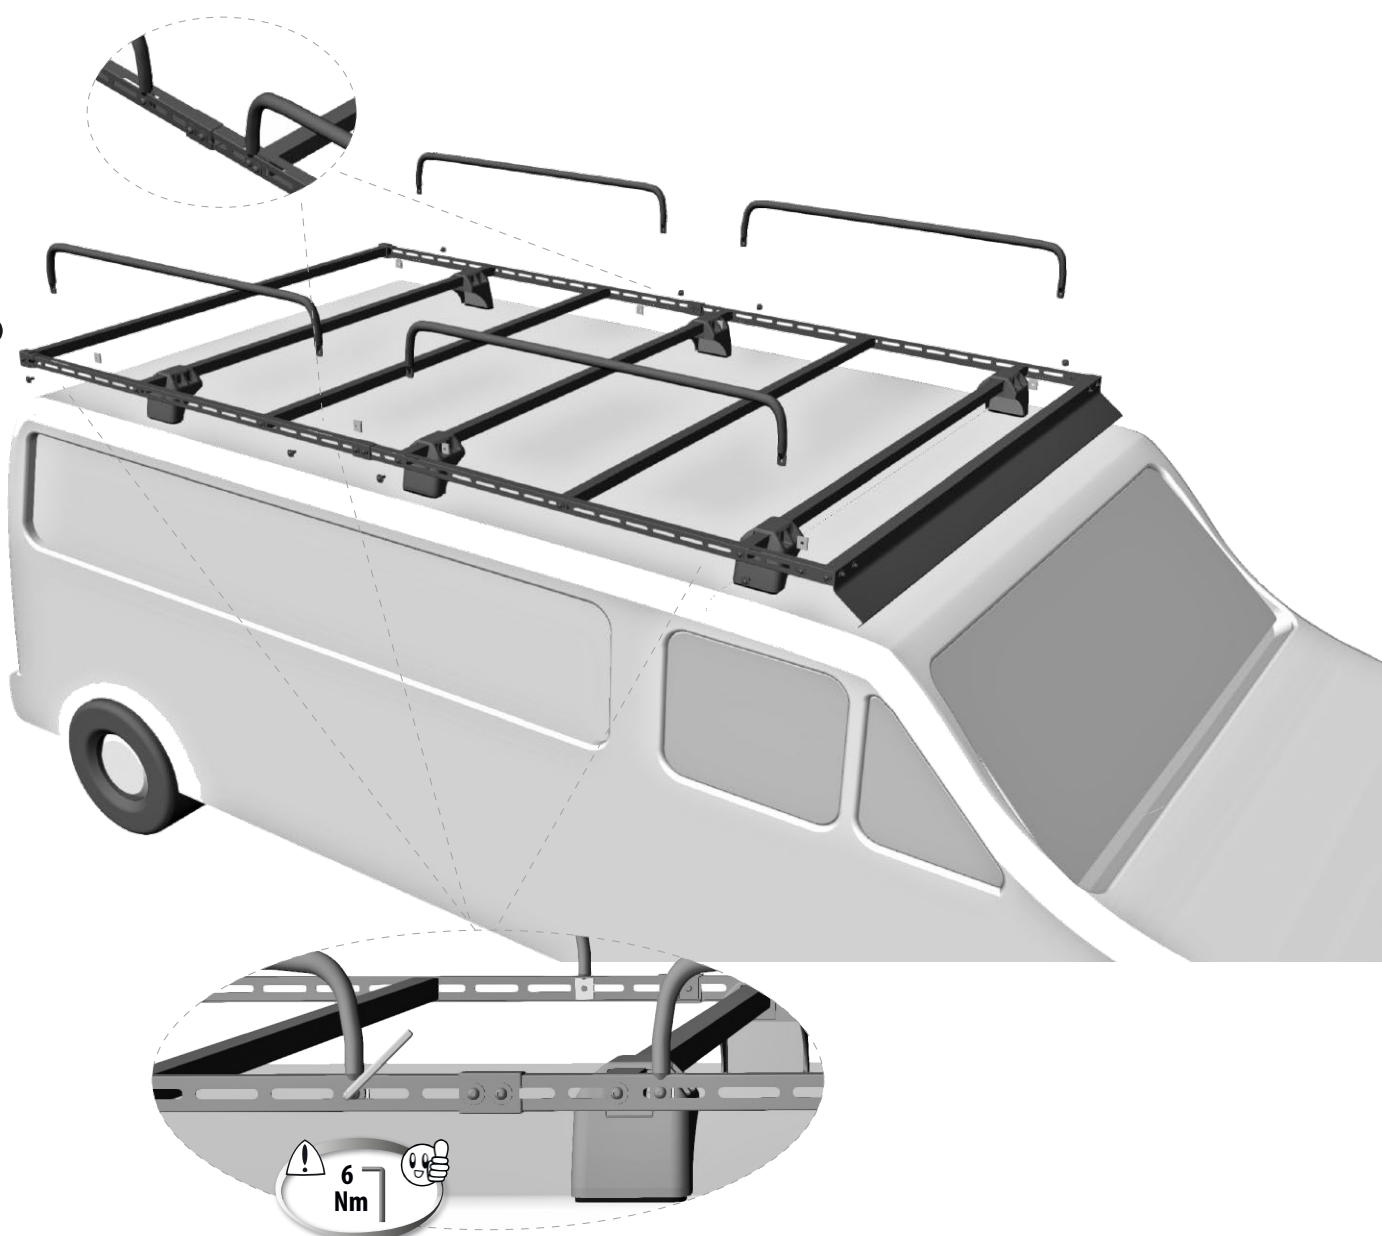

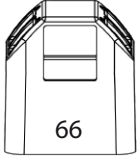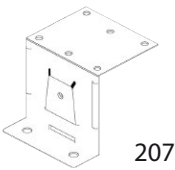N		Q
1		8
2		8
3		8
4		8
5		16
6		1


N	BO0060 x2	Q
8	 DIN912 M6x20	32
9	 DIN125 Ø6	32

N	BO0014 x8	Q
10	 DIN912 M6x30	16
11	 DIN9021 Ø6	16

- E
C
GB
F
D
PT
I
PL
CZ
HU
RO
HR
TU


Instrucciones de montaje
Instruccions de muntatge
Assembly instrucctions
Instruction de montage
Montageanleitung
Instruções de montagem
Istruzioni di montaggio
Instrukcja montażu
Montážní návod
Szerelési Utasítás
Instrucțiuni de montaj
Detaljne upute
Öncelikle montaj

Kit de fijación
Kit de fixació
Fixation Kit
Kit fixation
Stützfuß-Kit
Kit fixação
Kit di fissaggio
Element mocujacy
Fixační kit
Rögzítő készlet
Kit de fixare
Kit za montažu
Montaj kiti

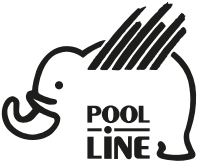





POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN:
E9
26R-03.1042






121931

Rv: 08/2025

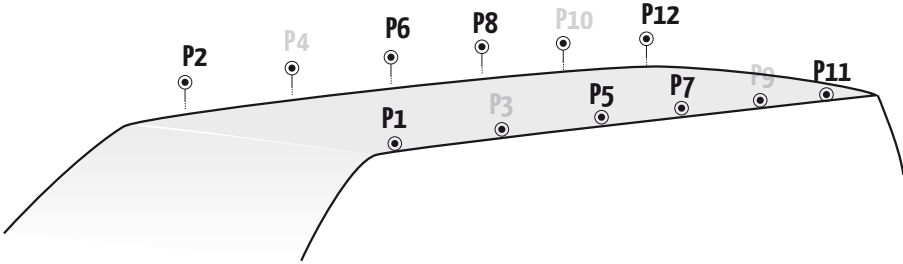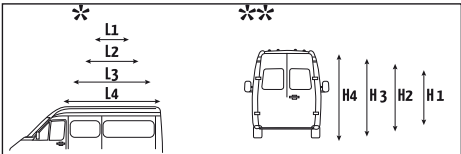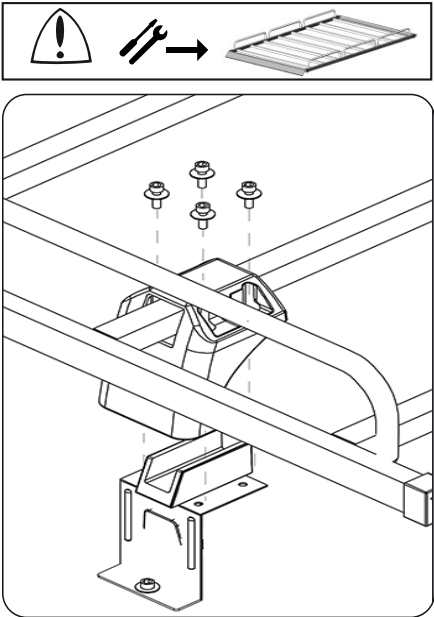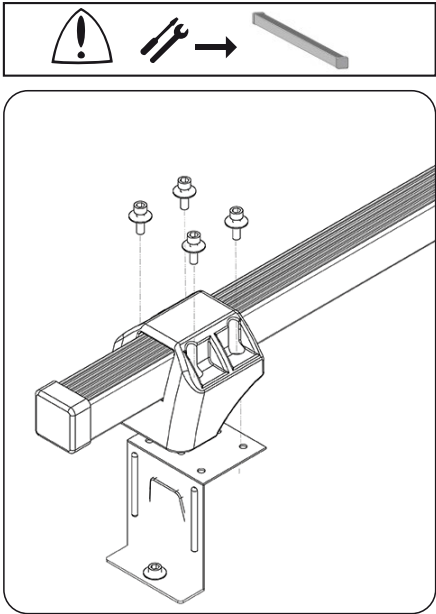

	L*	H**		10	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
Nissan																
Interstar	L2	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Interstar	L2	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
Interstar	L3	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Interstar	L3	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
NV400	L1	H1	10 - 24	B00014	207	207			207	207	207	207			207	207
NV400	L2	H2	10 - 24	B00014	207	207			207	207	207	207			207	207
NV400	L3	H2	10 - 24	B00014	207	207			207	207	207	207			207	207
Opel																
Movano	L2	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Movano	L2	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
Movano	L3	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Movano	L3	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
Movano	L1	H1	10 - 24	B00014	207	207			207	207	207	207			207	207
Movano	L2	H2	10 - 24	B00014	207	207			207	207	207	207			207	207
Movano	L3	H2	10 - 24	B00014	207	207			207	207	207	207			207	207
Renault																
Master	L2	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Master	L2	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
Master	L3	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Master	L3	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
Master	L1	H1	10 - 24	B00014	207	207			207	207	207	207			207	207
Master	L2	H2	10 - 24	B00014	207	207			207	207	207	207			207	207
Master	L3	H2	10 - 24	B00014	207	207			207	207	207	207			207	207

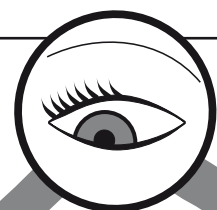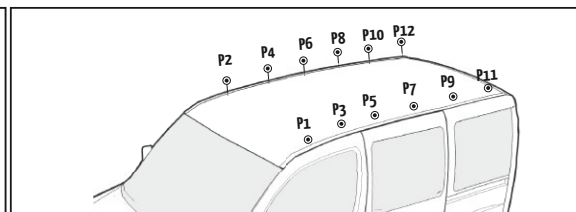
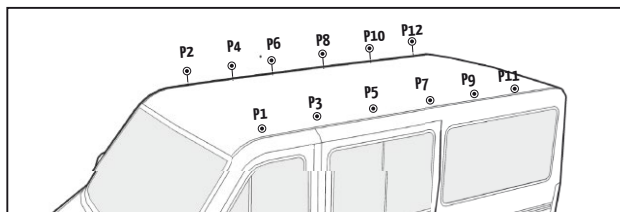


P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx



Pag. 1

2


1

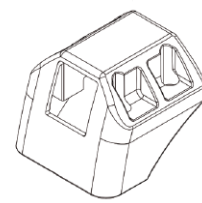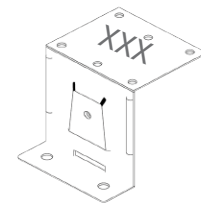

B

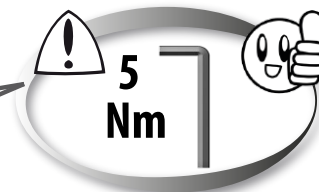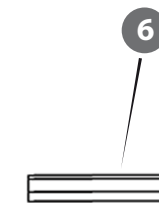

A

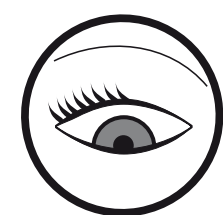

↻	10	P1	P2
0X	B0000XX		
0X	B0000XX		
	B0000X		

Pag. 1

10



11

2



3

4

5

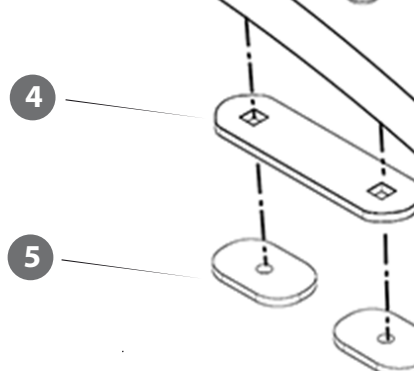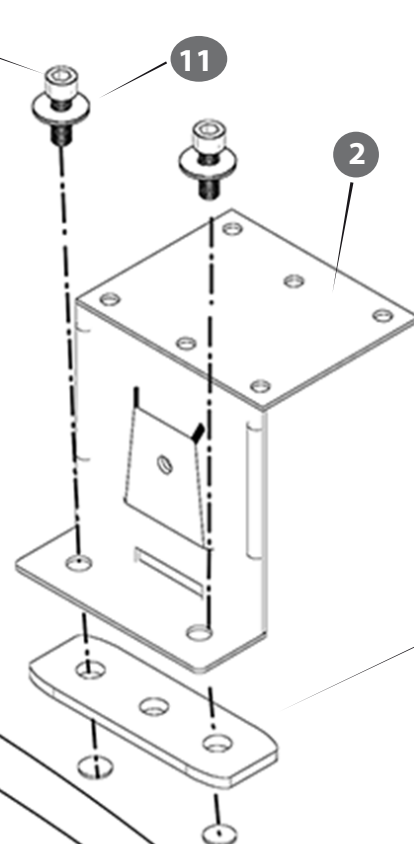


C

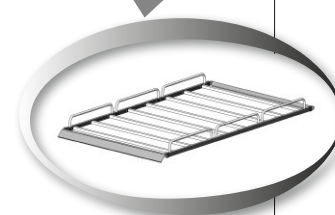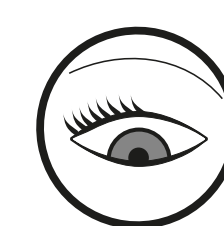

8

9

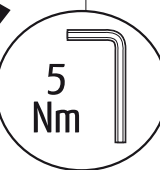

1

2

