

	L*	H**	
FORD			
Transit Connect Van II	L1	H1	13-
LAND ROVER			
Ranger Rover II	L1	H1	94-02
OPEL			
Combo C	L1	H1	02-11
RENAULT			
Express	L1	H1	91-00
VOLKSWAGEN			
Caddy III	L1	H1	04-11

- E

Instrucciones de montaje

Kit de fijación
- C

Instruccions de muntatge

Kit de fixació
- GB

Assembly instructions

Fixation Kit
- F

Instruction de montage

Kit fixation
- D

Montageanleitung

Stützfuß-Kit
- PT

Instruções de montagem

Kit fixação
- I

Istruzioni di montaggio

Kit di fissaggio
- PL

Instrukcja montażu

Element mocujący
- CZ

Montážní návod

Fixační kit
- HU

Szerelési Utasítás

Rögzítő készlet
- RO

Instructiuni de montaj


Kit de fixare
- HR

Detaljne upute

Kit za montažu
- TU

Öncelikli montaj

Montaj kiti

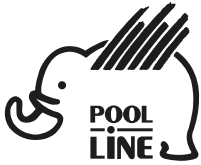

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net



200



KG.
MAX.


Nº HOMOLOGACIÓN: **E9** 26R-03.1042




RECICLABLE

123212



Rv: 08/2015

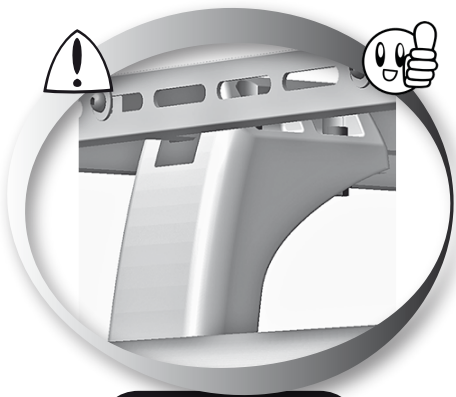


KIT CARGO-TECK

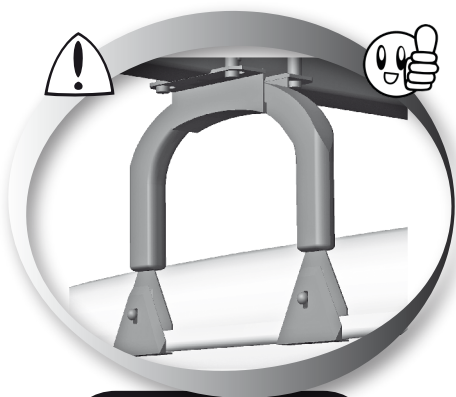



KIT CARGO-TECK FEET

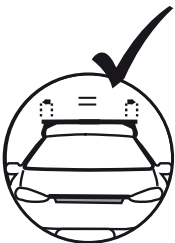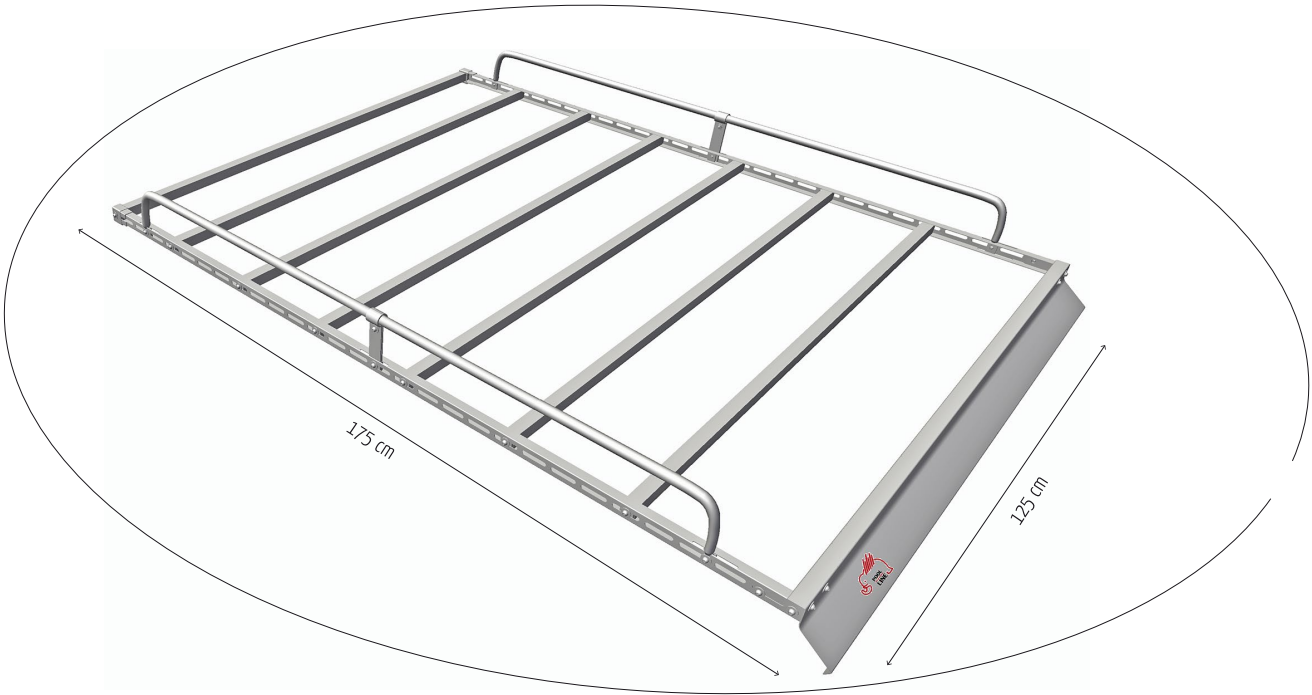







1 **year**
Warranty




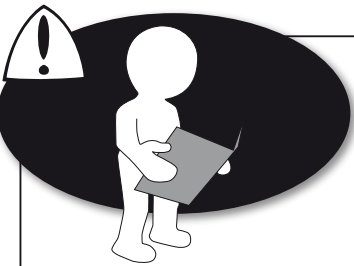




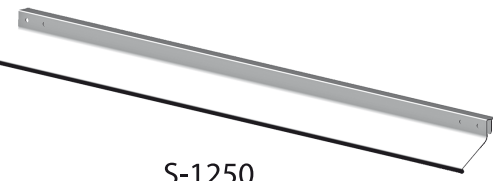
N		Q
1	 S-1250	1
2		2
3	 L-1730	2
4	 B-1442	2
5		4
6	 T-1235	7
7		14
8		2
9		6
10		1


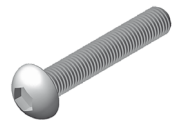
N		Q
11	 CHA-M8	6
12	 ISO 7380 M8x40	14
13	 ISO 7380 M8x16	14
14	 DIN 125 Ø 8	28
15	 DIN 603 M6x12	2
16	 DIN 6923 M6	2

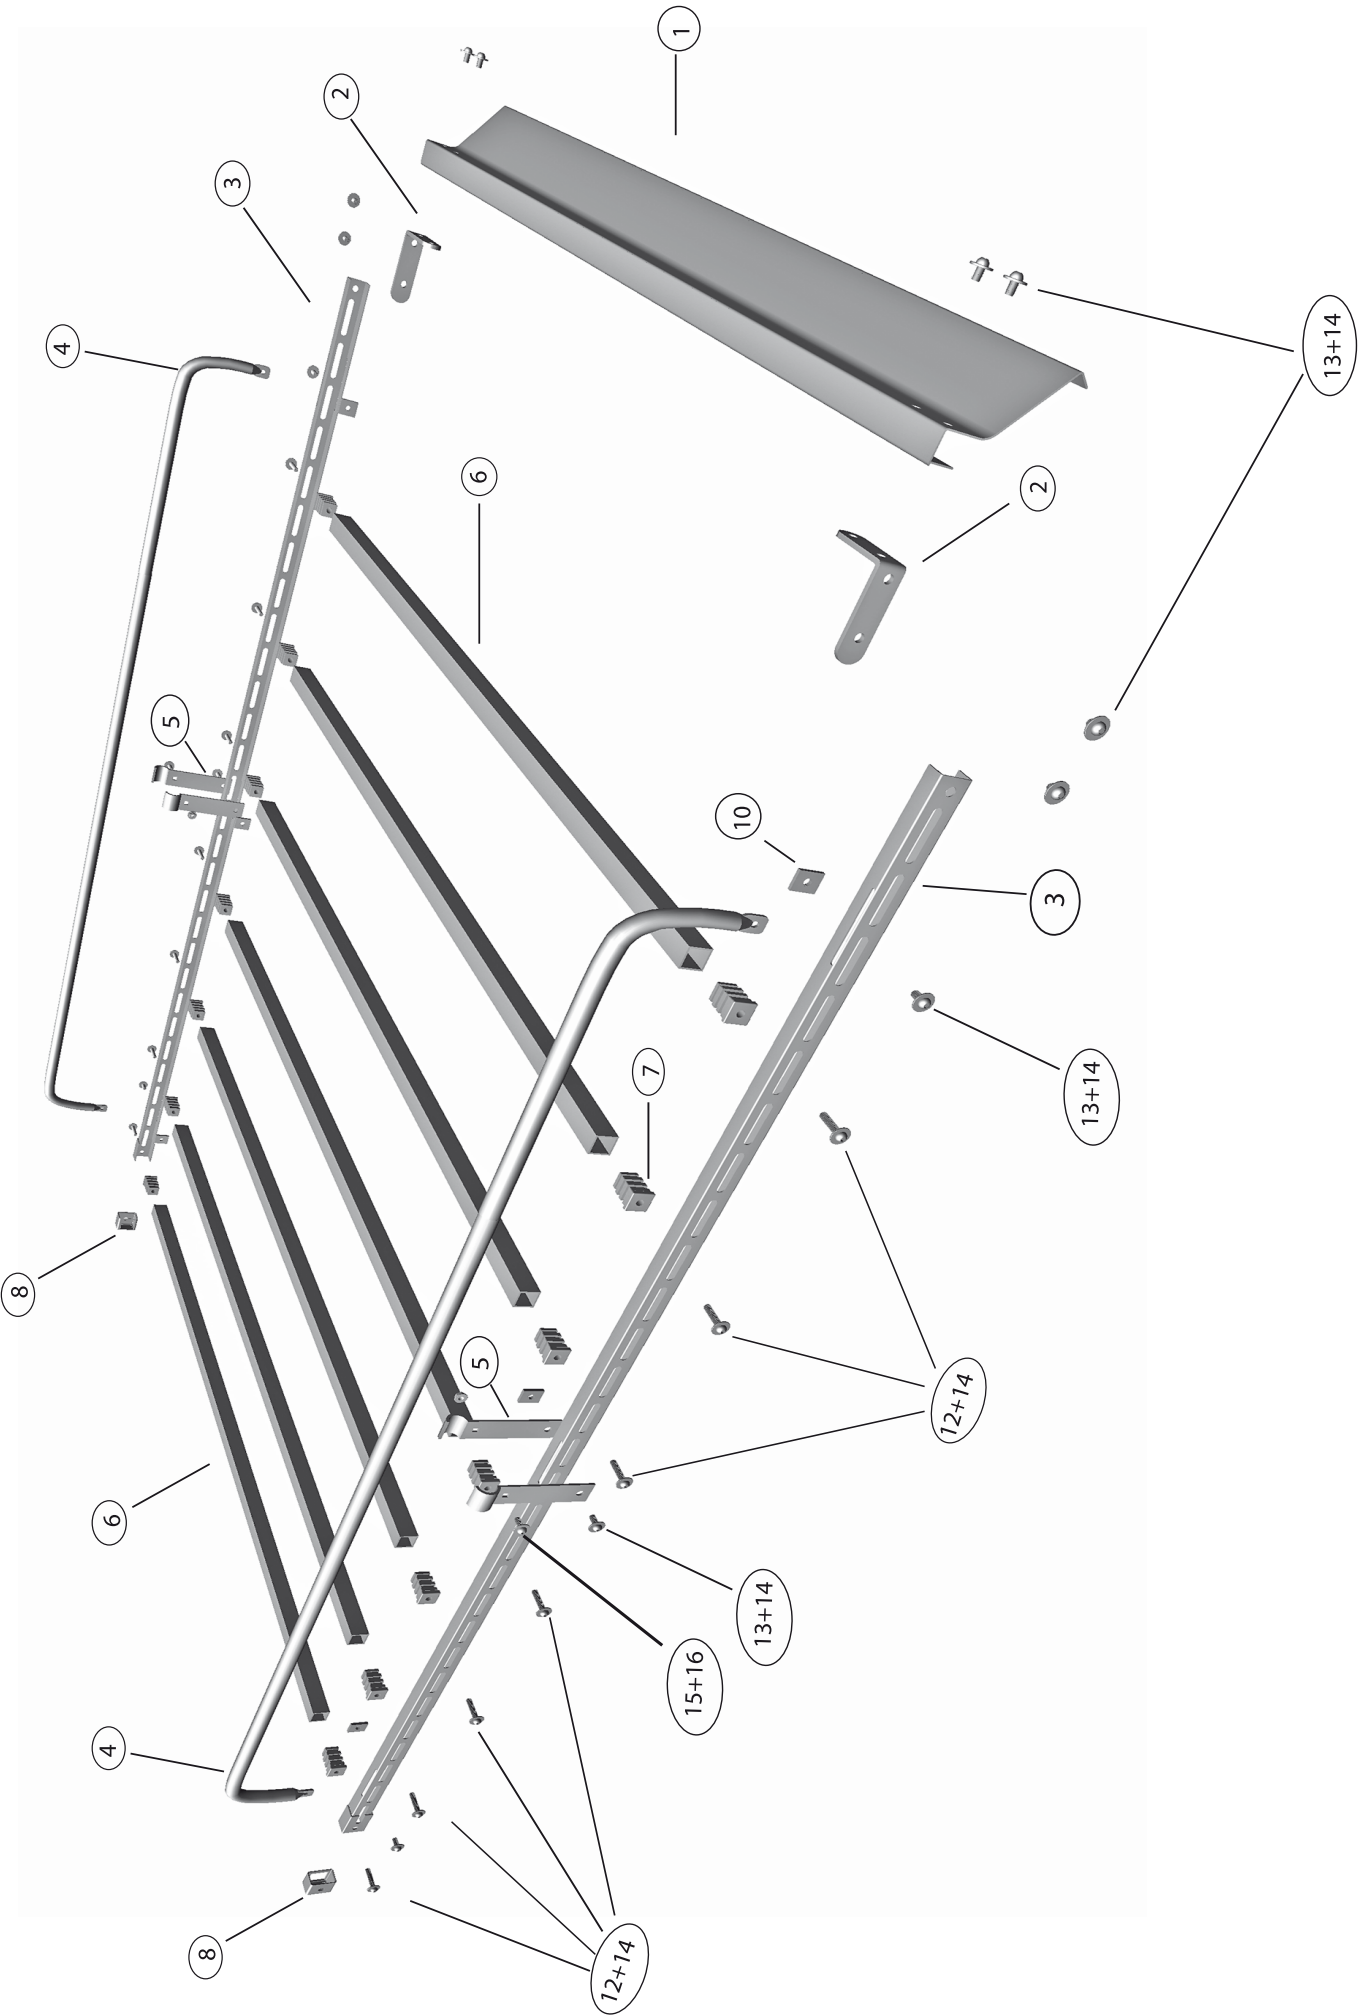

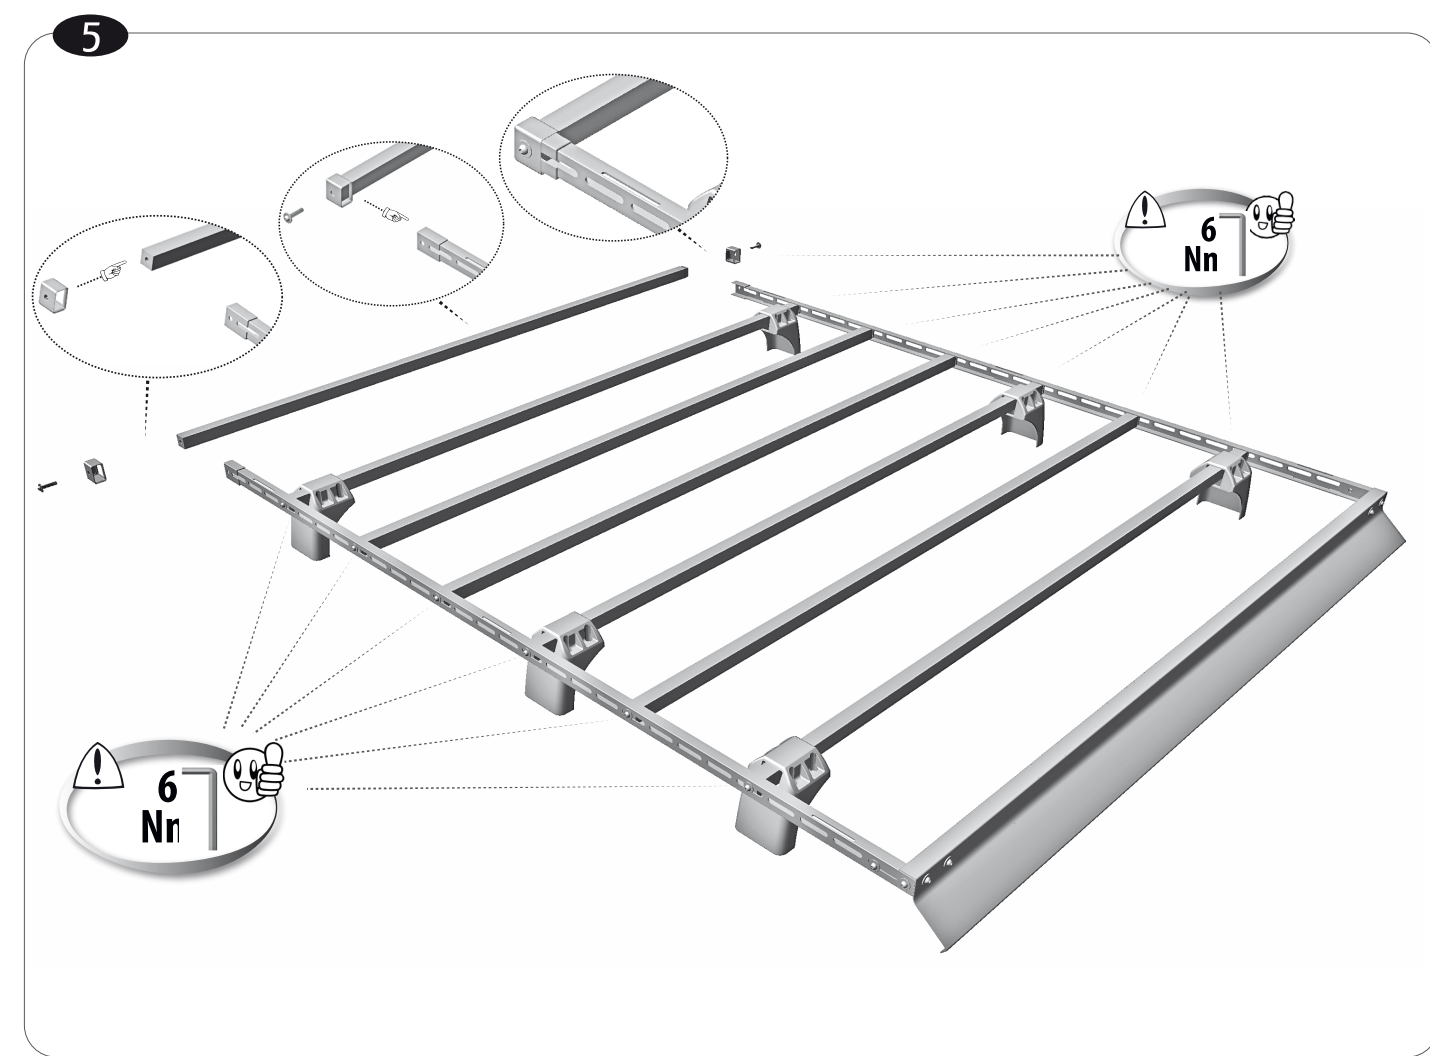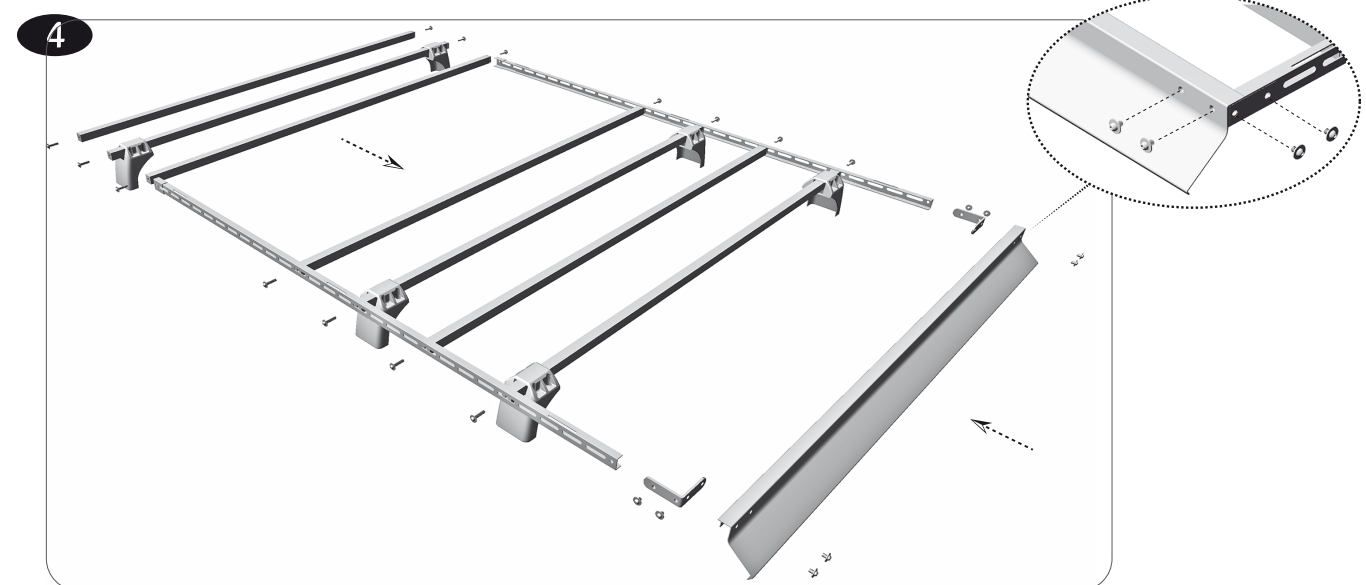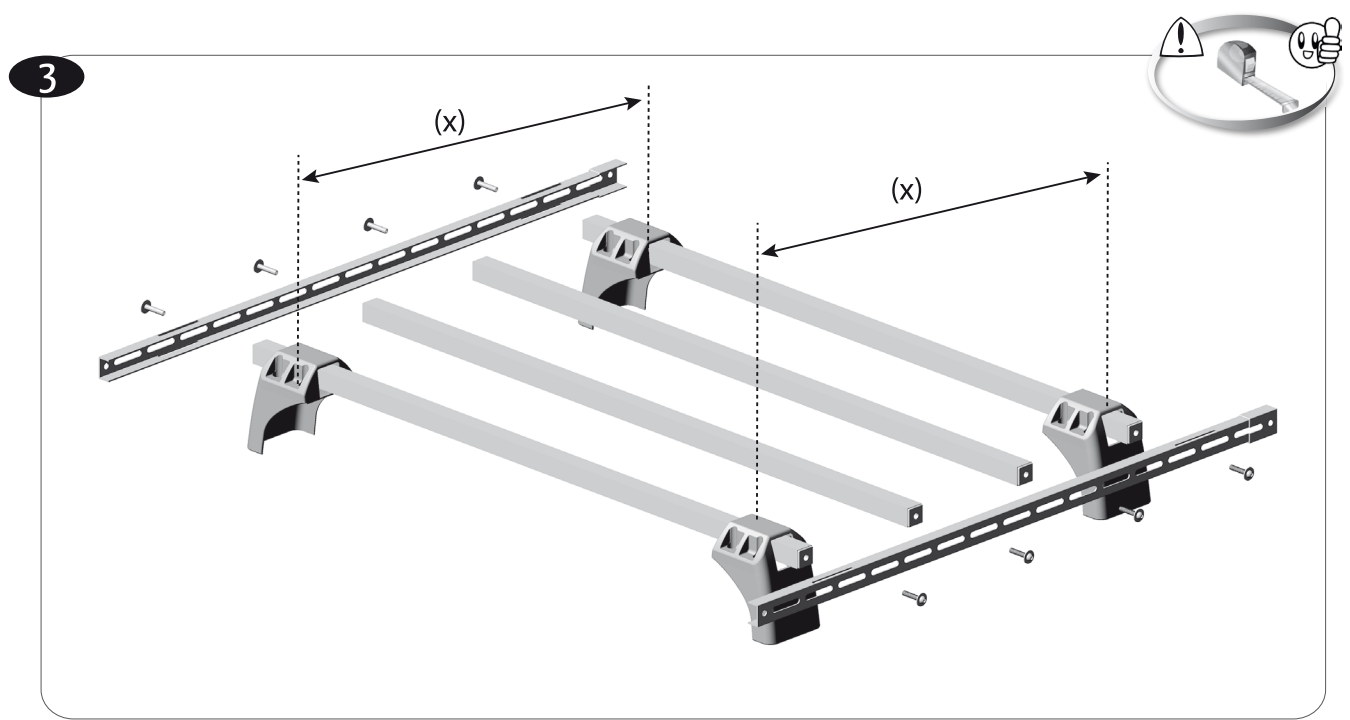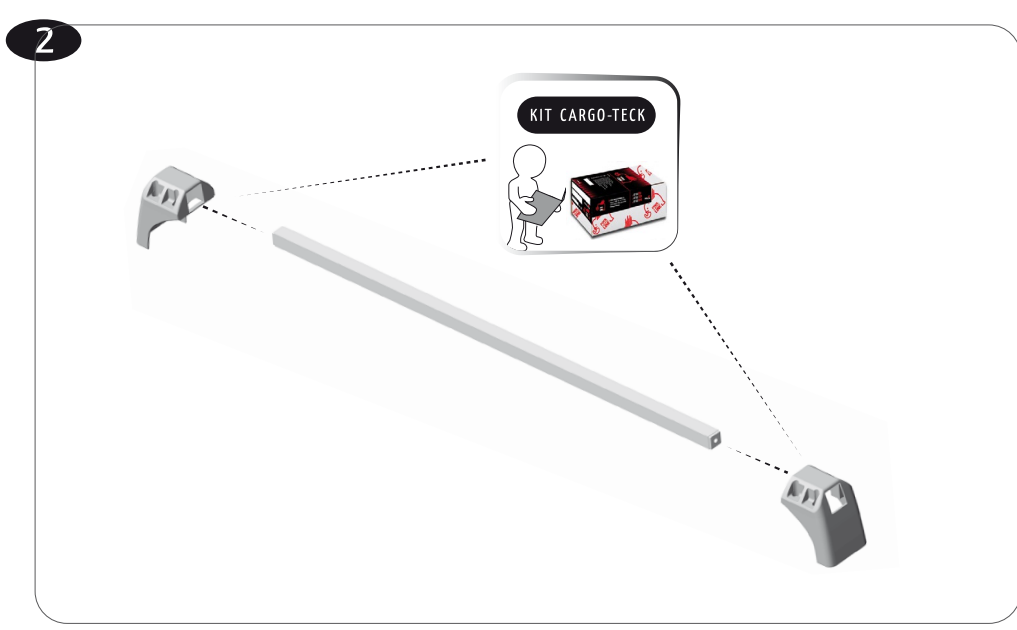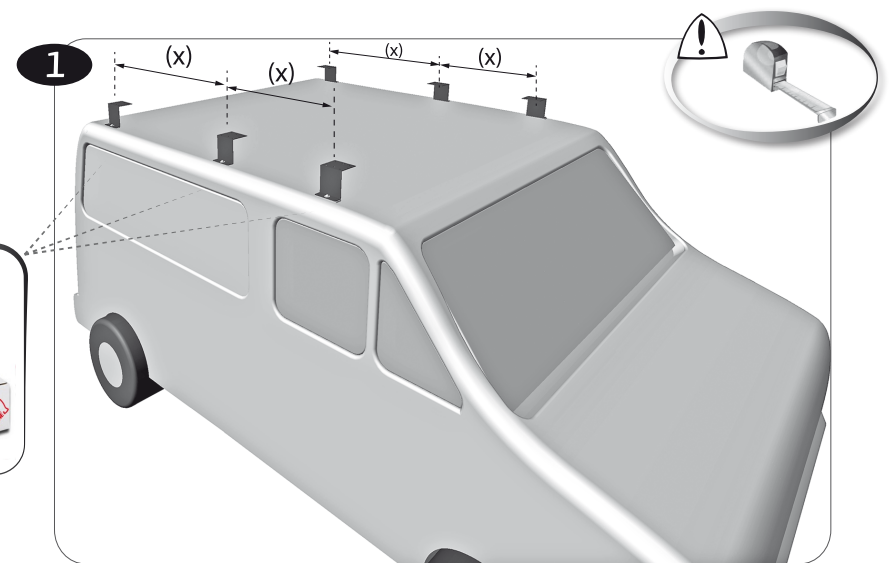

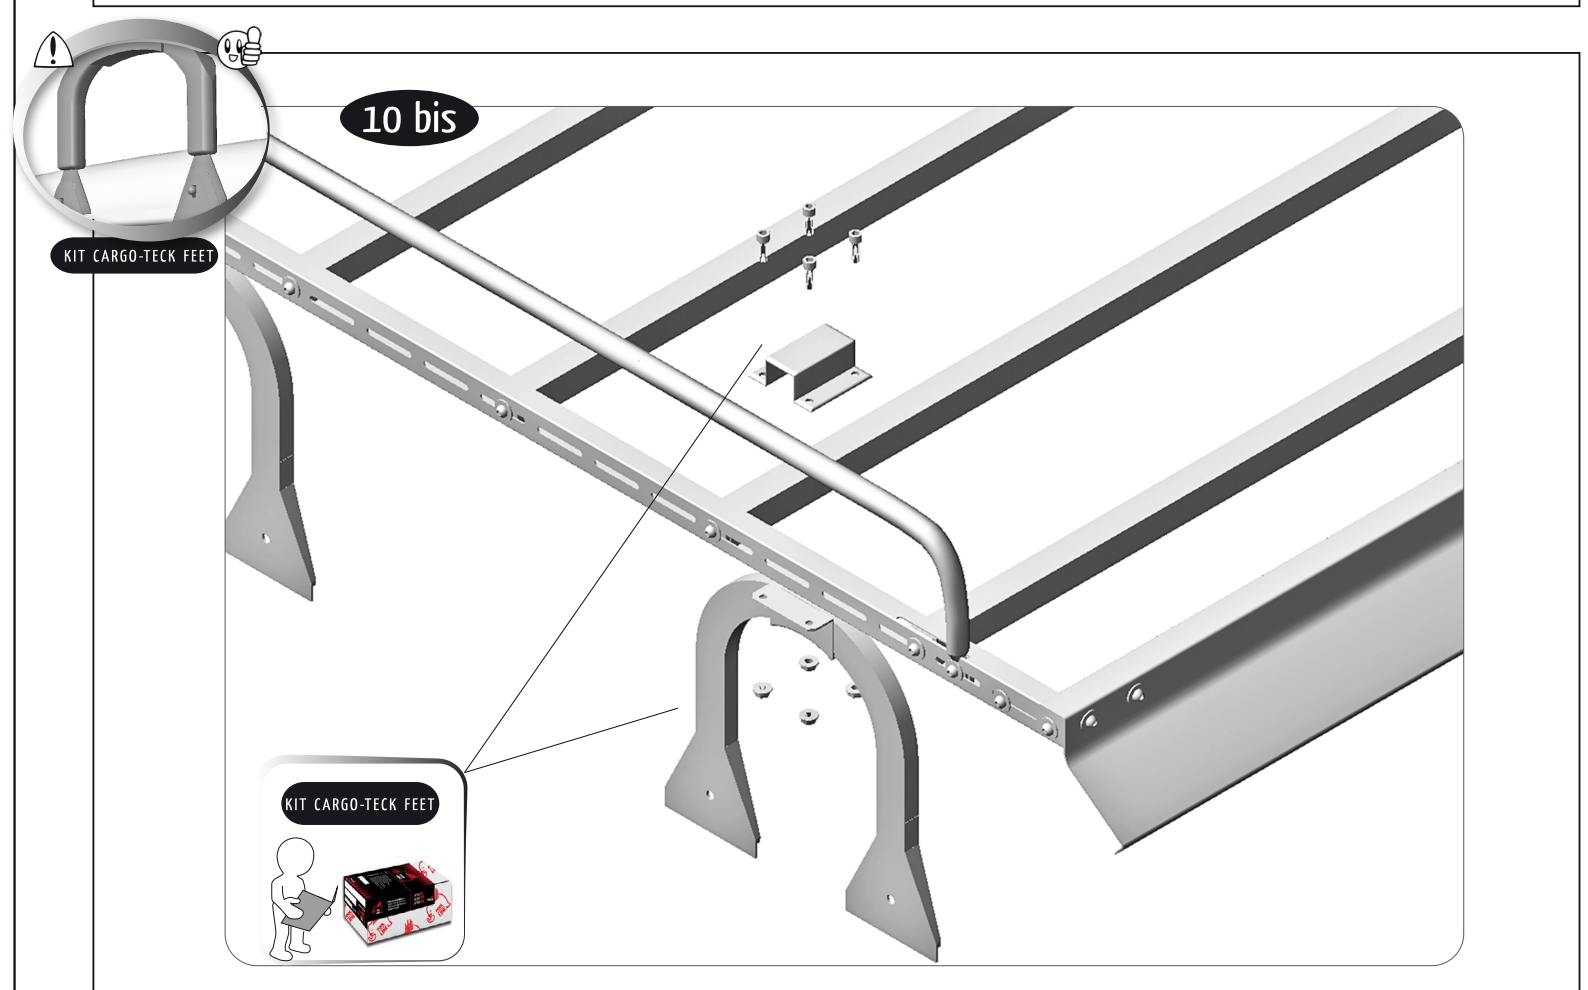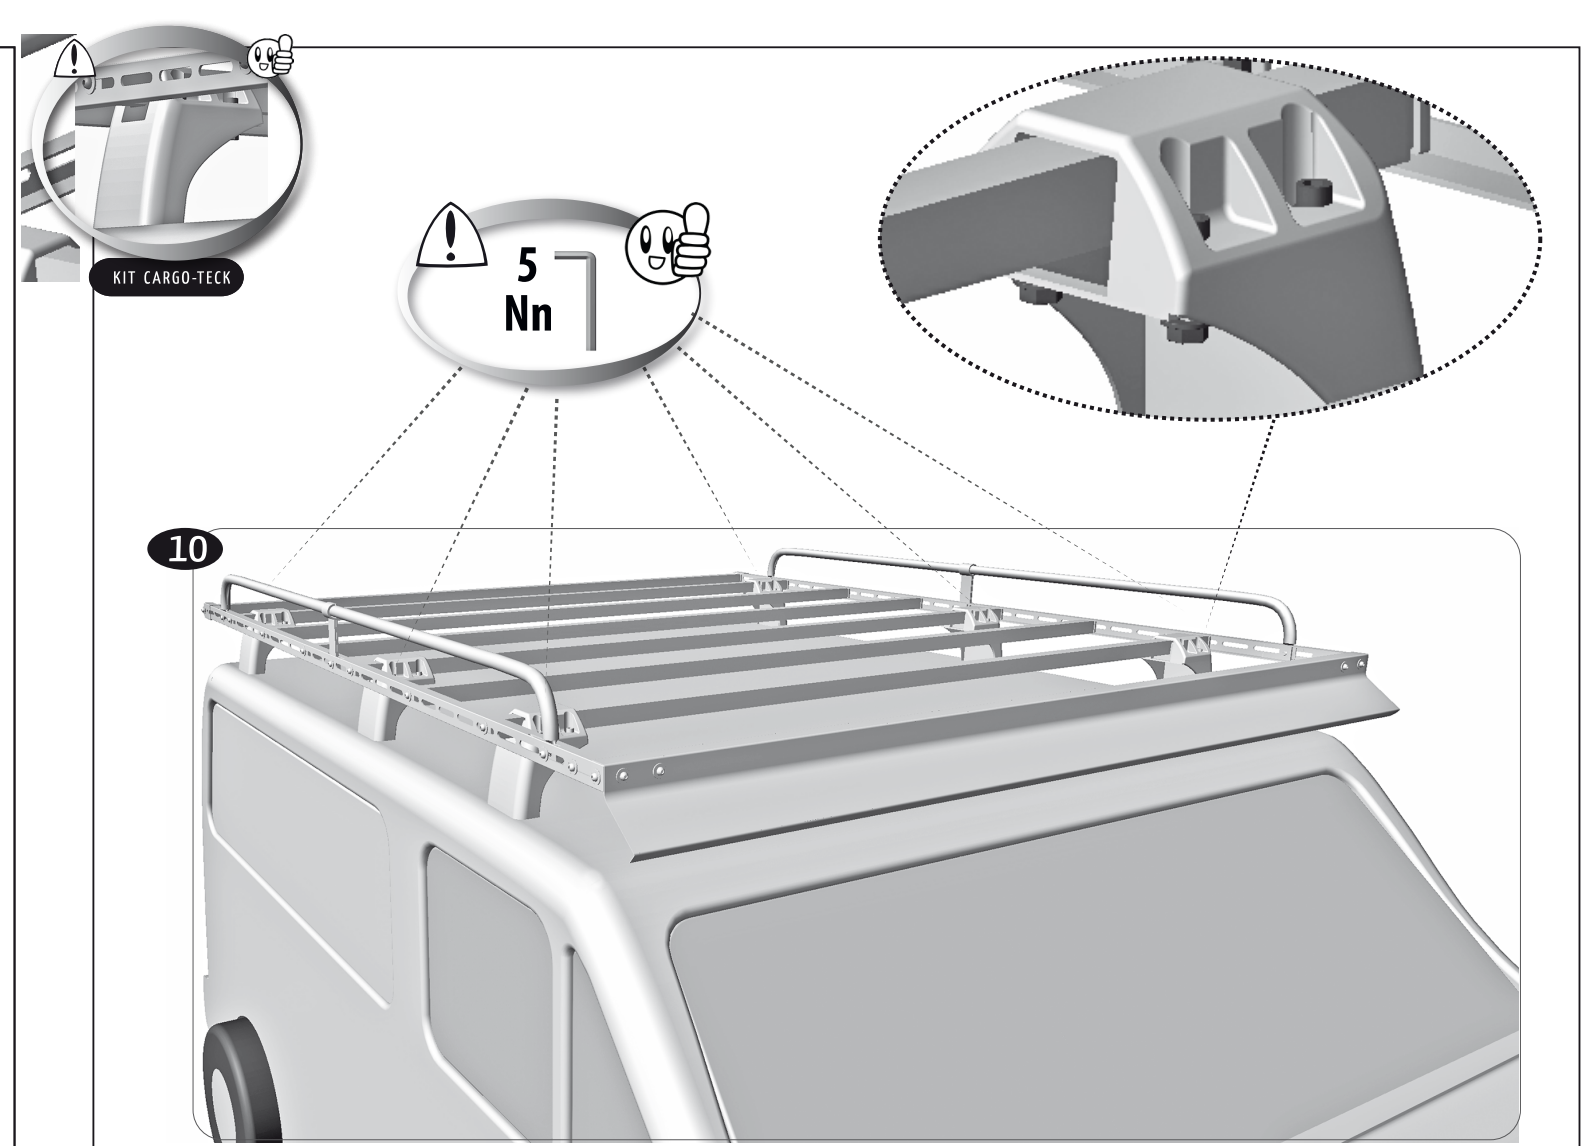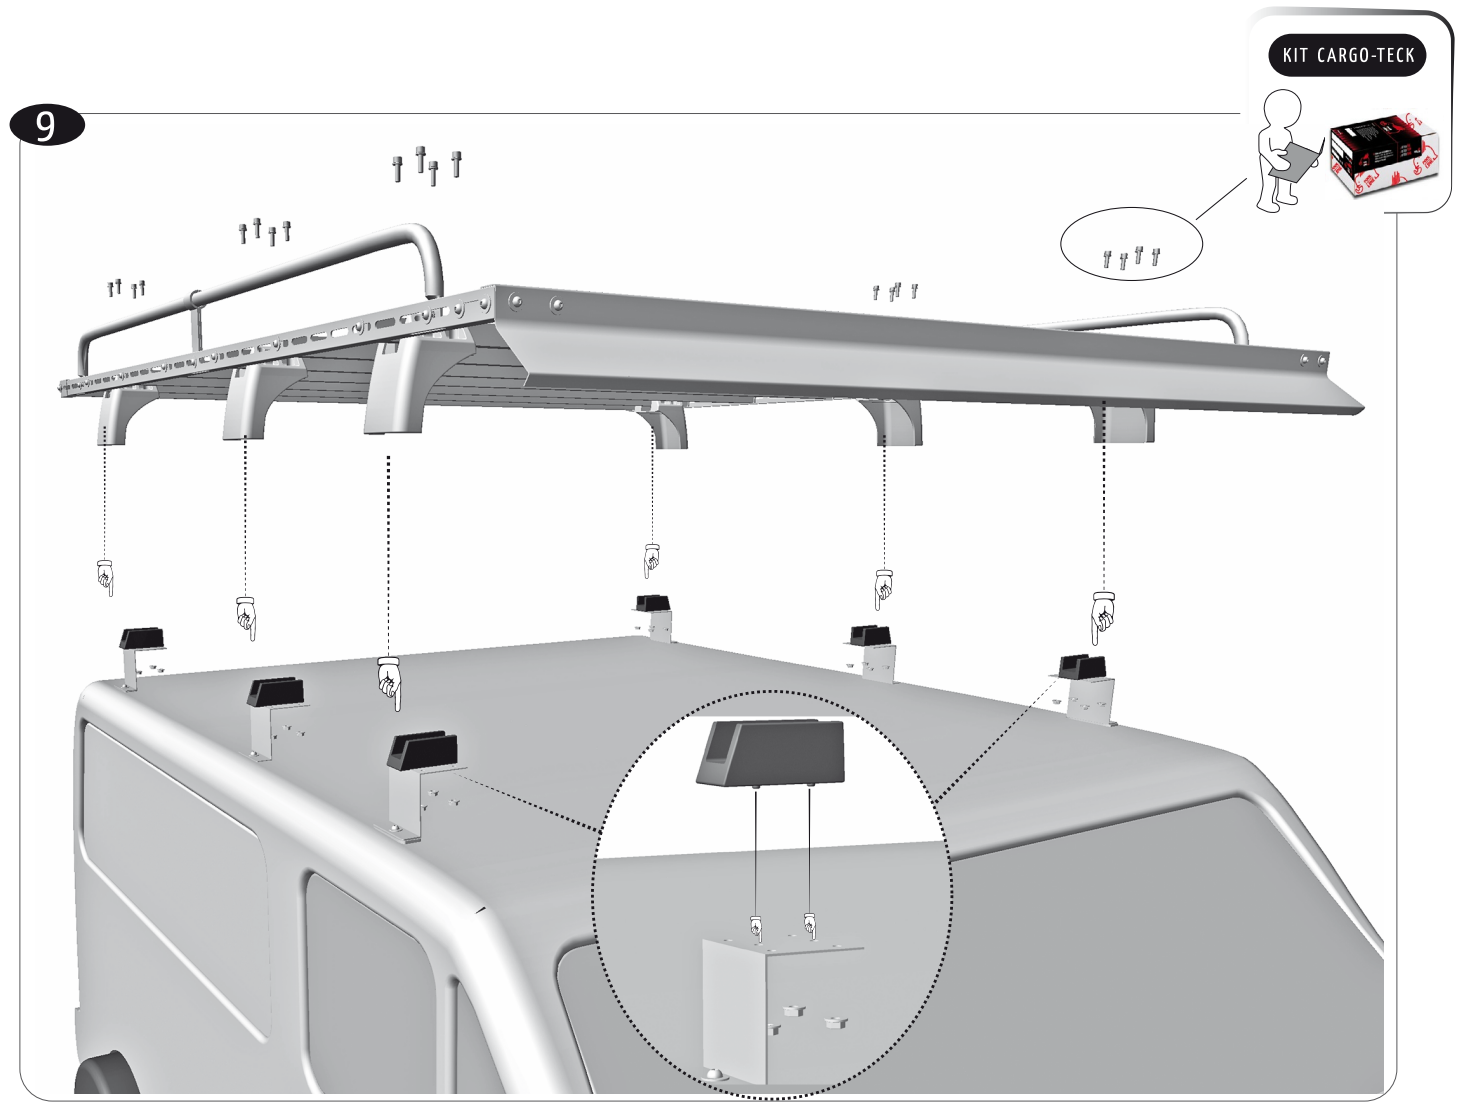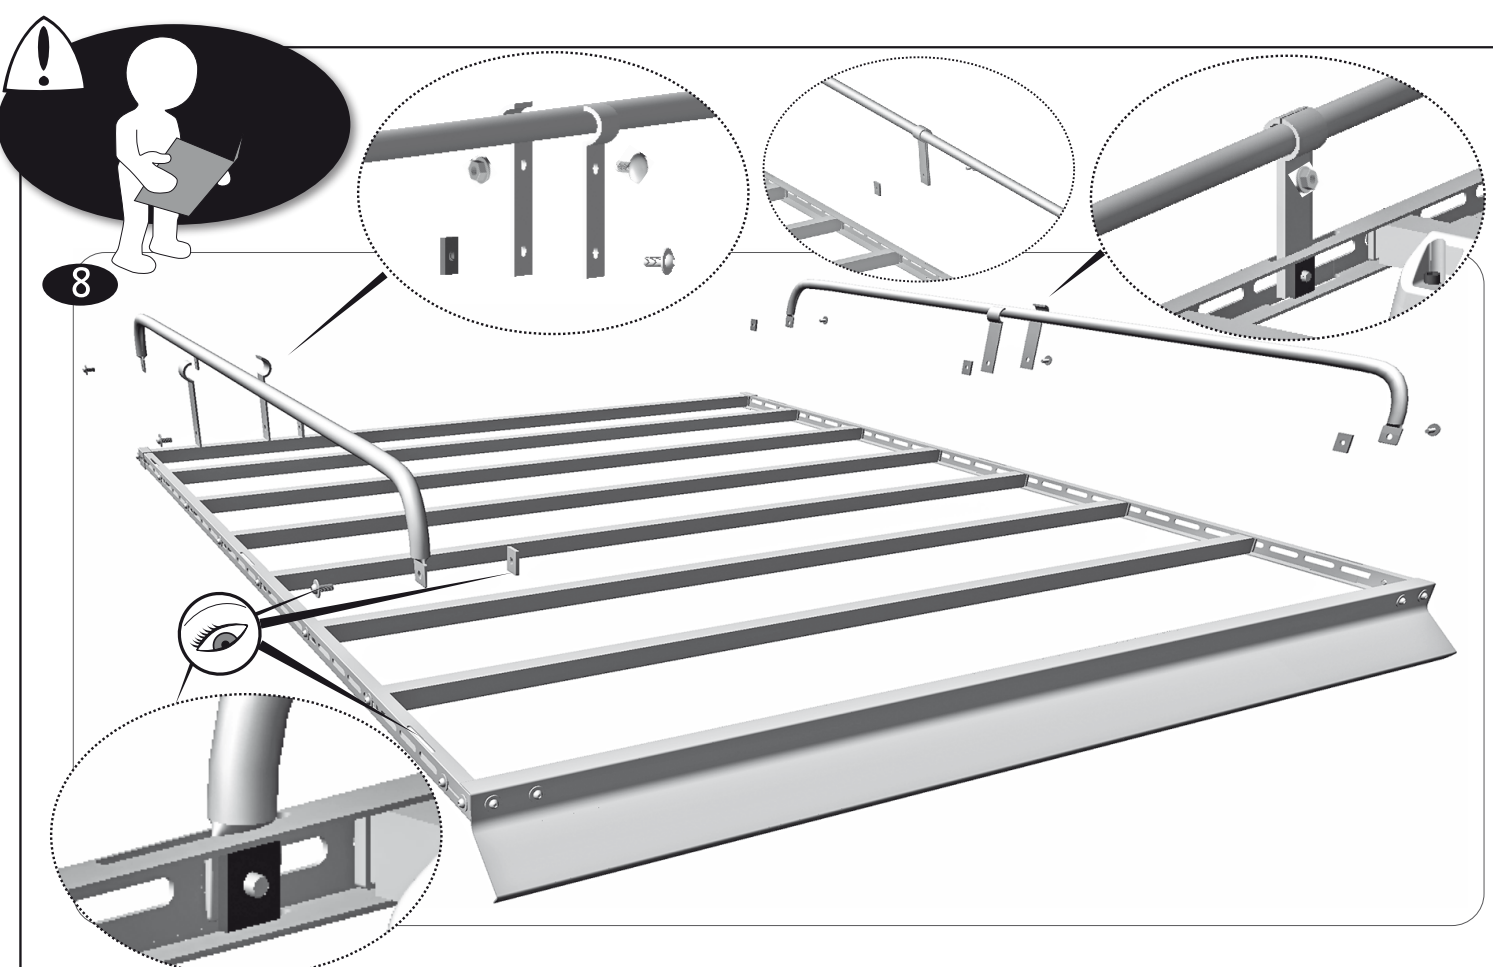

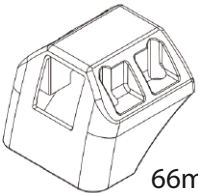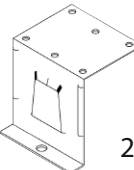N		Q
1	 66mm	4
2	 202	4
3		4
4		1
5		1

N	BO0060	Q
8	 DIN912 M6x20	16
9	 DIN125	16
N	BO0036	Q
10	 ISO7380 M8X16	4
N	BO0032	Q
11	 DIN125 Ø8	4
N		Q
12	 VENT6,5 65mm	2

- E

Instrucciones de montaje

Kit de fijación
- C

Instruccions de muntatge

Kit de fixació
- GB

Assembly instrucctions

Fixation Kit
- F

Instruction de montage

Kit fixation
- D

Montageanleitung

Stützfuß-Kit
- PT

Instruções de montagem

Kit fixação
- I

Istruzioni di montaggio

Kit di fissaggio
- PL

Instrukcja montażu

Element mocujący
- CZ

Montážní návod

Fixační kit
- HU

Szerelési Utasítás

Rögzítő készlet
- RO

Instrucțiuni de montaj


Kit de fixare
- HR

Detaljne upute

Kit za montažu
- TU


Öncelikli montaj

Montaj kiti

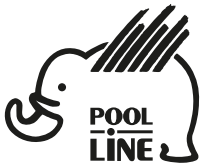


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042

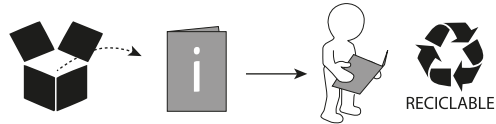


121730

Rv: 10/2024

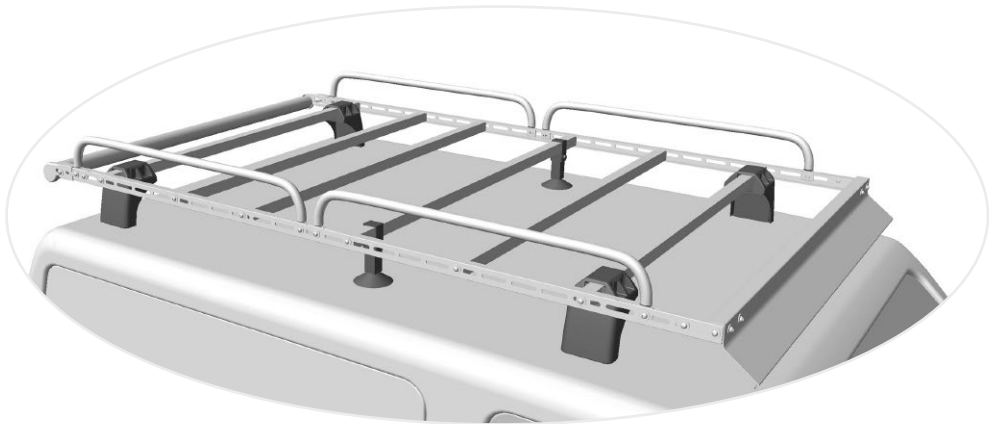


Limpieza pre-instalación

 Pre-installation cleaning

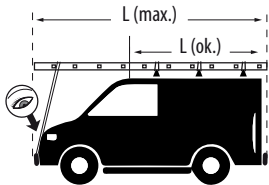

Revisar par de apriete

 Check torque

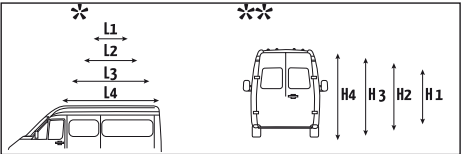

	L*	H**			P1	P2				P3	P4				P5	P6
NISSAN																
Kubistar	L1	H1	97 - 08	B000036 + B00032	202	202				VENT6,5	VENT6,5				202	202
Kubistar GV	L2	H1	97 - 08	B000036 + B00032	202	202				VENT6,5	VENT6,5				202	202
RENAULT																
Kangoo I	L1	H1	96 - 08	B000036 + B00032	202	202				VENT6,5	VENT6,5				202	202
Kangoo I GV	L2	H1	97 - 08	B000036 + B00032	202	202				VENT6,5	VENT6,5				202	202

