



- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net



200 KG.
MAX.



Nº HOMOLOGACIÓN: E 9 26R-03.1042





RECICLABLE

123580

Rv: 05/2024

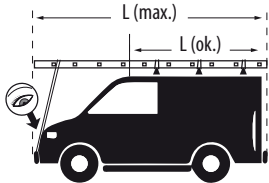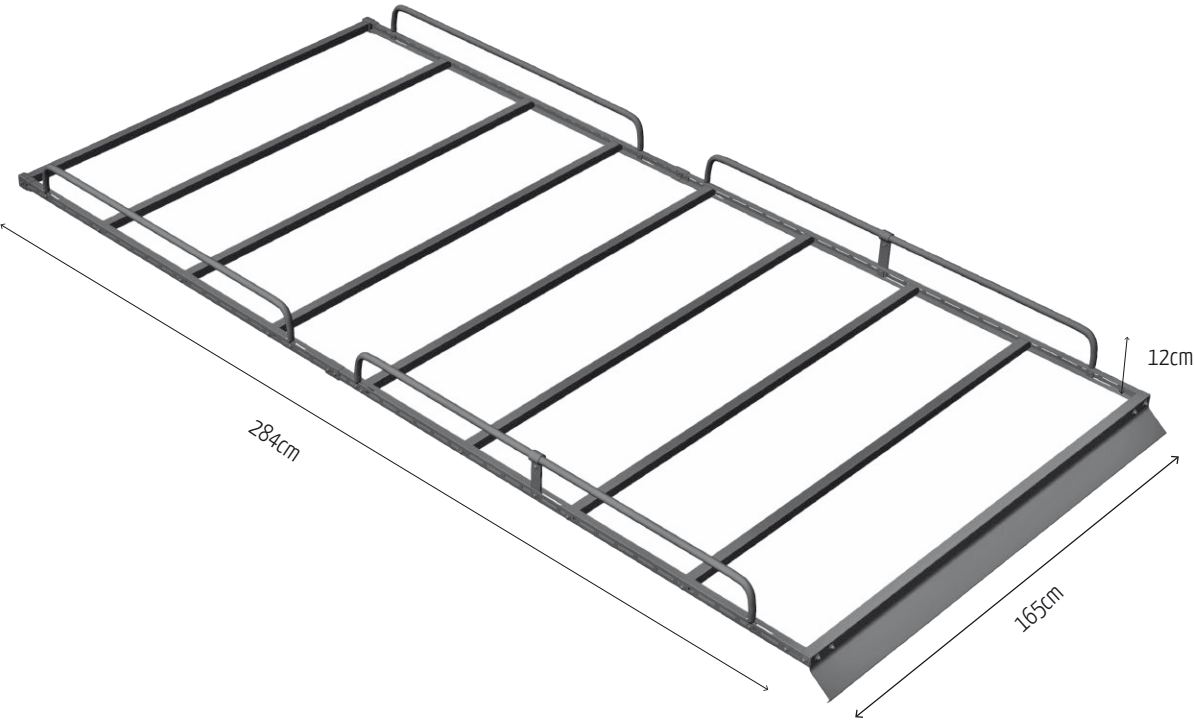


N		Q
1	 S-1650	1
2	 L-1540	2
3	 L-1300	2
4	 T-1635	8
5	 B-1262	2
6	 B-1022	2
7	 CHA-M8	16
8	 L-1540	2
9	 CHA-M8	2
10	 L-1540	8
12	 L-1300	1
13	 CHA-M8	14
14	 ISO 7380 M8x30	16
15	 ISO 7380 M8x16	22
16	 DIN 125 Ø 8	38
17	 L-1540	4
19	 DIN 603 M6x12	2
20	 DIN 6923 M6	2

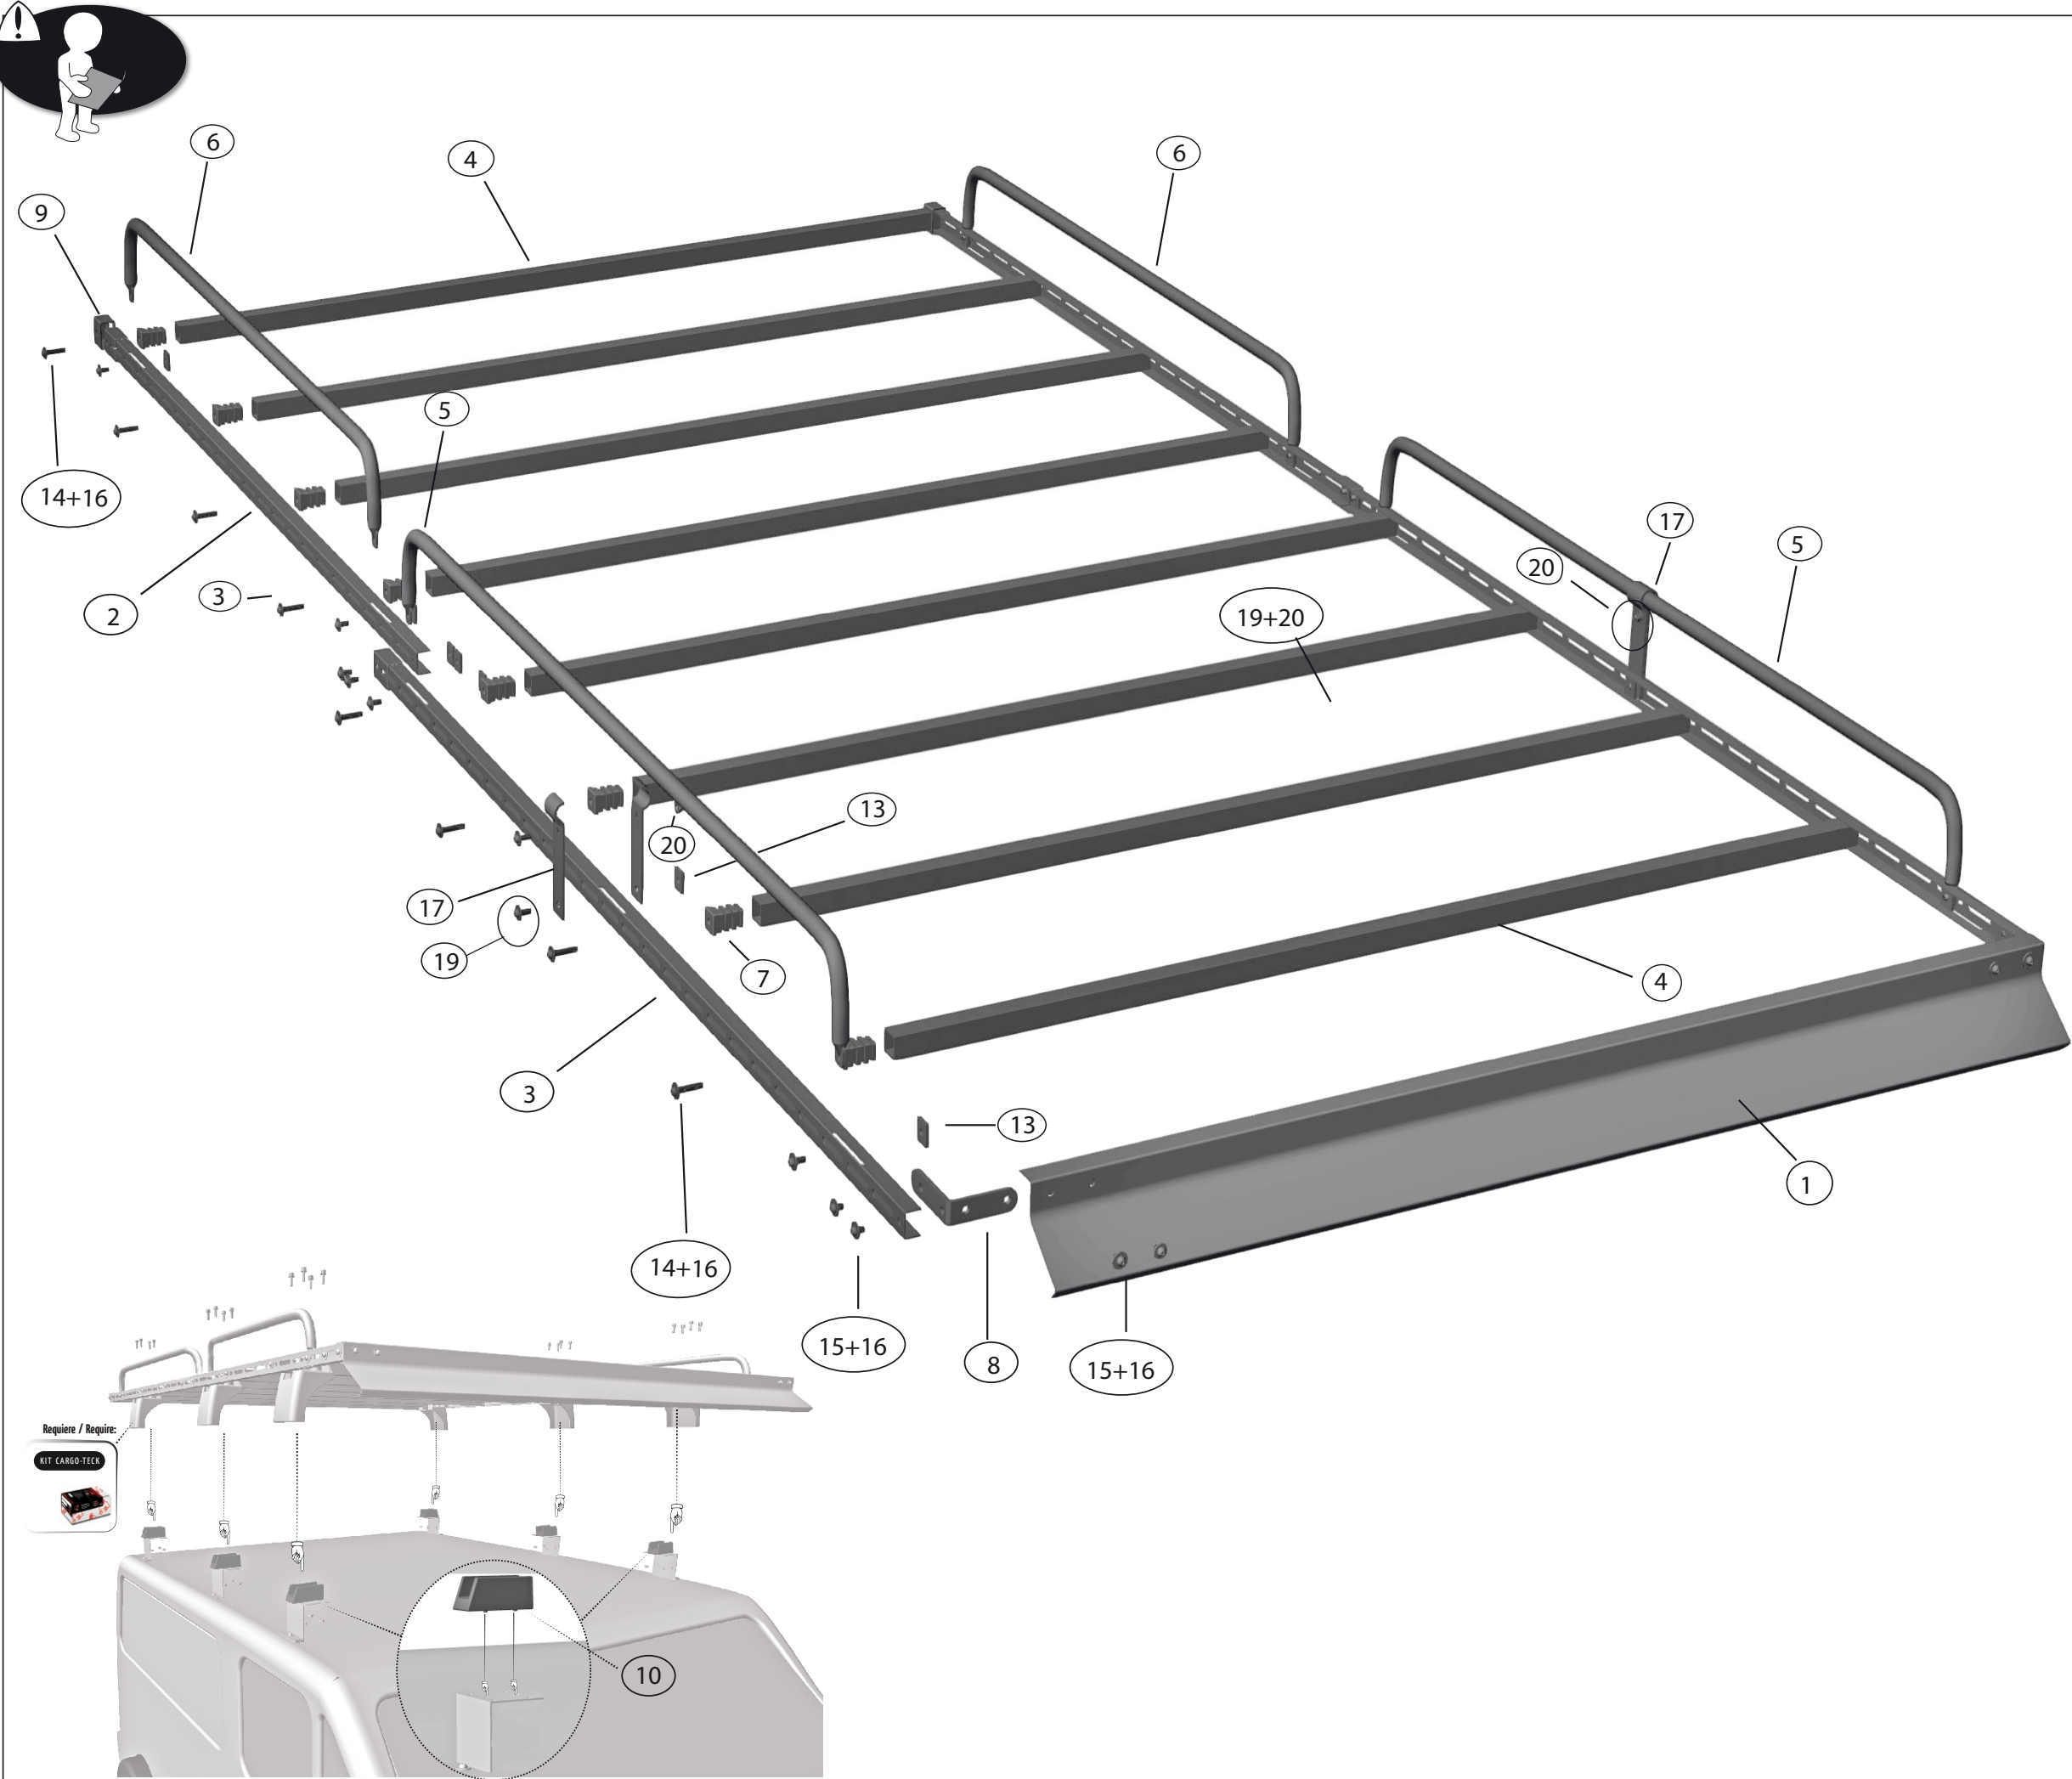




Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone




Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone


- NISSAN INTERSTAR L1-H1 (2022->)
- NISSAN NV400 L1-H1 (10-21)
- OPEL MOVANO B L1-H1 (10-21)
- RENAULT MASTER III L1-H1 (2010->)

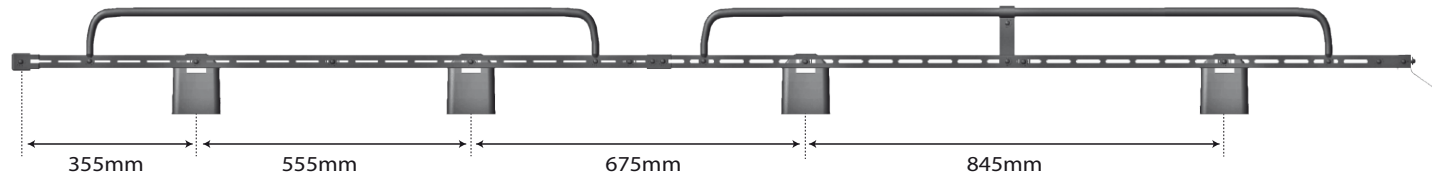

- NISSAN PRIMASTAR X83 L1-H1 (02-14)
- OPEL VIVARO A L1-H1 (02-14)
- RENAULT TRAFIC II L1-H1 (02-14)

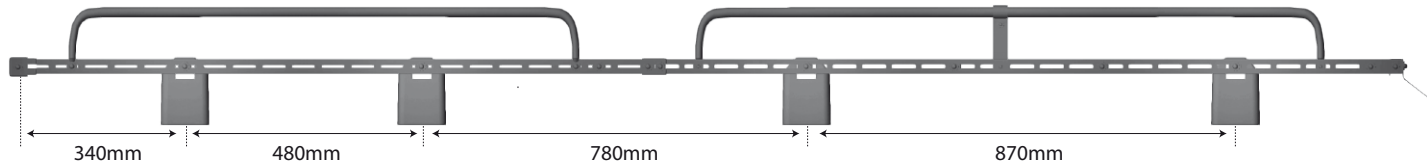


- FIAT TALENTO II L1H1 (2016->)
- NISSAN NV300 L1-H1 (16-22)
- NISSAN PRIMASTAR X-82 L1-H1 (2022->)
- OPEL VIVARO B L1H1 (14-19)
- RENAULT TRAFIC III L1H1 (2014->)

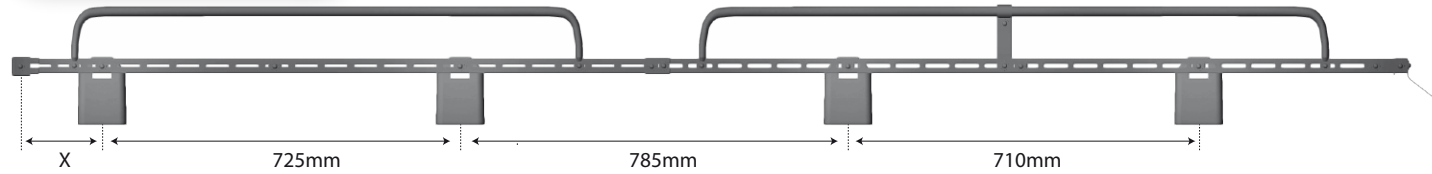


X=250mm
X=180mm

- MERCEDES SPRINTER II W906 L1 2006-2018
- VOLKSWAGEN CRAFTER L1 2006-2018

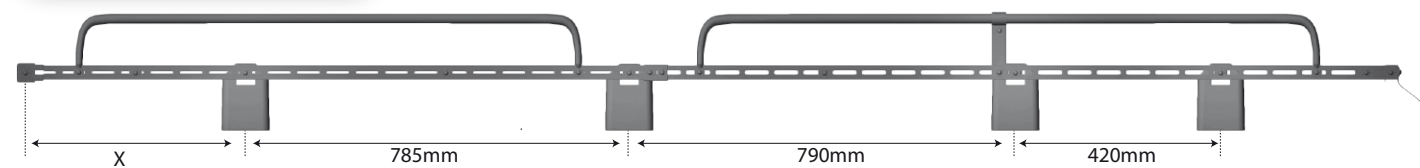

L1- H1 X= 485mm
L1- H2 X= 415mm

- CITROËN JUMPER III L1-H2 (2006->)
- FIAT DUCATO III L1-H2 (2006->)
- OPEL MOVANO C L1-H2 (21-)
- PEUGEOT BOXER III L1-H2 (2006->)

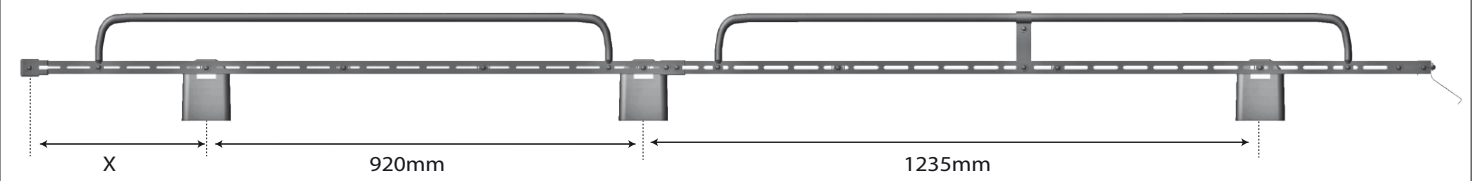


X=

1


?

KIT CARGO-TECK

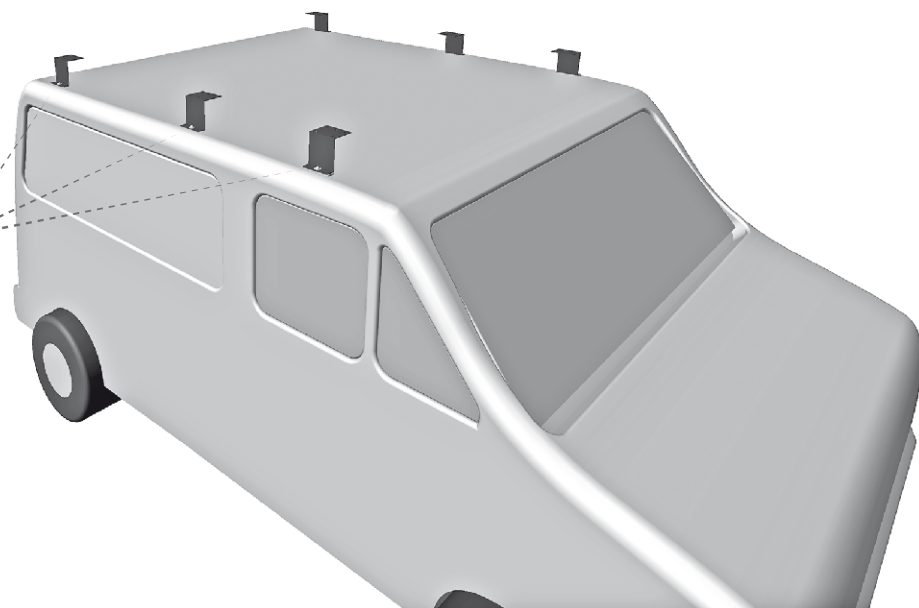

2



KIT CARGO-TECK




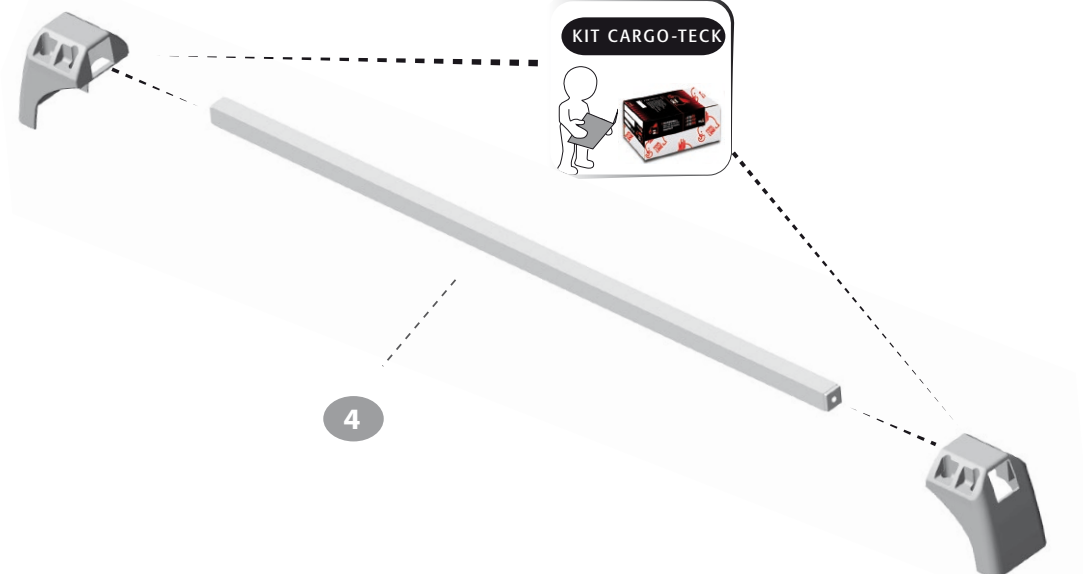


4


3

10

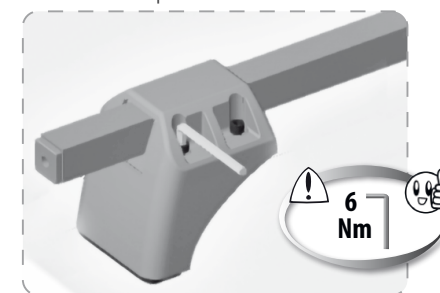
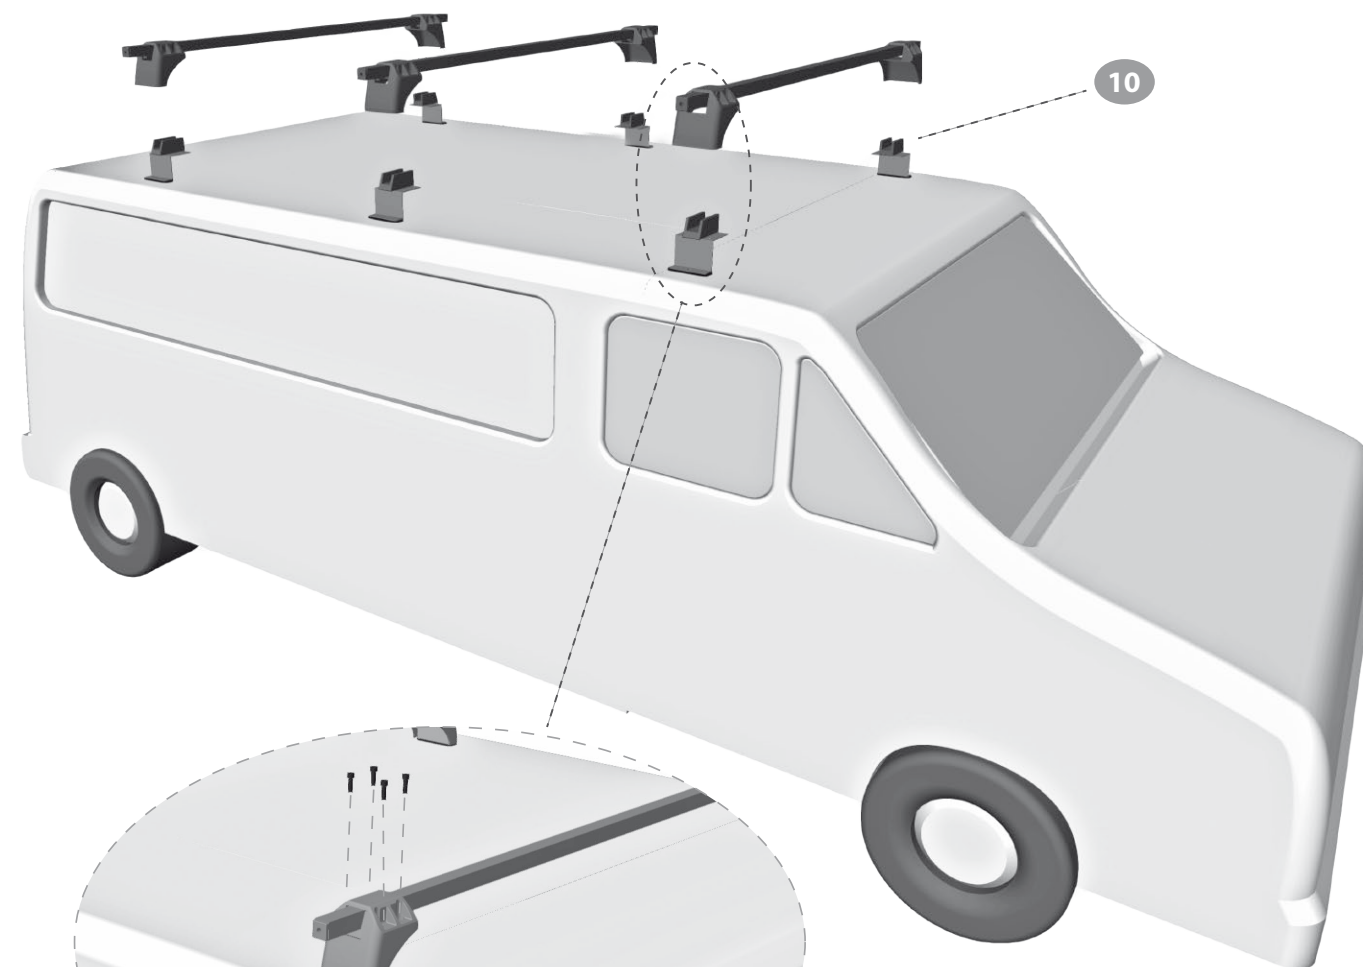


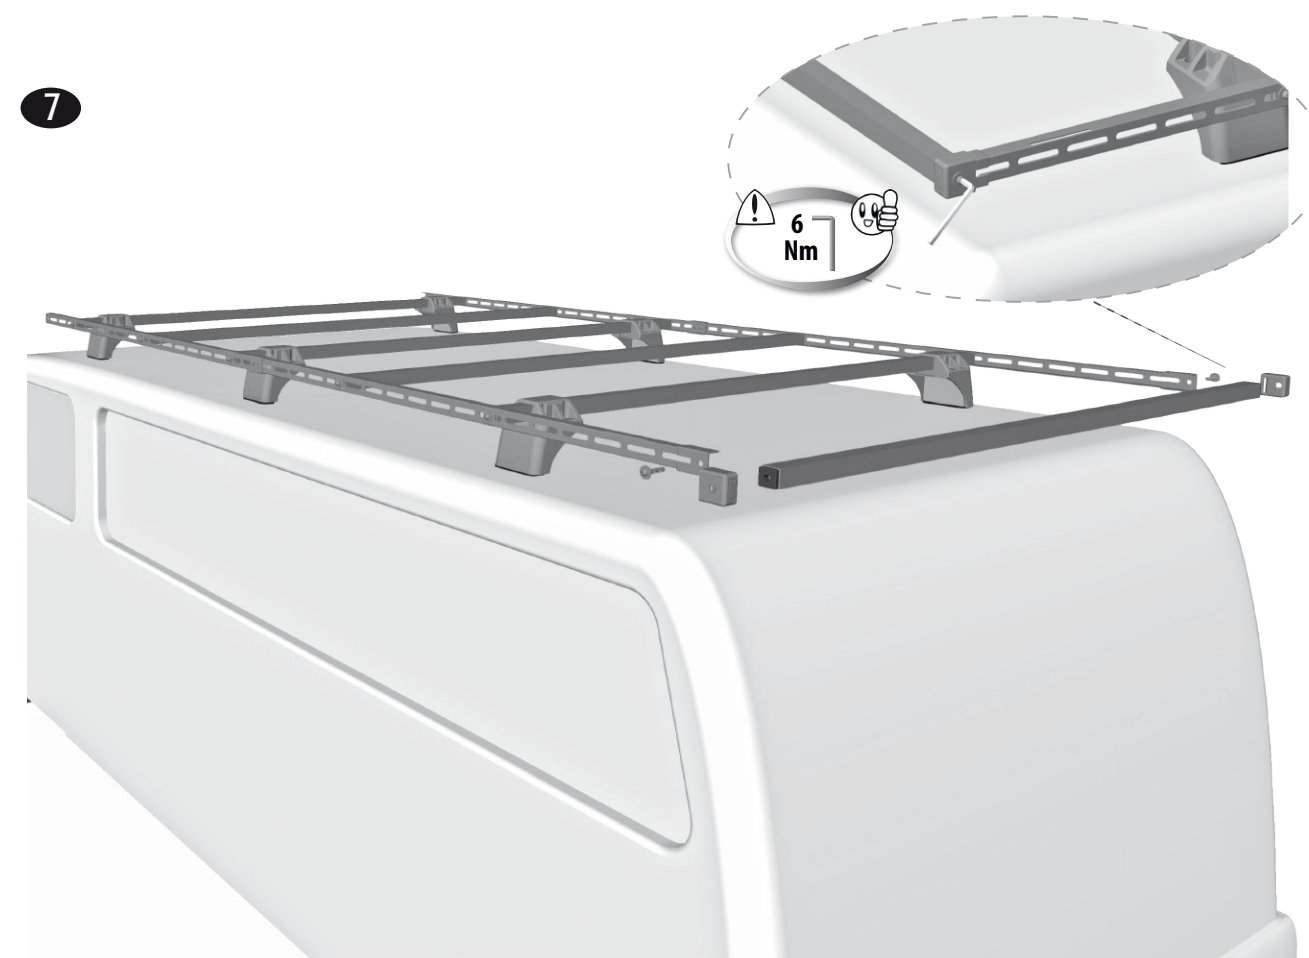
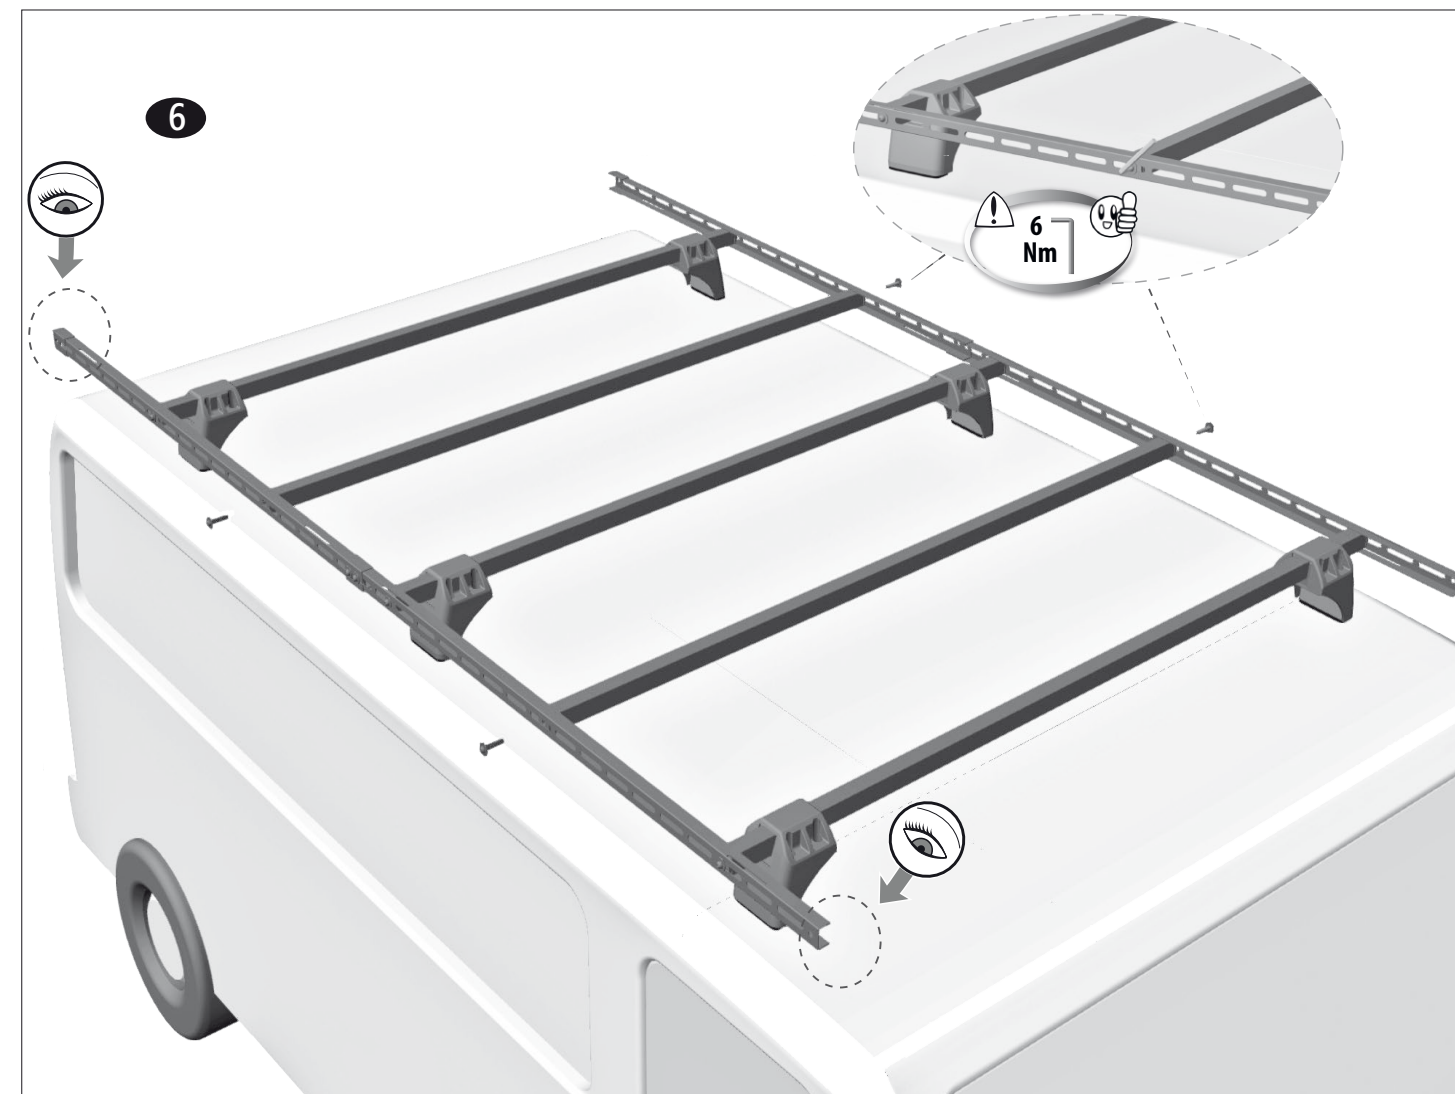
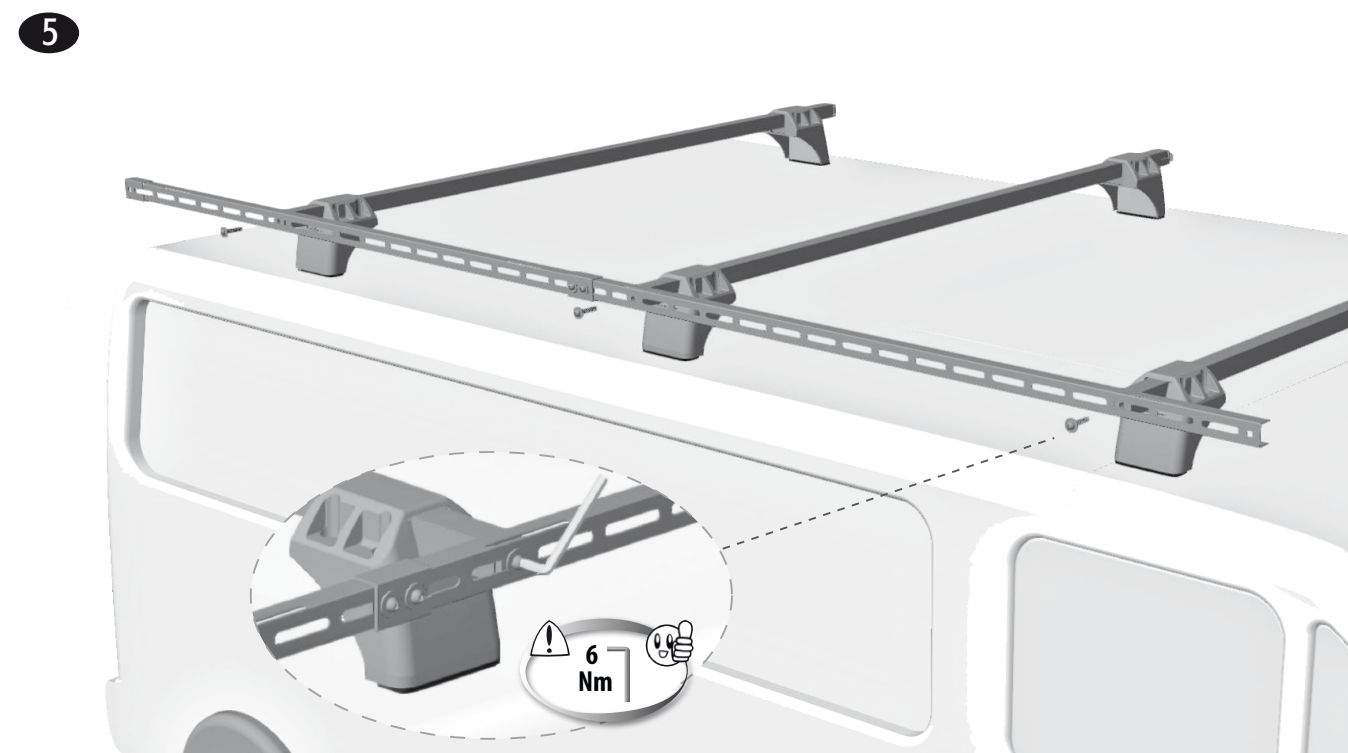
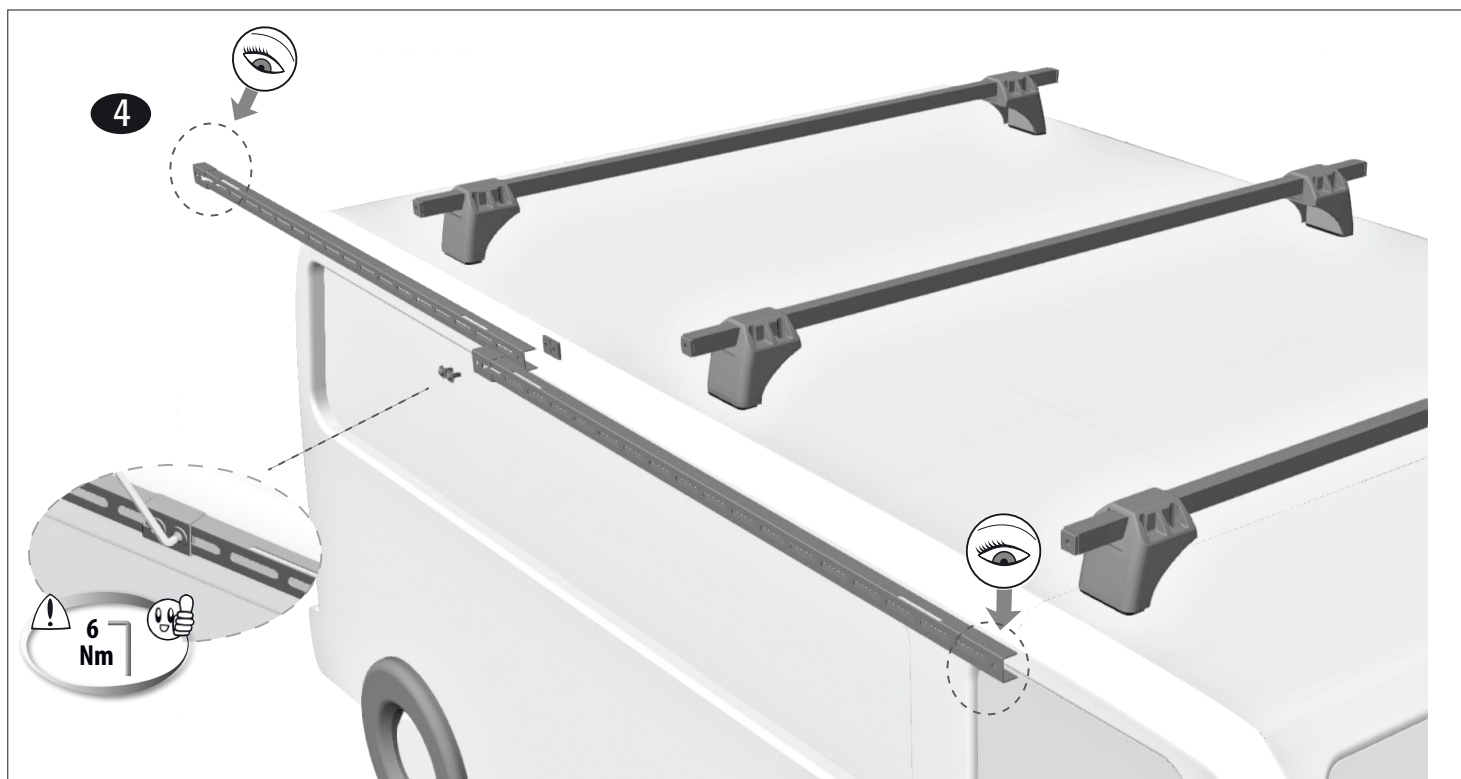



8

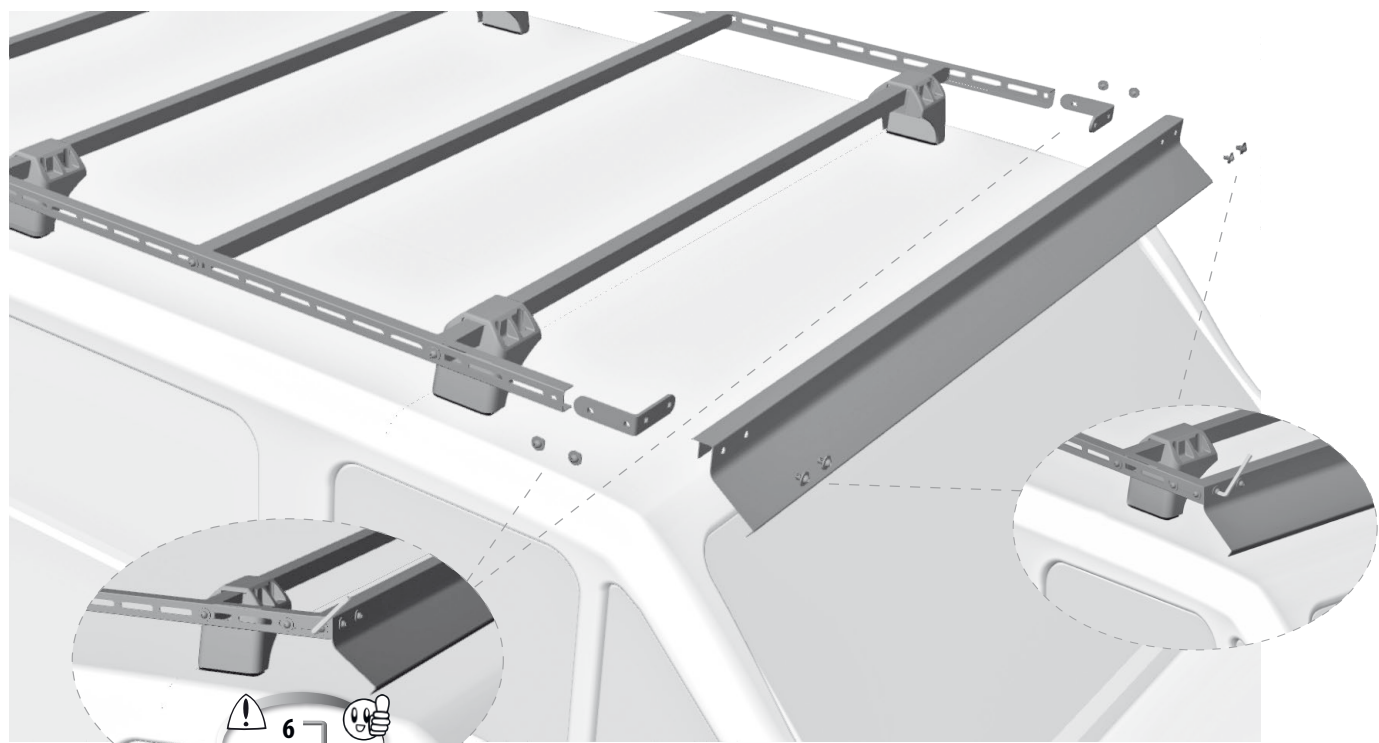


9

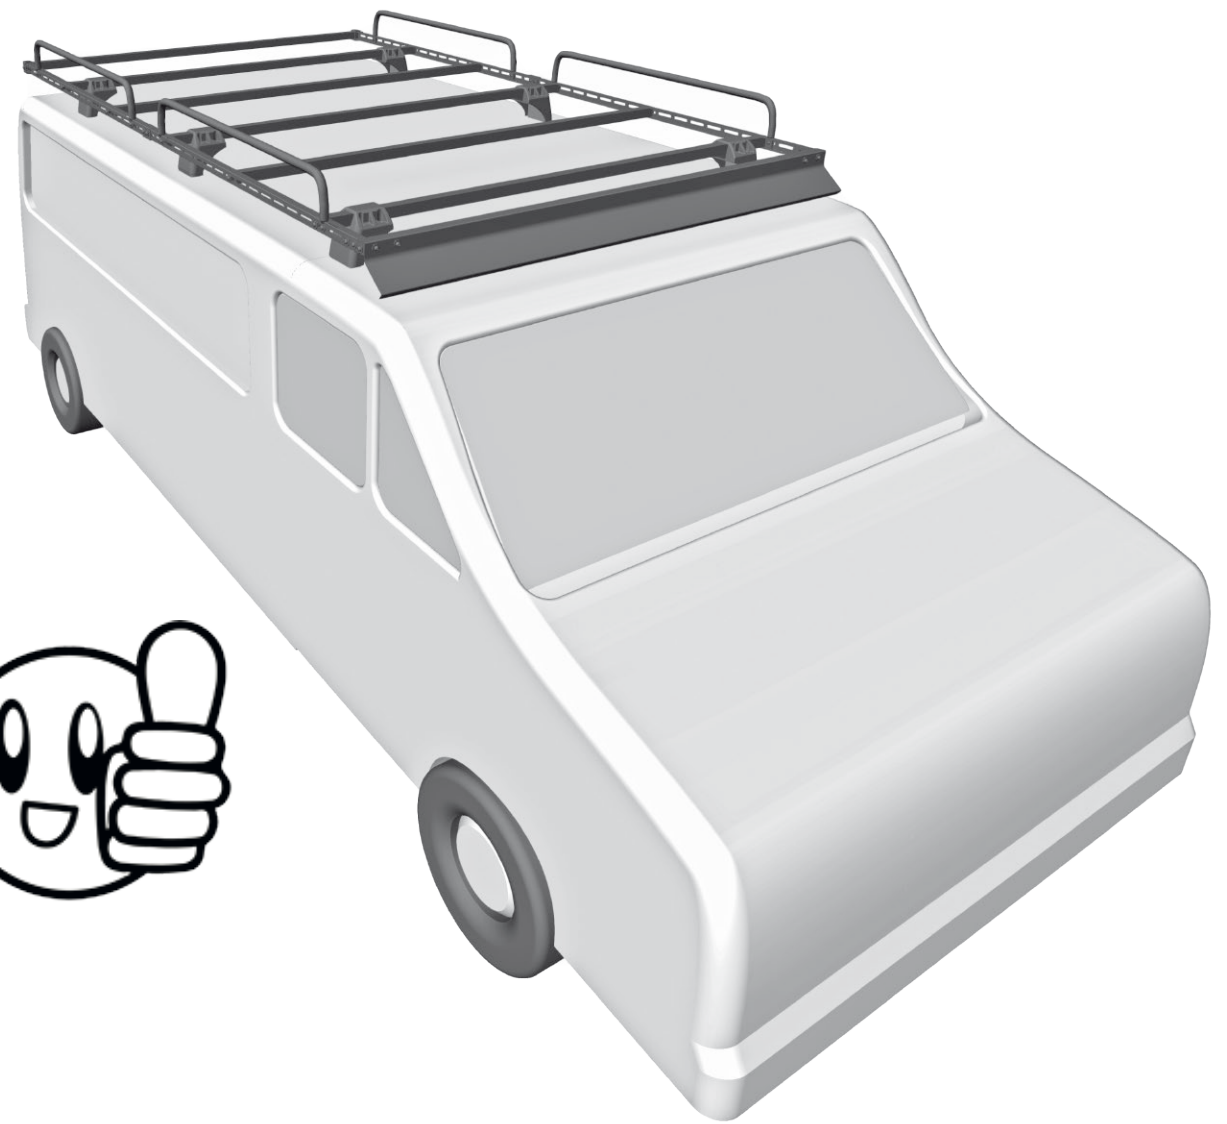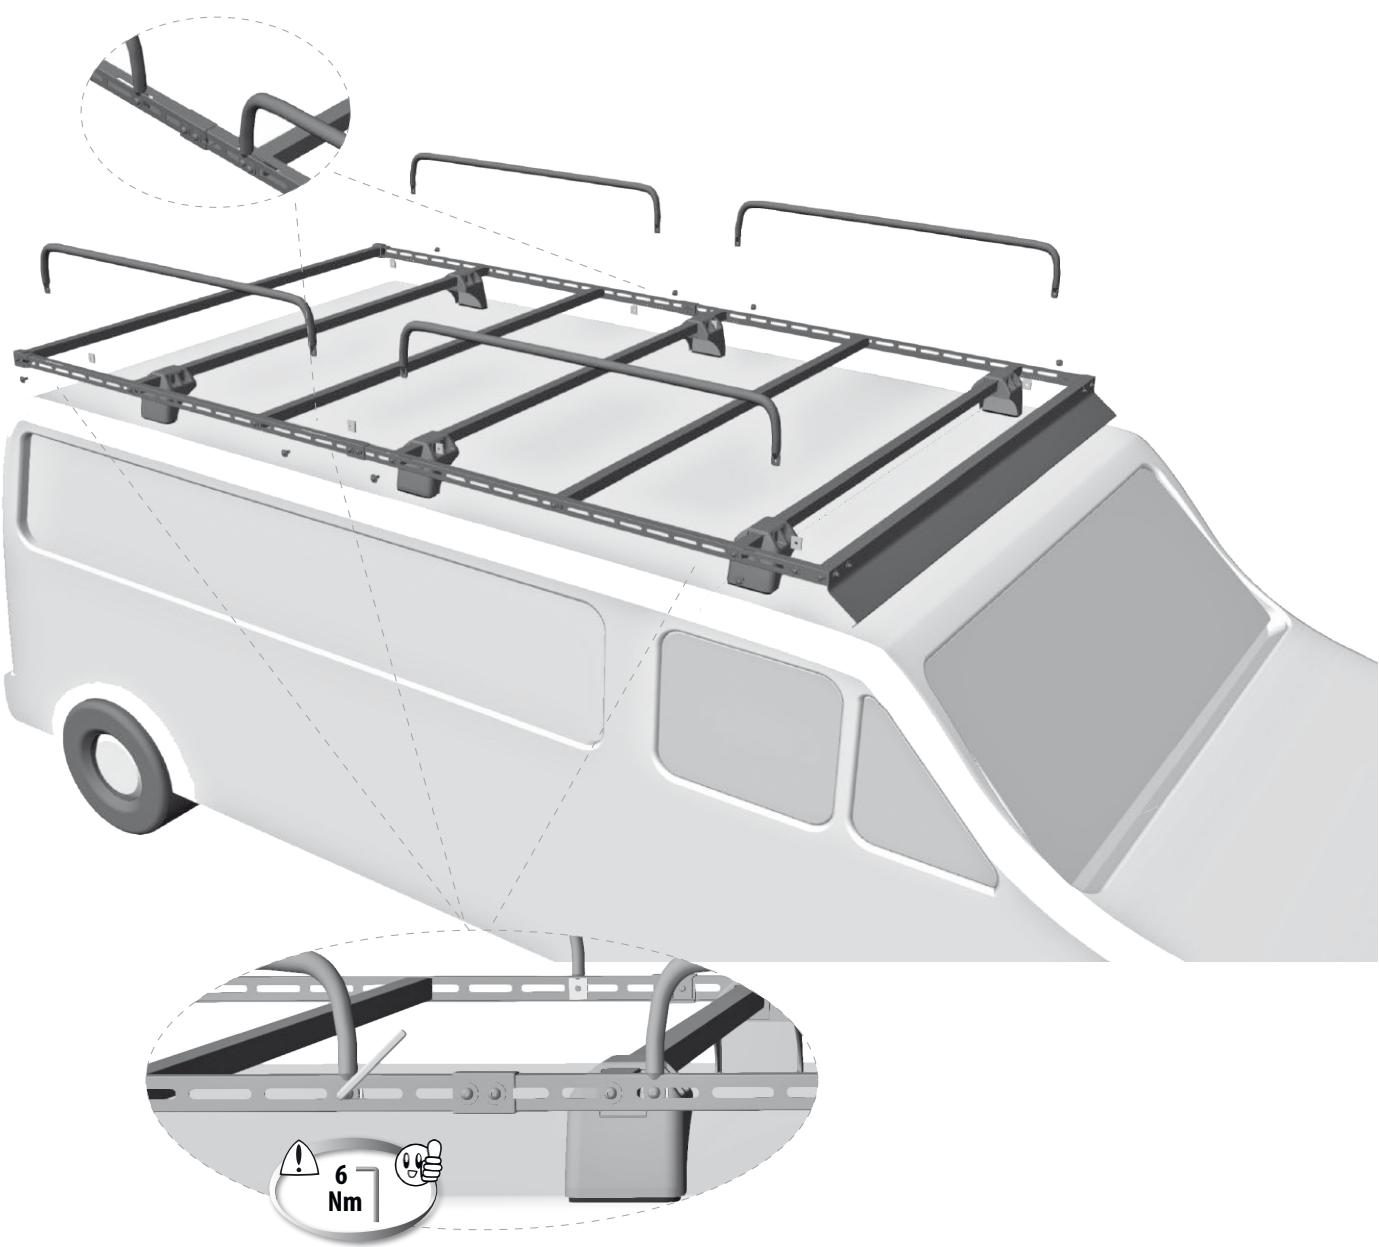


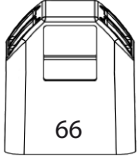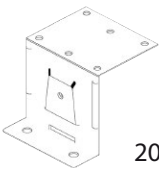N		Q
1		8
2		8
3		8
4		8
5		16
6		1

N	BO0060 x2	Q
8	 DIN912 M6x20	32
9	 DIN125 Ø6	32

N	BO0014 x8	Q
10	 DIN912 M6x30	16
11	 DIN9021 Ø6	16





- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instrucctions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

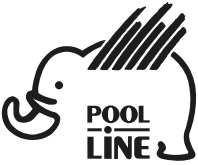




POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042

121931
Rv: 08/2025

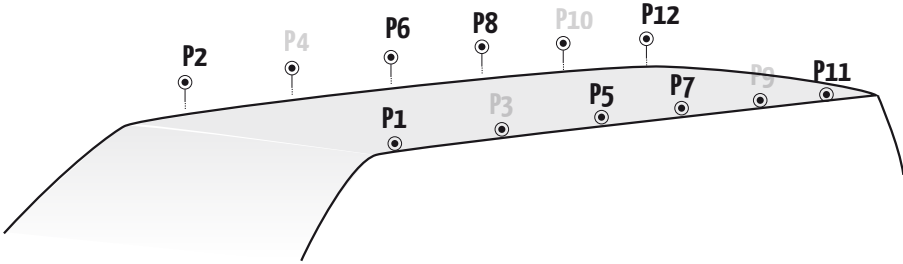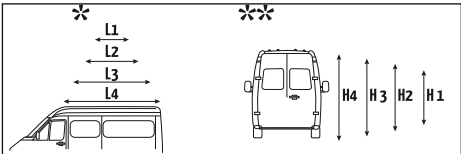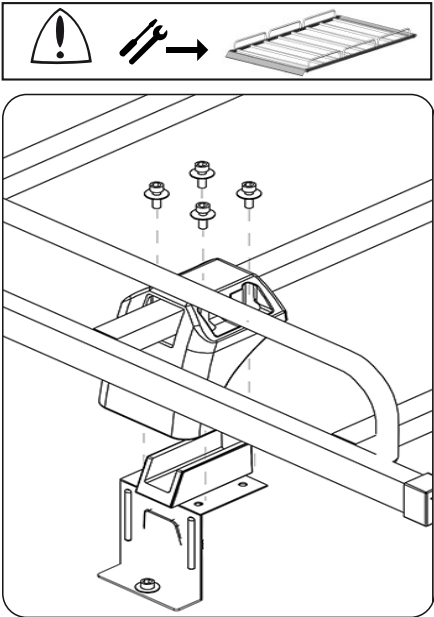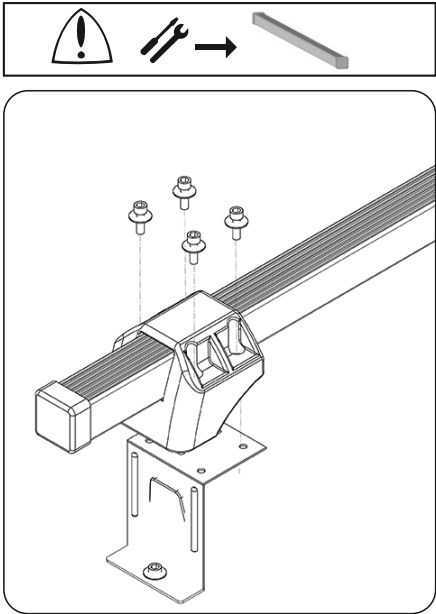

	L*	H**		10	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
Nissan																
Interstar	L2	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Interstar	L2	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
Interstar	L3	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Interstar	L3	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
NV400	L1	H1	10 - 24	B00014	207	207			207	207	207	207			207	207
NV400	L2	H2	10 - 24	B00014	207	207			207	207	207	207			207	207
NV400	L3	H2	10 - 24	B00014	207	207			207	207	207	207			207	207
Opel																
Movano	L2	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Movano	L2	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
Movano	L3	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Movano	L3	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
Movano	L1	H1	10 - 24	B00014	207	207			207	207	207	207			207	207
Movano	L2	H2	10 - 24	B00014	207	207			207	207	207	207			207	207
Movano	L3	H2	10 - 24	B00014	207	207			207	207	207	207			207	207
Renault																
Master	L2	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Master	L2	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
Master	L3	H2	97 - 10	B00014	207	207			207	207	207	207			207	207
Master	L3	H3	97 - 10	B00014	207	207			207	207	207	207			207	207
Master	L1	H1	10 - 24	B00014	207	207			207	207	207	207			207	207
Master	L2	H2	10 - 24	B00014	207	207			207	207	207	207			207	207
Master	L3	H2	10 - 24	B00014	207	207			207	207	207	207			207	207

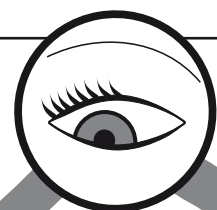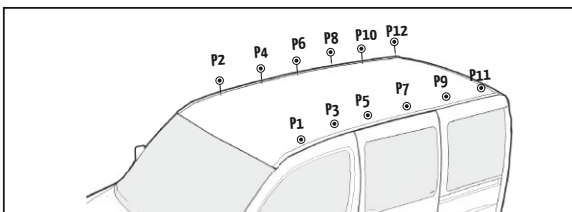
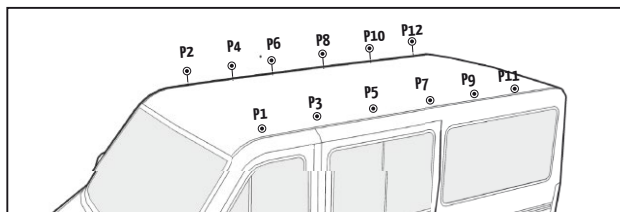


P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx

Pag. 1


2

1

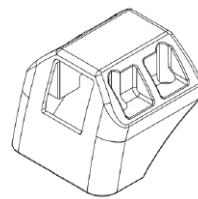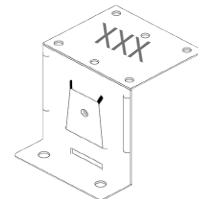


B

6

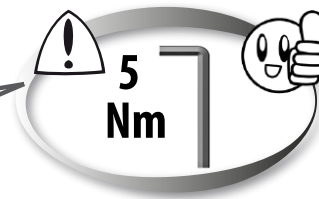

A

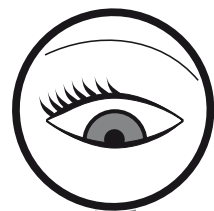

←	10	P1	P2
0X	B0000XX		
0X	B0000XX		
	B0000X		

Pag. 1

10



11

2



3

4

5

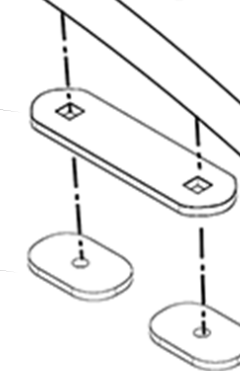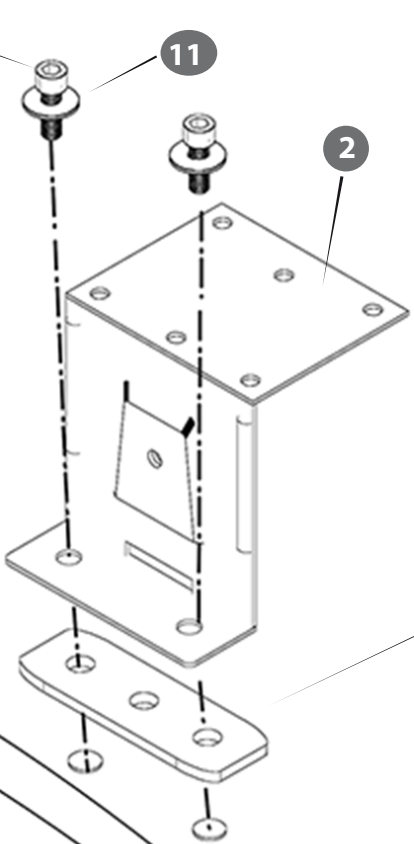

C

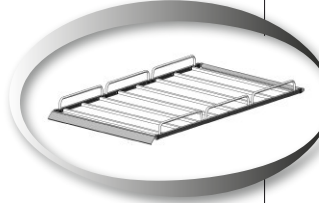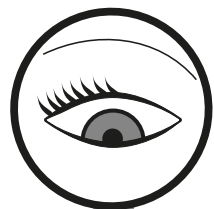

8

9

5 Nm

2

1

