



- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

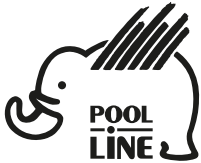



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042

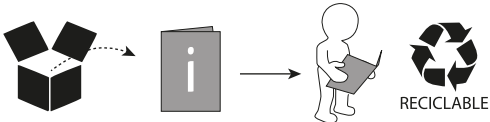


123915

Rv: 7/2024

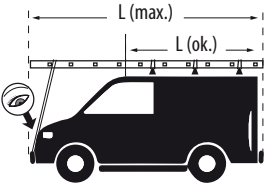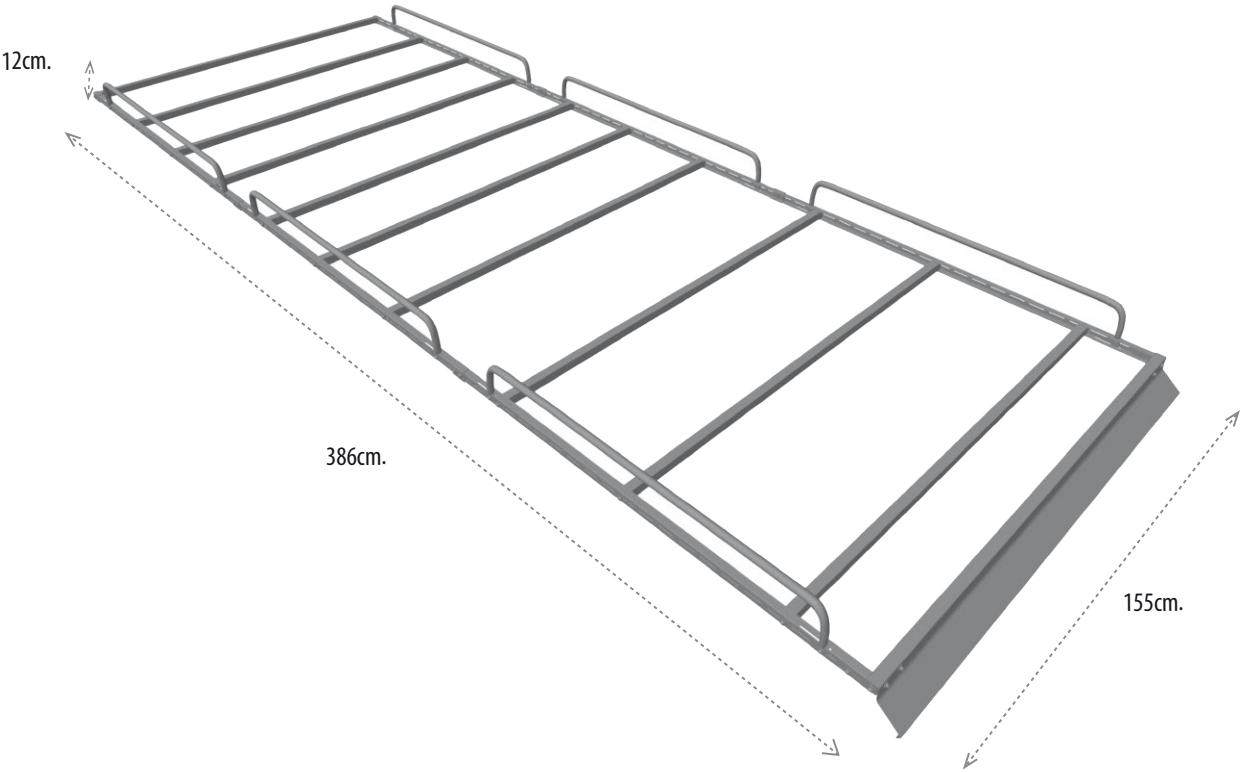


N		Q
21	 S-1550	1
22	 L-1300	6
23	 B-1022	6
24	 T-1535	10
25		20
26		2
27		2
28		10
30	 CHA-M8	20
31	 ISO 7380 M8x40	20
32	 ISO 7380 M8x16	28
33	 DIN 125 Ø 8	48

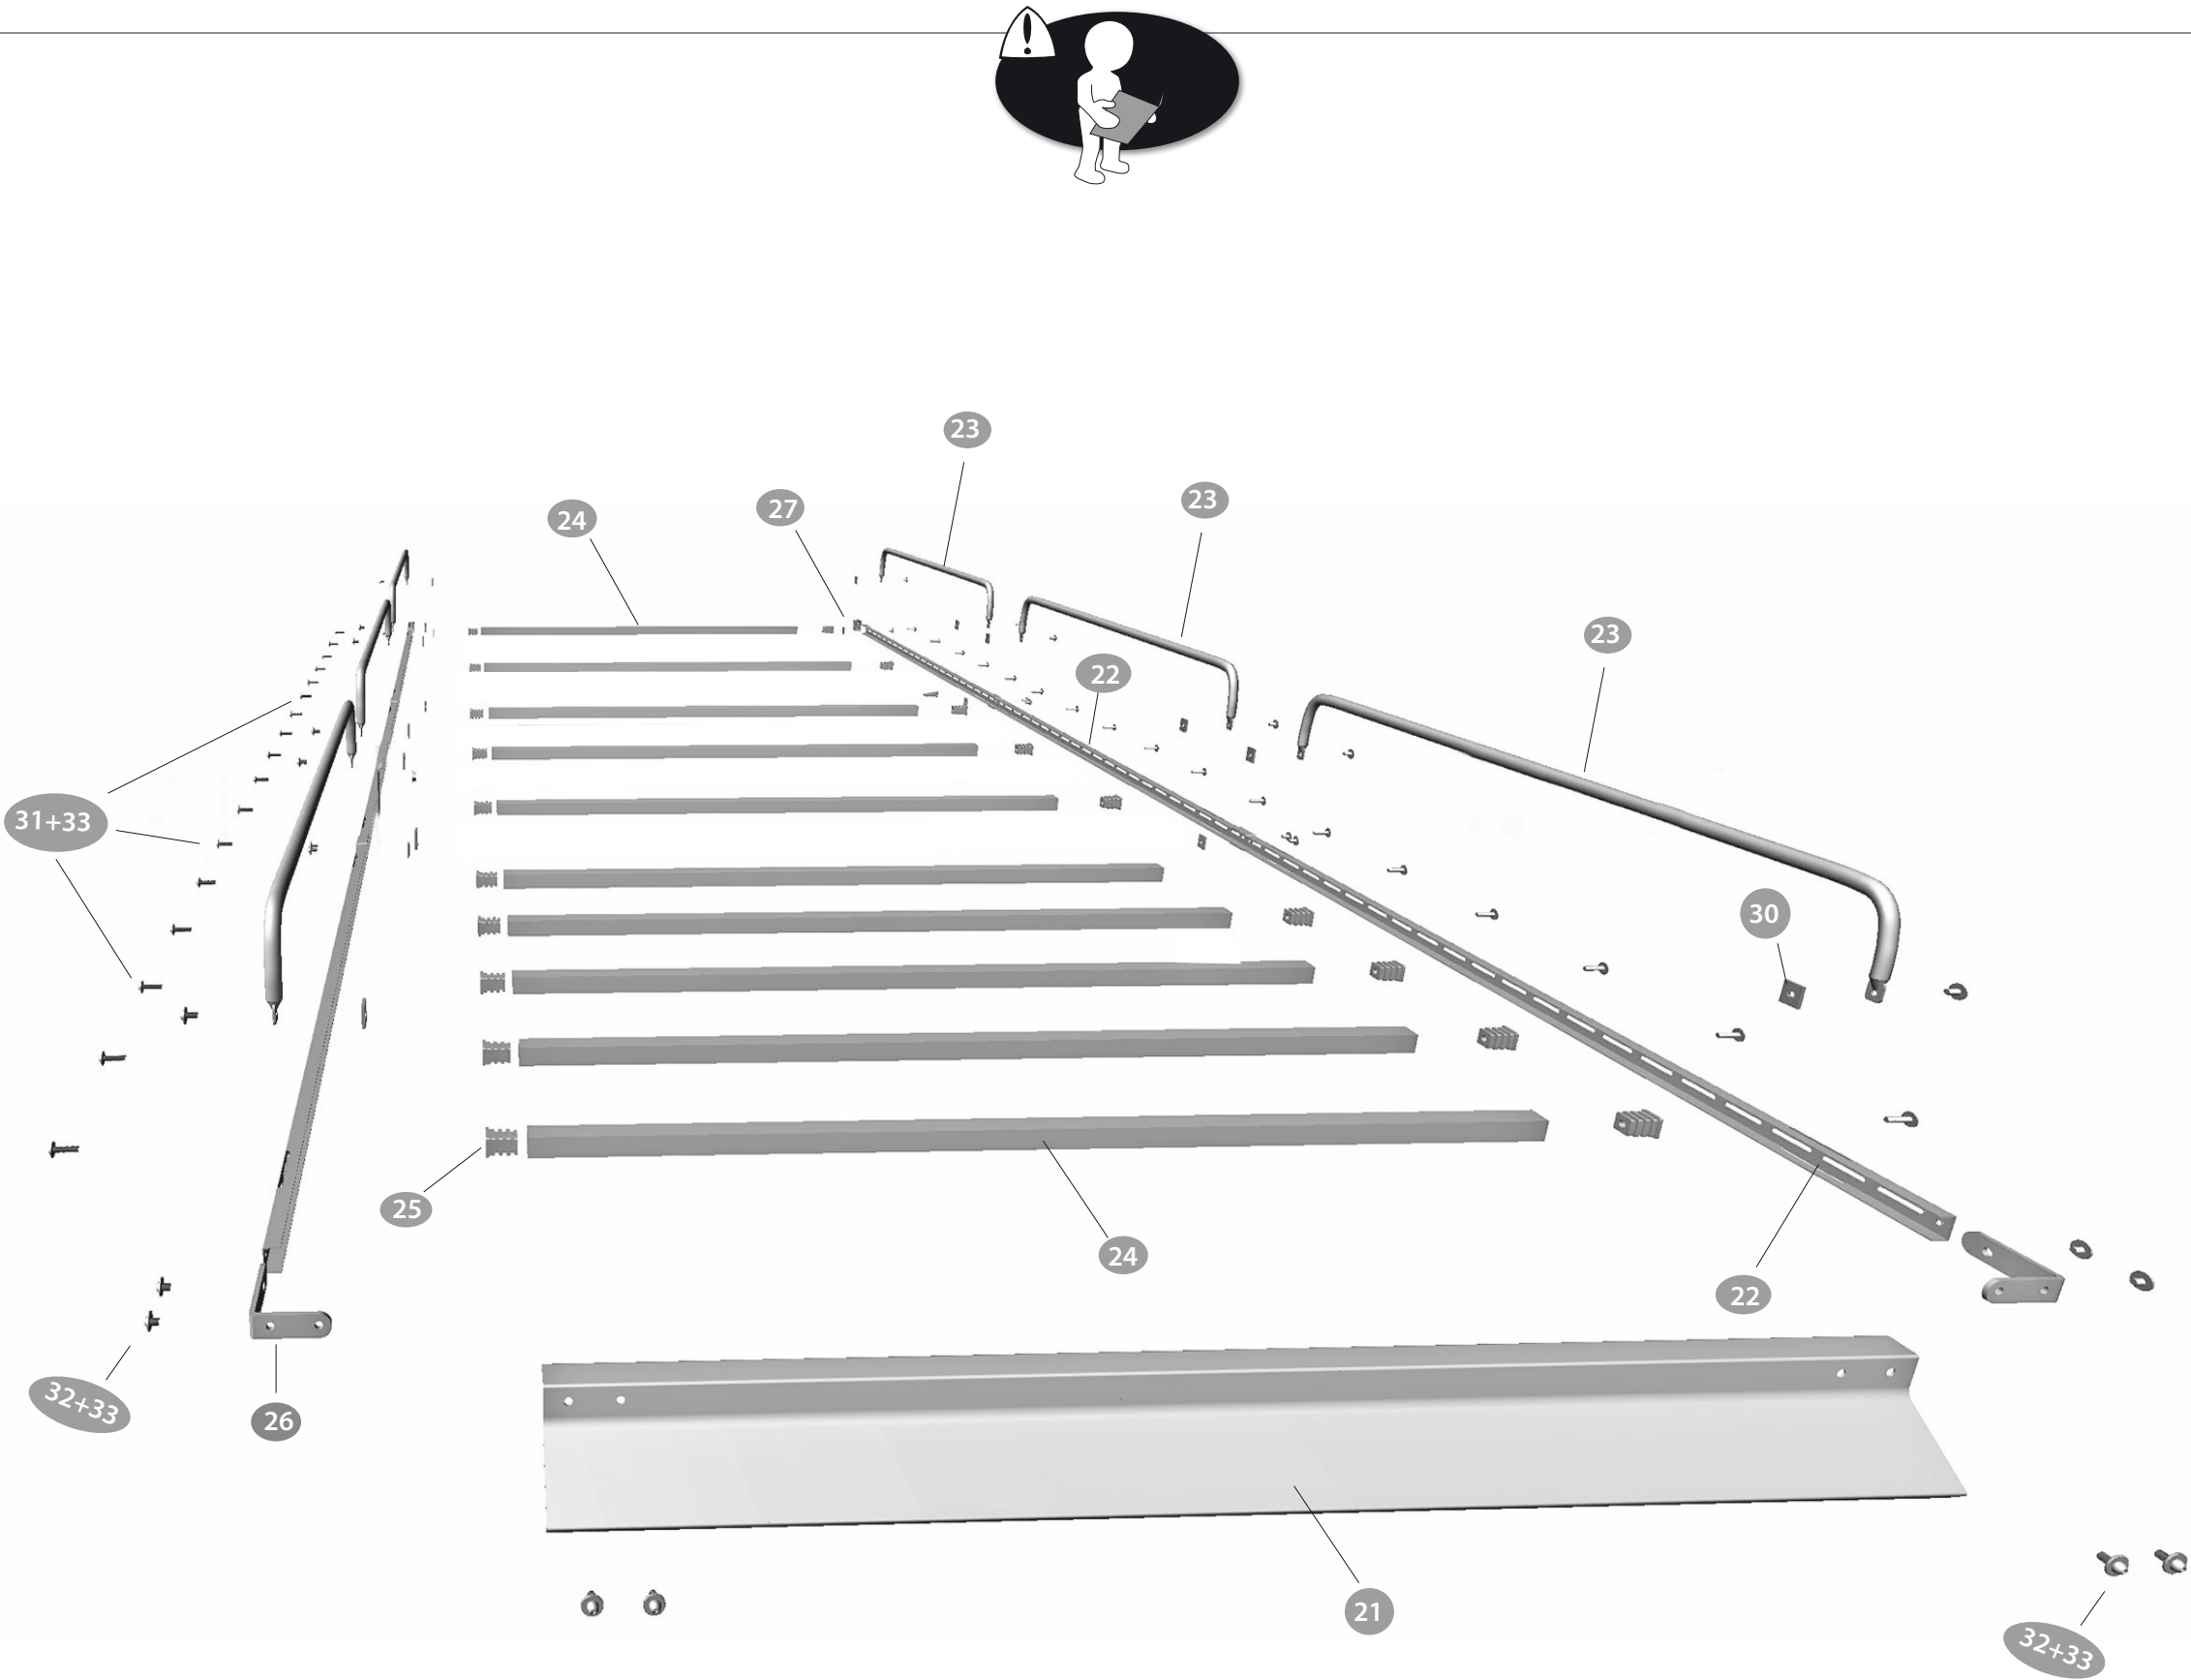




- NISSAN NV400 L3 H2 (2010->)
- OPEL MOVANO B L3 H2 (2010->)
- RENAULT MASTER III L3 H2 (2010->)

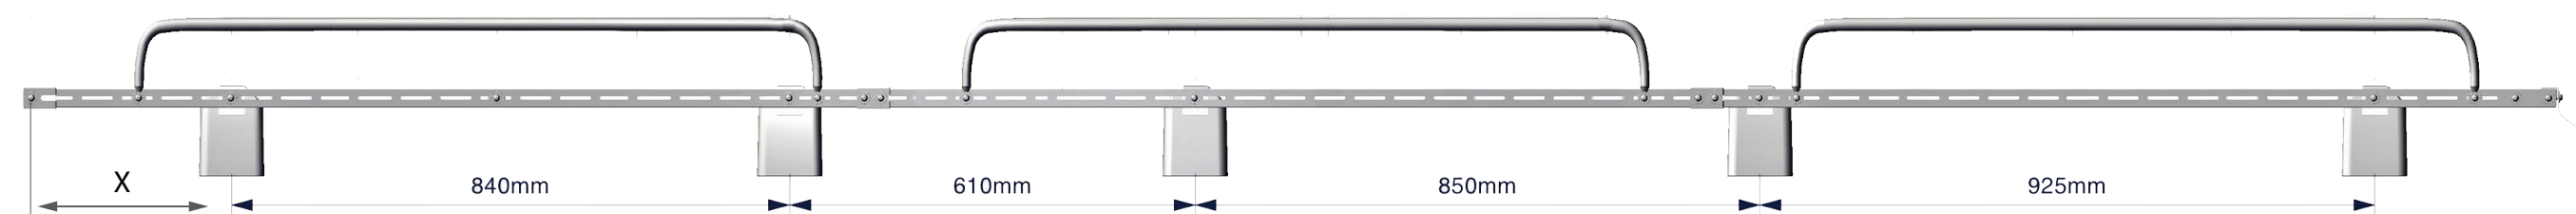


Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone


1




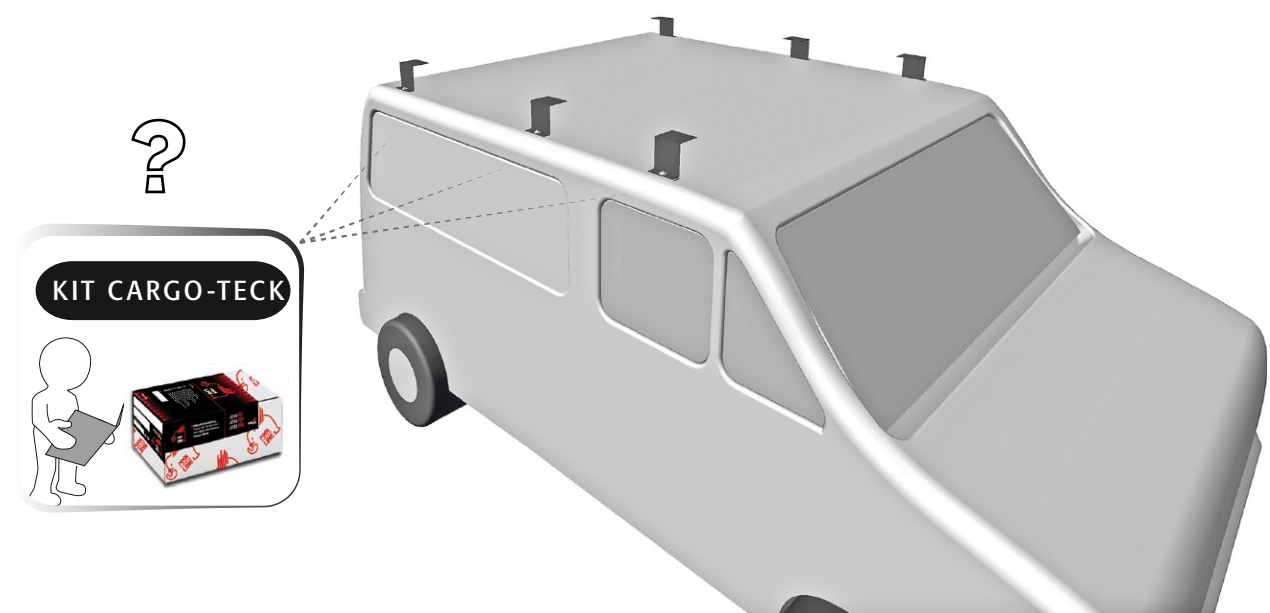


2

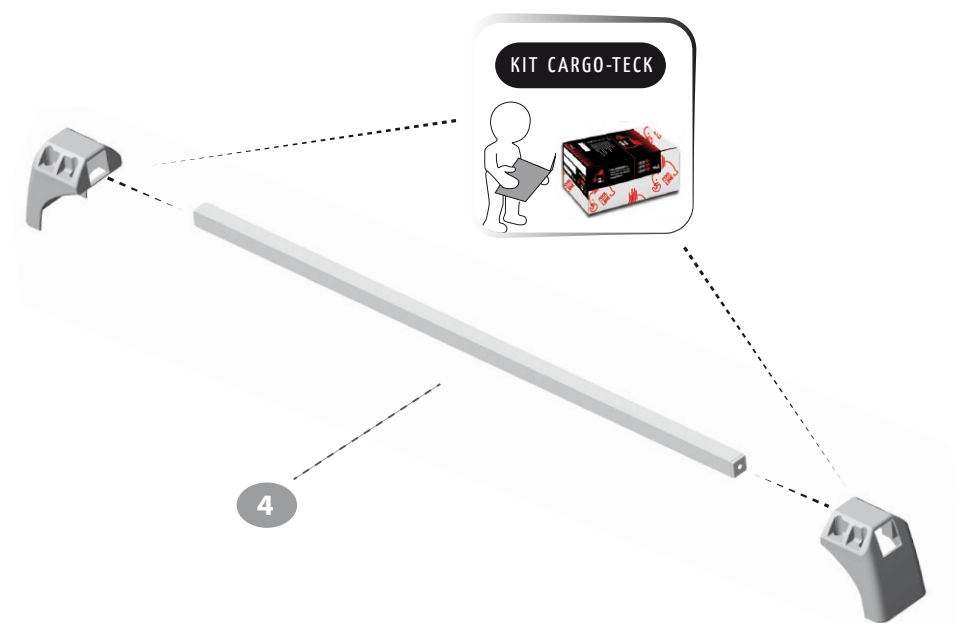


3


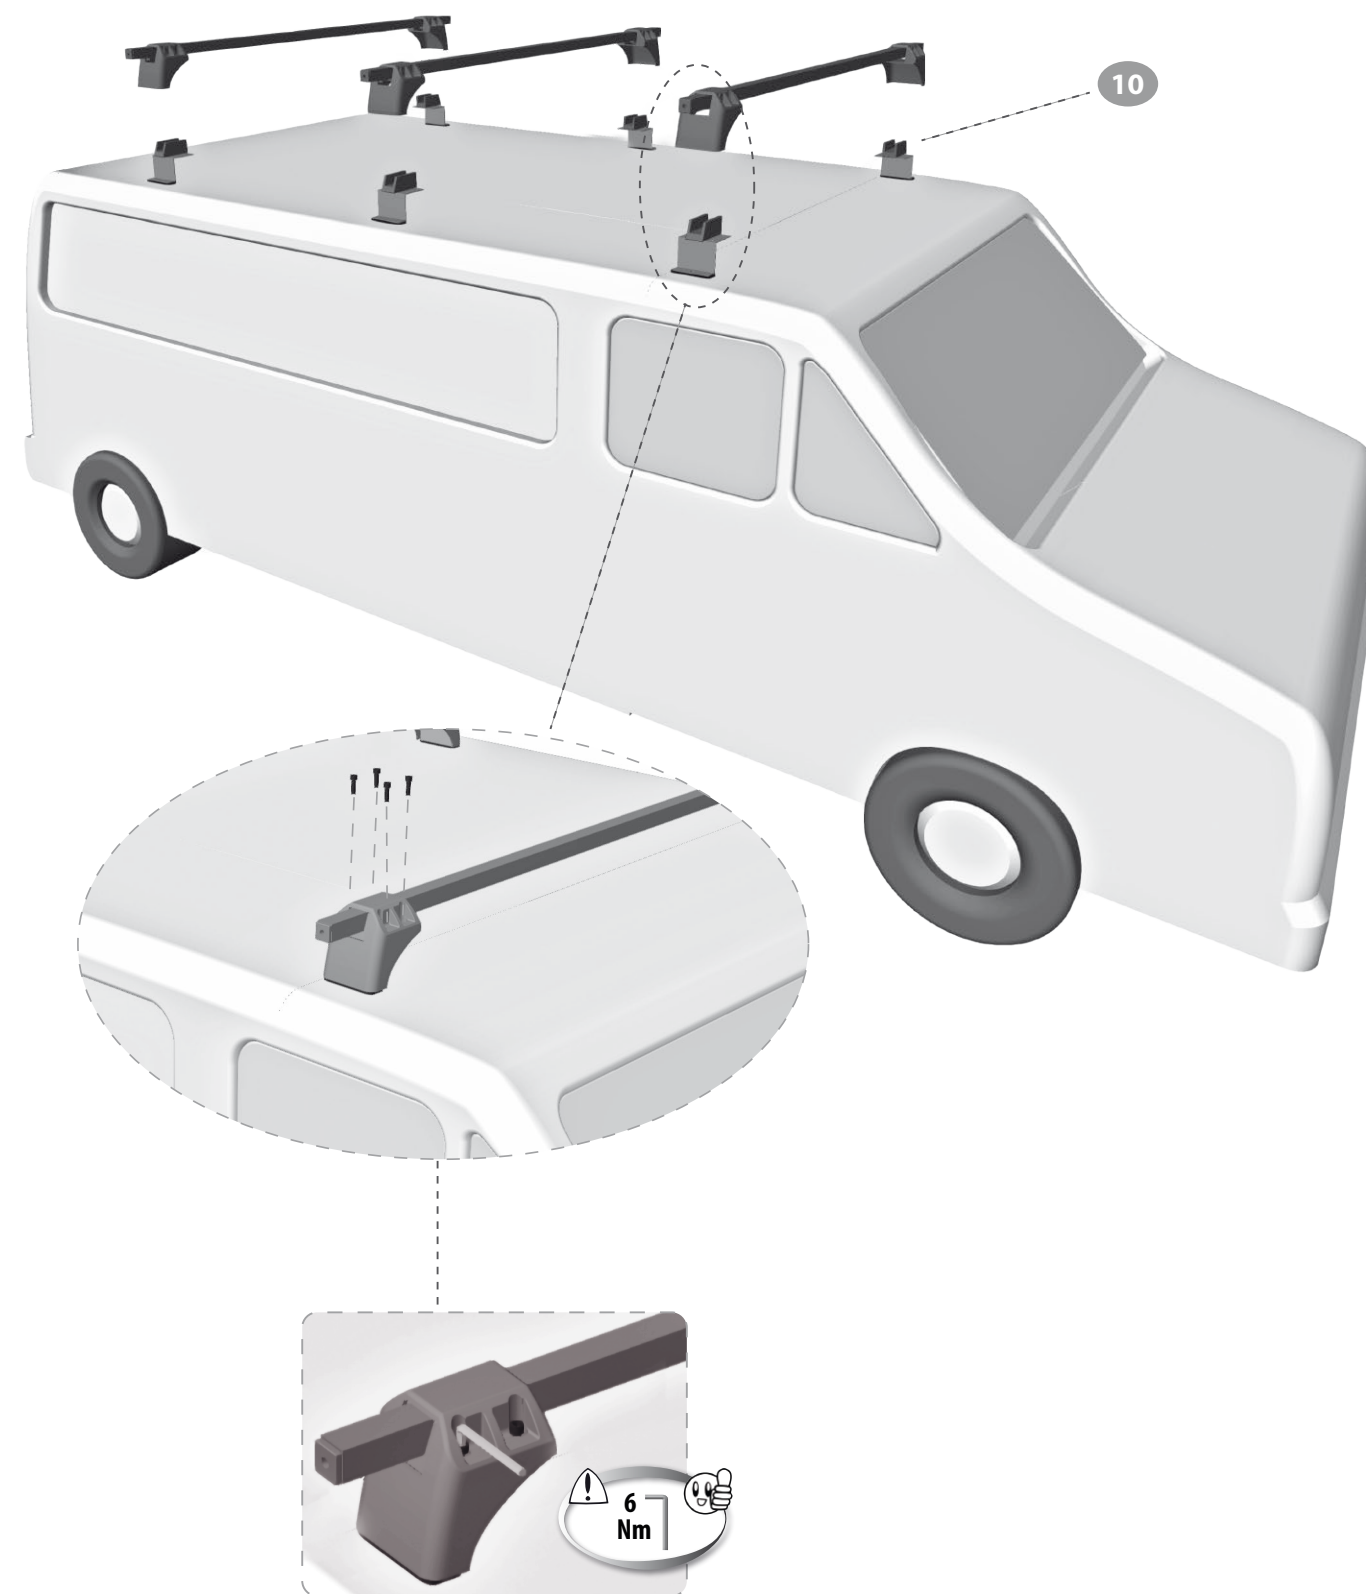


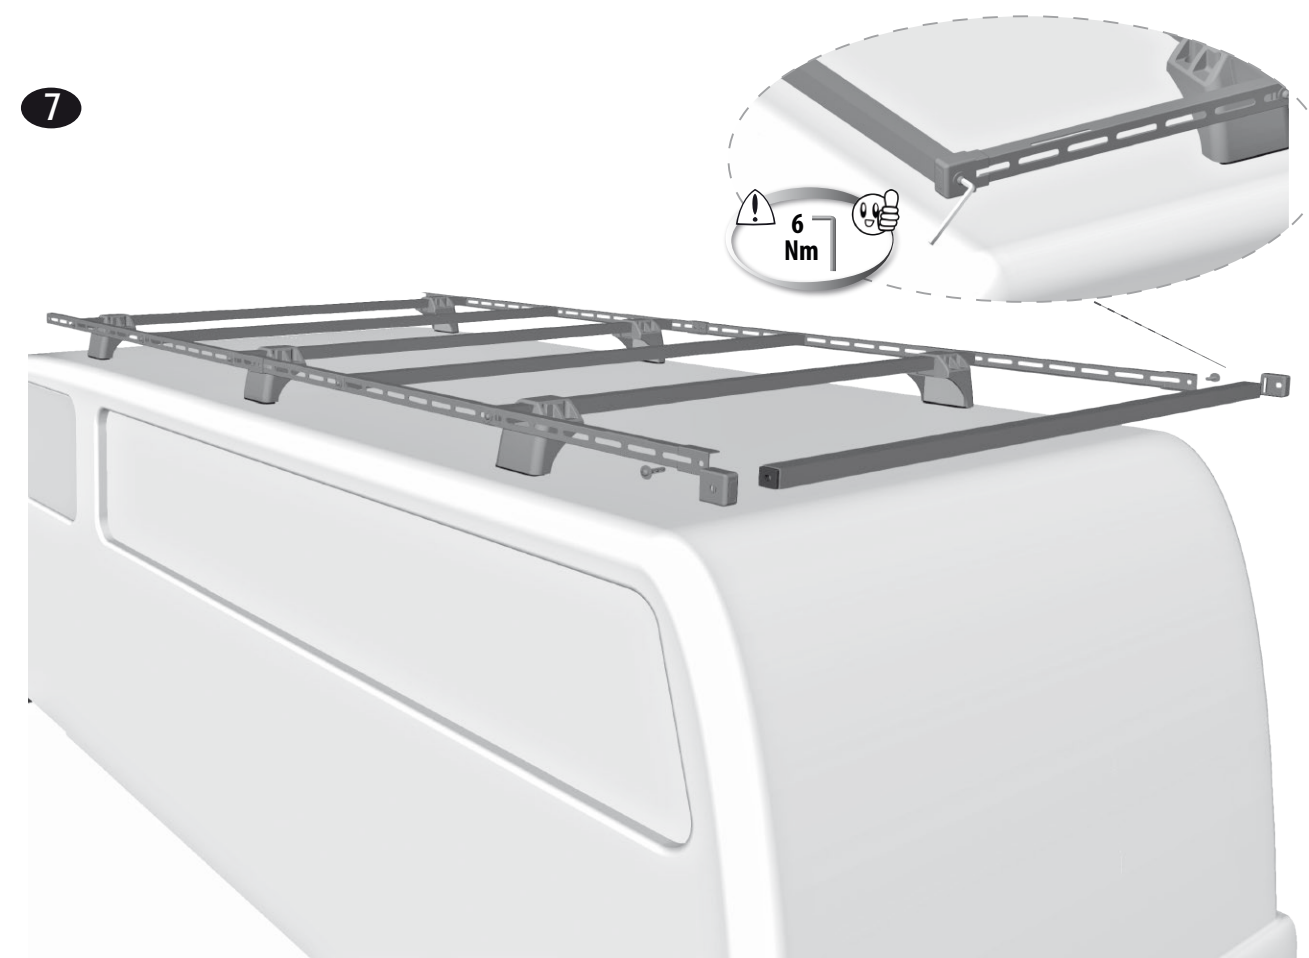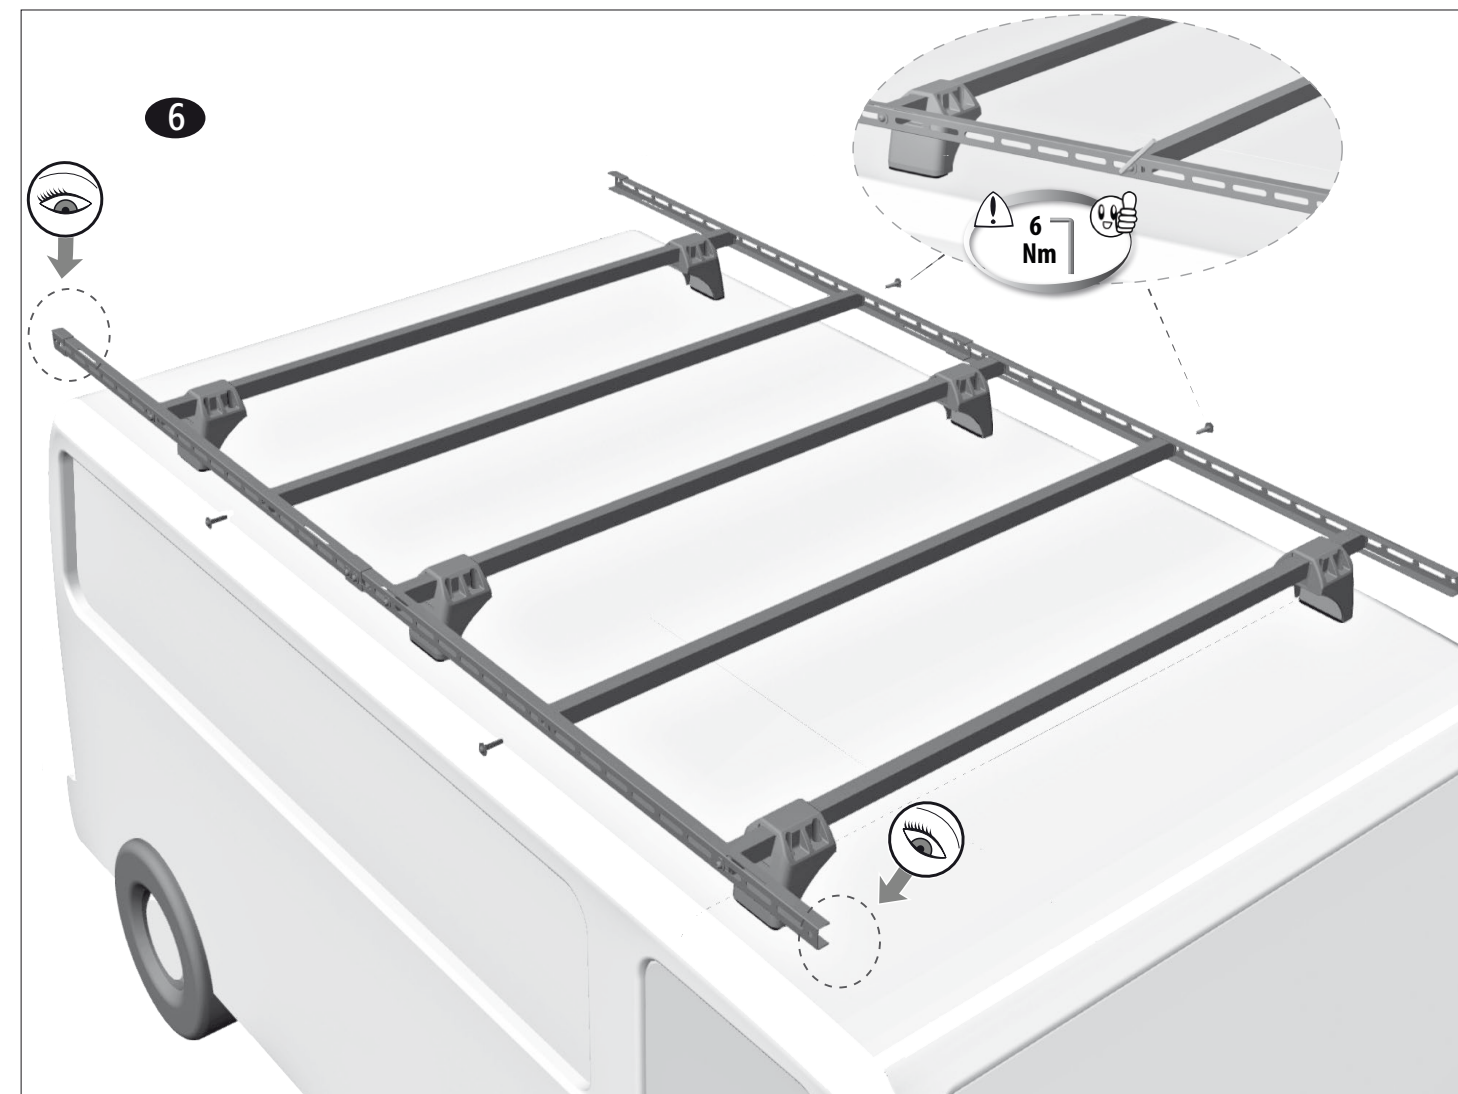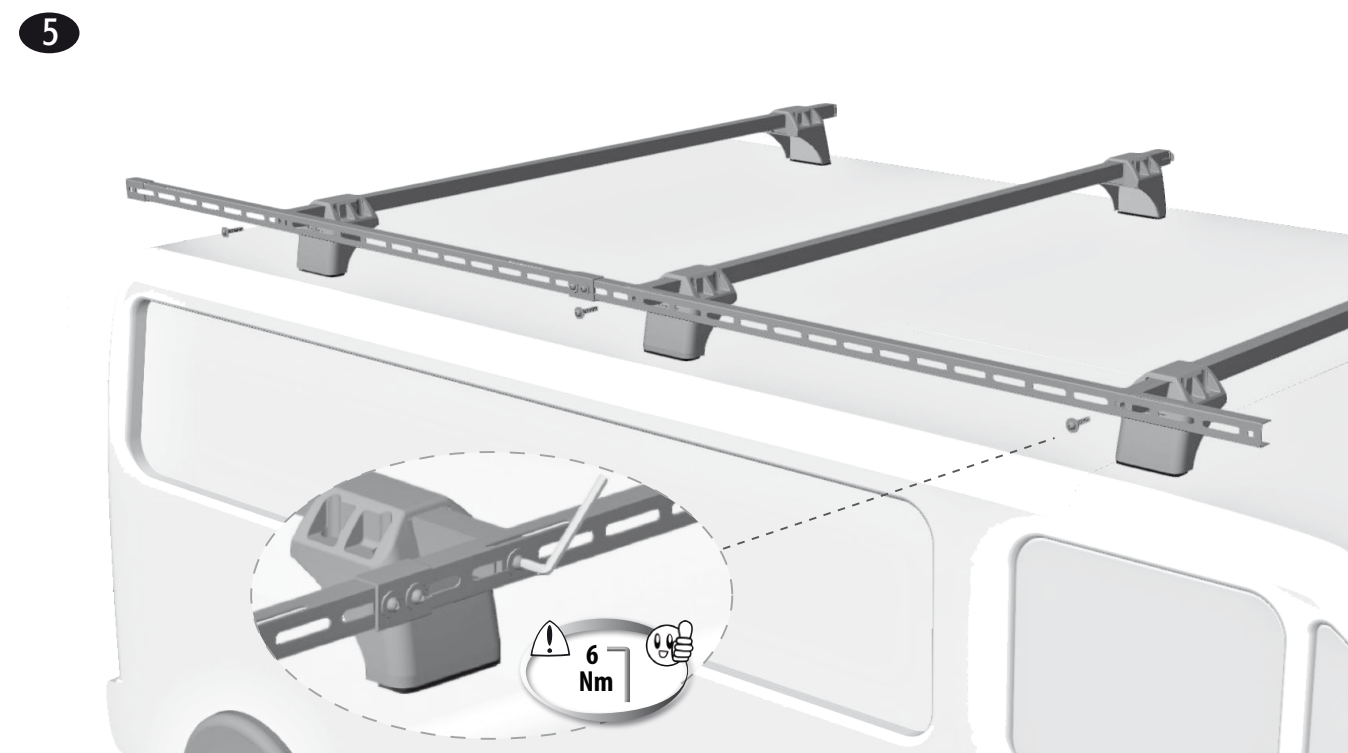
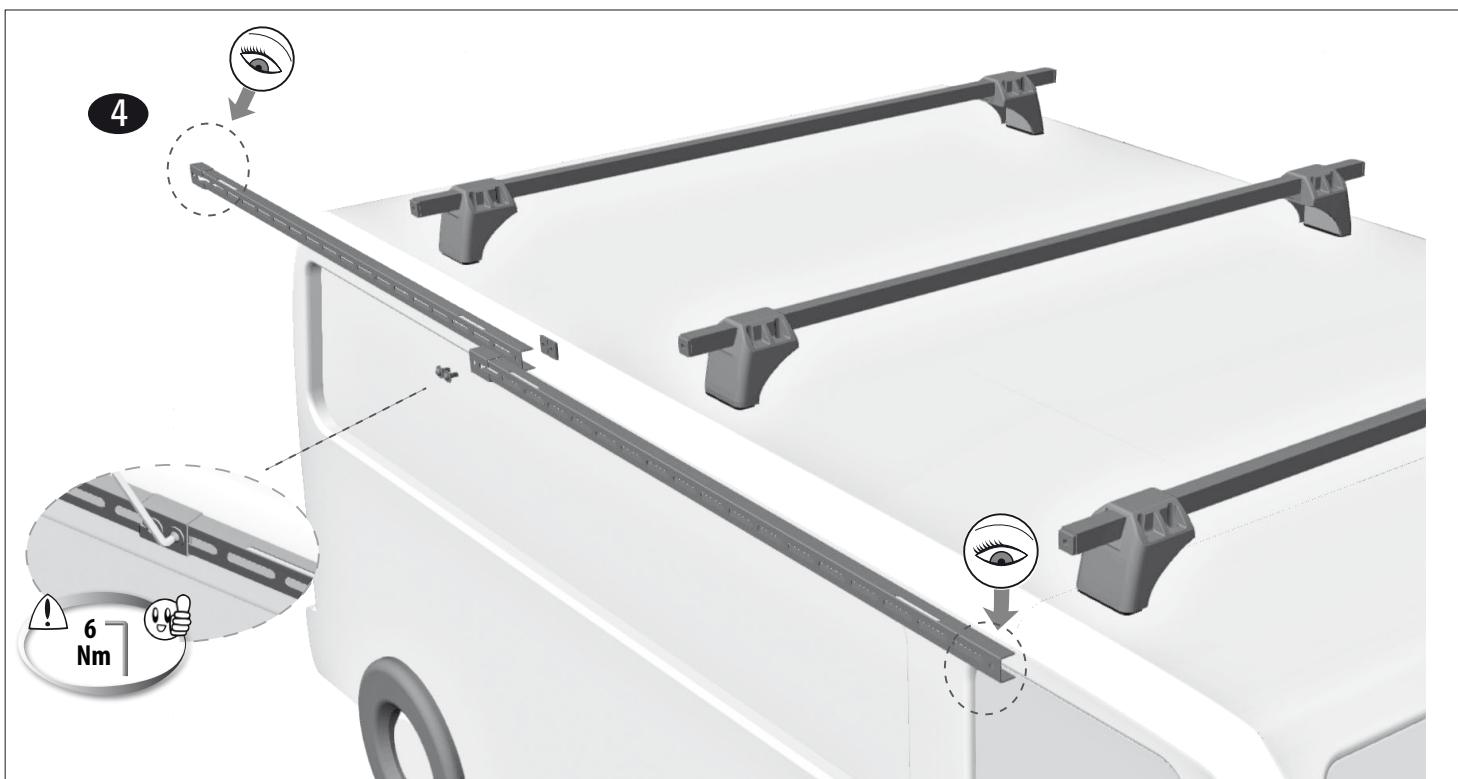


8

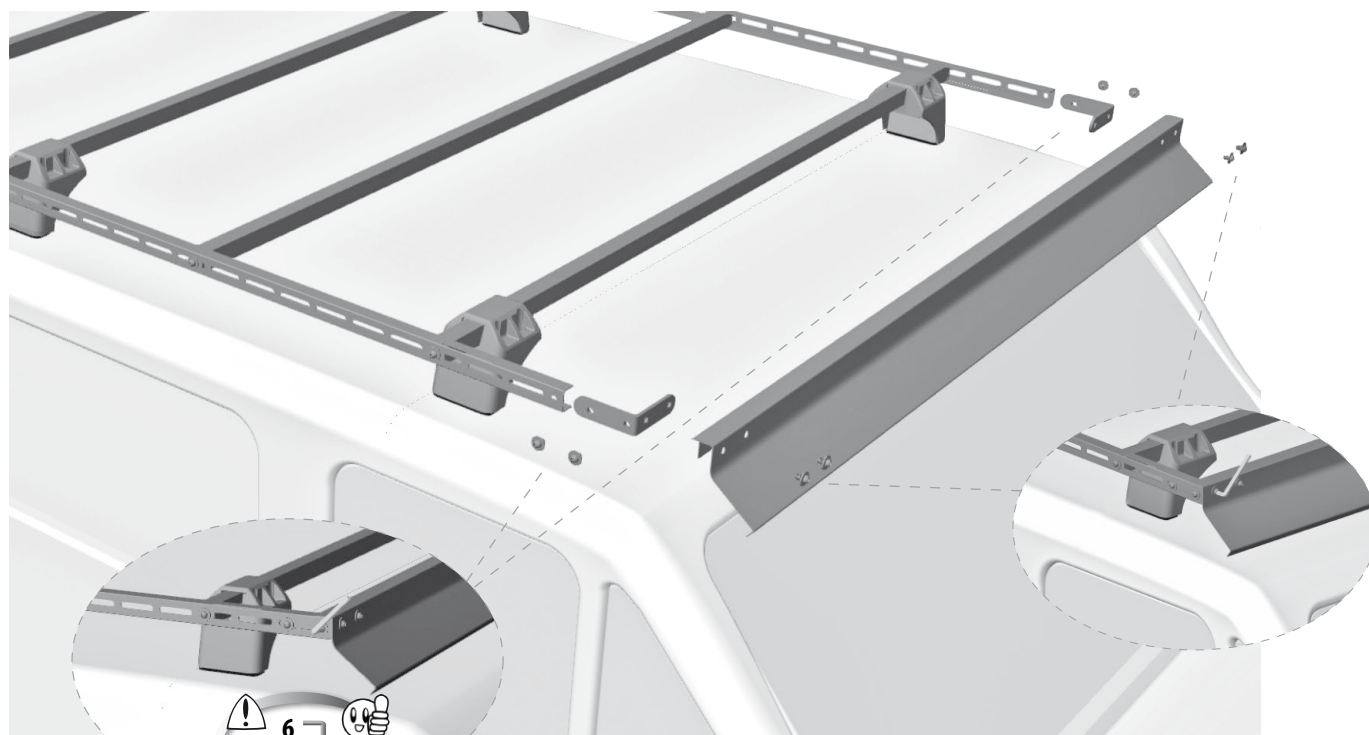


9

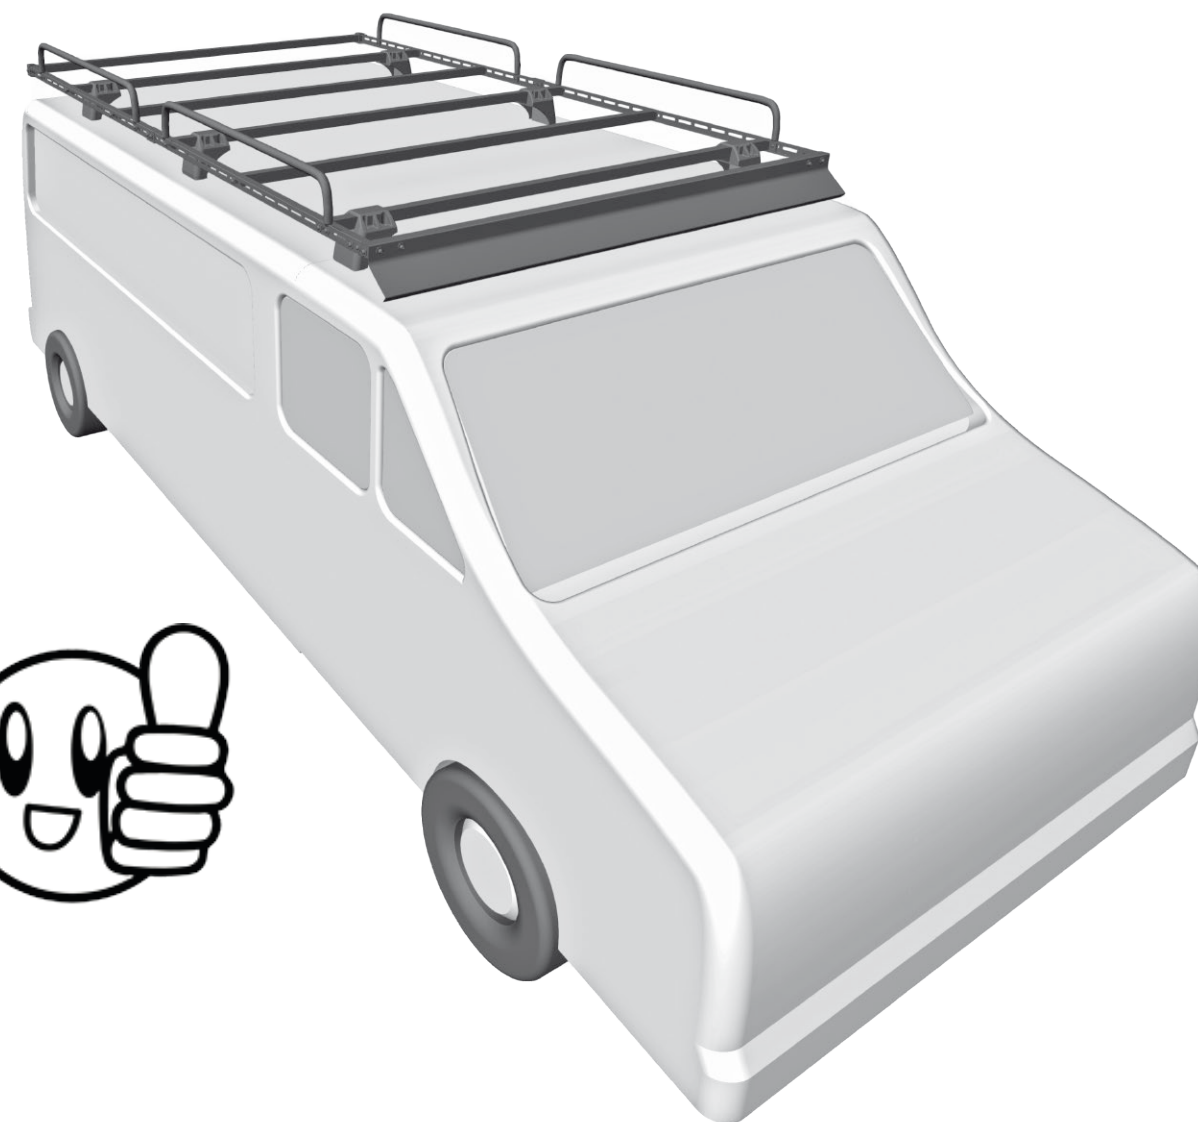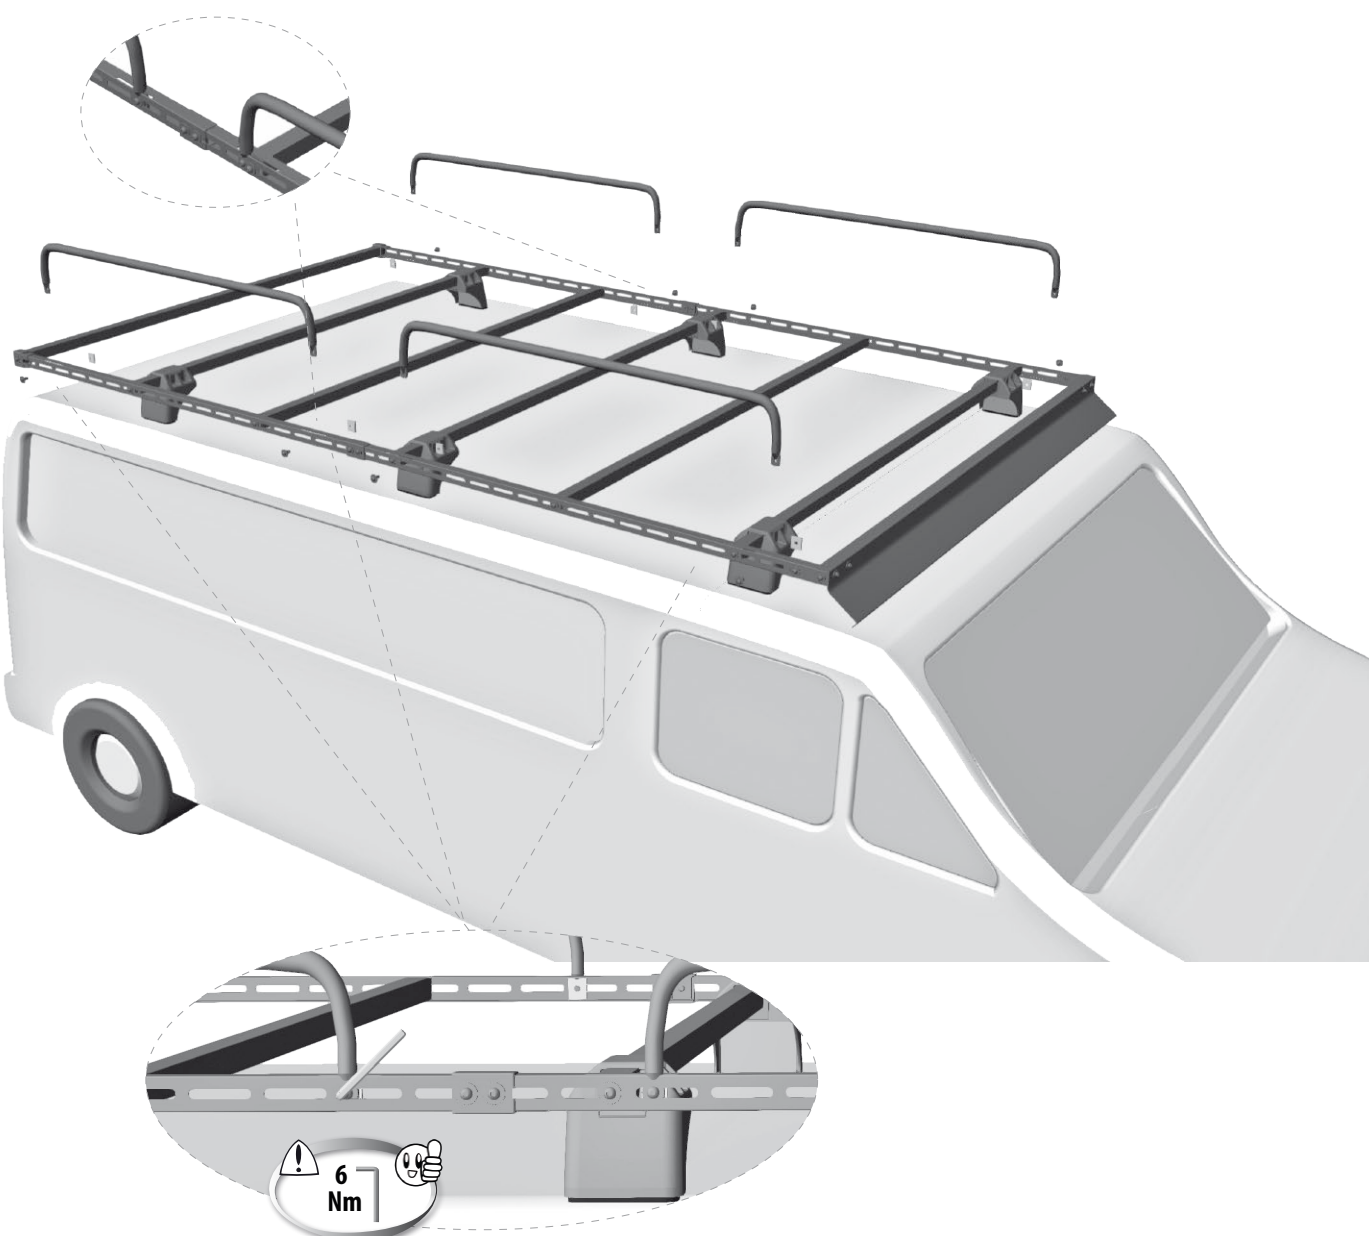

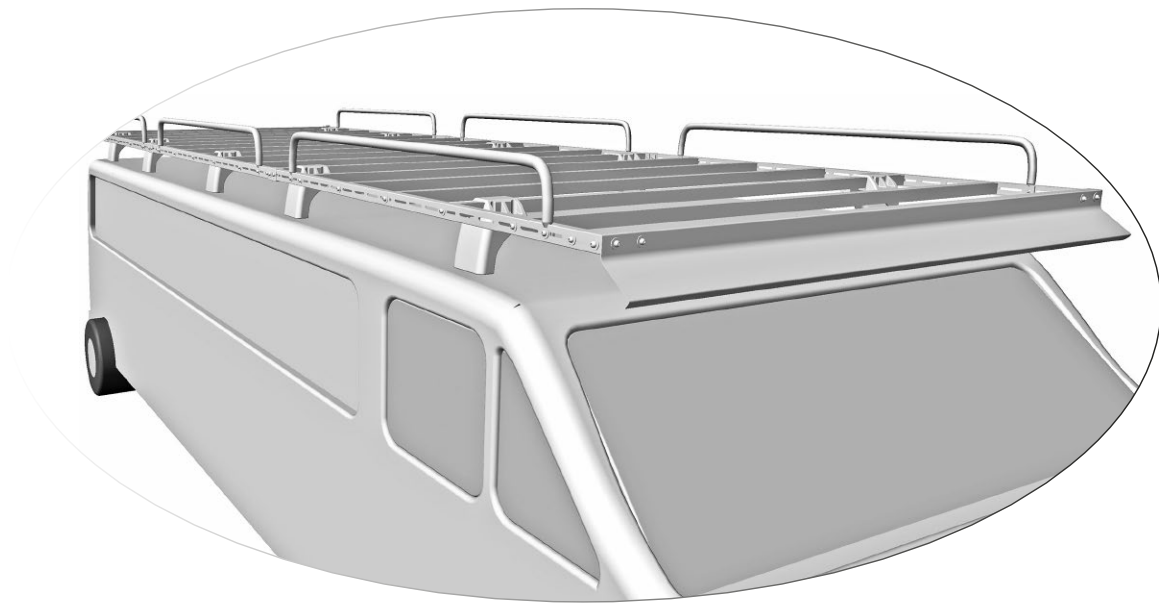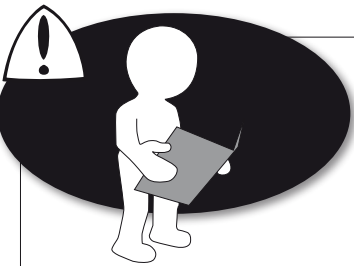


E	Instrucciones de montaje	Kit de fijación
C	Instruccions de muntatge	Kit de fixació
GB	Assembly instructions	Fixation Kit
F	Instruction de montage	Kit fixation
D	Montageanleitung	Stützfuß-Kit
PT	Instruções de montagem	Kit fixação
I	Istruzioni di montaggio	Kit di fissaggio
PL	Instrukcja montażu	Element mocujący
CZ	Montážní návod	Fixační kit
HU	Szerelési Utasítás	Rögzítő készlet
RO	Instrucțiuni de montaj	Kit de fixare
HR	Detaljne upute	Kit za montažu
TU	Öncelikli montaj	Montaj kiti

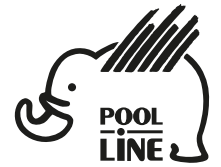

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042

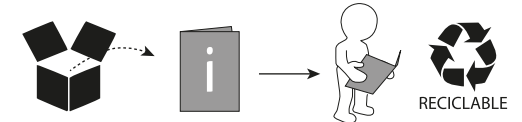

121932

Rv: 08/2025



- **NISSAN NV400** L3 H2 (2010->)
- **OPEL MOVANO B** L3 H2 (2010->)
- **RENAULT MASTER III** L3 H2 (2010->)

