


	L*	H**	
FORD			
Transit Connect Van II	L1	H1	13-
LAND ROVER			
Ranger Rover II	L1	H1	94-02
OPEL			
Combo C	L1	H1	02-11
RENAULT			
Express	L1	H1	91-00
VOLKSWAGEN			
Caddy III	L1	H1	04-11

- | | | |
|-----------|--------------------------|------------------|
| E | Instrucciones de montaje | Kit de fijación |
| C | Instruccions de muntatge | Kit de fixació |
| GB | Assembly instructions | Fixation Kit |
| F | Instruction de montage | Kit fixation |
| D | Montageanleitung | Stützfuß-Kit |
| PT | Instruções de montagem | Kit fixação |
| I | Istruzioni di montaggio | Kit di fissaggio |
| PL | Instrukcja montażu | Element mocujący |
| CZ | Montážní návod | Fixační kit |
| HU | Szerelési Utasítás | Rögzítő készlet |
| RO | Instructiuni de montaj | Kit de fixare |
| HR | Detaljne upute | Kit za montažu |
| TU | Öncelikli montaj | Montaj kiti |

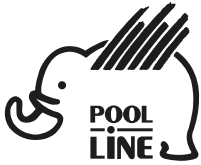

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net




200




KG.
MAX.

Nº HOMOLOGACIÓN: **E9** 26R-03.1042




123212


Rv: 08/2015

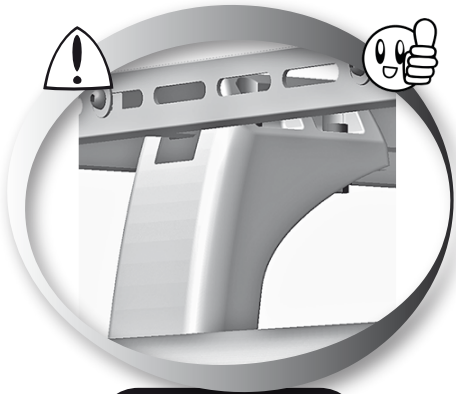


KIT CARGO-TECK

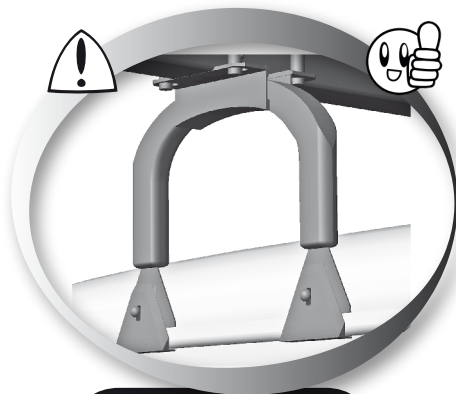



KIT CARGO-TECK FEET

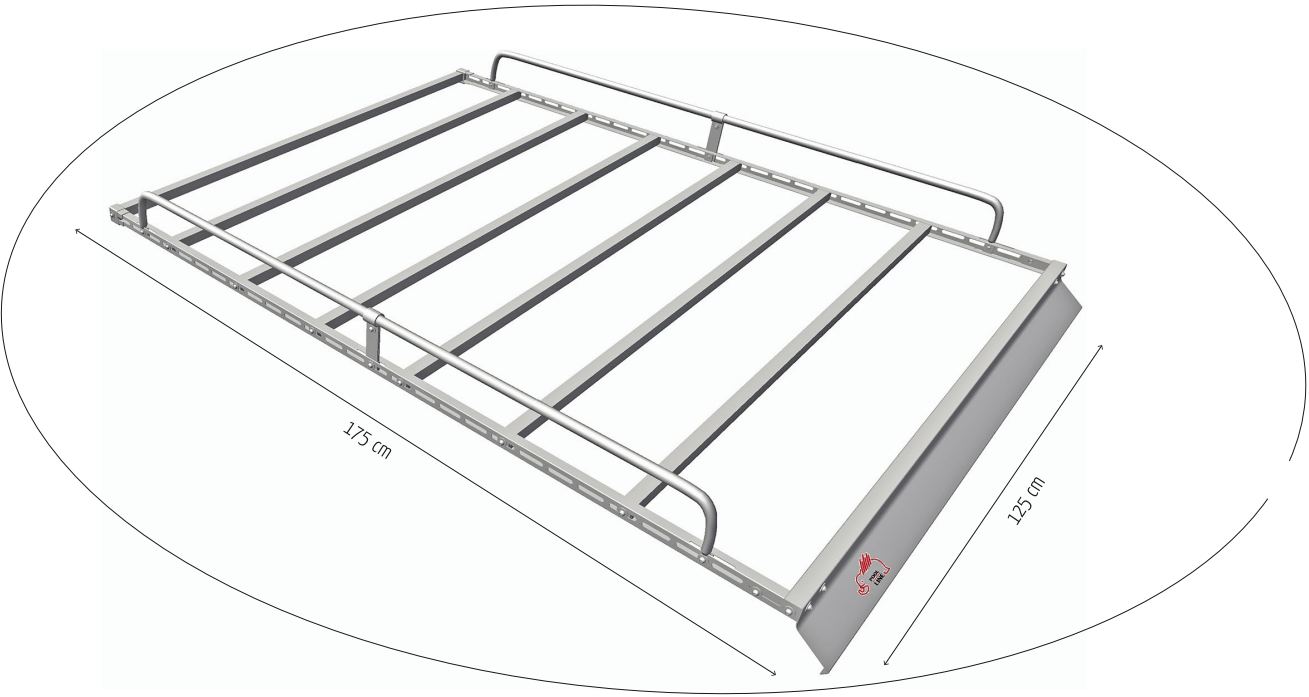

1 year
Warranty

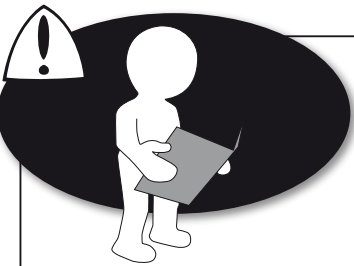

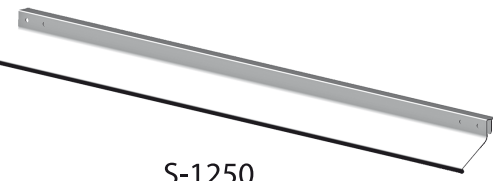N		Q
1	 S-1250	1
2		2
3	 L-1730	2
4	 B-1442	2
5		4
6	 T-1235	7
7		14
8		2
9		6
10		1

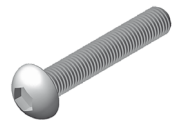N		Q
11	 CHA-M8	6
12	 ISO 7380 M8x40	14
13	 ISO 7380 M8x16	14
14	 DIN 125 Ø 8	28
15	 DIN 603 M6x12	2
16	 DIN 6923 M6	2

