


FORD			
Transit Connect Van II	L1	H1	13-
LAND ROVER			
Ranger Rover II	L1	H1	94-02
OPEL			
Combo C	L1	H1	02-11
RENAULT			
Express	L1	H1	91-00
VOLKSWAGEN			
Caddy III	L1	H1	04-11

- | | | |
|-----------|--------------------------|------------------|
| E | Instrucciones de montaje | Kit de fijación |
| C | Instruccions de muntatge | Kit de fixació |
| GB | Assembly instructions | Fixation Kit |
| F | Instruction de montage | Kit fixation |
| D | Montageanleitung | Stützfuß-Kit |
| PT | Instruções de montagem | Kit fixação |
| I | Istruzioni di montaggio | Kit di fissaggio |
| PL | Instrukcja montażu | Element mocujący |
| CZ | Montážní návod | Fixační kit |
| HU | Szerelési Utasítás | Rögzítő készlet |
| RO | Instructiuni de montaj | Kit de fixare |
| HR | Detaljne upute | Kit za montažu |
| TU | Öncelikli montaj | Montaj kiti |

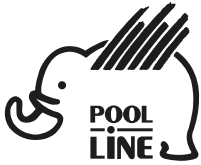

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net




200




KG.
MAX.

Nº HOMOLOGACIÓN: **E9** 26R-03.1042




123212


Rv: 08/2015

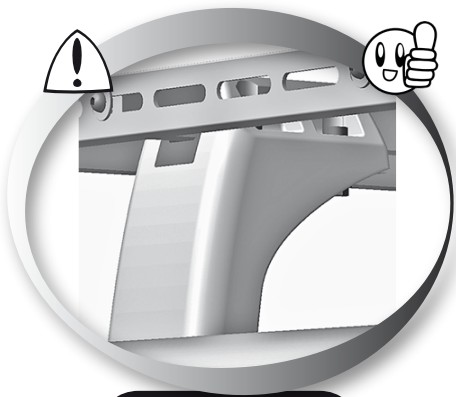


KIT CARGO-TECK

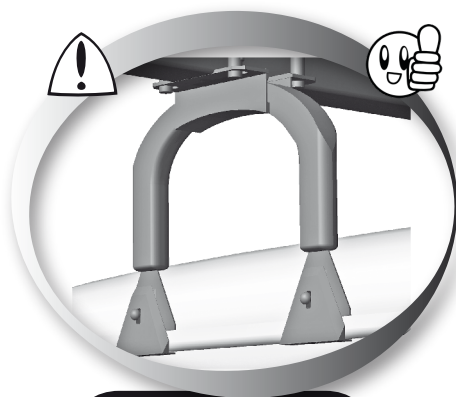



KIT CARGO-TECK FEET

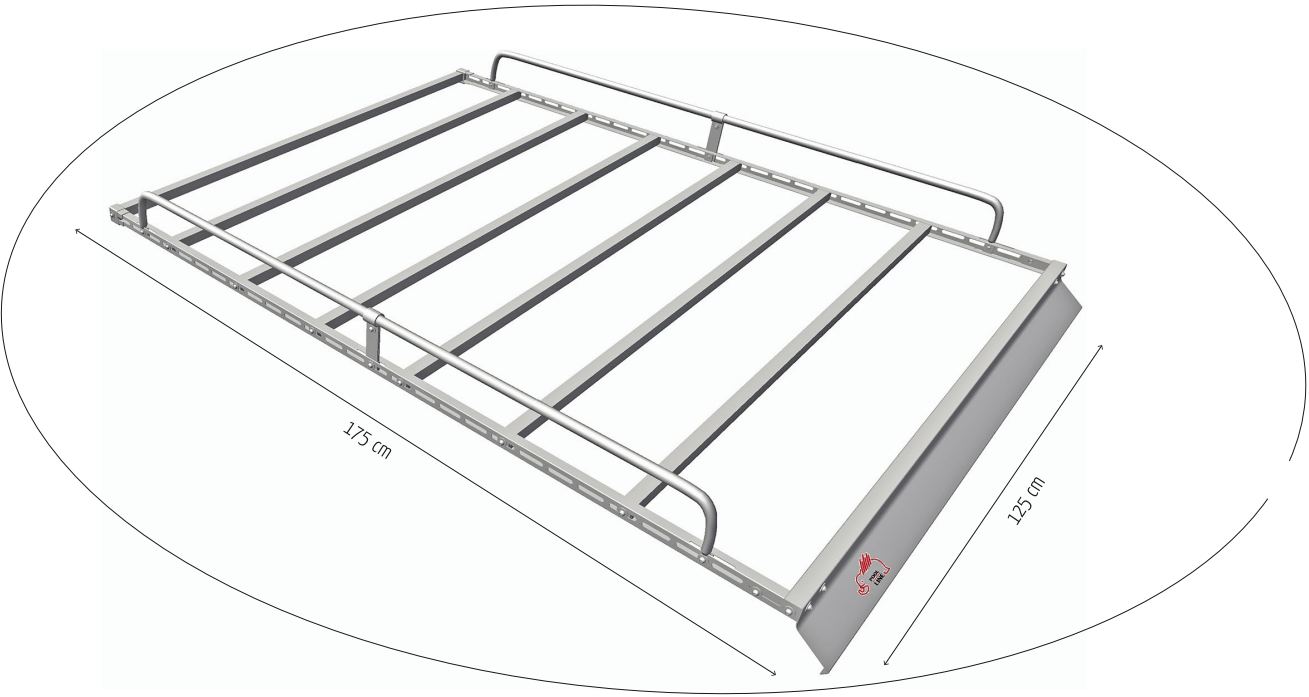







1 **year**
Warranty




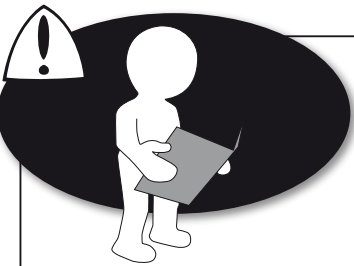




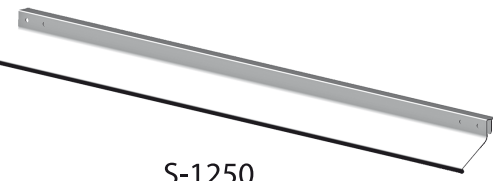
N		Q
1	 S-1250	1
2		2
3	 L-1730	2
4	 B-1442	2
5		4
6	 T-1235	7
7		14
8		2
9		6
10		1

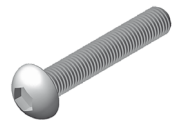
N		Q
11	 CHA-M8	6
12	 ISO 7380 M8x40	14
13	 ISO 7380 M8x16	14
14	 DIN 125 Ø 8	28
15	 DIN 603 M6x12	2
16	 DIN 6923 M6	2

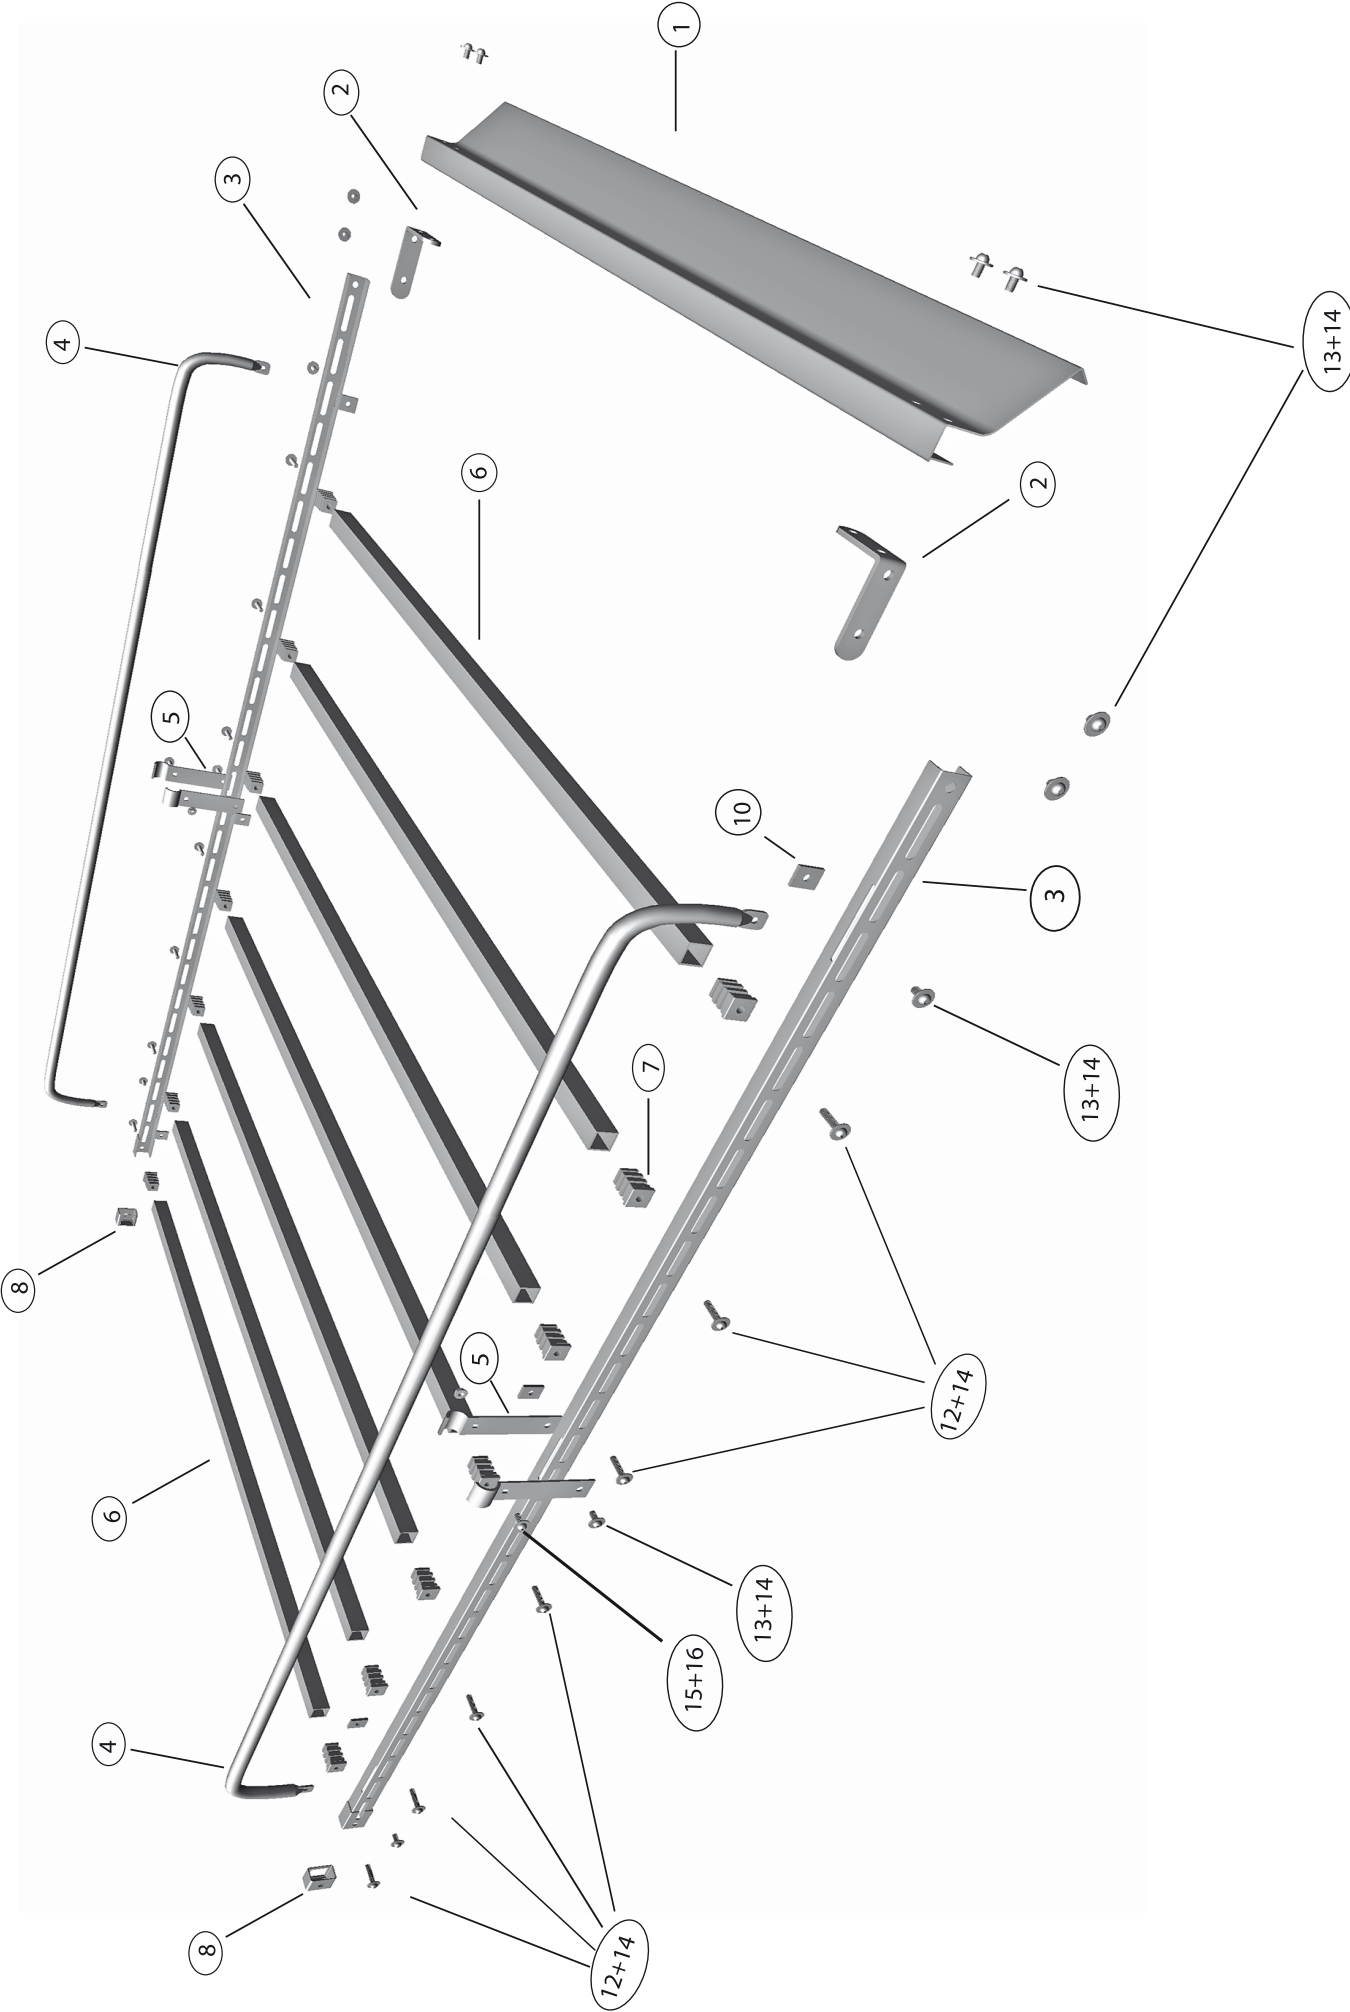


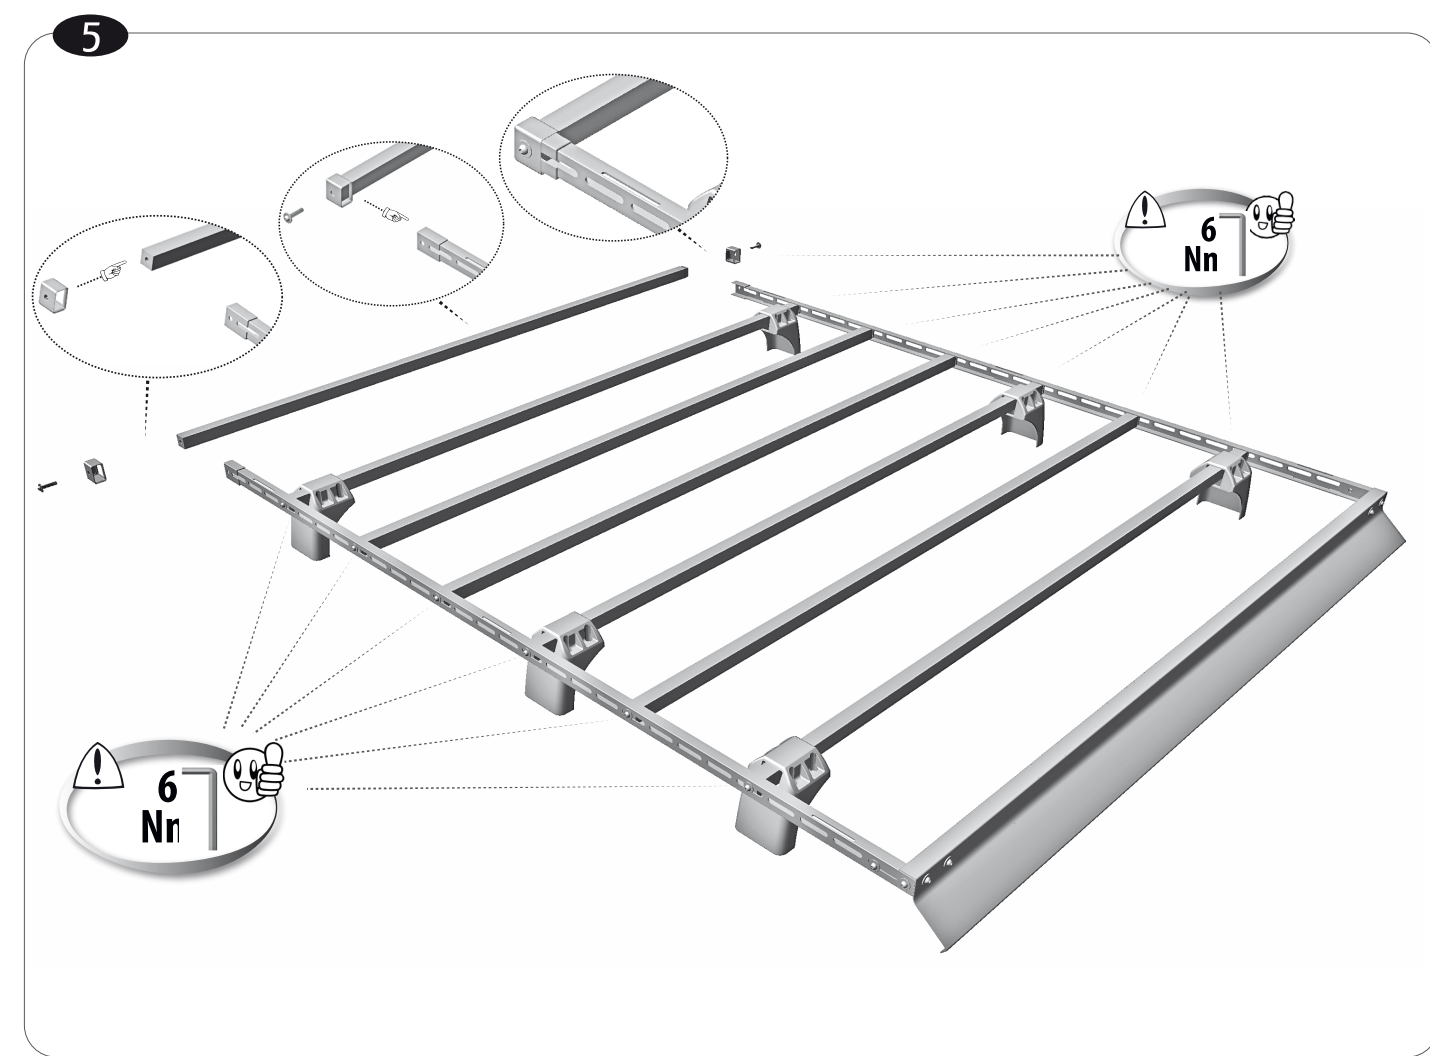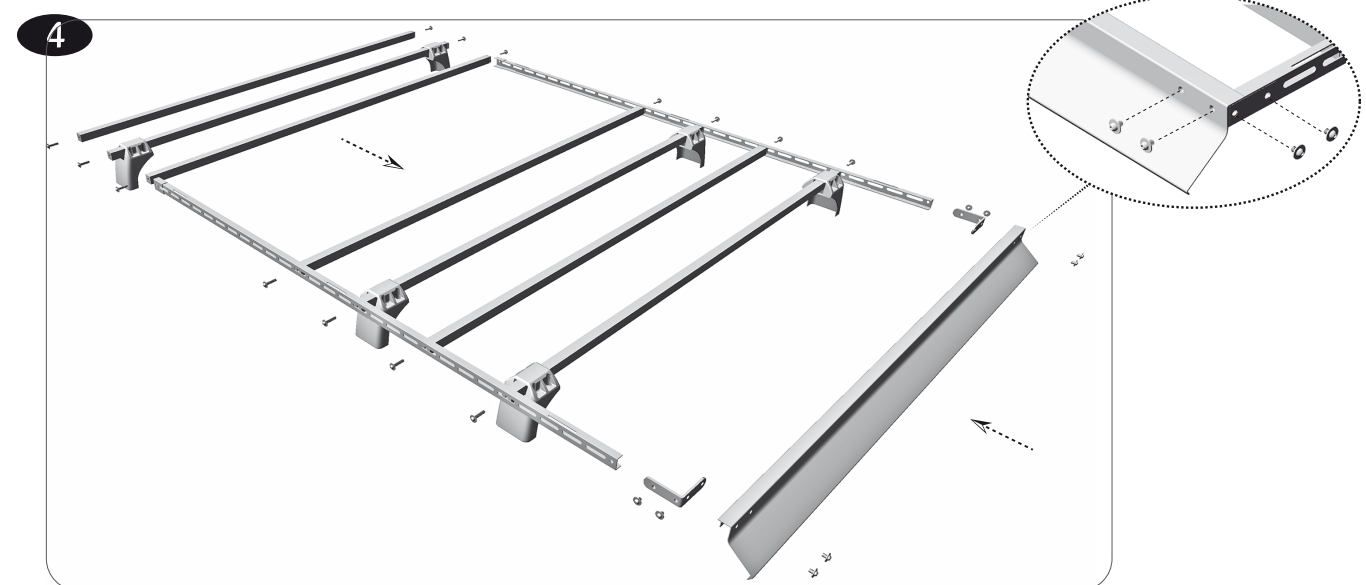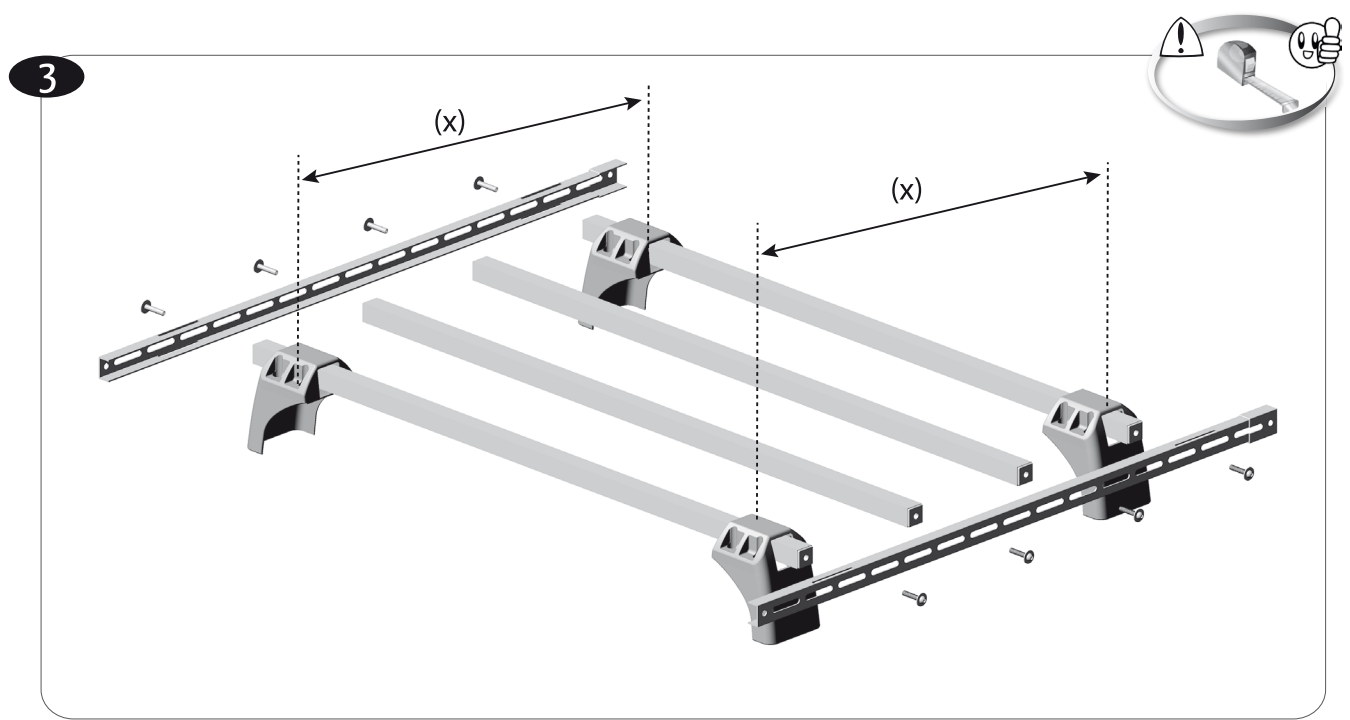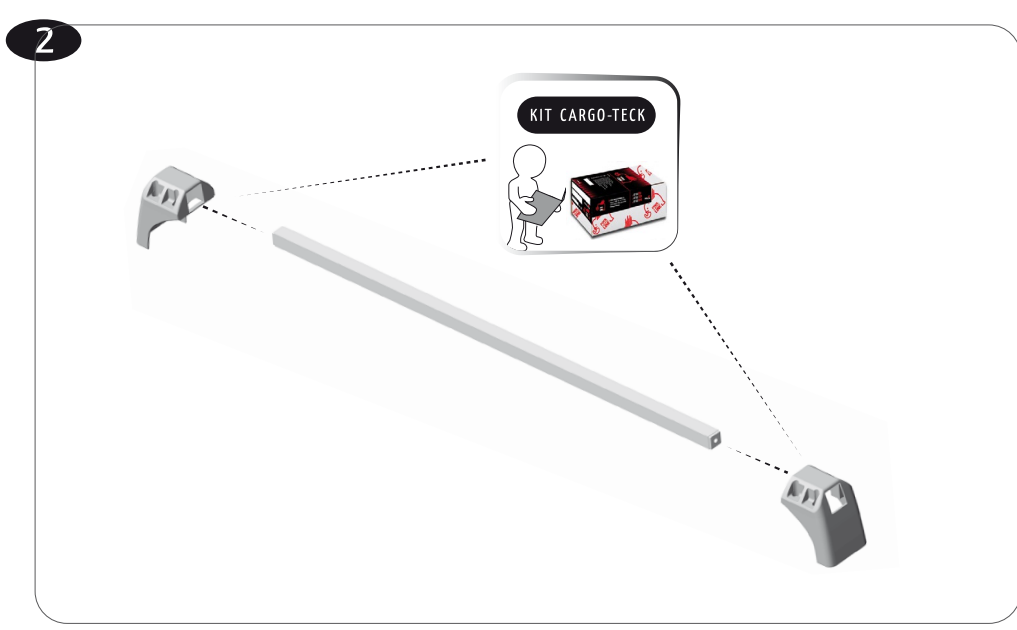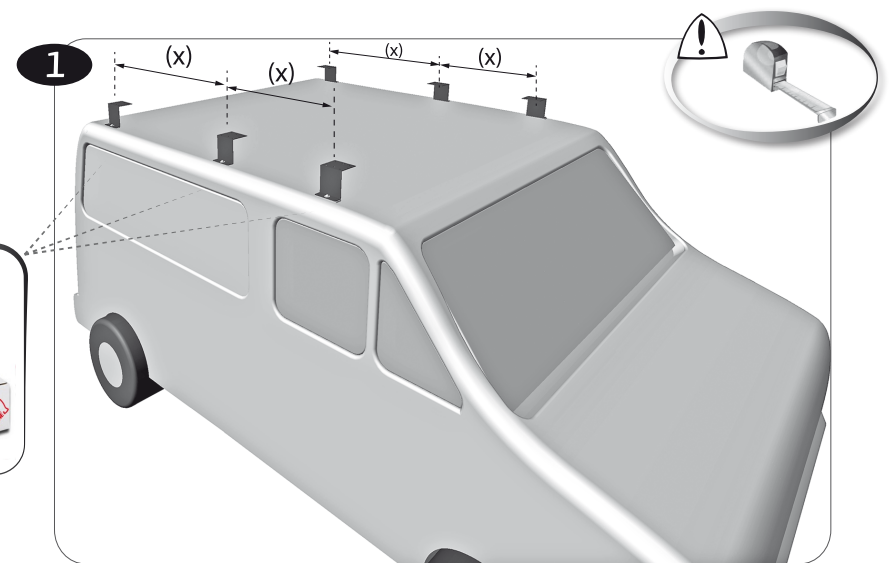

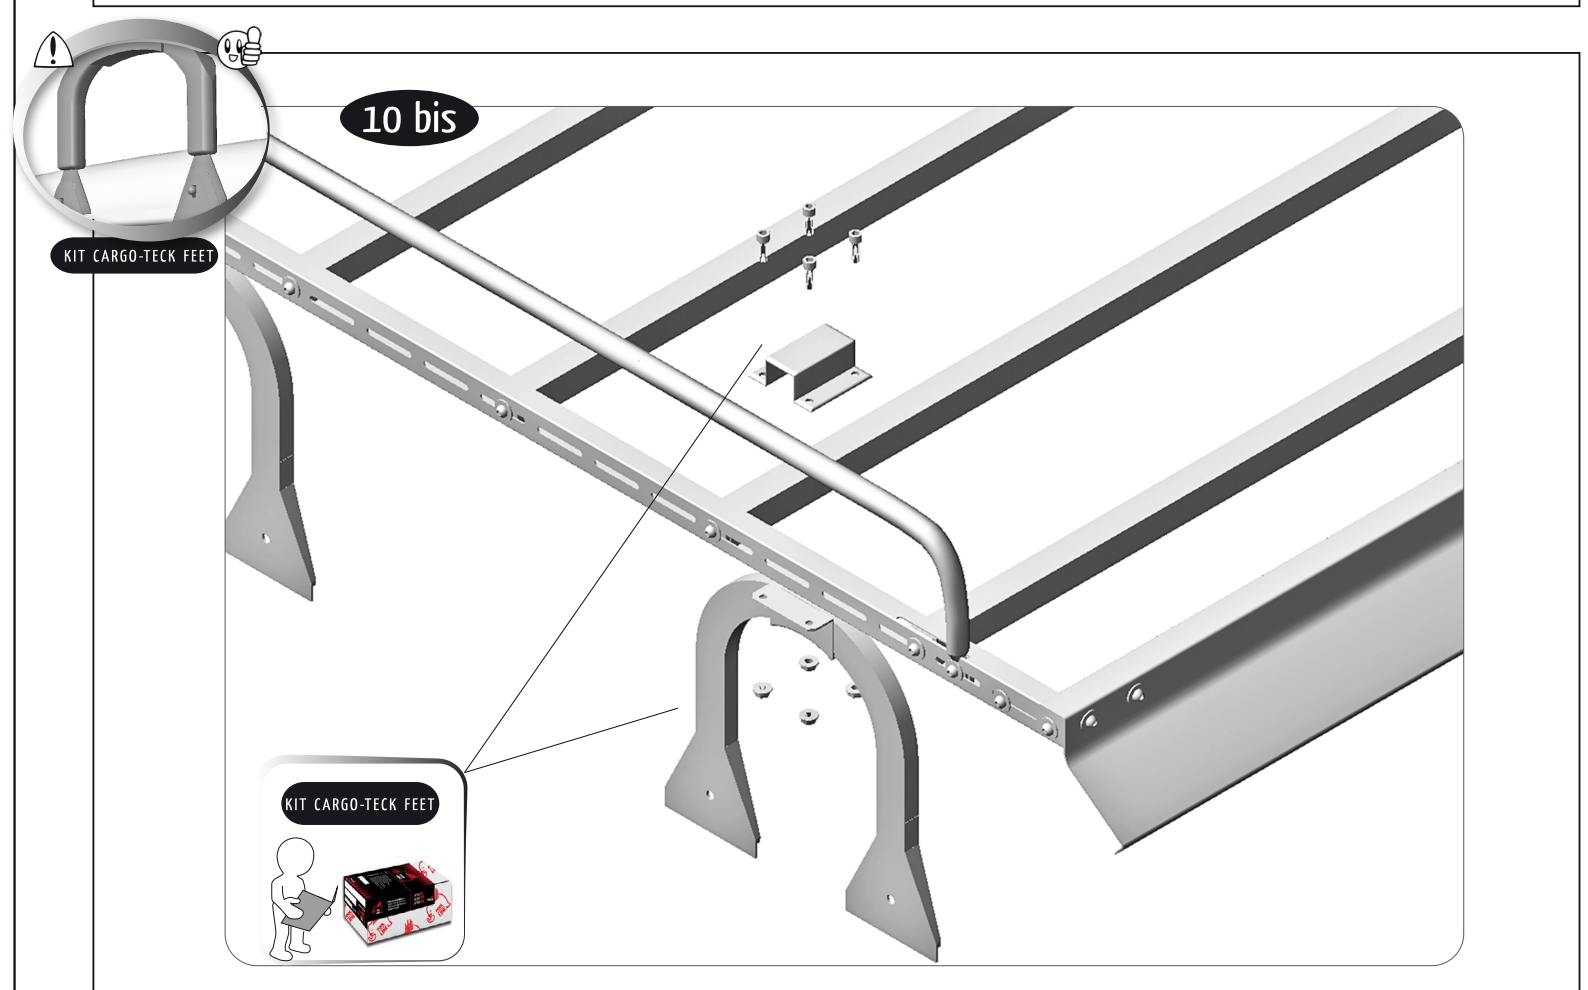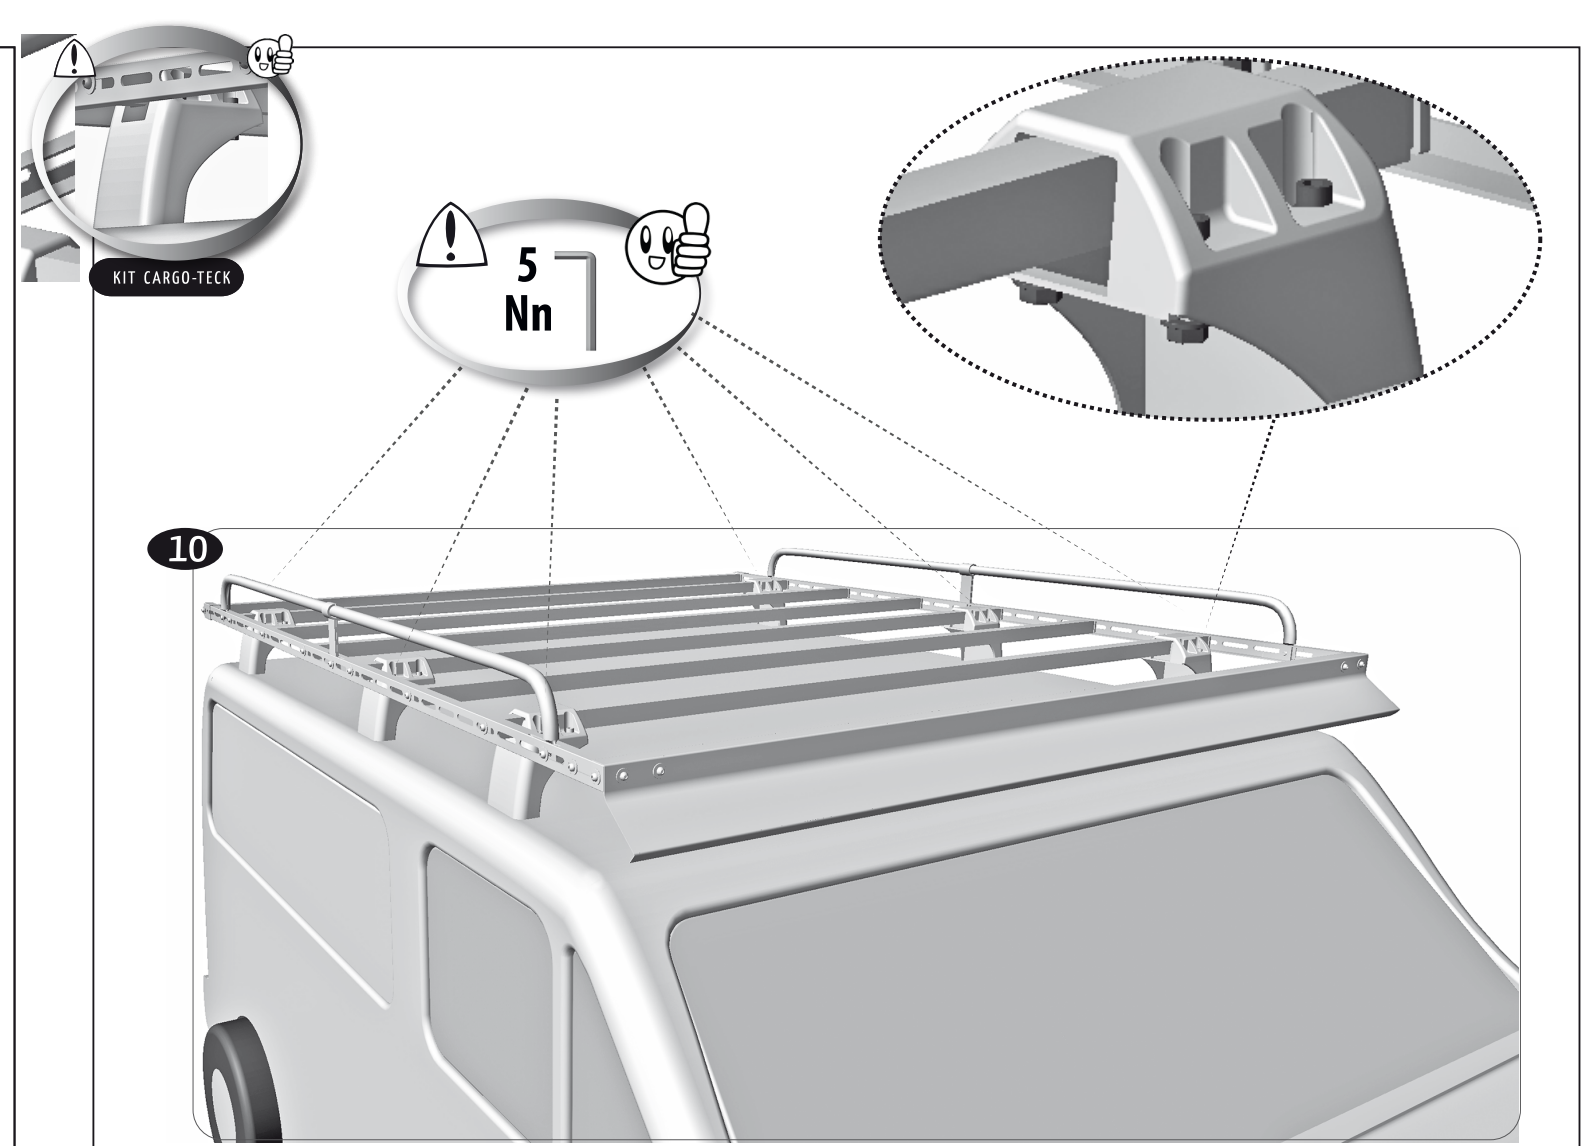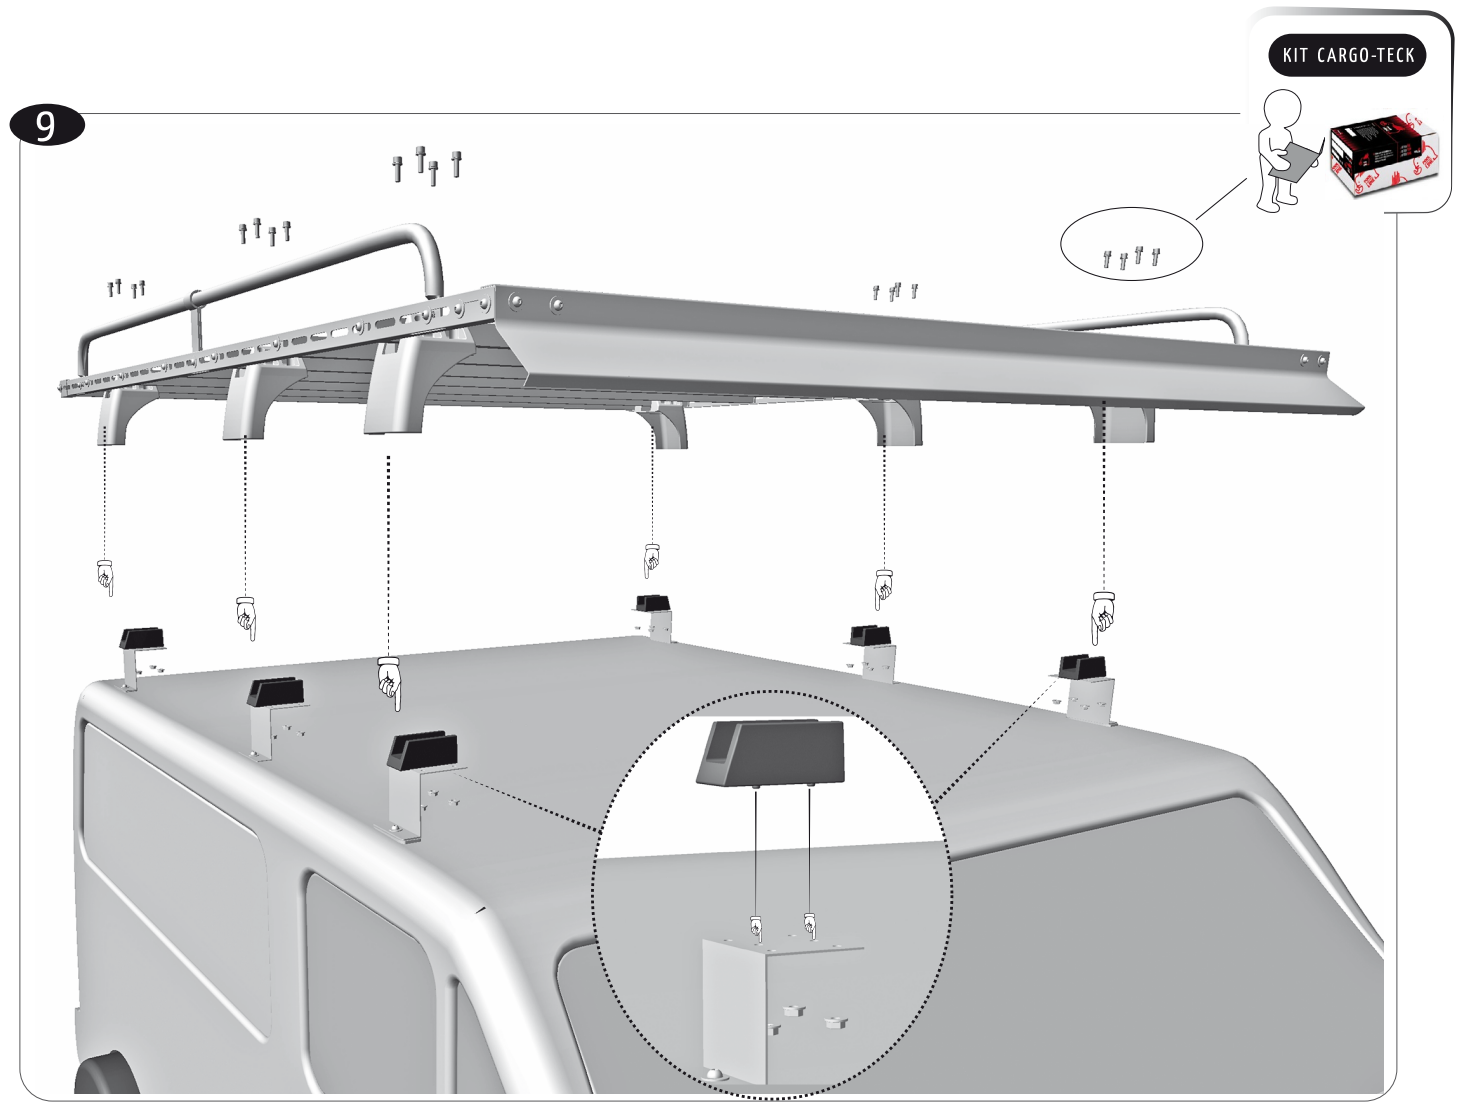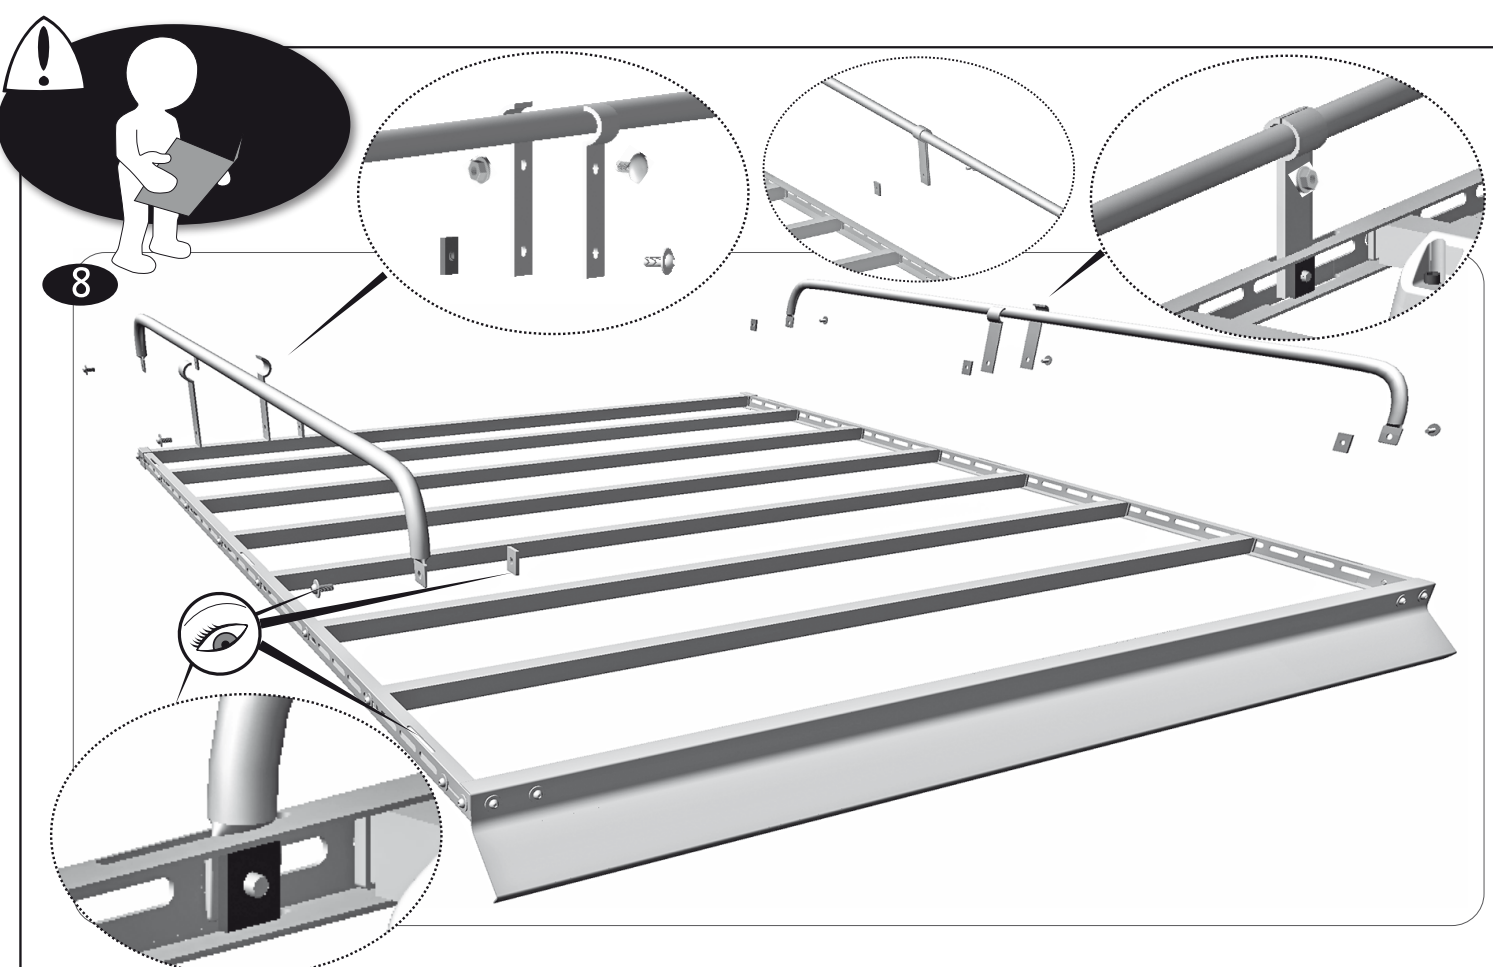


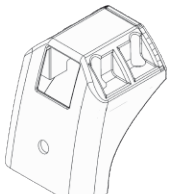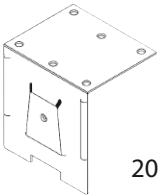N		Q
1	 80R	4
2	 201	4
3	 DM	4
4		4
5		8
6		1

N	BO0060	Q
8	 DIN912 M6x20	16
9	 DIN125	16

N	BO0043	Q
10	 DIN912 M6x25	4

N	BO0020	Q
11	 DIN9021 Ø6	4

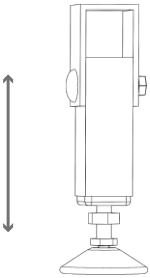N		Q
12	 VENT10 100mm	2
13		1

N	LOGO	Q
14		4

- E

Instrucciones de montaje

Kit de fijación
- C

Instruccions de muntatge

Kit de fixació
- GB

Assembly instrucctions

Fixation Kit
- F

Instruction de montage

Kit fixation
- D

Montageanleitung

Stützfuß-Kit
- PT

Instruções de montagem

Kit fixação
- I

Istruzioni di montaggio

Kit di fissaggio
- PL

Instrukcja montażu

Element mocujący
- CZ

Montážní návod

Fixační kit
- HU

Szerelési Utasítás

Rögzítő készlet
- RO

Instruciuni de montaj


Kit de fixare
- HR

Detaljne upute

Kit za montažu
- TU


Öncelikli montaj

Montaj kiti

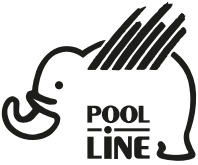



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042

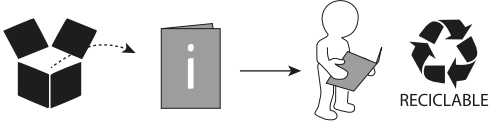


121641


Rv: 8/2025

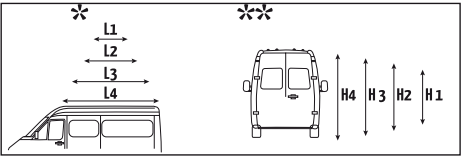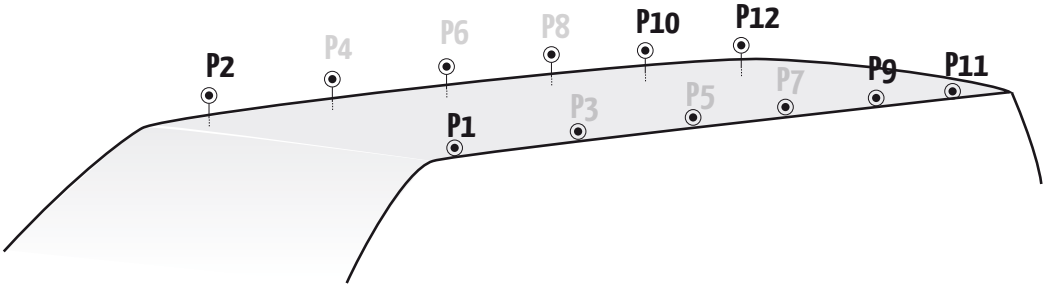

	L*	H**		10	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
OPEL COMBO C	L1	H1	02 - 11	B000043 + B000020	201+DM	201+DM							201+DM	201+DM	VENT10	VENT10

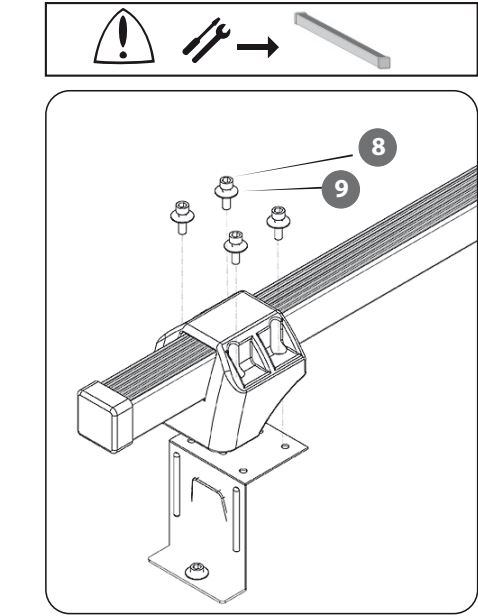

Limpeza pre-instalação
Pre-installation cleaning

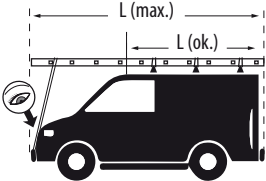

Revisar par de apriete
Check torque

