


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

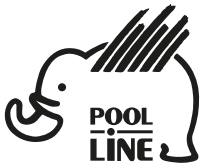

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net





200 KG.
MAX.

Nº HOMOLOGACIÓN: E9 26R-03.1042




123312

Rv: 10/2024

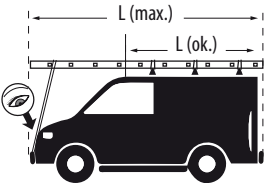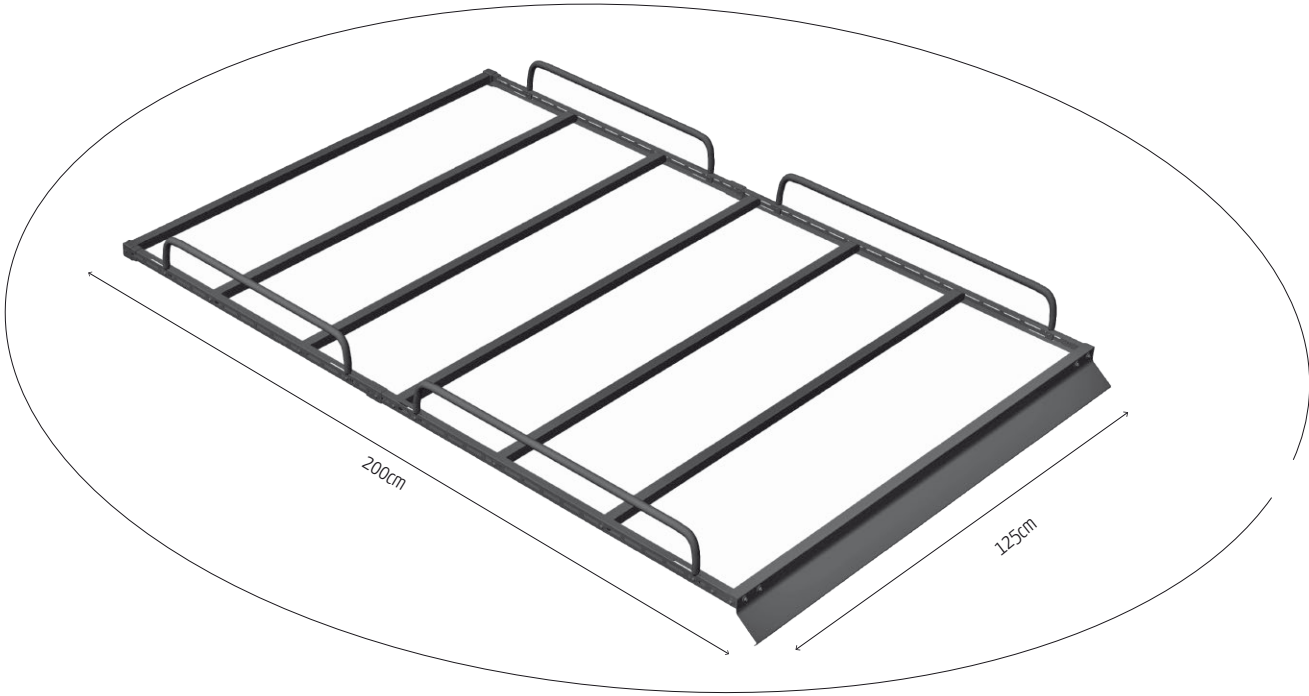


N		Q
1	 S-1250	1
2	 L-1120	2
3	 B-842	2
4	 L-943	2
5	 B-662	2
6	 T-1235	6
7		2
8		12
9		2
10		8
12		1
13	 CHA-M8	12
14	 ISO 7380 M8x30	10
15	 ISO 7380 M8x16	20
16	 DIN 125 Ø 8	32
17	 ISO 7380 M8x40	2

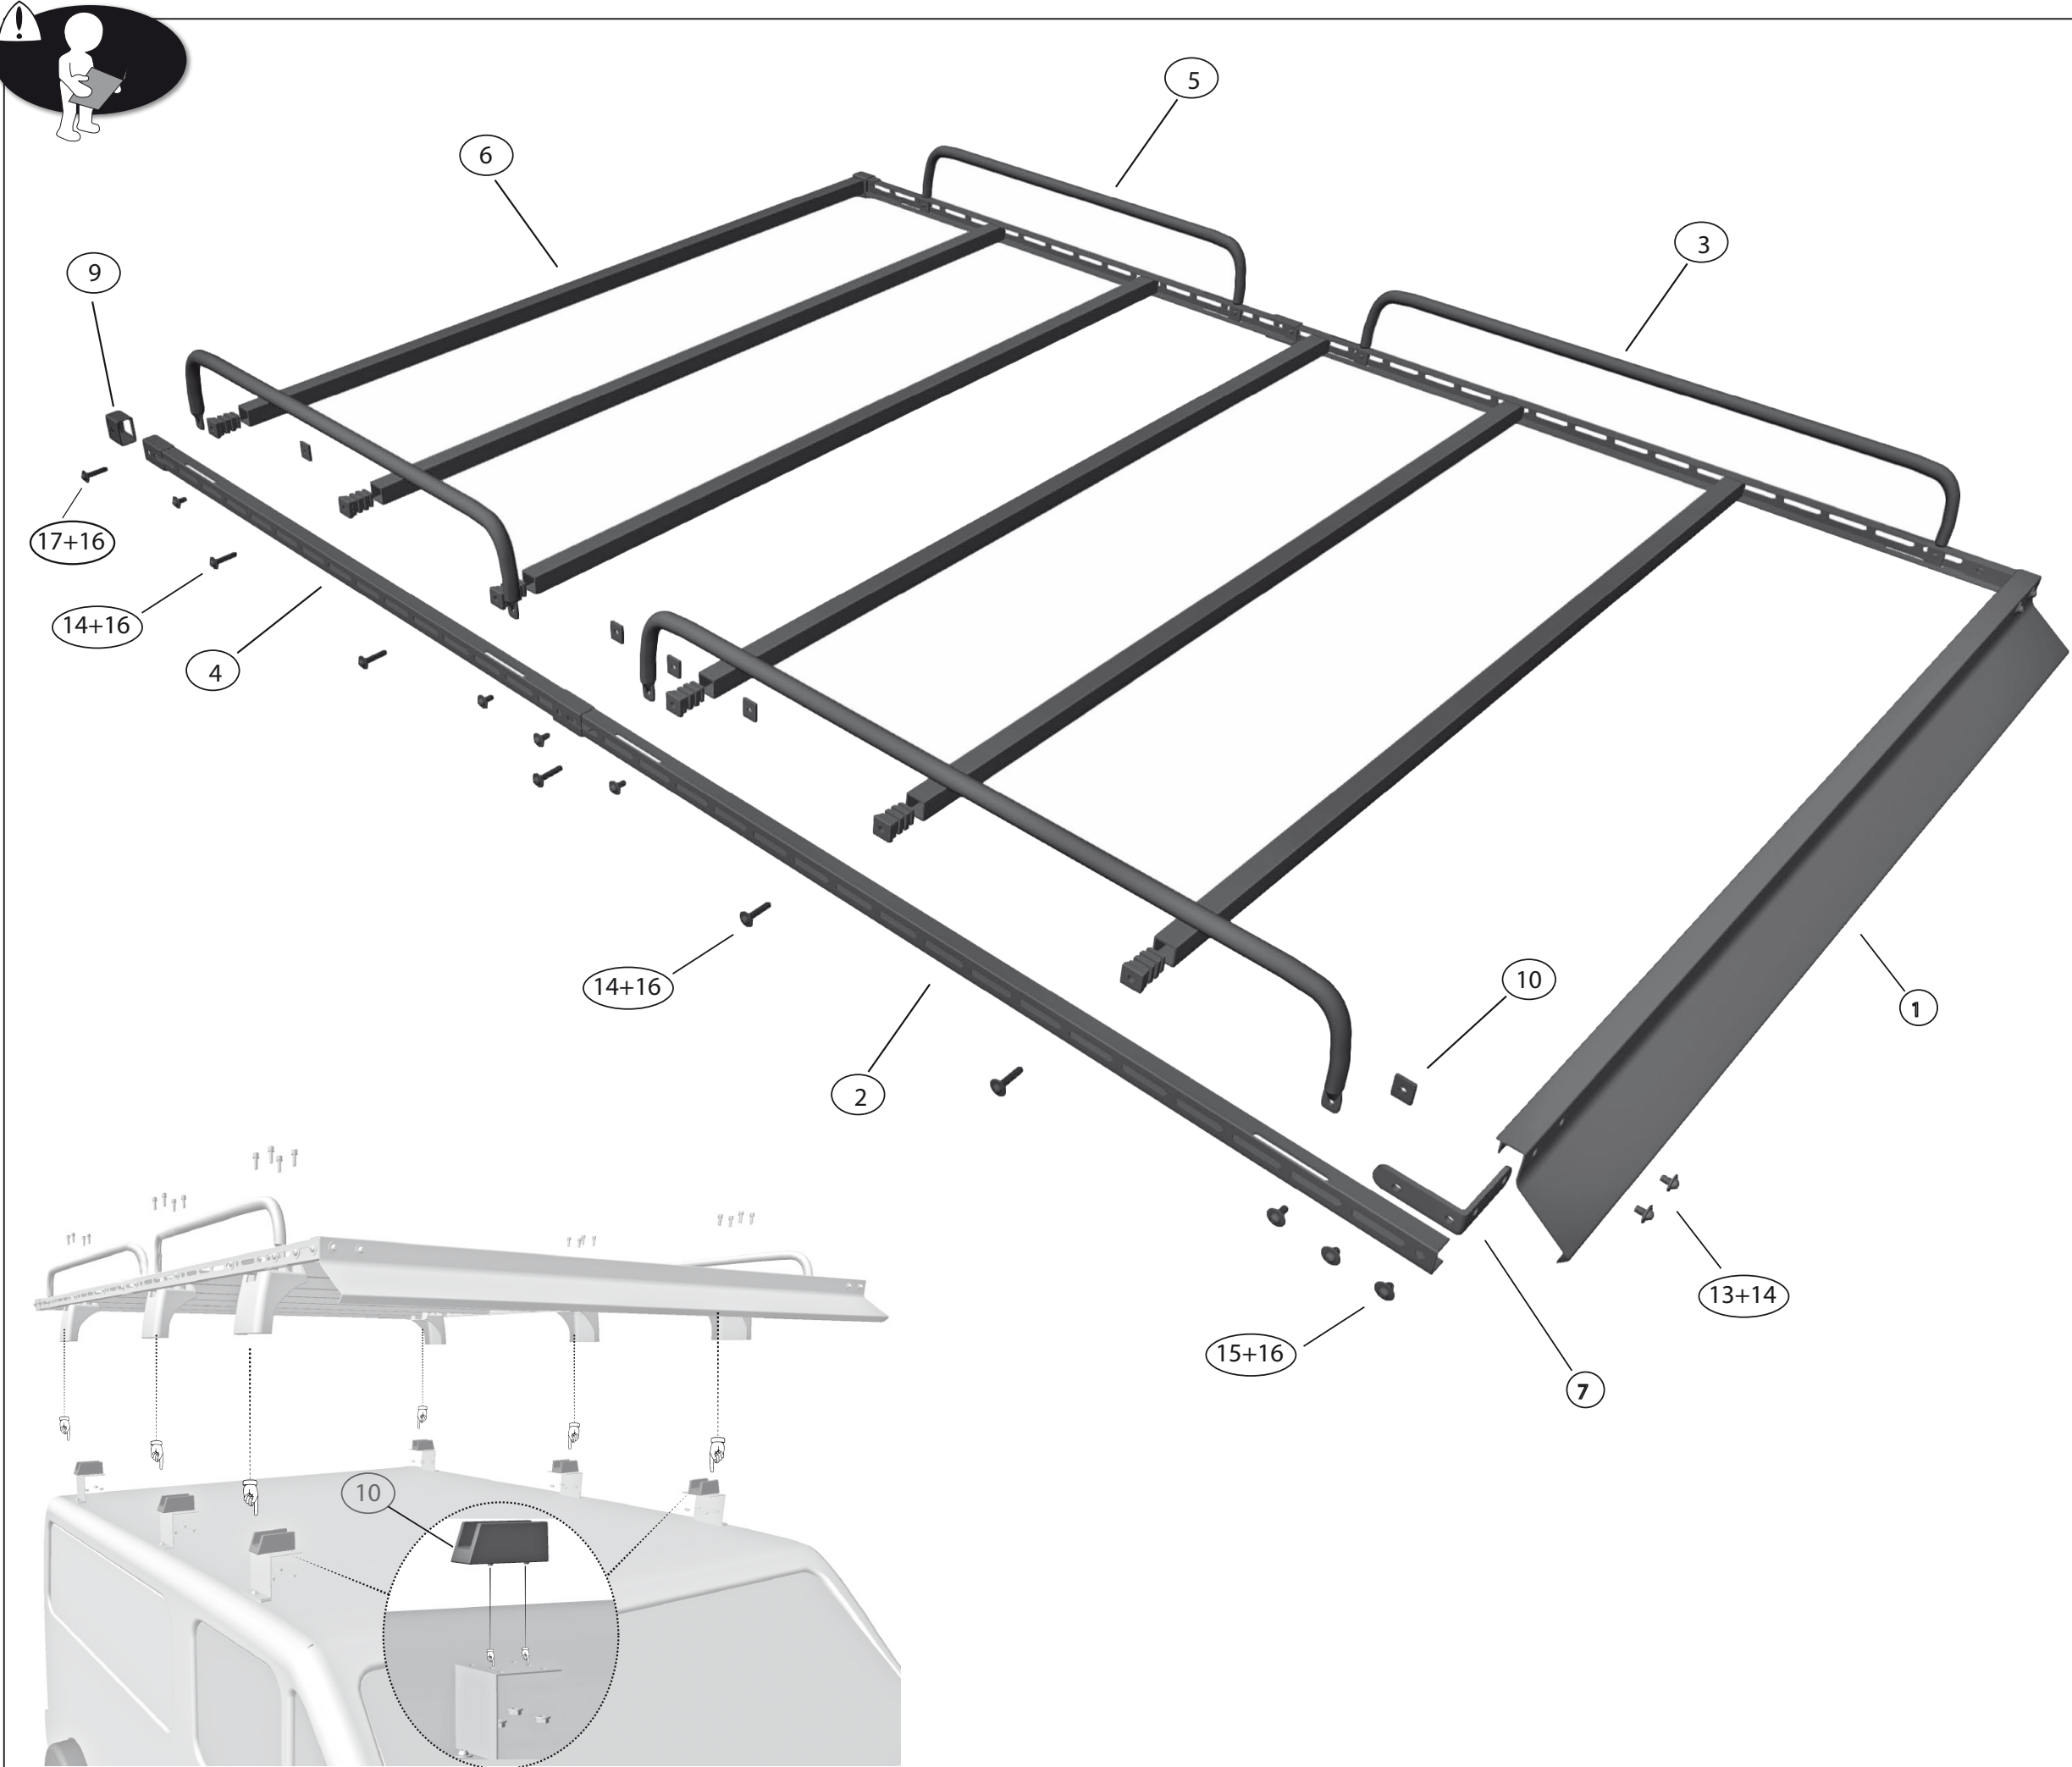




CITROËN BERLINGO I / PEUGEOT PARTENR I

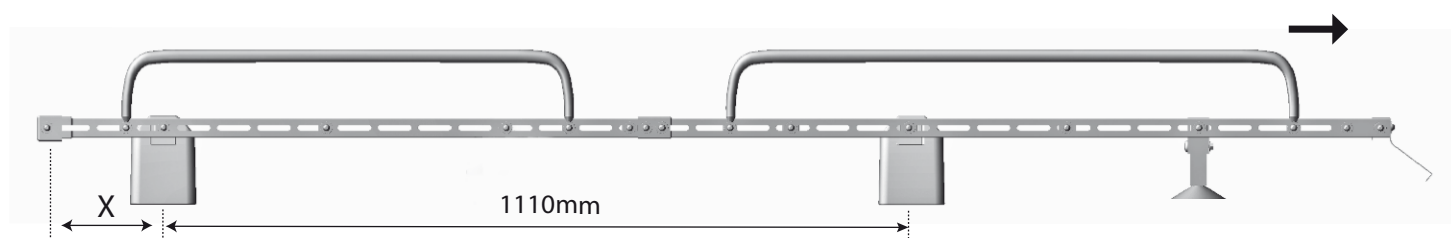


$200\text{mm} = X$

CITROËN JUMPY I / FIAT SCUDO I / PEUGEOT EXPERT I

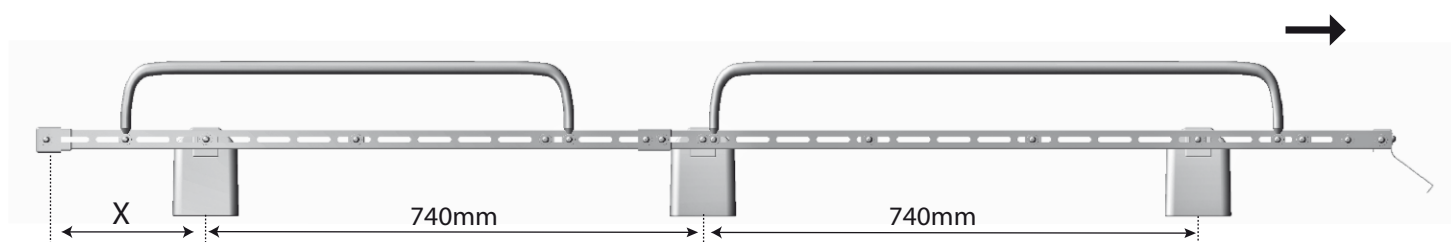

$210\text{mm} = X$


DACIA DOKKER VAN

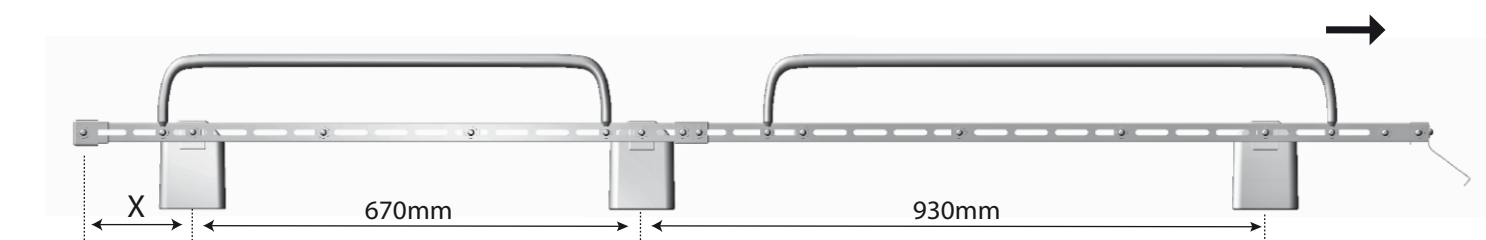

$100\text{mm} = X$


$70\text{mm} = X$

FORD TOURNEO CONNECT I L1 / FORD TRANSIT CONNEC I T L1

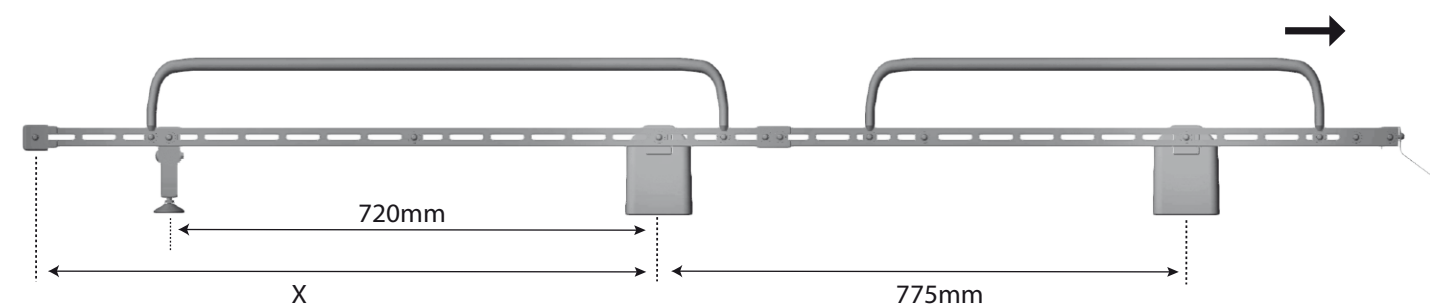


$900\text{mm} = X$

FORD TOURNEO CONNECT I L2 / FORD TRANSIT CONNEC I T L2

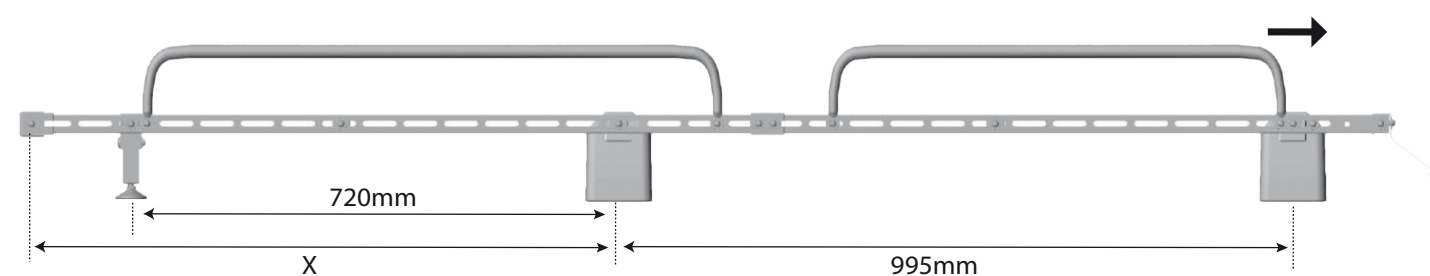

$800\text{mm} = X$


FORD TRANSIT CONNECT VAN II (2013->)

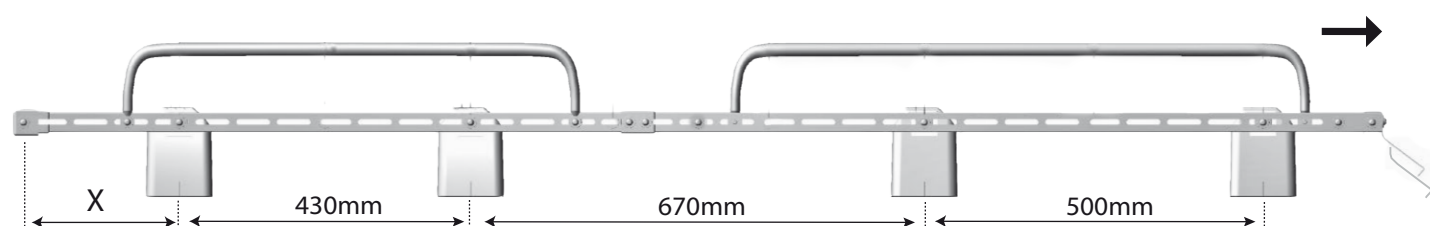

$300\text{mm} = X$




FORD COURIER II (2013->)

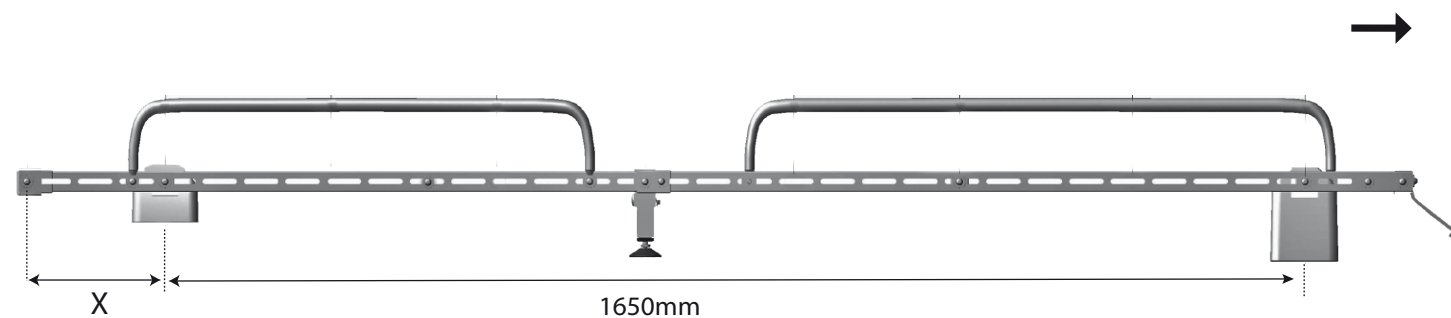


200mm = X

RENAULT EXPRESS (2021->)

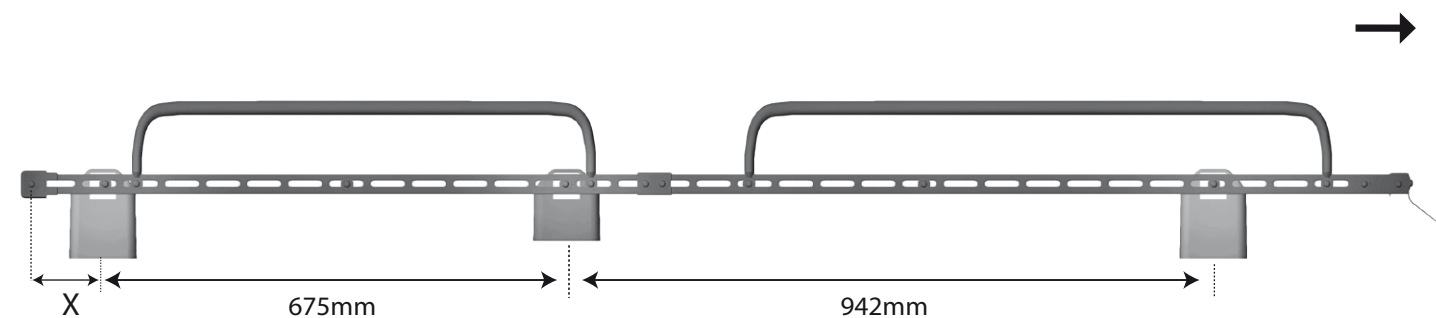


100mm = X

MERCEDES CITAN W415 L2 / NISSAN NV250 L1 / RENAULT KANGOO II L2

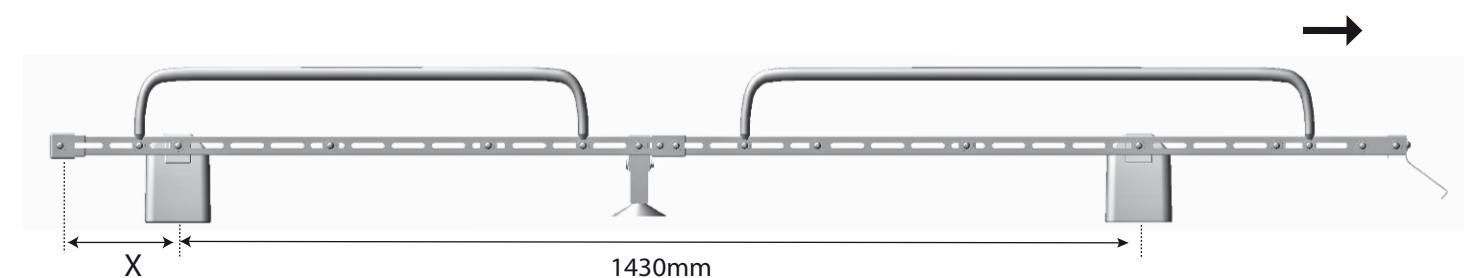


100mm = X

MERCEDES CITAN 420 L1 (2021->) / RENAULT KANGOO III (2021->)

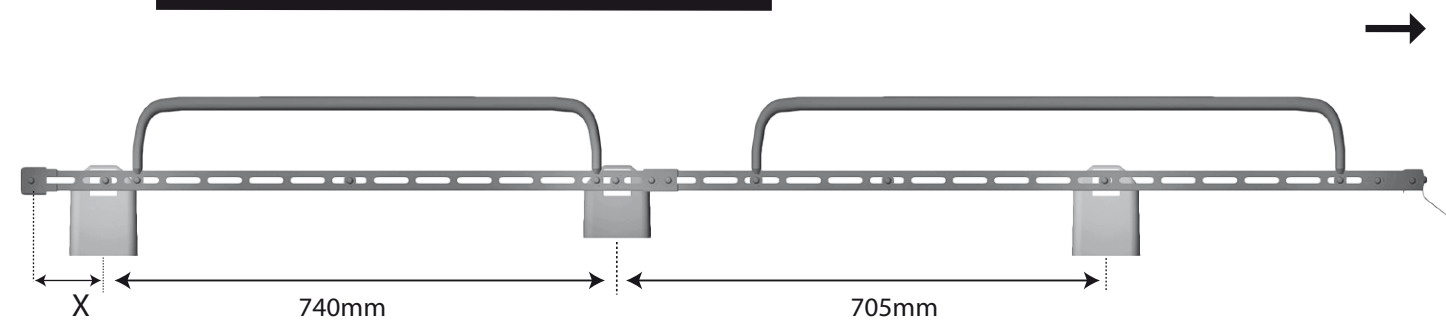


100mm = X

VOLKSWAGEN CADDY IV L1

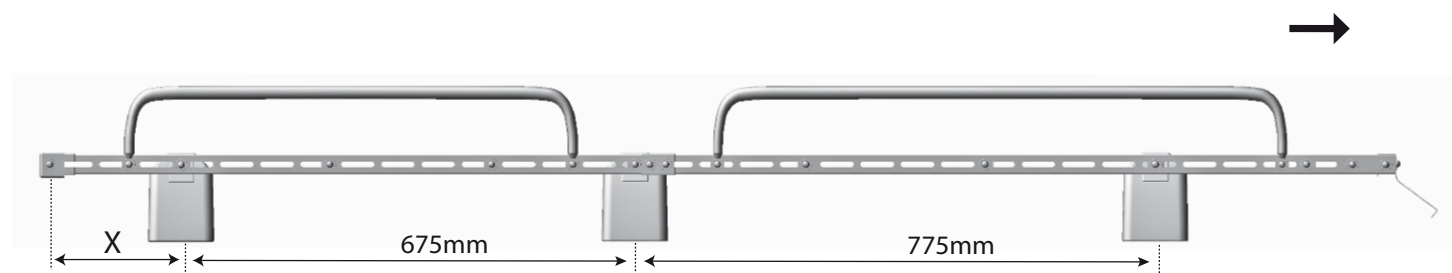


300mm = X



1




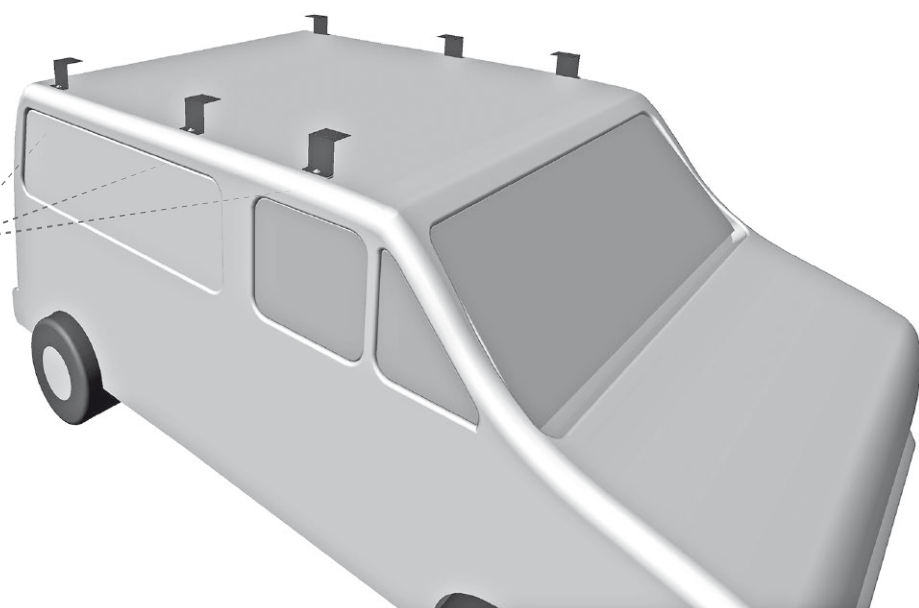


2

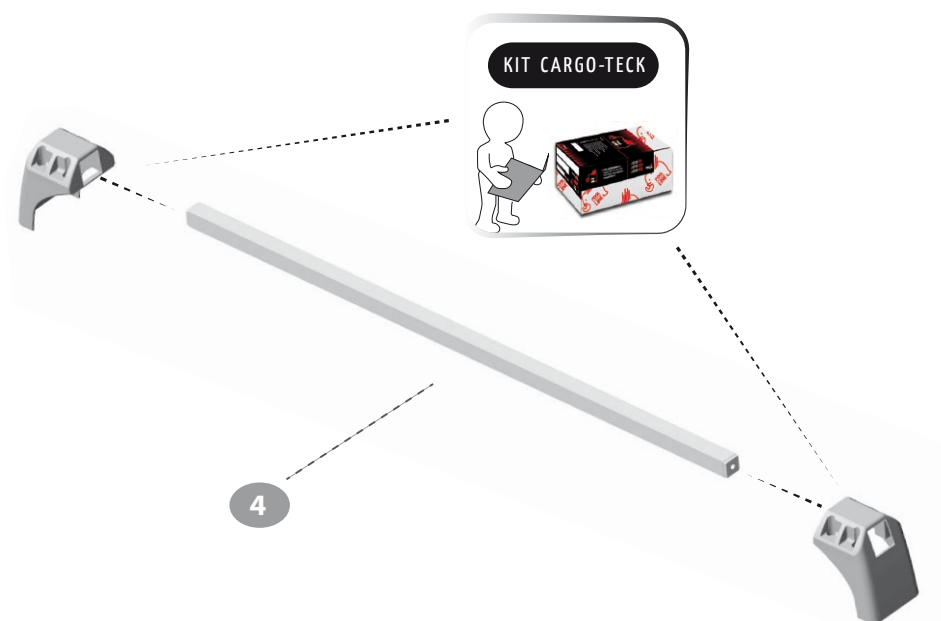


3

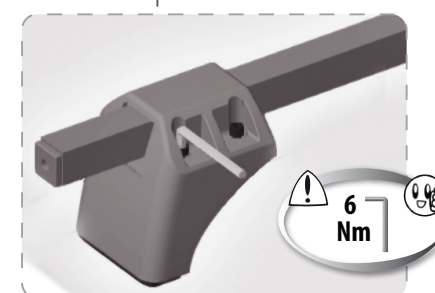
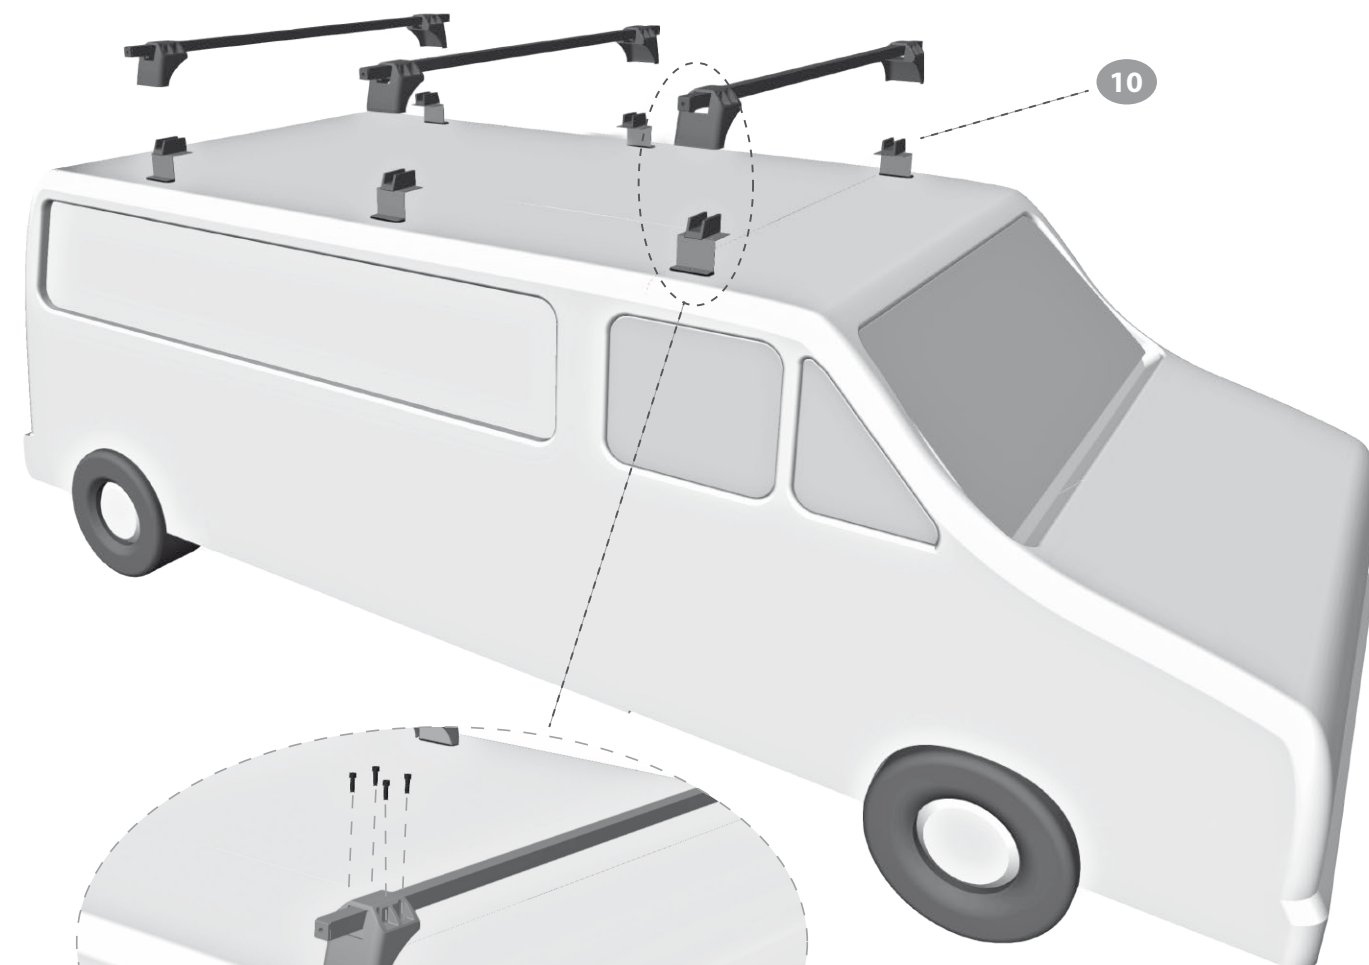


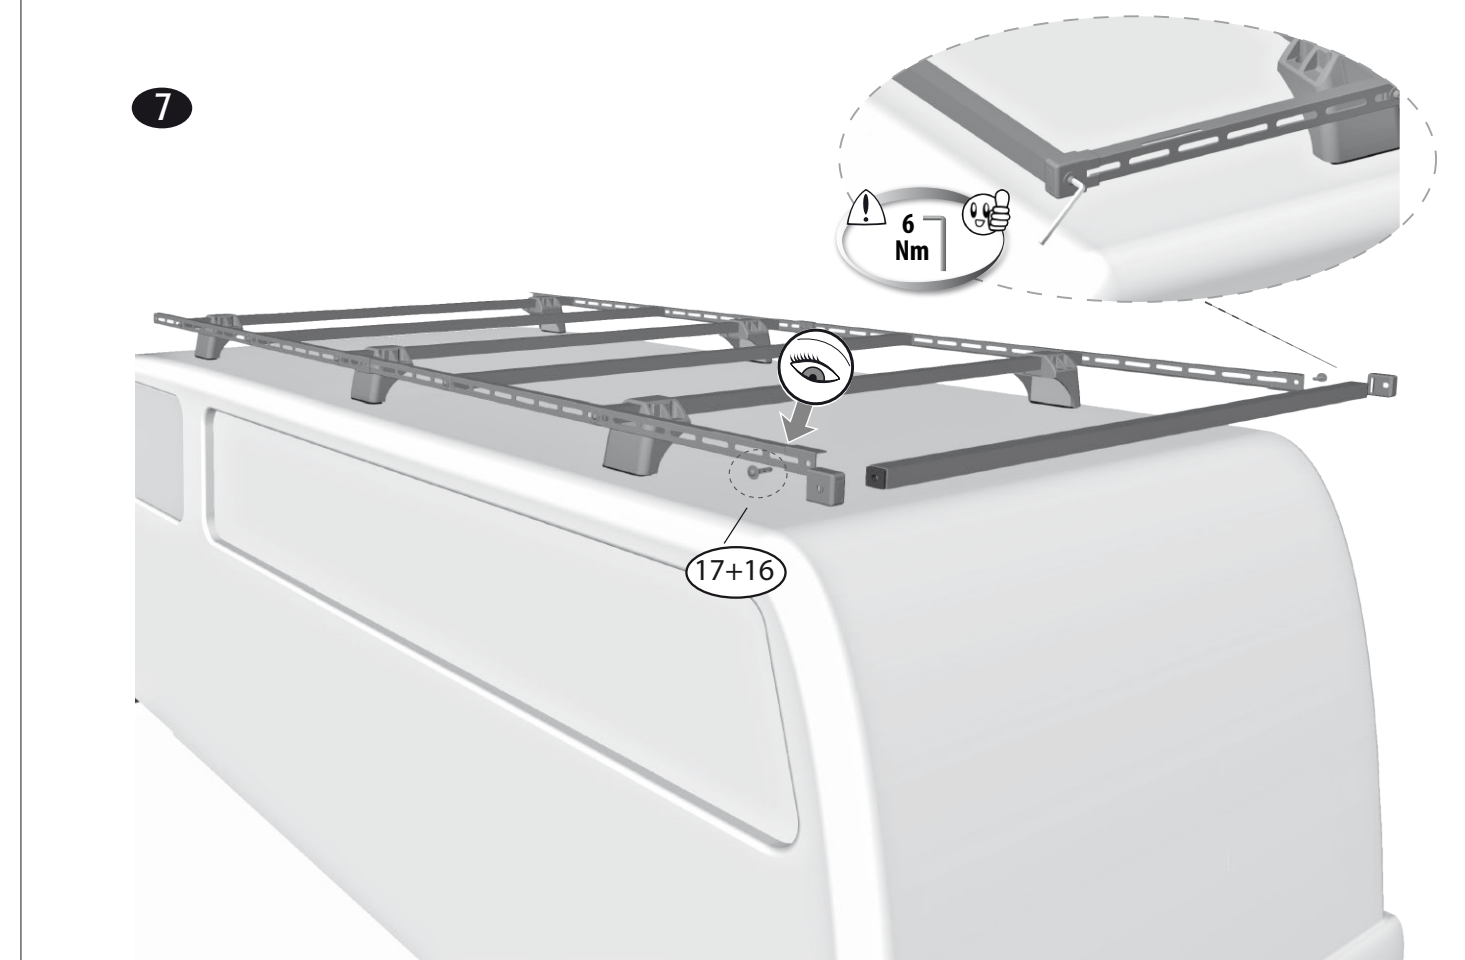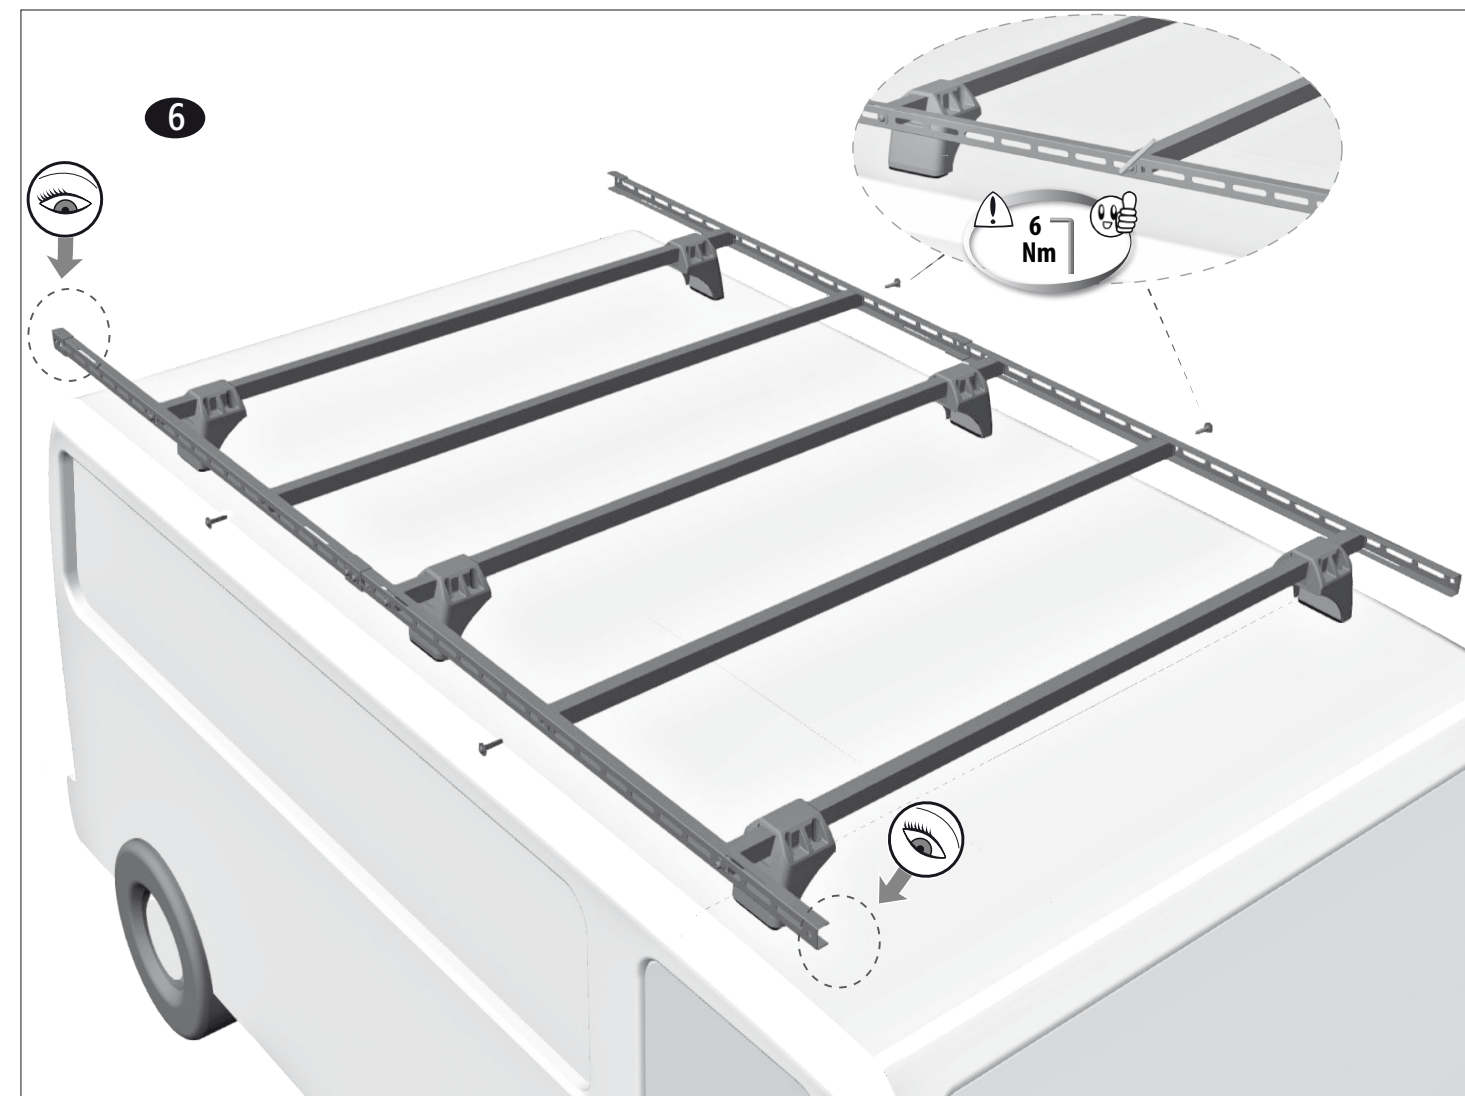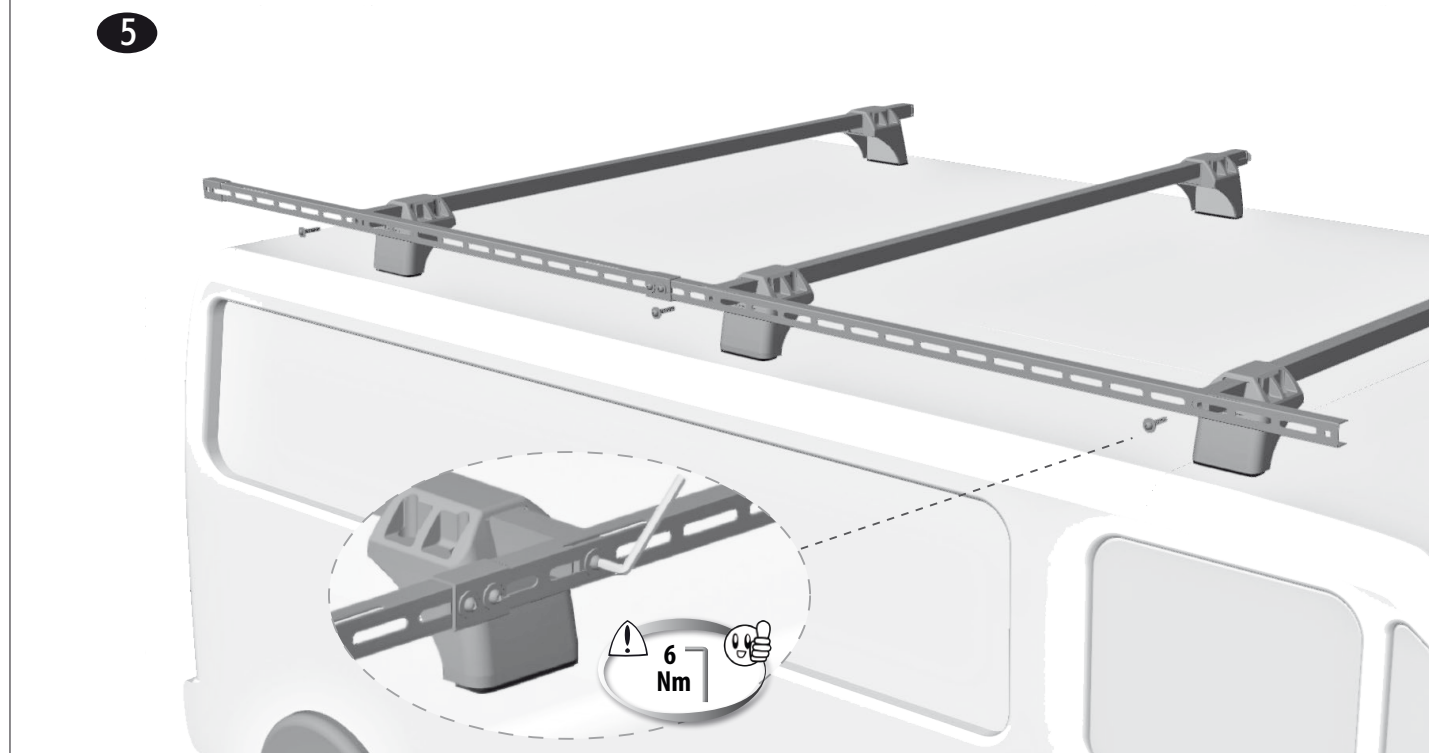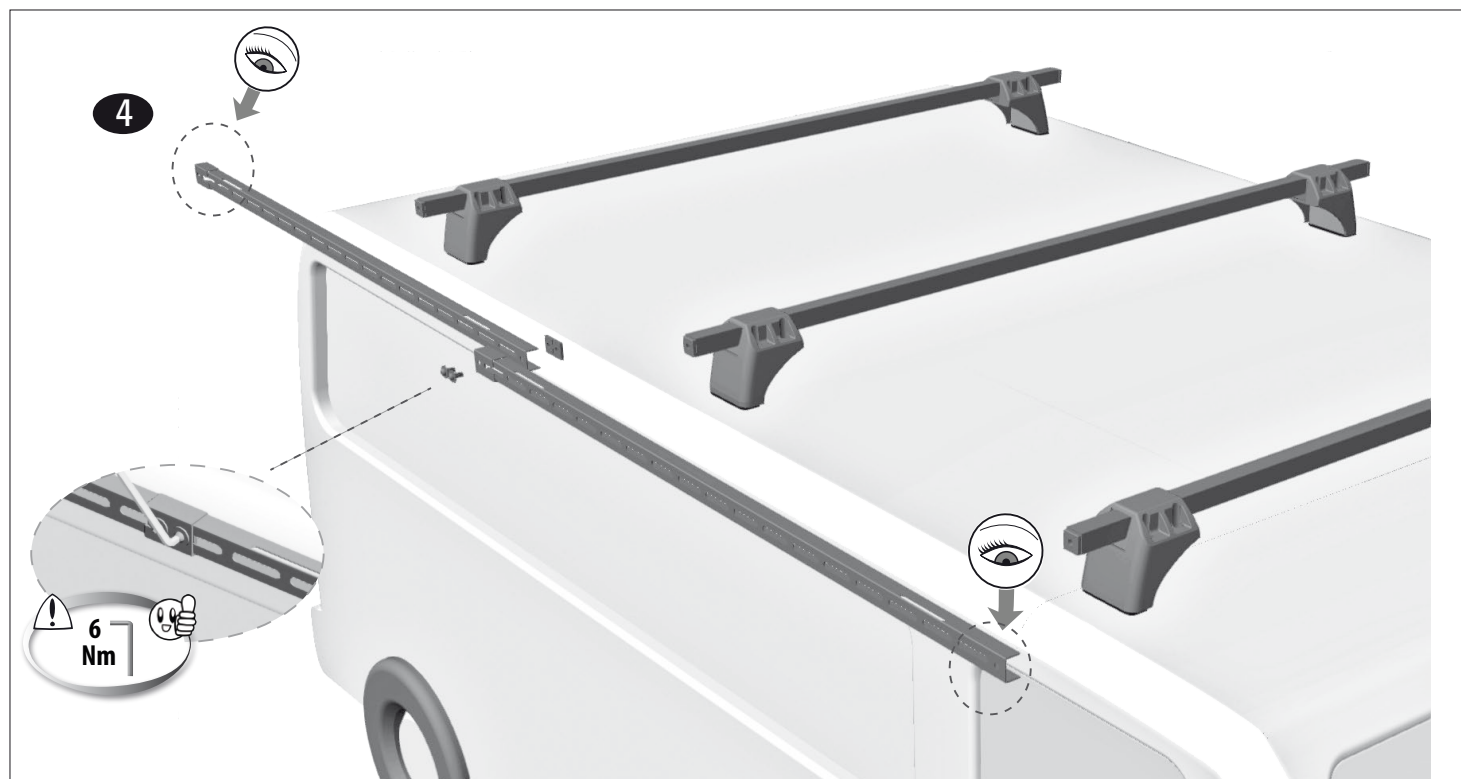







8

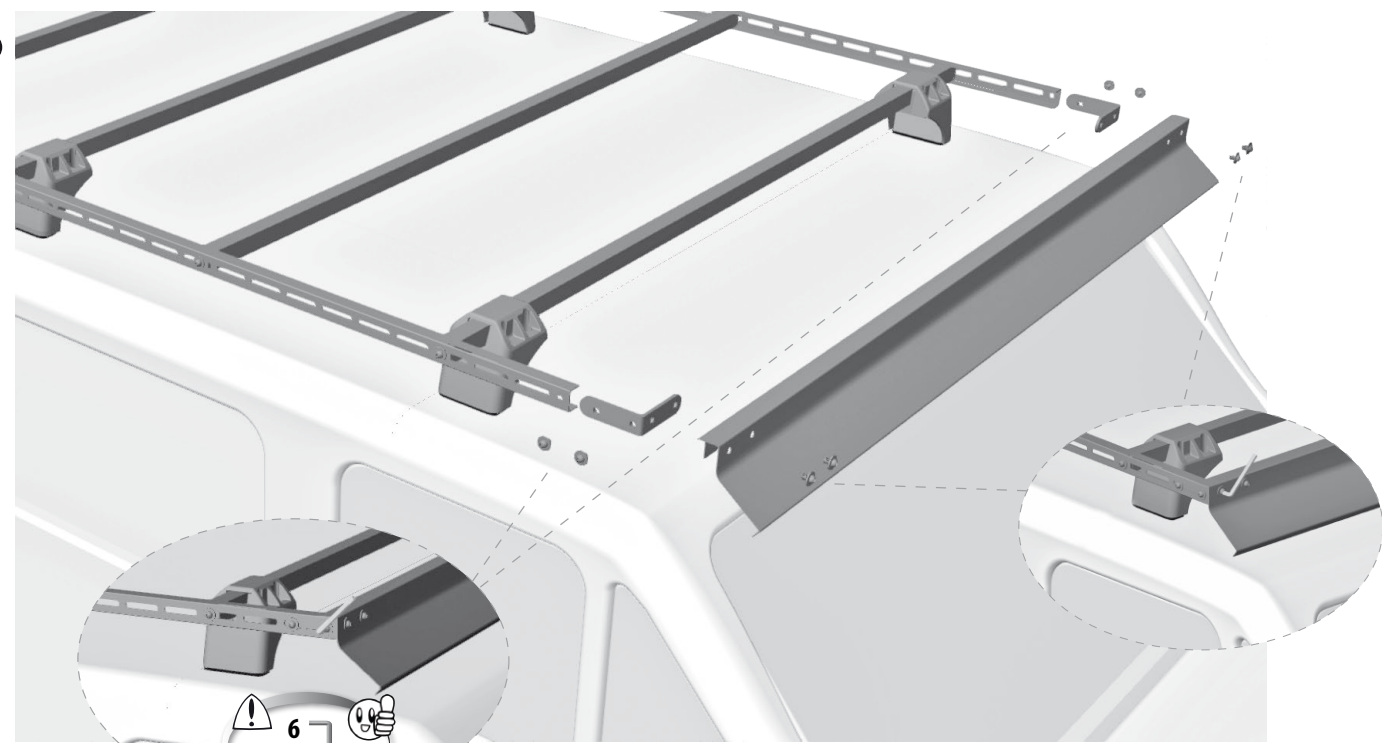



9

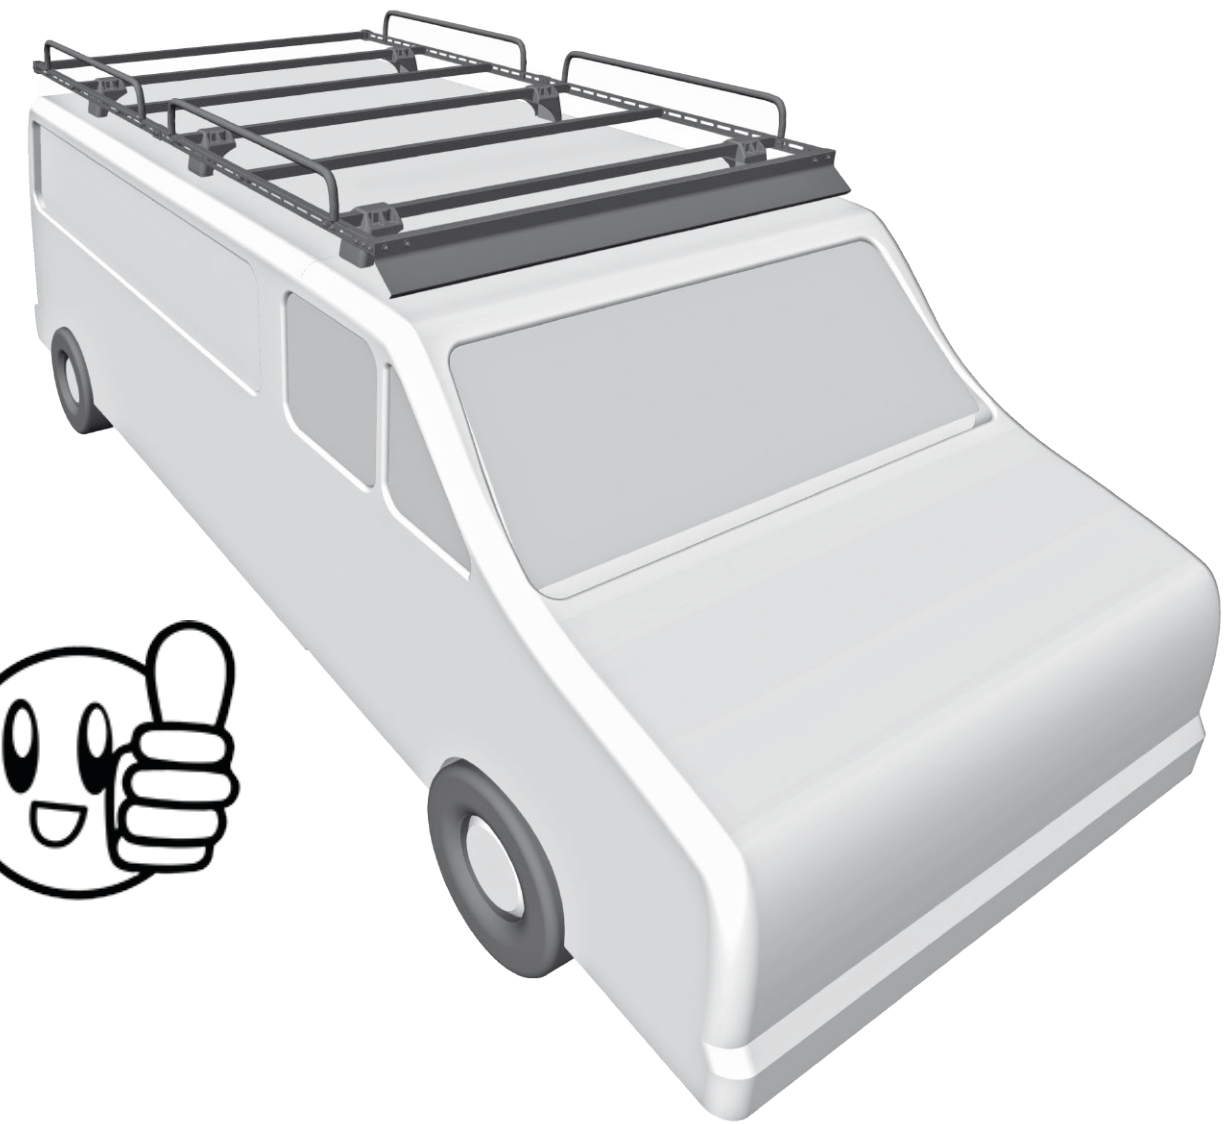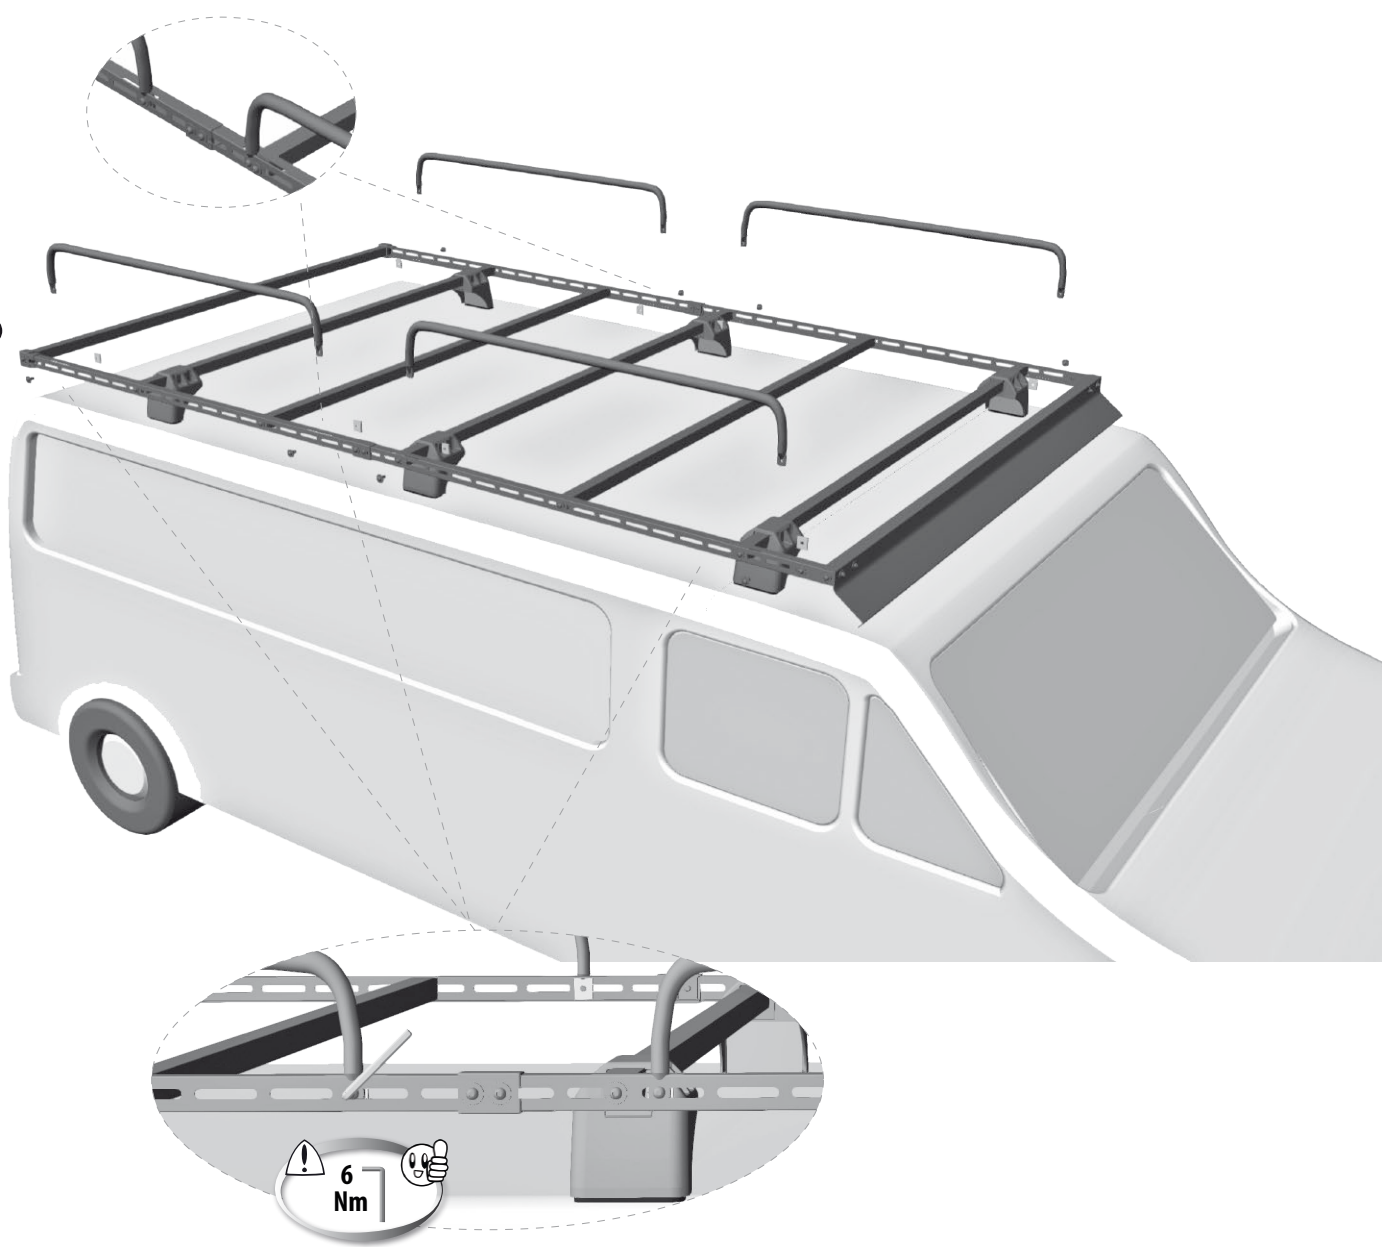

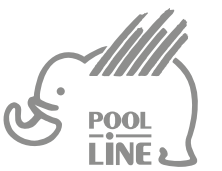

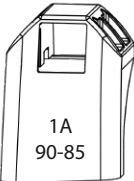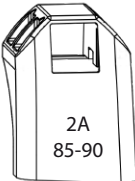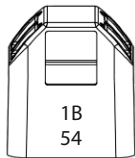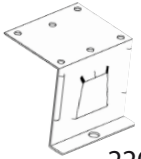N			Q			Q
1			2+2			2
2			2+2			2
3						6
4						1

N	BO0061	Q
8	 DIN912 M6x20	24
9	 DIN125	24

N	BO0010 x 3	Q
10	 ISO 7380 M8x20	6
11	 Din125 Ø8	6

- E

Instrucciones de montaje

Kit de fijación
- C

Instruccions de muntatge

Kit de fixació
- GB

Assembly instrucctions

Fixation Kit
- F

Instruction de montage

Kit fixation
- D

Montageanleitung

Stützfuß-Kit
- PT

Instruções de montagem

Kit fixação
- I

Istruzioni di montaggio

Kit di fissaggio
- PL

Instrukcja montażu

Element mocujący
- CZ

Montážní návod

Fixační kit
- HU

Szerelési Utasítás

Rögzítő készlet
- RO

Instrucțiuni de montaj


Kit de fixare
- HR

Detaljne upute

Kit za montažu
- TU

Öncelikli montaj

Montaj kiti

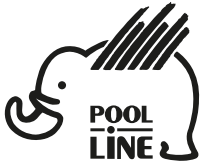

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN:

E9

26R-03.1043







RECYCLABLE

121084

Rv: 04/2024



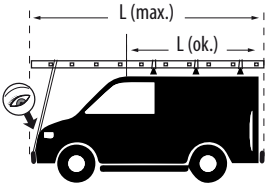


					P1	P2		P3	P4		P5	P6
RENAULT EXPRESS II	L1	H1	2021->	B00010	221+1A	222+2A		220+1B	220+1B		222+2A	221+1A



P1	P2		P3	P4		P5	P6
221-1A	222-2A		220-1B	220-1B		222-2A	221-1A
221-1A	222-2A		220-1B	220-1B		222-2A	221-1A
221-1A	222-2A		220-1B	220-1B		222-2A	221-1A

Pag. 1

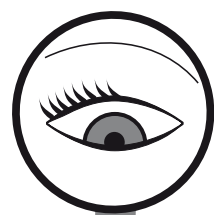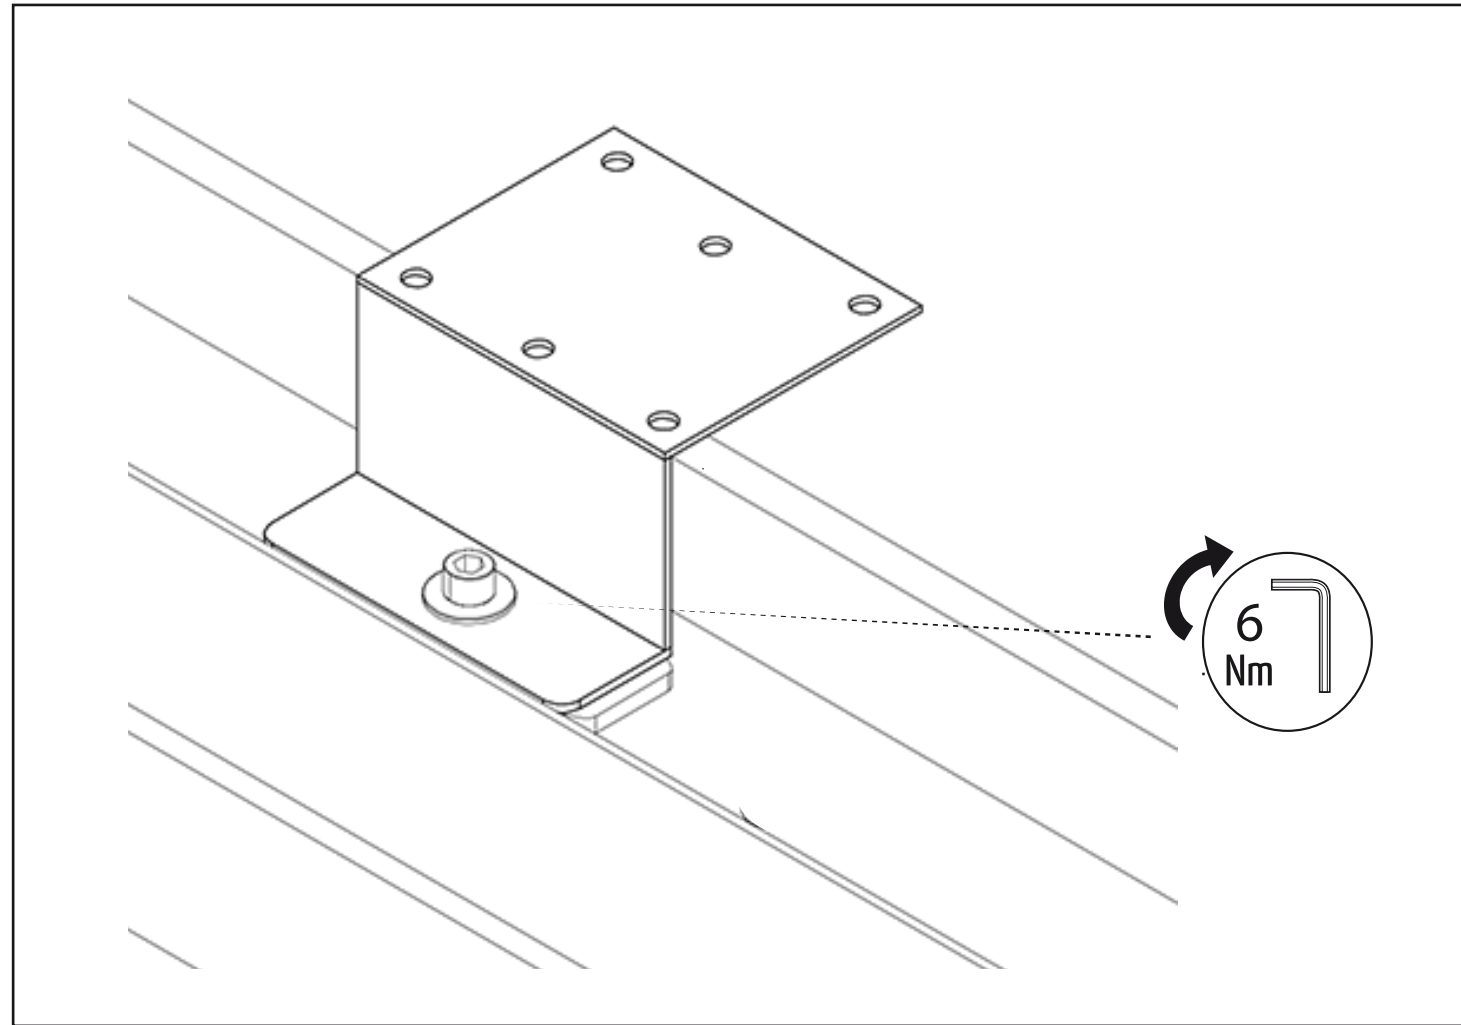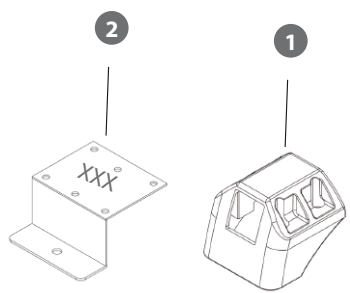

←→	10	P1	P2
OX	B000010		
OX-	B000010		

Pag. 1

