


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

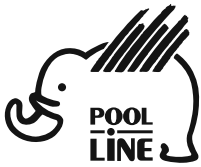

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net




200 KG.
MAX.

Nº HOMOLOGACIÓN: **E9**I26R-03.1042




123111


Rv: 01/2020

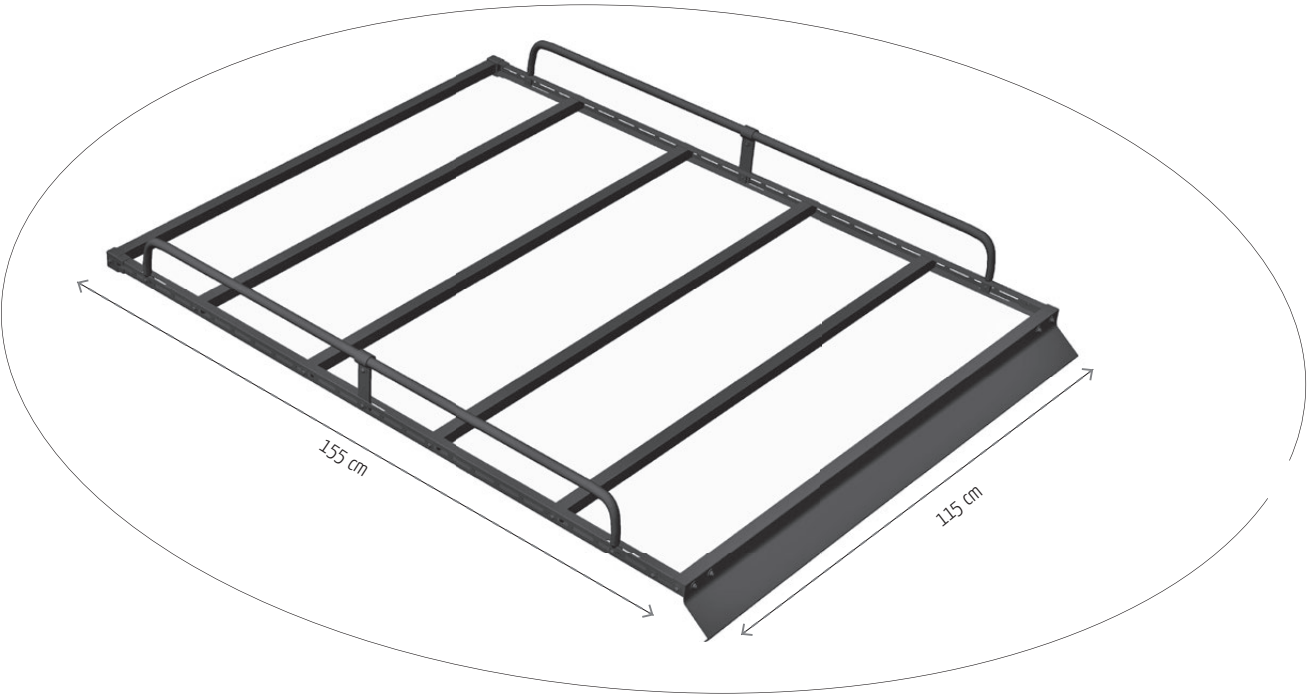


Limpieza pre-instalación
Pre-installation cleaning

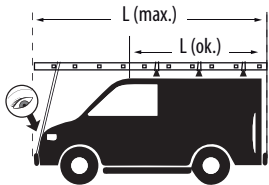


Revisar par de apriete
Check torque

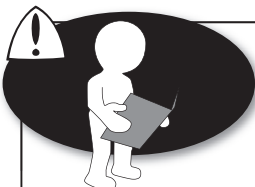


1

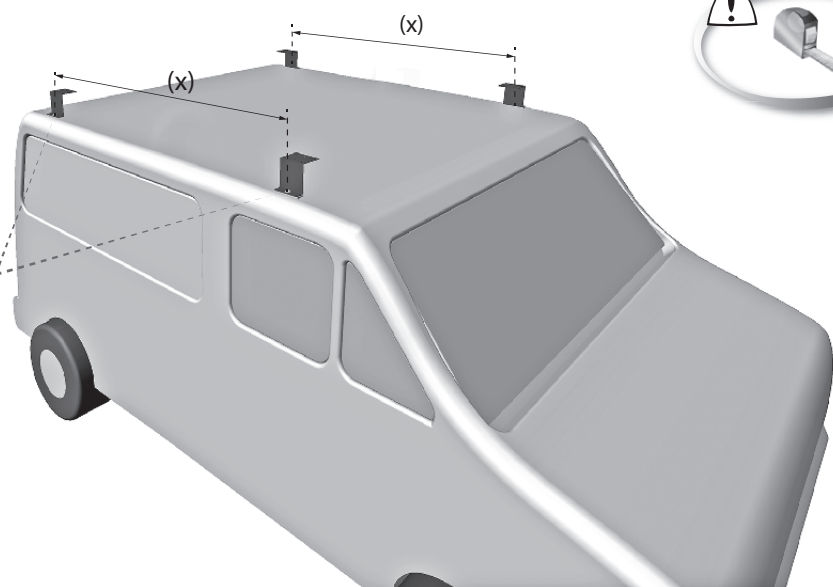


2

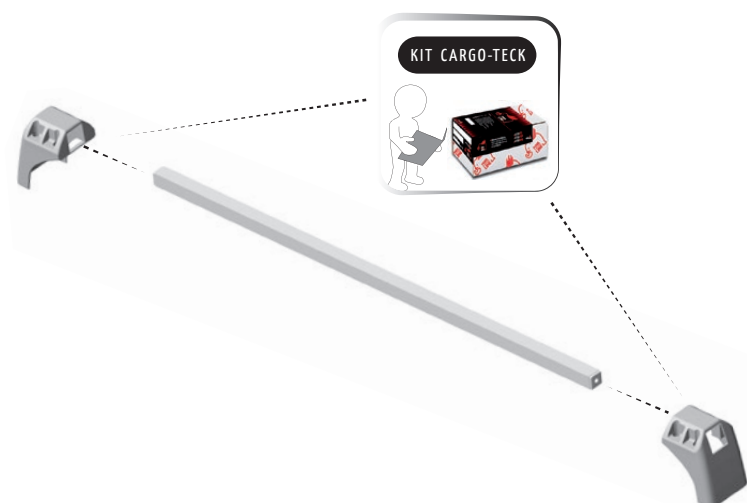


3

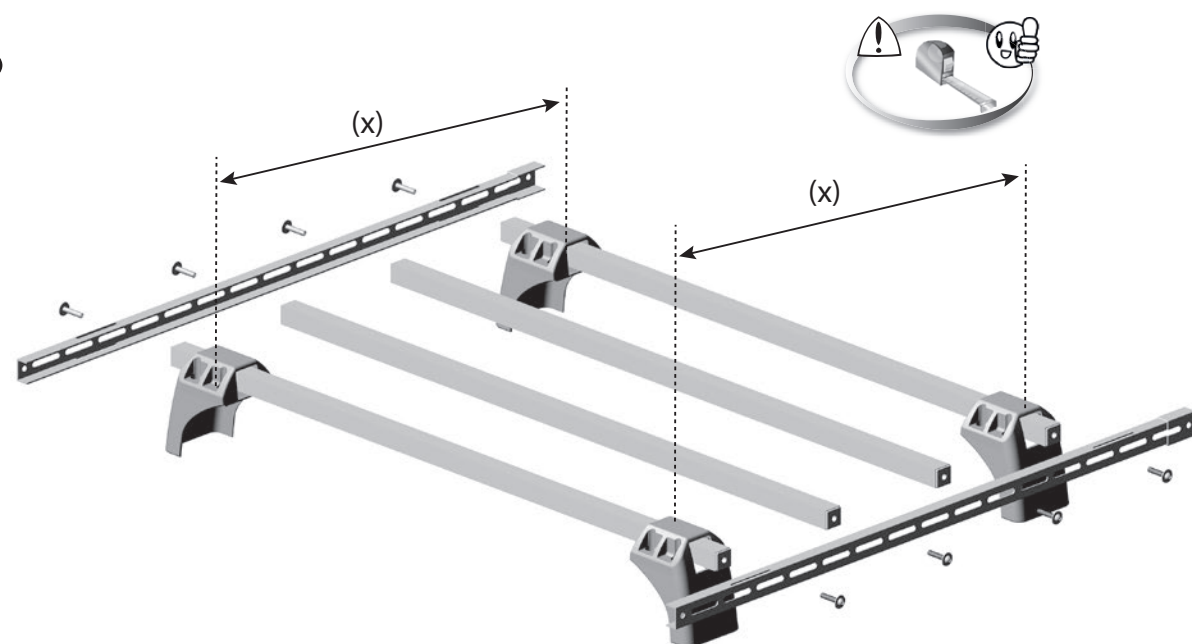


4

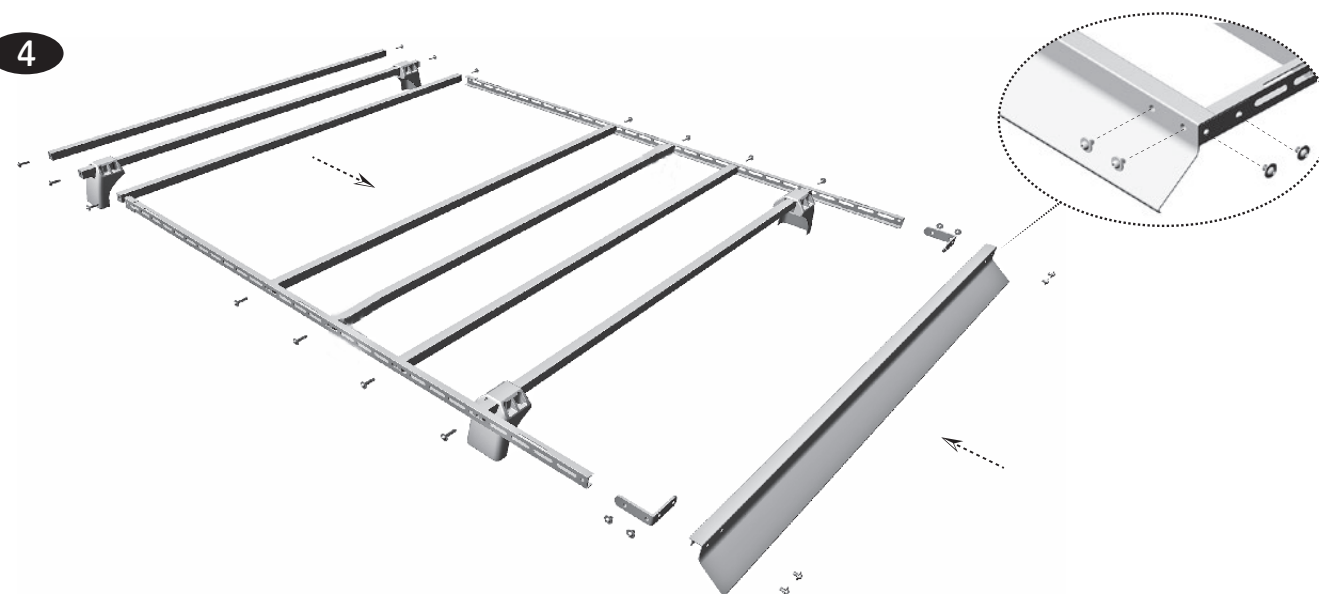


5

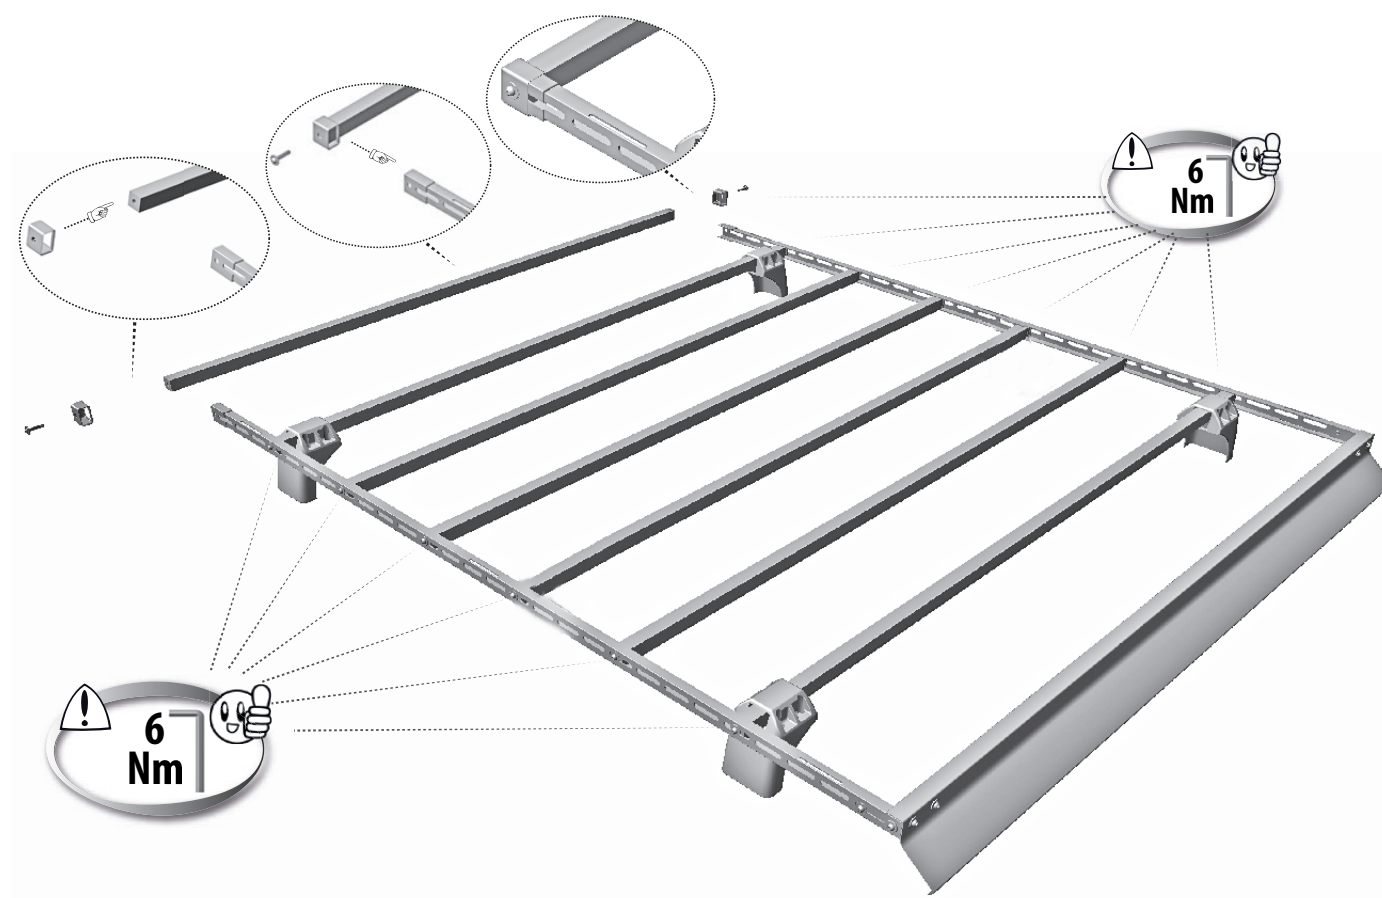


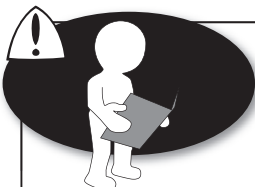


8

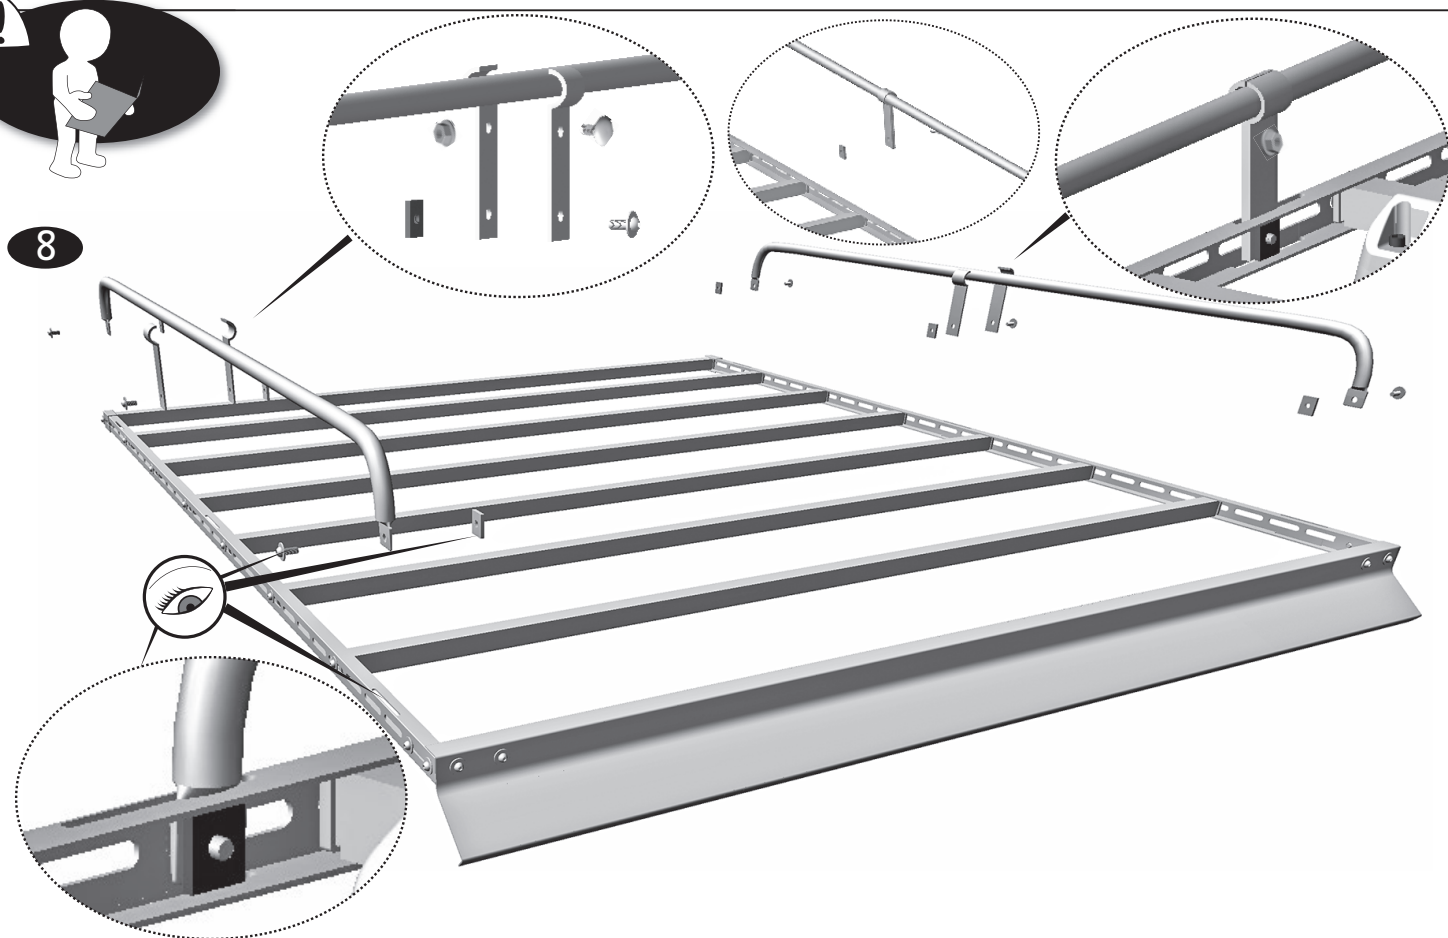


9

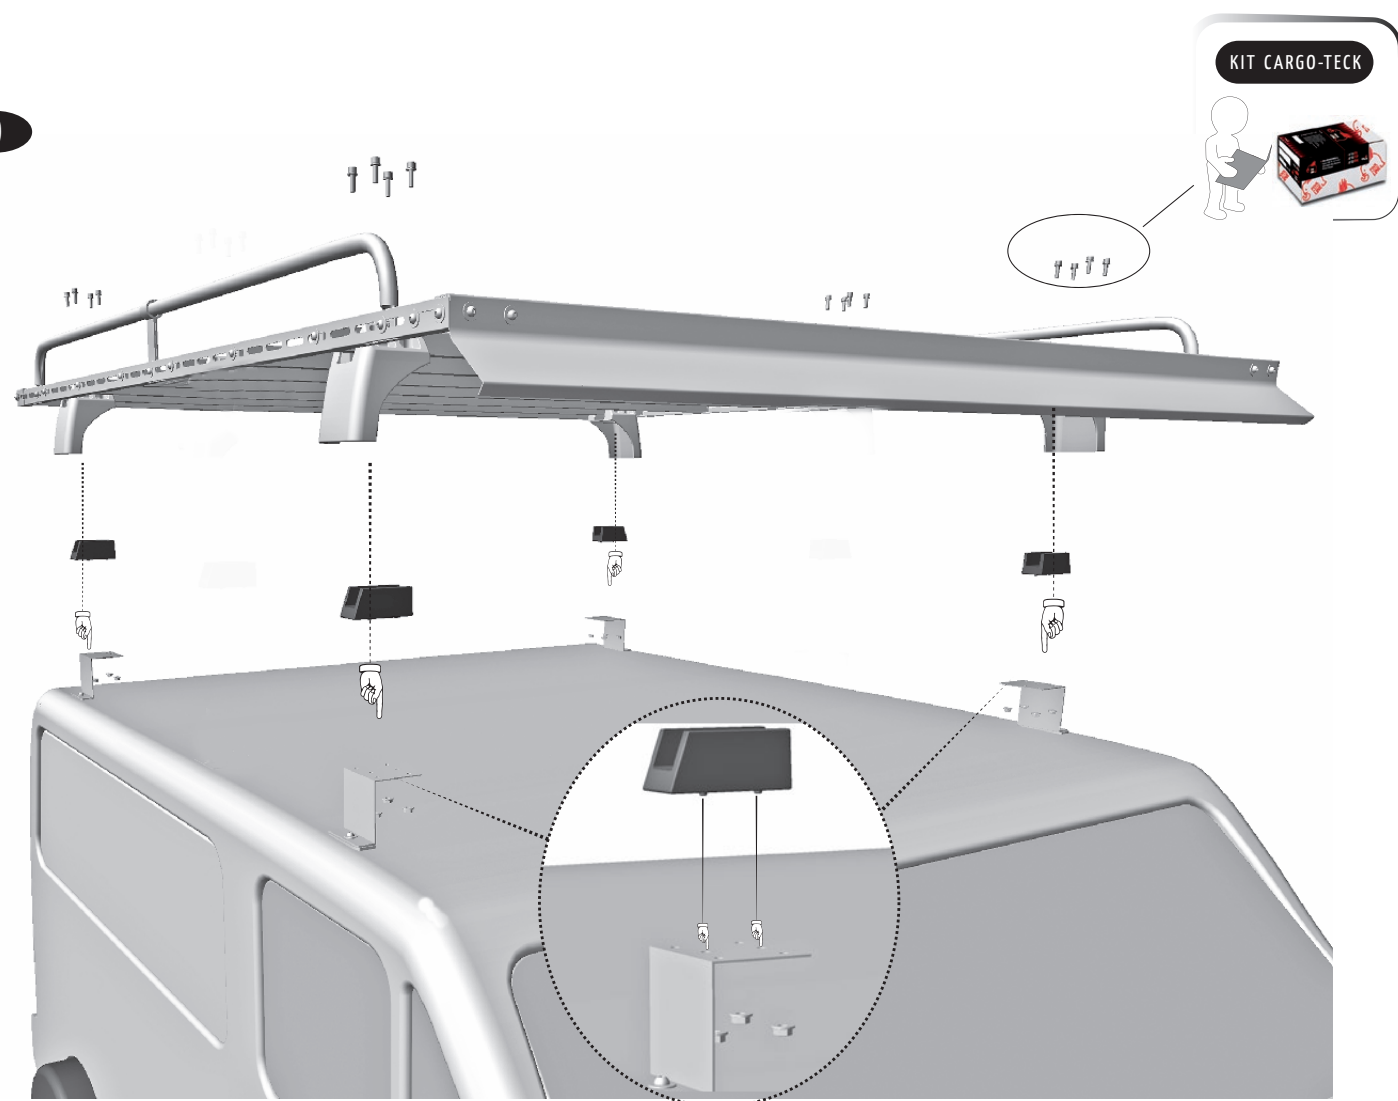


10

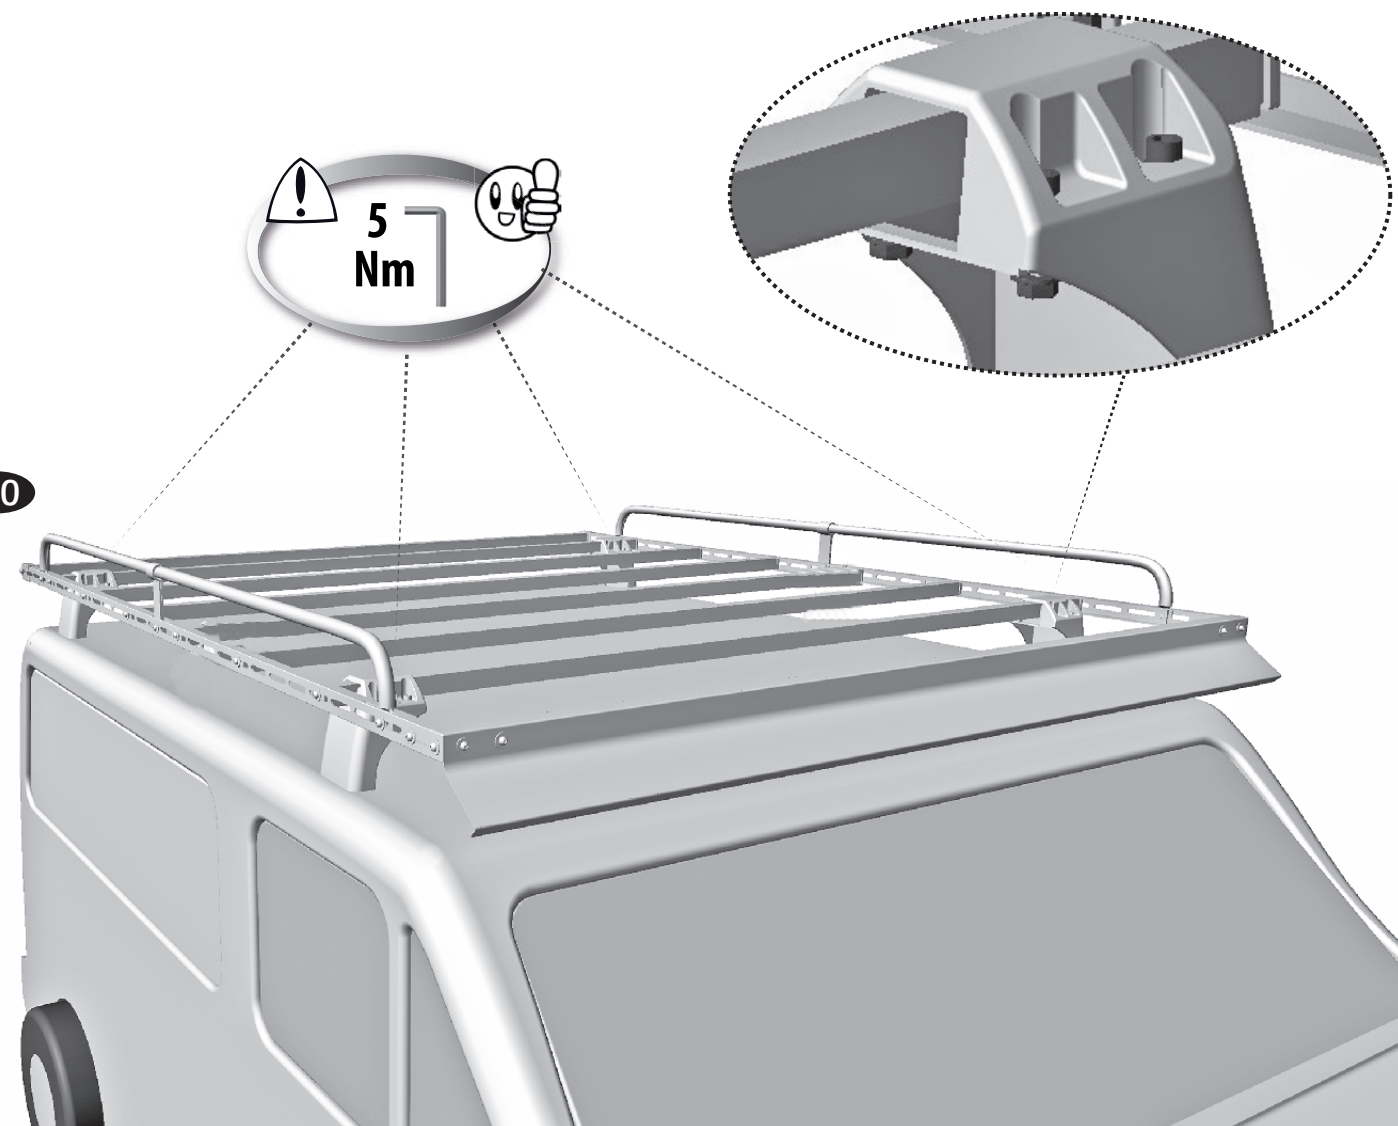

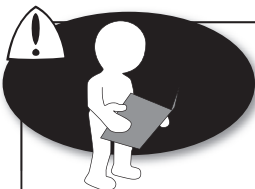



NISSAN KUBISTAR / RENAULT KANGOO I (97-09)




Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone

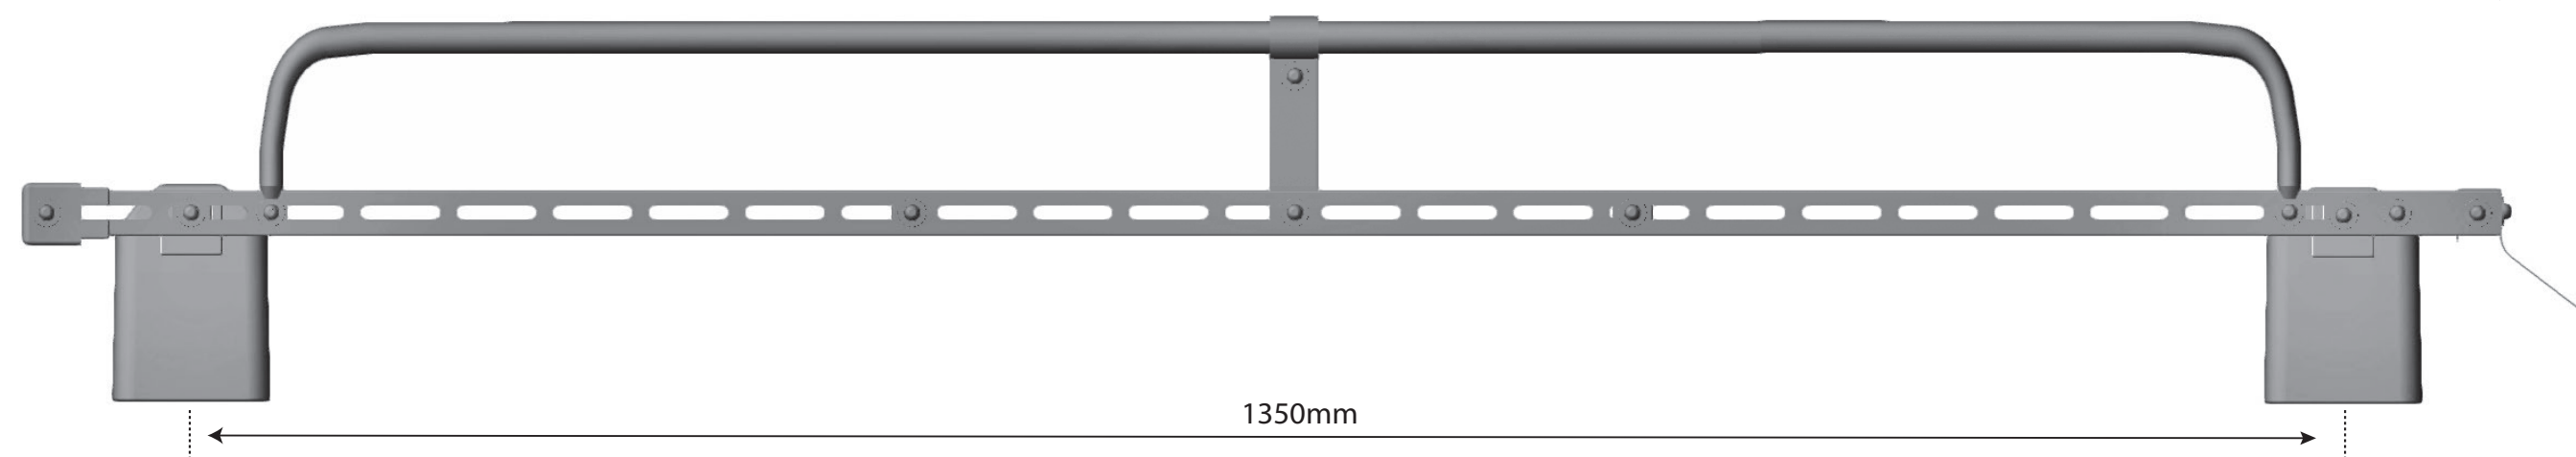

SEAT INCA / VOLKSWAGEN CADDY II (95-04)

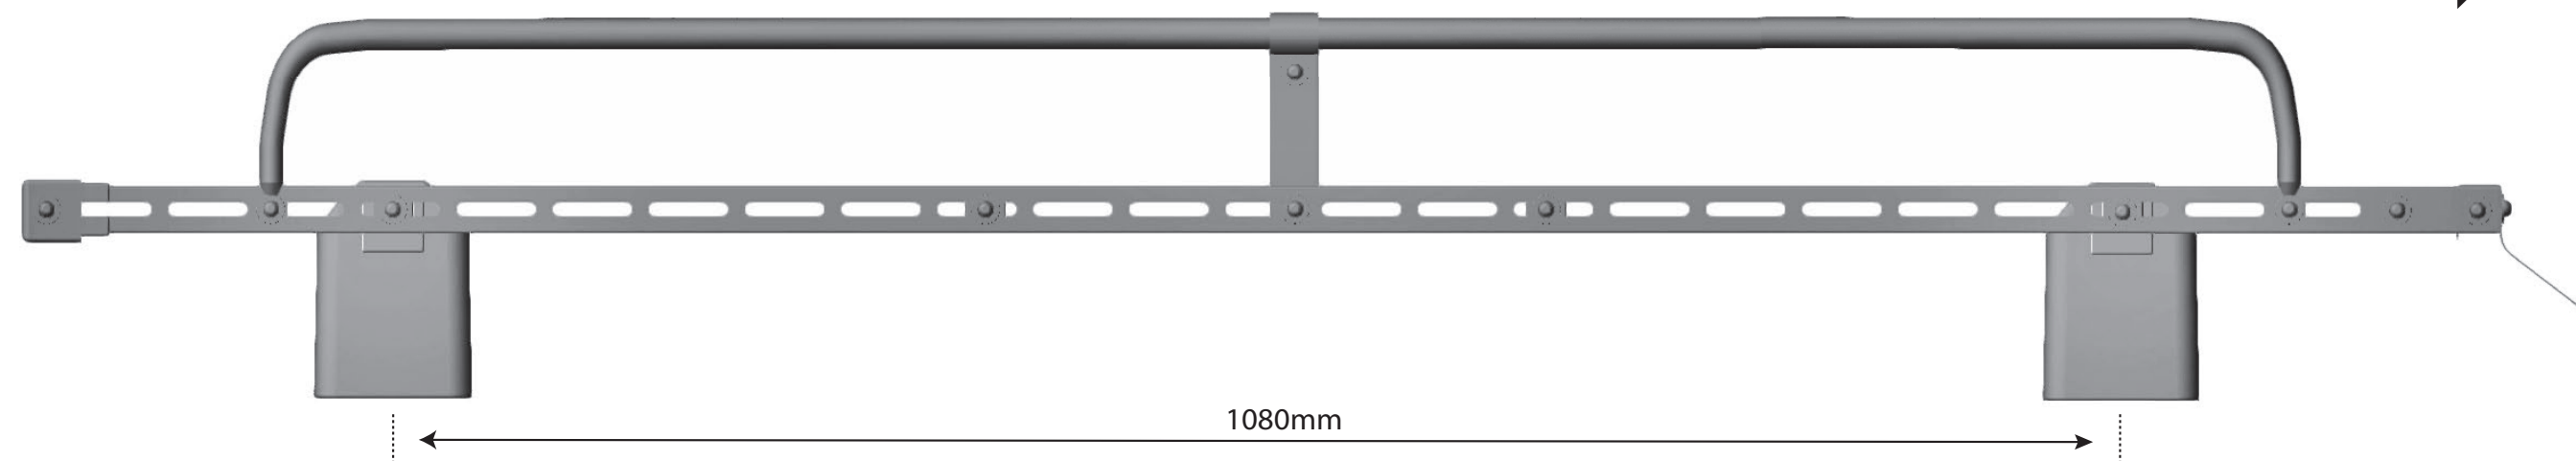


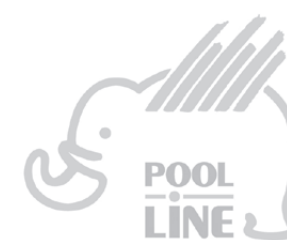

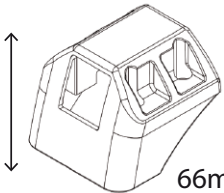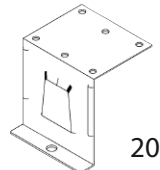N		Q
1	 66mm	4
2	 202	4
3		4
4		1
5		1


N	BO0060	Q
8	 DIN912 M6x20	16
9	 DIN125	16
N	BO0036	Q
10	 ISO7380 M8X16	4
N	BO0032	Q
11	 DIN125 Ø8	4
N	BO0033	Q
12	 DIN985 M8	4

E	Instrucciones de montaje	Kit de fijación
C	Instruccions de muntatge	Kit de fixació
GB	Assembly instrucctions	Fixation Kit
F	Instruction de montage	Kit fixation
D	Montageanleitung	Stützfuß-Kit
PT	Instruções de montagem	Kit fixação
I	Istruzioni di montaggio	Kit di fissaggio
PL	Instrukcja montażu	Element mocujący
CZ	Montážní návod	Fixační kit
HU	Szerelési Utasítás	Rögzítő készlet
RO	Instrucțiuni de montaj	Kit de fixare
HR	Detaljne upute	Kit za montažu
TU	Öncelikle montaj	Montaj kiti

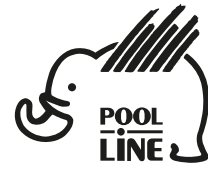

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net


Nº HOMOLOGACIÓN: **E9** 26R-03.1043

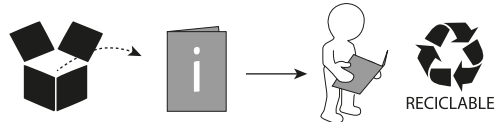



121500

Rv: 10/2024

K Techo completo

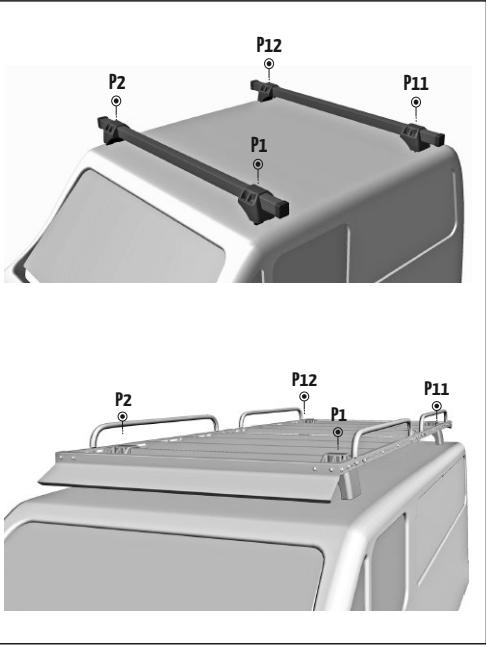

X Trampilla techo

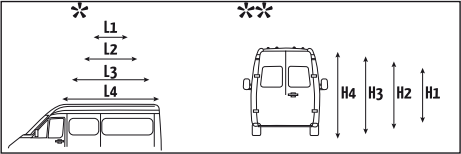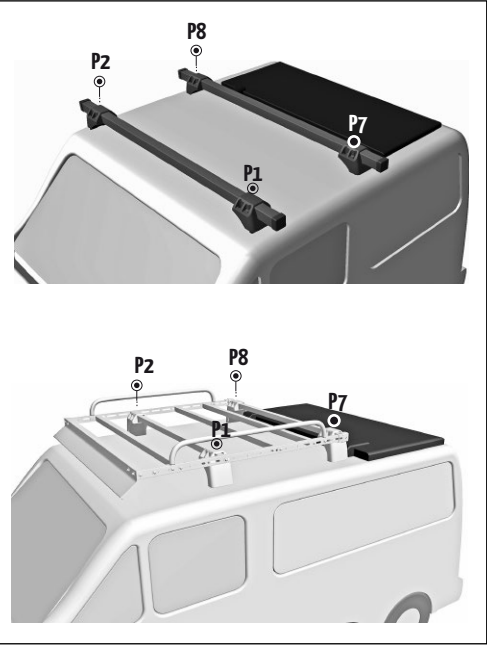

	L*	H**		10	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
NISSAN																
Kubistar	L1	H1	97-09	B00032+B00036	202	202									202	202
Kubistar	L2	H1	97-09	B00032+B00036	202	202									202	202
Kubistar (con trampilla)	L1	H1	97-09	B00032+B00036	202	202					202	202				
RENAULT																
Express			91-00	B00032+B00033+B00036	202	202									202	202
Kangoo I	L1	H1	97-08	B00032+B00036	202	202									202	202
Kangoo I	L2	H1	97-08	B00032+B00036	202	202									202	202
Kangoo I (con trampilla)	L1	H1	97-08	B00032+B00036	202	202					202	202				

