

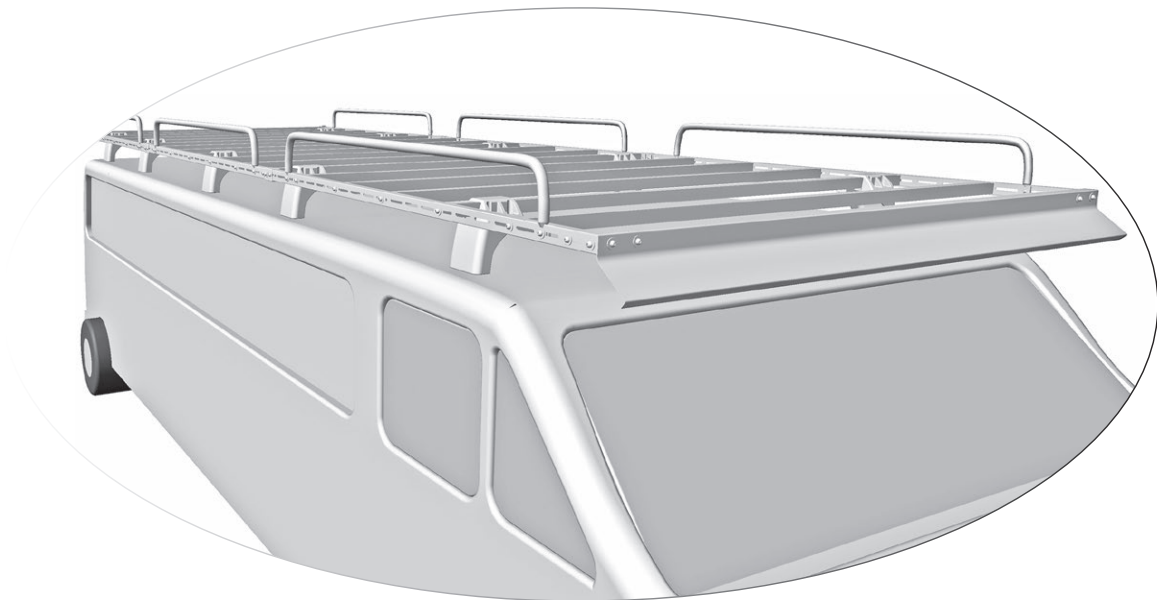


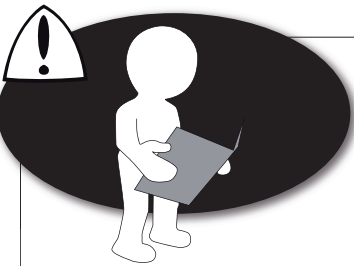


- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikli montaj

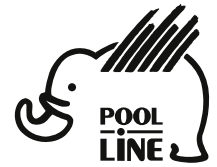



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net








Nº HOMOLOGACIÓN: **E9** 26R-03.1042



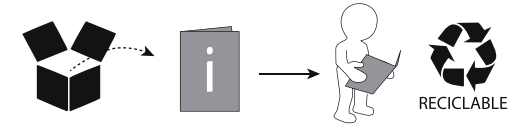


123917

Rv: 11/2023

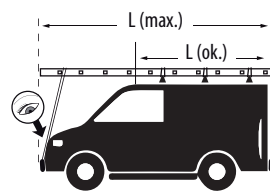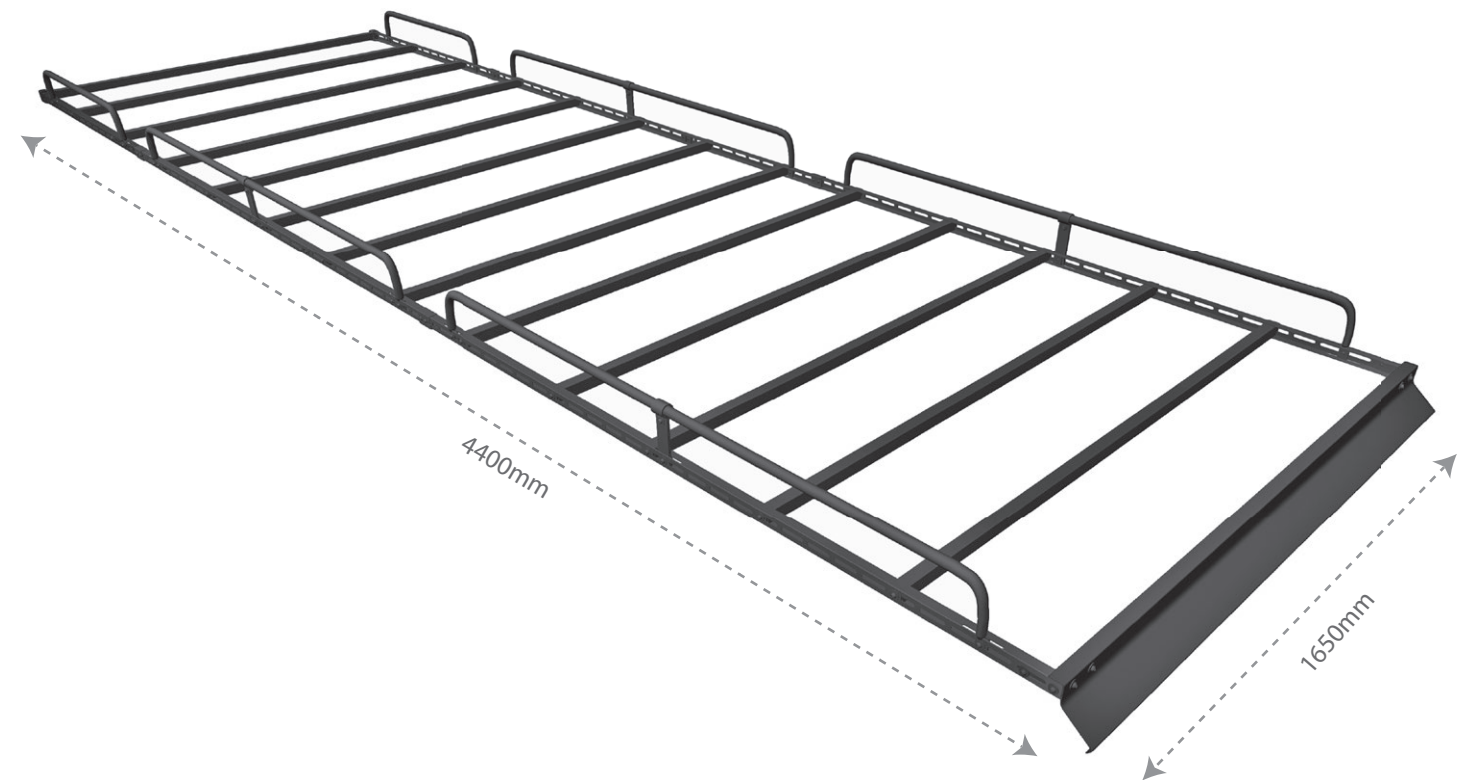


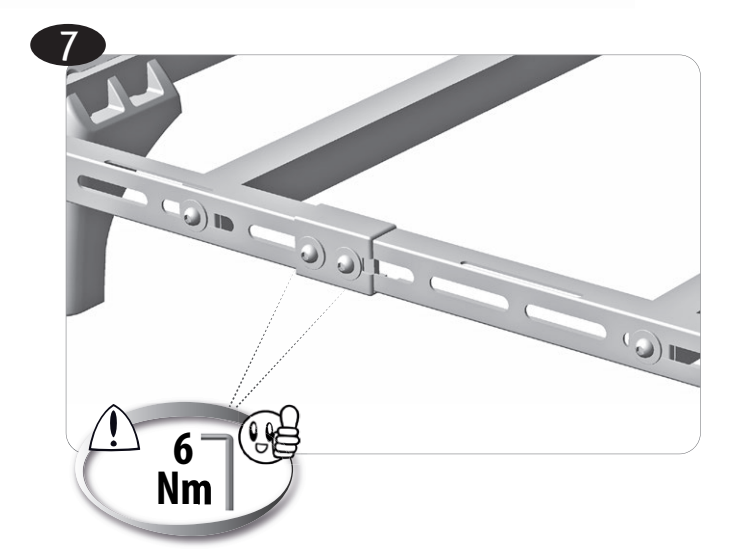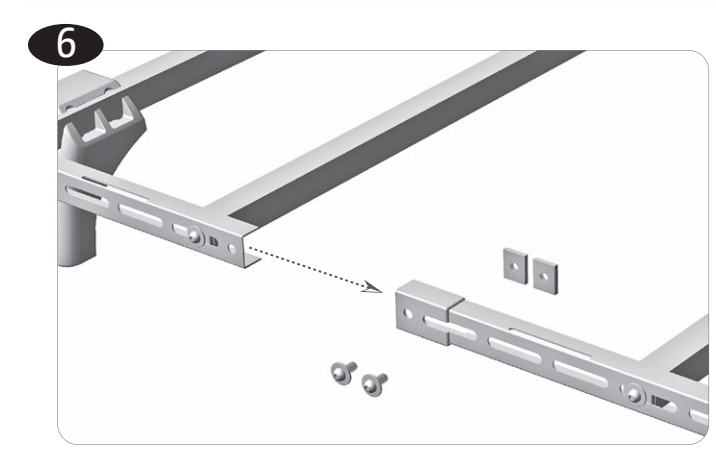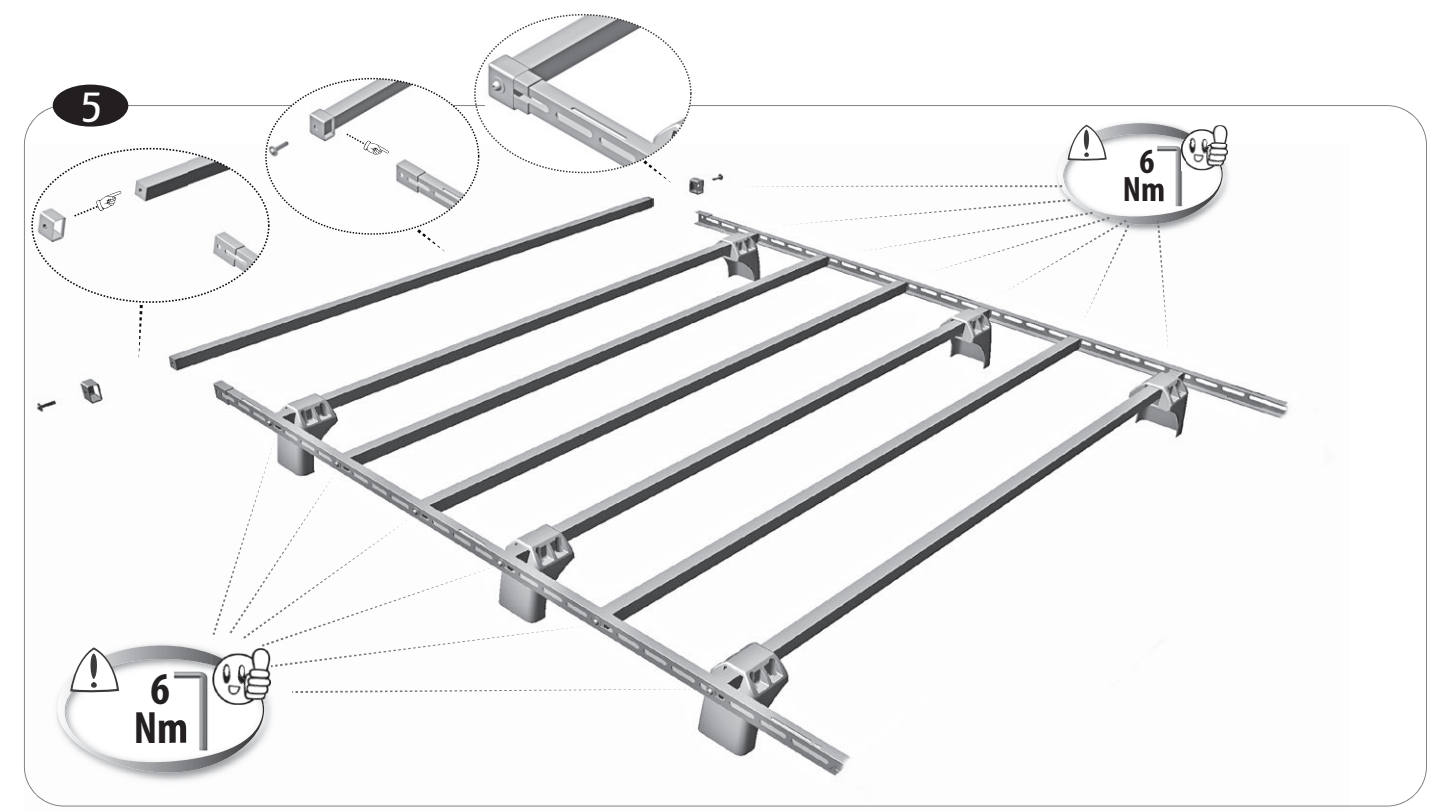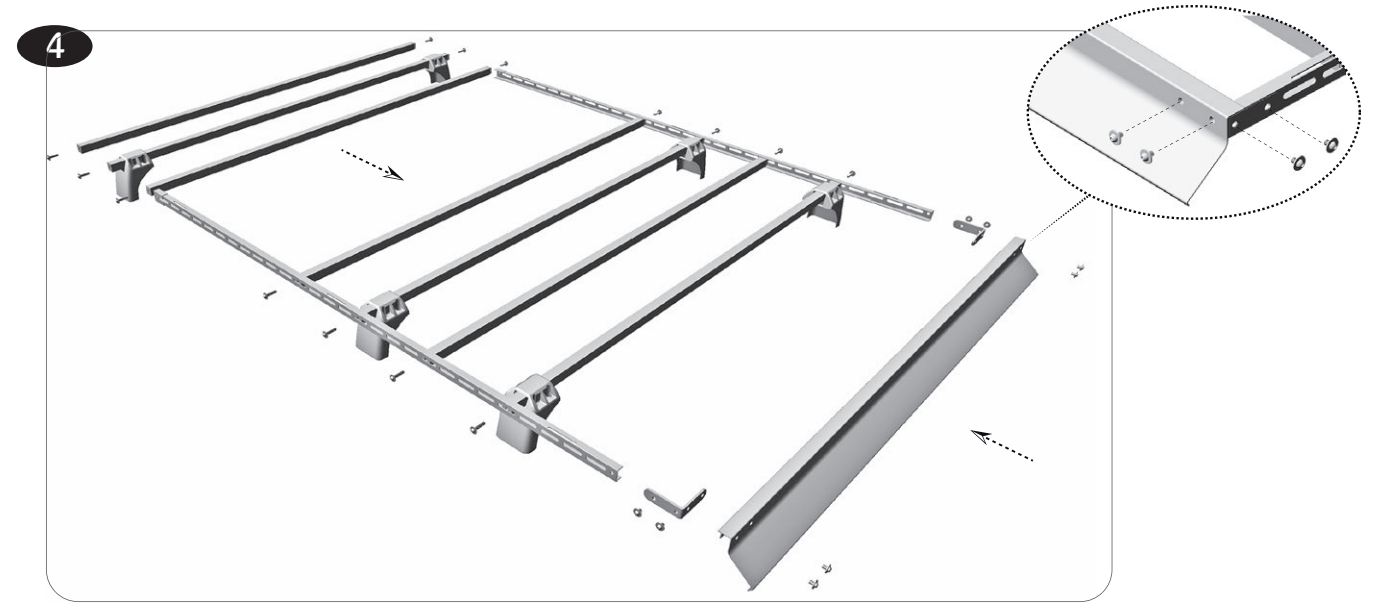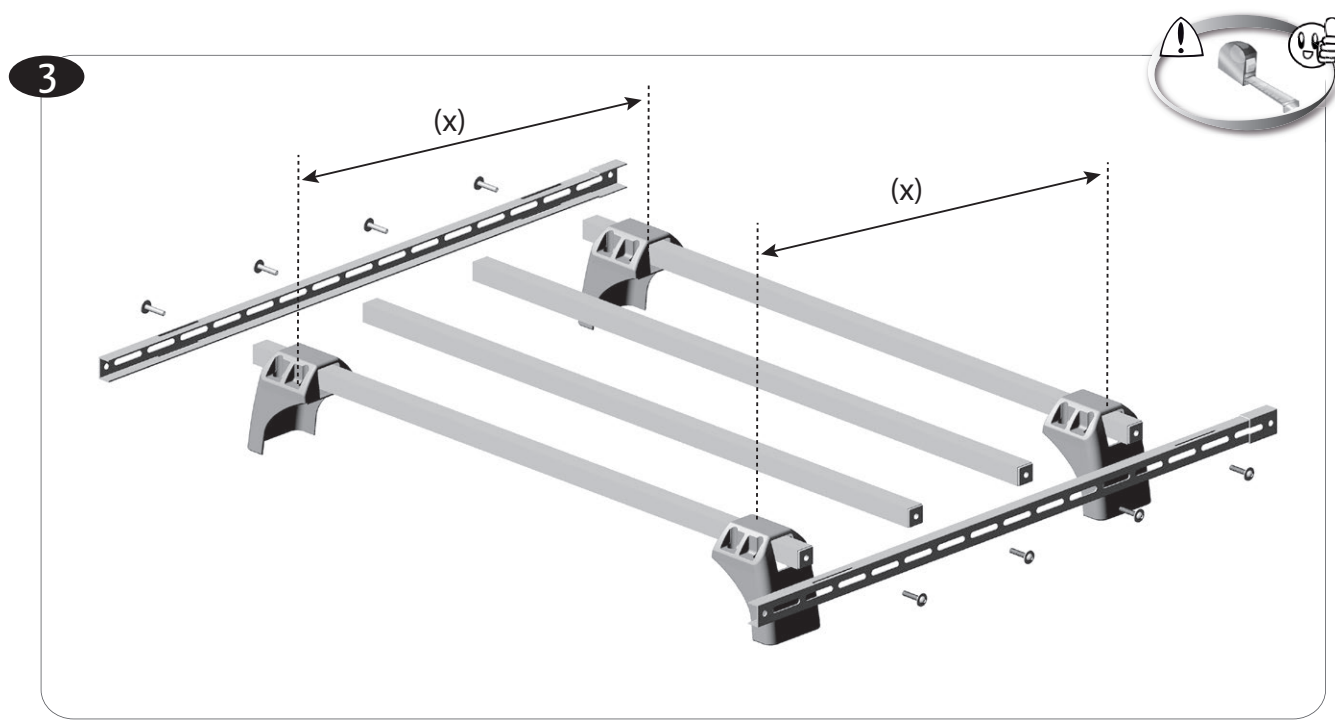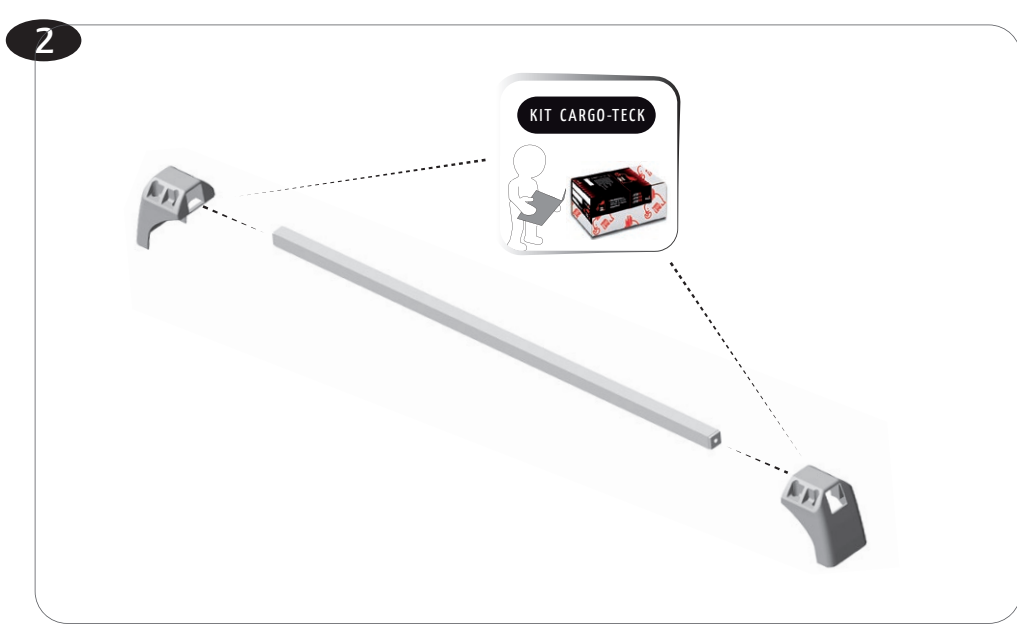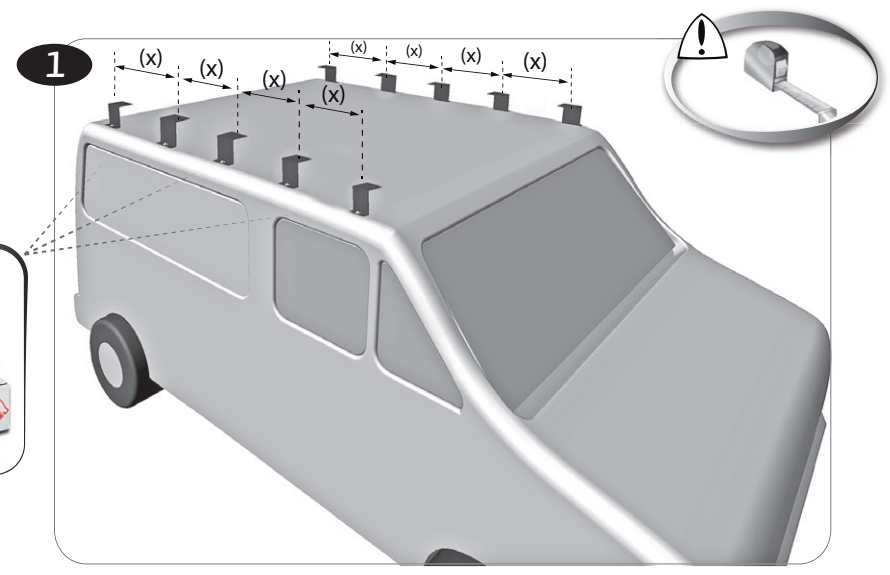

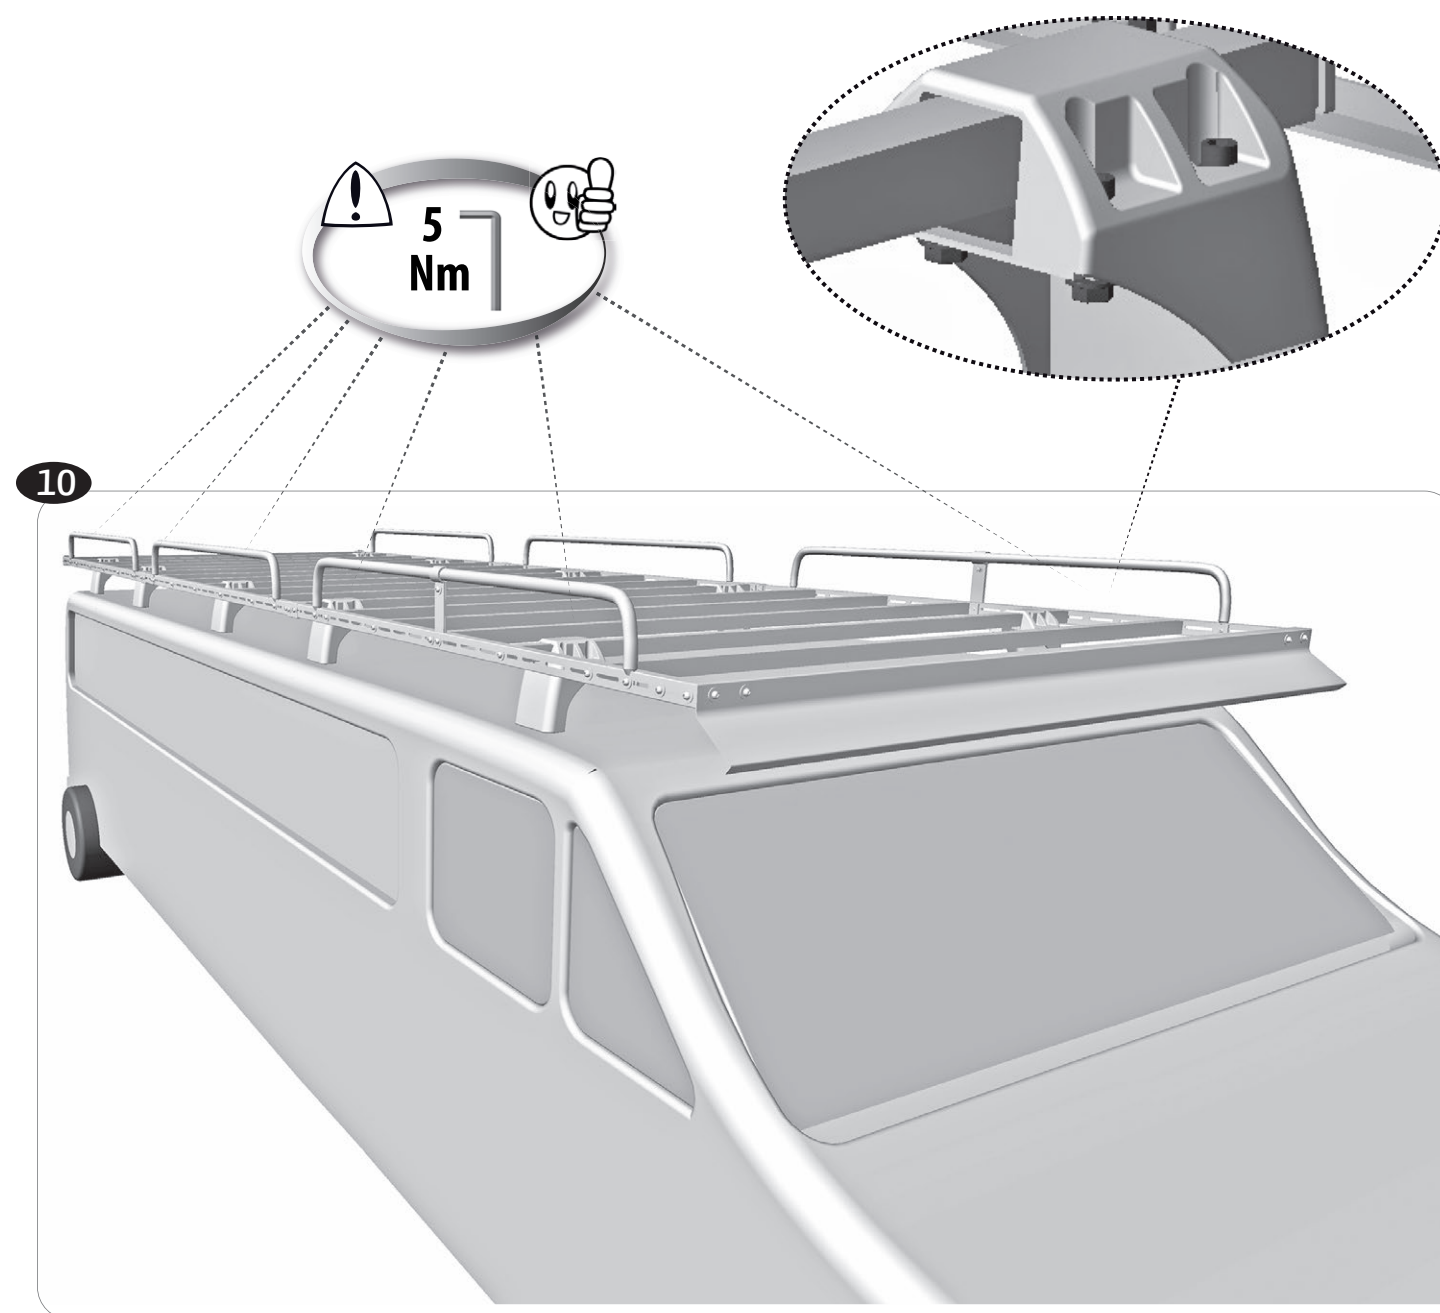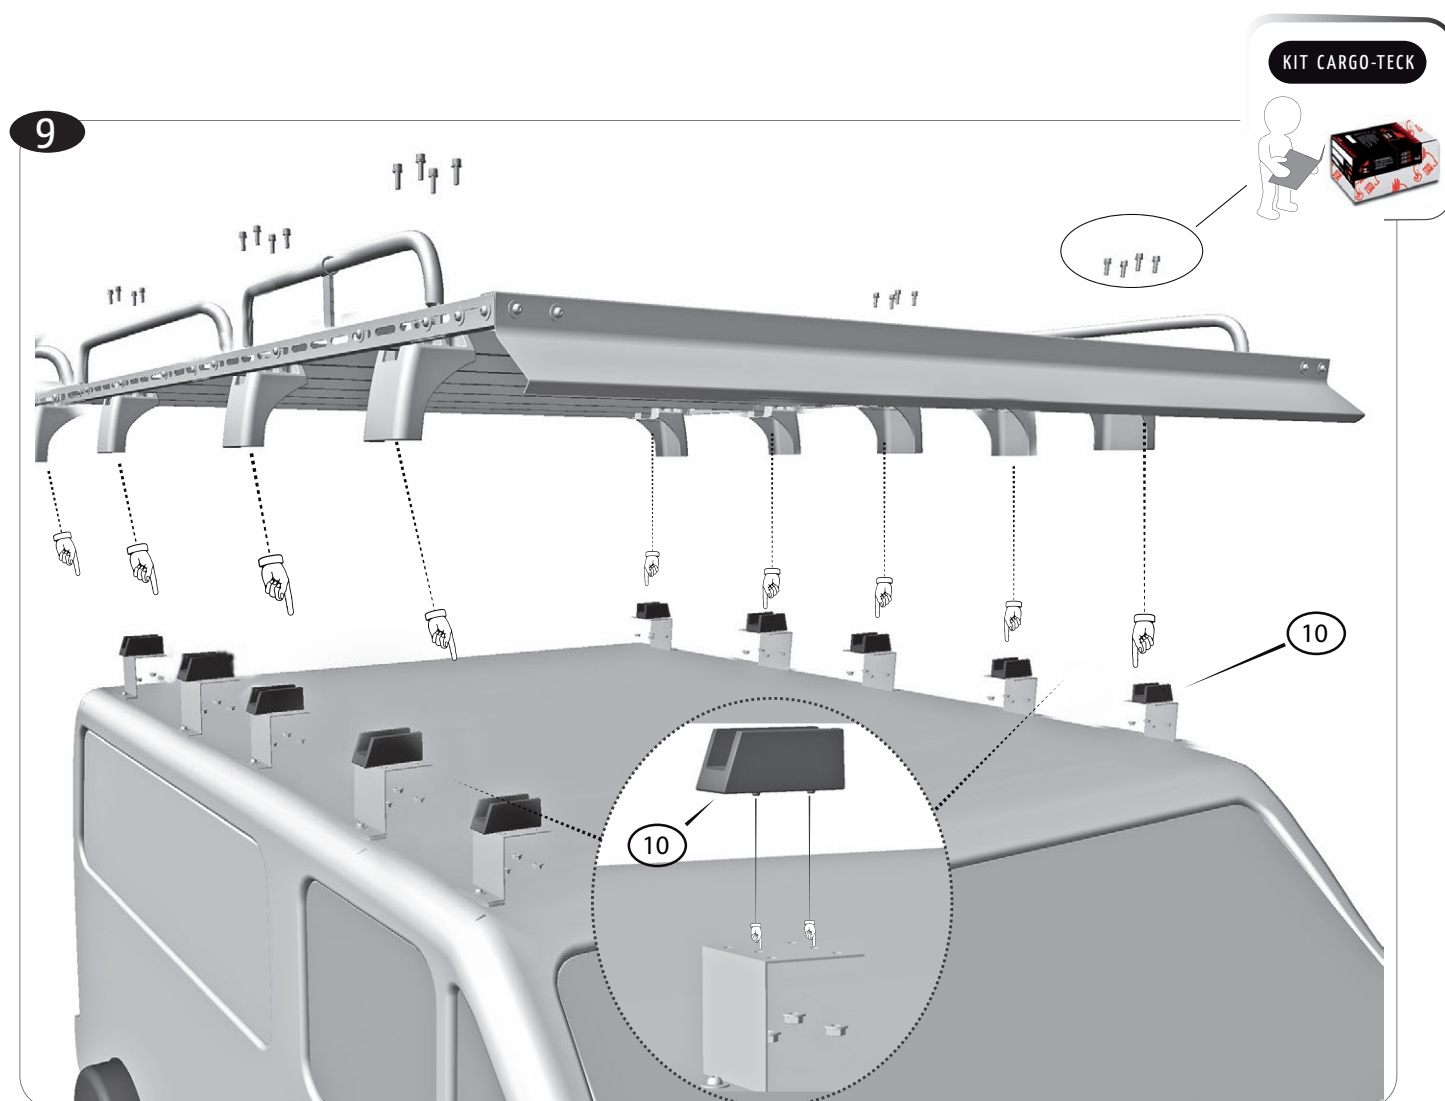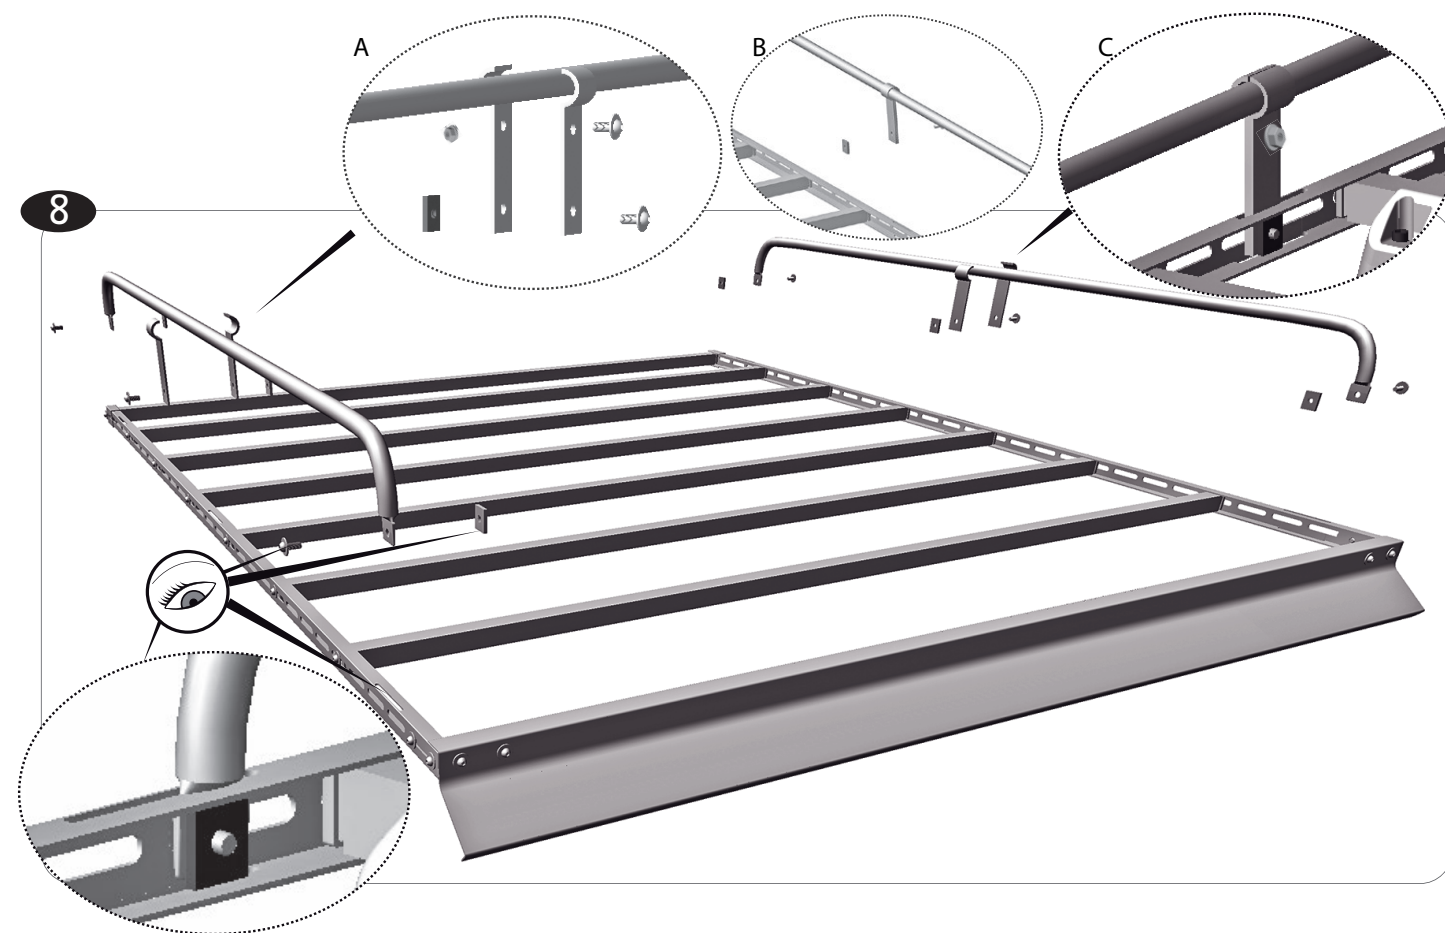


- MAN TGE L4 - H3 (2017->)
- VW. CRAFTER L4 - H3 (2017->)


Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone


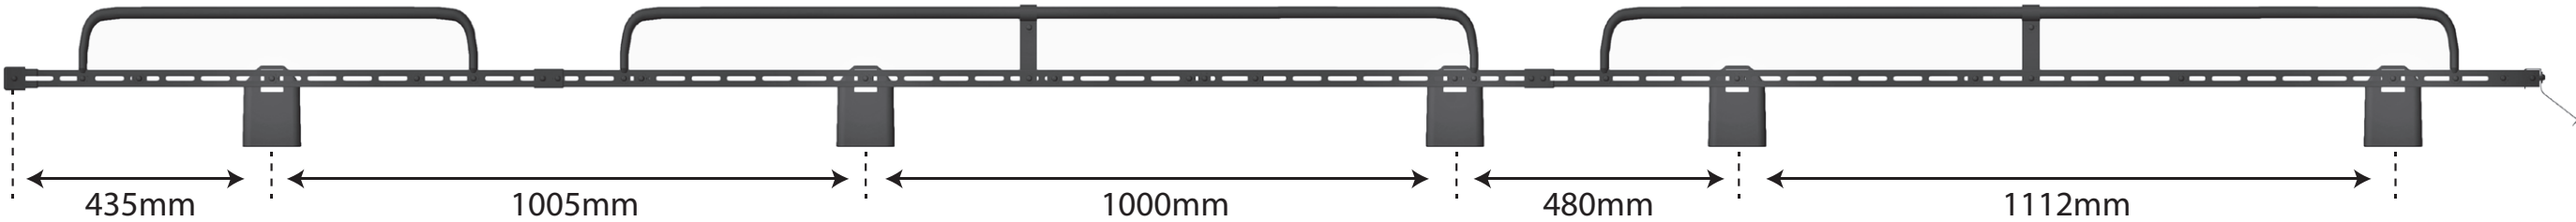


- NISSAN NV400 L4 - H2 (2010->)
- OPEL MOVANO B L4 - H2 (2010->)
- RENAULT MASTER III L4 - H2 (2010->)


Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone

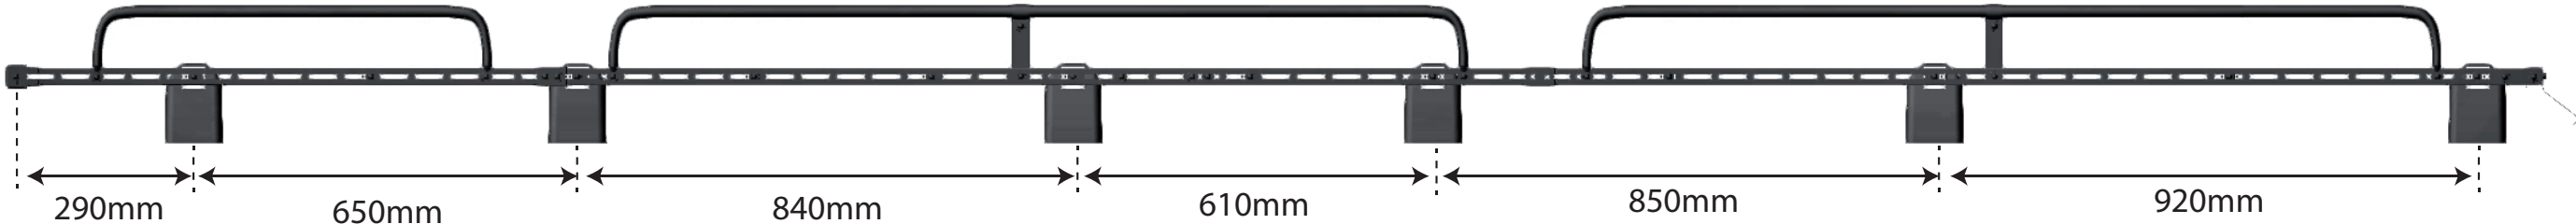

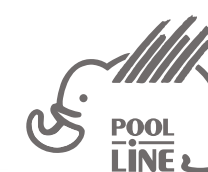

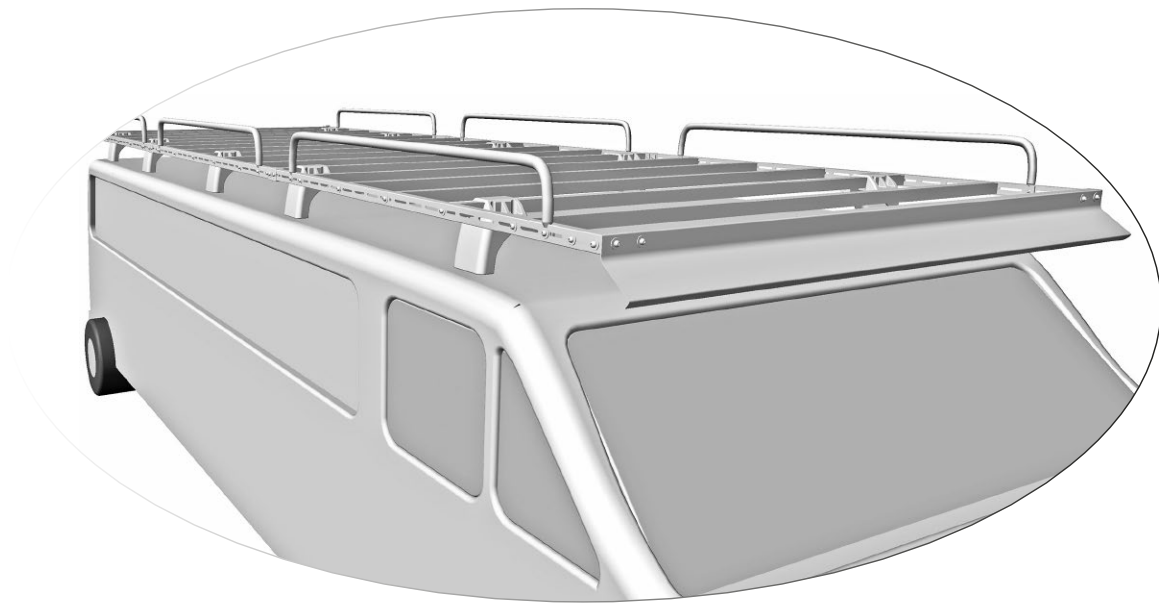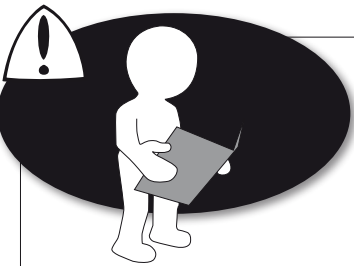


E	Instrucciones de montaje	Kit de fijación
C	Instruccions de muntatge	Kit de fixació
GB	Assembly instructions	Fixation Kit
F	Instruction de montage	Kit fixation
D	Montageanleitung	Stützfuß-Kit
PT	Instruções de montagem	Kit fixação
I	Istruzioni di montaggio	Kit di fissaggio
PL	Instrukcja montażu	Element mocujący
CZ	Montážní návod	Fixační kit
HU	Szerelési Utasítás	Rögzítő készlet
RO	Instrucțiuni de montaj	Kit de fixare
HR	Detaljne upute	Kit za montažu
TU	Öncelikli montaj	Montaj kiti

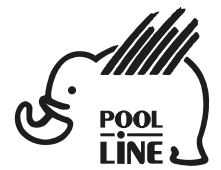

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042

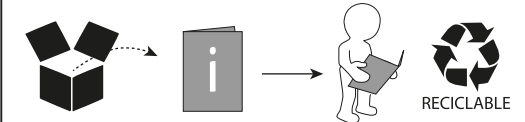

121933



Rv: 08/2025








- **NISSAN NV400** L4 - H2 (2010-2024)
- **OPEL MOVANO B** L4 - H2 (2010-2024)
- **RENAULT MASTER III** L4 - H2 (2010-2024)




Limpieza pre-instalación
Pre-installation cleaning

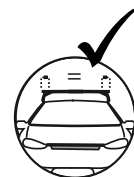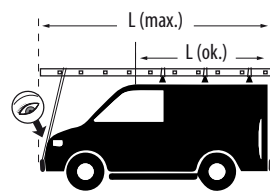


Revisar par de apriete
Check torque

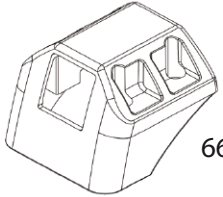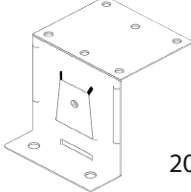N		Q
1	 66	12
2	 207	12
3		12
4		12
5		24
6		1
	BO0061 (x2)	
10	 DIN912 M6x20	48
11	 DIN125 Ø6	48
	BO0014 (x12)	
12	 DIN912 M6x30	24
13	 DIN9021 Ø6	24


A

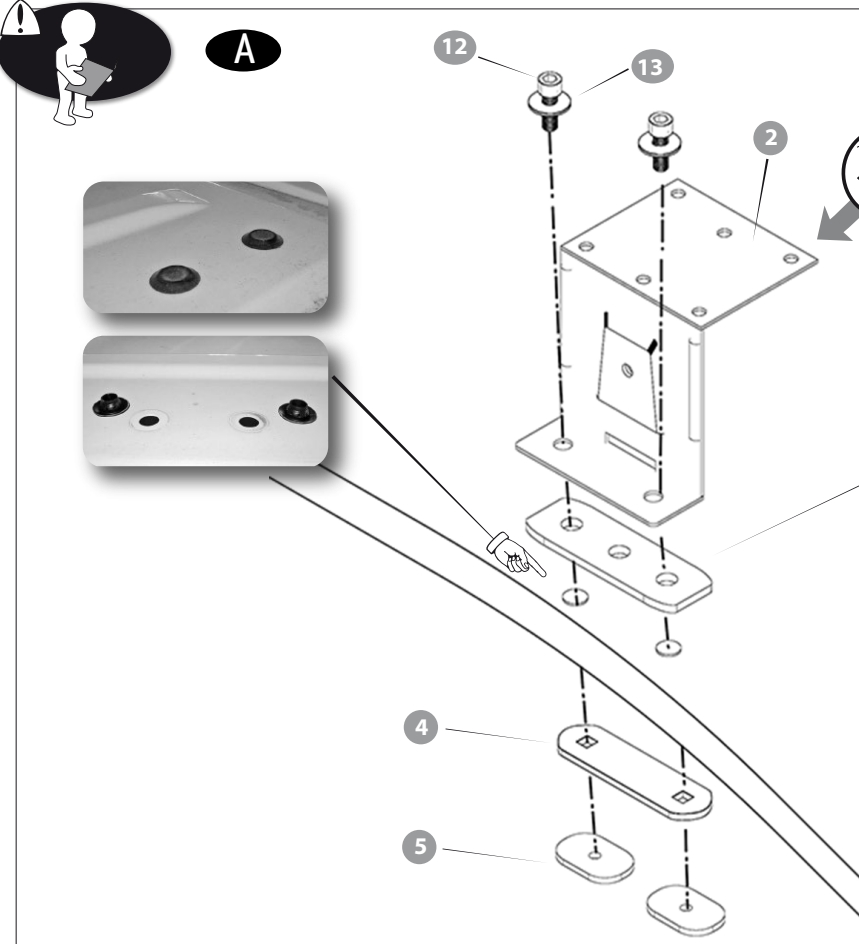


B

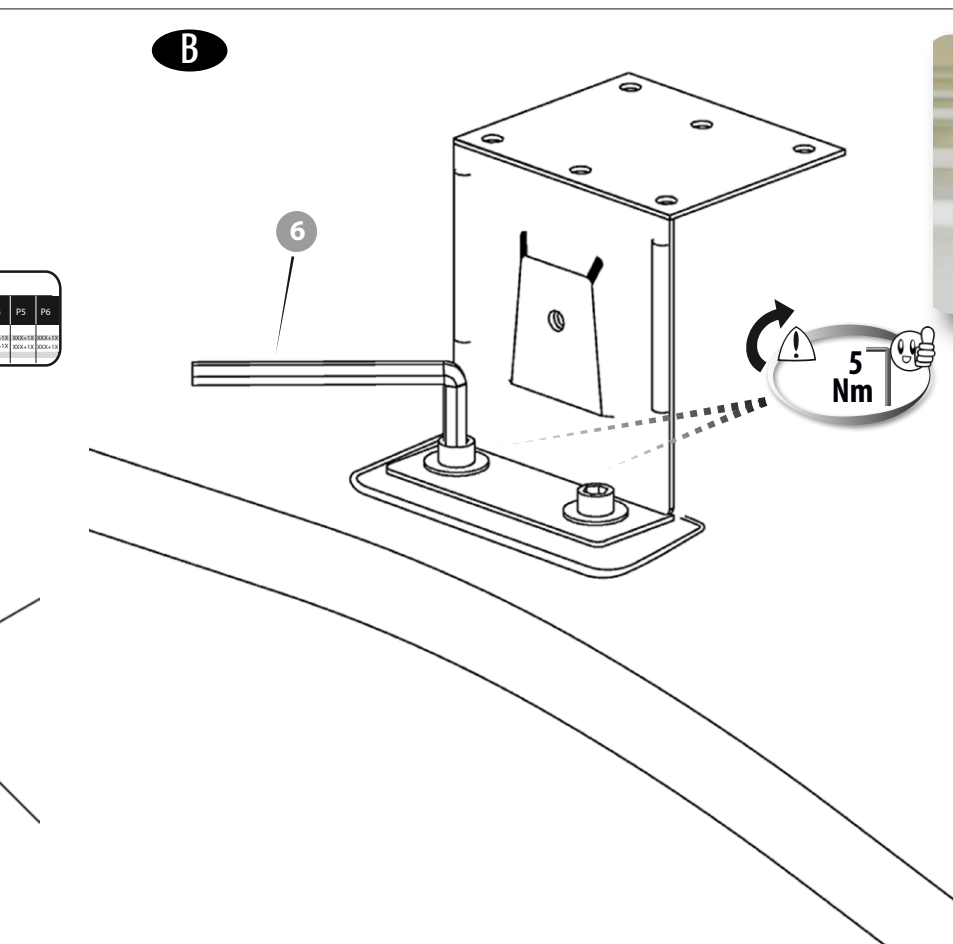


C

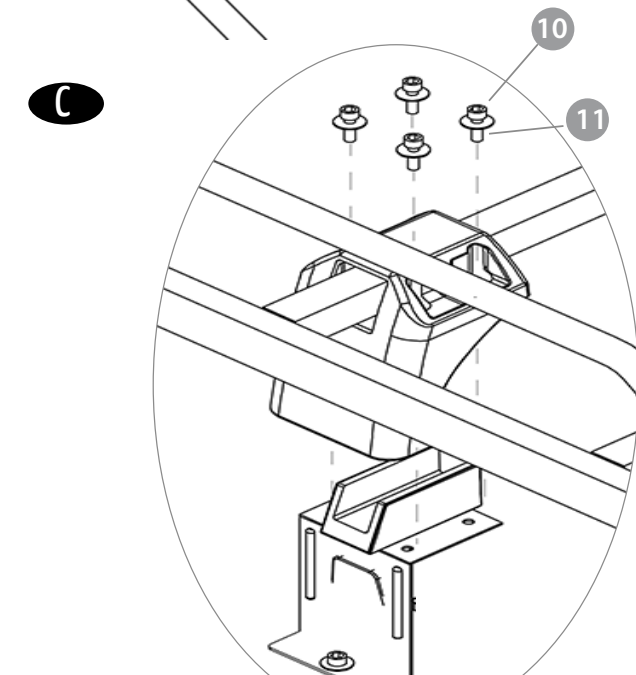

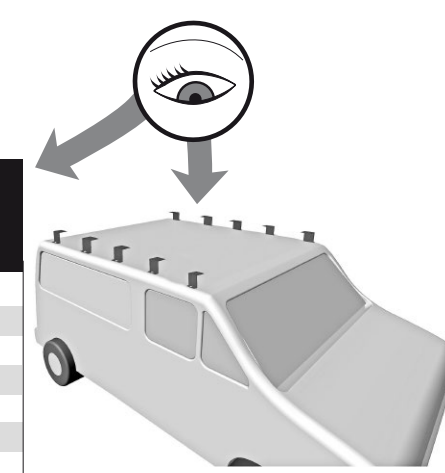

Dimensions:

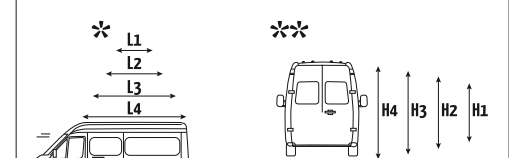

	L*	H**	↻	⚙	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
NISSAN																
Nv400	L4	H2	10 - 24	B00014	207	207	207	207	207	207	207	207	207	207	207	207
OPEL																
Movano B	L4	H2	10 - 24	B00014	207	207	207	207	207	207	207	207	207	207	207	207
RENAULT																
Master III	L4	H2	10 - 24	B00014	207	207	207	207	207	207	207	207	207	207	207	207